


ACCENT CHAIR

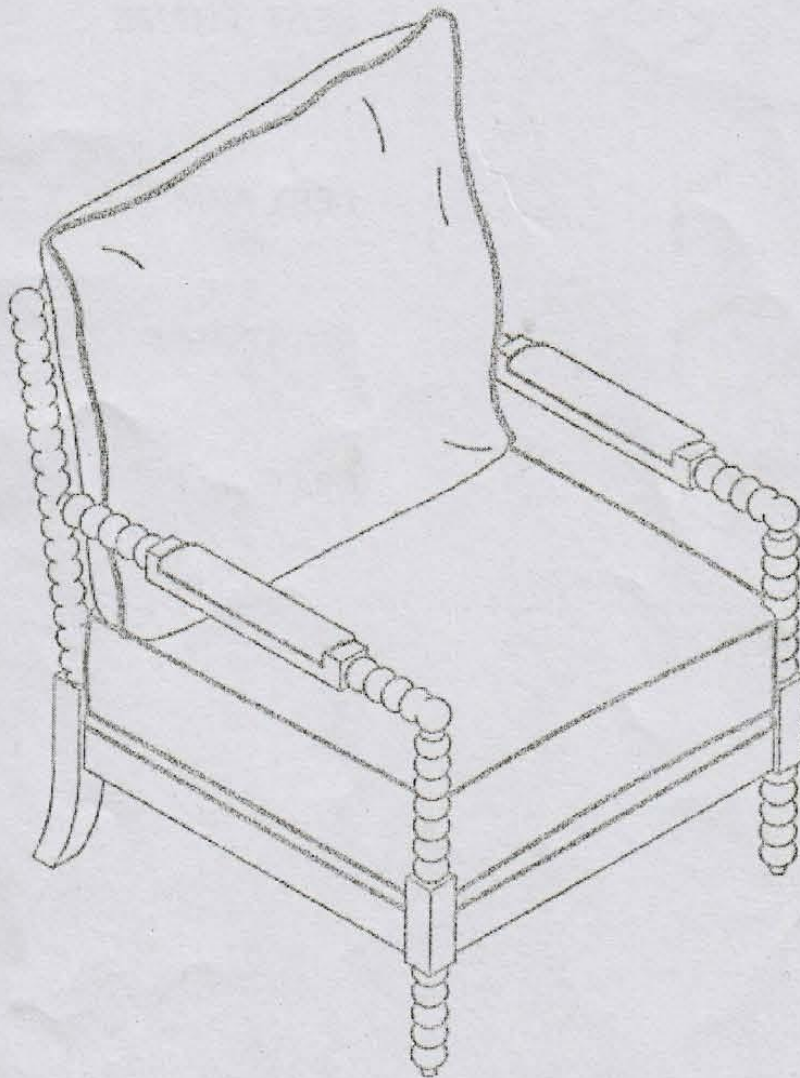

ASSEMBLY INSTRUCTION

PARTS IDENTIFICATION


A.		CHAIR BACK	1PC
B.		SEAT CUSHION	1PC
C.		SEAT FRAME	1PC
D.		LEFT ARM	1PC
E.		RIGHT ARM	1PC
F.		PILLOW	1PC

ASSEMBLY INSTRUCTION


Z	HARDWARE IDENTIFICATION		
1	ALLEN KEY M5mm		1PC
2	BOLT Ø5/16"*3-1/4"		4PCS
3	BOLT Ø5/16"*2-1/4"		4PCS
4	BOLT Ø5/16"*1-3/4"		2PCS
5	SPRING WASHER-BIG Ø5/16"		10PC
6	FLAT WASHER-BIG Ø5/16"*22mm		10PCS
7	ALLEN KEY M4mm		1PC
8	BOLT Ø1/4"*1-3/4"		2PCS
9	SPRING WASHER-BIG Ø1/4		2PC
10	WOOD CAP 14*7mm		2PC
11	WOOD DOW 10*30mm		2PC

ASSEMBLY INSTRUCTION

STEP 1

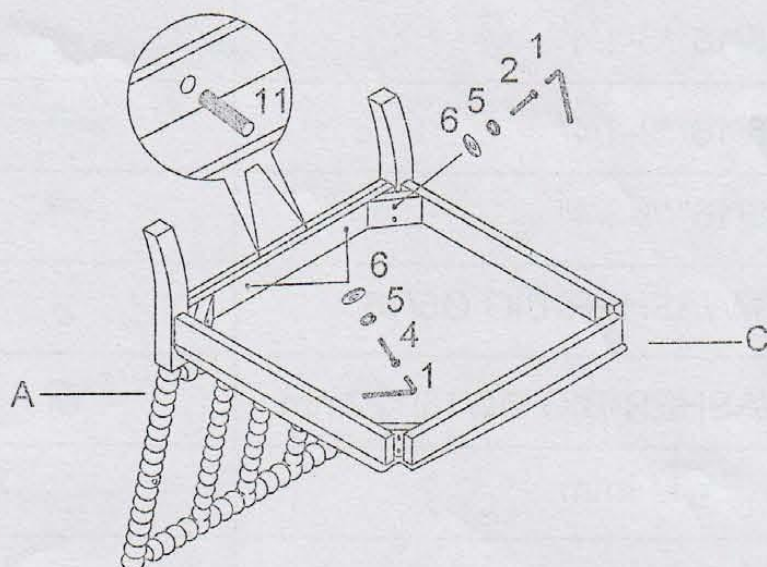


STEP 2

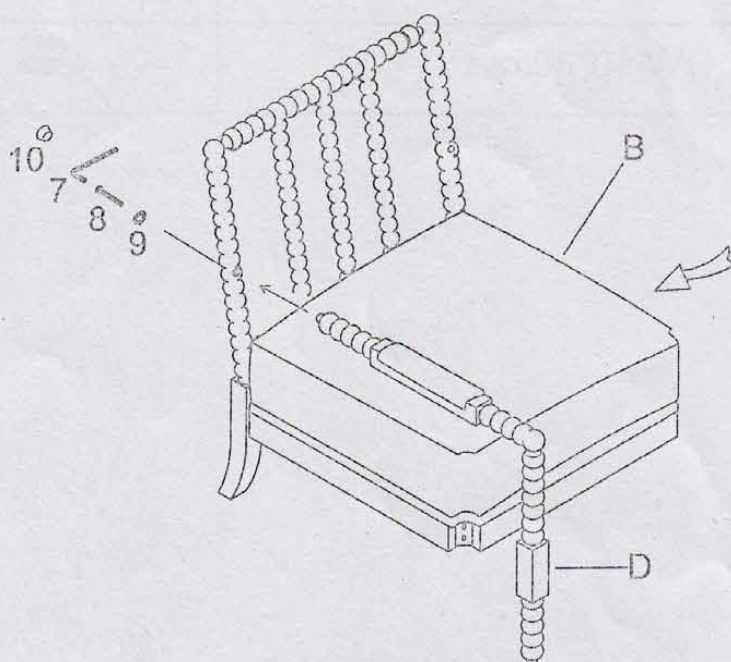


ASSEMBLY INSTRUCTION

STEP 3

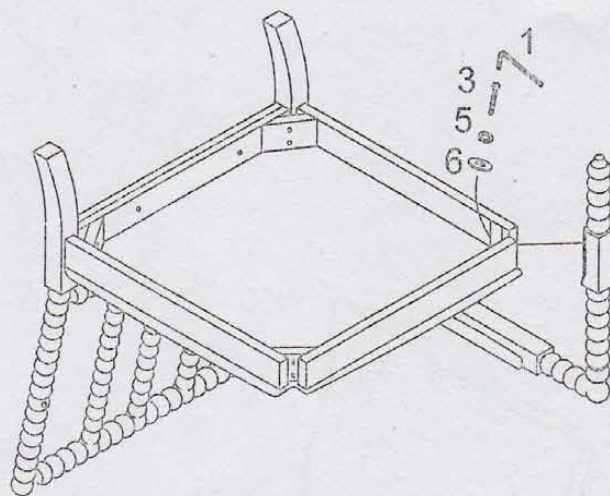

STEP 4

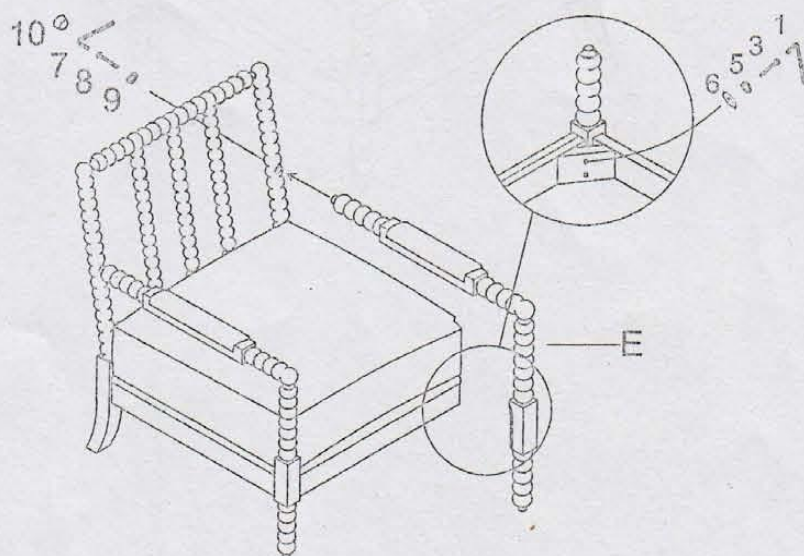

ASSEMBLY INSTRUCTION

