


This cabinet will need the following tools and supplies:


- Powered Drill with Phillips Head bit or Phillips Screw Driver
- Dead Blow Hammer or Rubber Mallet
- Air Powered Staple Gun or Inexpensive Manual Staple Gun
- 3/8 or 10 Millimeter Staples
- Bottle of Wood Glue
- Hammer and 2D Finish Nails
- Optional: Pneumatic Pin Nailer



WALL EASY REACH CABINET ASSEMBLY

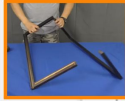


1. Start by assembling the two (2) pieces that make up the front of the cabinet.

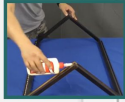

2. Apply a bead of wood glue into the grooves. If you accidentally apply too much wood glue, simply wipe off the excess with a damp cloth.



3. Slide the top and bottom pieces into place along the grooves and make sure everything is lined up nicely.

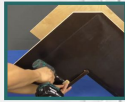


4. 90-degree assembly brackets will be installed on both the top and bottom of the cabinet. Start by doing one side first. Attach the 90-degree assembly brackets.



5. Slide the side panels into place. Once again, install 90-degree assembly brackets to ensure that everything is held together properly while the wood glue dries.




6. Install the wall-facing side panel into place, line it up in the grooves, ensure that it's flush, and then secure it using a staple.

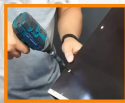

7. Fasten the back panel in place by installing inch and a quarter wood screws into the pre-drilled holes.




8. Insert the rear corner panel and ensure that it's flush in the grooves and along the edges.

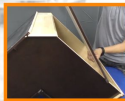

9. Once the back corner piece is lined up, you can slide the second side panel into place. Follow the same steps you did on the previous one to attach this one.



10. Drop the hinges into the doors. Fasten the hinges in place using the screws that are included with them.

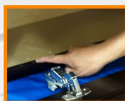


11. Laying down the cabinet will make it easy to align your doors; simply line up the hinges with the pre-drilled holes and secure them with the screws.



12. Now determine where you would like the magnetic catch to be located and fasten it in place.



13. The magnetic strip should be placed on the door in relation to the magnetic catch. Once you've carefully lined it up, fasten it into place.

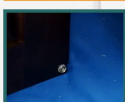

14. Peel and stick bumpers on the points where the cabinet doors contact the cabinet face.



15. Finally, install the shelf pegs and position the shelf however you would like.