



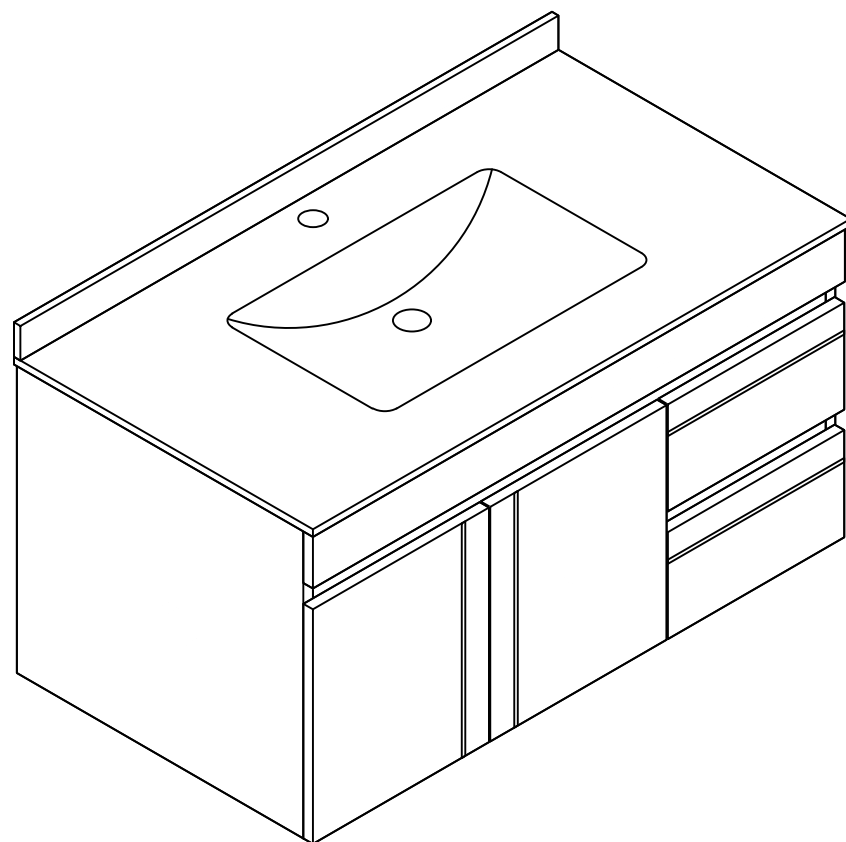


HYBC675

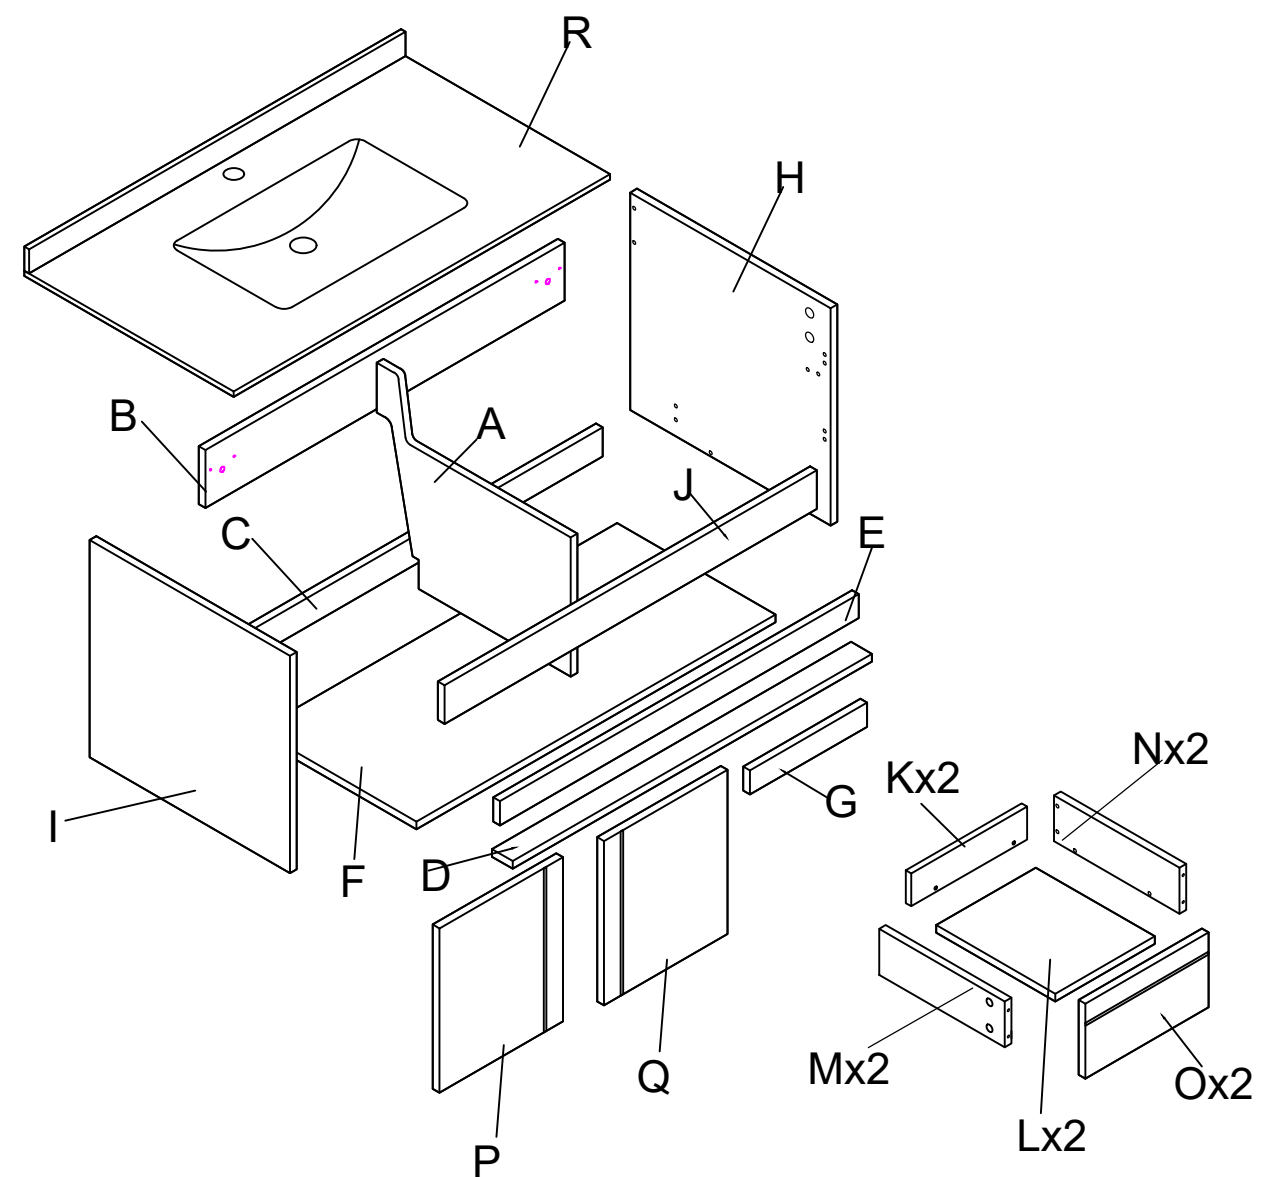

[illegible]


AA  x4

BB  x4

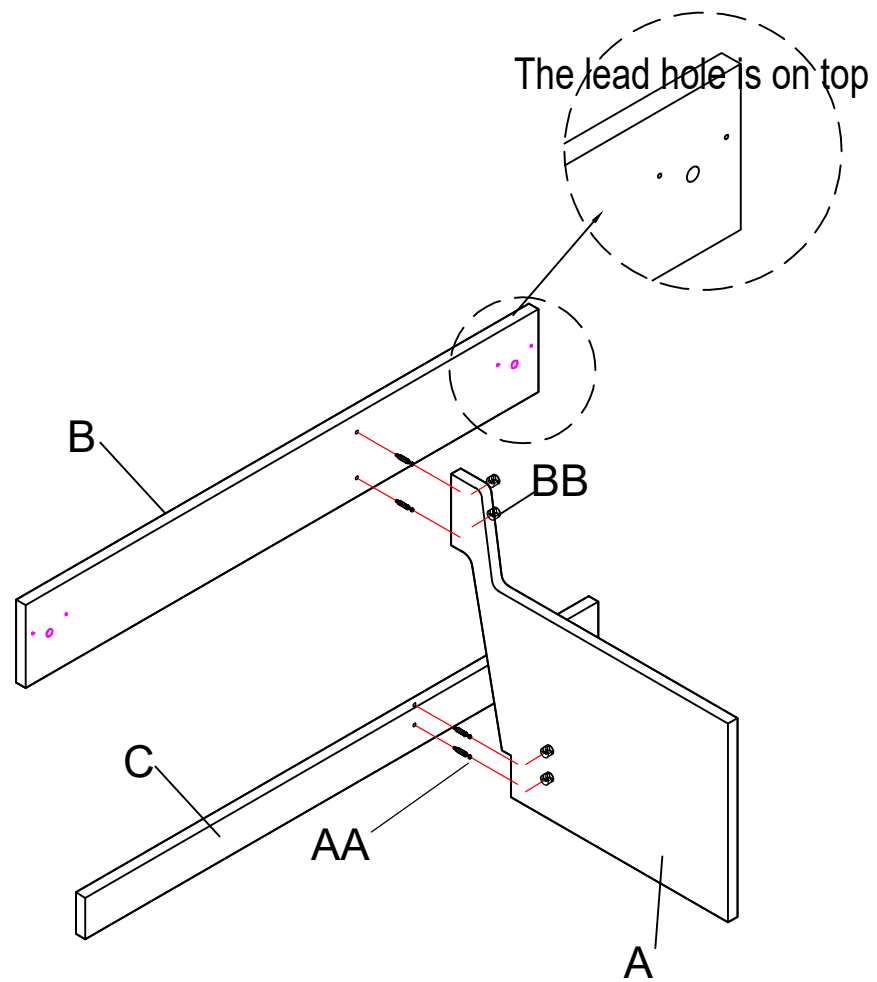


AA  x3

BB  x3

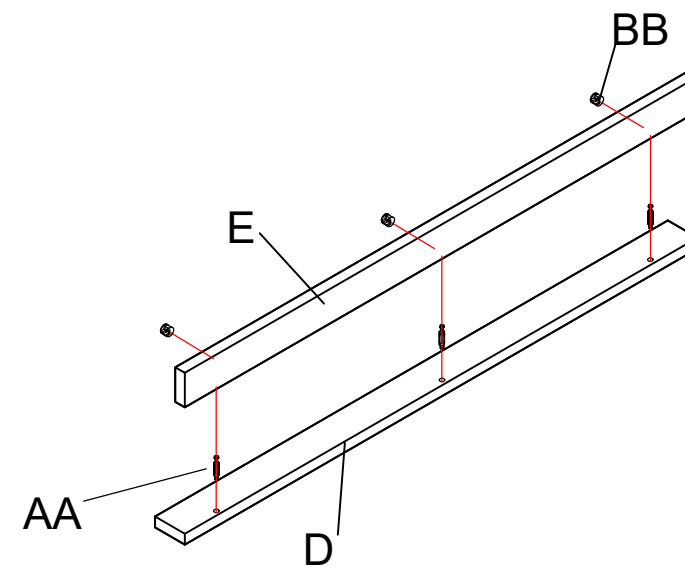


AA  x5

BB  x5

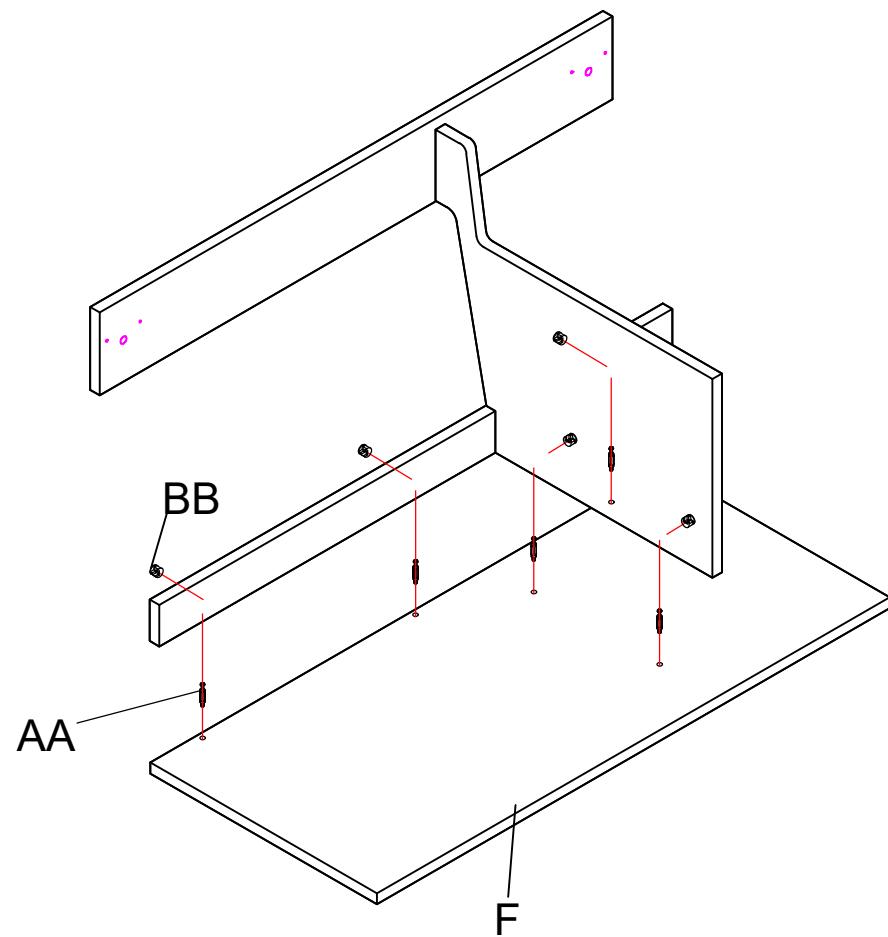


AA  x3

BB  x3

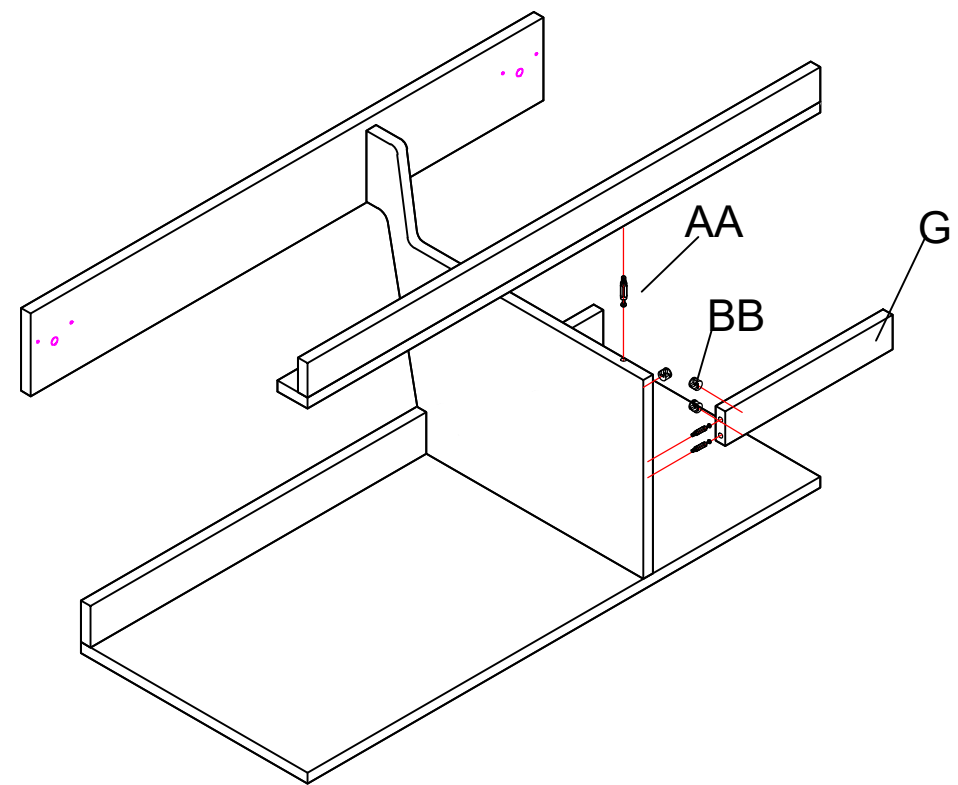


AA  x12

BB  x12

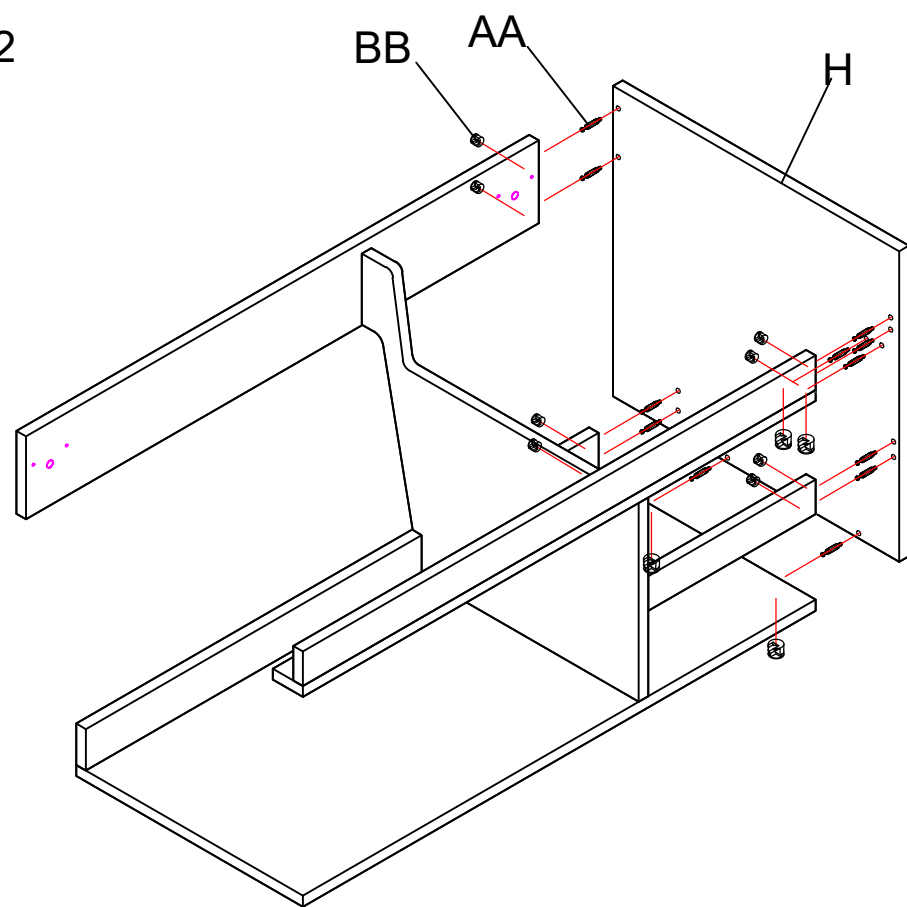


AA  x10

BB  x10

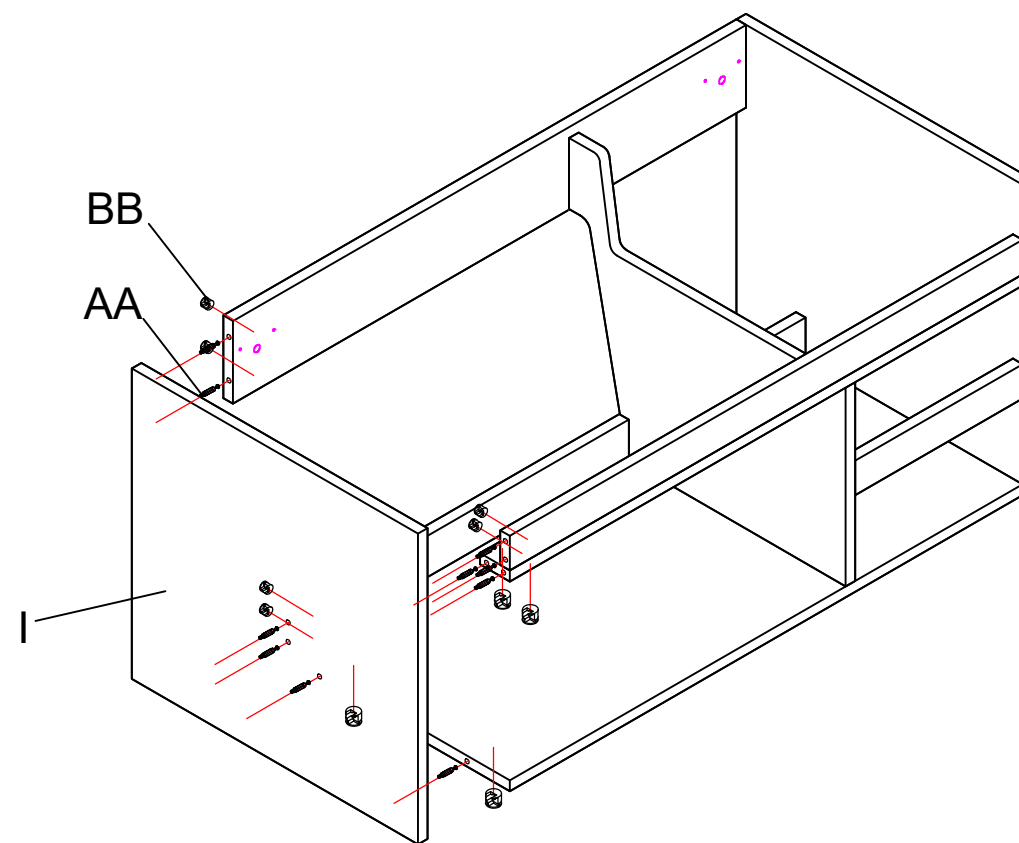


AA  x4

BB  x4

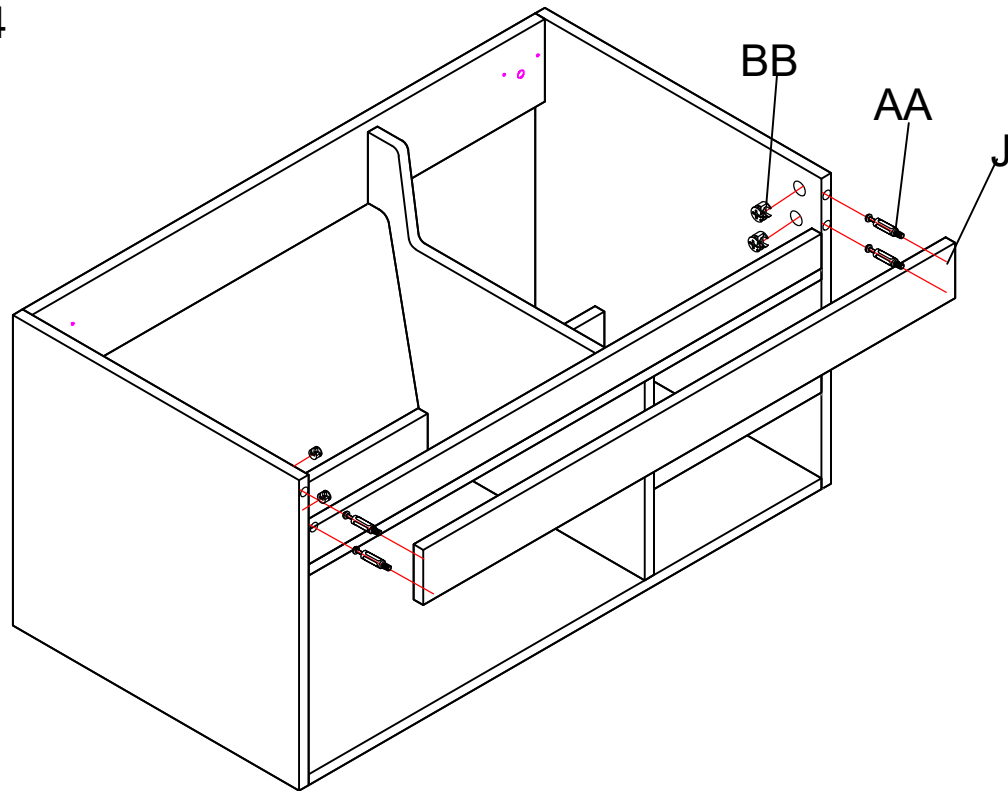


AA  x4

BB  x4

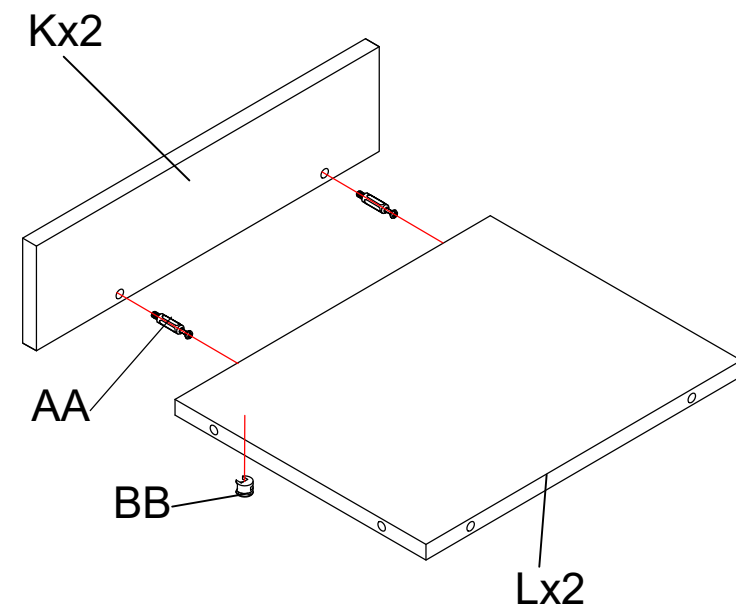


AA  x16

BB  x16

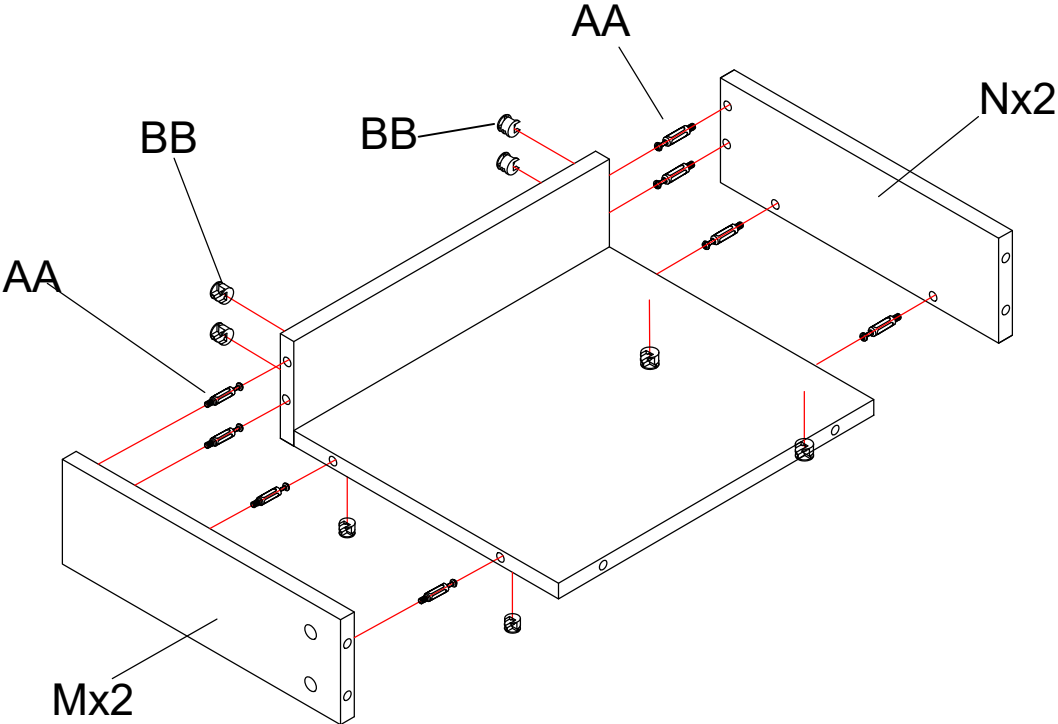



AA  x12

BB  x12

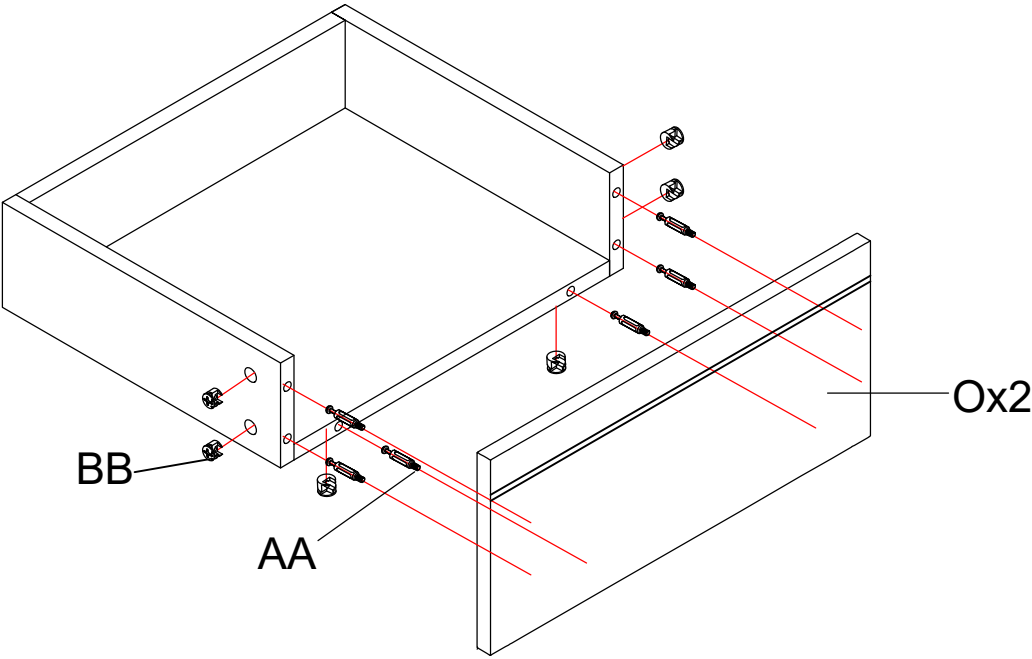

CC  x24

GG  x4

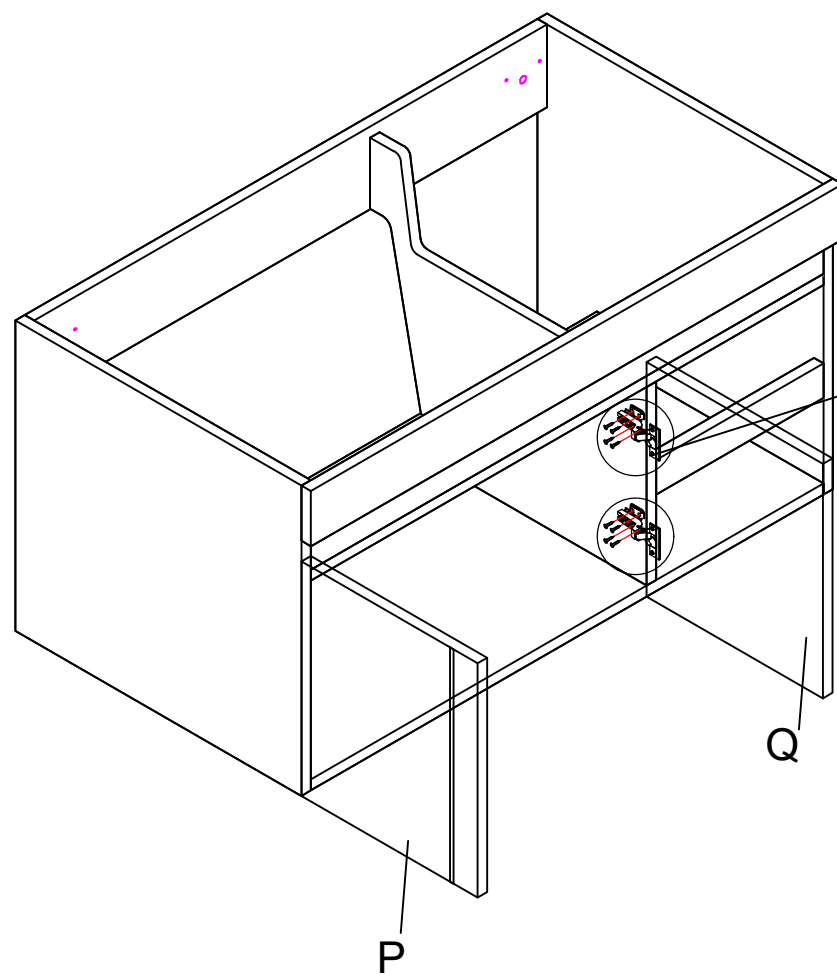


CC

GG

Step 2

Step 1

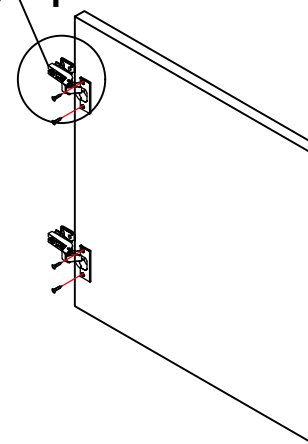


CC  x36


DD  x2



EE  x2

FF  300 x2

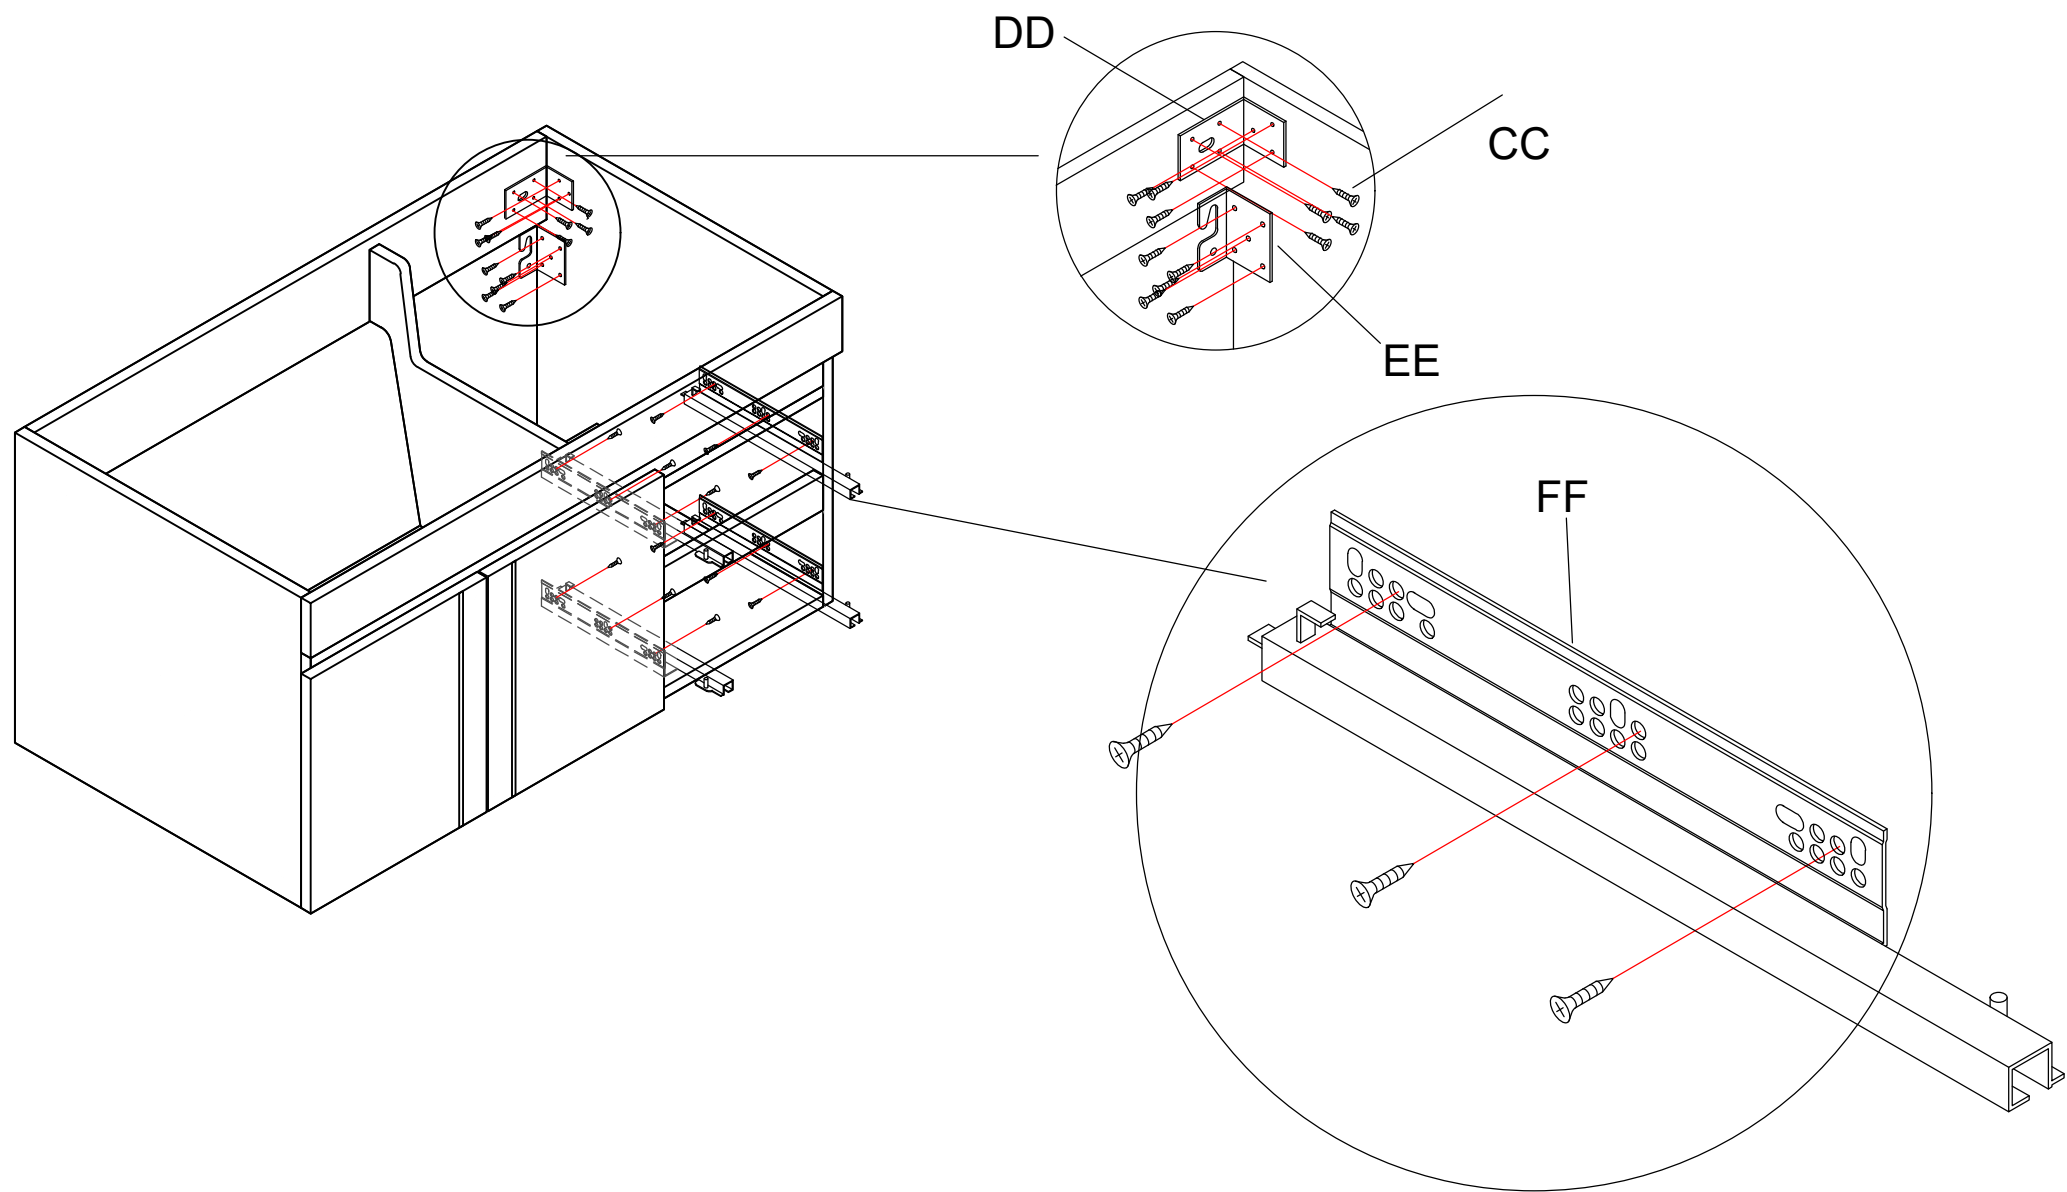



- HH  x2
- II  x2
- JJ  x2
- KK  x2
- LL  x2

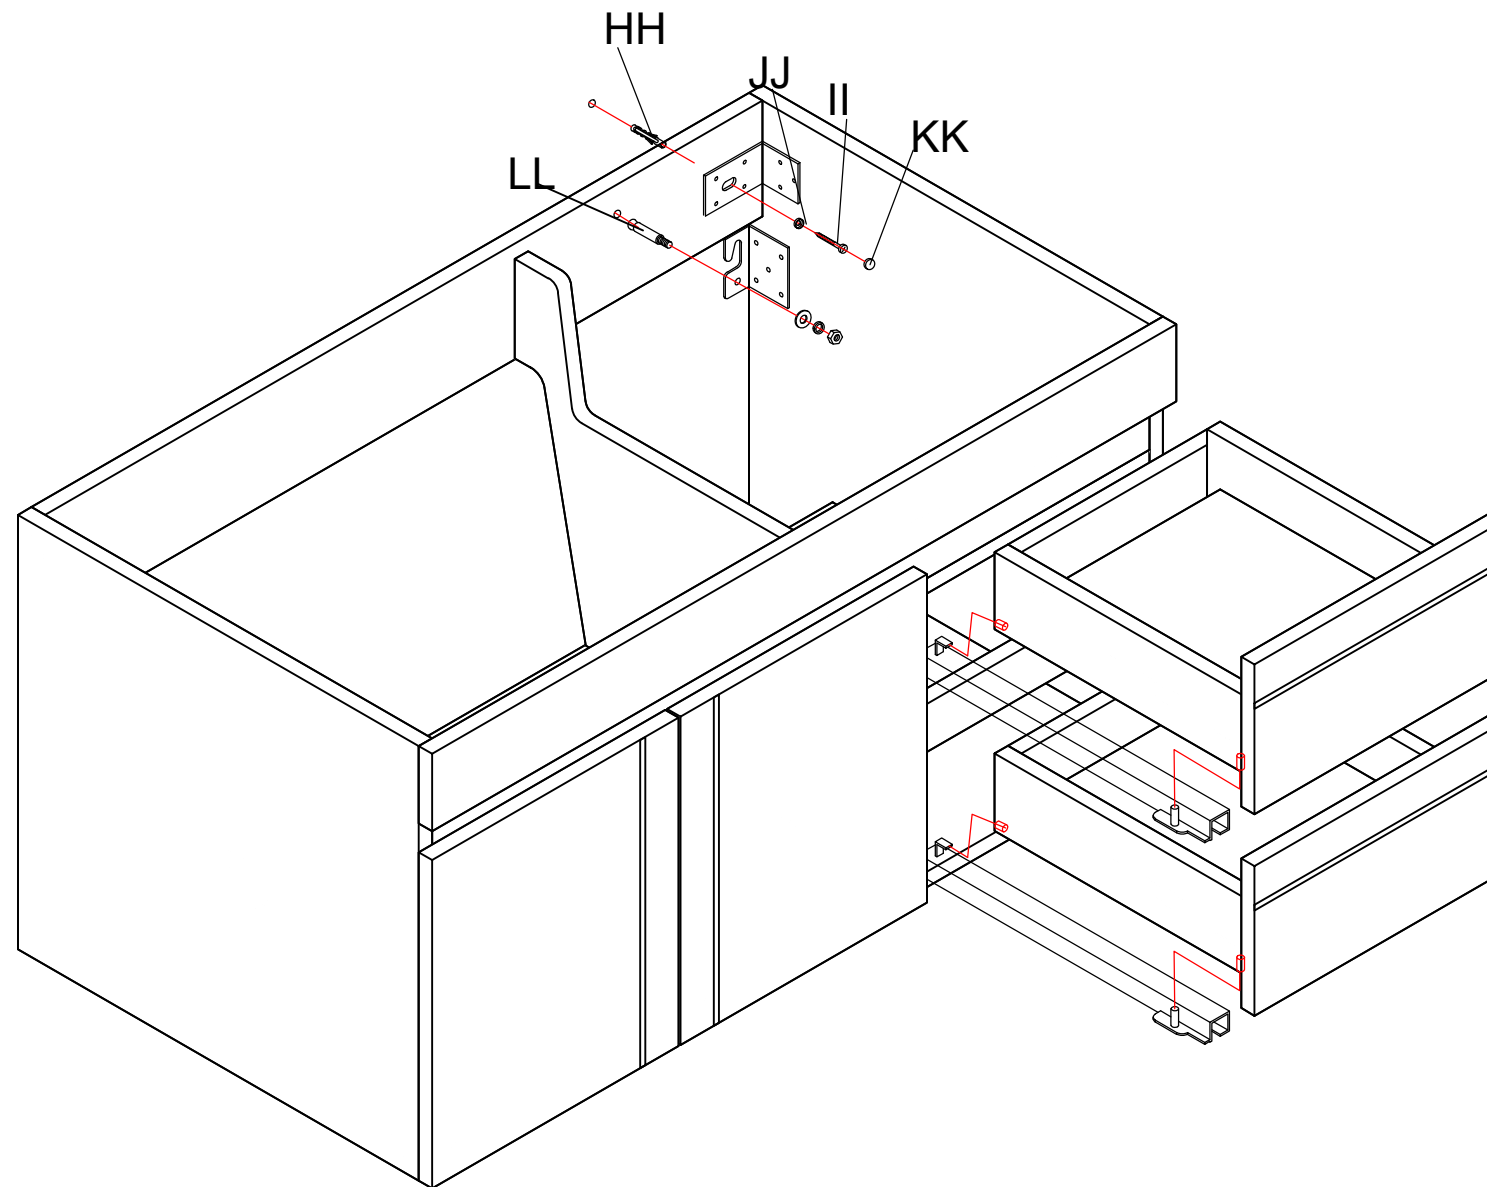

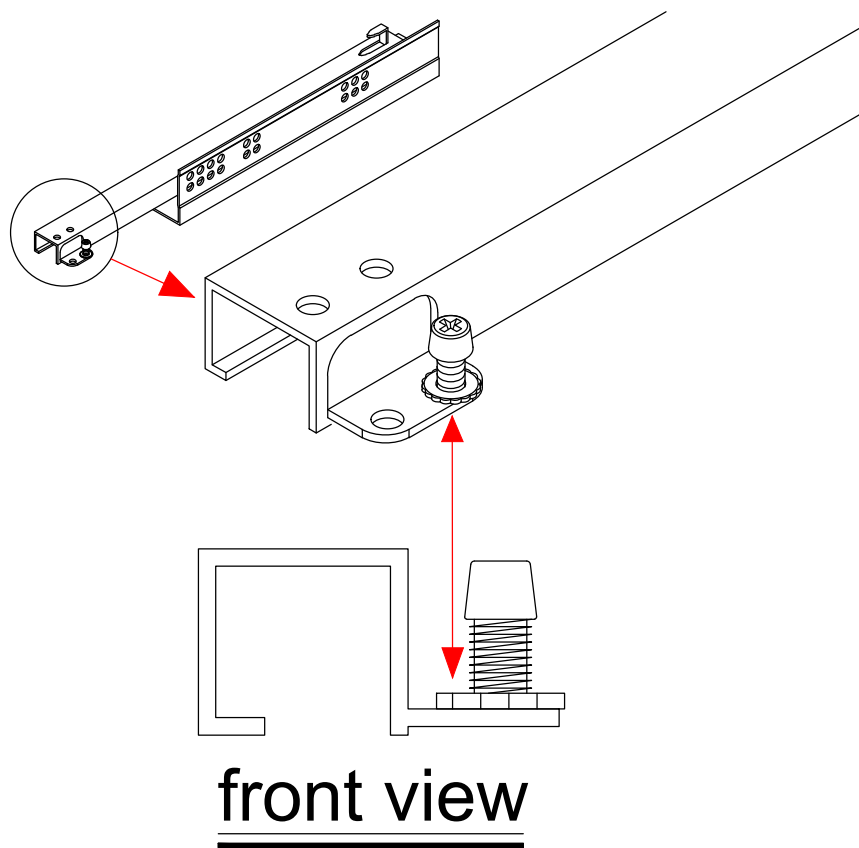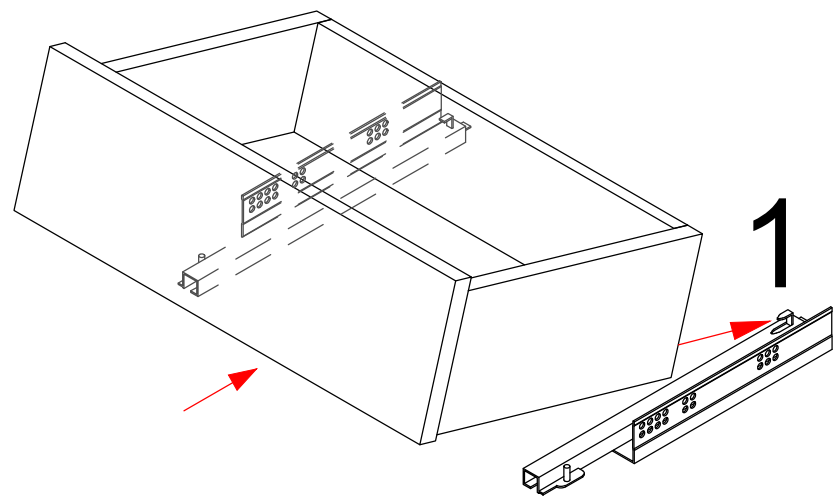

1. Check that the nut is screwed to the bottom.

2. Tilt the drawer down, and slide the drawer inside along the rails.

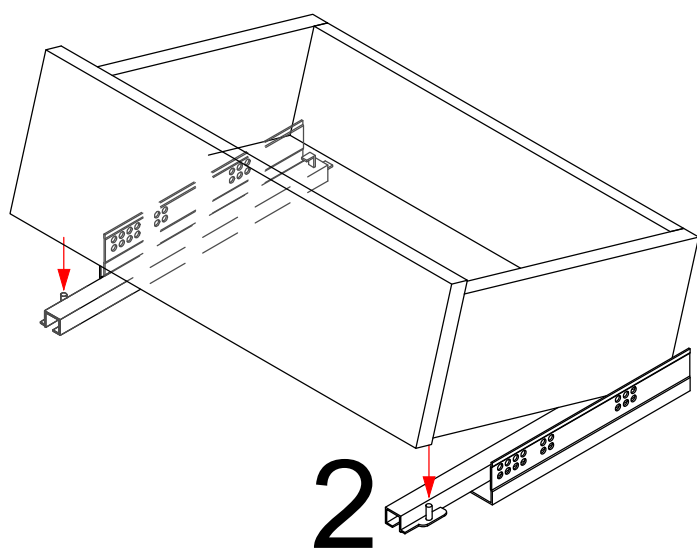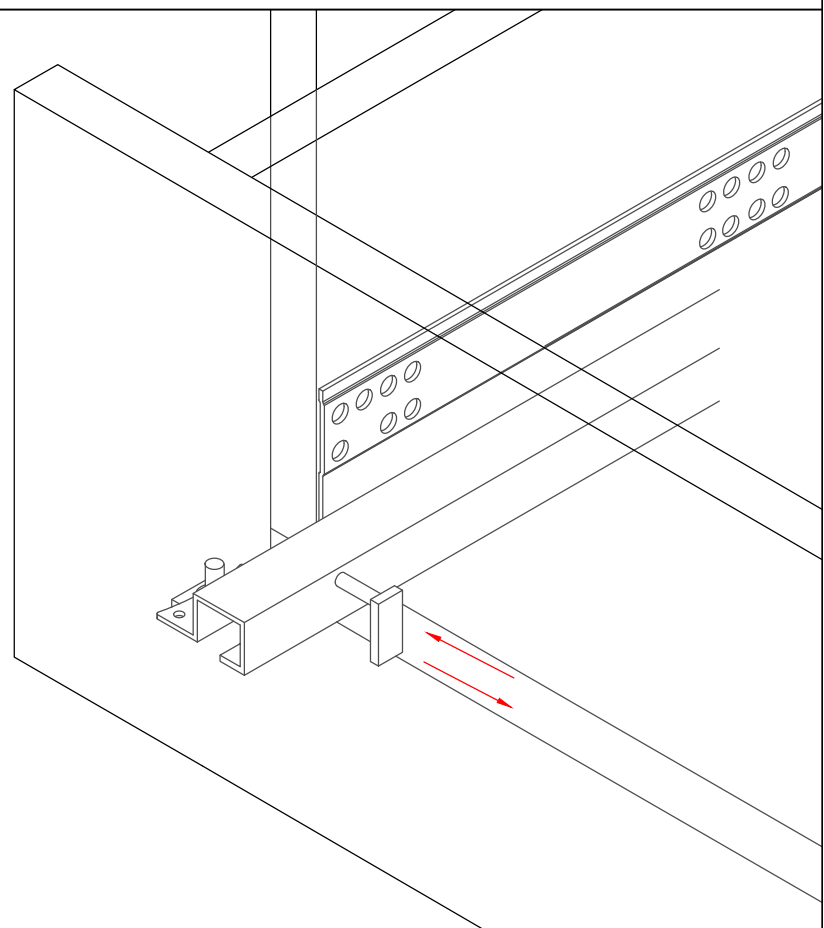

3. Put the drawer down naturally.

4. Push to lock
Pull to unlock

MM  x4

NN  x1

