

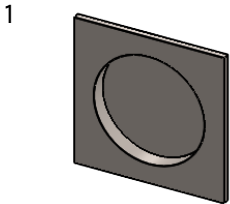


PL-66S Full Dummy Installation Diagram

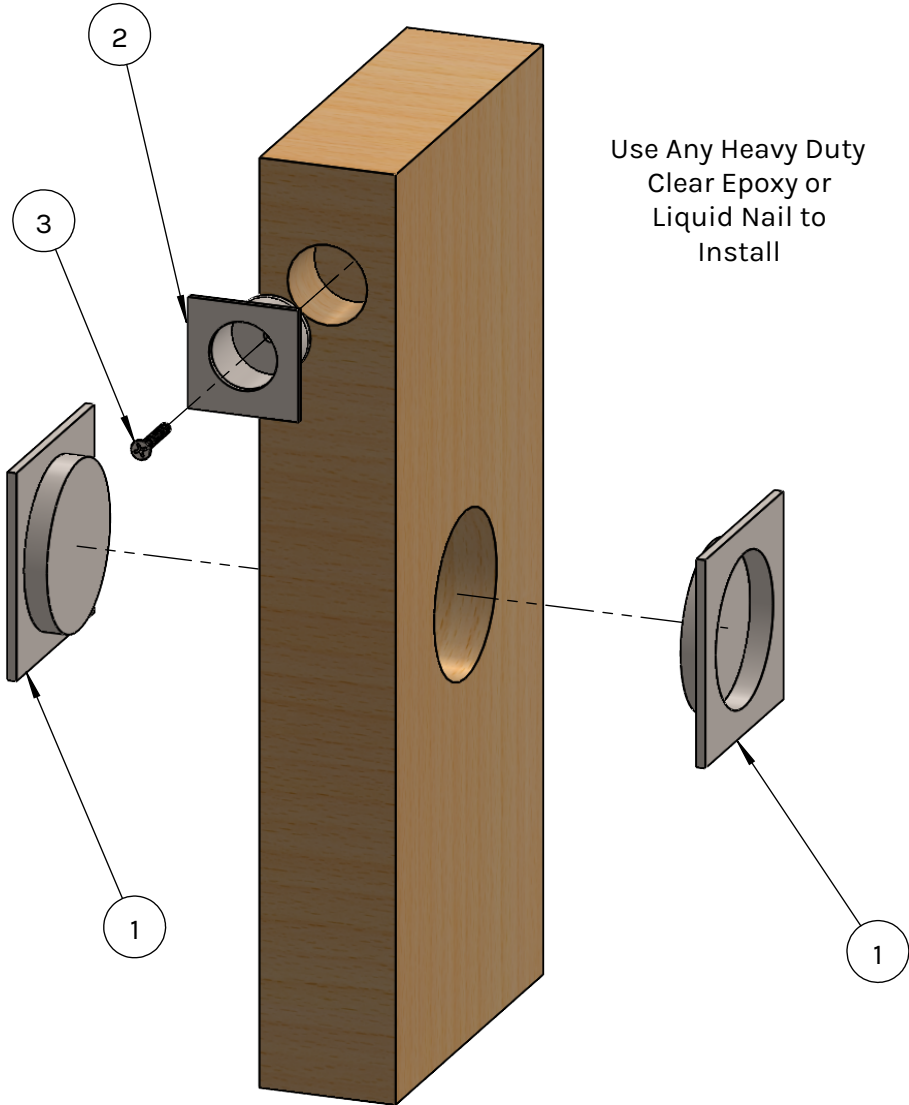

1
Dummy Rose
PLD66S
(Needs 2)

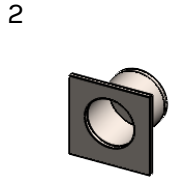

2
Edge Pull
EP-400S
(Needs 1)



3
Wood Screw
#8 X 3/4
(Needs 1)