


ASSEMBLY INSTRUCTION

Friendly Reminder:

This sofa is packed in 2 boxes. Please assemble it after all boxes are received.

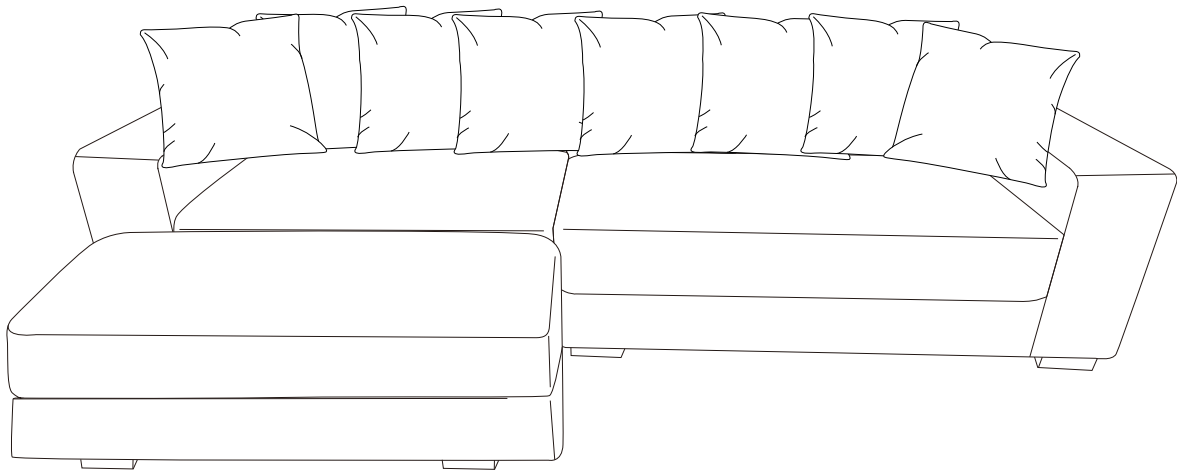

Return & Warranty policy:

-We strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts or service as needed.






-1. If the item is damaged or defective, please take photos as evidence for replacements and refunds.

-Please do not return to store, contact the seller if you have any troubles with this product.

-2. As the cushions are all vacuum compressed, there will be some wrinkles. Please give your cushions up to 72 hours to reach their original size and the wrinkles will basically disappear.

-3. Please do not open the compressed packages until your sofa frame is completely assembled.

ASSEMBLYINSTRUCTION


	NO.	partsname	SKETCH	QTY
W2791P251323 W2791P251334 W2791P251349 W2791P288630	A	ottomanframe		2PCS
	B	ottomanframe		2PCS
	C	Woodenfender		2PCS
	D	ottomanbaseplate		1PC
	E	Seatplate		1PC
	F	Seatcushion		1PC
	K	backrest		1PC
	M	Seatframe		1PC
	N	Seatcushion		1PC
	O	Throwpillow		2PCS
	G	armrest		1PC
W2791P251324 W2791P251340 W2791P251350 W2791P288633	H	backrest		1PC
	I	Seatframe		1PC
	J	Seatcushion		1PC
	L	armrest		1PC

W2791P251324


W2791P251340

W2791P251350


W2791P288633

NO.	partsname	SKETCH	QTY
O	Throwpillow		6PCS
P	LEG(S)		4PCS
Q	LEG(L)		8PCS
R	Plasticgasket		12PCS
S	Angleiron		2PCS
T	Connectinag corneriron		4PCS
U	Fixedironparts		2PCS
hardwarelist1			
1	M6*16mmScrews	 M6*16mm	18PCS
2	M6*45mmScrews	 M6*45mm	6PCS
3	Allenkey		1PC
4	gasket		6PCS
hardwarelist2			
3	Allenkey		1PC
4	gasket		18PCS
5	M8*35mmScrews	 M8*35mm	18PCS
1	M6*16mmScrews	 M6*16mm	4PCS


STEP1

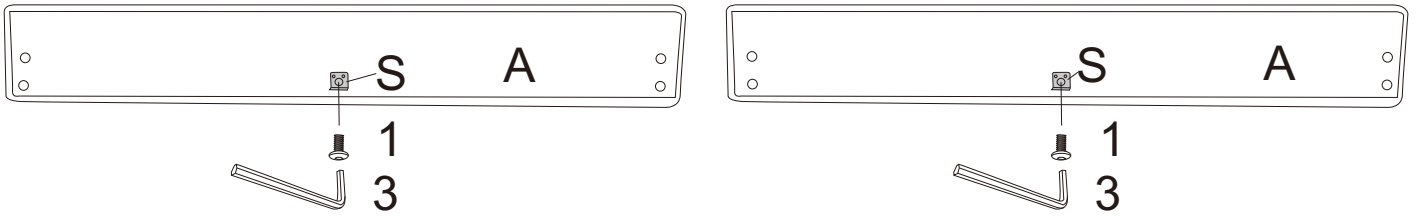


STEP2

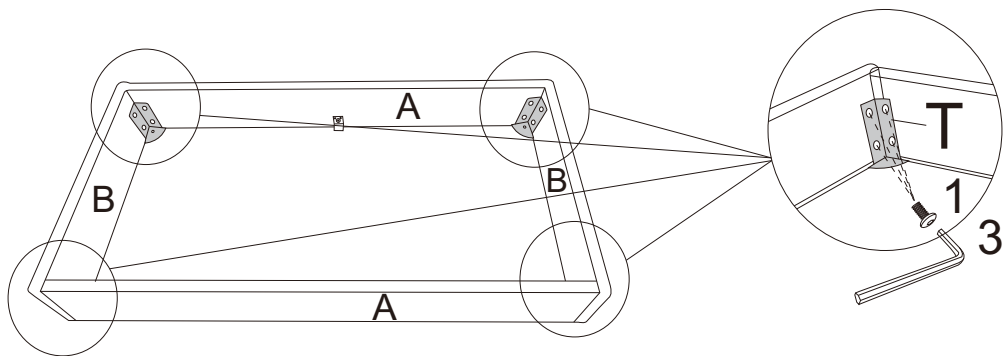


STEP3

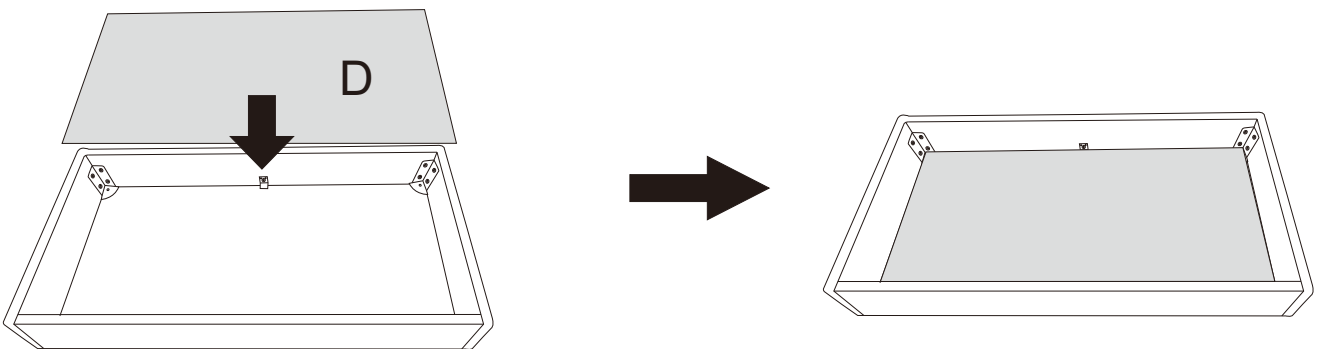


STEP4

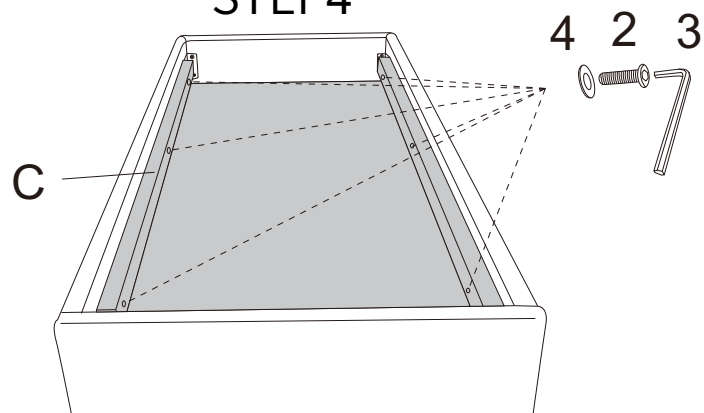


STEP5

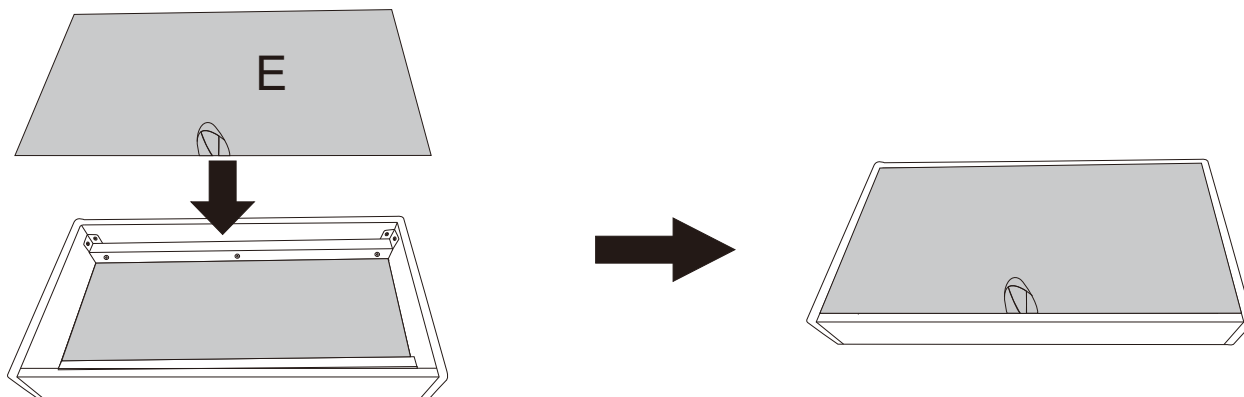

STEP6

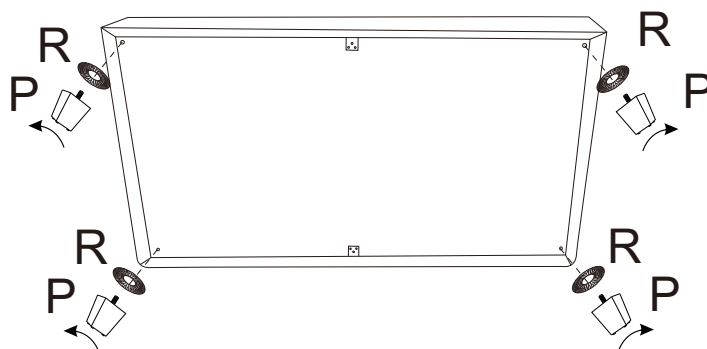


STEP7

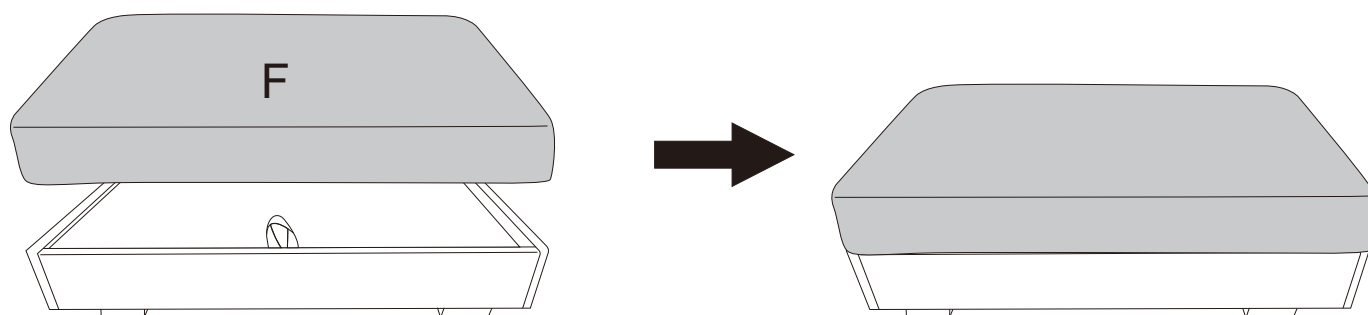


STEP8


Remove the access ories from the armrest

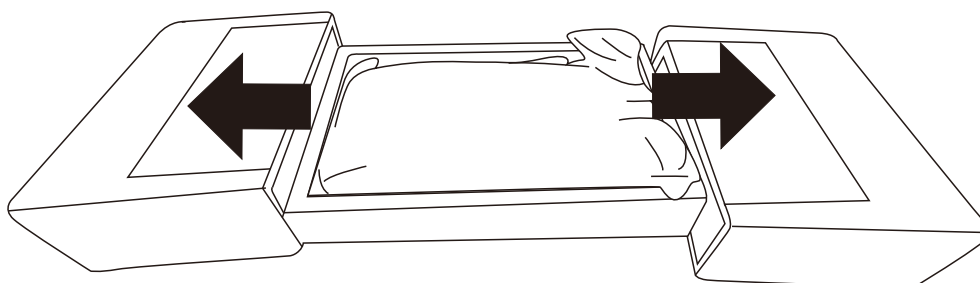


STEP9

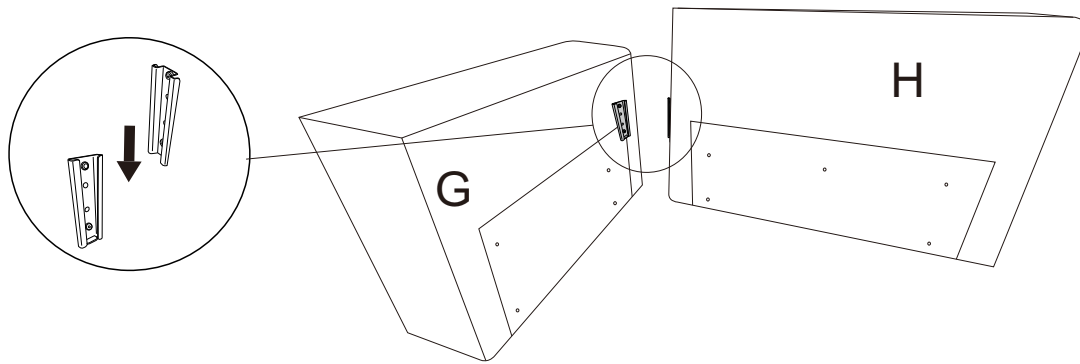


STEP10

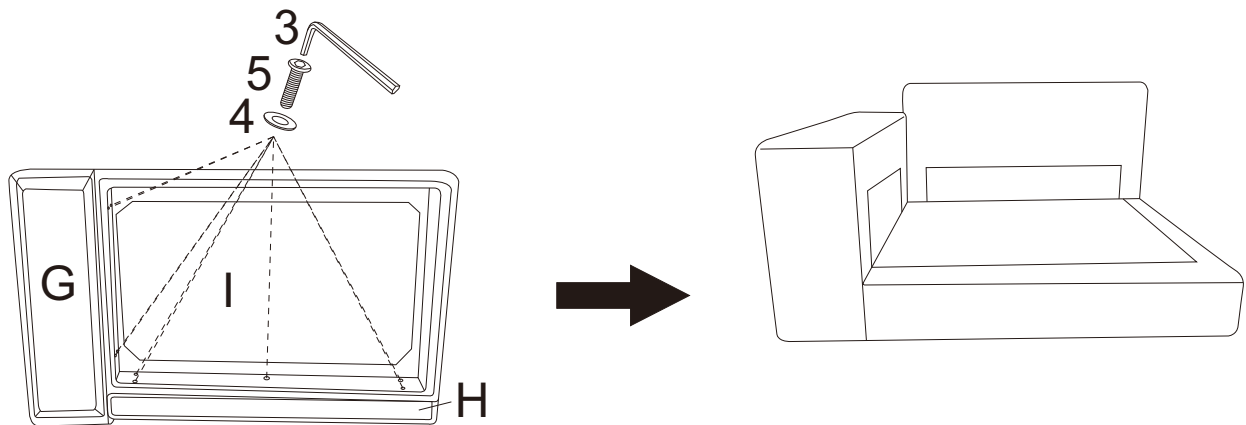


STEP11

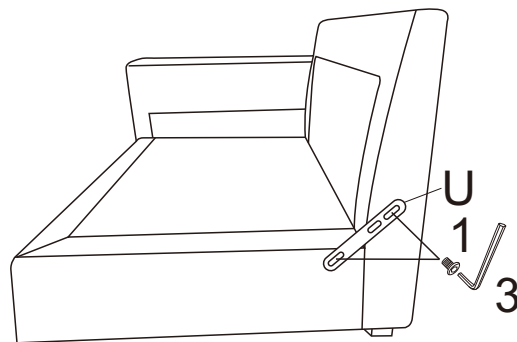


STEP12

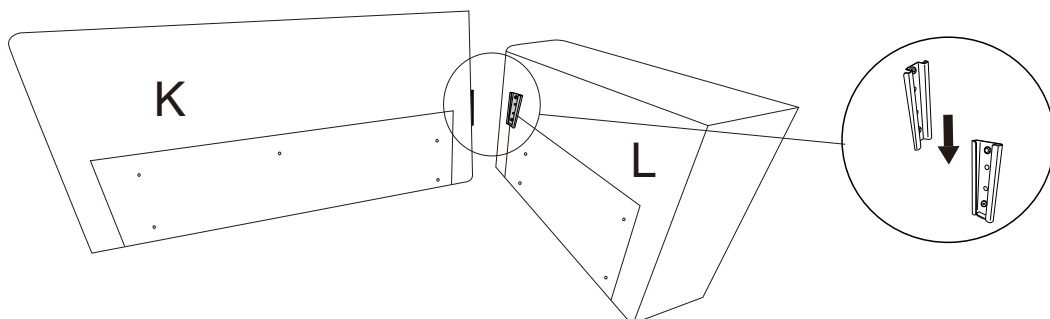


STEP13

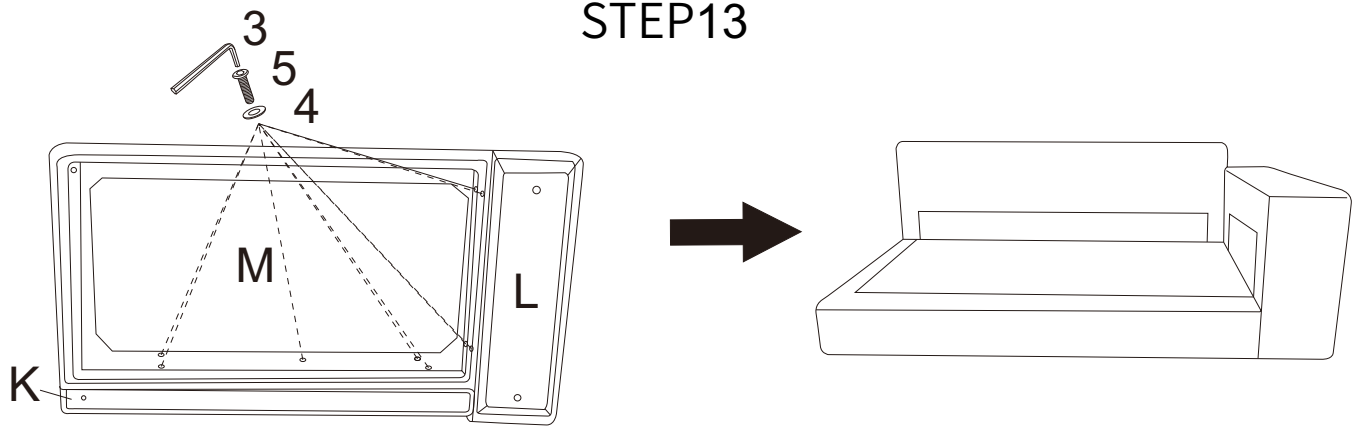


STEP14

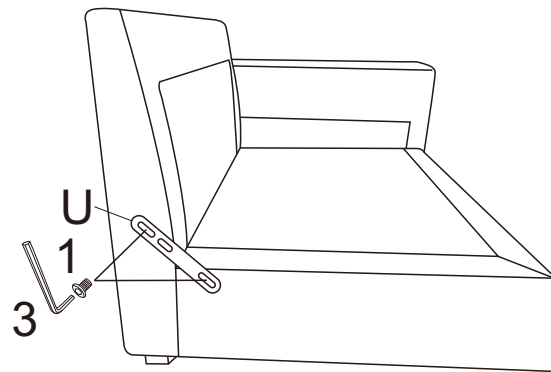


STEP15

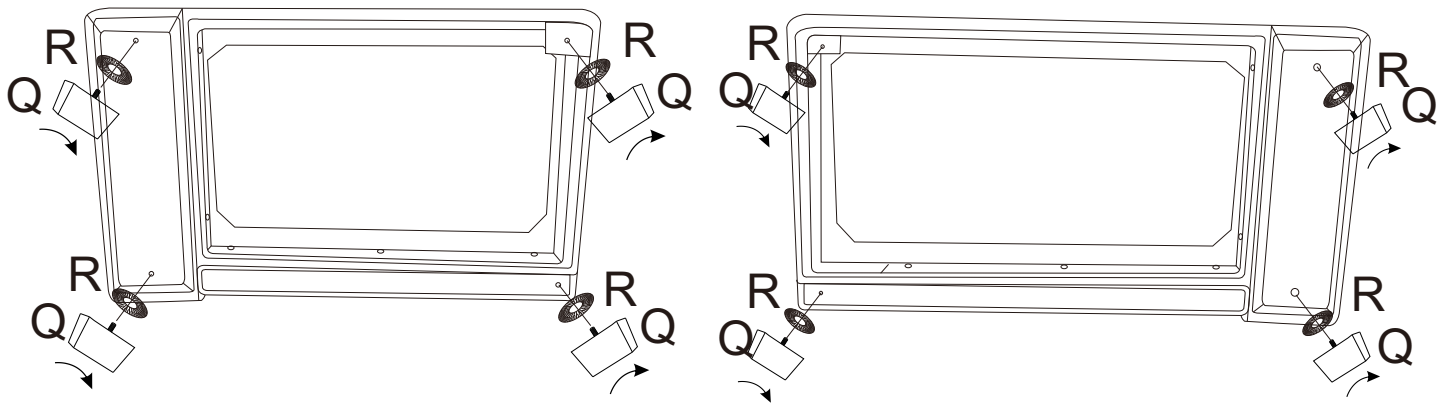

STEP16

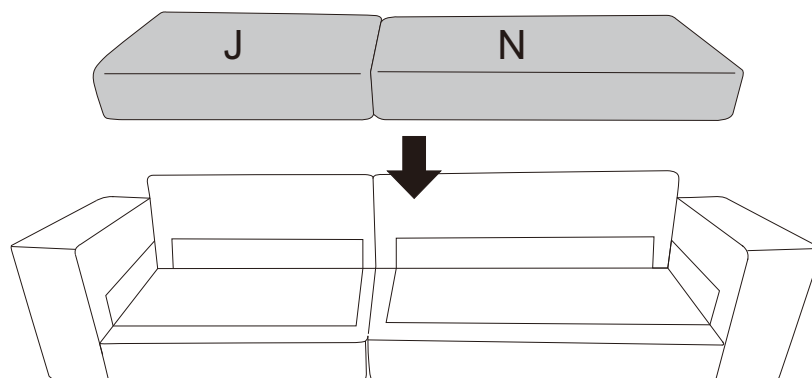

STEP17

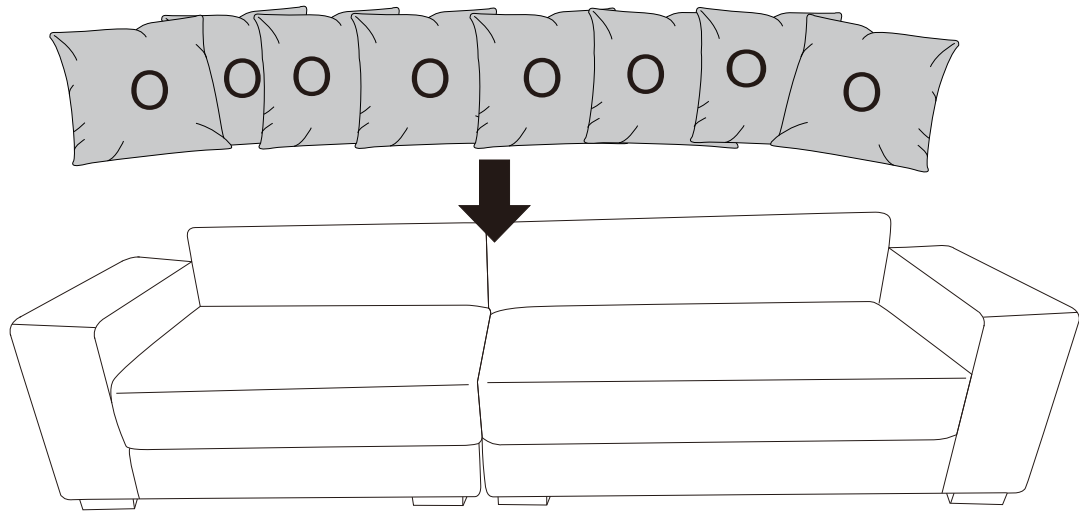

STEP18

