


ASSEMBLY INSTRUCTIONS

ITEM CODE: WF530031



DETAIL VIEW

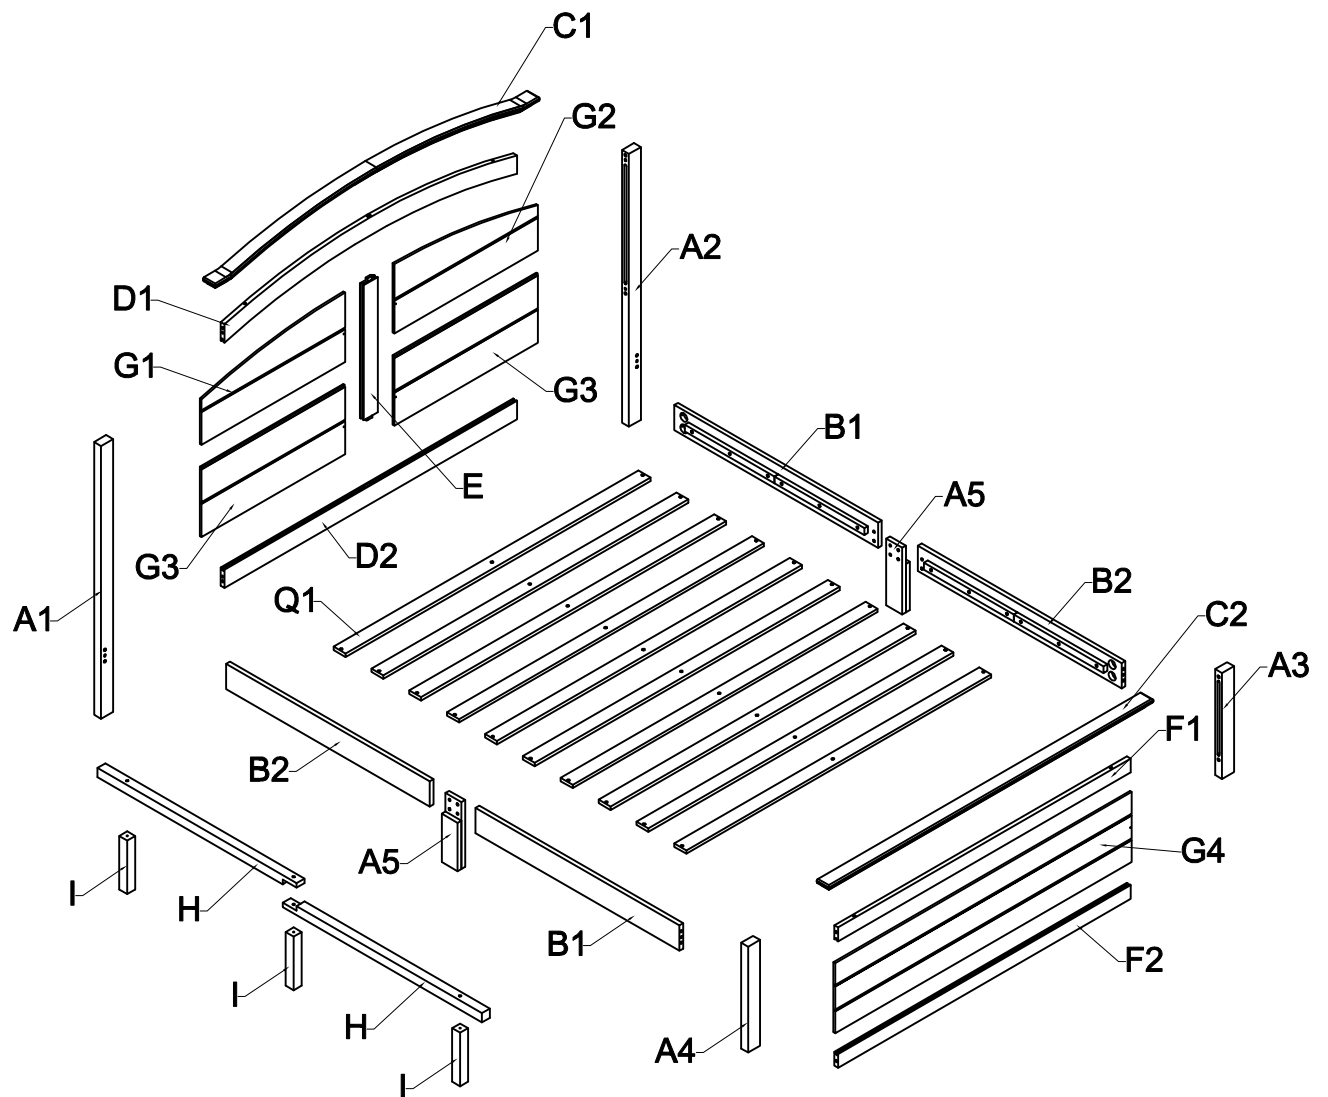

BOX 1: WF530031

A1




Front leg - left (1pc)

A2




Back leg - left (1pc)

A3




Back leg - right (1pc)

A4




Front leg - right (1pc)

A5




Middle leg - (2pcs)

B1

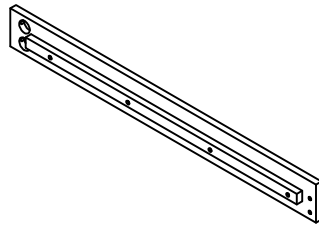


Side rail - left - (2pcs)

B2

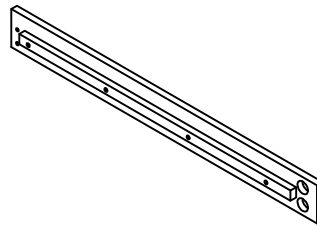


Side rail - right - (2pcs)

C1

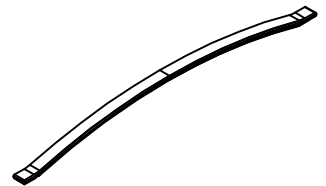


Top rail - headboard (1pc)

C2

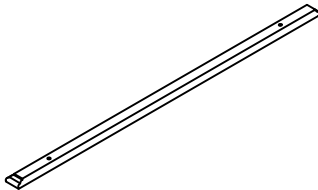


Top rail - footboard (1pc)

D1

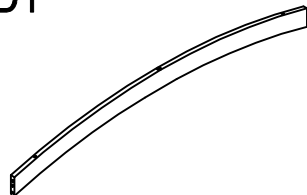

Headboard rail - top (1pc)

D2

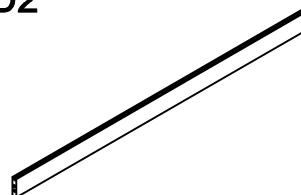


Headboard rail - bottom (1pc)

E




Vertical rail - middle (1pc)

F1

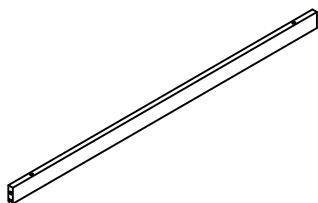


Footboard rail - top (1pc)

F2

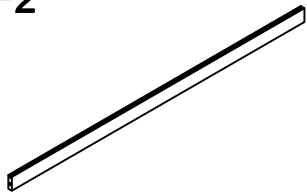


Footboard rail - bottom (1pc)

G1

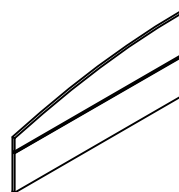

Headboard panel - left (1pc)


G2

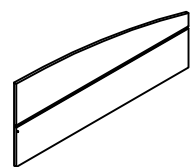

Headboard panel - right (1pc)


BOX 1: WF530031

G3

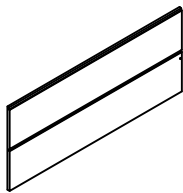


Headboard panel - bottom
(2pcs)

G4

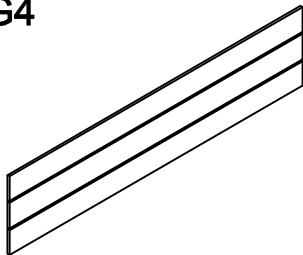

Footboard panel (1pc)

H

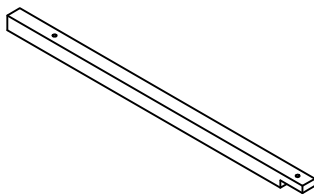


Support slats - (2pcs)

I










Extra leg - (3pcs)


Q1

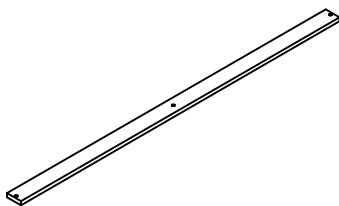

Slats - (10pcs)


HARDWARE LIST: WF530031

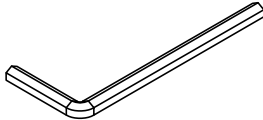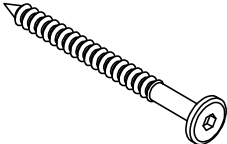1  Hexagonal bolts catch wood Ø1/4" * 100 - 2pcs	2  Threaded bolt Ø5/16" * 60 - 4pcs	3  Threaded bolt Ø5/16" * 80 - 16pcs	4  Semi - Circular Ø5/16" - 20pcs
5  Hexagonal screw Ø5/16" - 20pcs	6  Wood dowel Ø8 * 30 - 8pcs	7  Allen key K4 - 2pc	8  Wood crews M4 * 30 - 30pcs
9  Wrench key (K13) - 1pc	10  Hexagonal bolts catch wood Ø1/4" * 70 - 3pcs	11  Hex - Head bolts Ø1/4" * 30 - 8pcs	



Assembly Tools Required (Not Included)


STEP 1

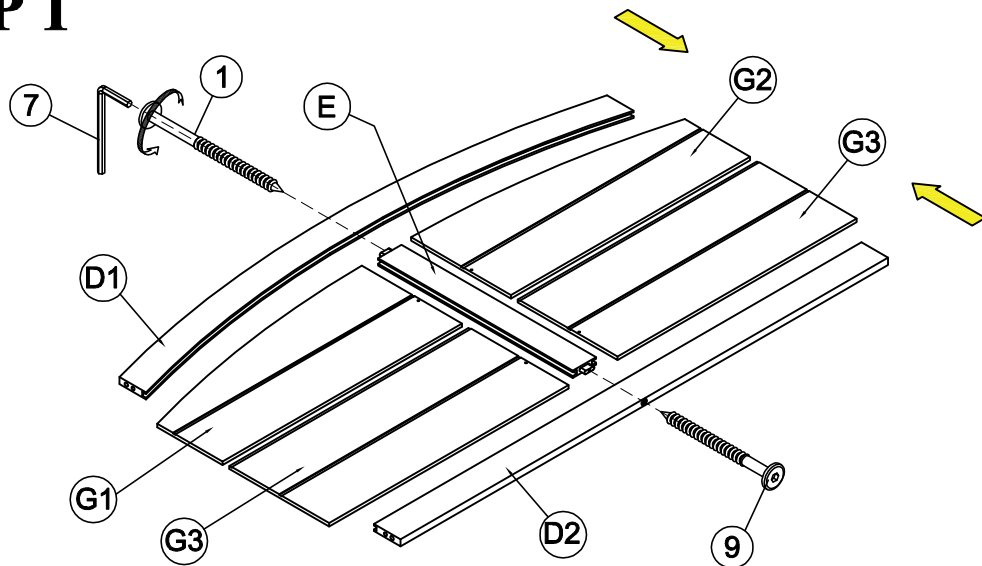

1

Hexagonal bolts catch wood
Ø1/4" * 100 - 2pcs


STEP 2

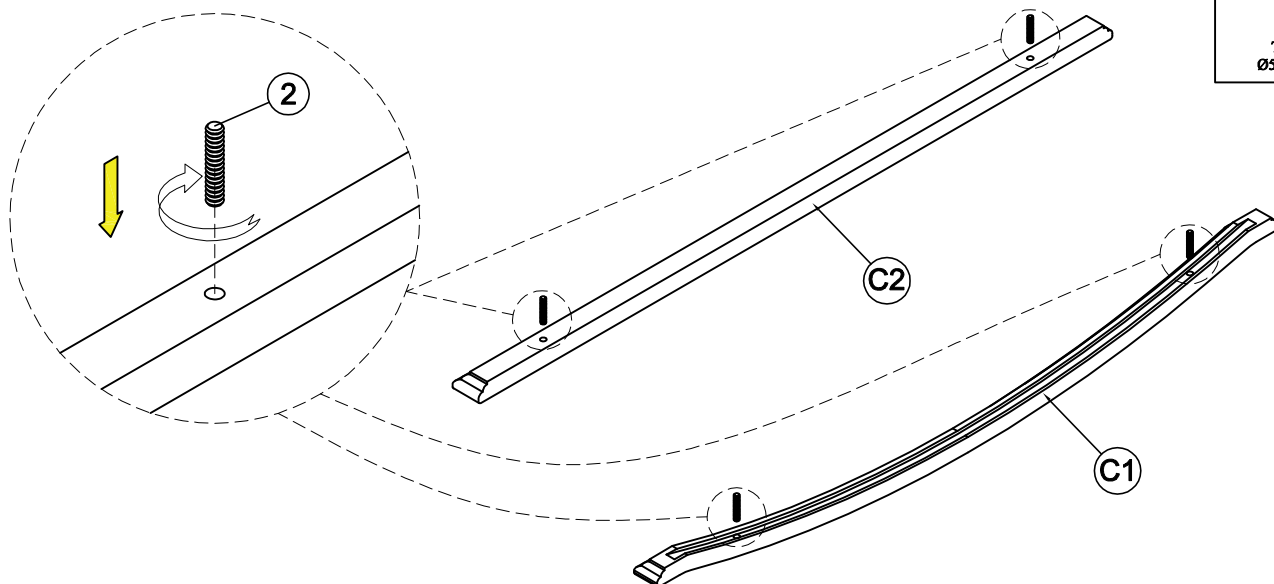

2

Threaded bolt
Ø5/16" * 60 - 4pcs


STEP 3

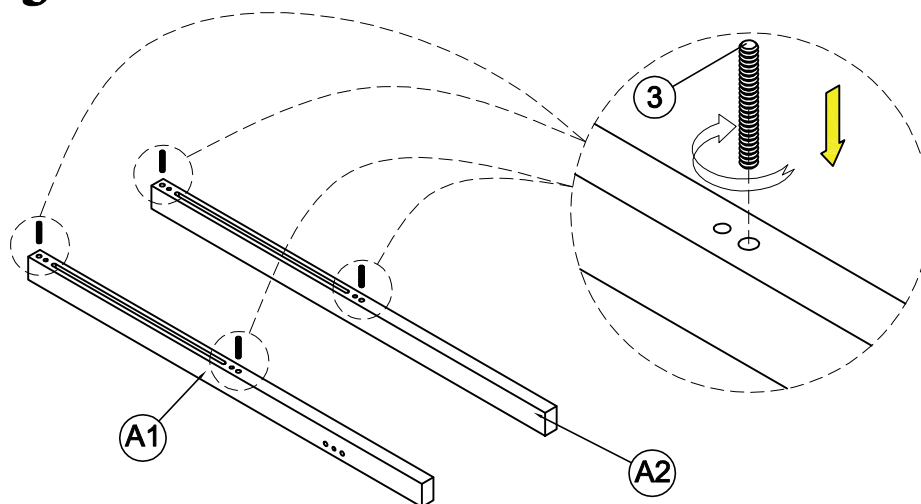

3

Threaded bolt
Ø5/16" * 80 - 4pcs

STEP 4

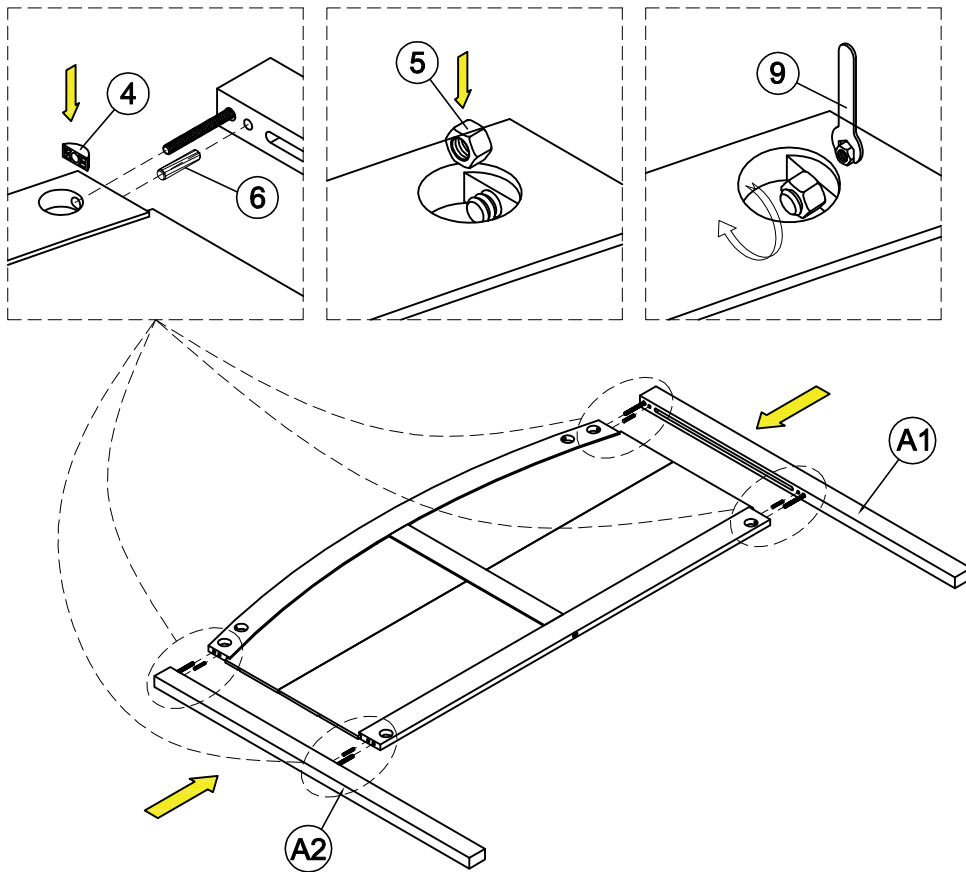

4



Semi - Circular
Ø5/16" - 4pcs

5




Hexagonal screw
Ø5/16" - 4pcs

6



Wood dowel
Ø8 * 30 - 4pcs

STEP 5

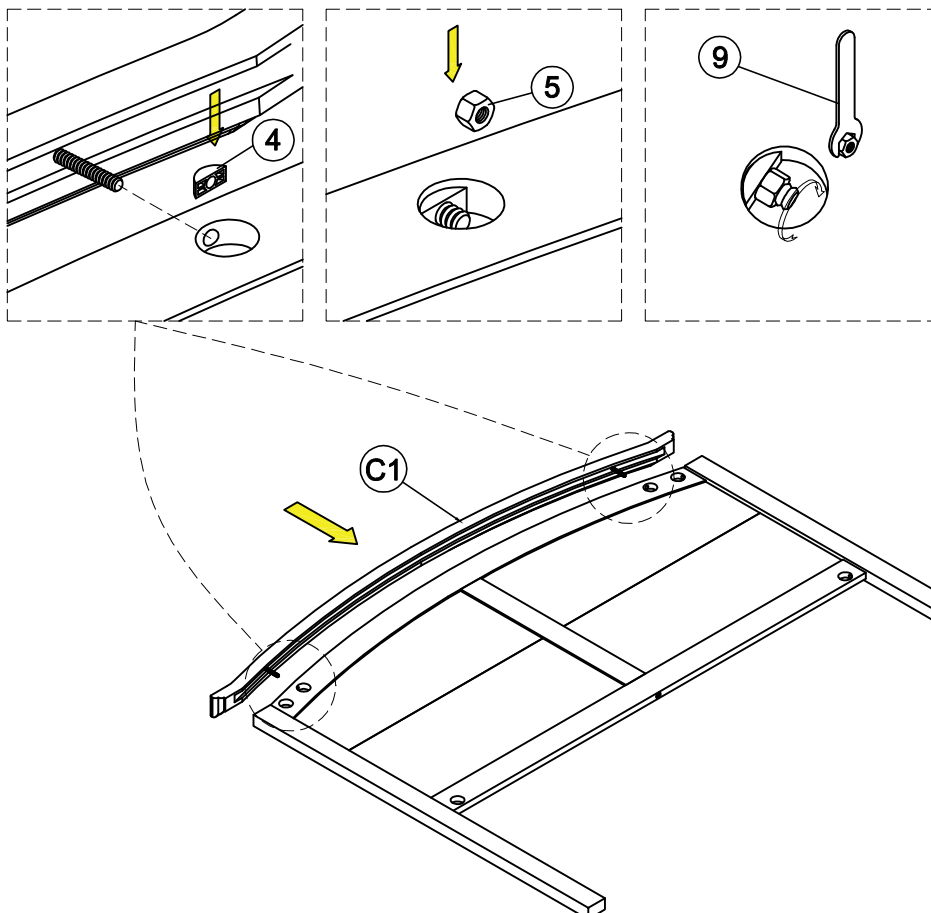

4



Semi - Circular
Ø5/16" - 2pcs

5




Hexagonal screw
Ø5/16" - 2pcs

STEP 6

3



Threaded bolt
Ø5/16" * 80 - 4pcs

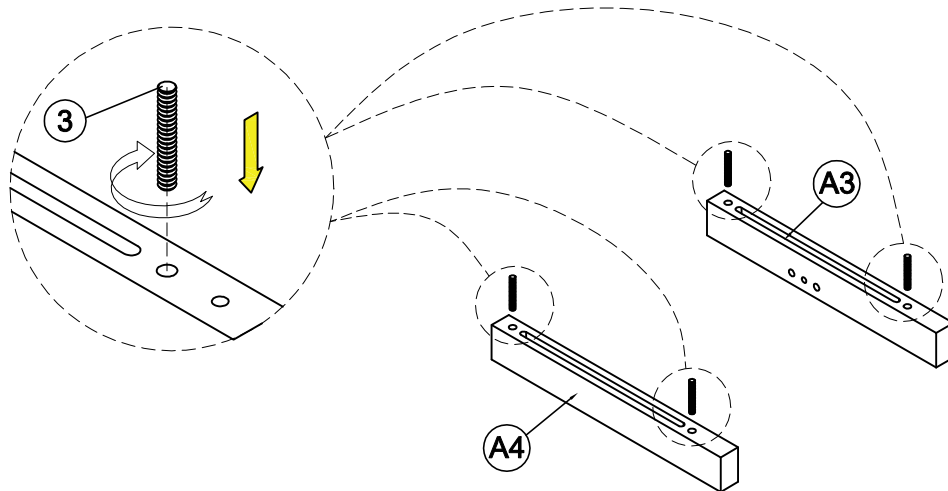

STEP 7

4





Semi - Circular
Ø5/16" - 4pcs


5



Hexagonal screw
Ø5/16" - 4pcs

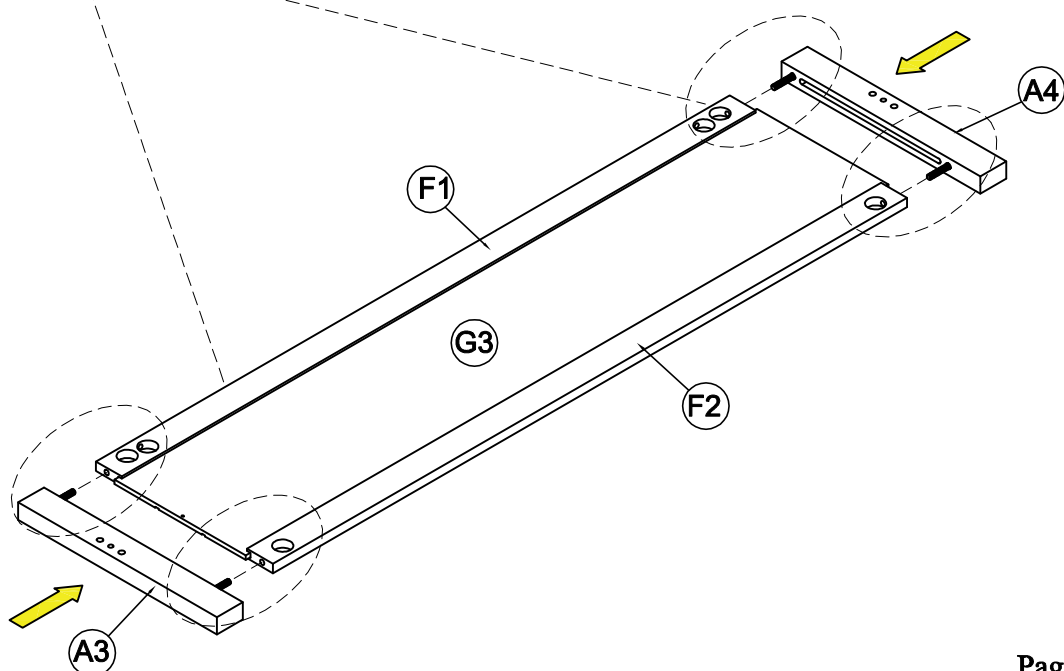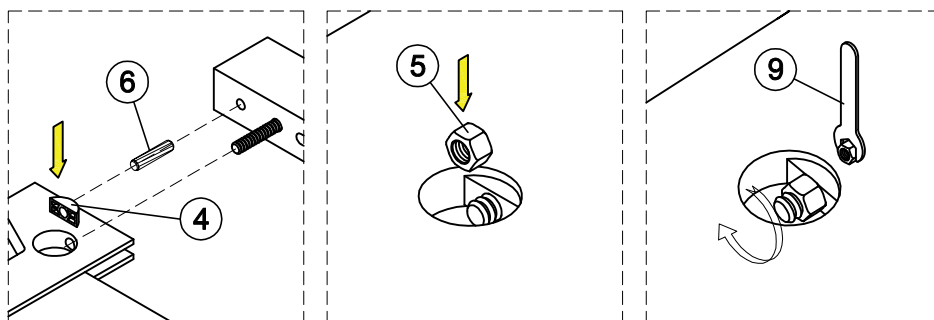

STEP 8

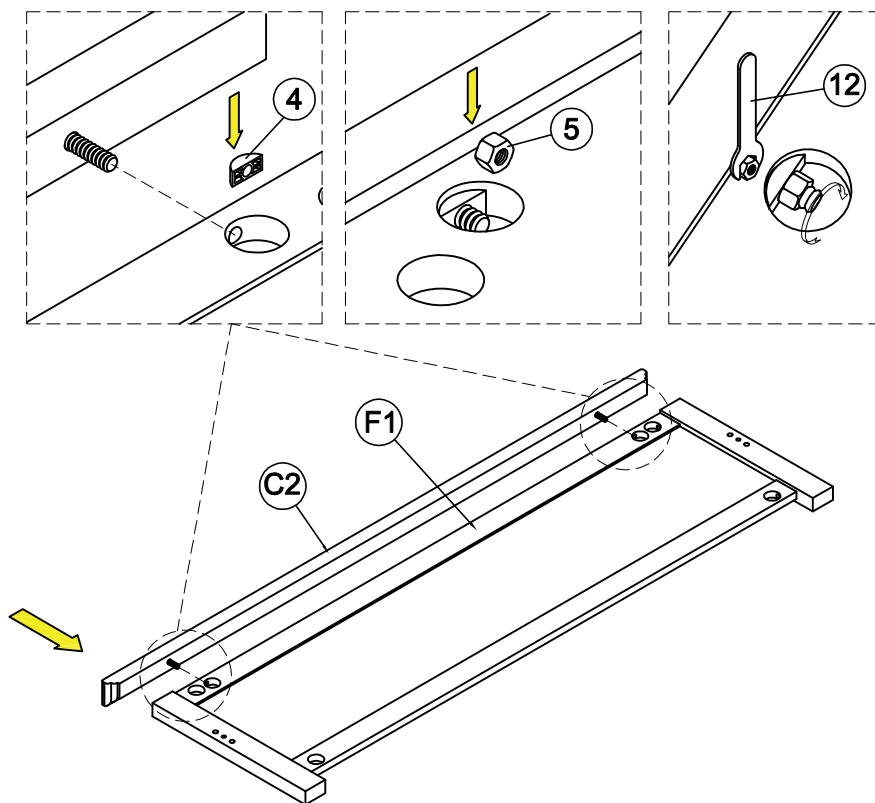

4




Semi - Circular
Ø5/16" - 2pcs

5



Hexagonal screw
Ø5/16" - 2pcs

STEP 9

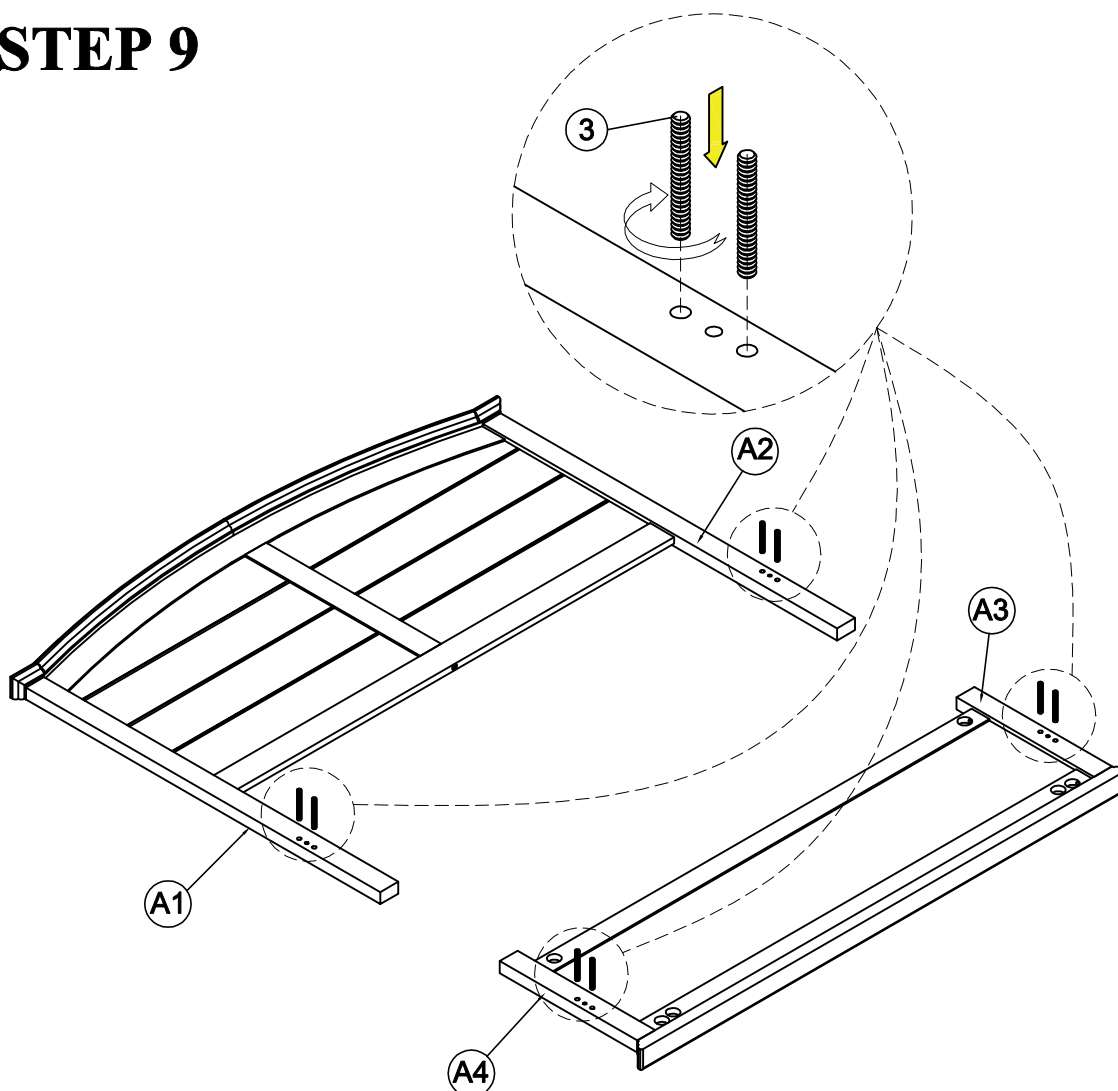

3




Threaded bolt
Ø5/16" * 80 - 8pcs

STEP 10

11



Hex - Head bolts
Ø1/4" * 30 - 8pcs

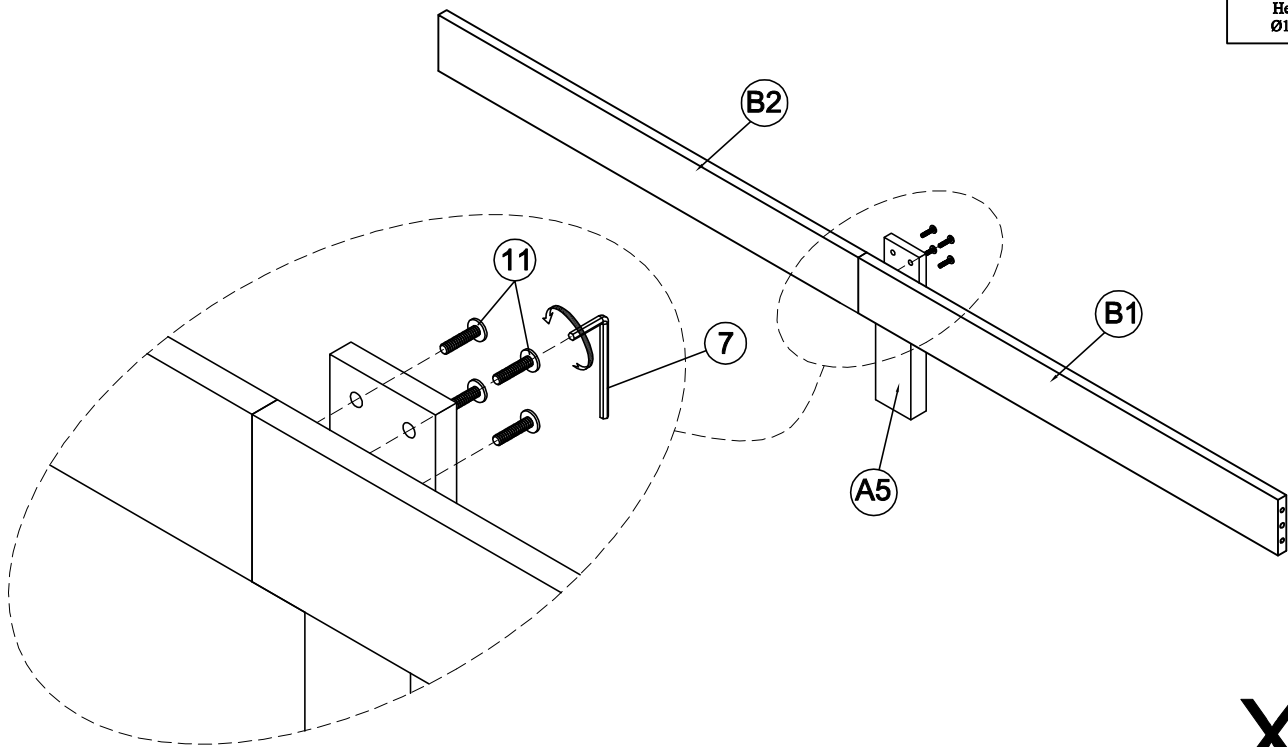


X2

STEP 11

10



Hexagonal bolts catch wood
Ø1/4" * 70 - 3pcs

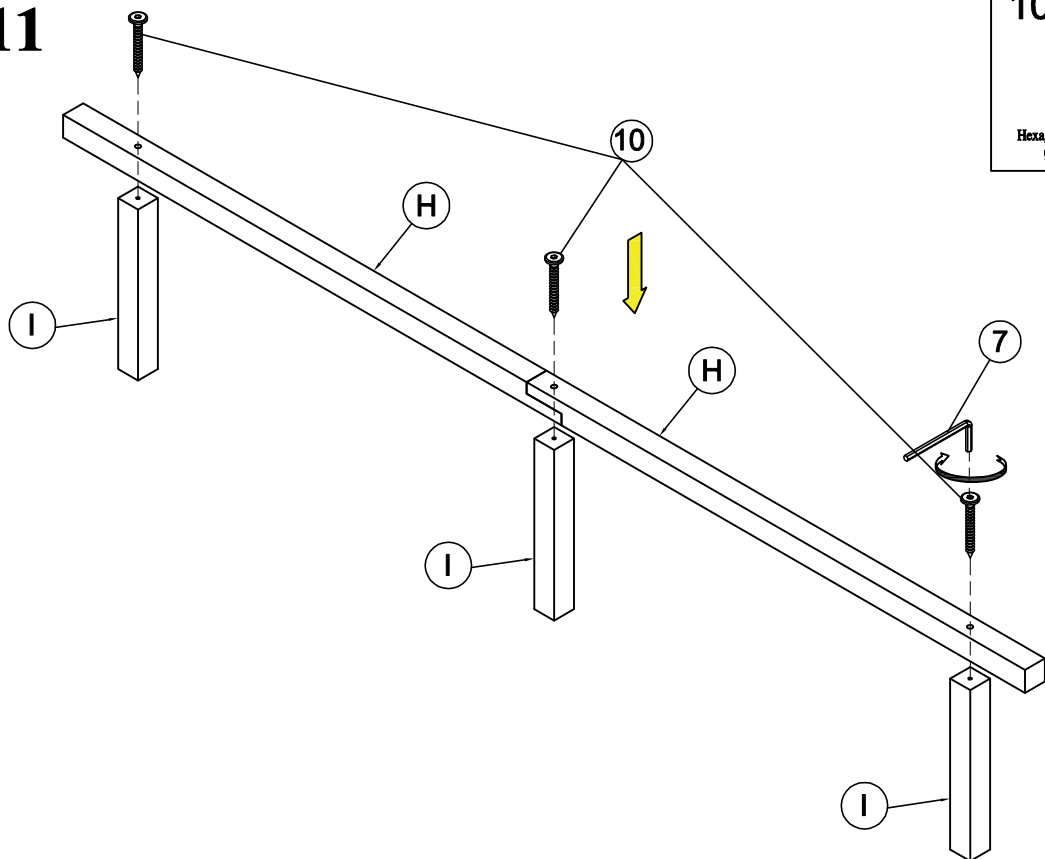

STEP 12

4



Semi - Circular
Ø5/16" - 8pcs

5







Hexagonal screw
Ø5/16" - 8pcs

6




Wood dowel
Ø8 * 30 - 4pcs

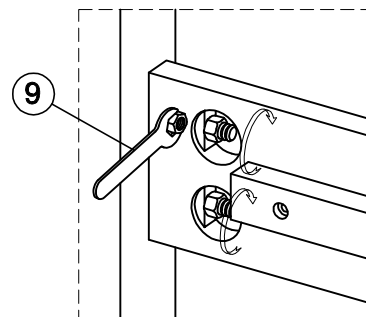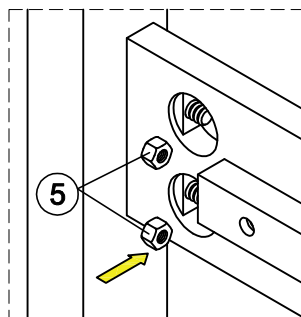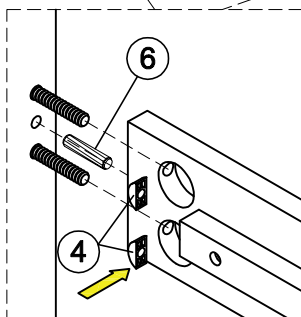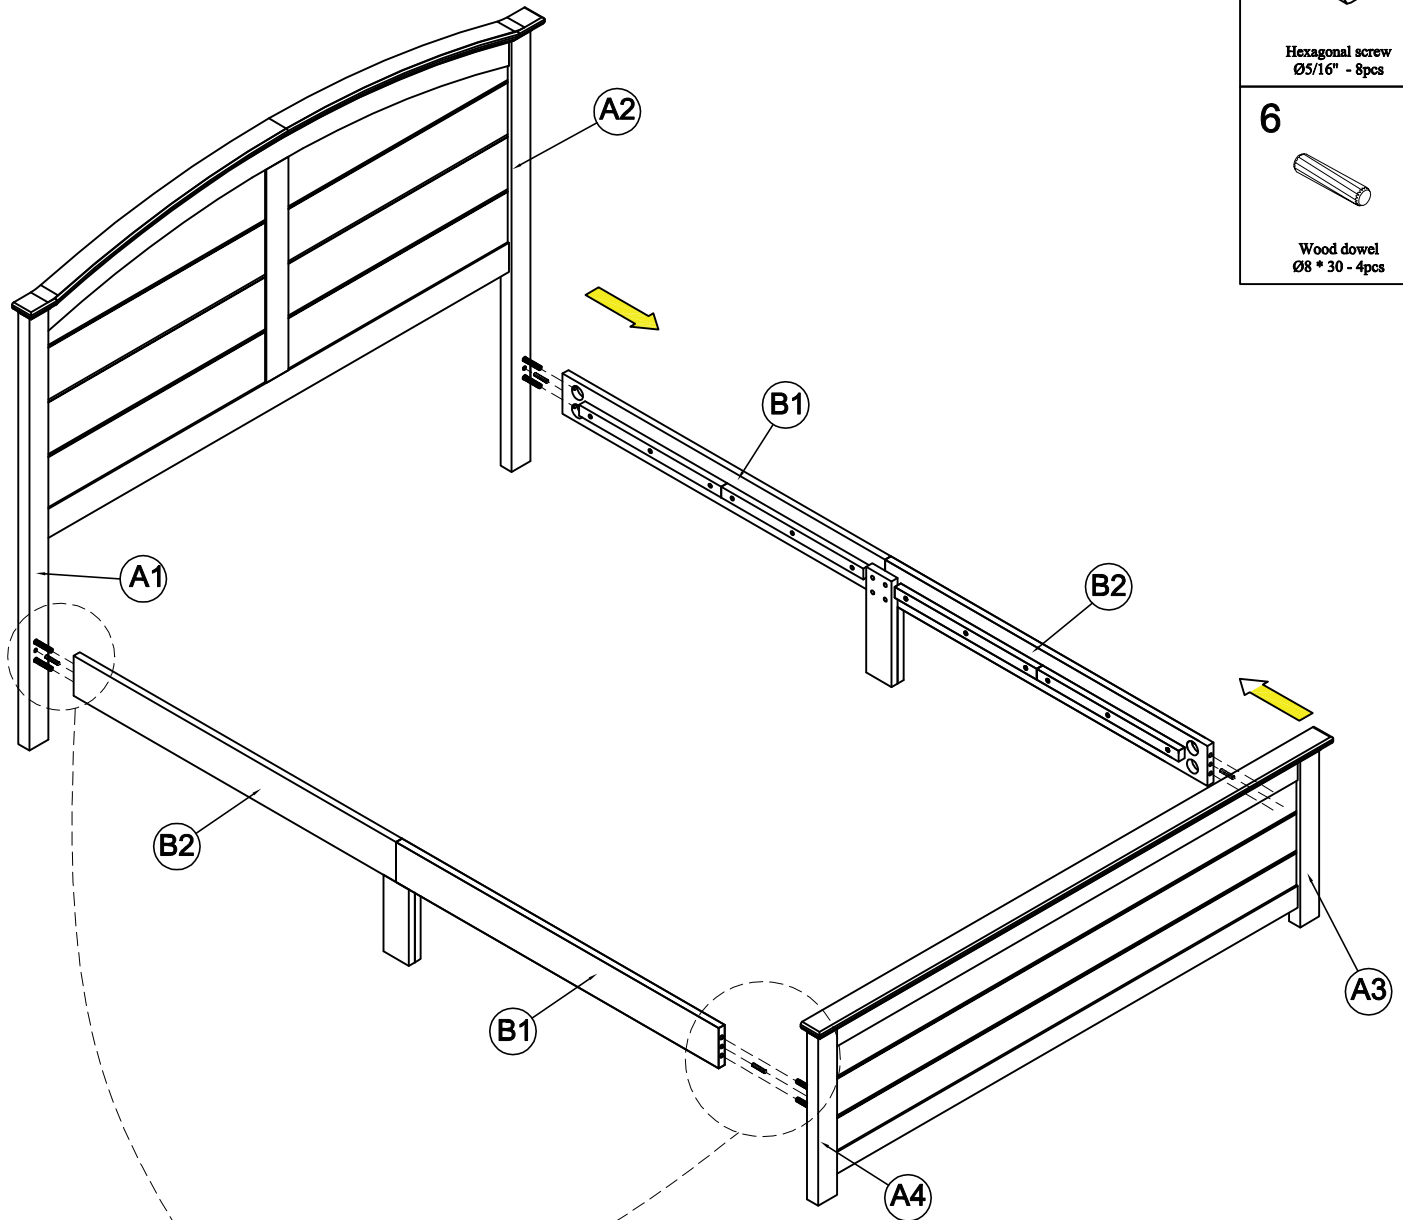


STEP 13

8



Wood screws
M4 * 30 - 30pcs

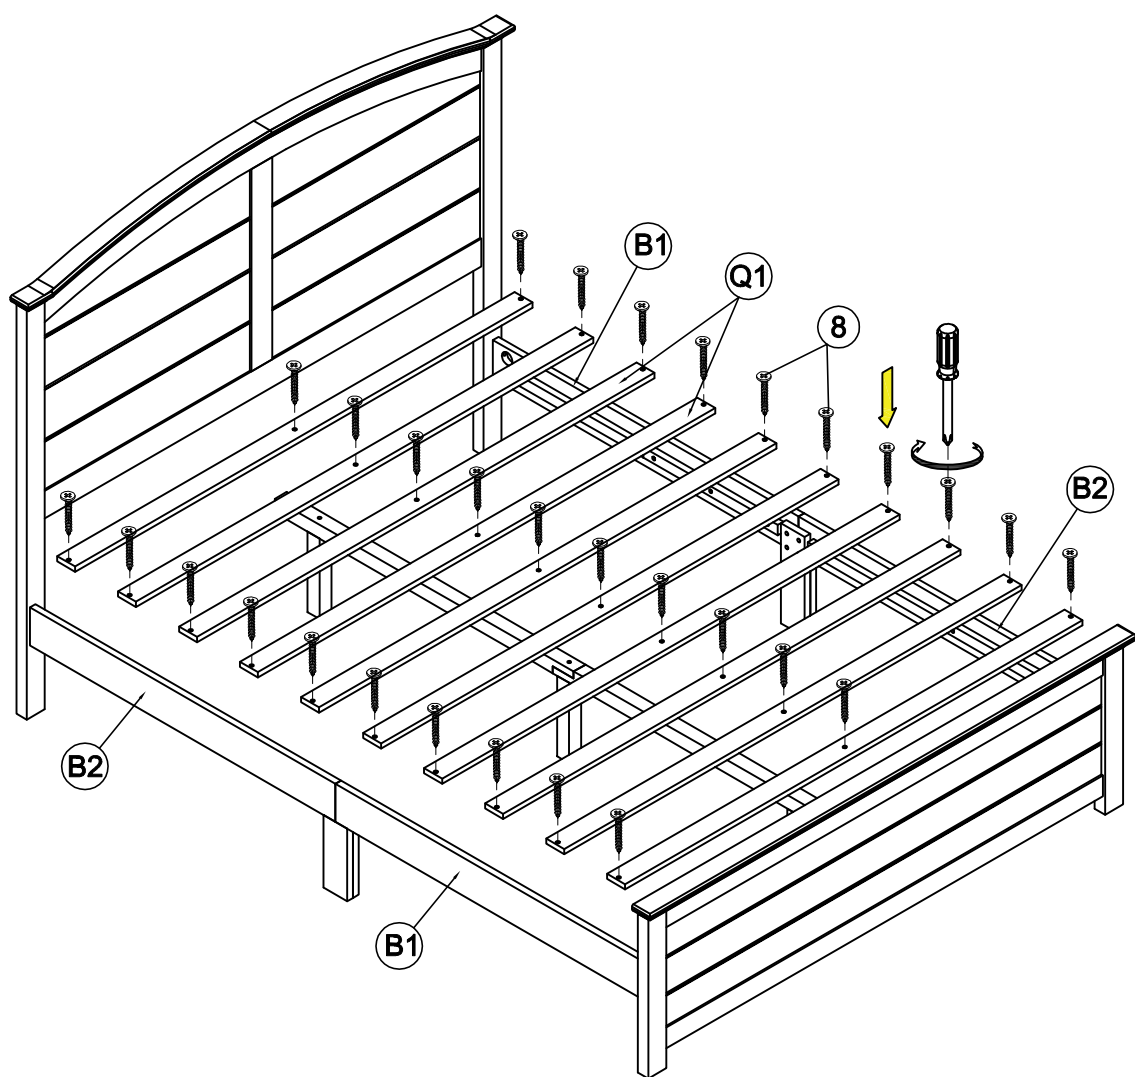

COMPLETED

