





















Six drawer cabinets

–Instruction Manual–










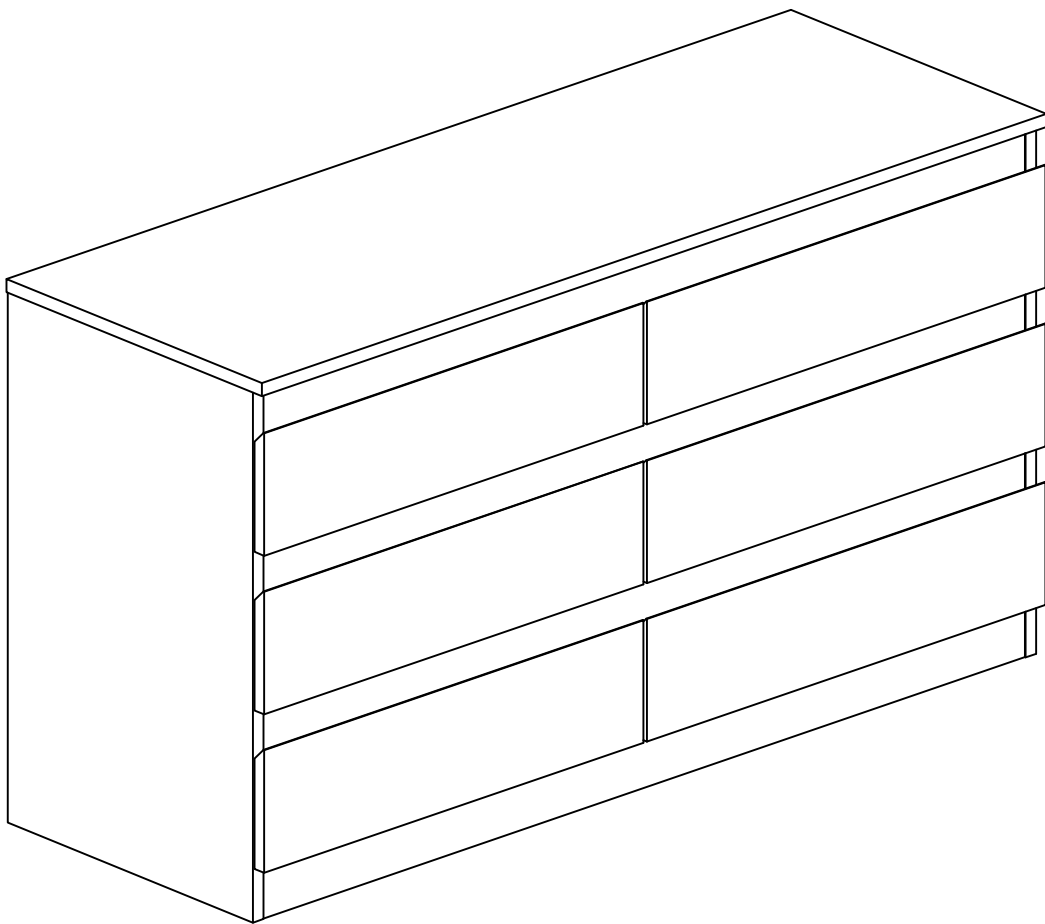


Size:120*39*82cm


HARDWARE LIST

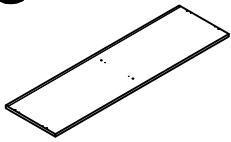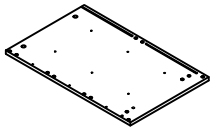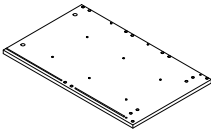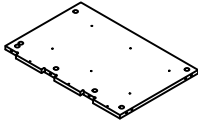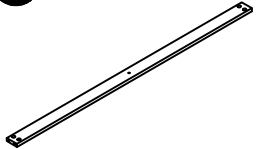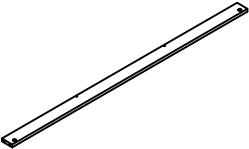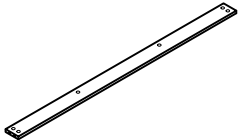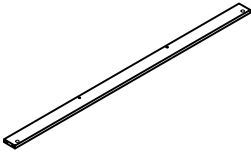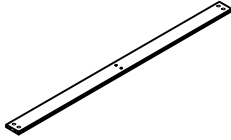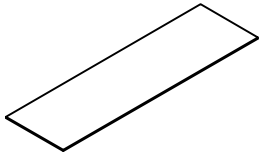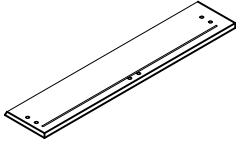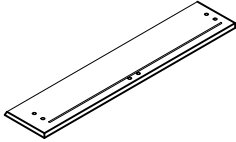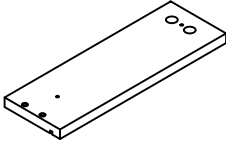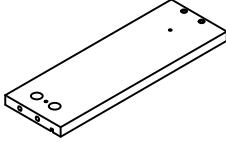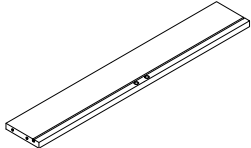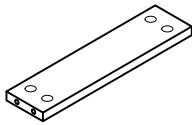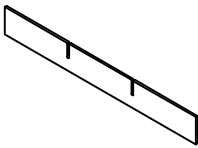
1  1PC	2  1PC	3  1PC	4  1PC	5  3PCS
6  1PC	7  2PCS	8  1PC	9  1PC	10  2PCS
11  3PCS	12  3PCS	13  6PCS	14  6PCS	15  6PCS
16  6PCS	17  6PCS	18  2PCS	19  2PCS	

HARDWARE LIST

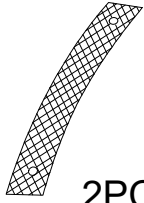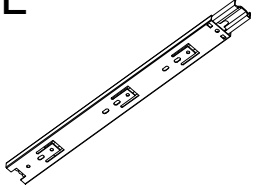A  6x35mm 91(+3)PCS	B  91(+3)PCS	C  6x30mm 12(+2)PCS	D  M3.5x12mm 60(+3)PCS	E  M3.5x35mm 28(+2)PCS
F  M3x14mm 12PCS	G  12PCS	H  2PCS	I  M3.5x20mm 2PCS	J  2PCS
K  2PCS	L  12PCS	M  4(+1)PCS		


HOW TO SPLIT THE SLIDE RAIL

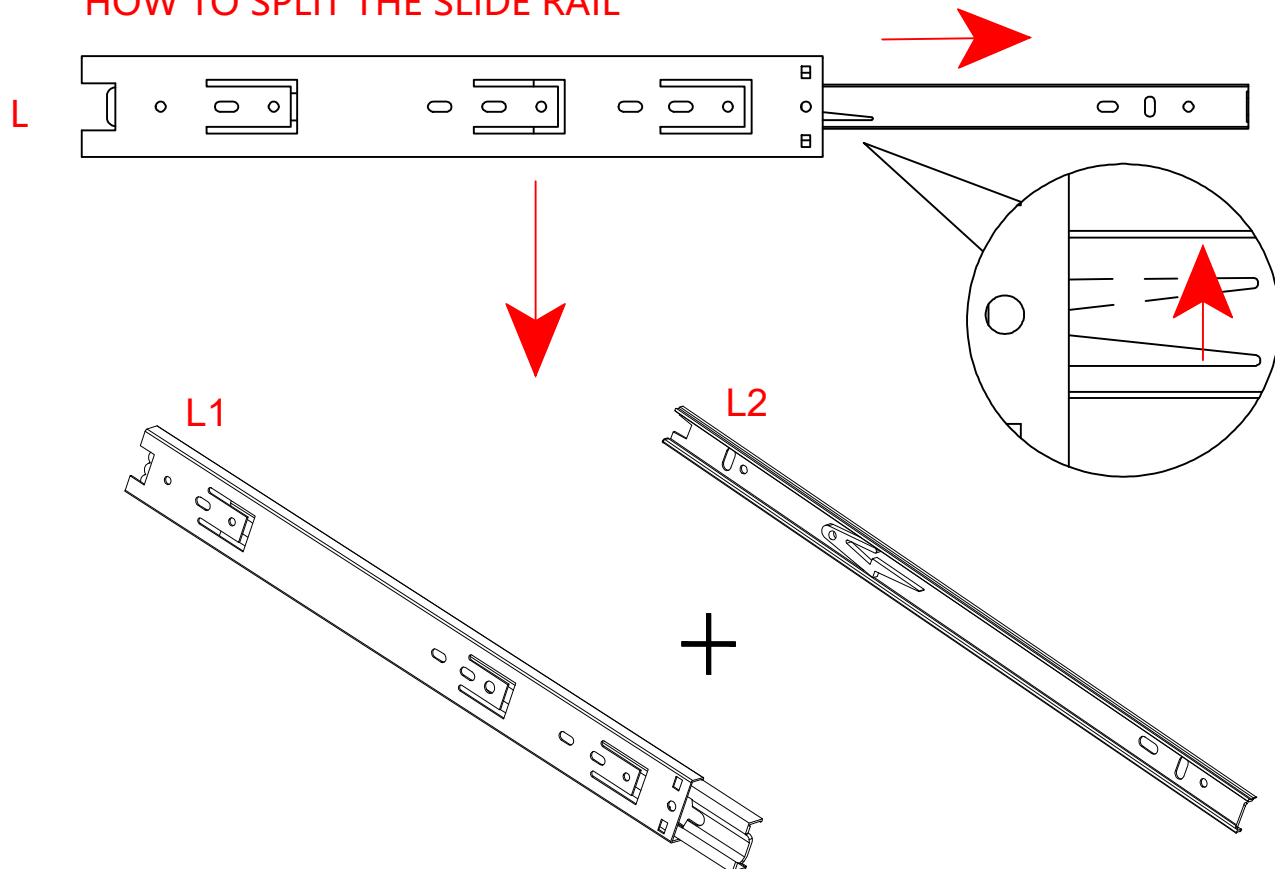

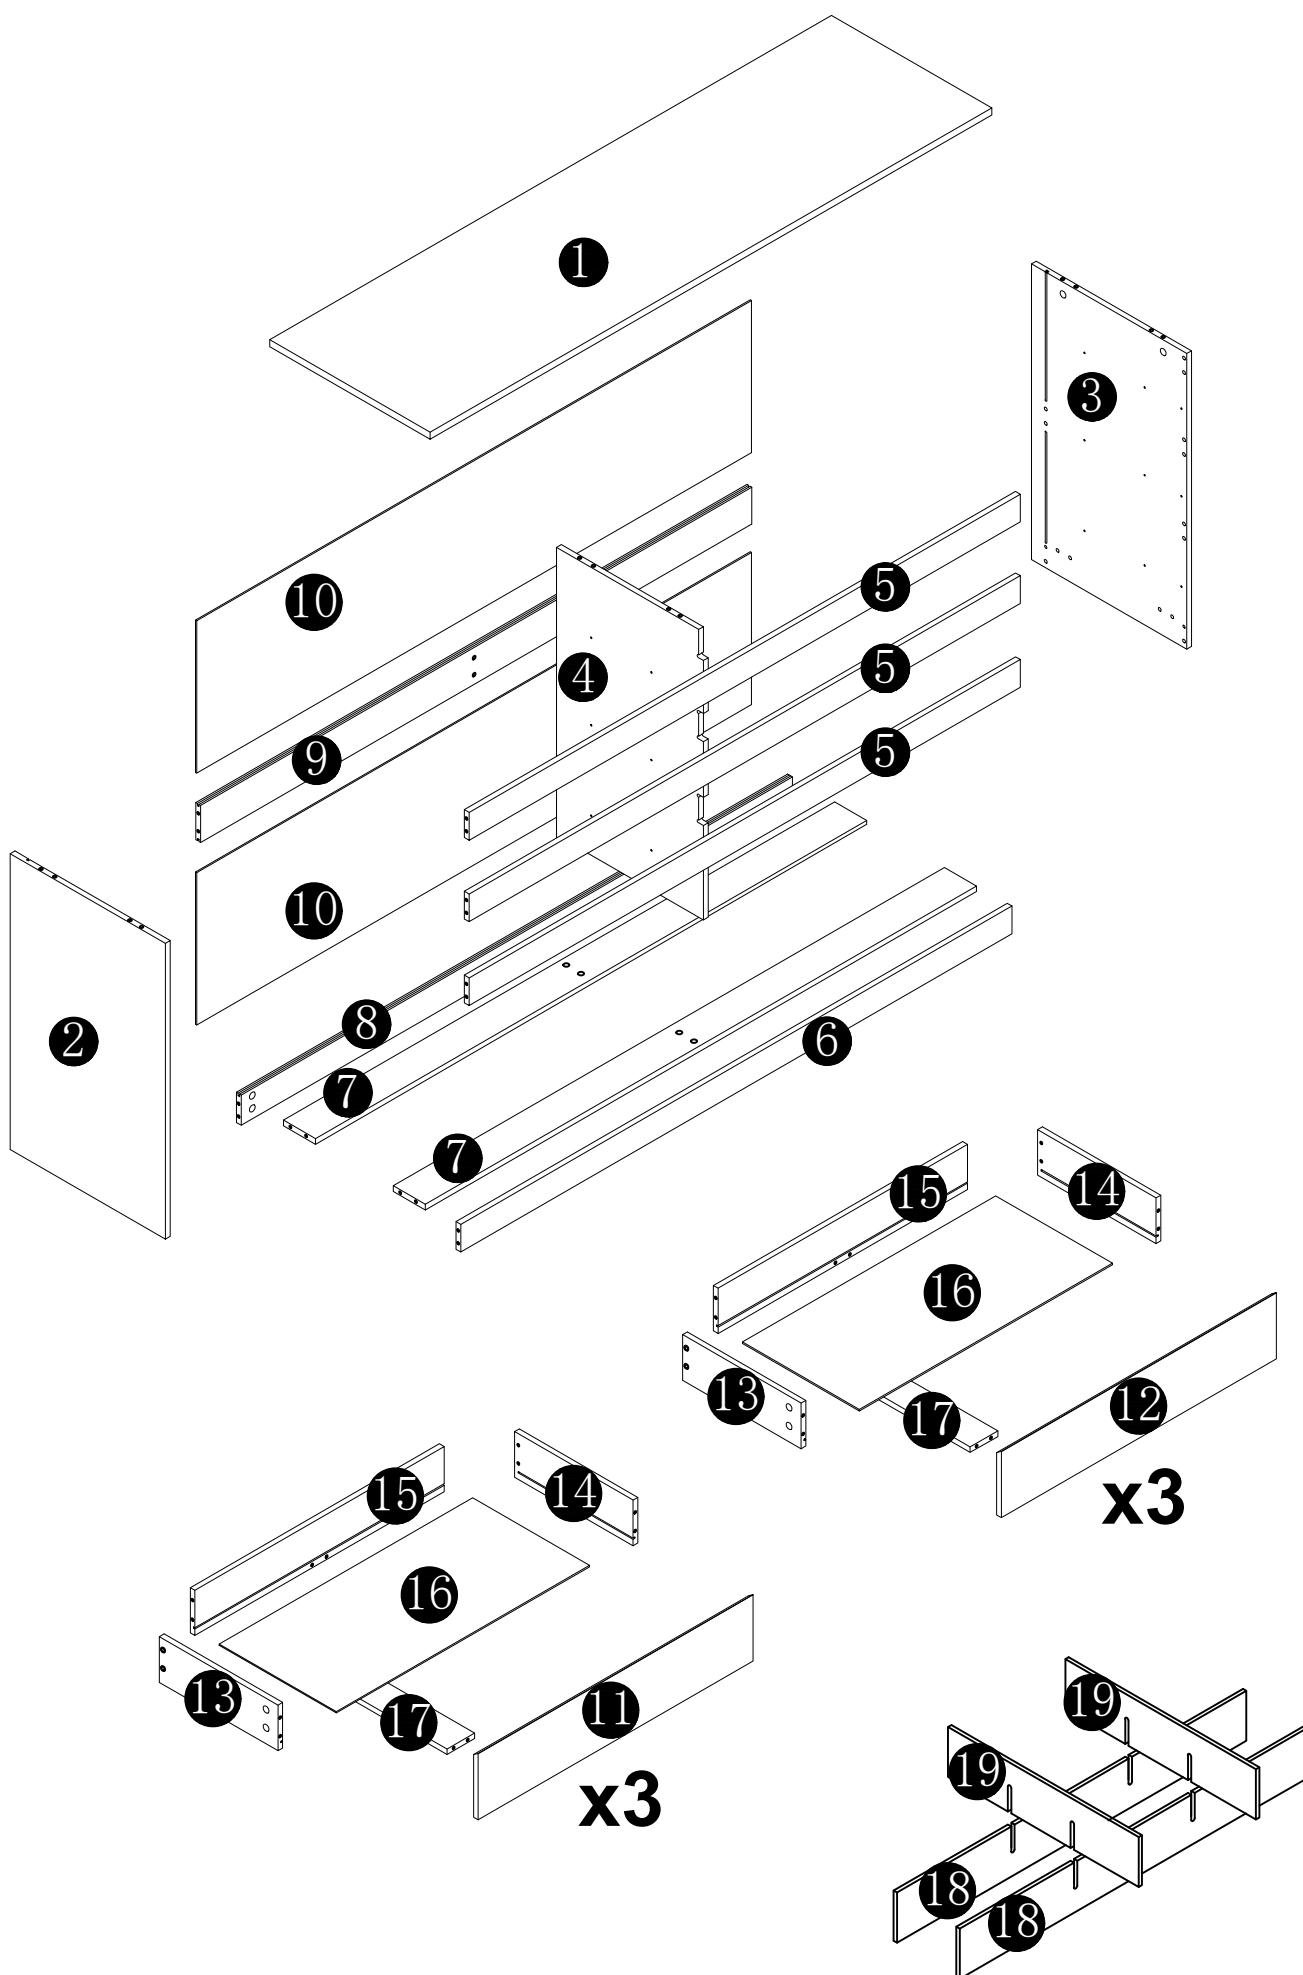


Tips

*This furniture requires 2 people to assemble.
Make sure no parts missing or damaged before assembly.*


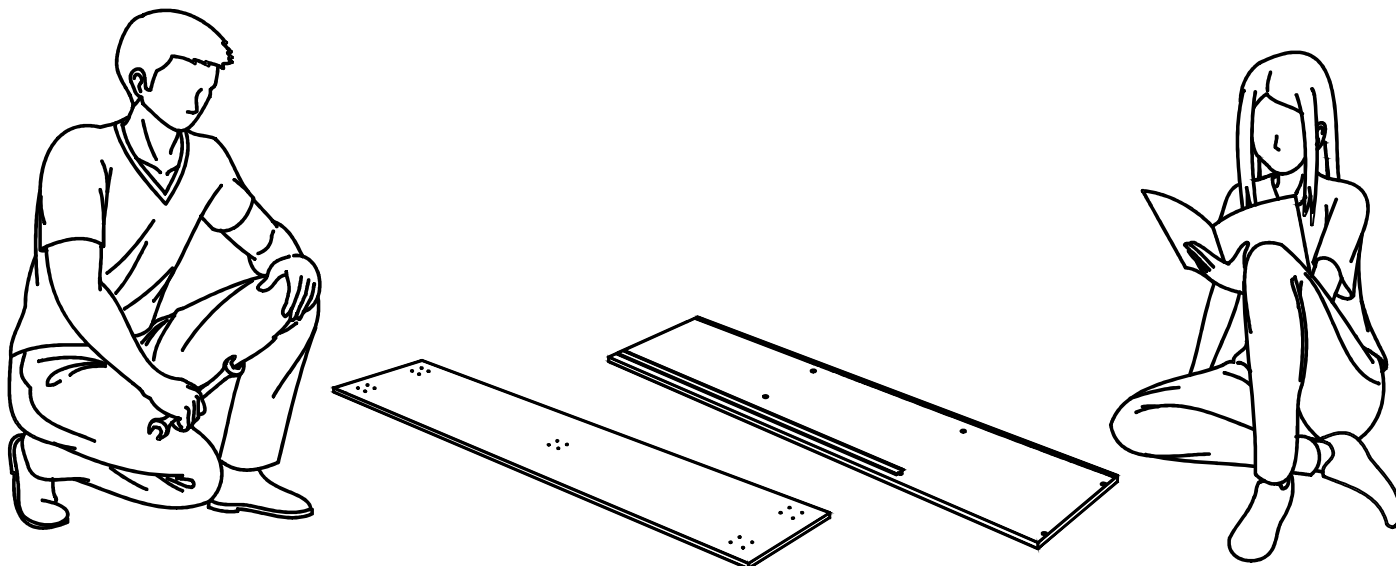


CAM BOLT INSTALLATION AS BELOW

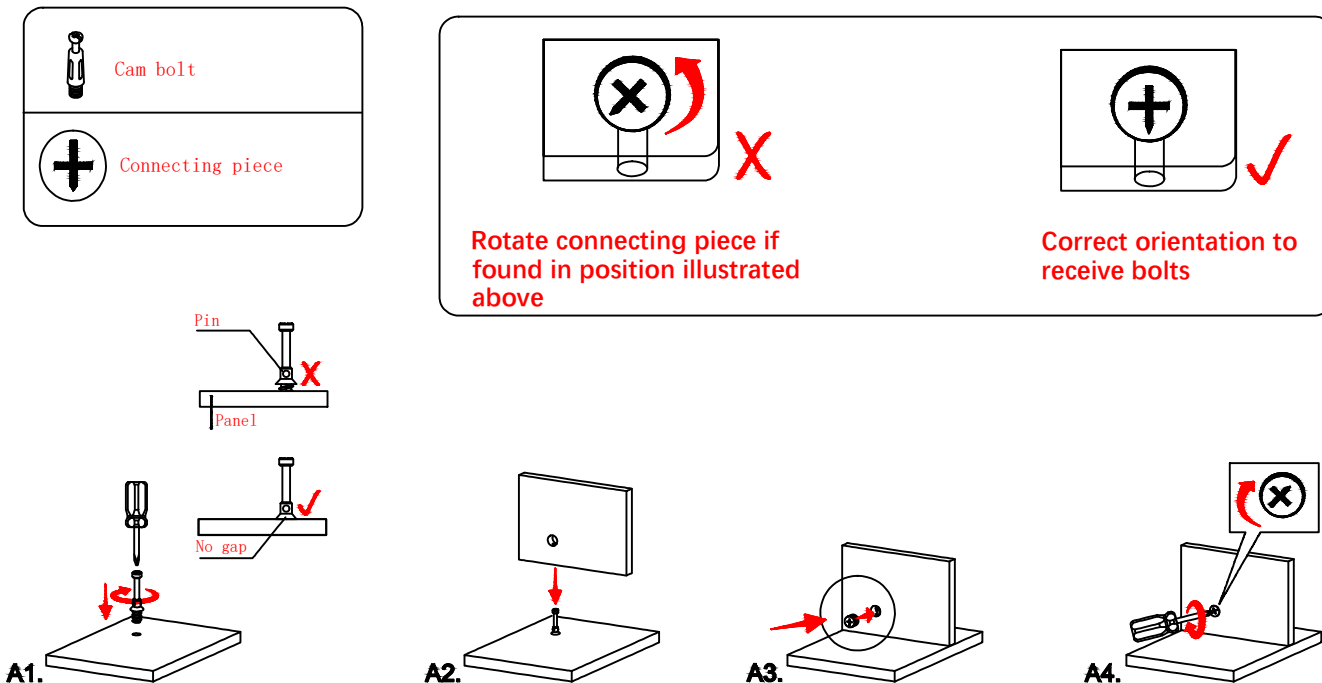

CAUTION: Please confirm the parts list before installation




YOU MAY NEED (NOT SUPPLIED)

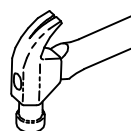

Steps

1




A x 7PCS C x 2PCS

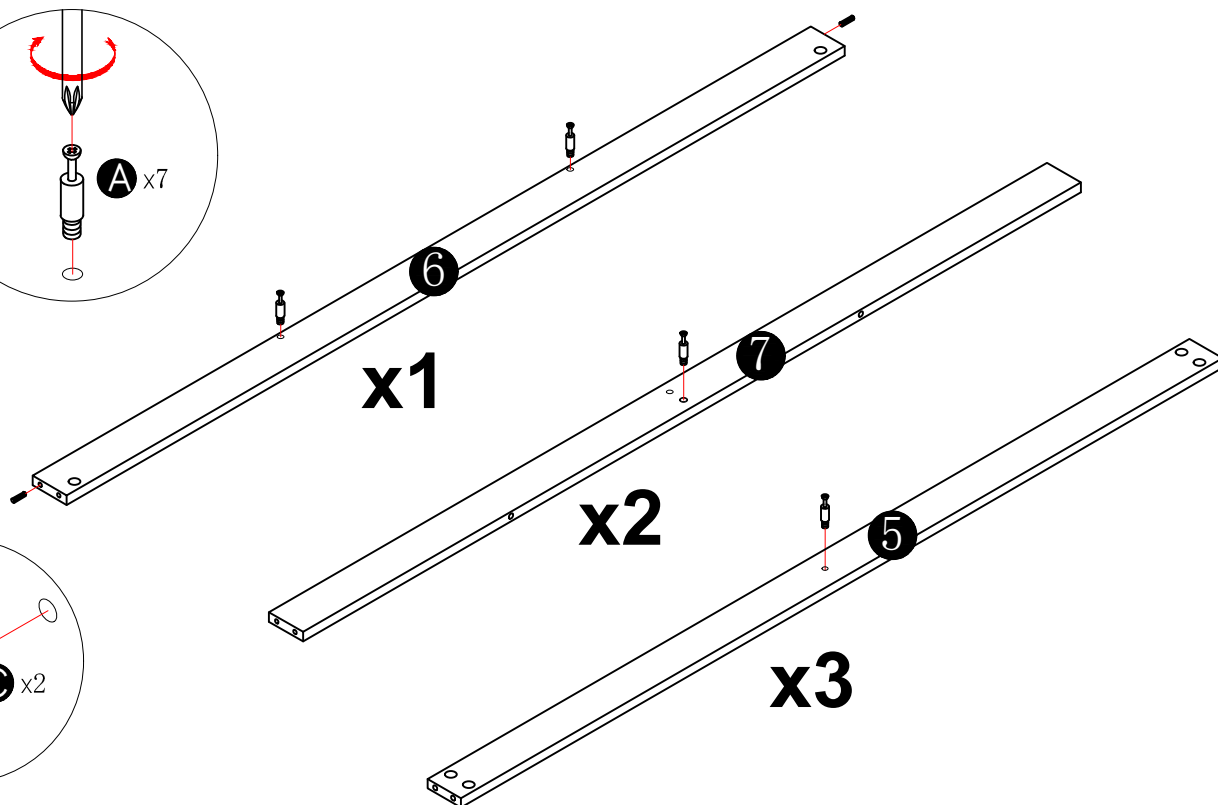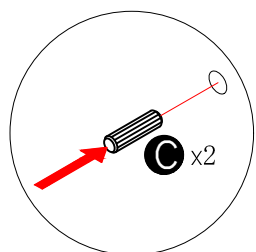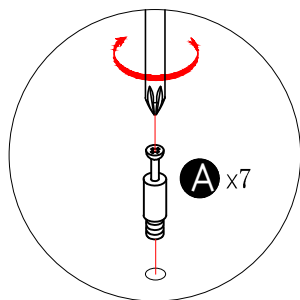

2

A x14PCS
L1 x 3PCS
D x9PCS
M x 2PCS

Pay attention to the alignment of the slide track hole and the pilot hole

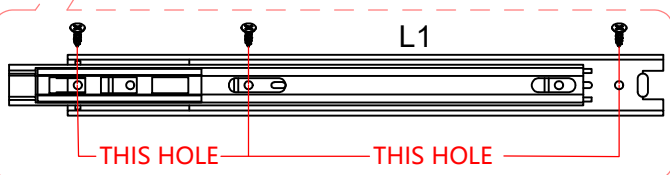
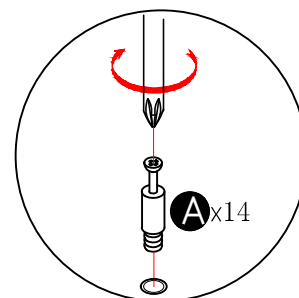
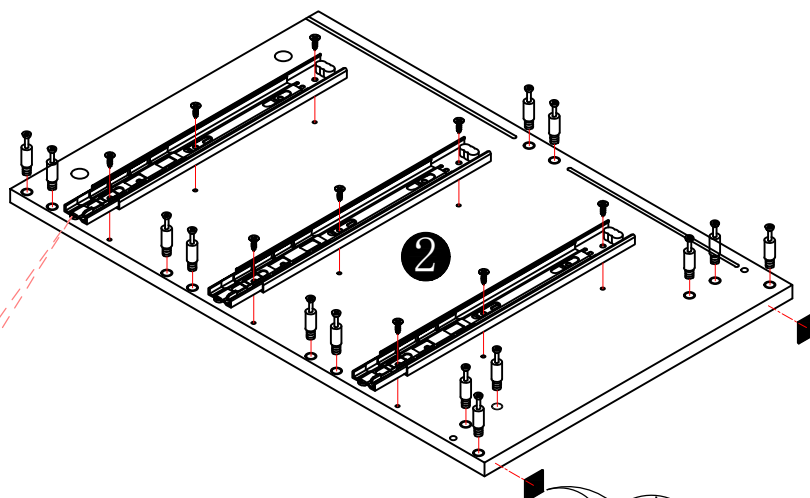


Steps

3




	A x14PCS
	L1 x 3PCS
	D x9PCS
	M x 2PCS

Pay attention to the alignment of the slide track hole and the pilot hole

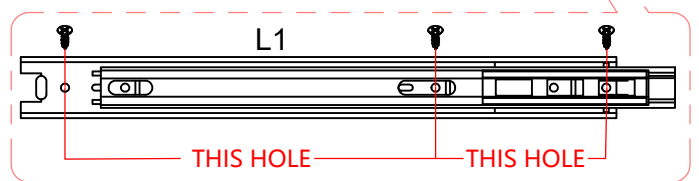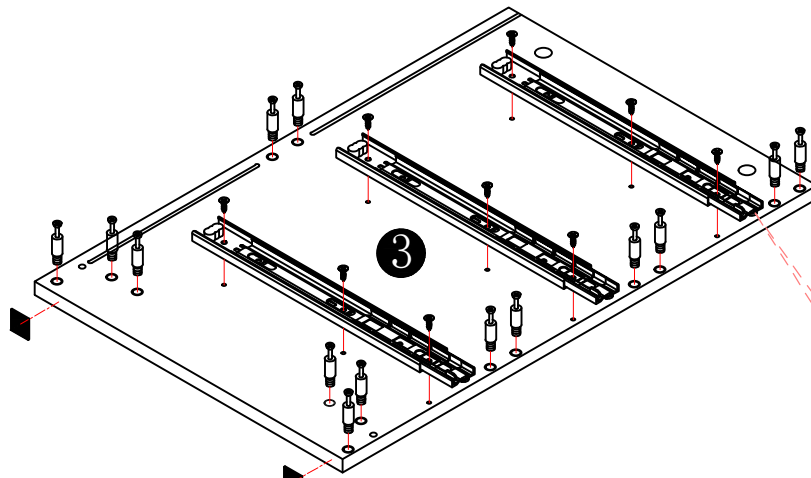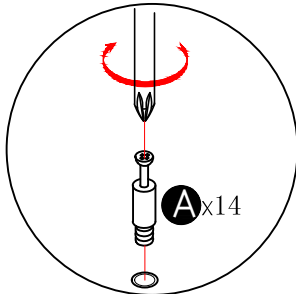

4


	L1 x 6PCS
	D x18PCS

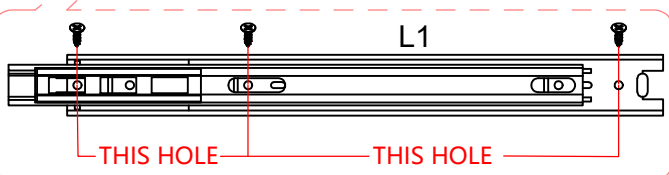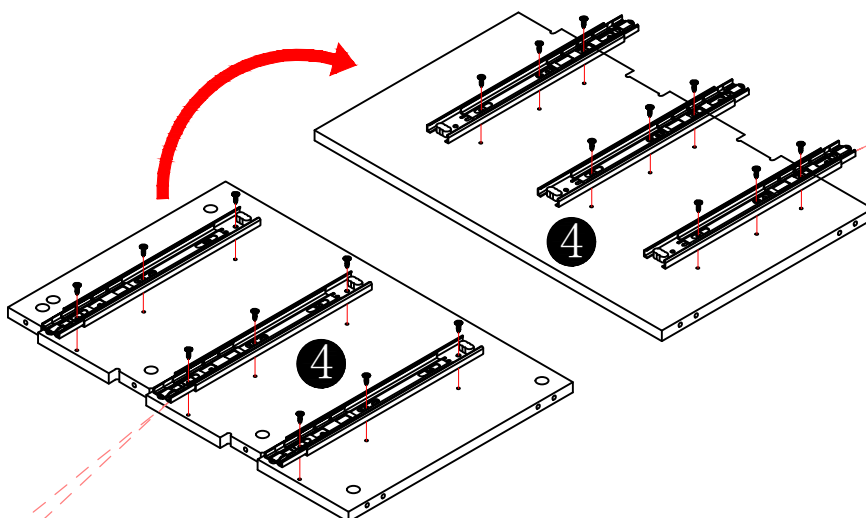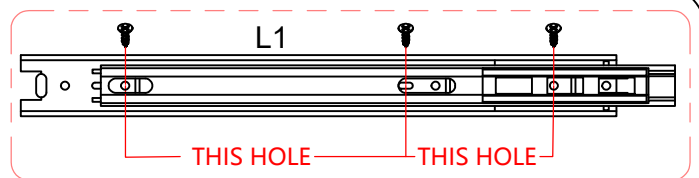


Pay attention to the alignment of the slide track hole and the pilot hole

Steps

5  B x 2PCS

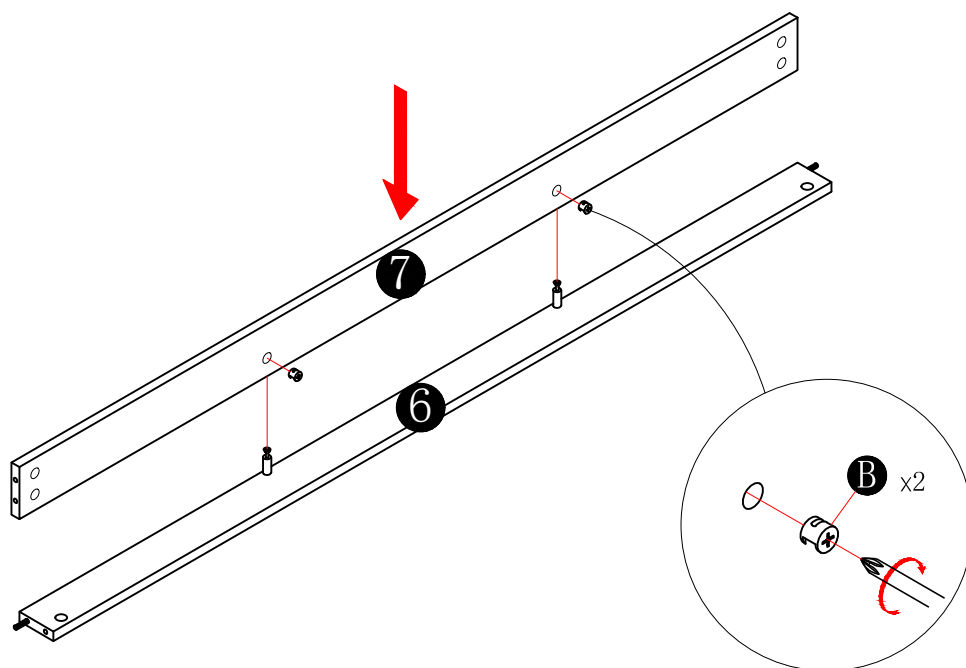


6  B x 3PCS

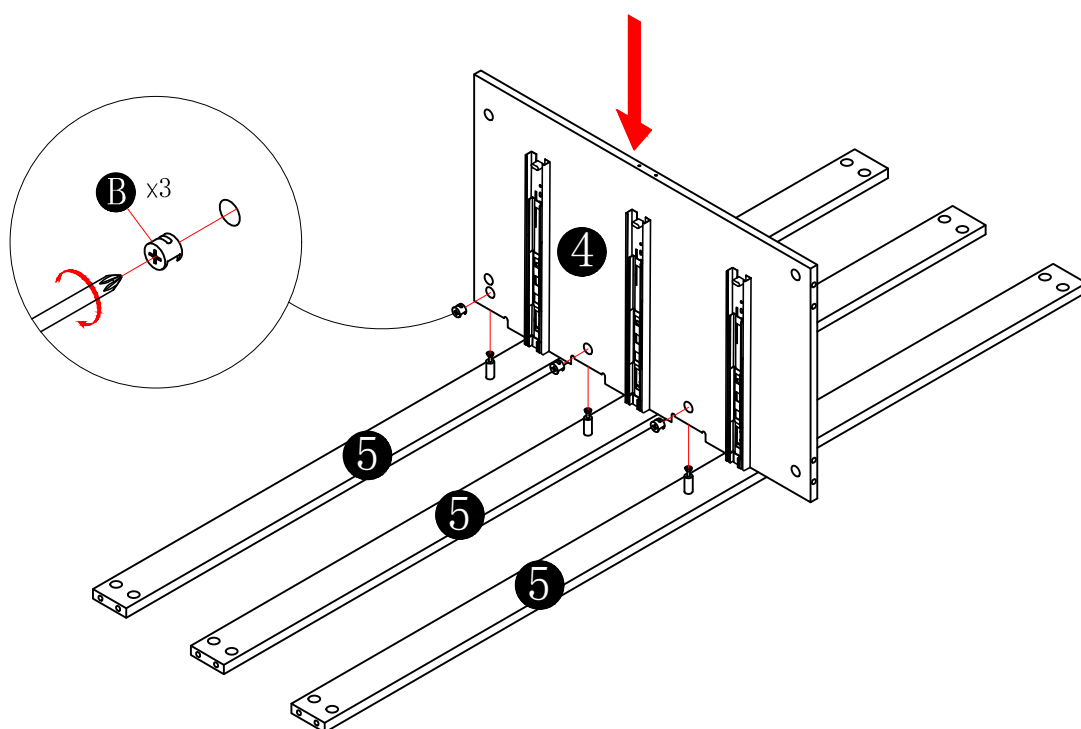


Steps

7  C x 2PCS

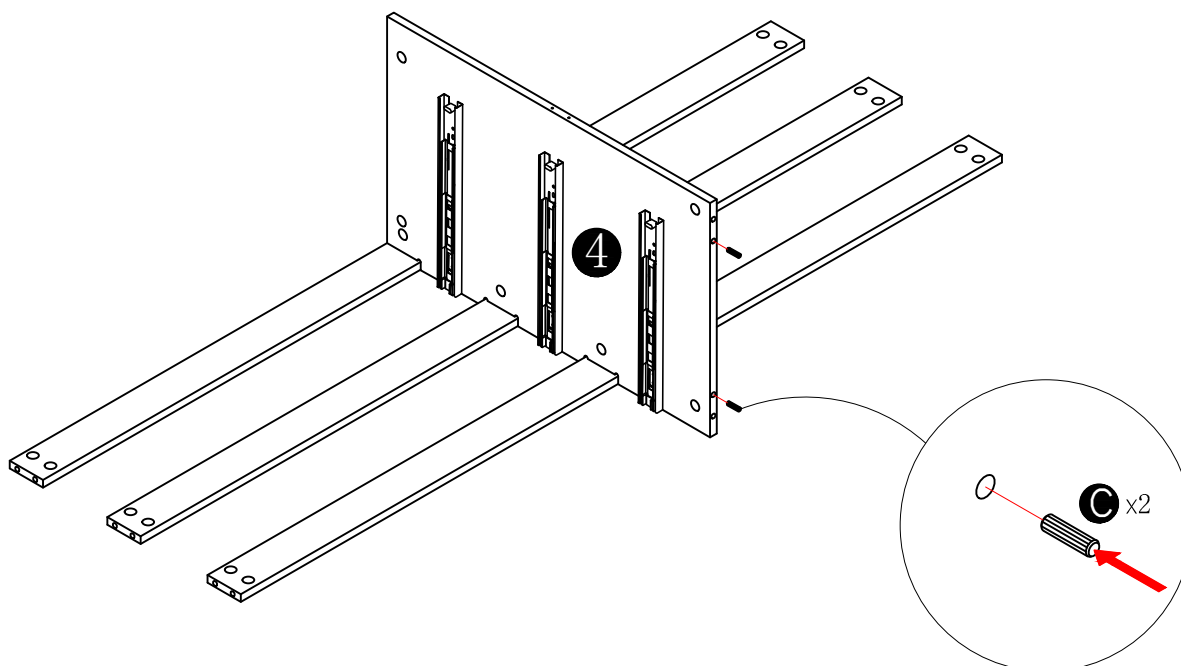


8  B x 1PC

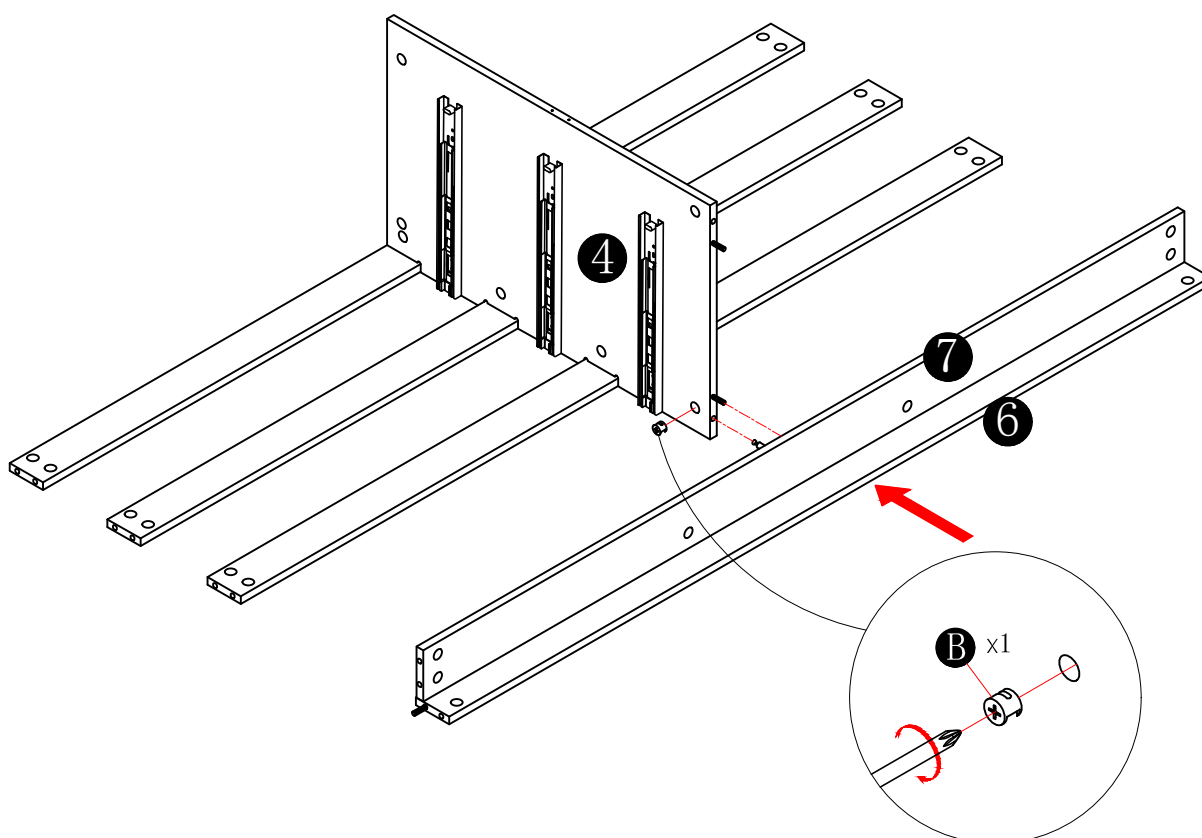

Steps


9

A x 2PCS C x 2PCS

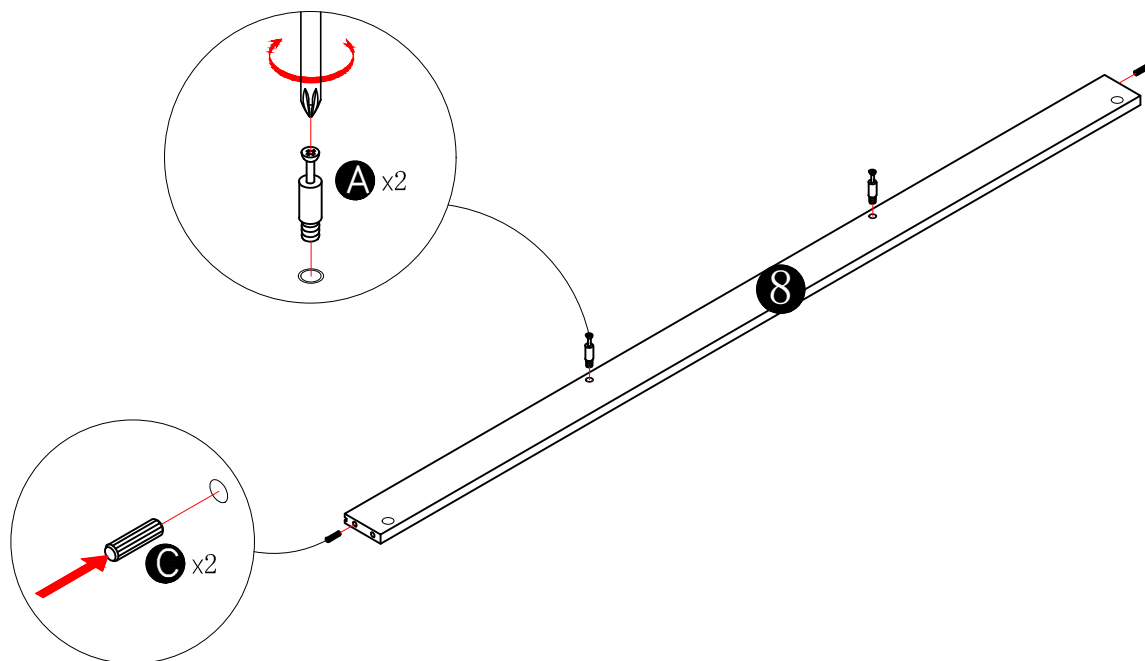

10

B x 2PCS

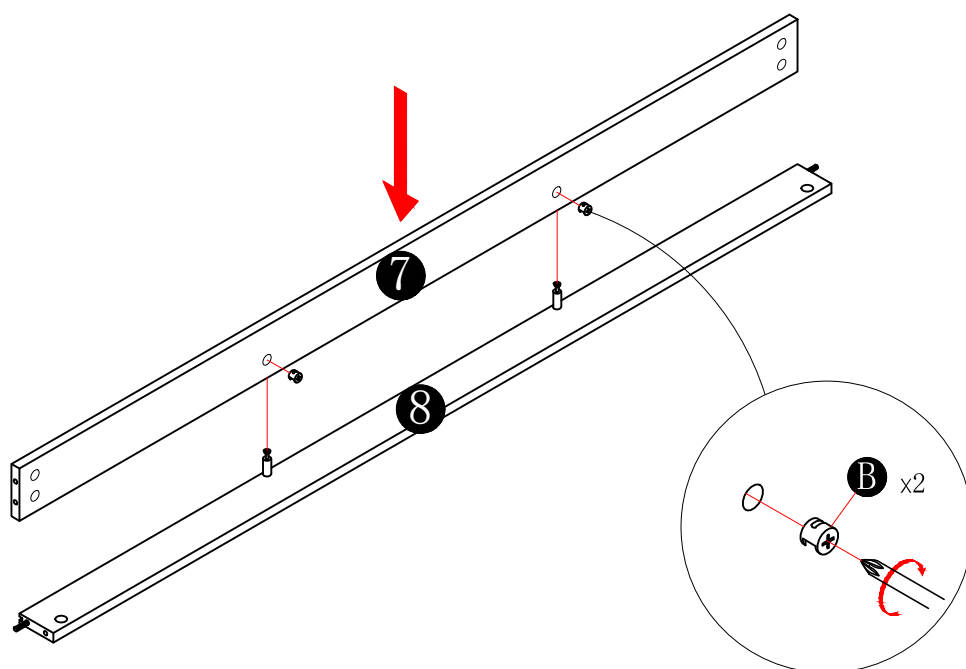


Steps

11



B x 1PC


two people assemble and lift slightly

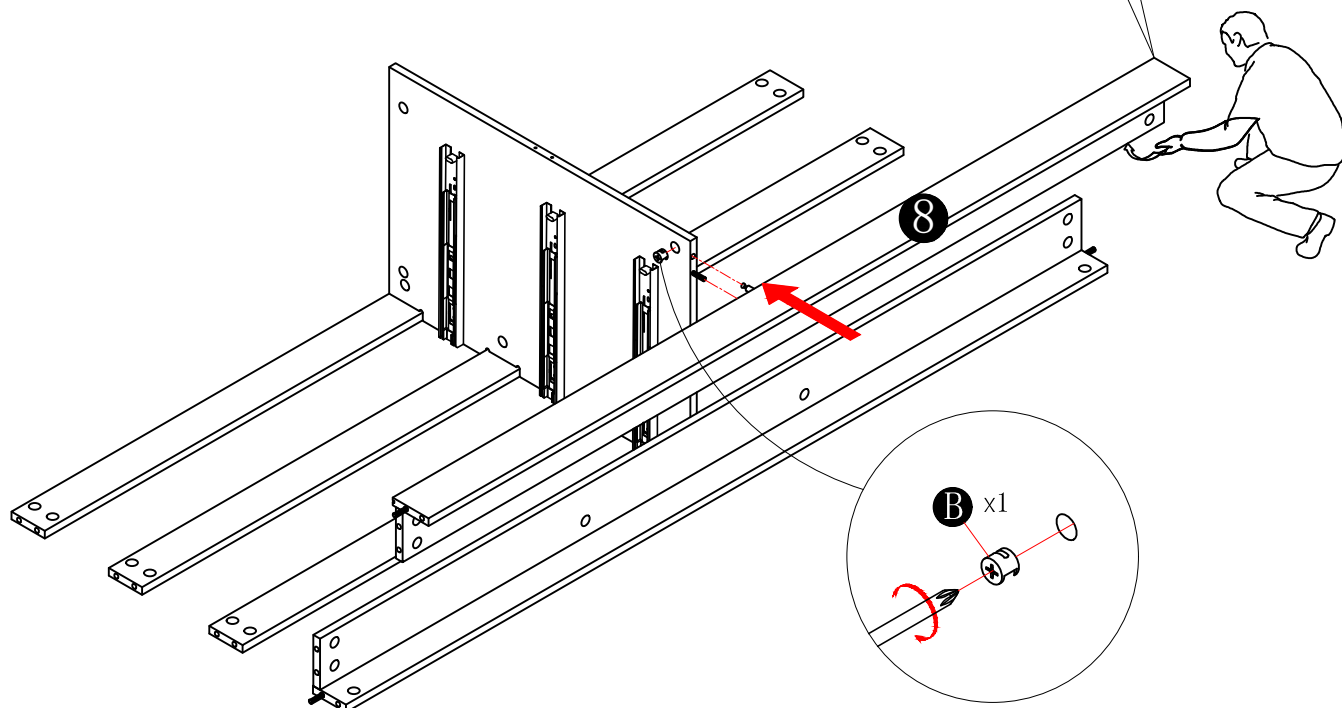

12




B x12PCS

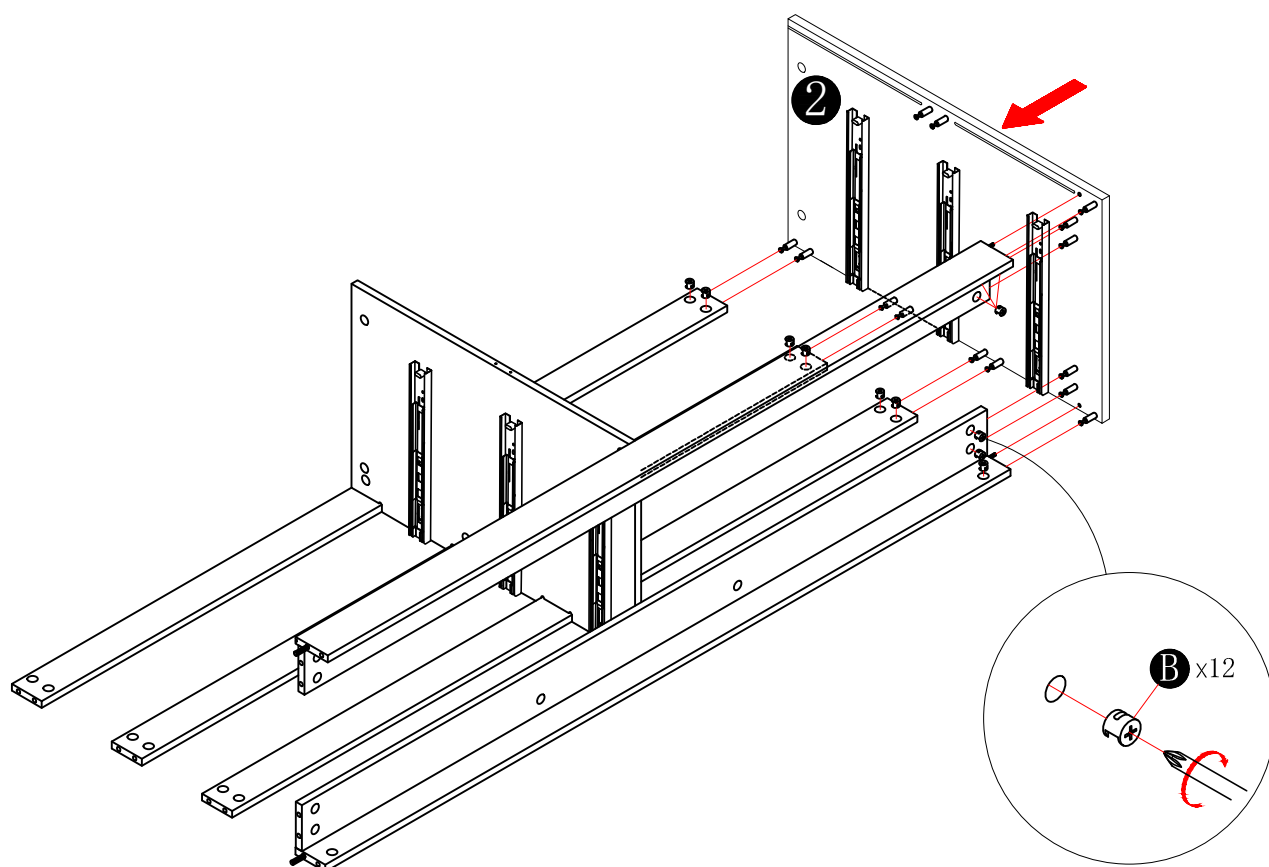

Steps


13

 B x 2PCS

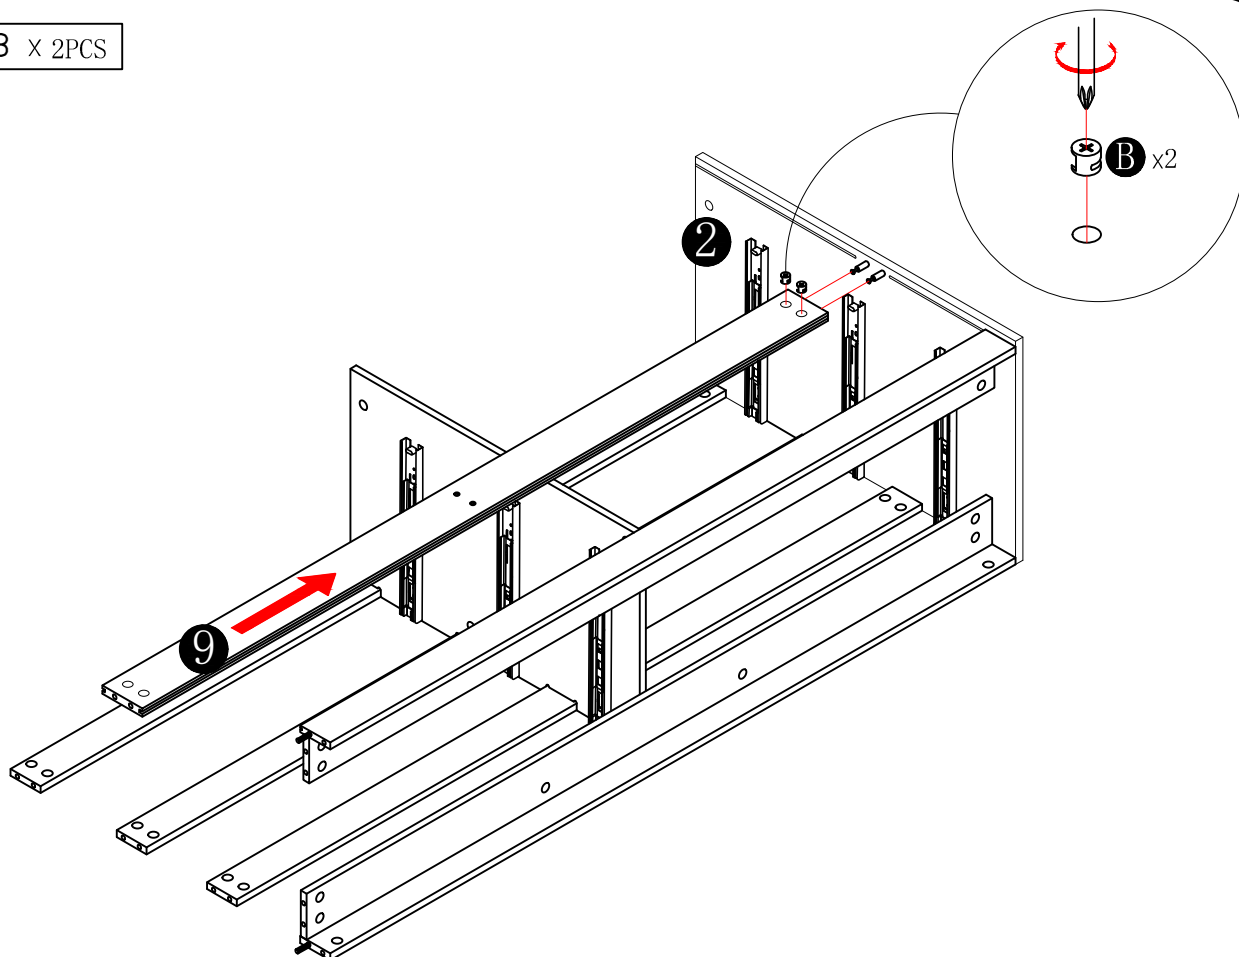


14

 E x 2PCS


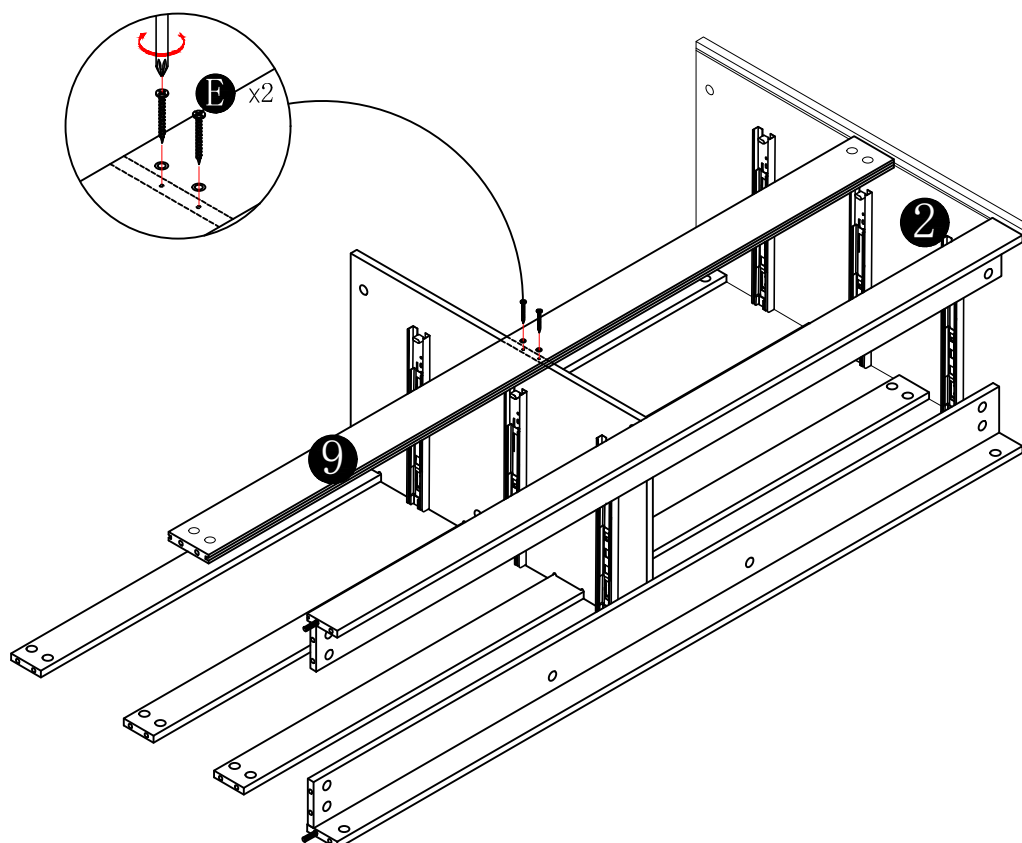


15

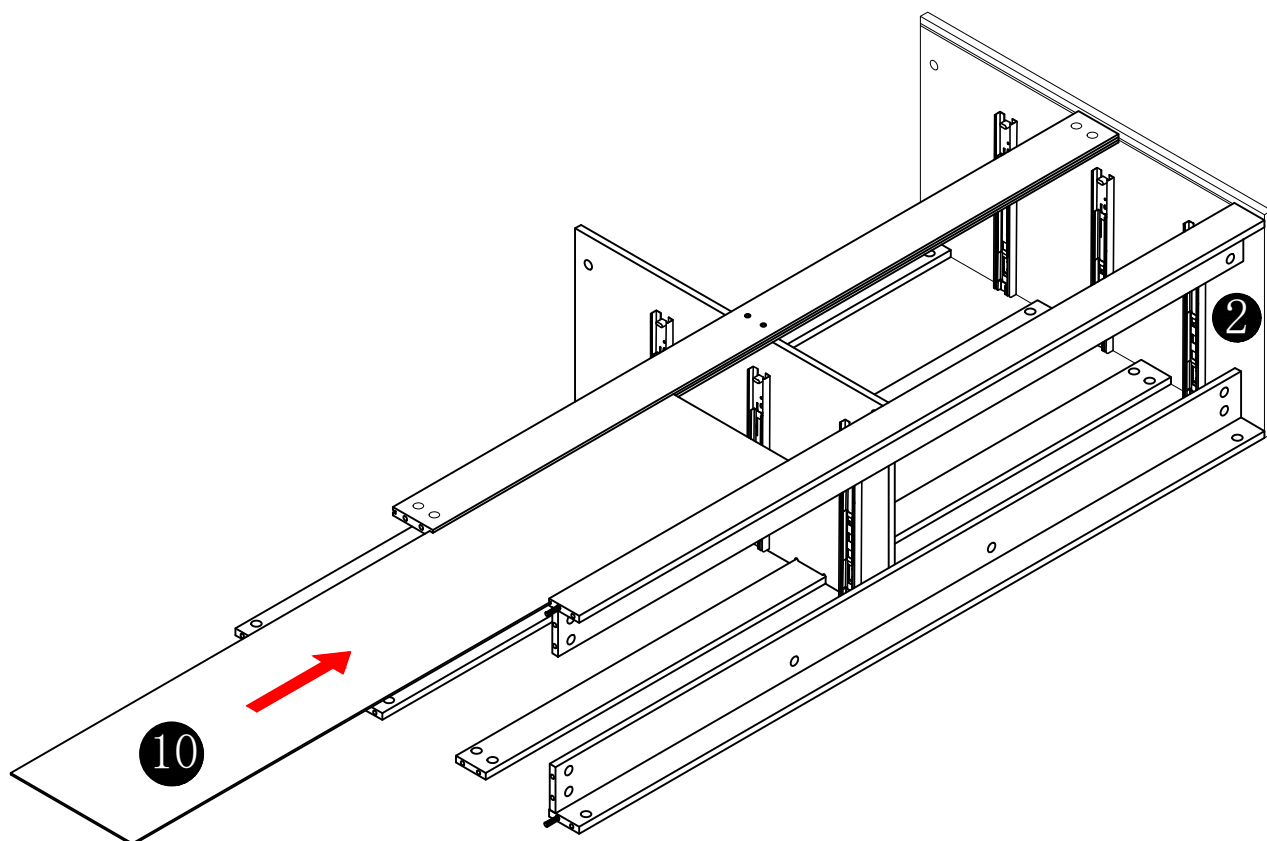


16

 B x14PCS

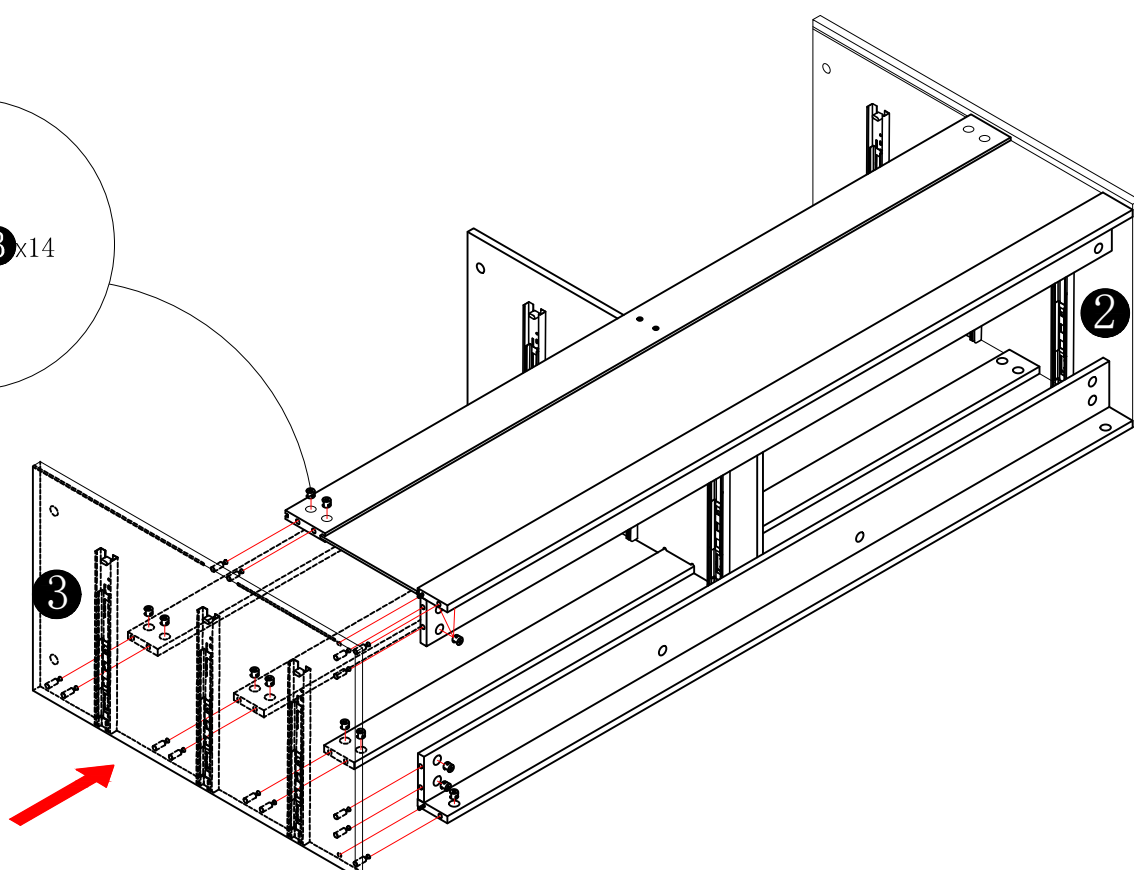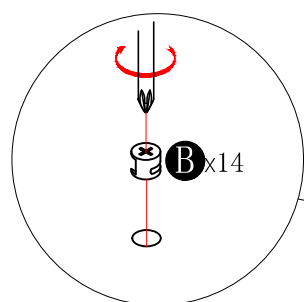


17

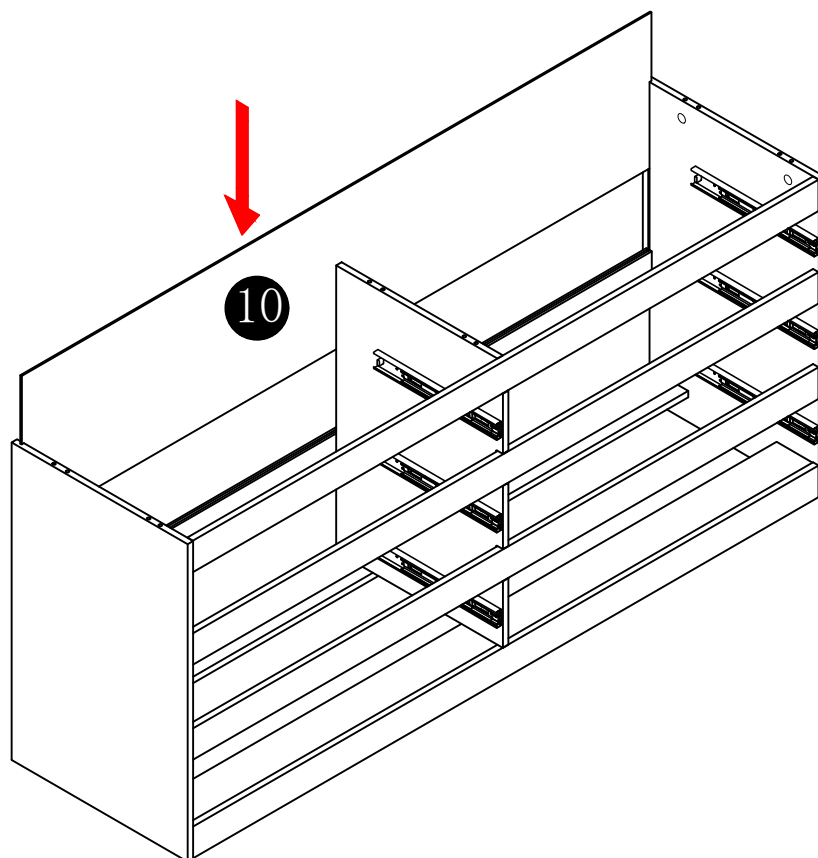

18


 C x 6PCS

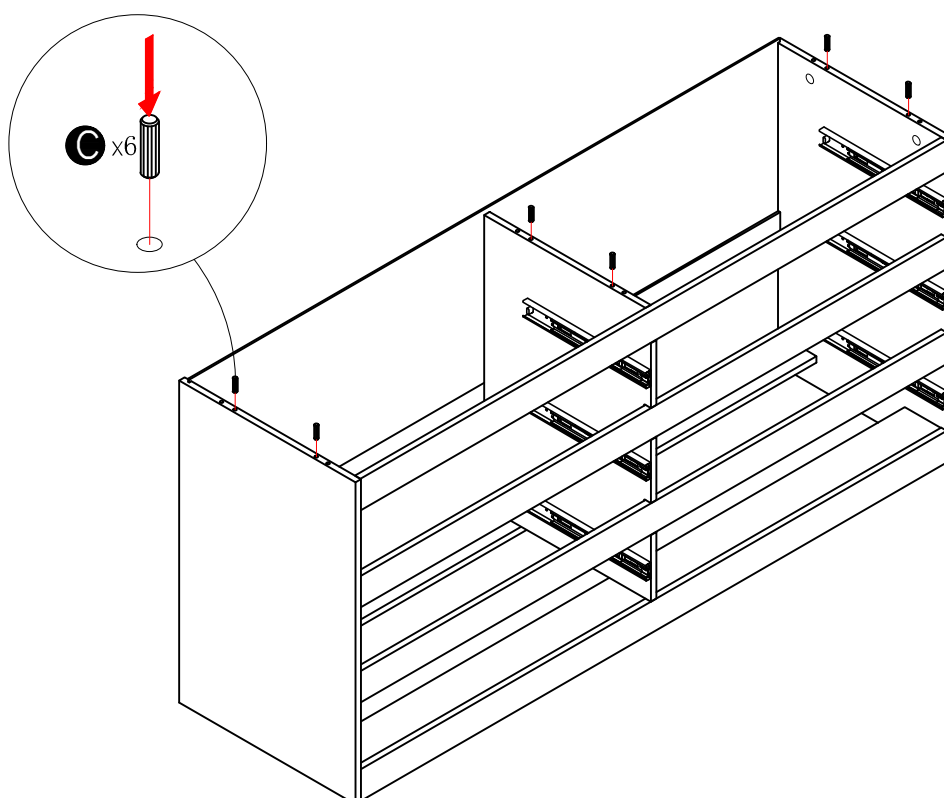

Steps


19

 A x 6PCS

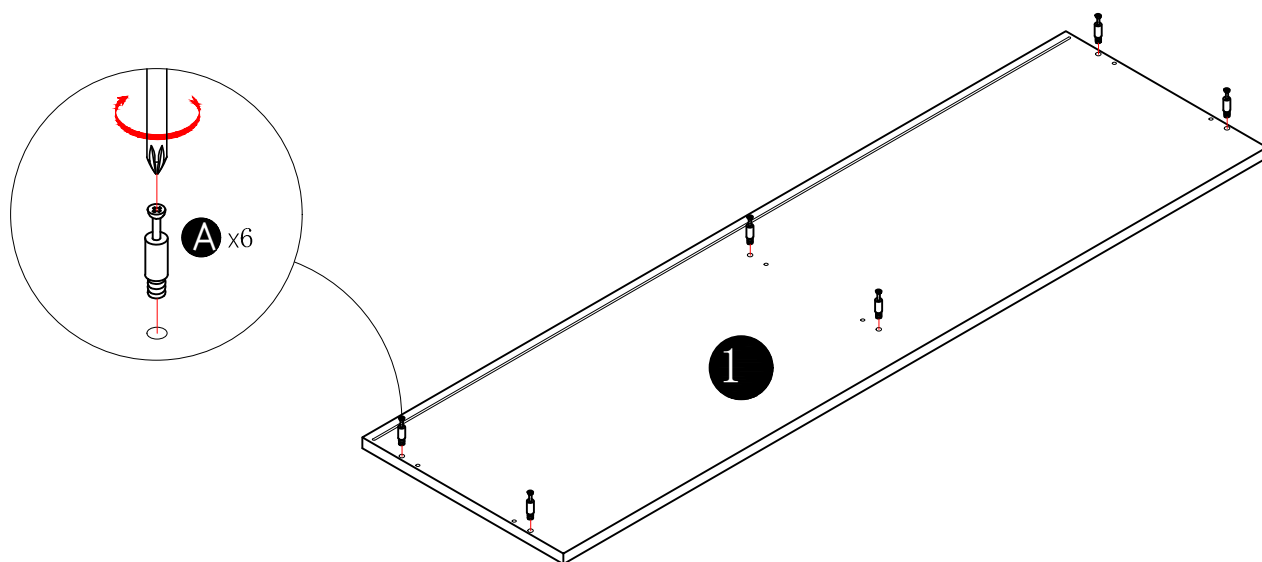

20


 B x 6PCS

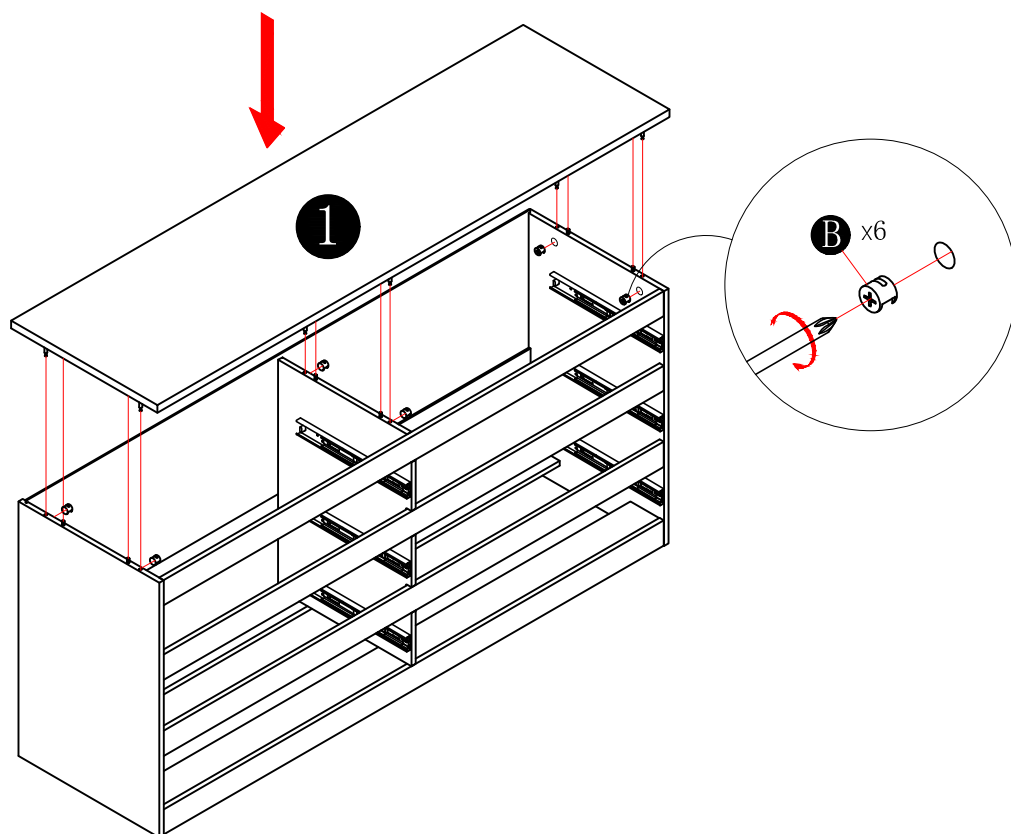

Steps


21

 A x12PCS

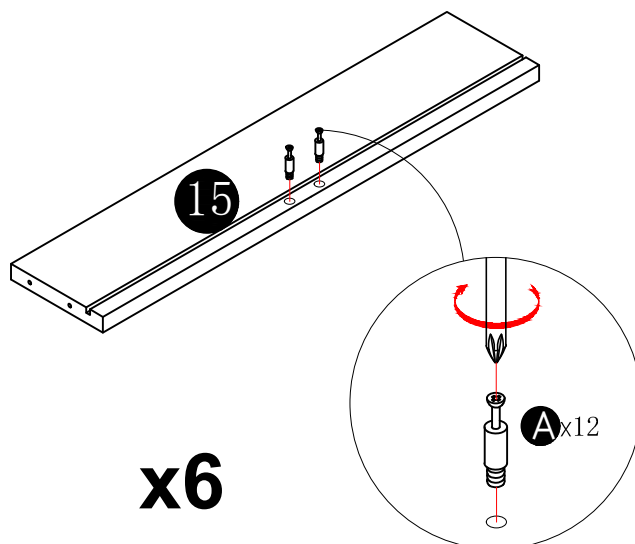

22


 E x24PCS

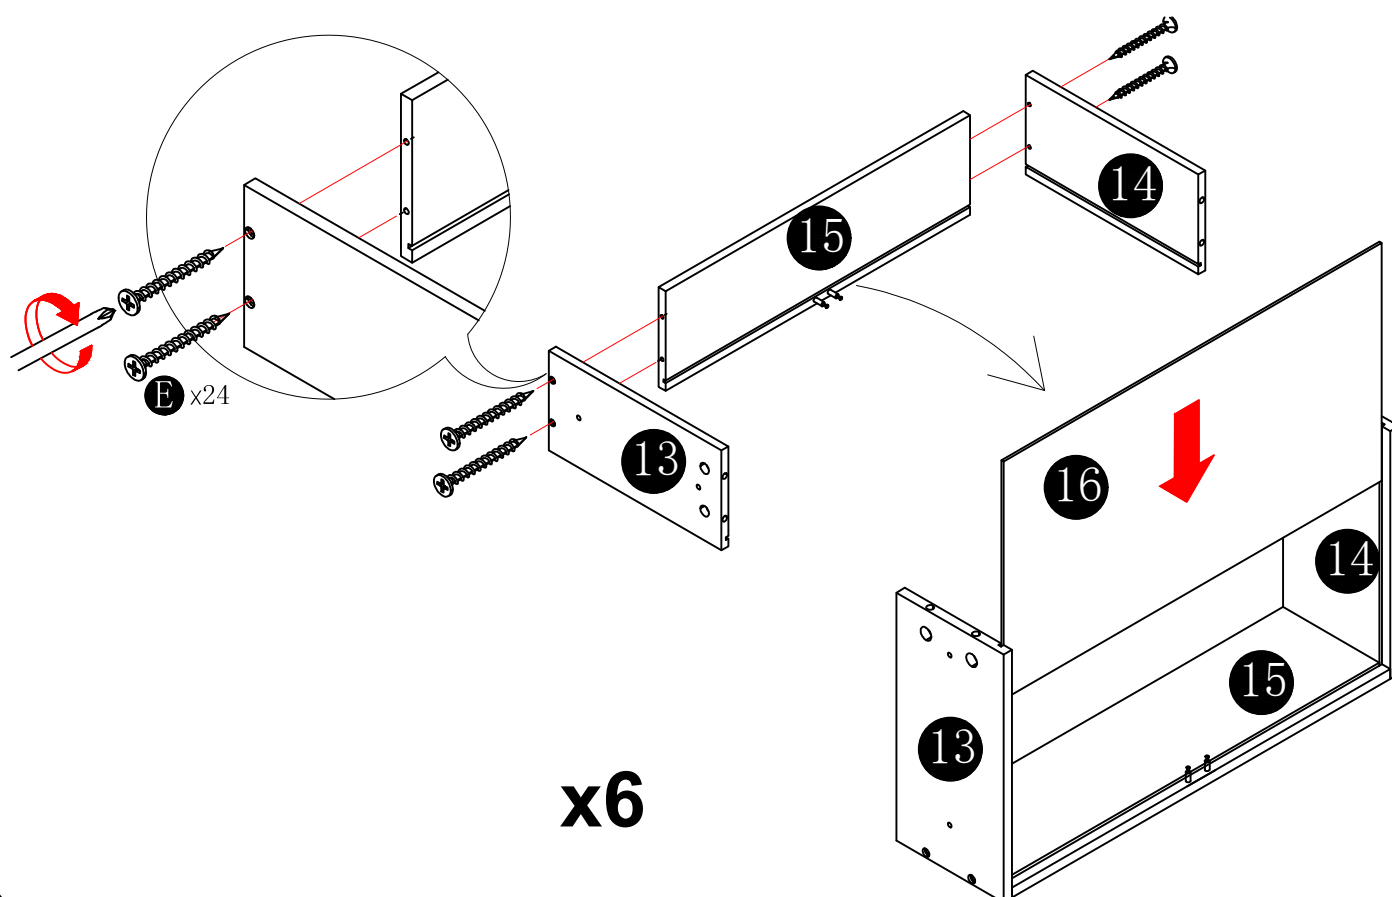

Steps


23

 B x12PCS

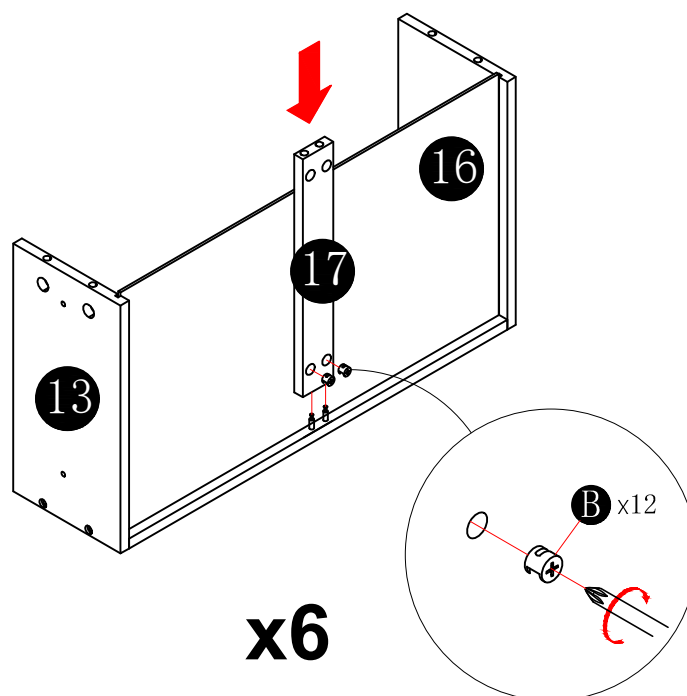

24


 A x36PCS

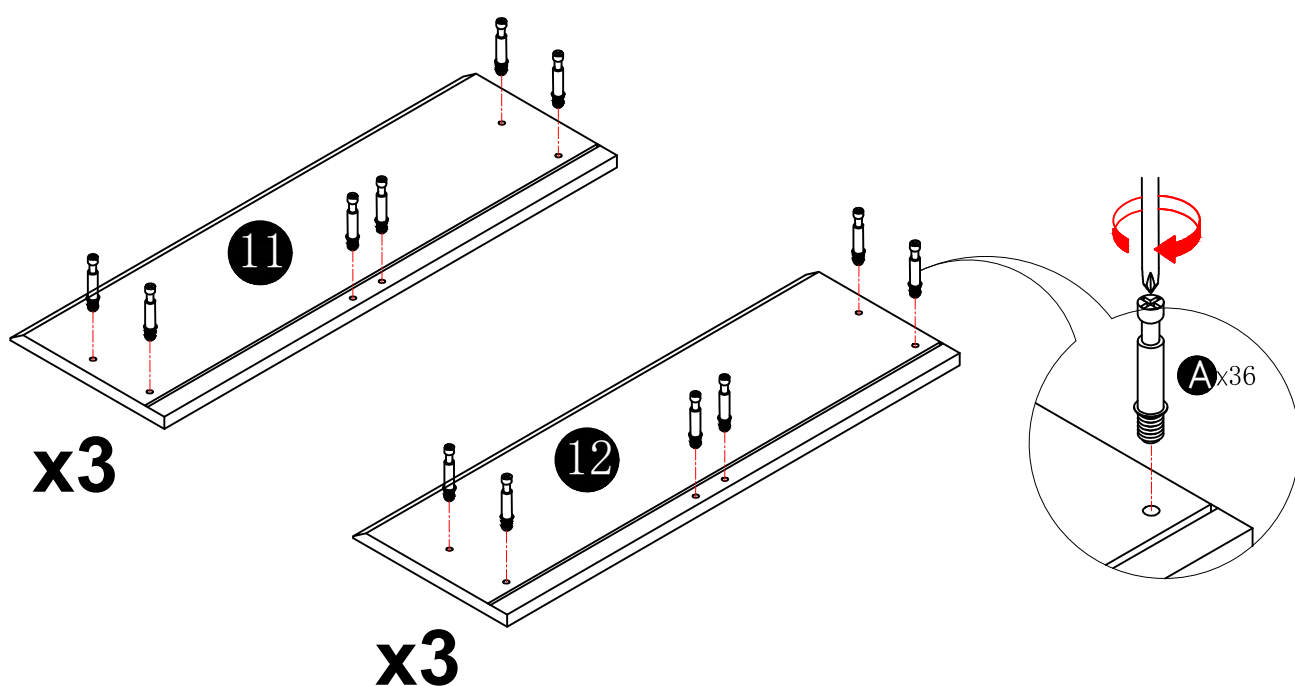

25




B x18PCS

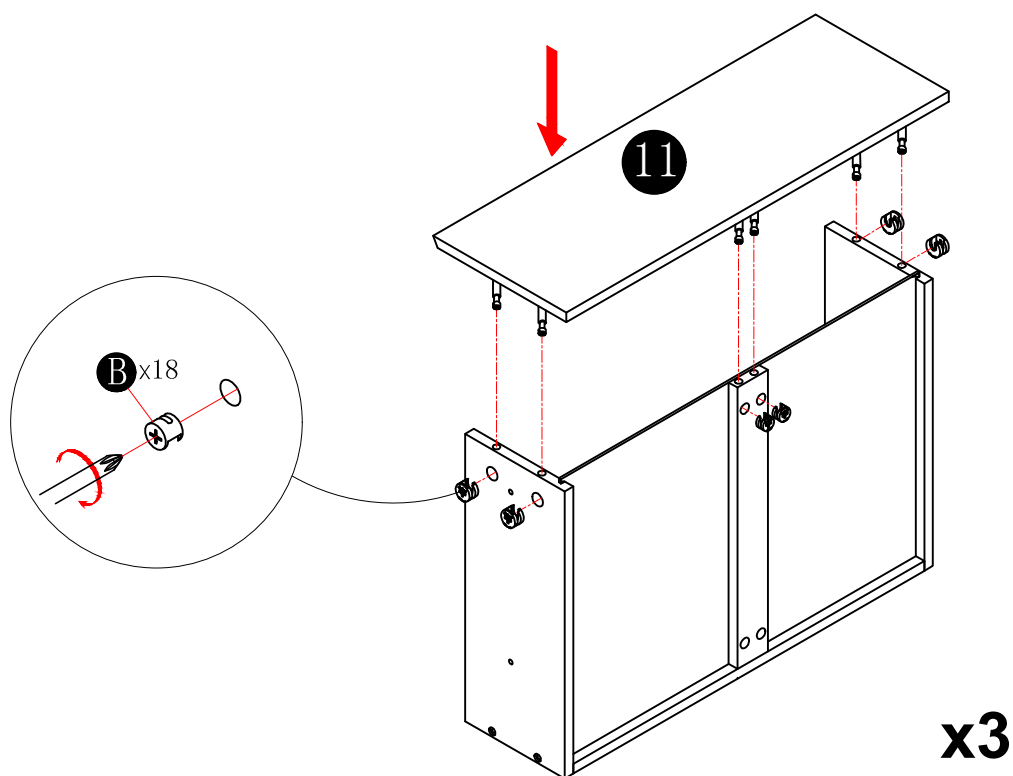

26




B x18PCS

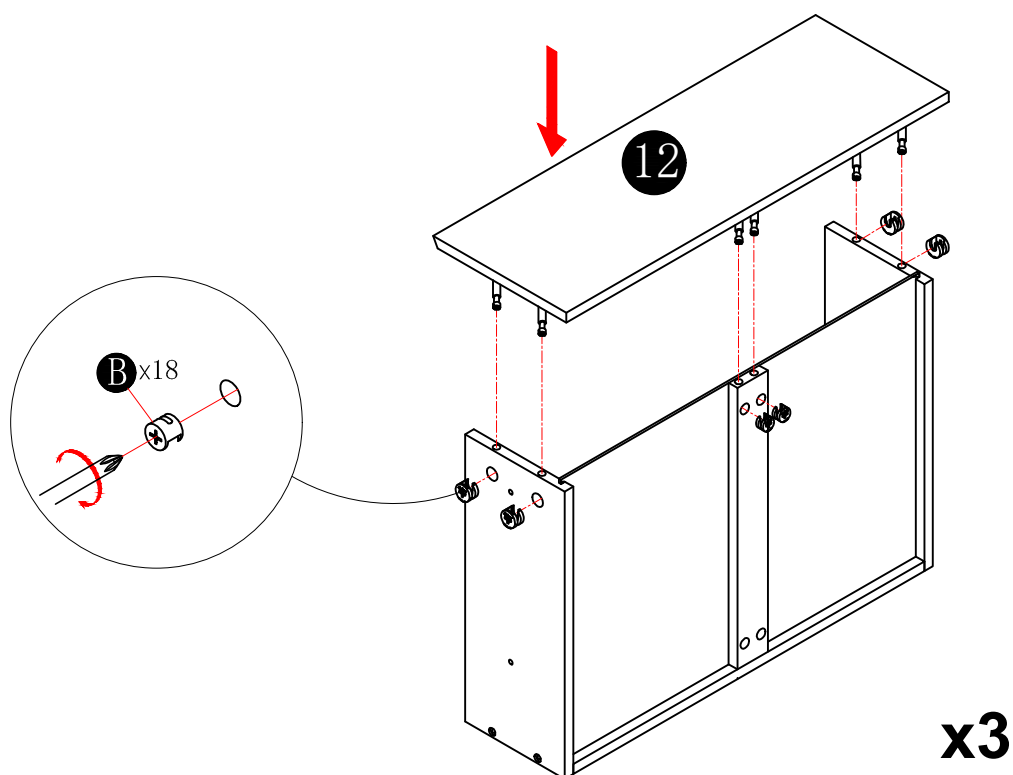

Steps


27

	D x12PCS
	L2 x 6PCS

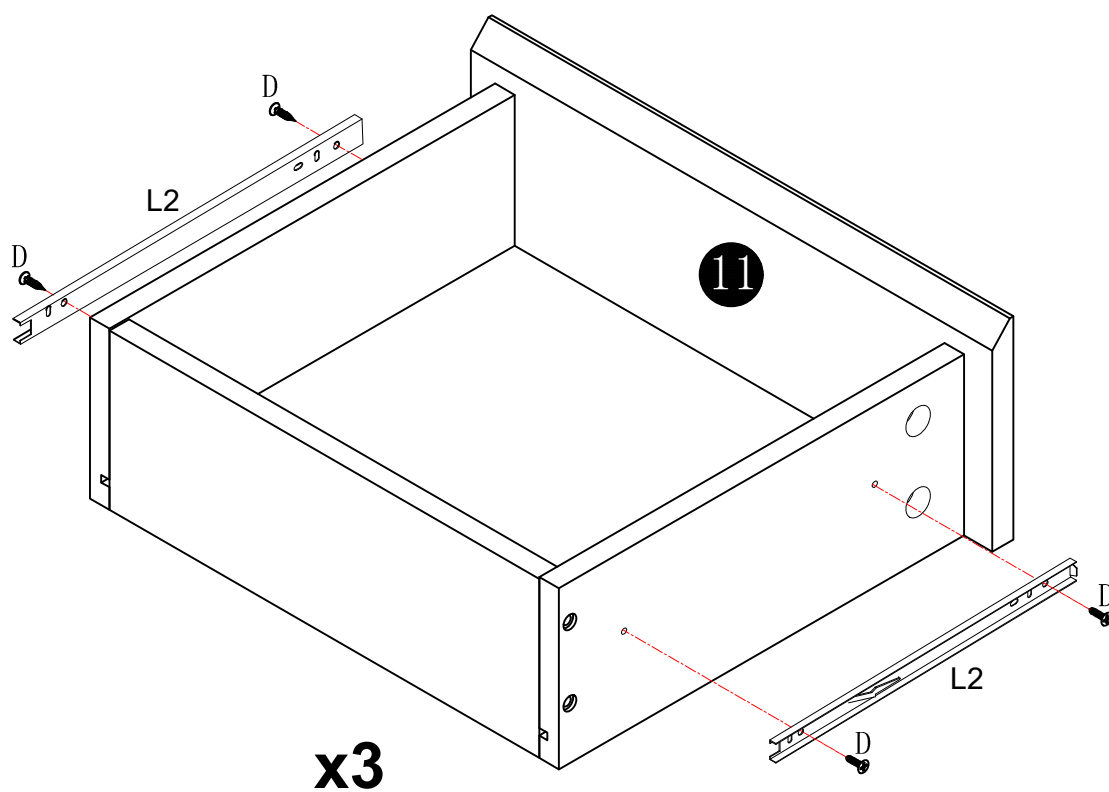


28


	D x12PCS
	L2 x 6PCS

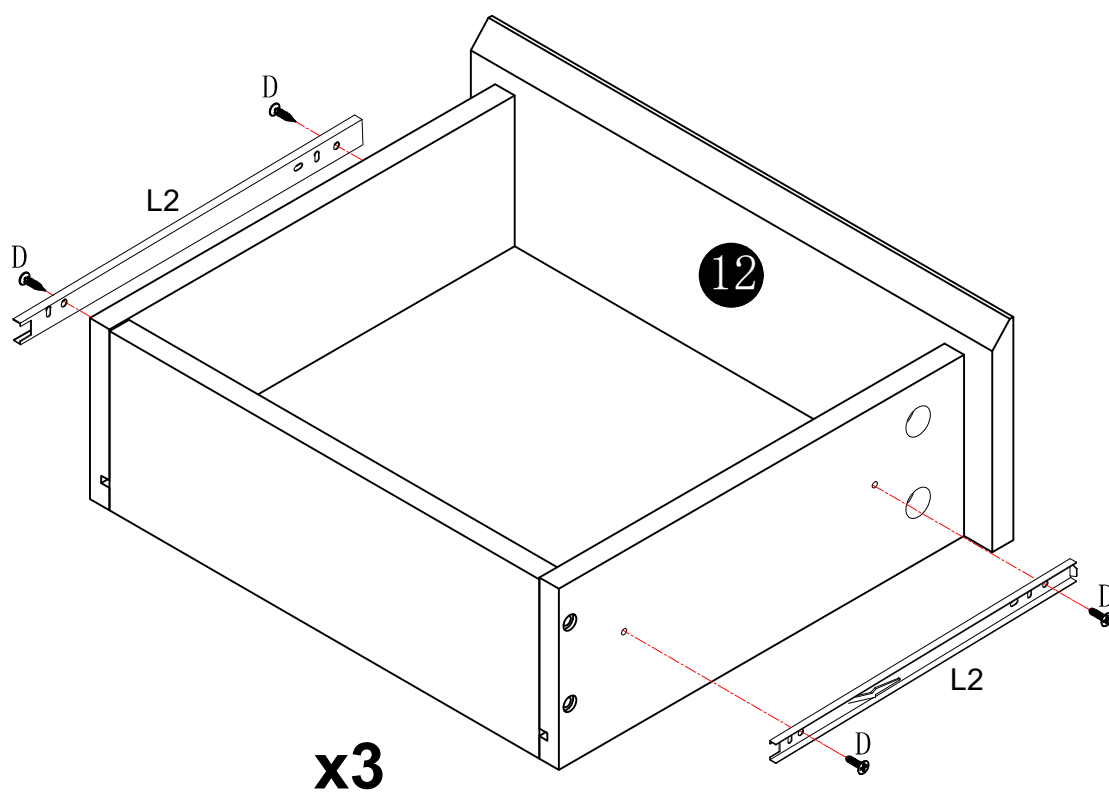

29

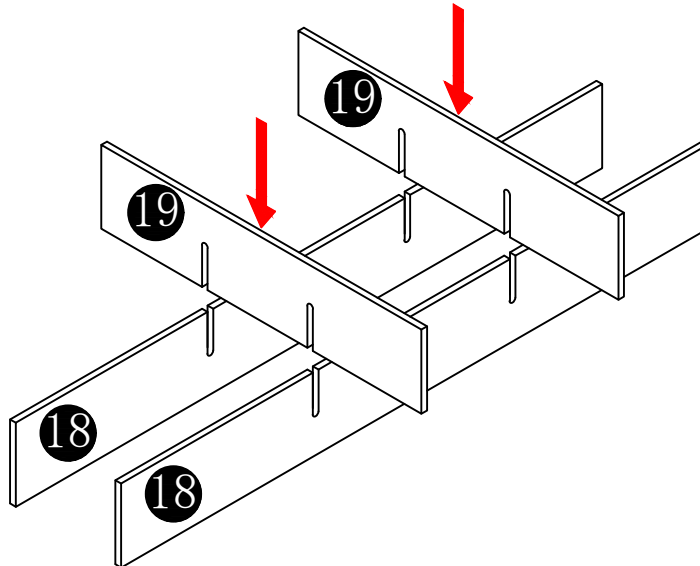

30


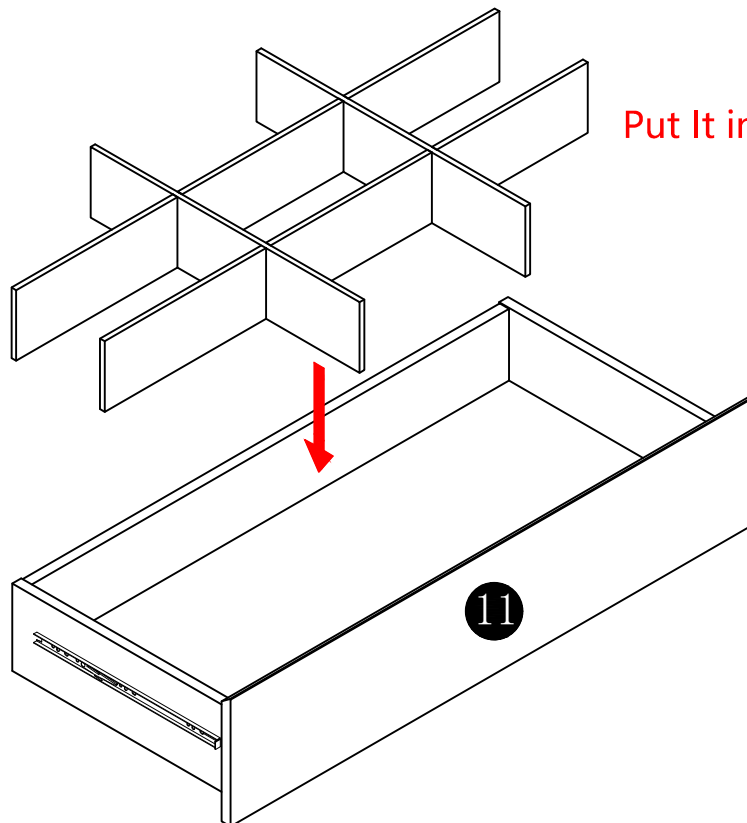


Put It in the top left drawer

Steps



31

Take out the drawer; first pull the drawer out, find the lock catch, press as shown, left up, right down, operate at the same time, so not to damage the slide rail.

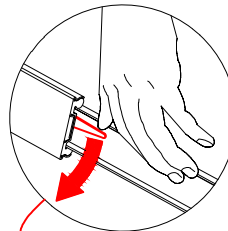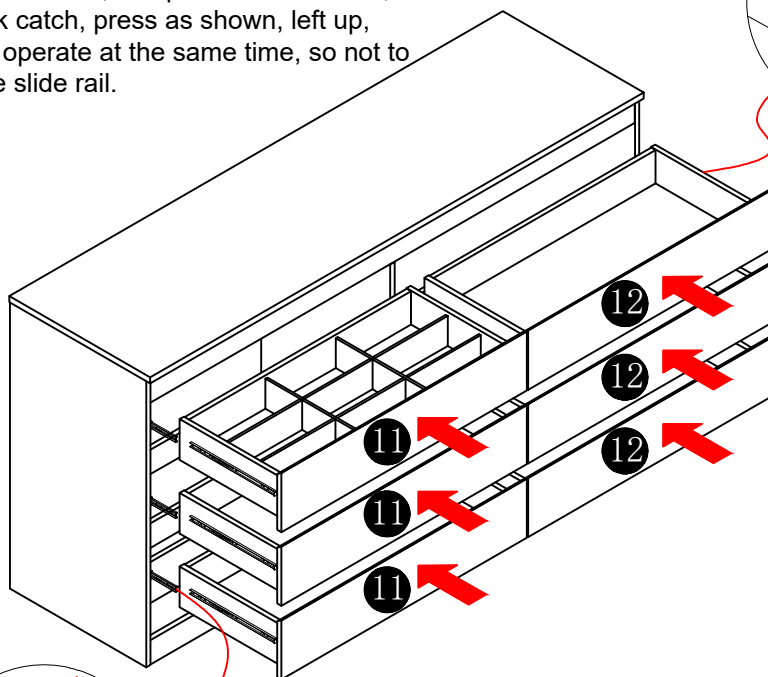

Attention: Align the slide runners on the drawer with the unit and push it carefully inside until it stops.




★ If the drawer does not go in smoothly please take it out and repeat the step.

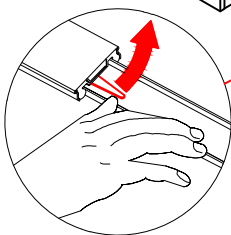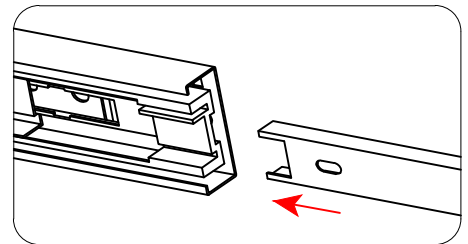

Please note that drawer 11 should be placed on the left side of the cabinet, and drawer 12 should be placed on the right side. Do not install it upside down.

32

	H x 2PCS
	I x 2PCS
	G x 12PCS
	F x 12PCS

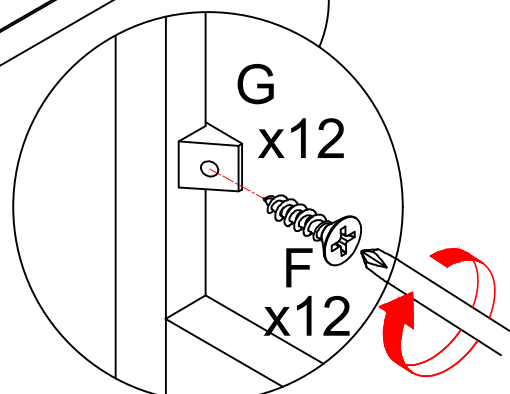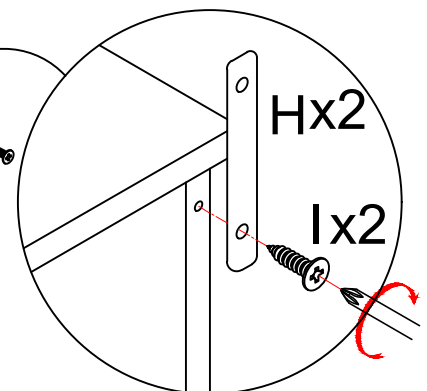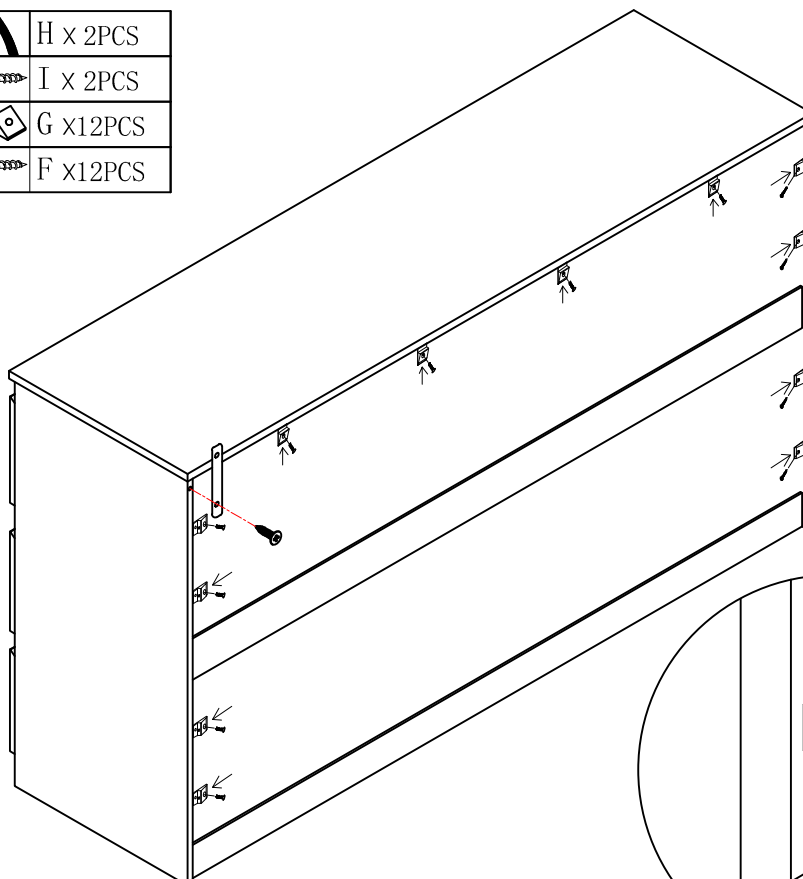

33

	J x 2PCS
	E x 2PCS
	K x 2PCS

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

