



Slant leg bench


Assembly Instructions

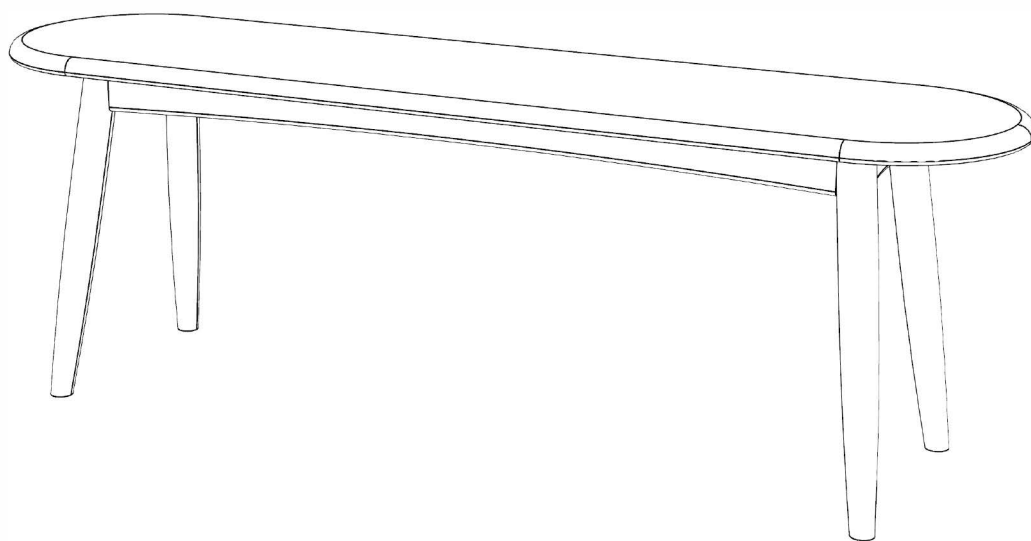

Step1: Screw the full-threaded rod (Part E) into the hole of the stool leg.

Step2: Lay the bench top facedown on a flat, clean and non-abrasive surface. Attach the legs to the bench top as shown in the diagram below. Make sure you fit the hardware together in the correct order.

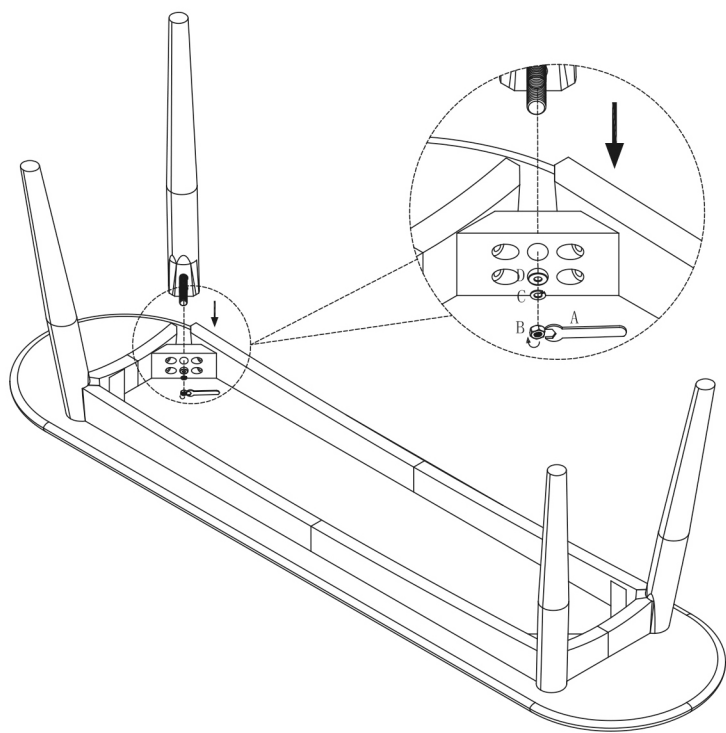

				
A. Open-end wrench x 1	B. Nuts (Ø6) x 8	C. Split washers (Ø6) x 8	D. Flat washers (Ø6) x 8	E. Threaded Rod x8