



ASSEMBLY INSTRUCTIONS

QUEEN BED


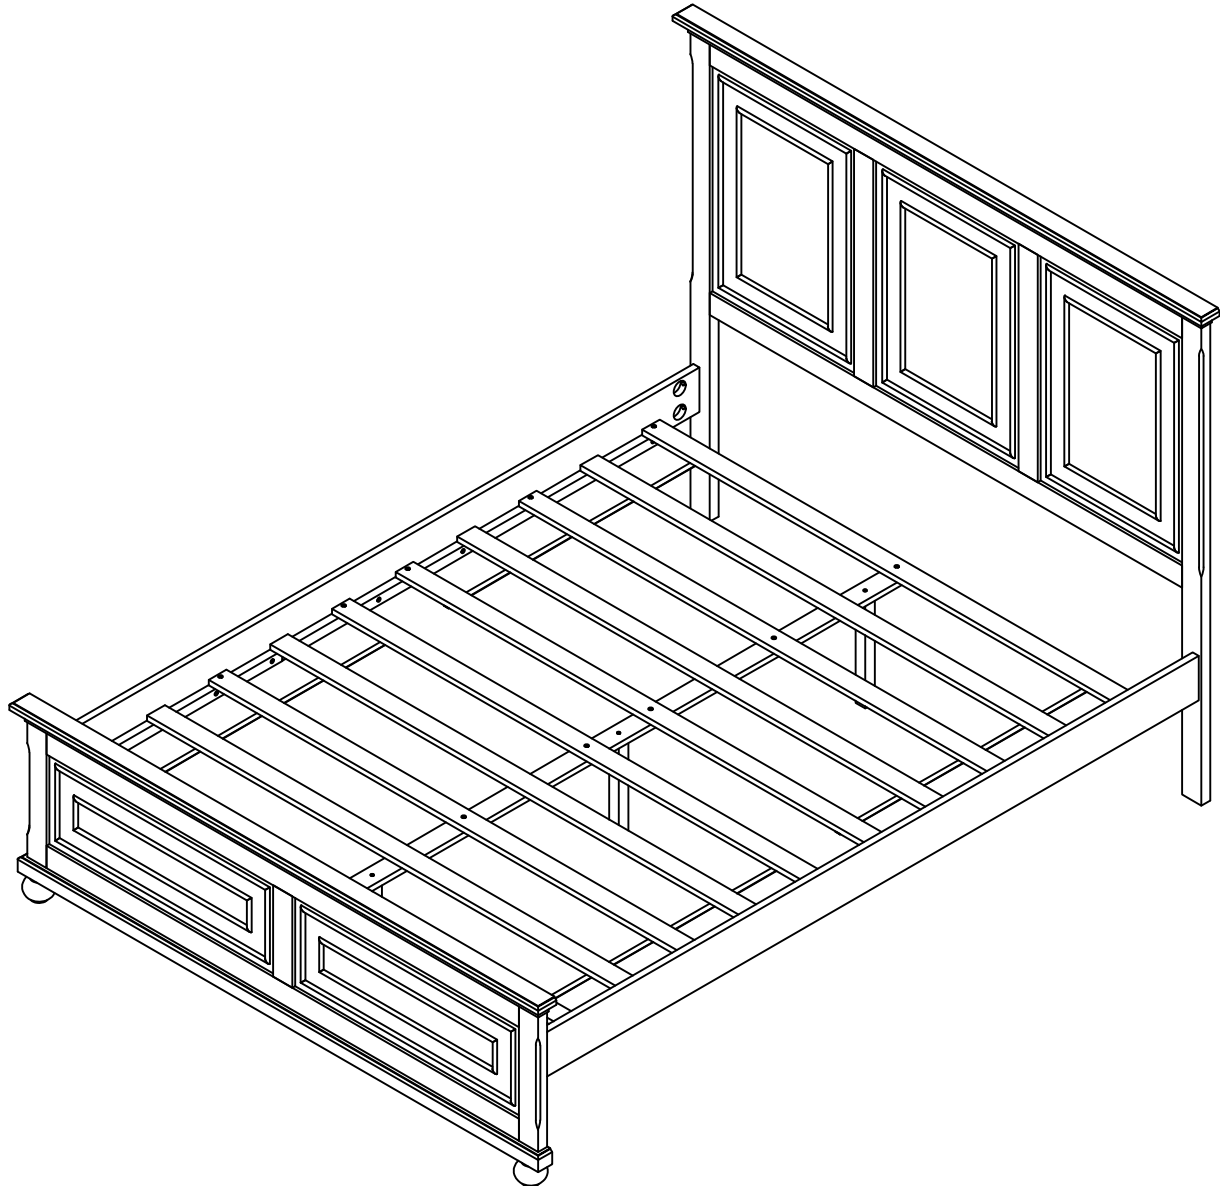


This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.


SD33017

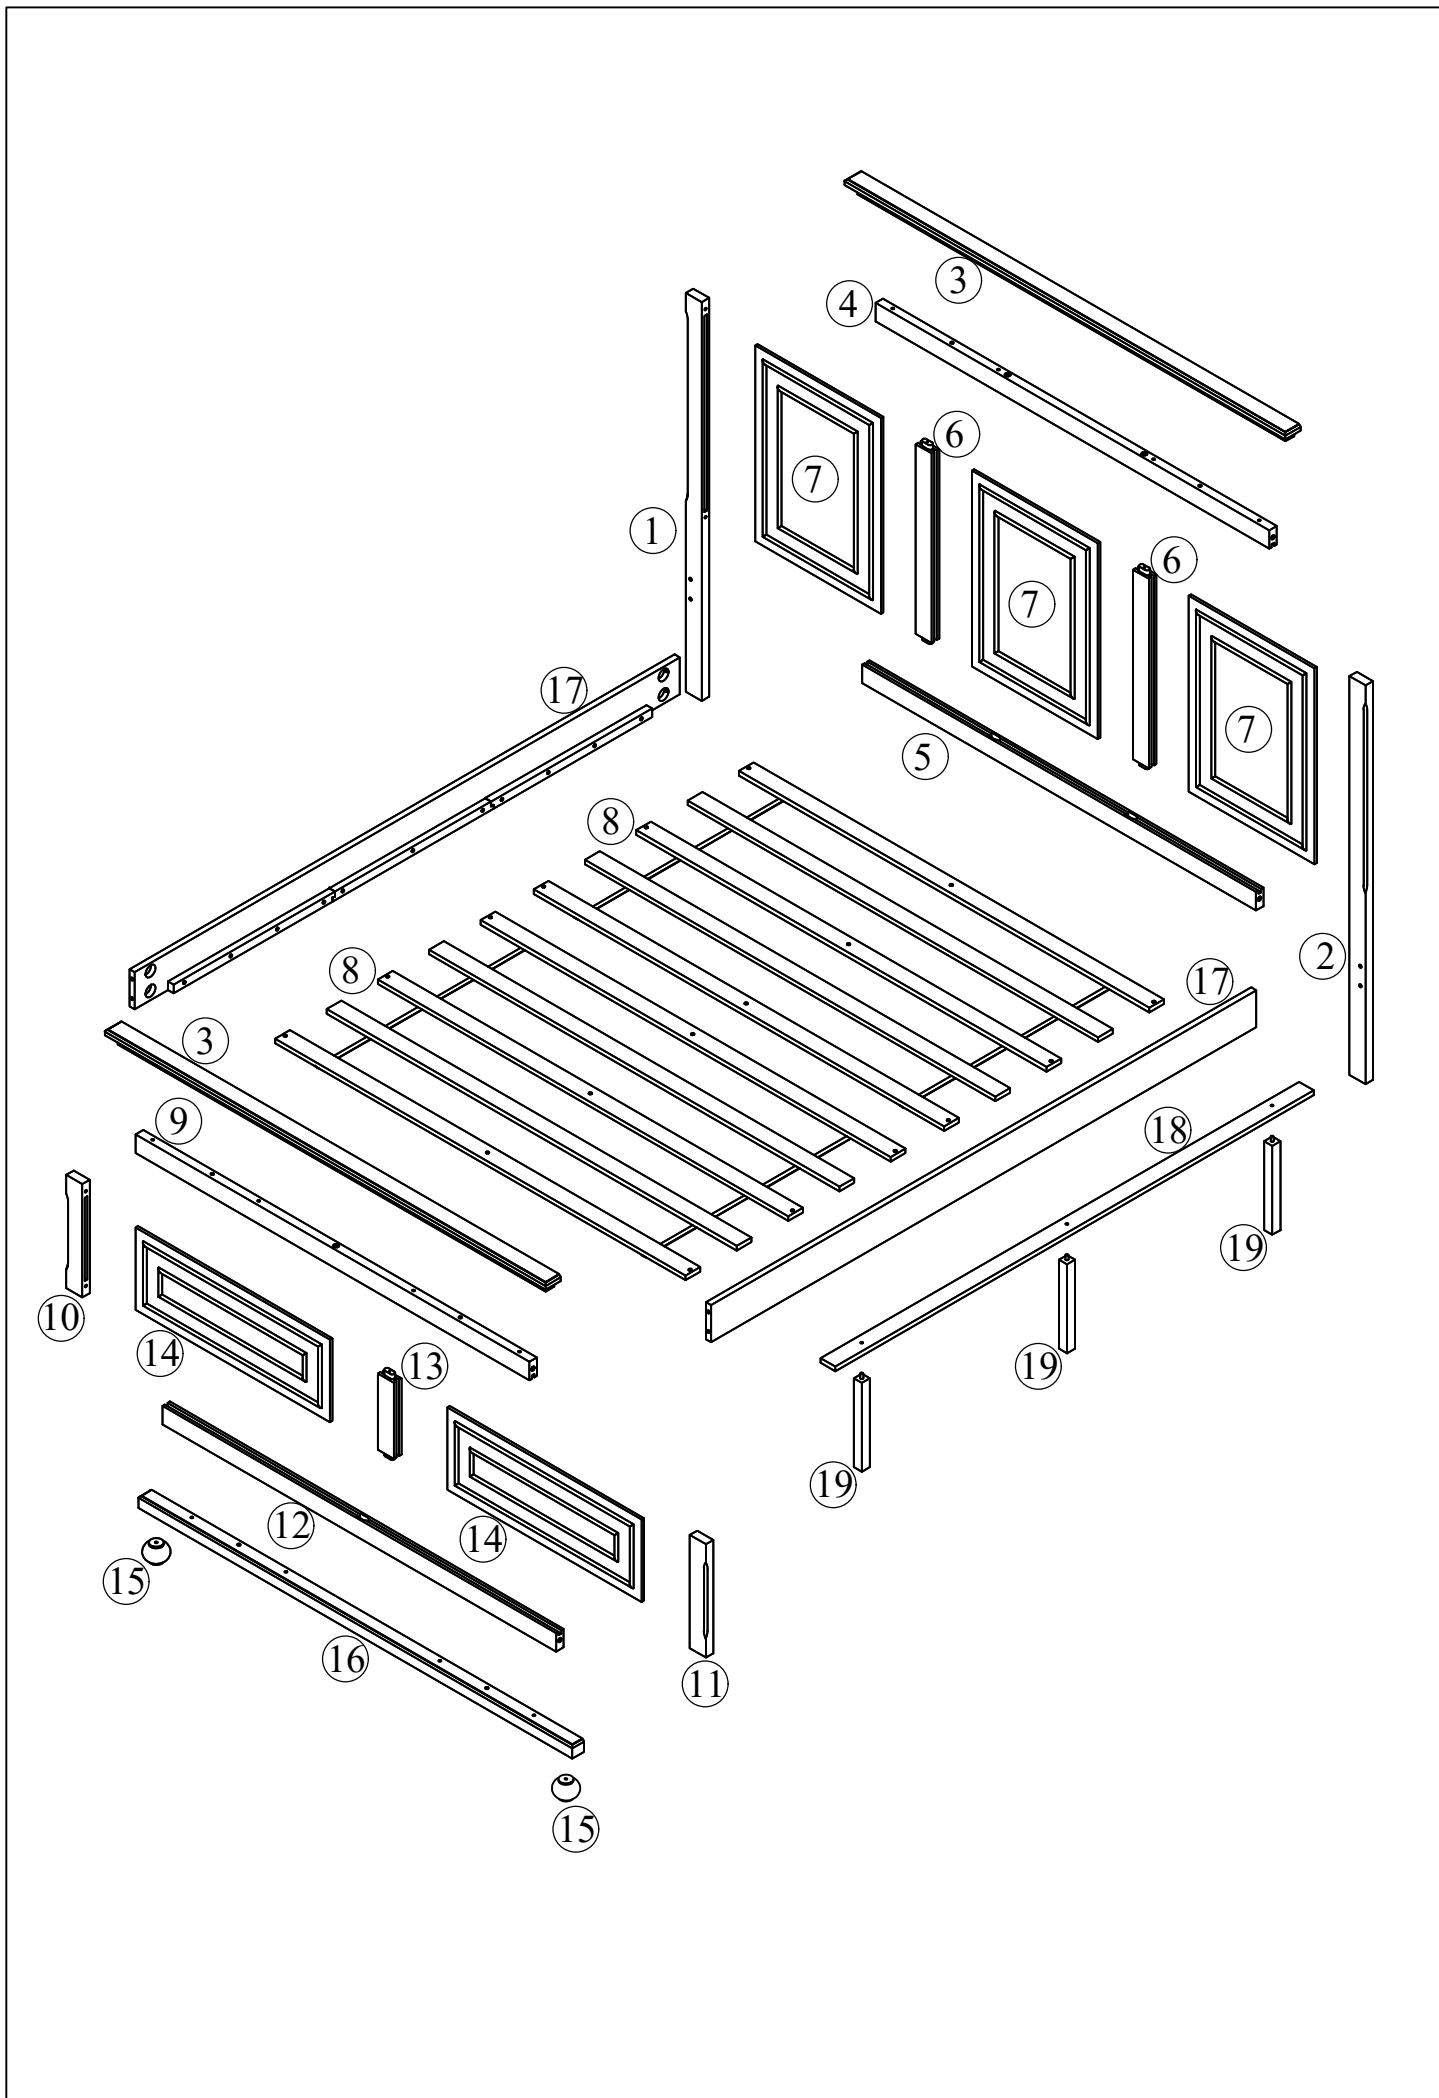



Part List (Box 1)

1 	2 	3 
4 	5 	8 
9 	10 	11 
12 	13 	16 
17 	18 	

Part List (Box 2)

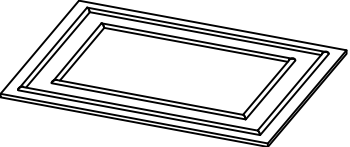6 	7 	14 
15 	19 	

Hardware List (Box 2)


A  M6*40	B  Ø15*13	C  5*90
Bolts Shaft (16pcs)	Nut (16pcs)	(1pc)
D  Ø10*40	E  (Ø15) 1/4"*80	F  (1/4") 4*58mm
Wood dowel (6pcs)	Screws (10pcs)	Allen key (1pc)
G  (Ø15) 5/16"*75	H  5/16"*80	I  27x16xØ10x2
Hex-Head bolts (2pcs)	Bolts Shaft (8pcs)	(8pcs)
J  12x5/16"xH12	K  12mm	L  Ø4*25mm
Nut (8pcs)	Key (1pc)	Wood screws (18pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !



STEP 1:

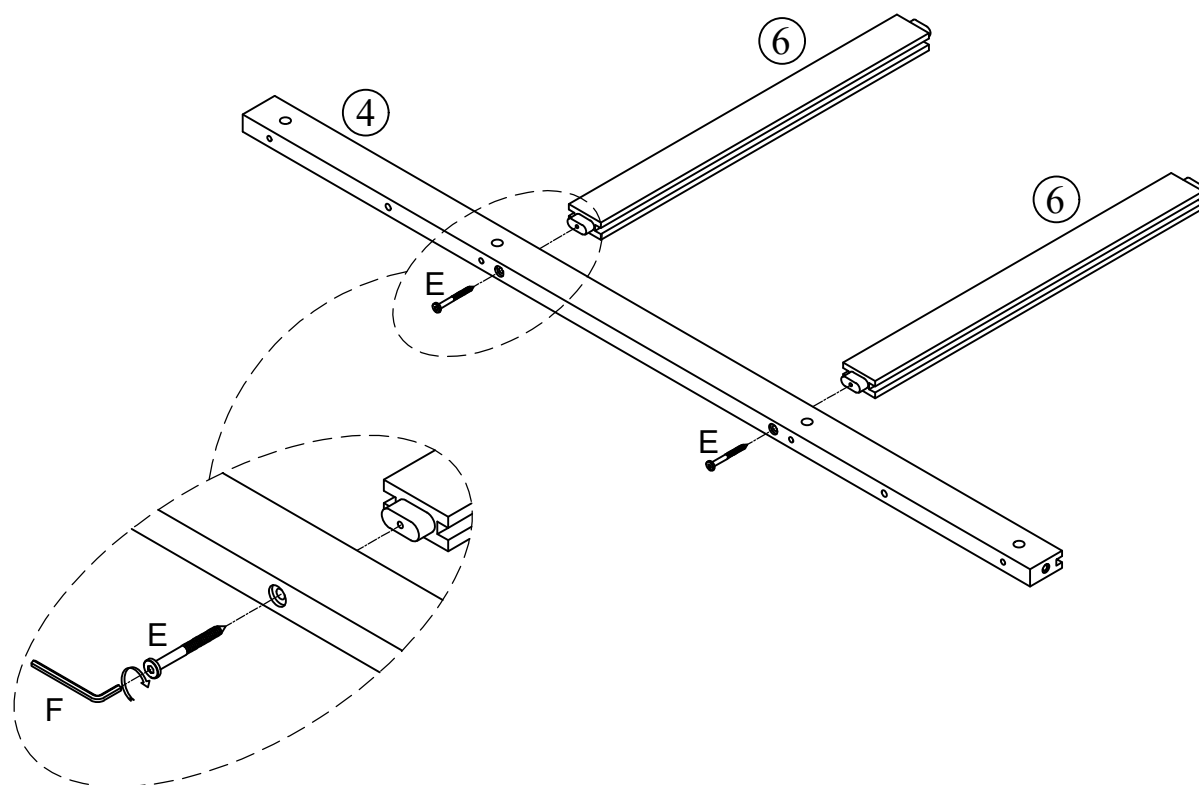



STEP 2:

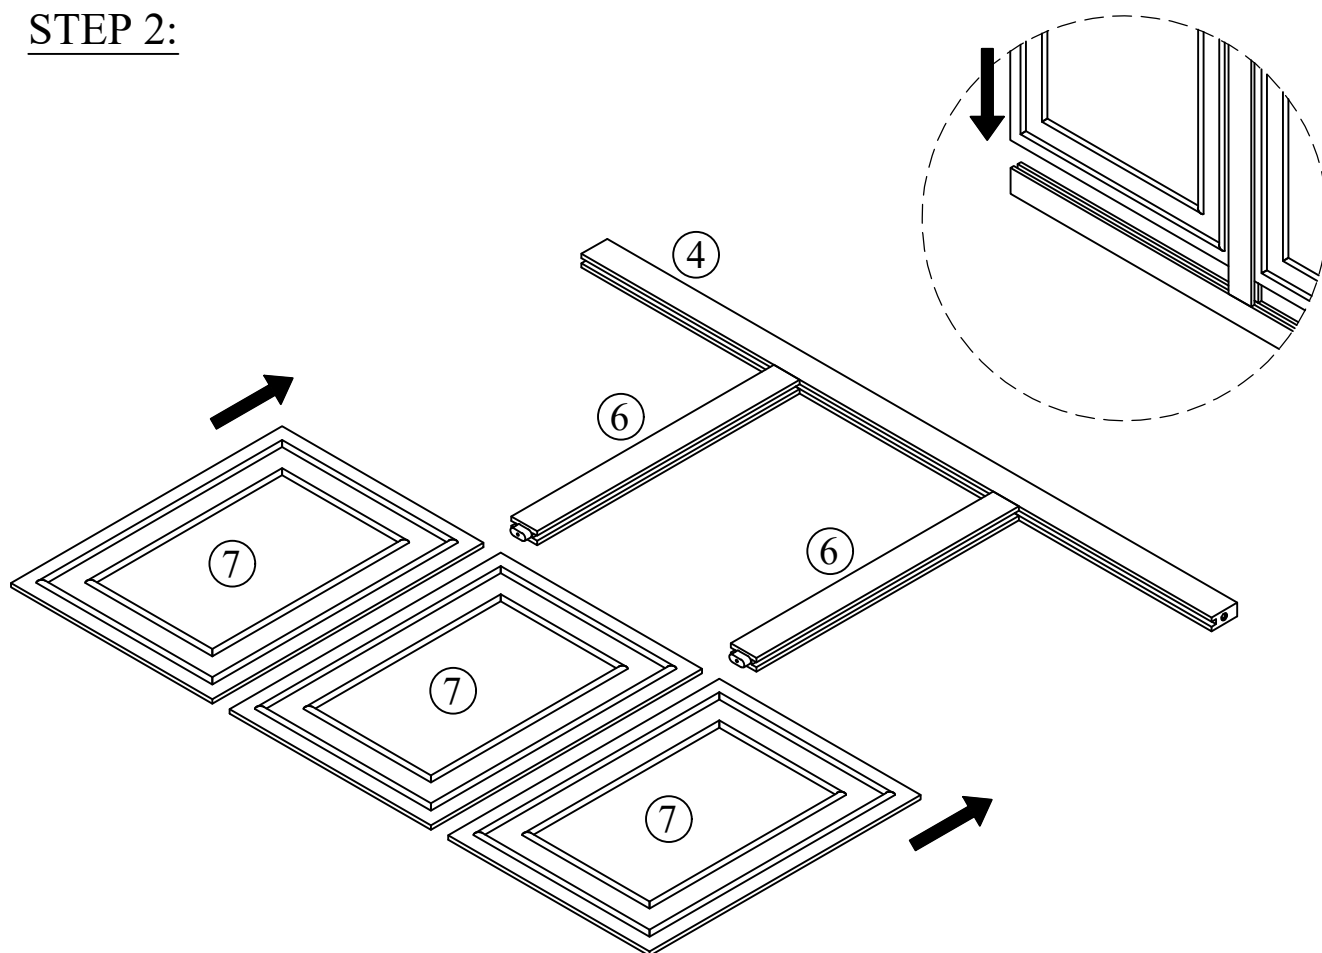


STEP 3:

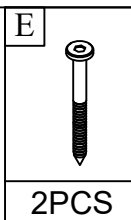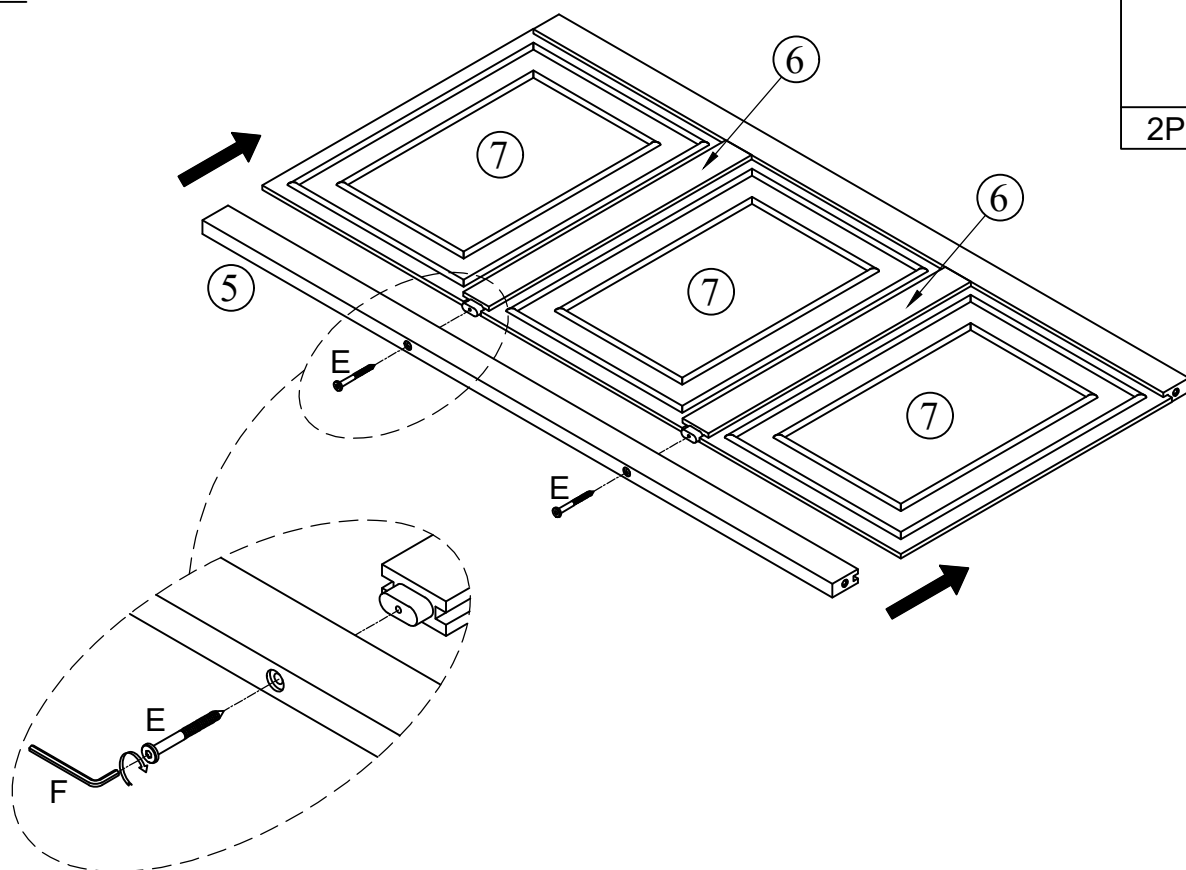

STEP 4:

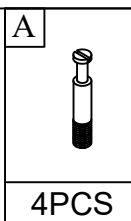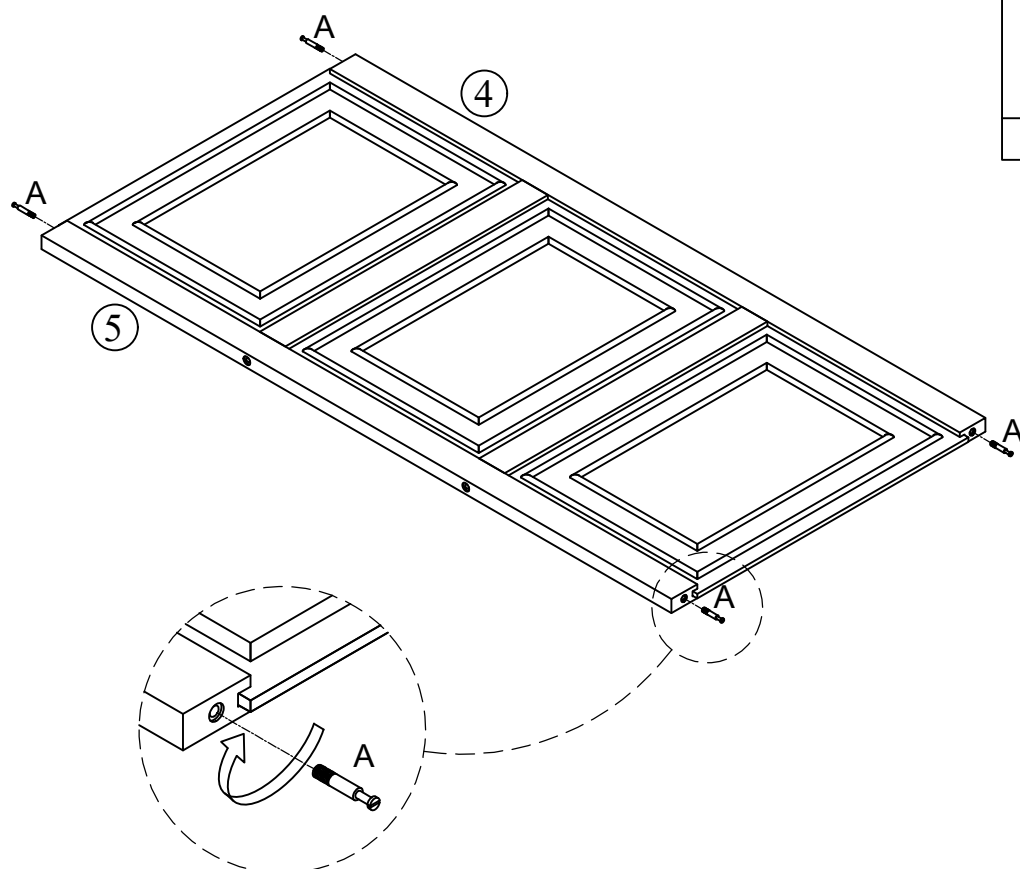

STEP 5:

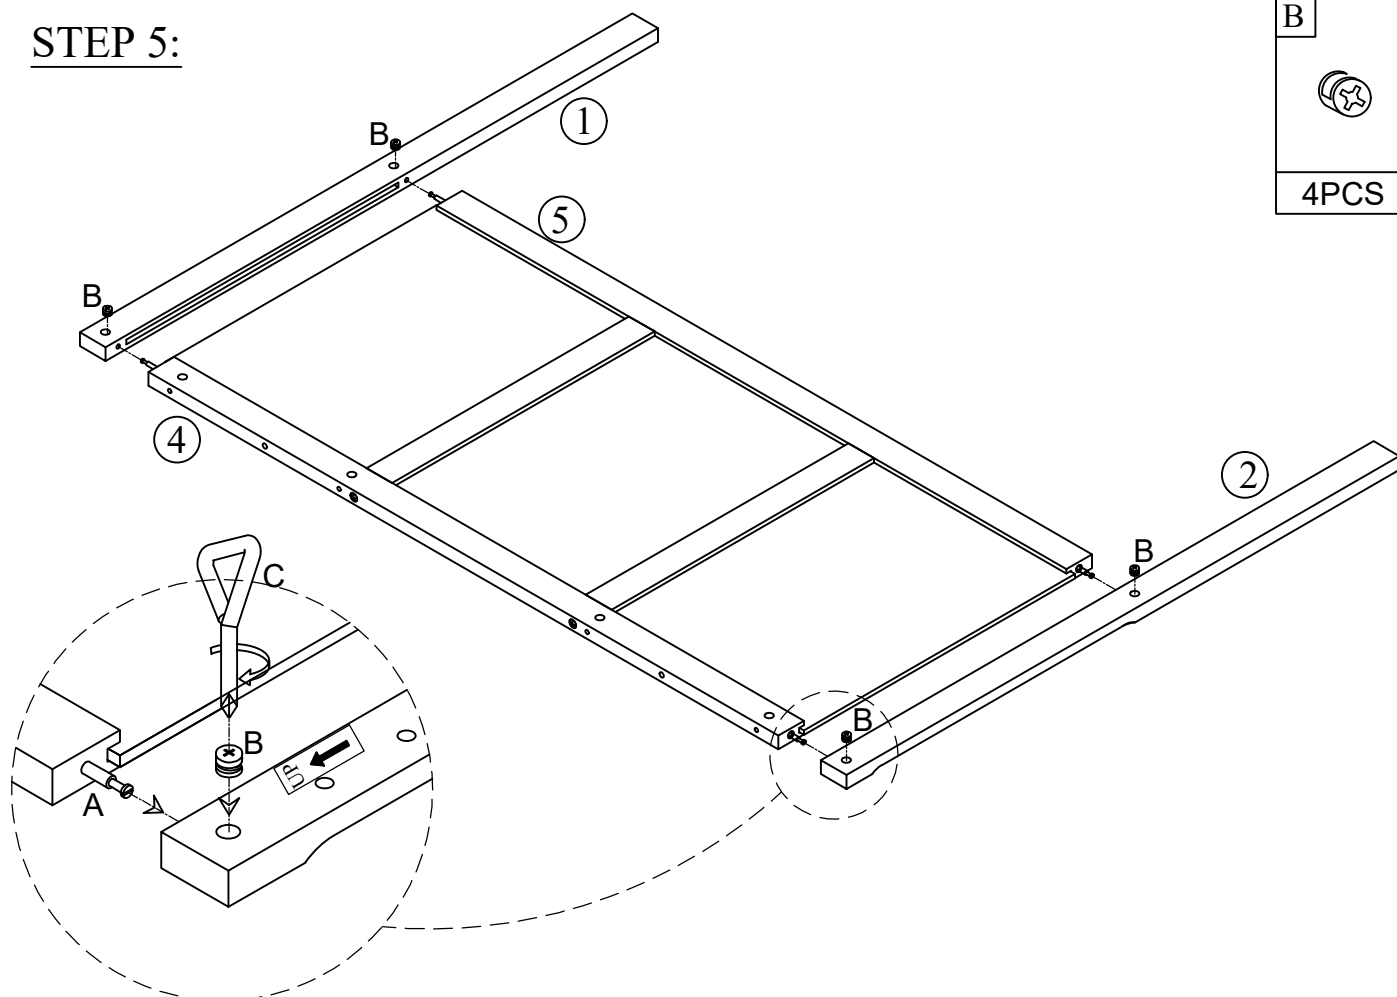


B



4PCS

STEP 6: x2

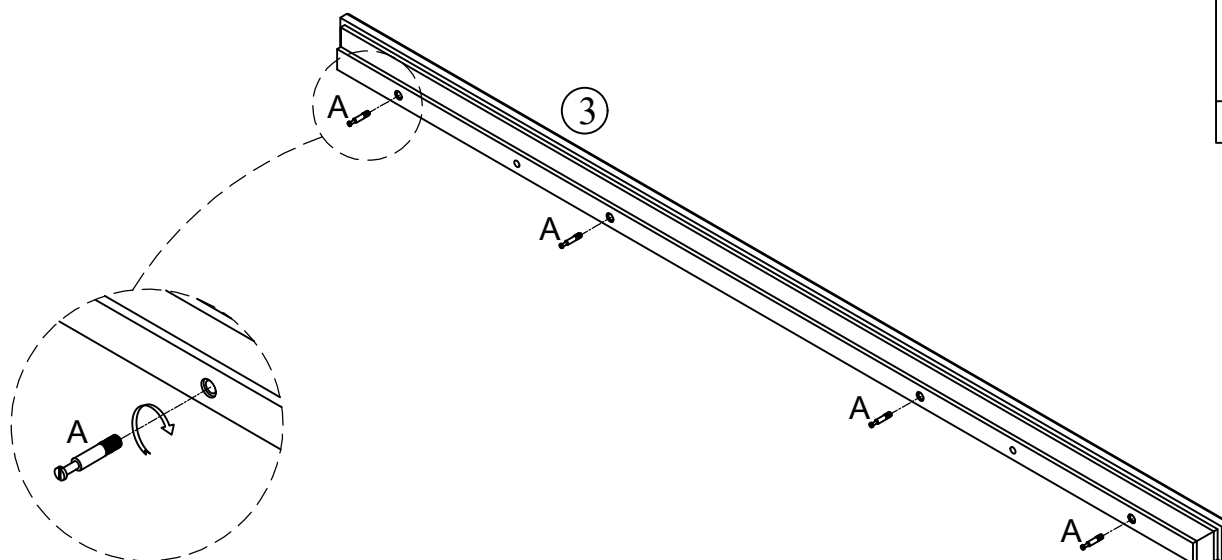


A




8PCS


STEP 7:

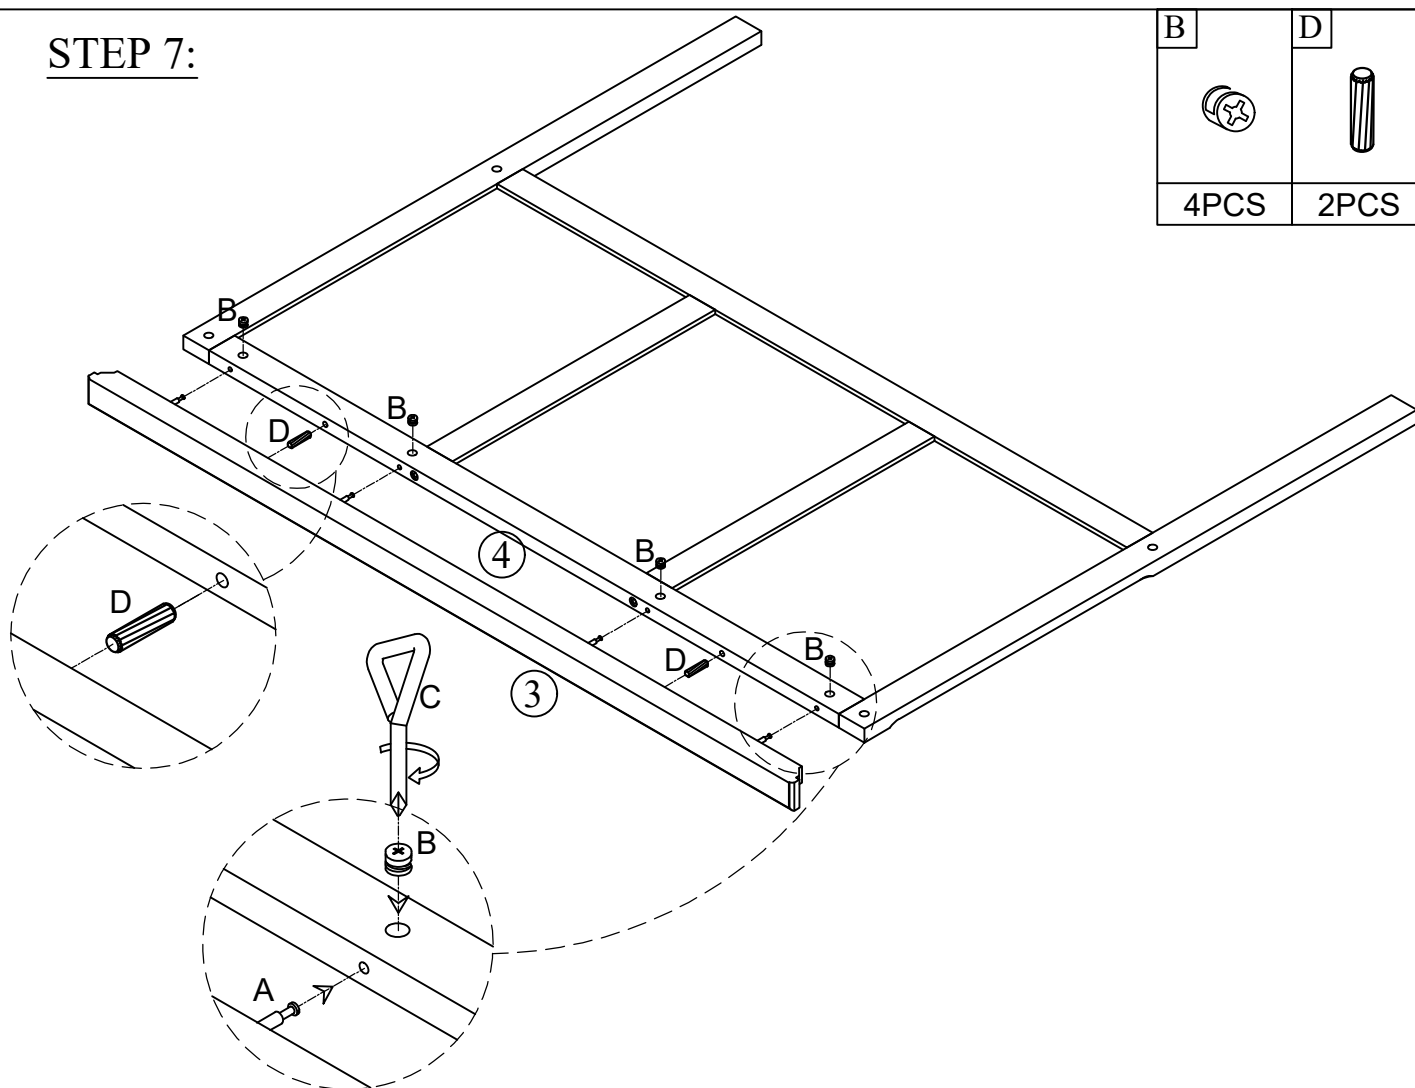



STEP 8:

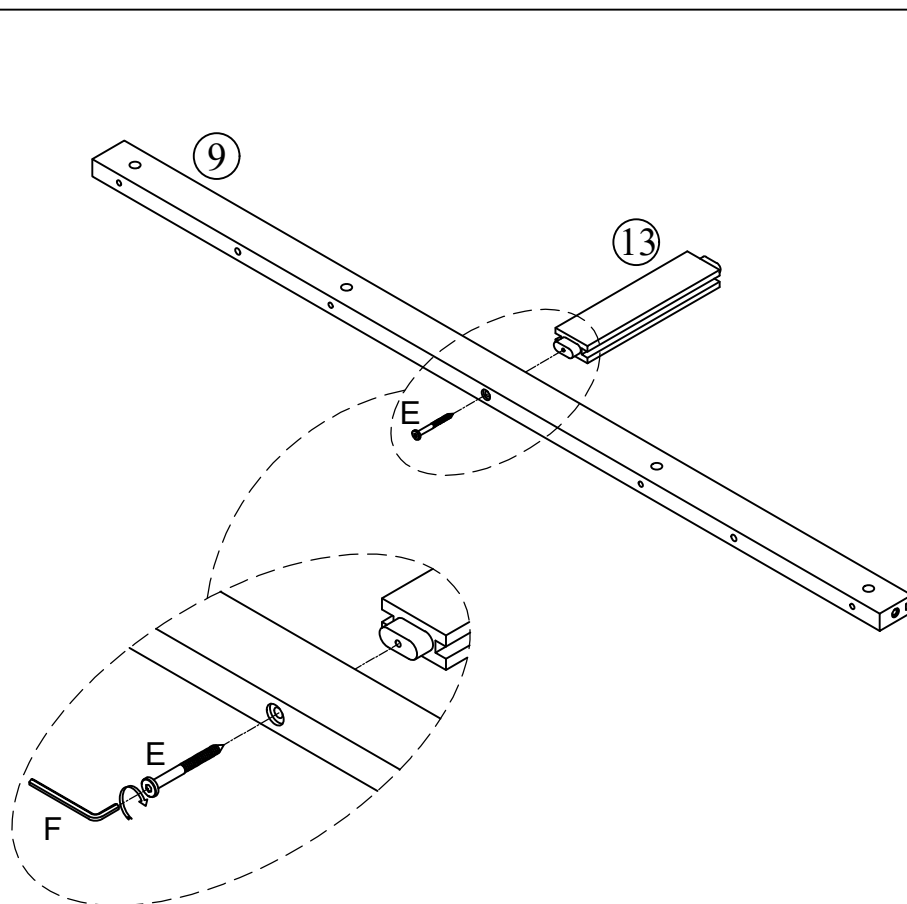



STEP 9:

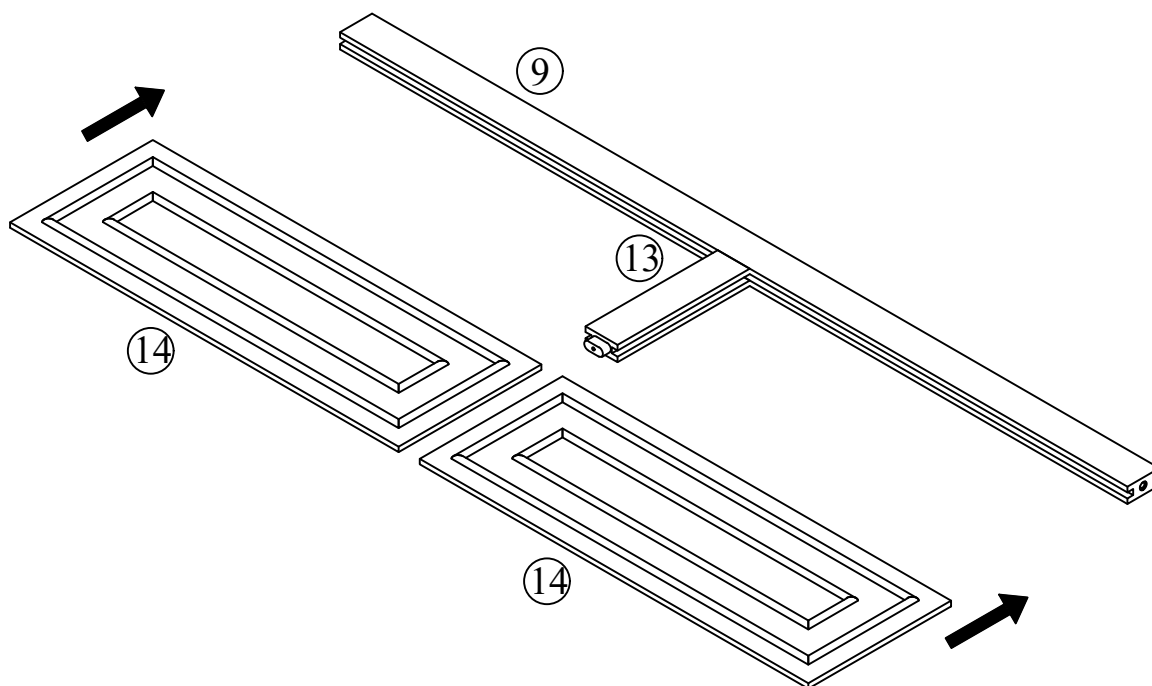



STEP 10:

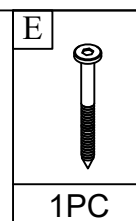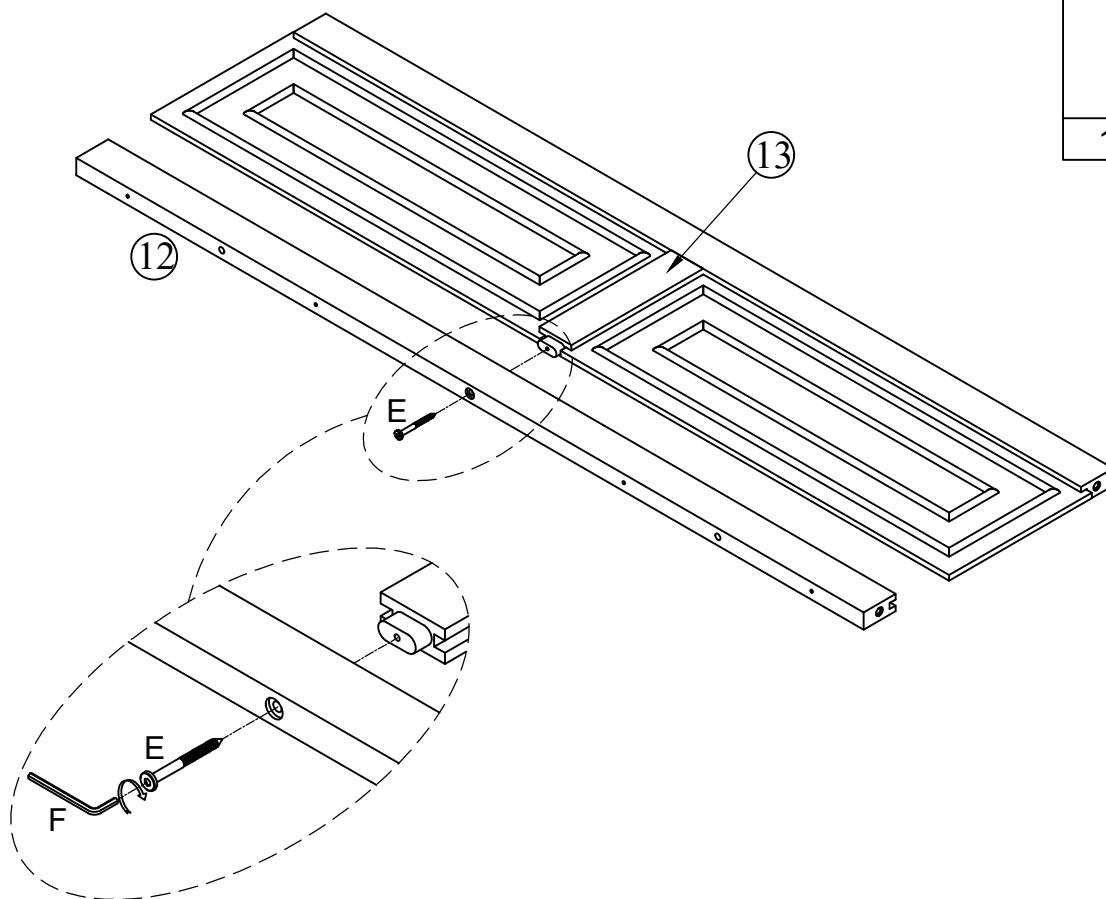


STEP 11:

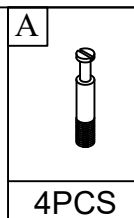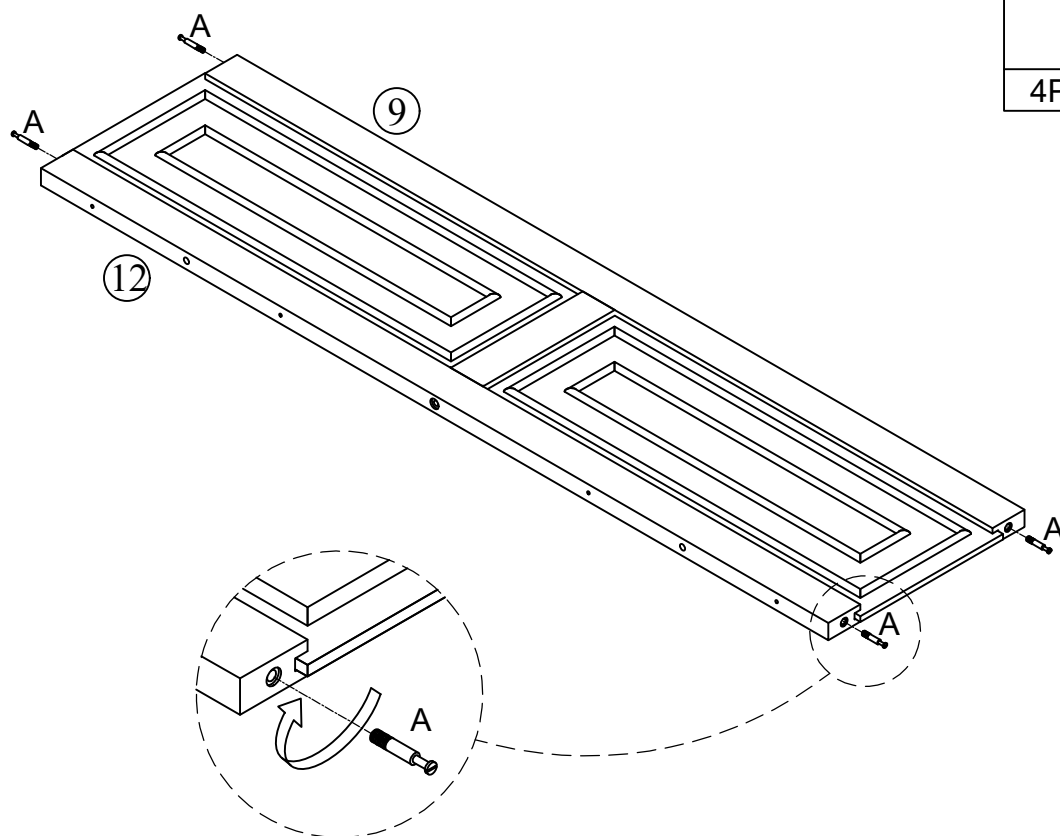

STEP 12:

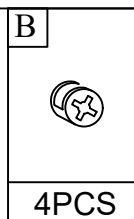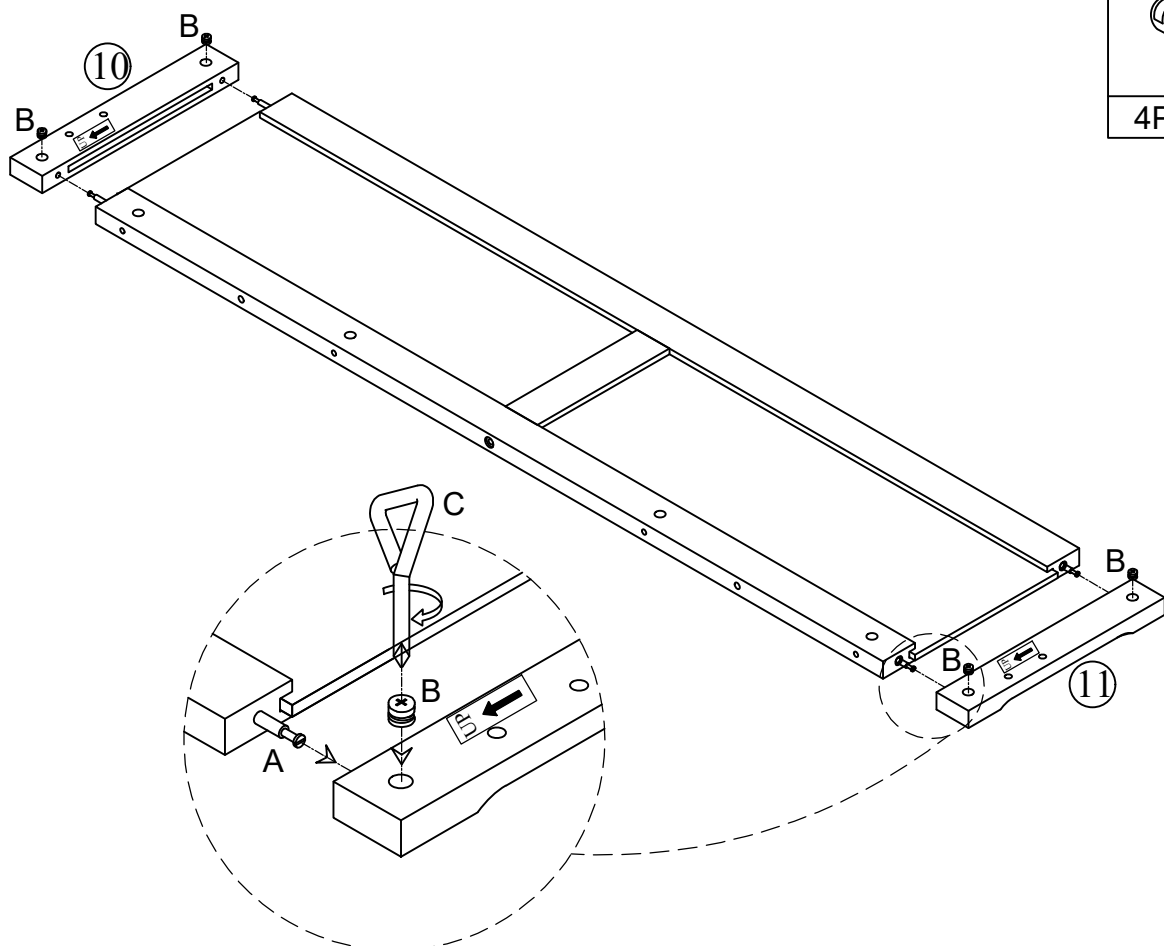



STEP 13:

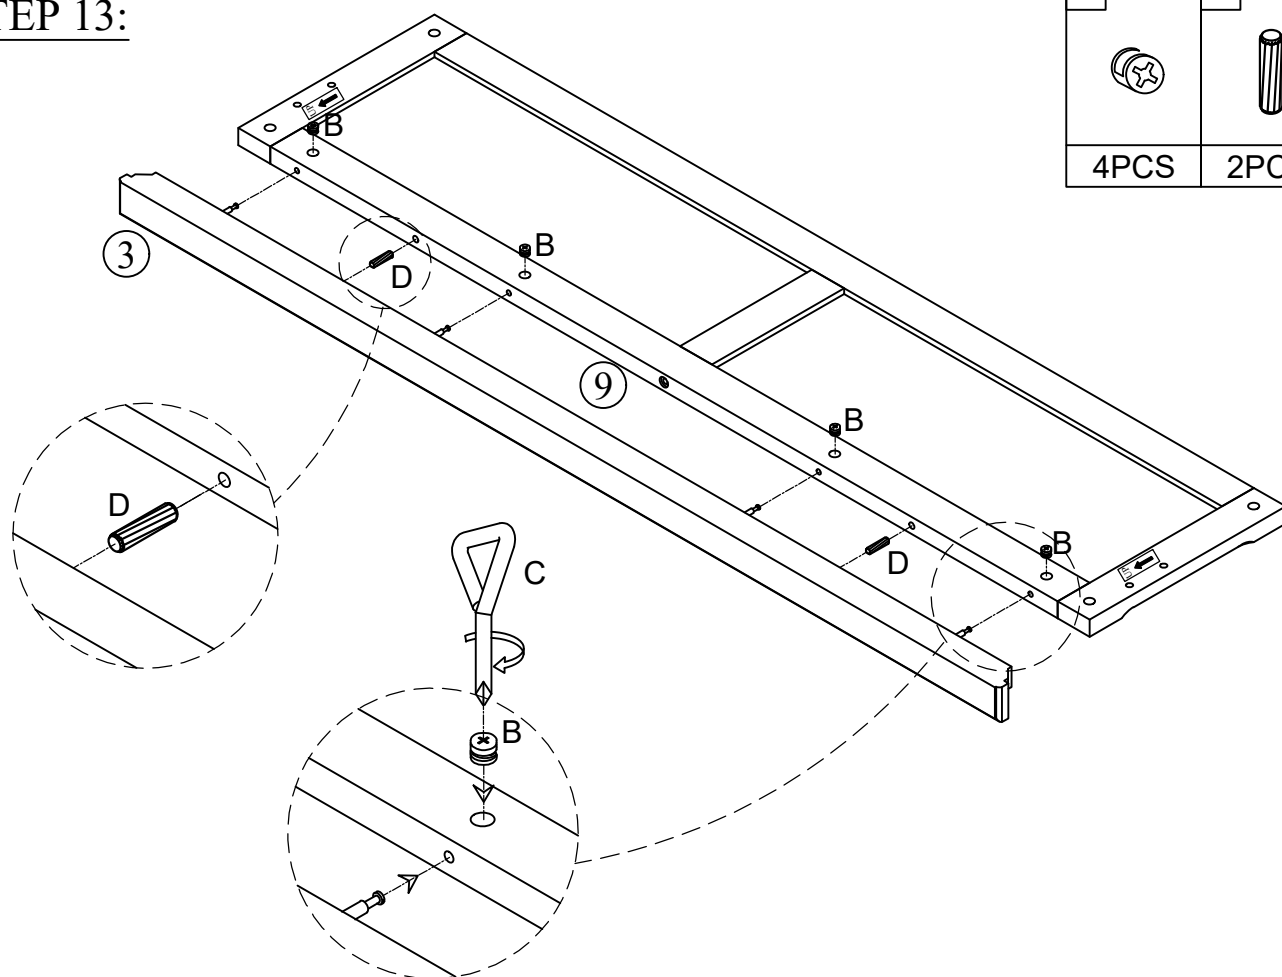



B	D
	
4PCS	2PCS

STEP 14:


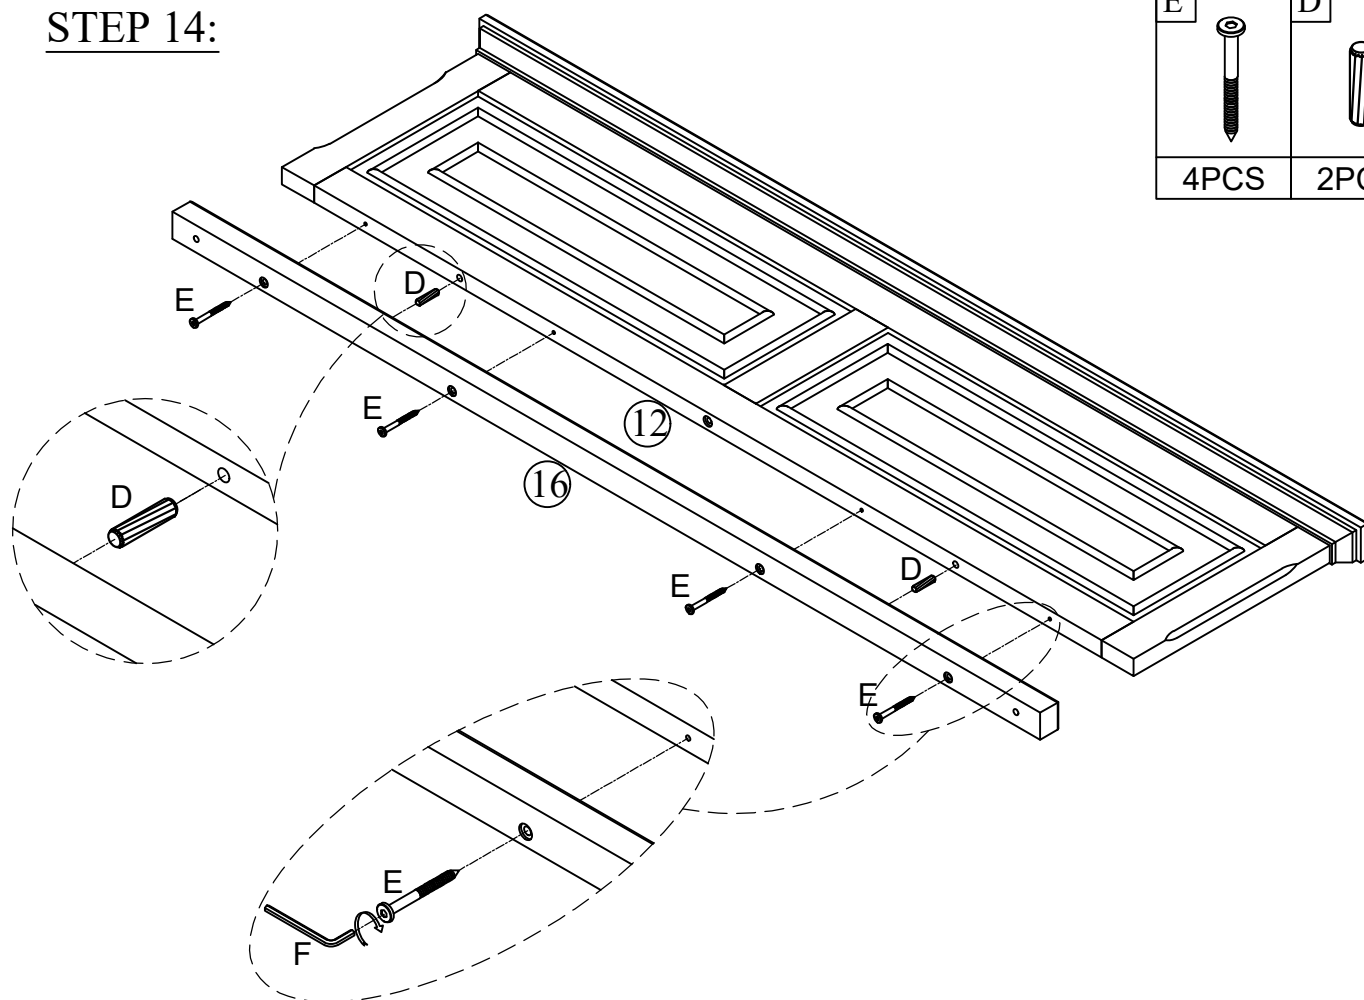


E	D
	
4PCS	2PCS


STEP 15:

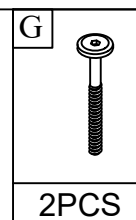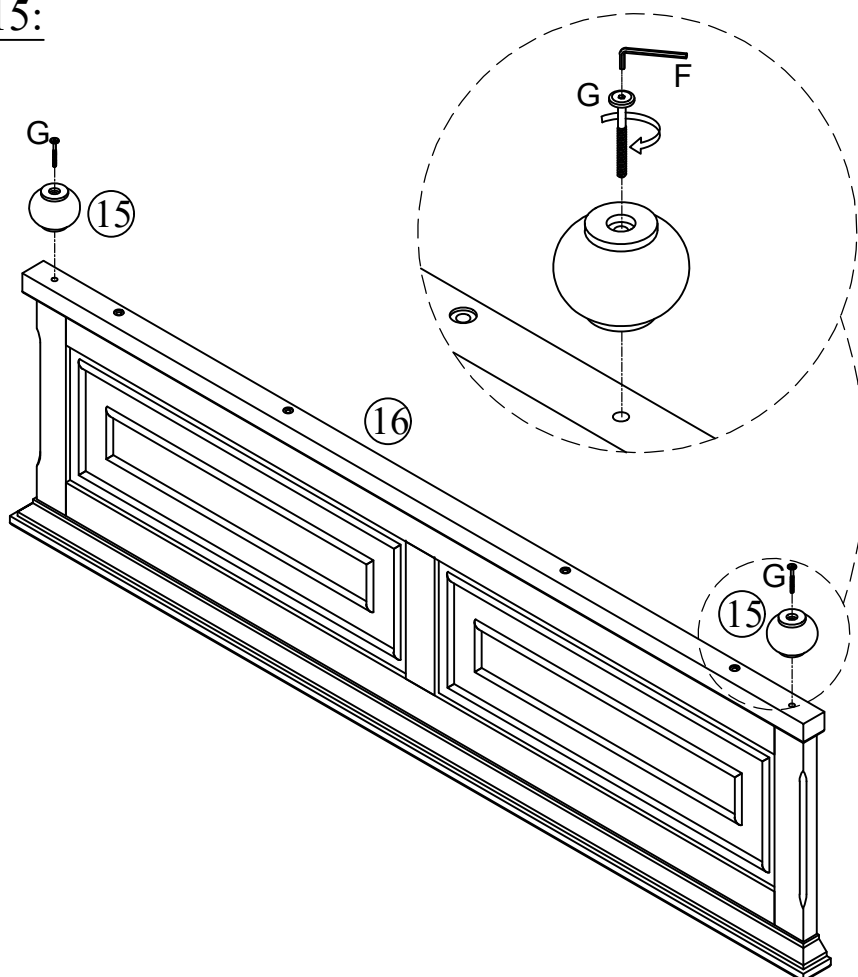


STEP 16:

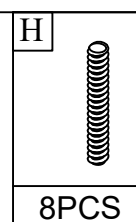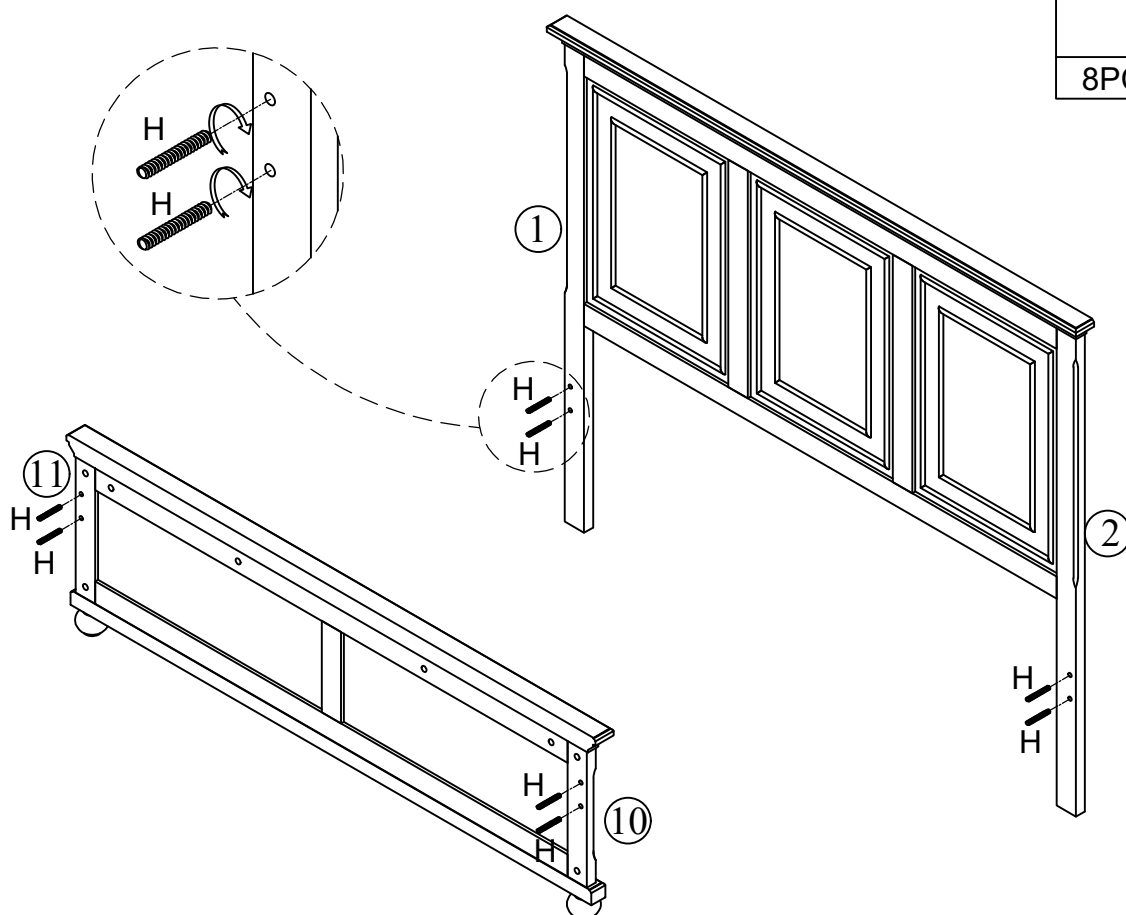


STEP 17:

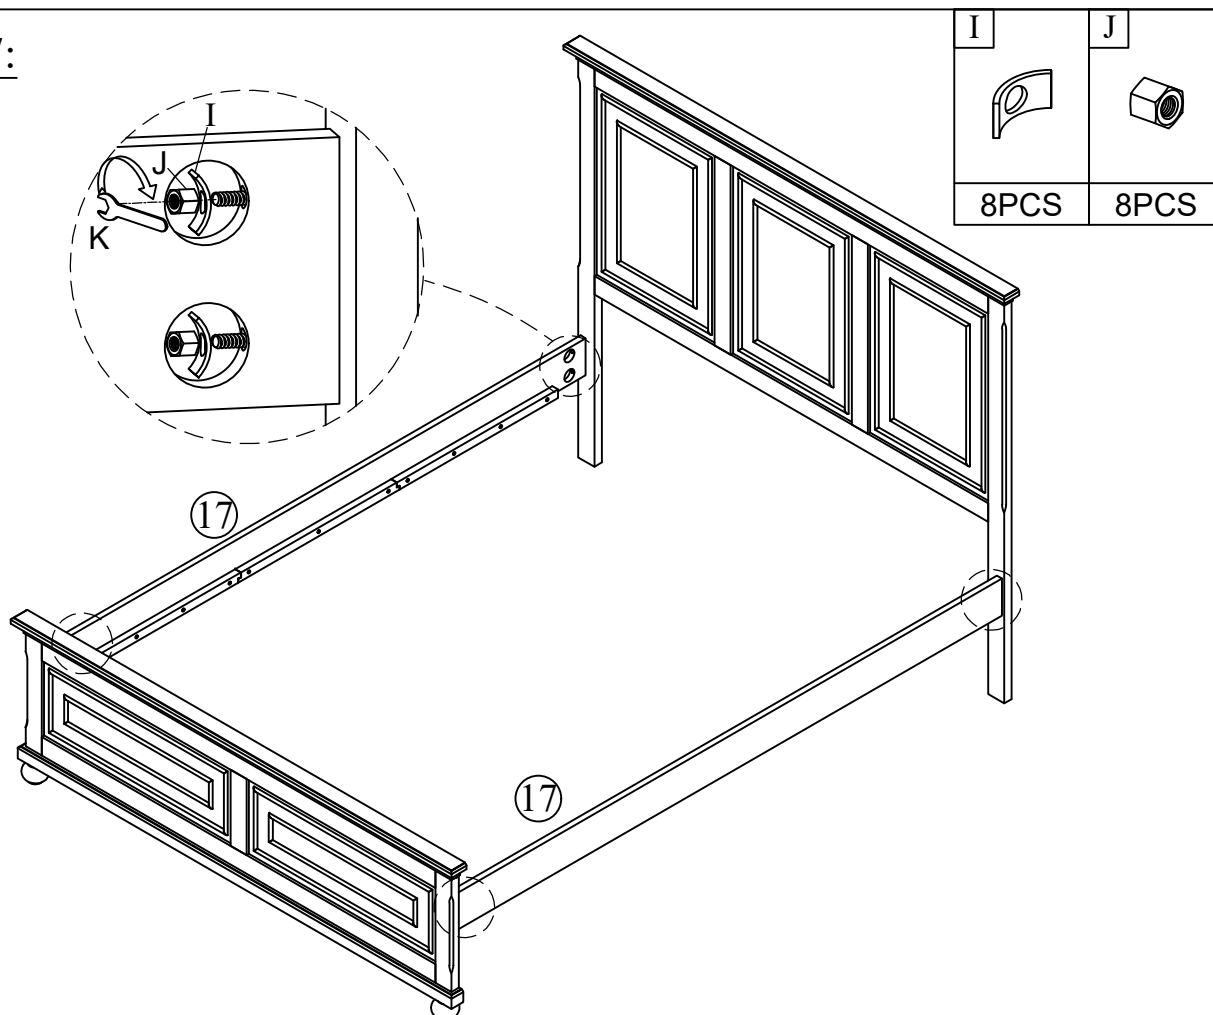

STEP 18:

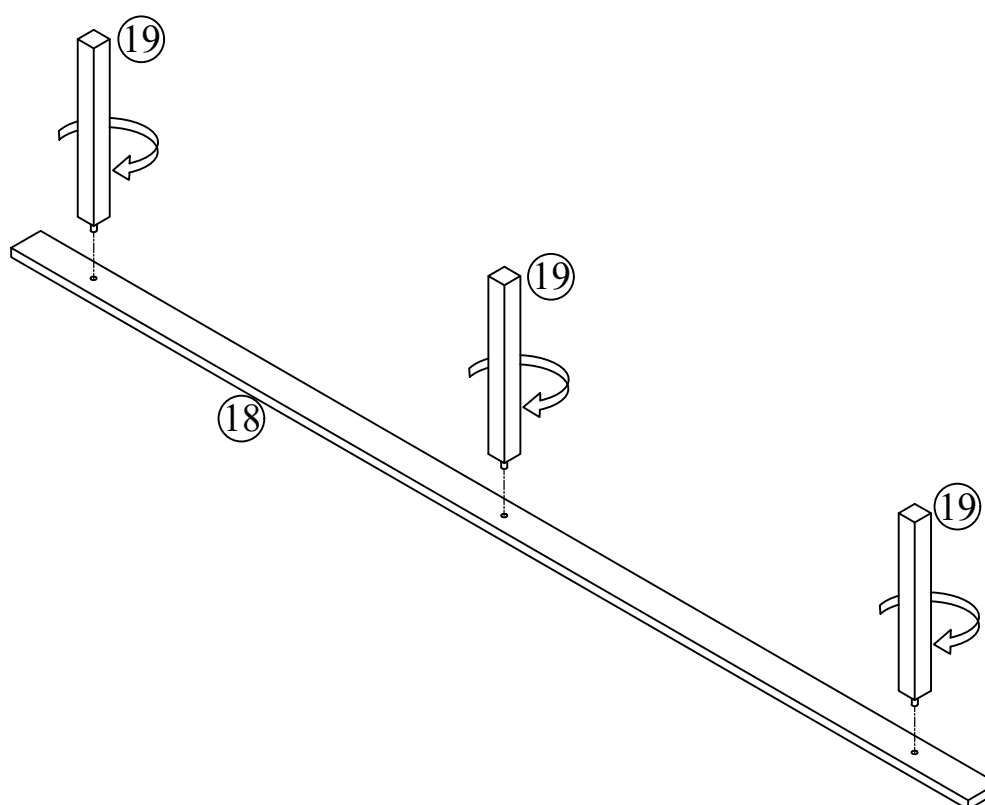




STEP 19:

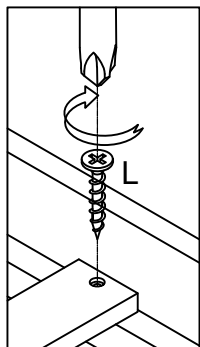

L



18PCS

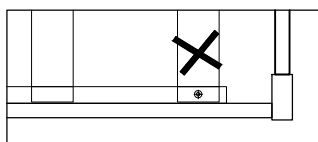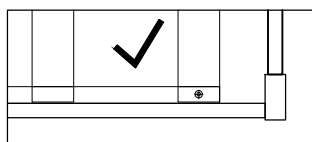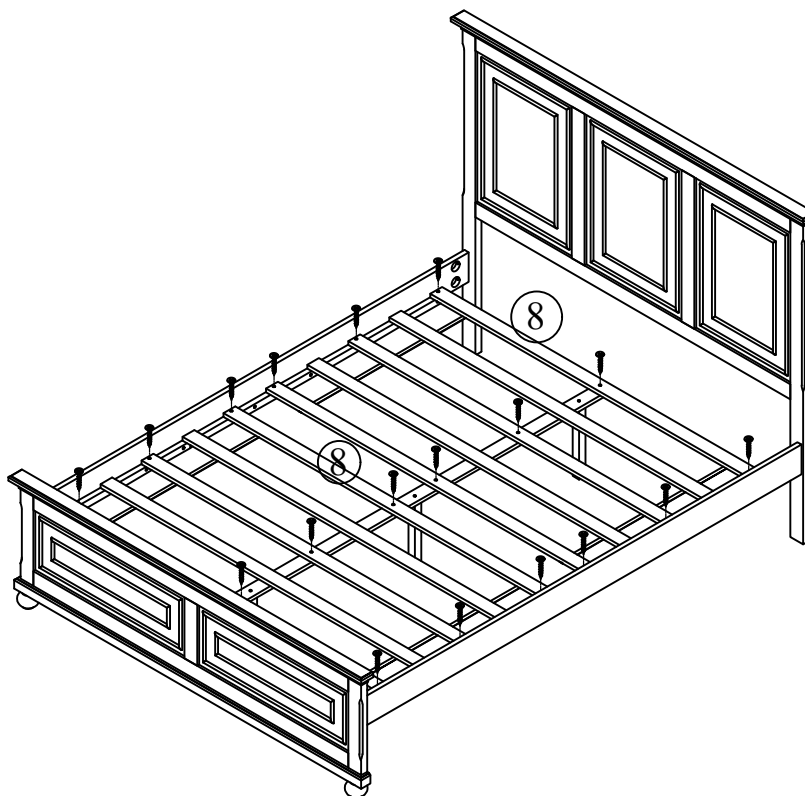

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

FINISH

