

J1S051

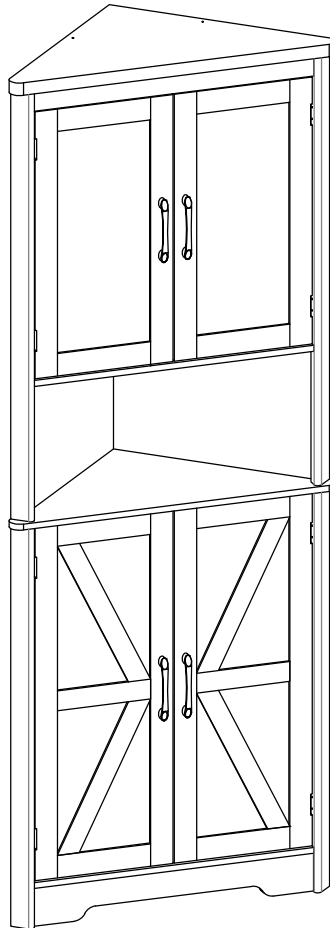


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

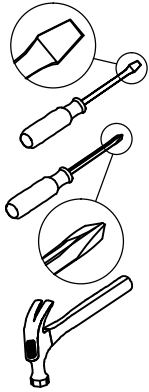

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



Board Identification


Not actual size

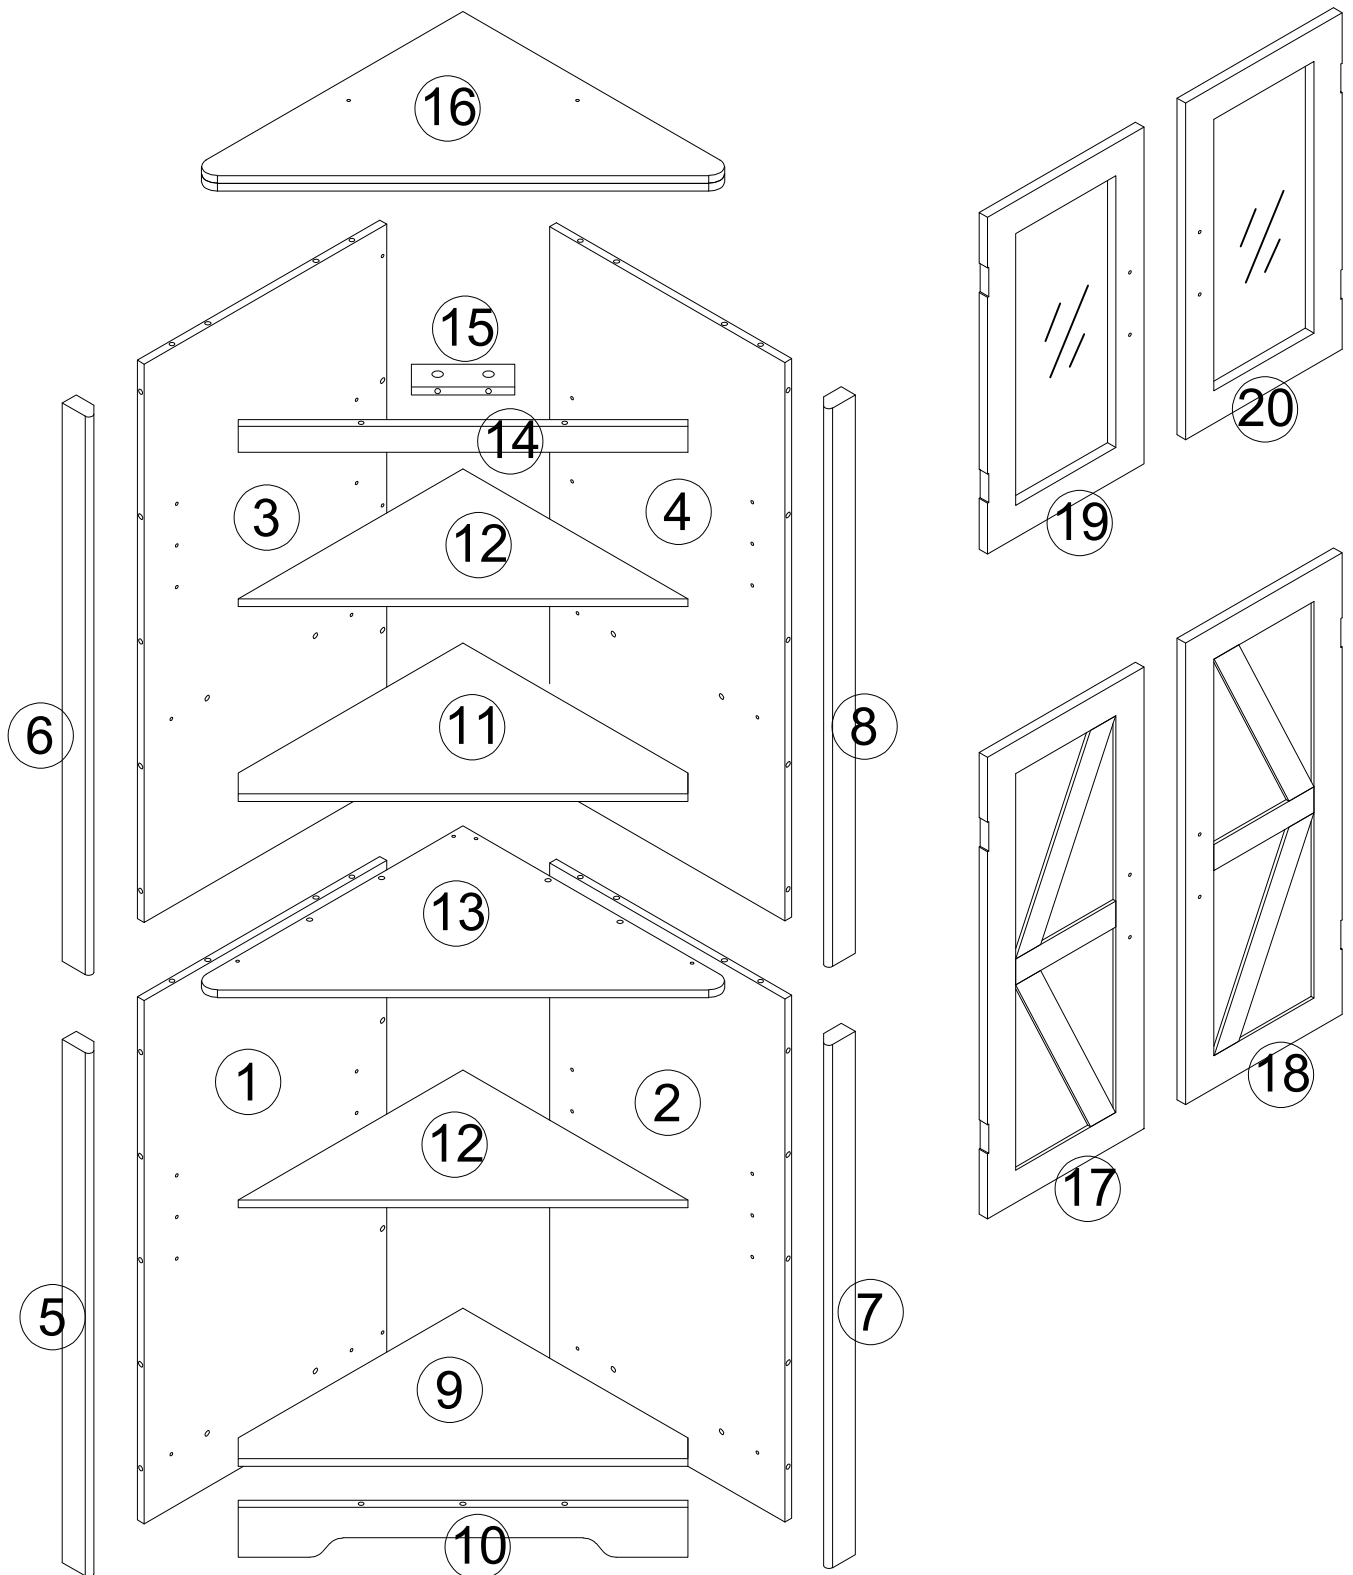

Board Identification

Not actual size


1

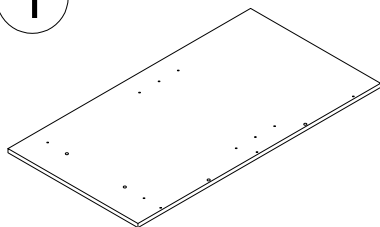

LOWER LEFT BACK

Qty:1


2

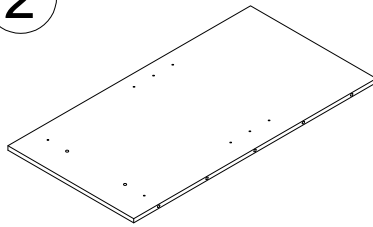

LOWER RIGHT BACK

Qty:1


3

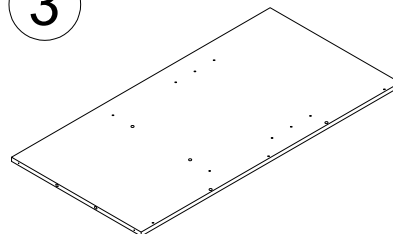

UPPER LEFT BACK

Qty:1


4

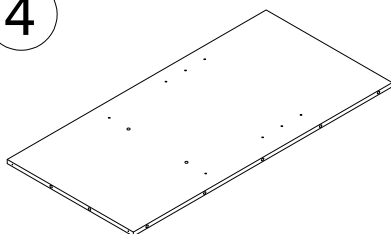

UPPER LEFT BACK

Qty:1


5

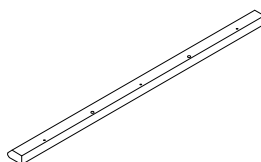

LEFT LOWER POST

Qty:1


6

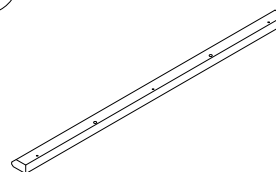

LEFT UPPER POST

Qty:1


7

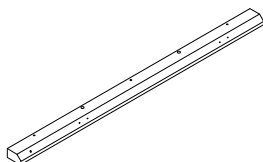

RIGHT LOWER POST

Qty:1


8

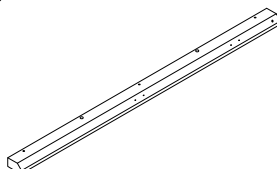

RIGHT UPPER POST

Qty:1


9

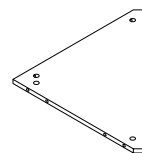

BOTTOM PANEL

Qty:1


10

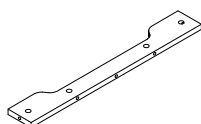

KICKBOARD

Qty:1


11

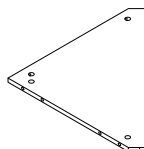

UPPER FIXED SHELF

Qty:1

12

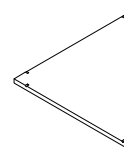


UPPER ADJUSTABLE SHELF

Qty:2

Board Identification

Not actual size


13

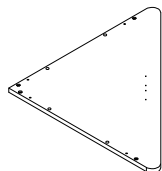

MIDDLE PANEL

Qty:1

14



FRONT CROSSBAR

Qty:1


15



BLOCK

Qty:1


16

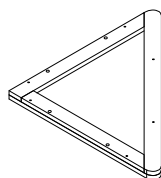

TOP PANEL

Qty:1


17

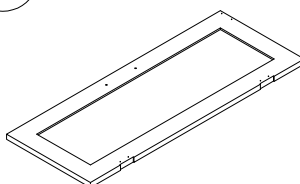

LOWER LEFT DOOR

Qty:1


18

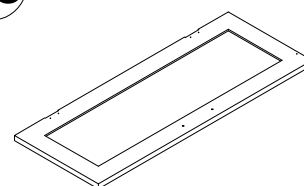

LOWER RIGHT DOOR

Qty:1


19

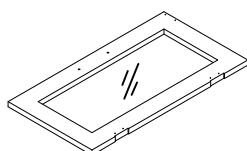

UPPER LEFT DOOR

Qty:1


20

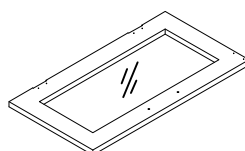


UPPER RIGHT DOOR

Qty:1


Part List

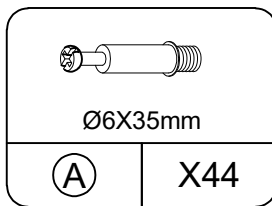


CAM BOLT
spare:2

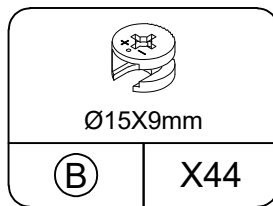


CAM LOCK
spare:2

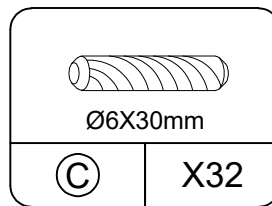


WOOD DOWEL
spare:2

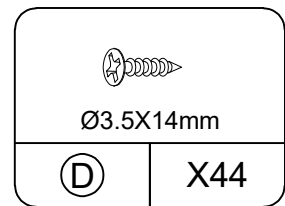


SCREW
spare:2

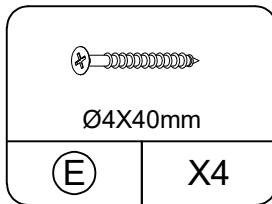


SCREW
spare:1

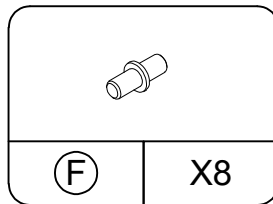

SCREW
spare:2

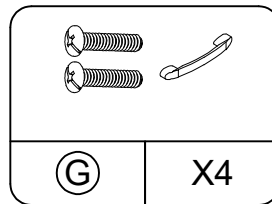

BOLT HANDLE

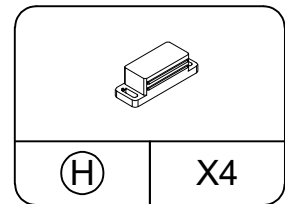

MAGNET



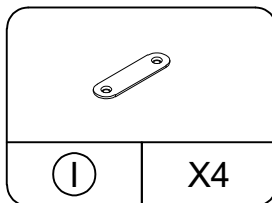



PLATE
spare:1

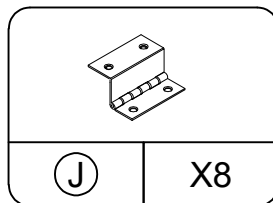


HINGE

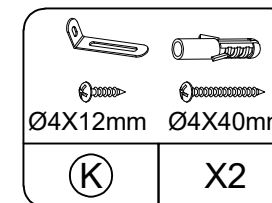

ANTI-LIP DEVICE

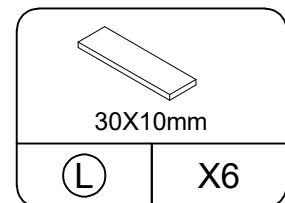


PAD
spare:1

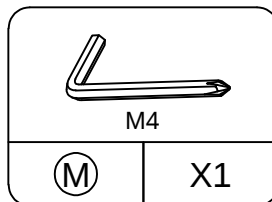






HEX KEY

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.








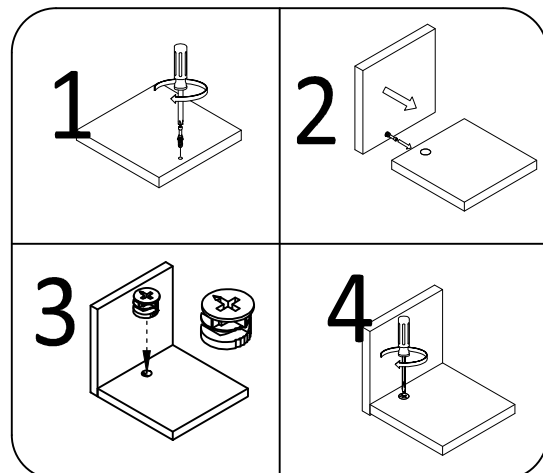


STEP 1

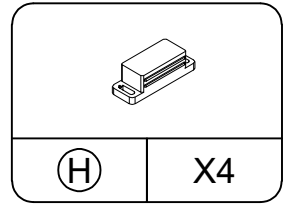
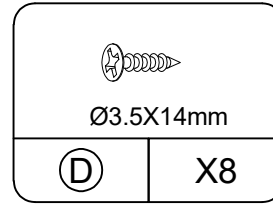
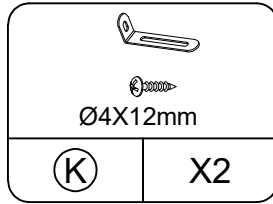
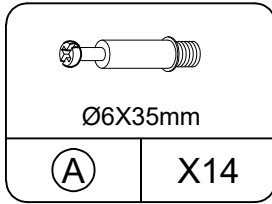
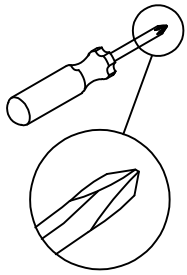


Please refer to the instructions on page 23 for anti-dumping installation.






Turn part ① over

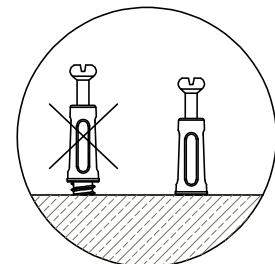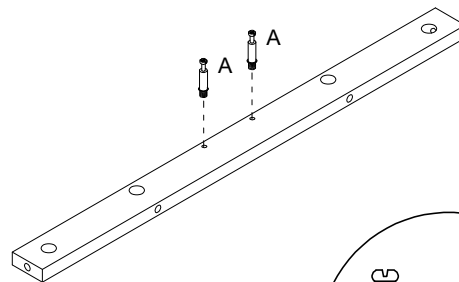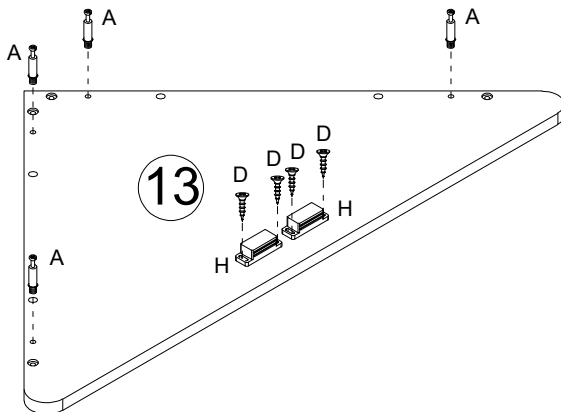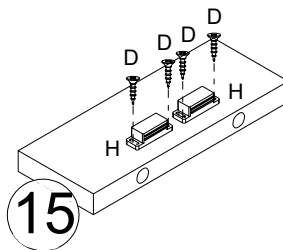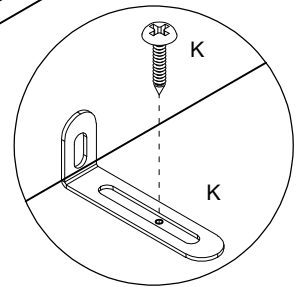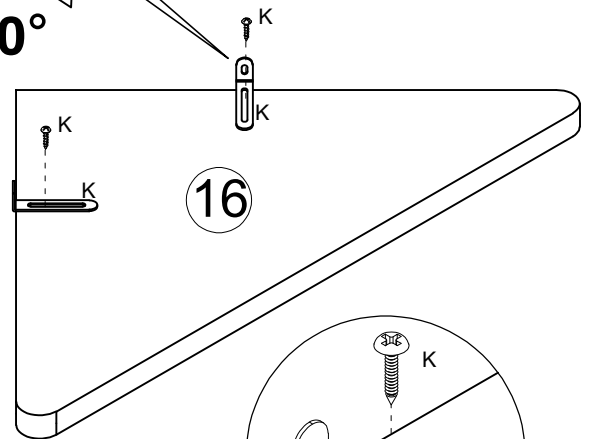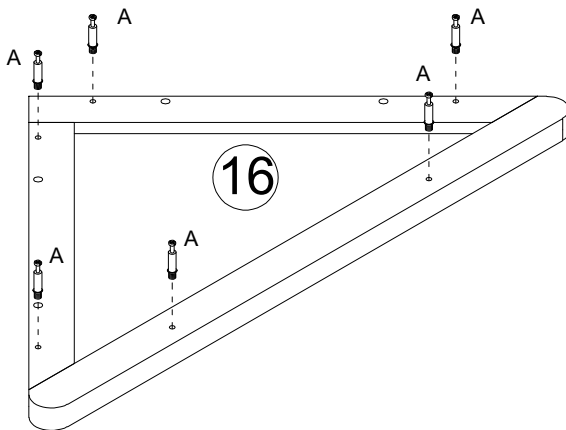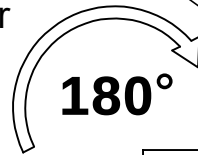









STEP 2

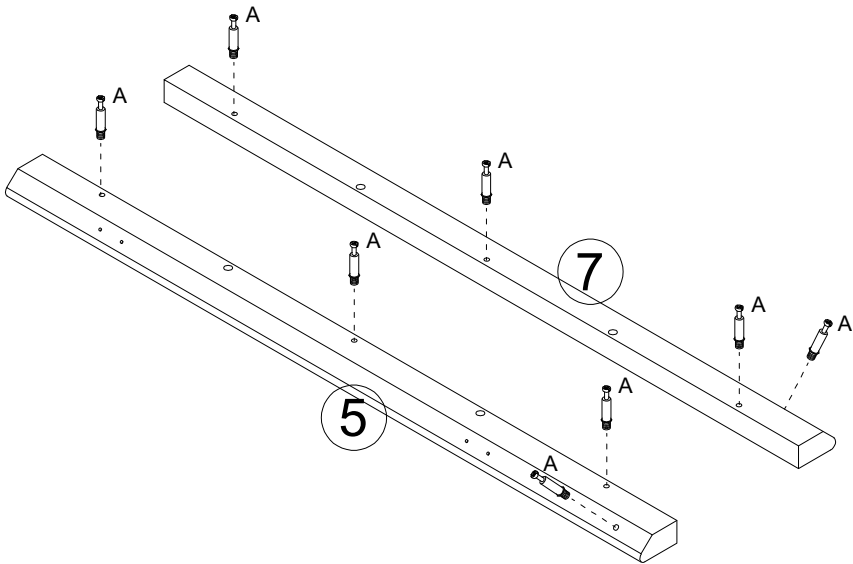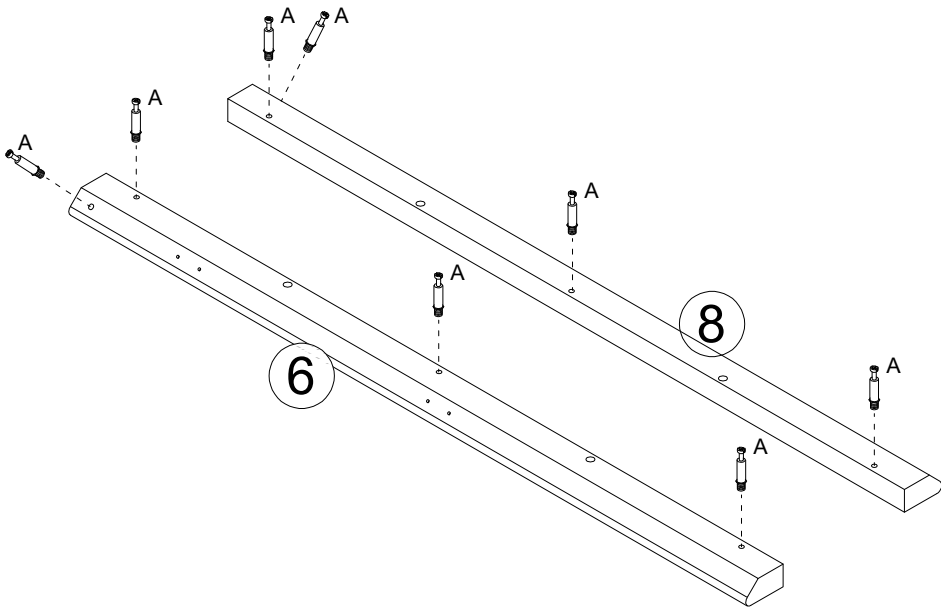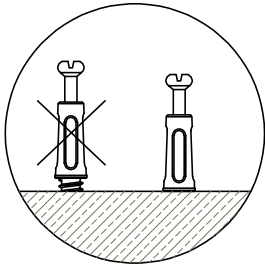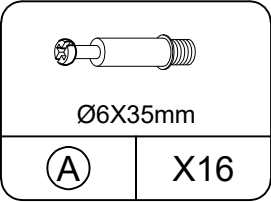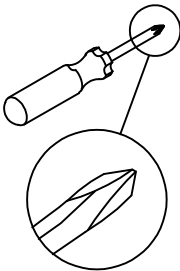

STEP 3



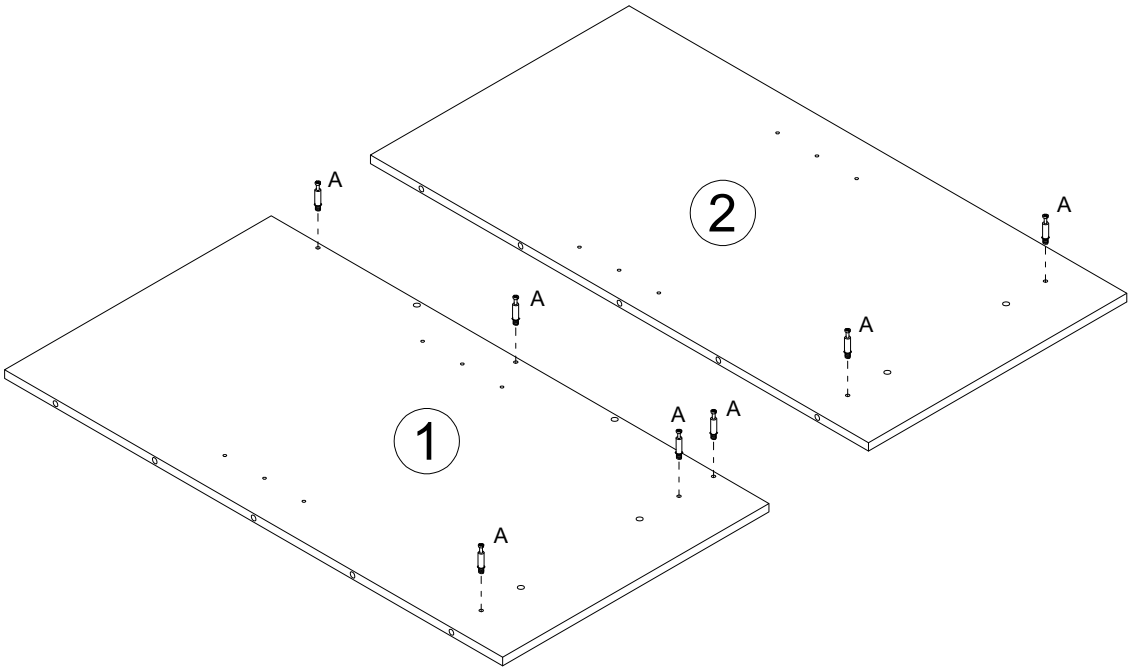
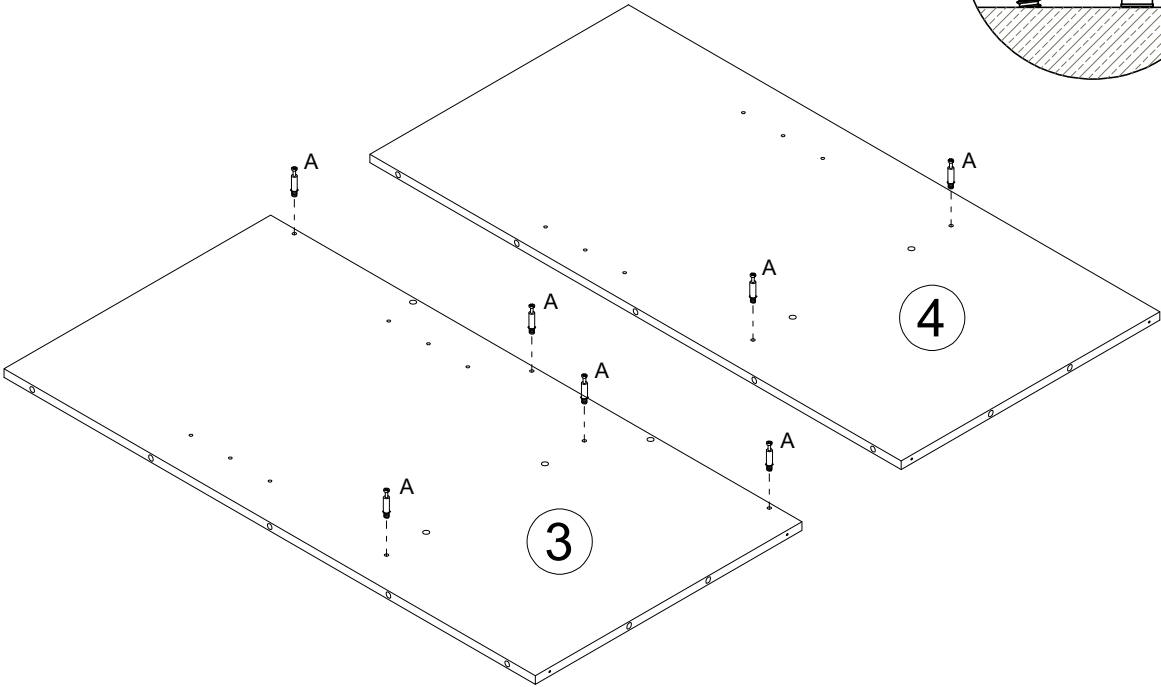
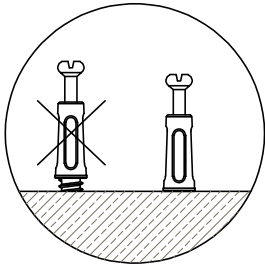
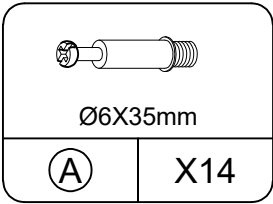
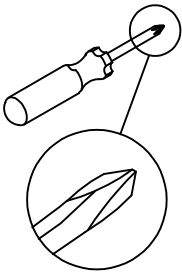


STEP 4

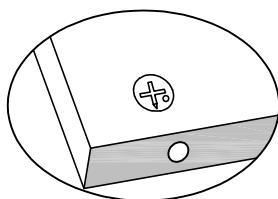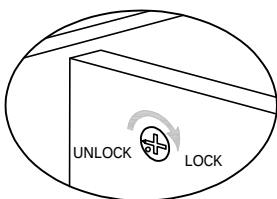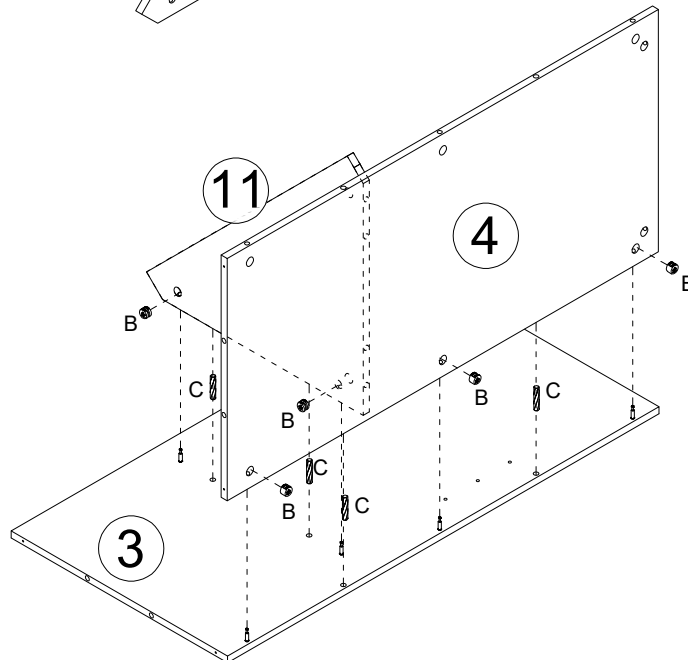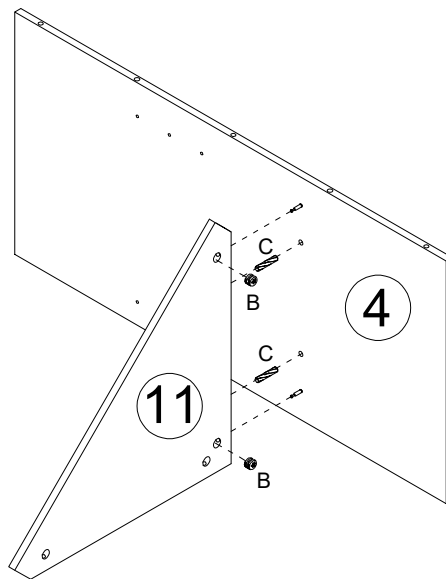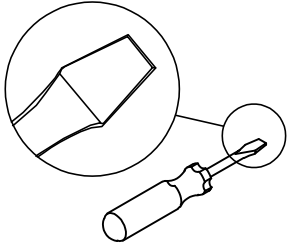
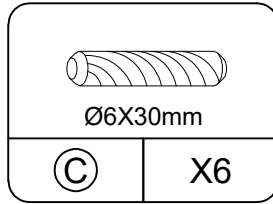
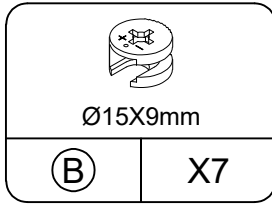
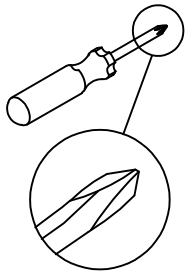


Proper orientation of CAM LOCK

STEP 5

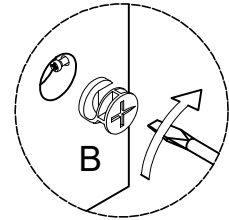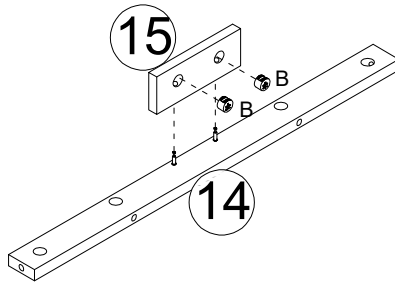
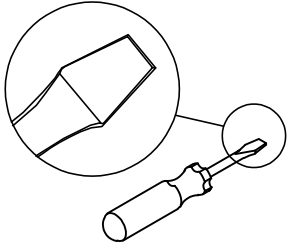
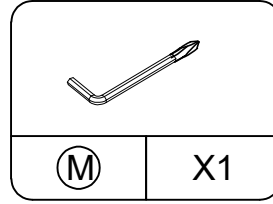
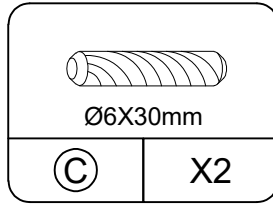
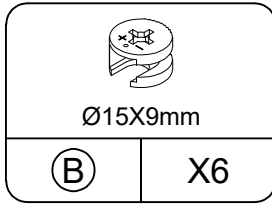
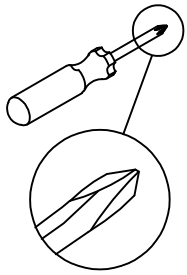


The space is small, please use the (M) wrench to tighten the (B) cam lock.

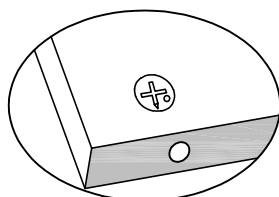
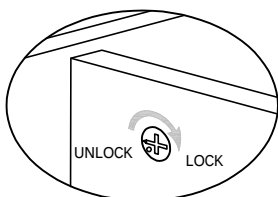
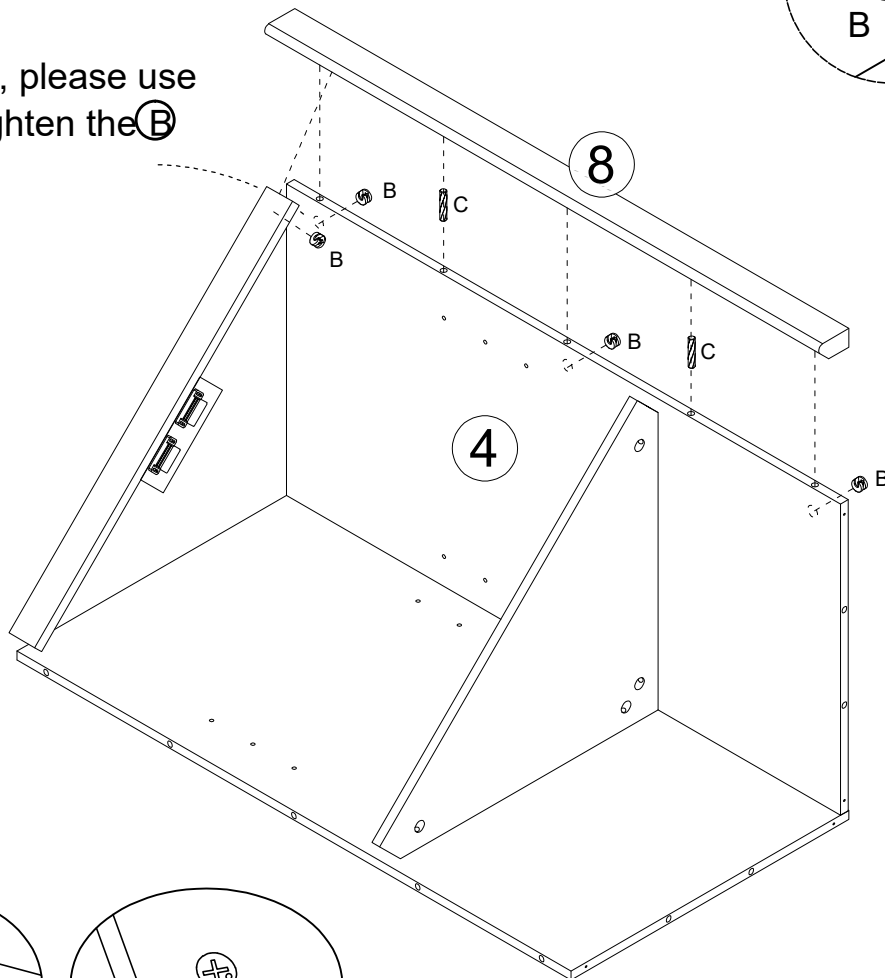
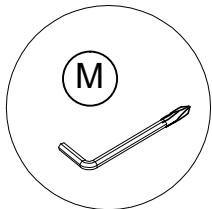


Proper orientation of CAM LOCK

STEP 6

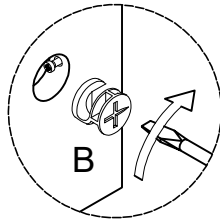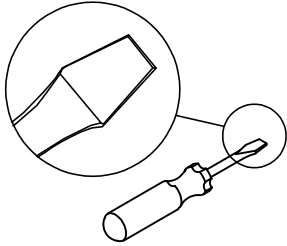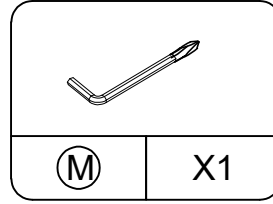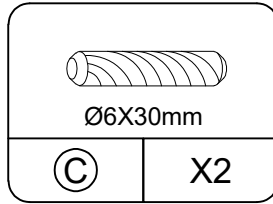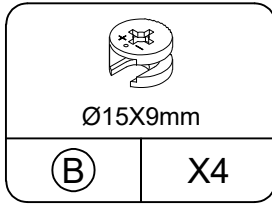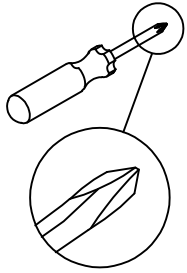



The space is small, please use the (M) wrench to tighten the (B) cam lock.

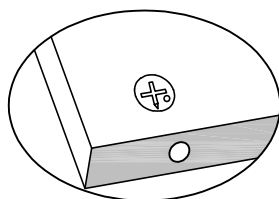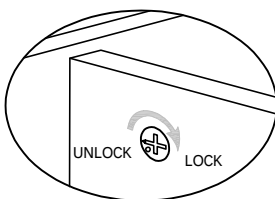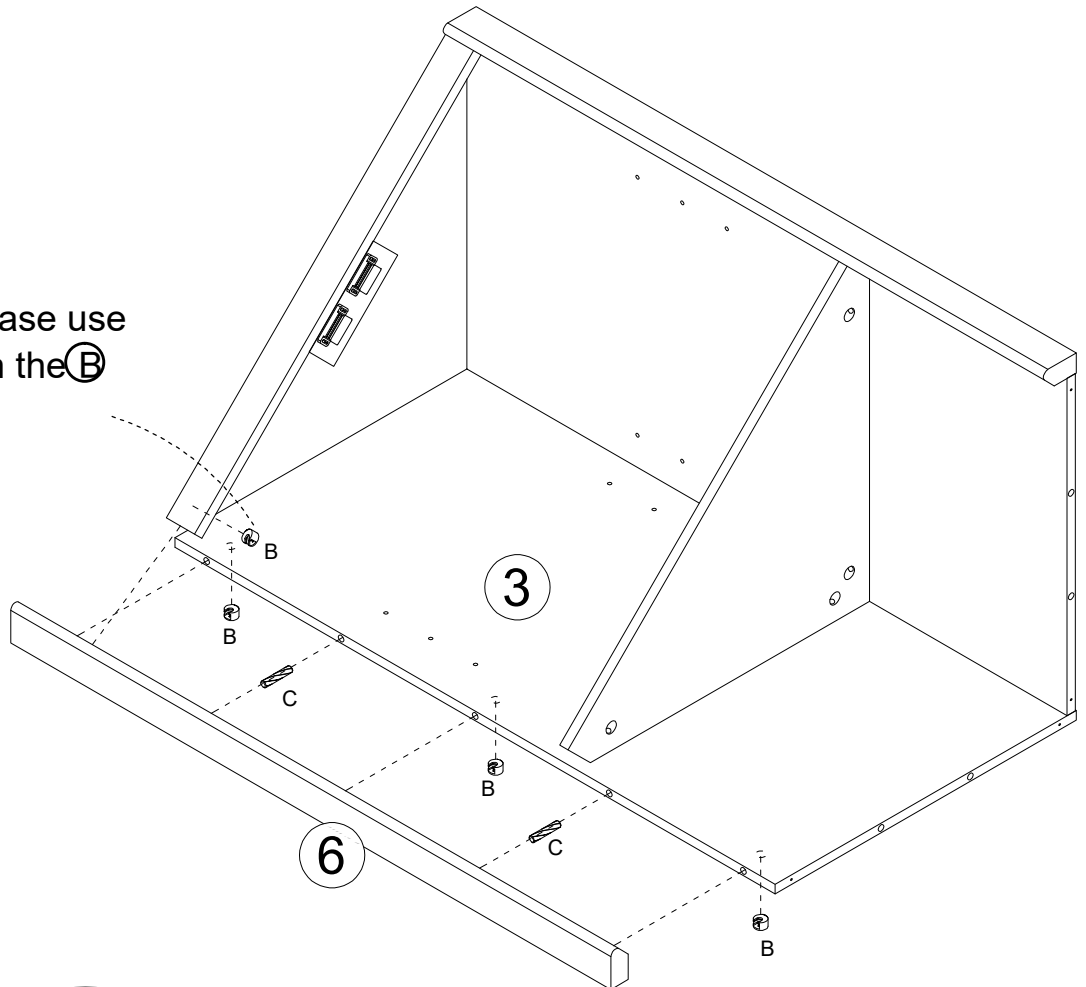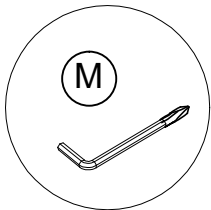



Proper orientation of CAM LOCK

STEP 7








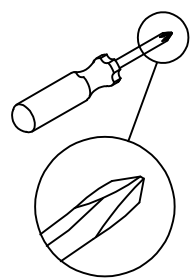


 Ø4X40mm	
(E)	X4

 Ø6X30mm	
(C)	X4








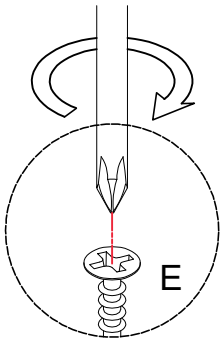
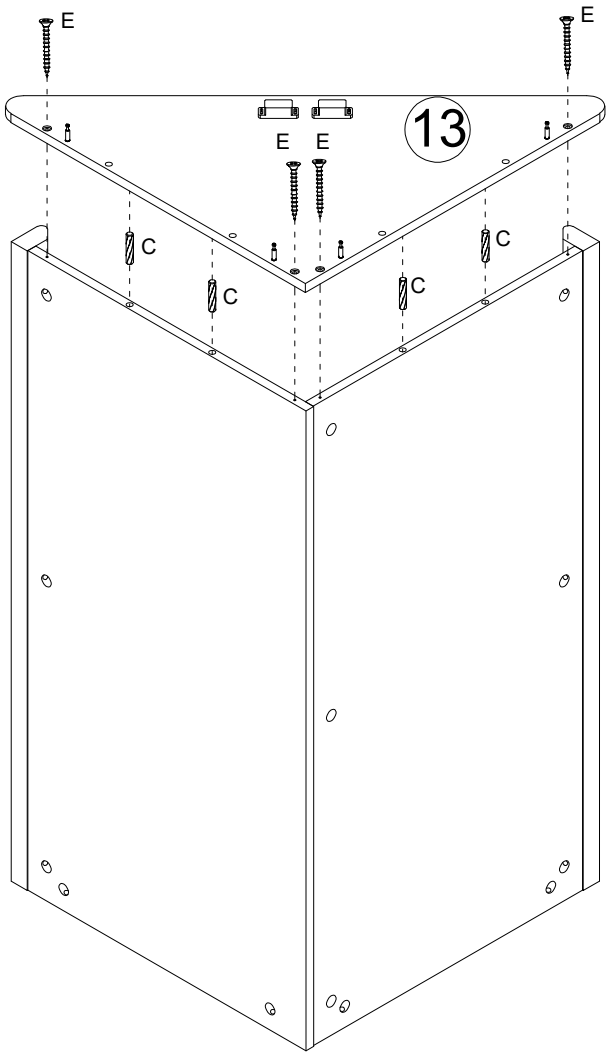


STEP 8

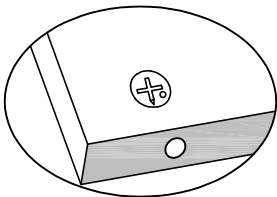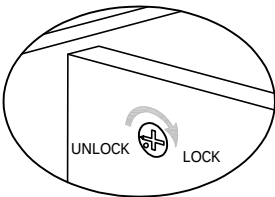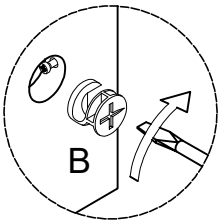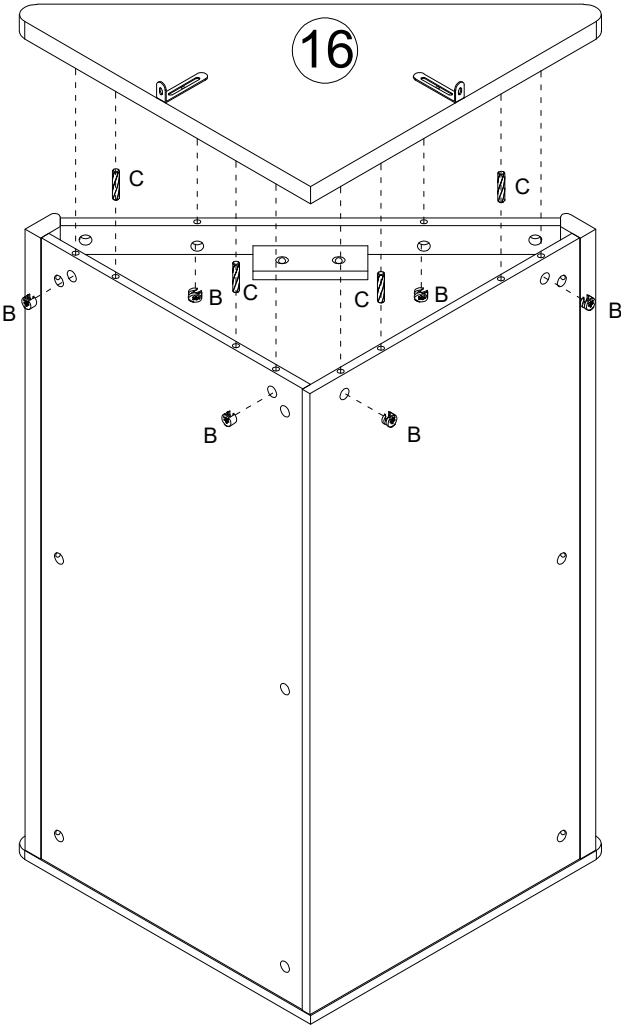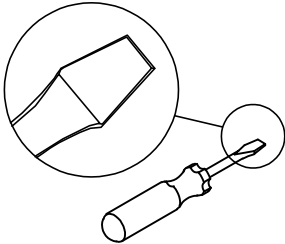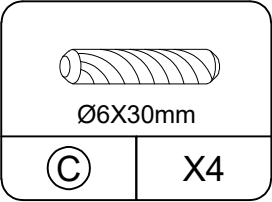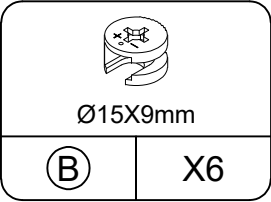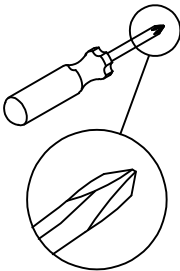









Proper orientation of CAM LOCK

STEP 9

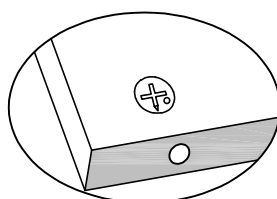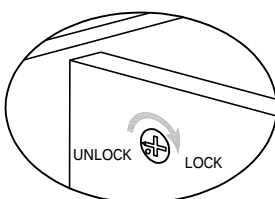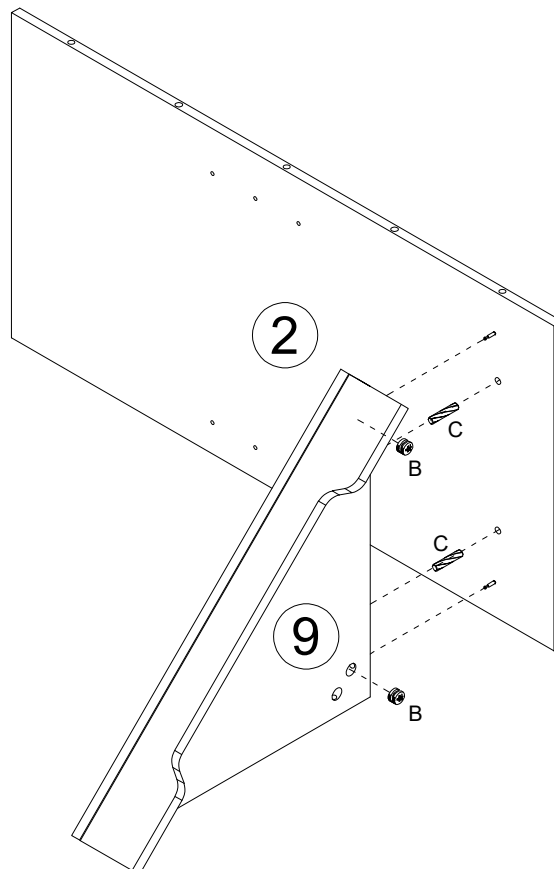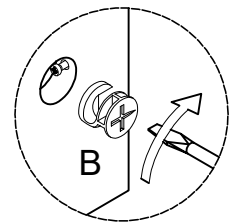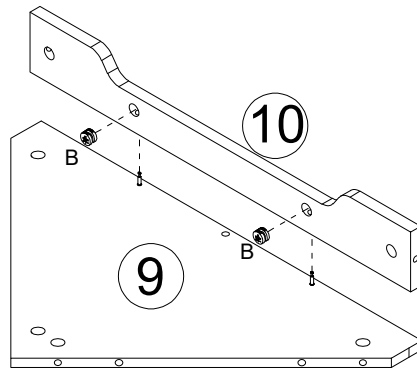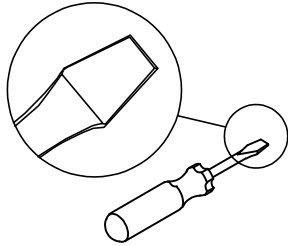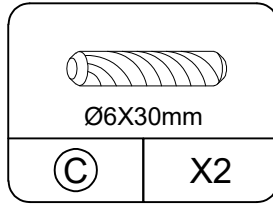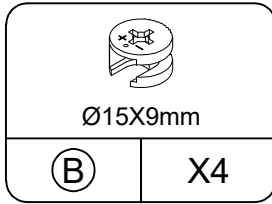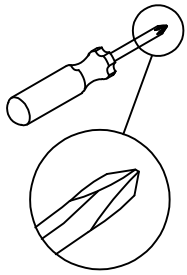










Proper orientation of CAM LOCK

STEP 10

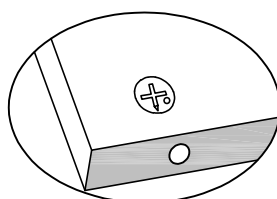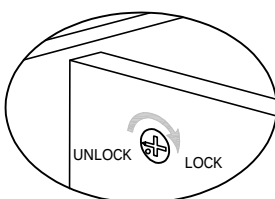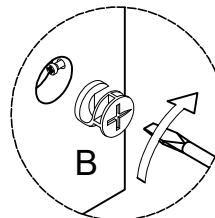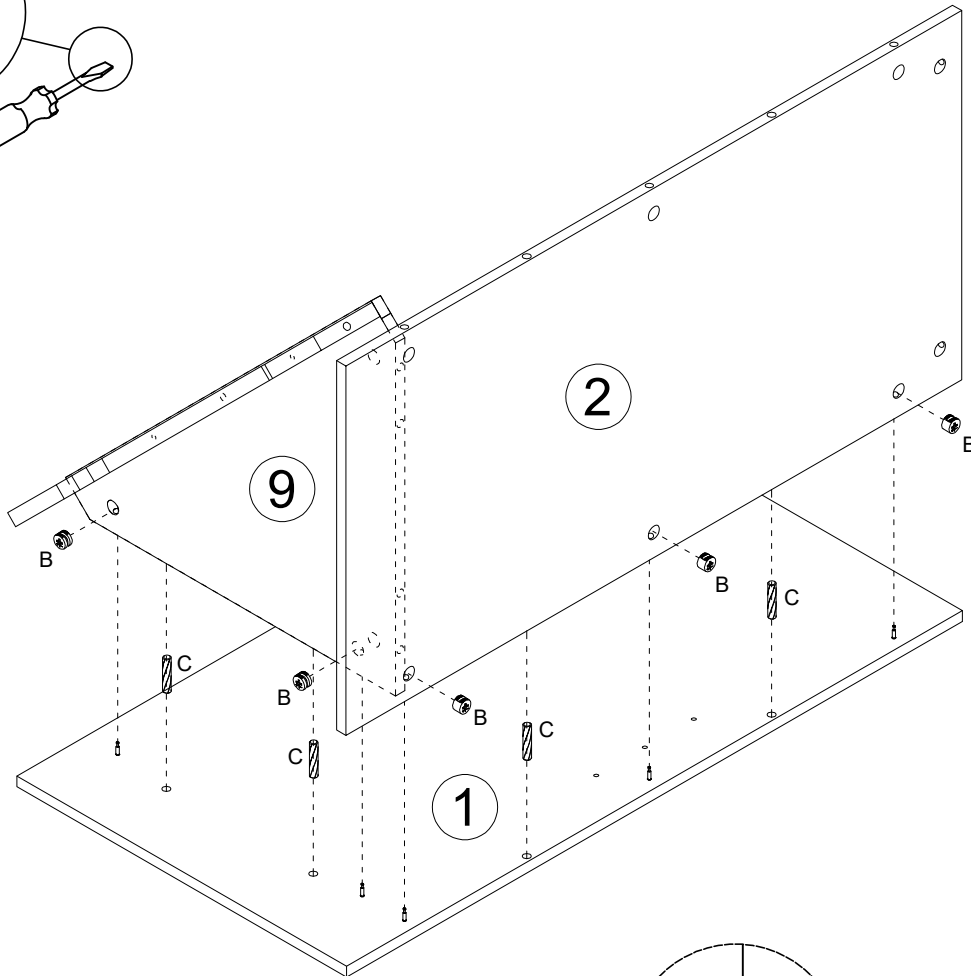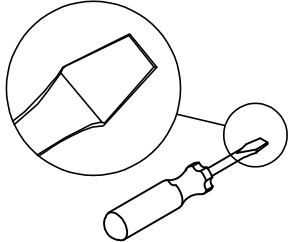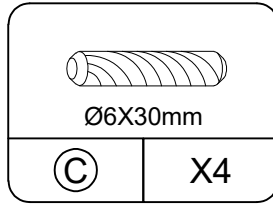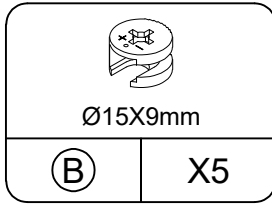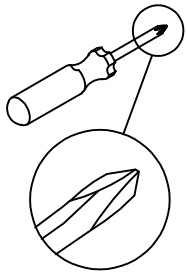


Proper orientation of CAM LOCK








STEP 11

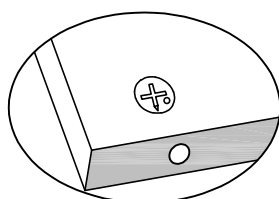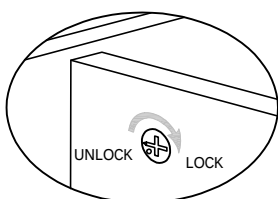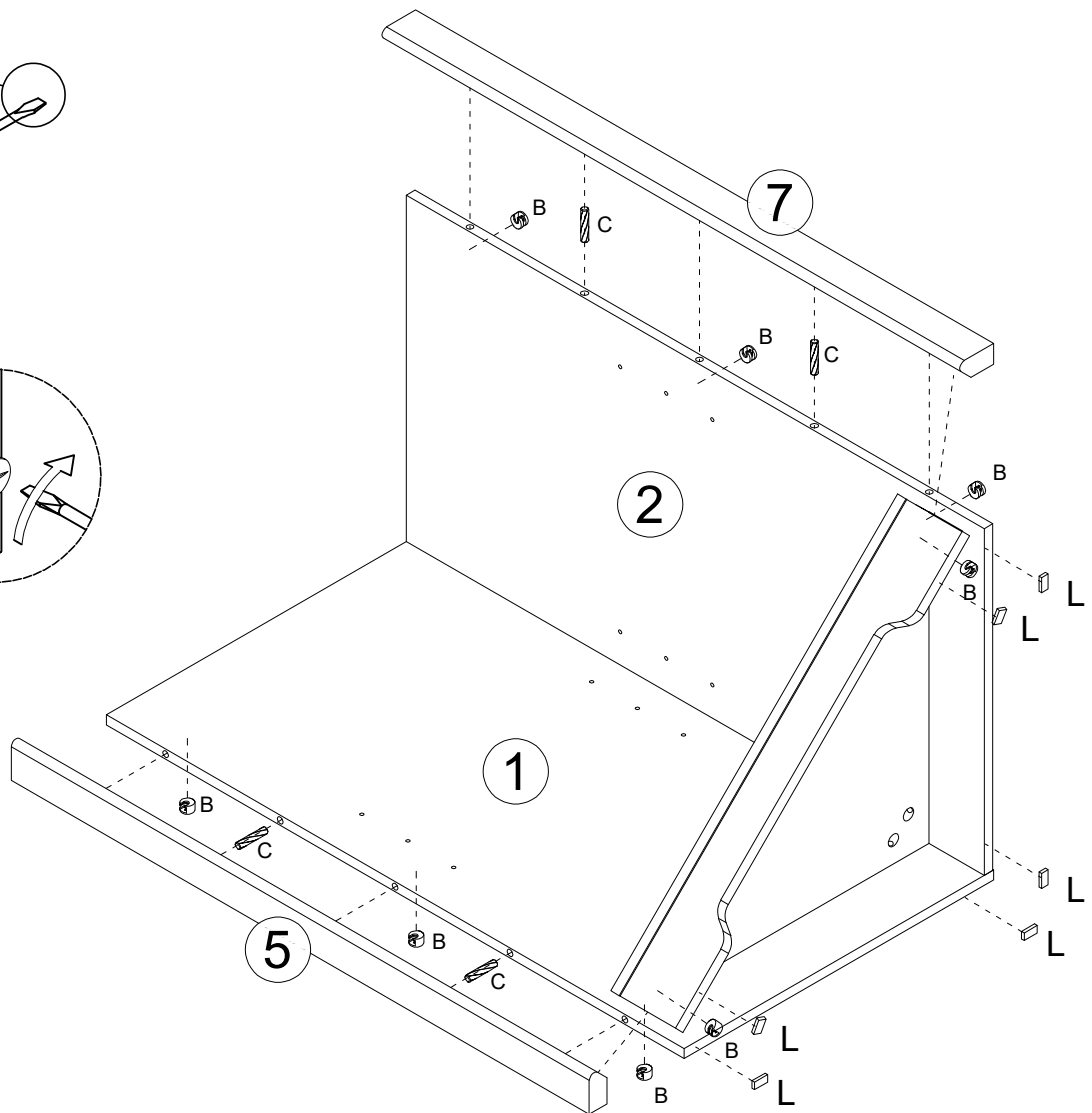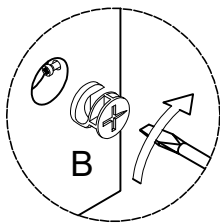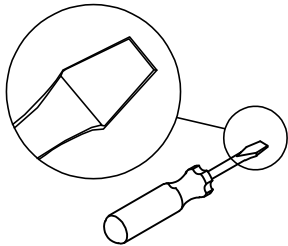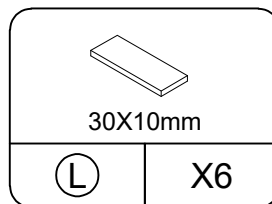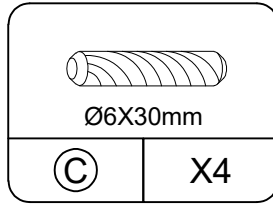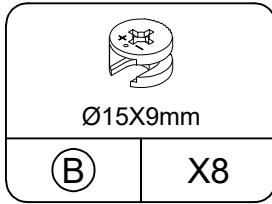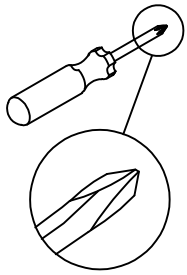

Proper orientation of CAM LOCK


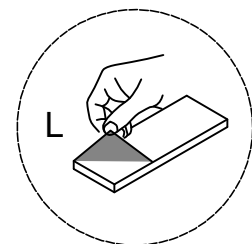


STEP 12

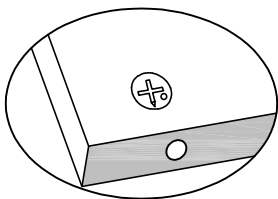
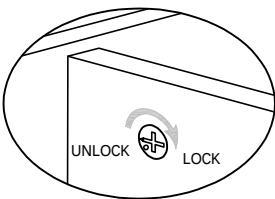
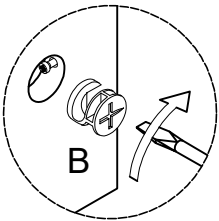
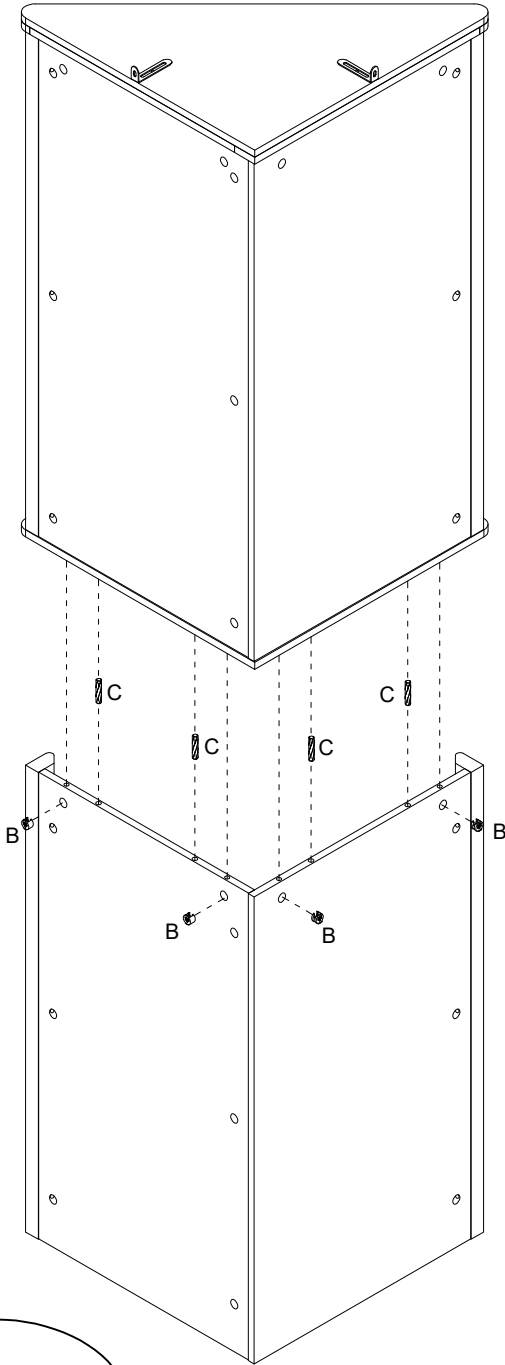
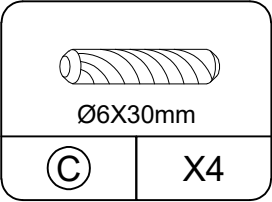
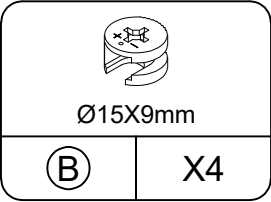
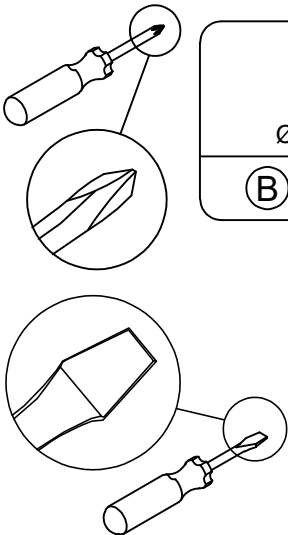


Proper orientation of CAM LOCK








STEP 13

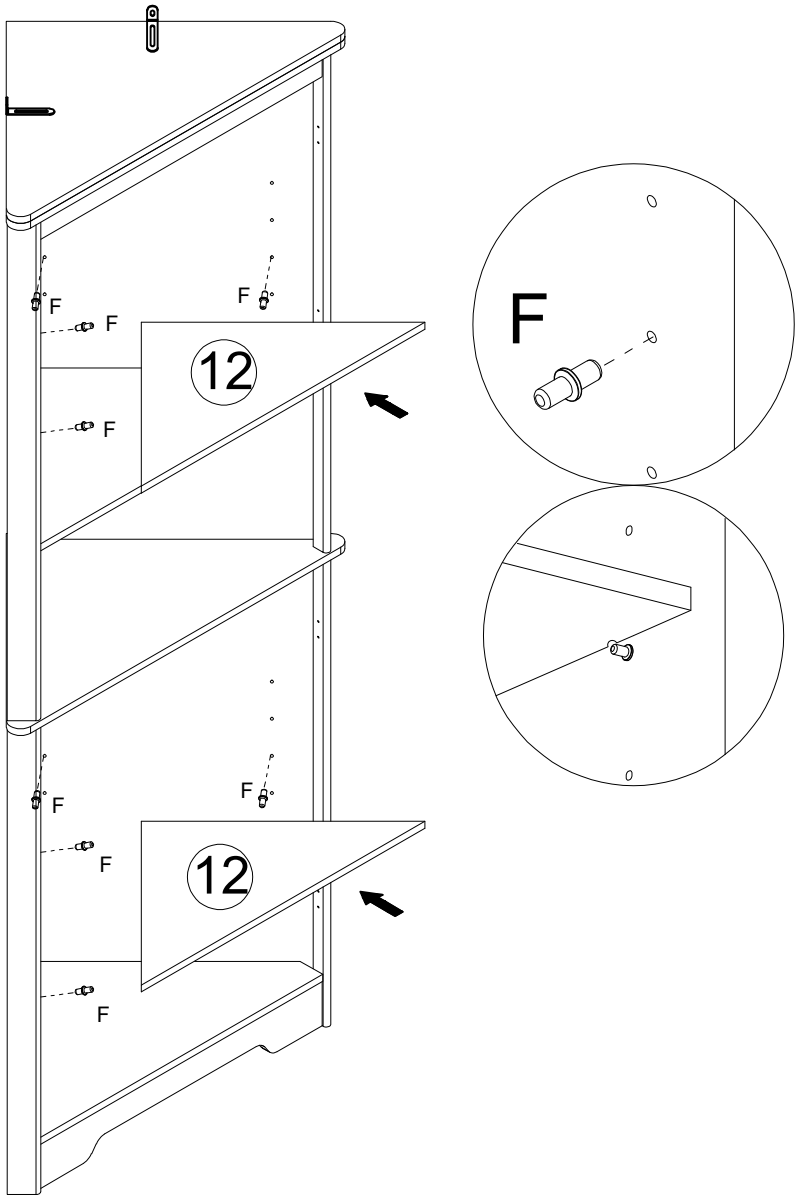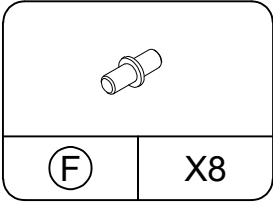





STEP 14

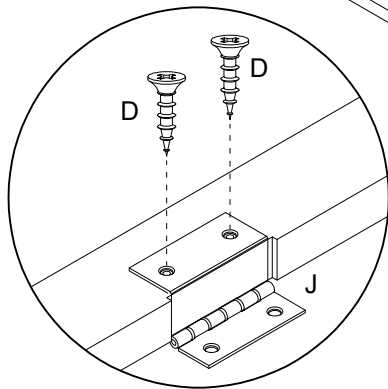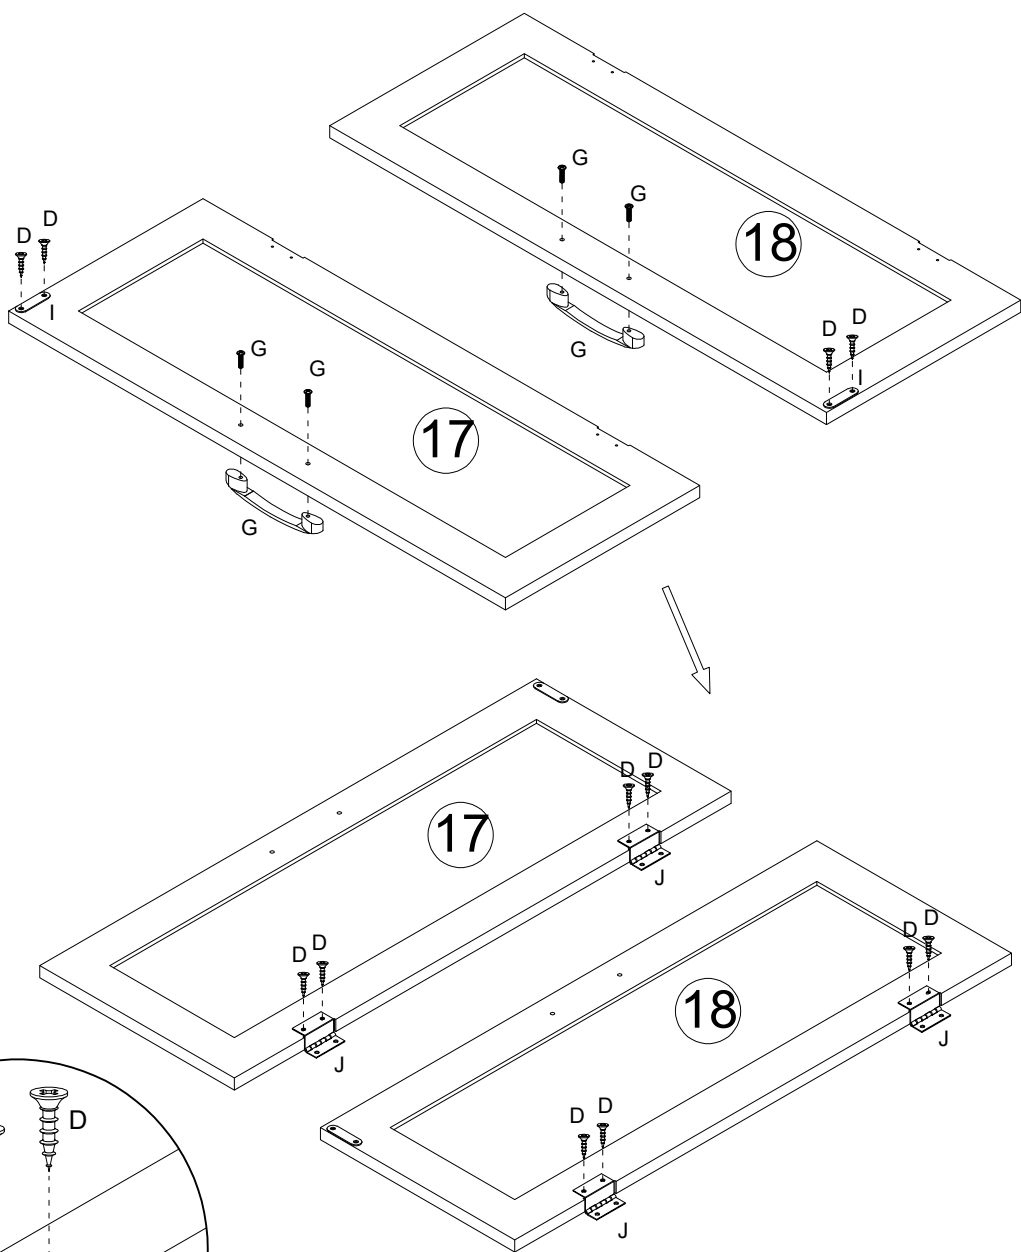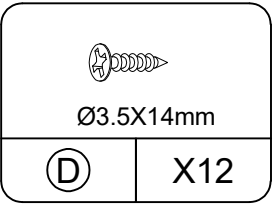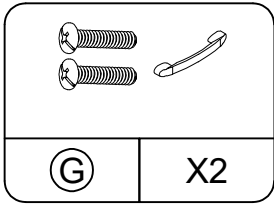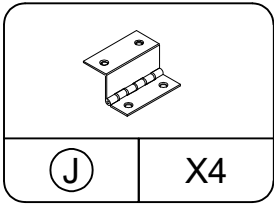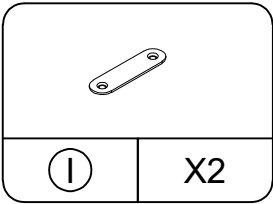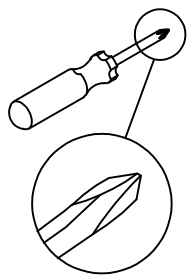




STEP 15

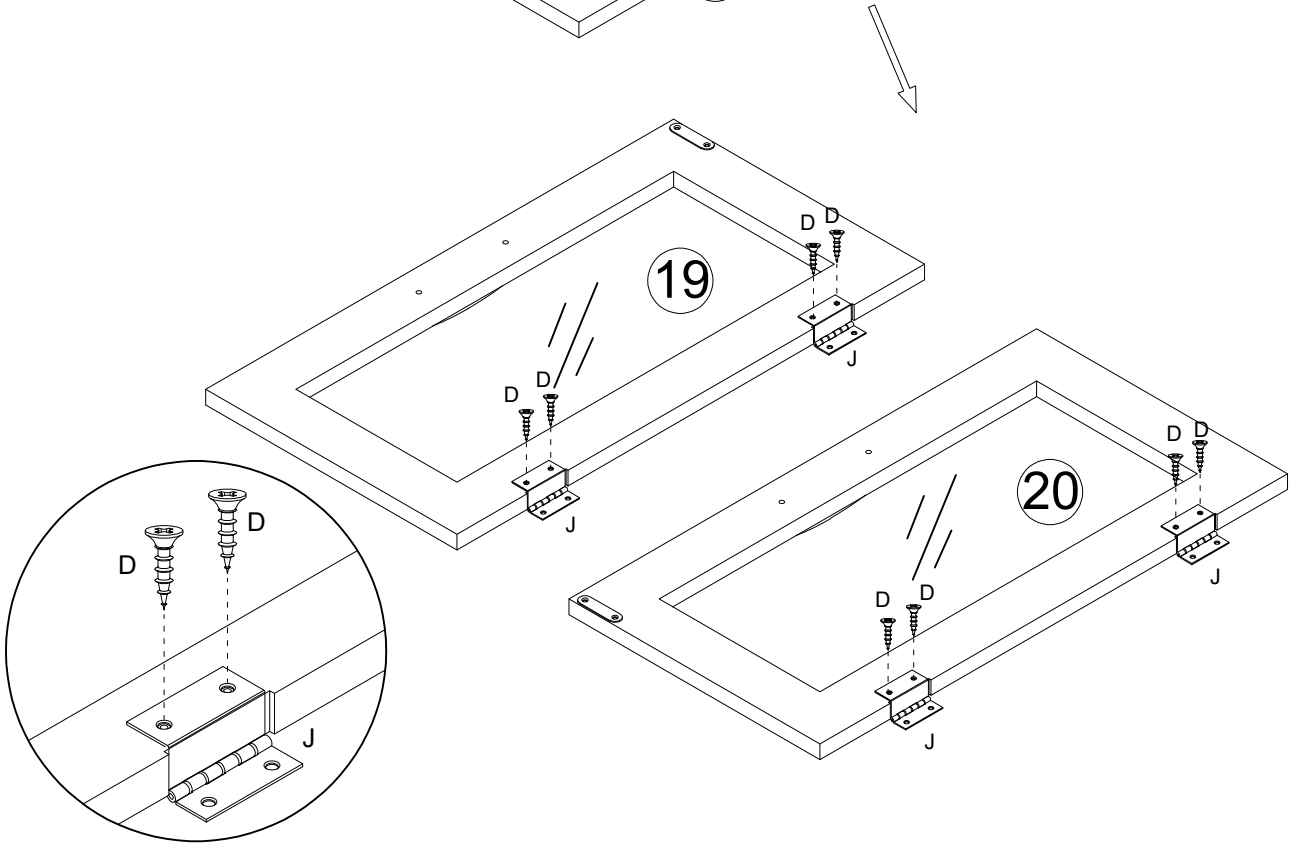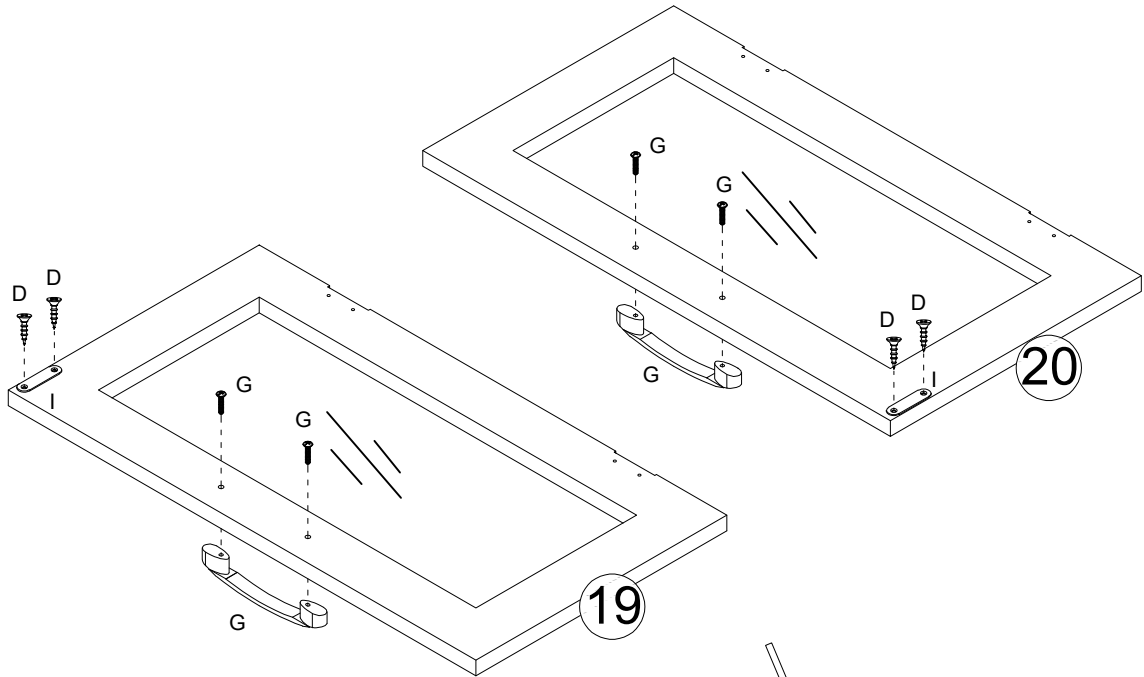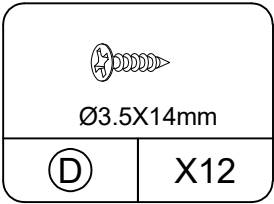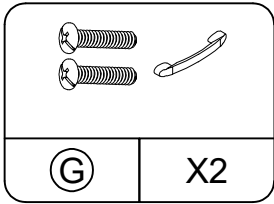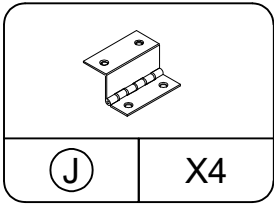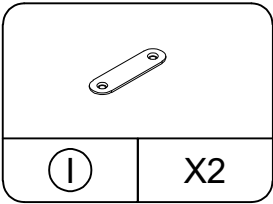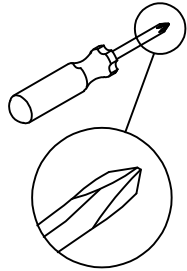

STEP 16

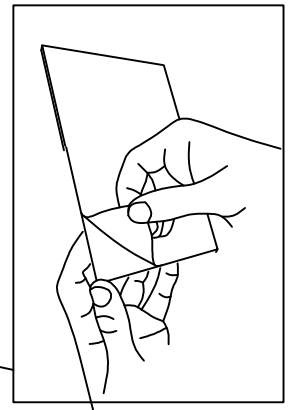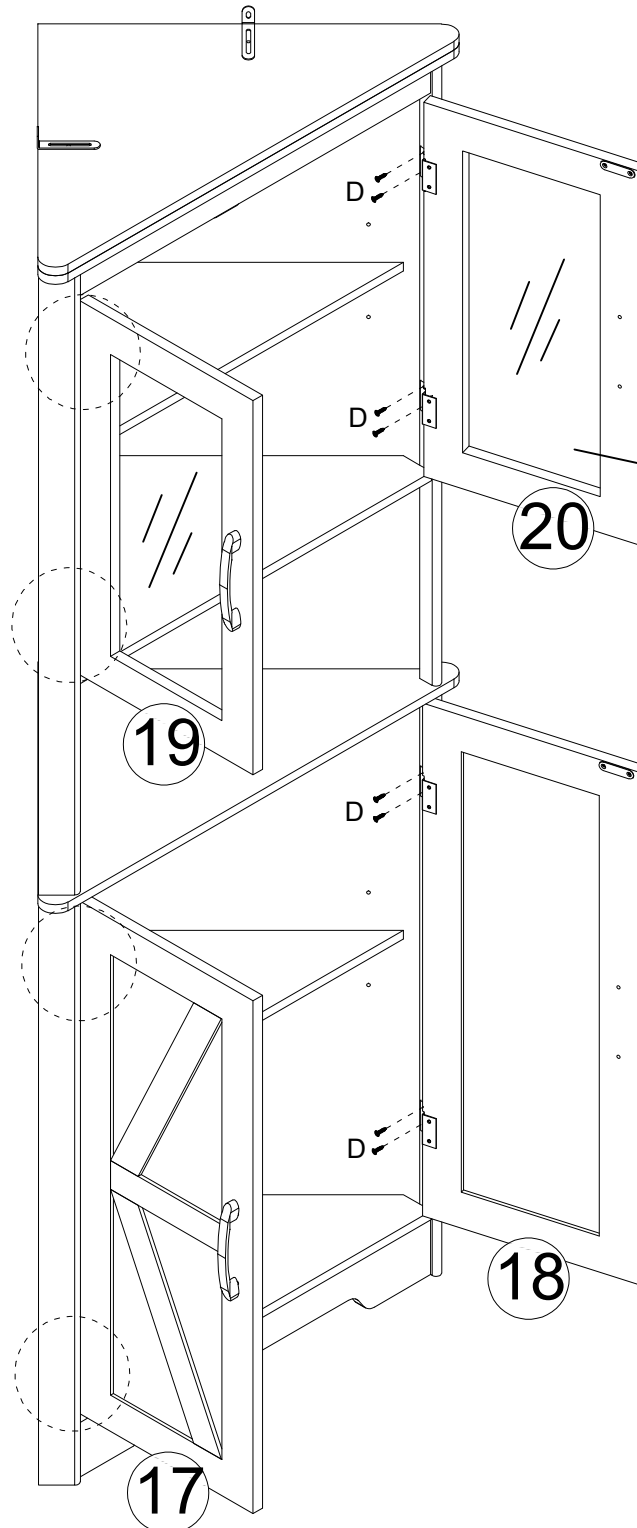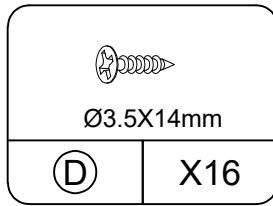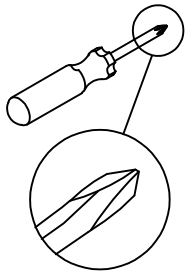

STEP18

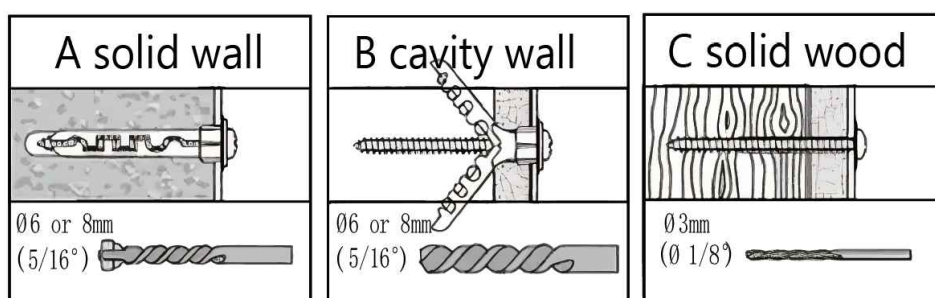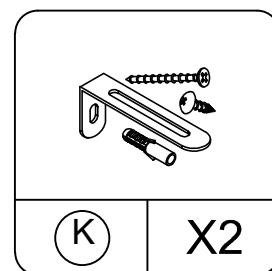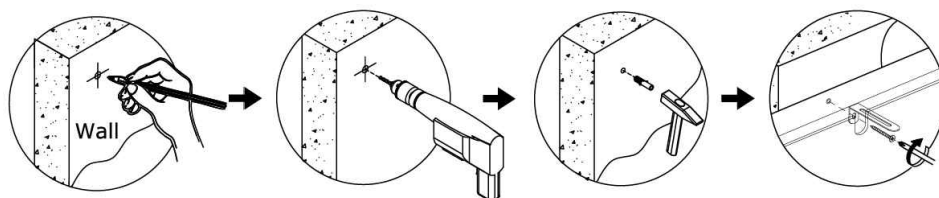

⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries.
 We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

