

NOTICE

*Please make sure that you have all the listed parts and check if they are in a good condition before you assemble this item. Please refer to parts and hardware listed below for guidance.

*This item should be assembled on a soft surface to prevent any scratch on the finish when assembling the item.

*This item may require a periodic tightening.

*If you are having difficulty in assembling the item, our friendly Customer Care team is always ready to help. Please email customersupport@safavieh.com



Item ID: DSK9400

Product Dimensions : 27.6"W X 22.4"D X 76.0"H

PREPARATION

*Before assembling the product, make sure you have all the complete parts. Compare the parts you have to the parts listed here.


*If any part is missing or damaged, do not attempt to assemble the product.

*The Estimated Time for Assembly: 10 minutes.

* Tools Required for Assembly: Allen key (included), phillips screwdriver(not Included), Drill bit 1/4" (Not Included)

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non-abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents, and abrasives. Cleaning should be done with a soft lint-free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

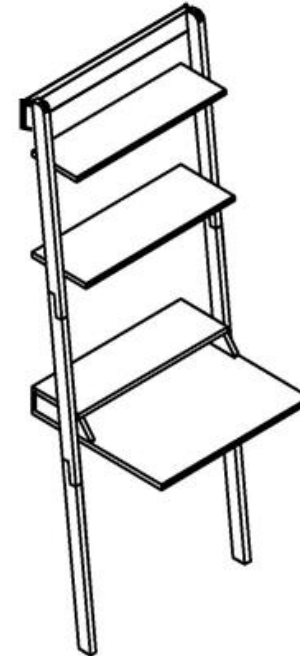

WARNING











WEIGHT CAPACITY :40 LBS PER SHELF , TOTAL WEIGHT 120 LBS MAXIMUM

WARNING :DO NOT STAND ON THE PRODUCT

WARNING : DO NOT OVER TORQUE BOLTS


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	SHELVES A		1x
B	SHELVES B		1x
C	DESK		1x
D	LEFT UPPER LEG		1x
E	LEFT MIDDLE LEG		1x
F	LEFT LOWER LEG		1x
G	RIGHT UPPER LEG		1x
H	RIGHT MIDDLE LEG		1x
I	RIGHT LOWER LEG		1x
J	TOP BAR		1x


PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	BOLT M6X35MM		14x
HW2	DOWEL 08xX32MM		12x
HW3	L PLATE		1x
HW4	FISHER S6		1x
HW5	ALLEN KEY L.4		1x
HW6	SCREW 8X1-1/4		1x
HW7	SCREW 8 x 5/8		1x
HW8	METAL PLATE		2x
HW9	SCREW 8 x 1/2		20x
HW10	LD PLATE		2x
HW11	FLAT WASHER 6MM		18x
HW12	BOLT M6 X 30		4x

PREPARATION


- * Before assembling the product, make sure you have all the complete parts. Compare the parts you have to the parts listed here.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * The Estimated Time for Assembly: 10 minutes.
- * Tools Required for Assembly : Allen key (included), phillips screwdriver(not Included), Drill 1/4" (Not Include)

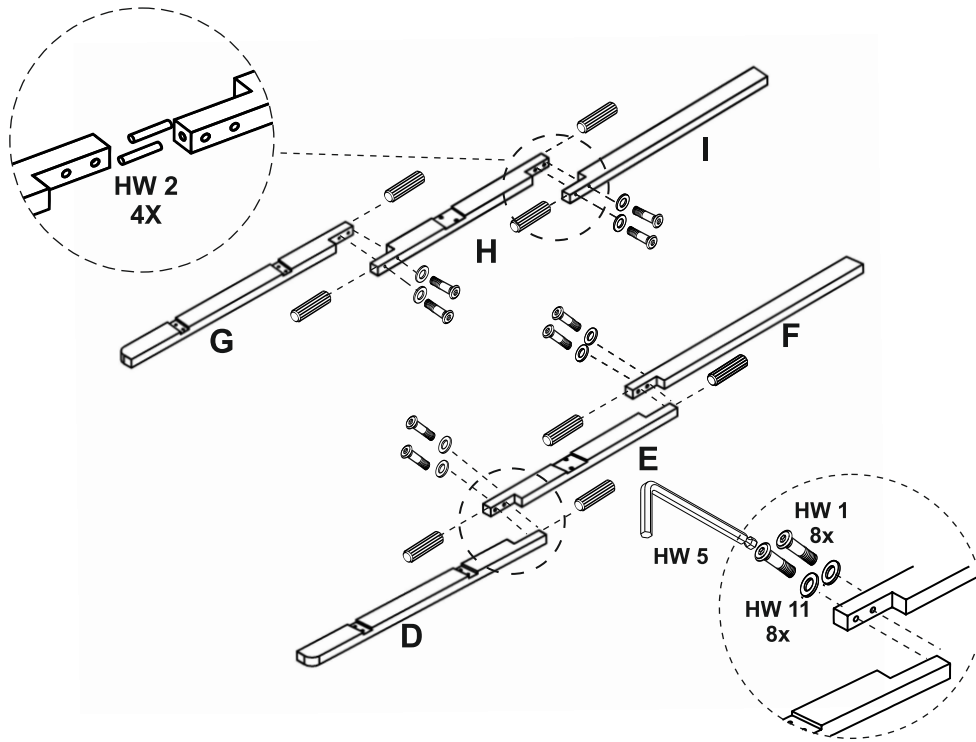


STEP 1 : ATTACH THE LEFT LEG D/E/F USING DOWEL (HW 2), BOLT (HW 1), FLAT WASHER (HW 10) TIGHTEN BOLT USING ALLEN KEY (HW 5) . REPEAT THE STEP FOR RIGHT LEG G/H/I.

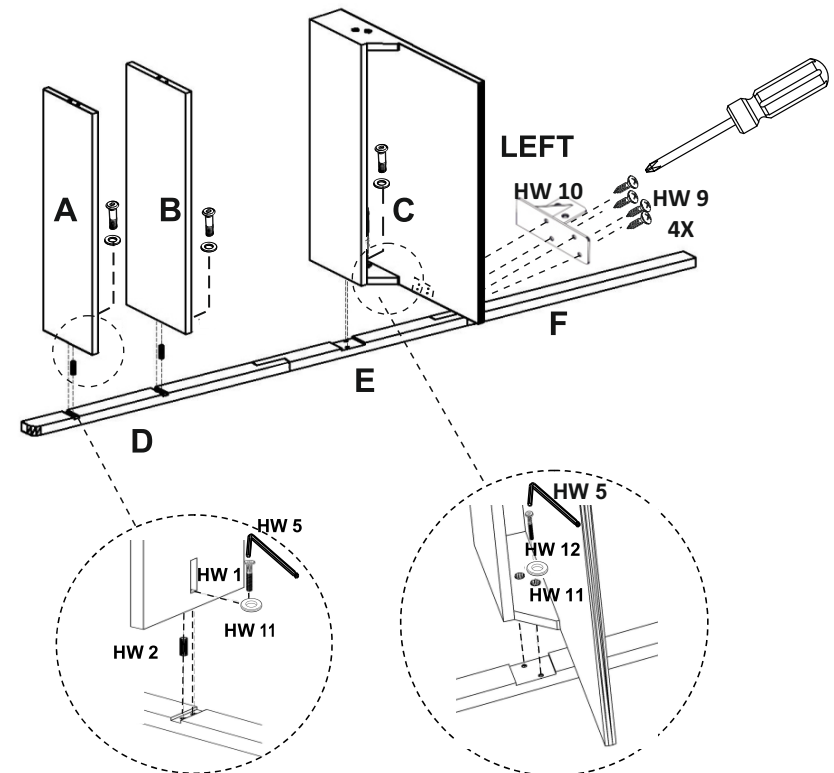

STEP 2 : ATTACH SHELF A/B TO THE LEFT LEG USING DOWEL (HW 2) , BOLT (HW 1),FLAT WASHER (HW 11) TIGHTEN USING ALLEN KEY (HW 5). AFTER THAT, ATTACH DESK TO LEFT LEG USING BOLT (HW 12), FLAT WASHER (HW 11) TIGHTEN USING ALLEN KEY (HW 5). SECURE WITH LD PLATE (HW 11) , SCREW 8X1/2" (HW 9) TIGHTEN SCREW WITH PHILLIPS SCREWDRIVER .





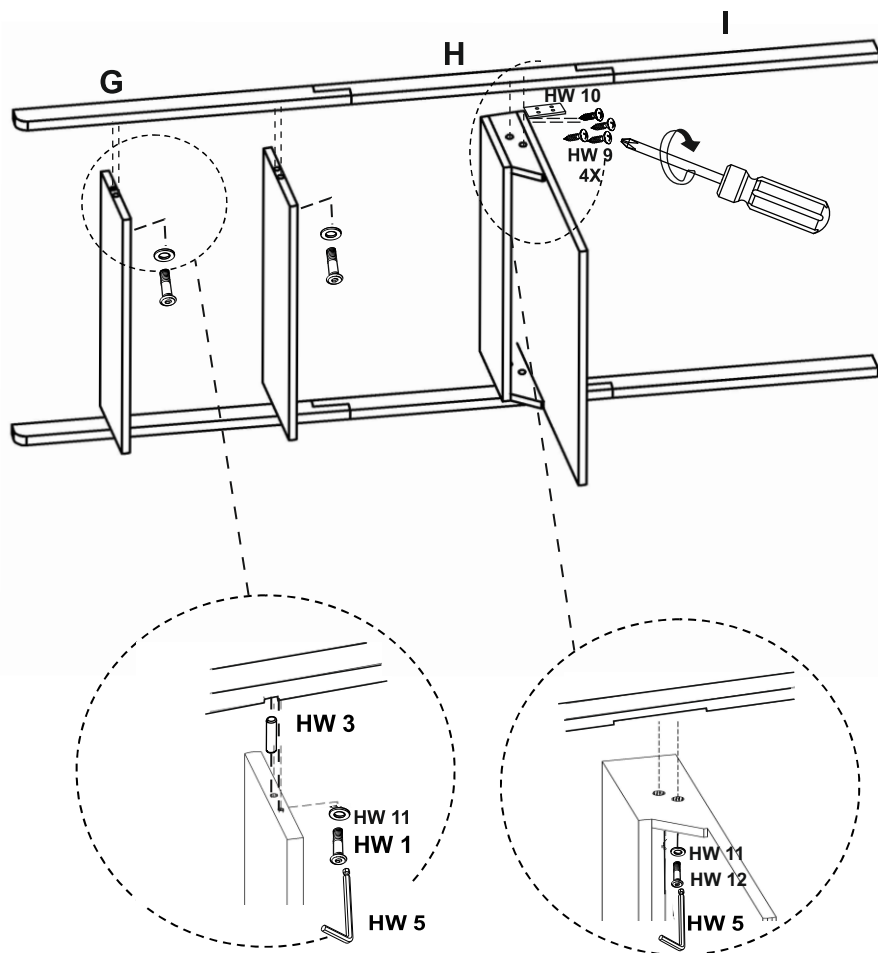


STEP 3: ATTACH SHELVES A/B TO THE RIGHT LEG USING DOWEL (HW 2) , BOLT (HW 1), FLAT WASHER (HW 11) TIGHTEN USING ALLEN KEY (HW 5). AFTER THAT , ATTACH DESK TO LEG USING BOLT (HW 12) , FLAT WASHER (HW 11), TIGHTEN USING ALLEN KEY (HW 5) . SECURE WITH LD PLATE (HW 10), SCREW 8 X 1/2" (HW 9), TIGHTEN SCREW WITH PHILLIP SCREW DRIVER

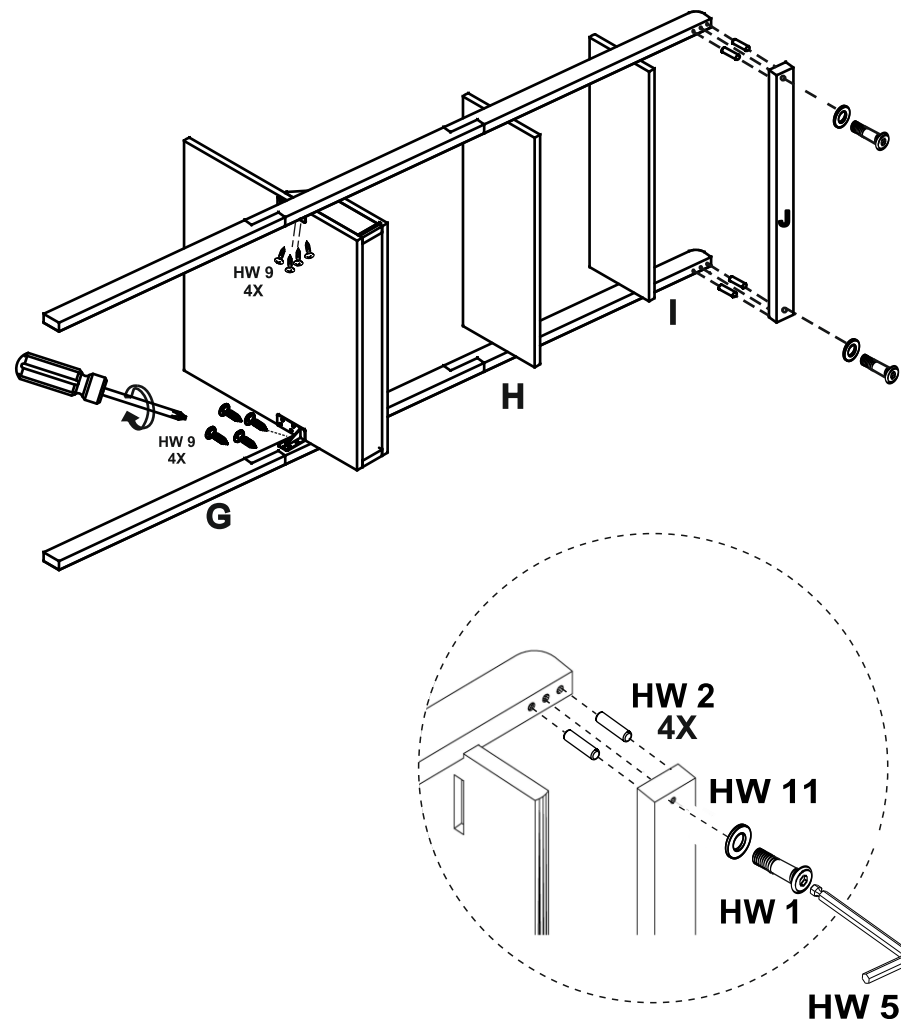


STEP 4: INSERT SHELVES TOP BAR TO LEFT / RIGHT LEG USING DOWEL (HW 2), BOLT (HW 1) , FLAT WASHER (HW 11) TIGHTEN USING ALLEN KEY (HW 5). SECURE DESK TO LEG USING LD PLATE (HW 10), SCREW 8 X 1/2" (HW 9) TIGHTEN WITH PHILLIP SCREWDRIVER.

wall

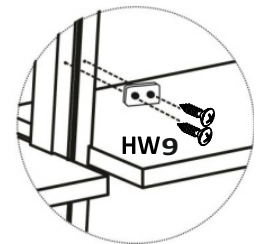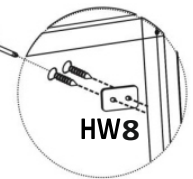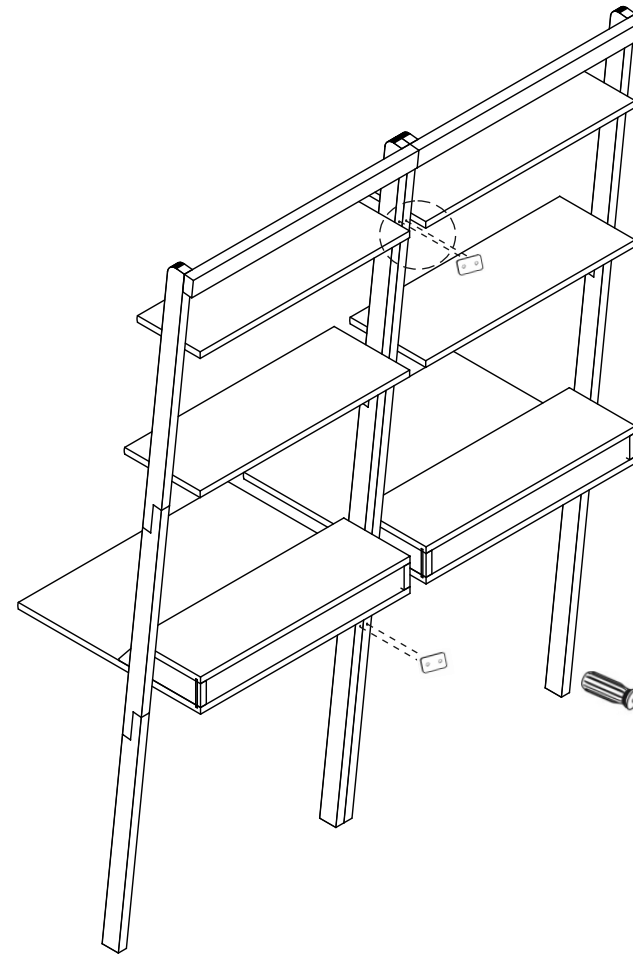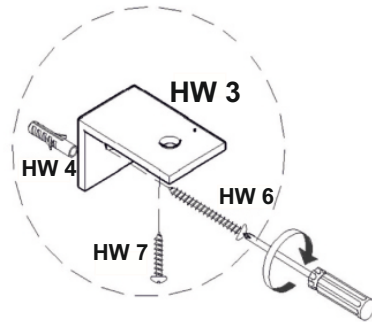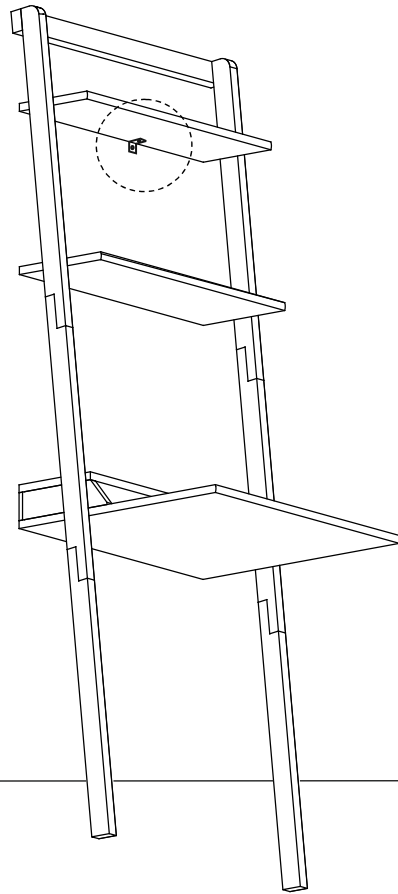

STEP 5 : SECURING THE ETAGERE FROM TIPPING WITH ANTI TIP KIT.
AFTER L PLATE (HW 3) ON SHELF A TO THE FISHER ON THE WALL WITH
SCREW 8 X 5/8" (HW 7), DRILL THE WALL WITH 1/4" DRILL BIT AND INSTALL
FISHER S6 (HW 4). ALIGN L PLATE (HW 3) ON SHELF A TO THE FISHER ON THE
WALL USING SCREW 8 X 1-1/4" (HW 6) TIGHTEN WITH PHILLIP SCREWDRIVER.

STEP 6 : THIS IS APPLICABLE ONLY TO A PAIR OF ETAGERE.
SKIP THIS INSTRUCTIONS IF YOU BUY A SINGLE ITEM .

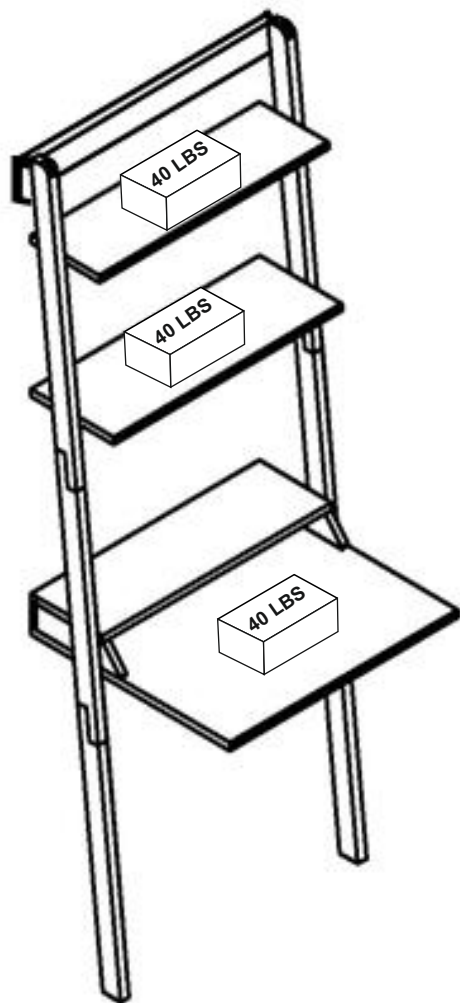

MAXIMUM WEIGHT
40 LBS PER SHELF , EVENLY DISTRIBUTED .
TOTAL WEIGHT 120 LBS MAXIMUM