

Assembly instruction sheet

1

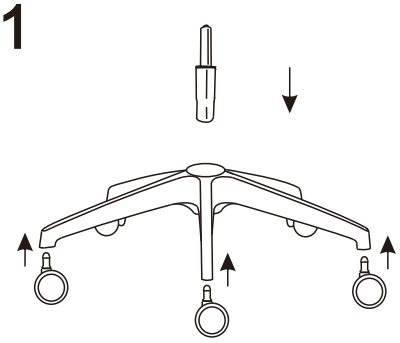


2

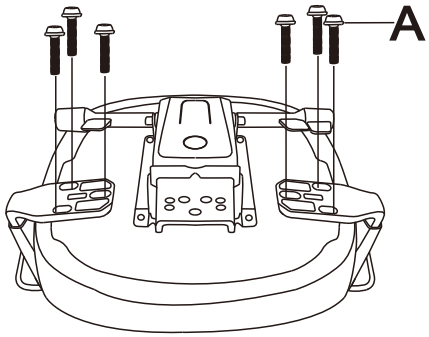

3

Place Both Brackets
Place the aluminum bracket and black bracket on the seat cushion together.
Make sure the screw holes are aligned.

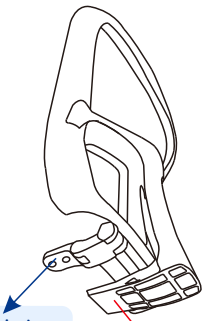


Black bracket (for screws B)

Aluminum bracket (for screws C)


4

Install all 3 screws C first.
Do not tighten fully.

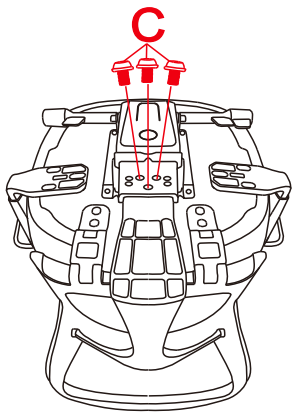


5

Install all 4 screws B.
Once all screws B are installed,tighten all screws(B and C)

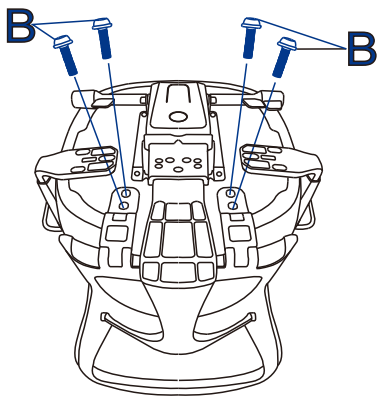





IMPORTANT: Install C first and leave loose.Then install B.
Tighten only after all B and C screware in place.

6

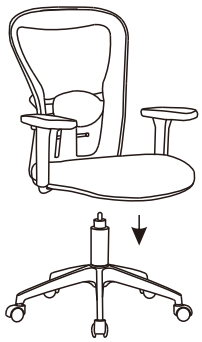

7

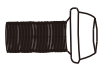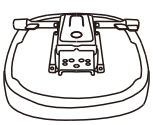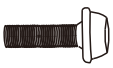

	1		2		1	 M8*20 X 3	C	 M6*35 X 6	A
	1		1		5			 M6*25 X 4	B