


WALKER EDISON

®

Kids Nightstand

SKU# WELIN012D4CO1

SKU# WELIN012D4WH1

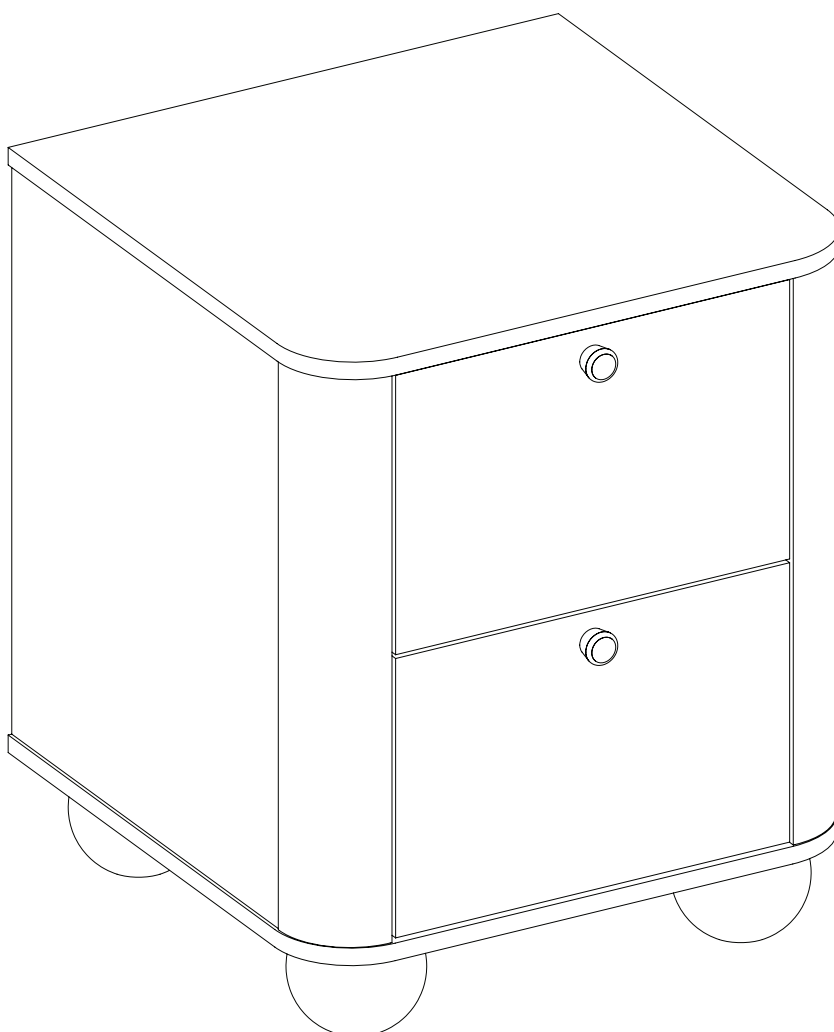

For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkerredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

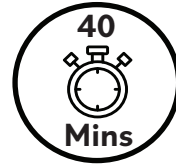

People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.

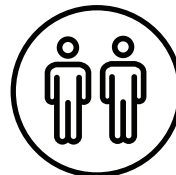

2 People Build

Tools Needed

Grab a Phillips head screwdriver to conquer this assembly.
Phillips head screwdriver is not included.



Use power tools with caution





You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.




Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
A	Bottom Panel	1
B	Left Side Panel	1
C	Right Side Panel	1
D	Foot	4
E	Back Panel	1
F	Drawer Left Side Panel	2
G	Top Panel	1
H	Drawer Right Side Panel	2
I	Drawer Back panel	2
J	Drawer Bottom panel	2
K	Drawer Face panel	2

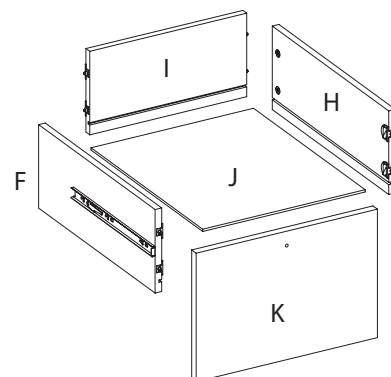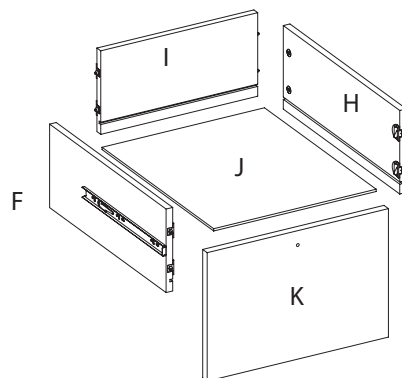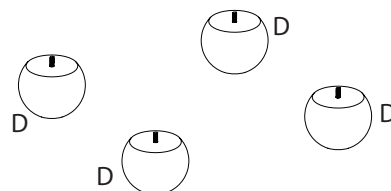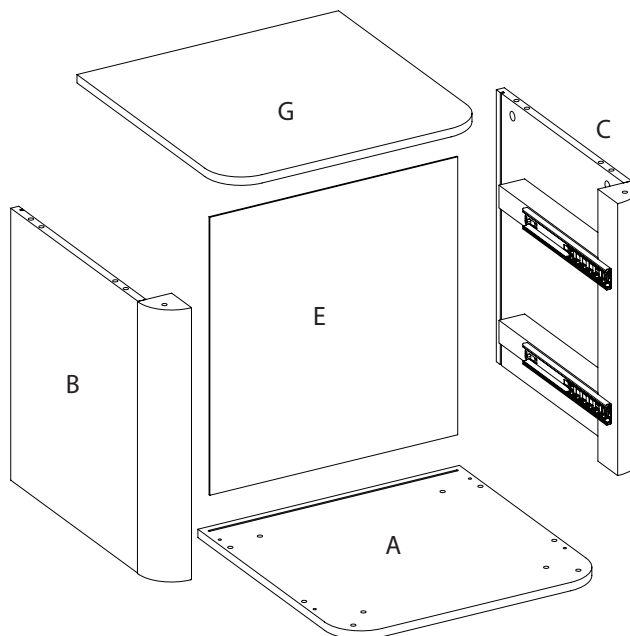



WE Hardware List

	Part	Size	Name	Quantity	Part code
AA		Ø8X30MM	Wood Dowels	12	PH-DWLNTL001
BB		Ø6X50MM	Screw	4	PC-BLTHZD6L50
CC			Hexagon wrench	1	PH-HEXKEY4MM
DD		Ø6X34MM	Cam Bolt	4	PC-KDBZNCH34
EE			Cam Lock	4	PC-KDCZNCH11
FF			Back Panel Bracket	8	PH-BKTBRW017
GG			Knob with Screw	2	PH-WELIN012D4-GG
HH			Tipping Restraint Hardware	1	PH-FTRHH510

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*




Installed Replacements Parts

Part	Size	Name	Quantity	Part code
II		1/4"-12*10 Threaded Insert	4	PH-THRZNC001
JJ		10" Drawer Slide	4	PH-WELIN012D4-JJ

Step 1

Let's get started! First, insert the wood dowels (AA) into the pre-drilled holes in the left side panel (B) and right side panel (C) as shown in the image below.

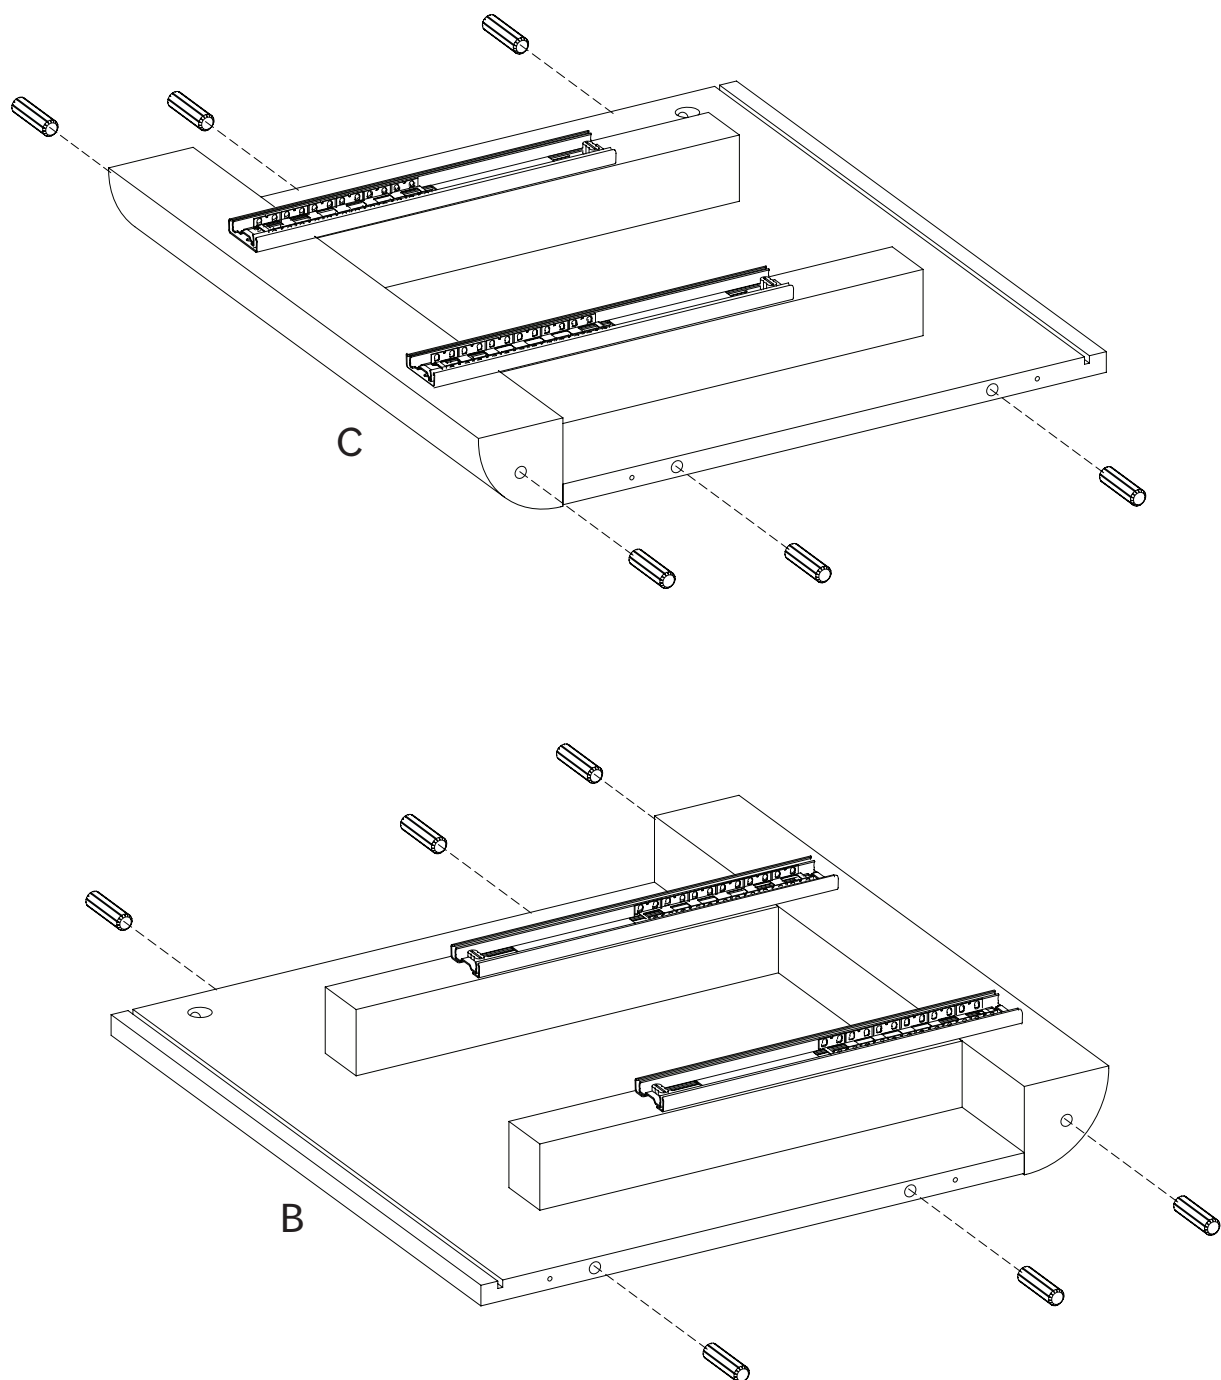


AA





[x12]

Step 2

Align the pre-drilled holes in the bottom panel (A) to the wood dowels in the left side panel (B) and right side panel (C) and attach them together. Secure everything into place using the screws (BB).

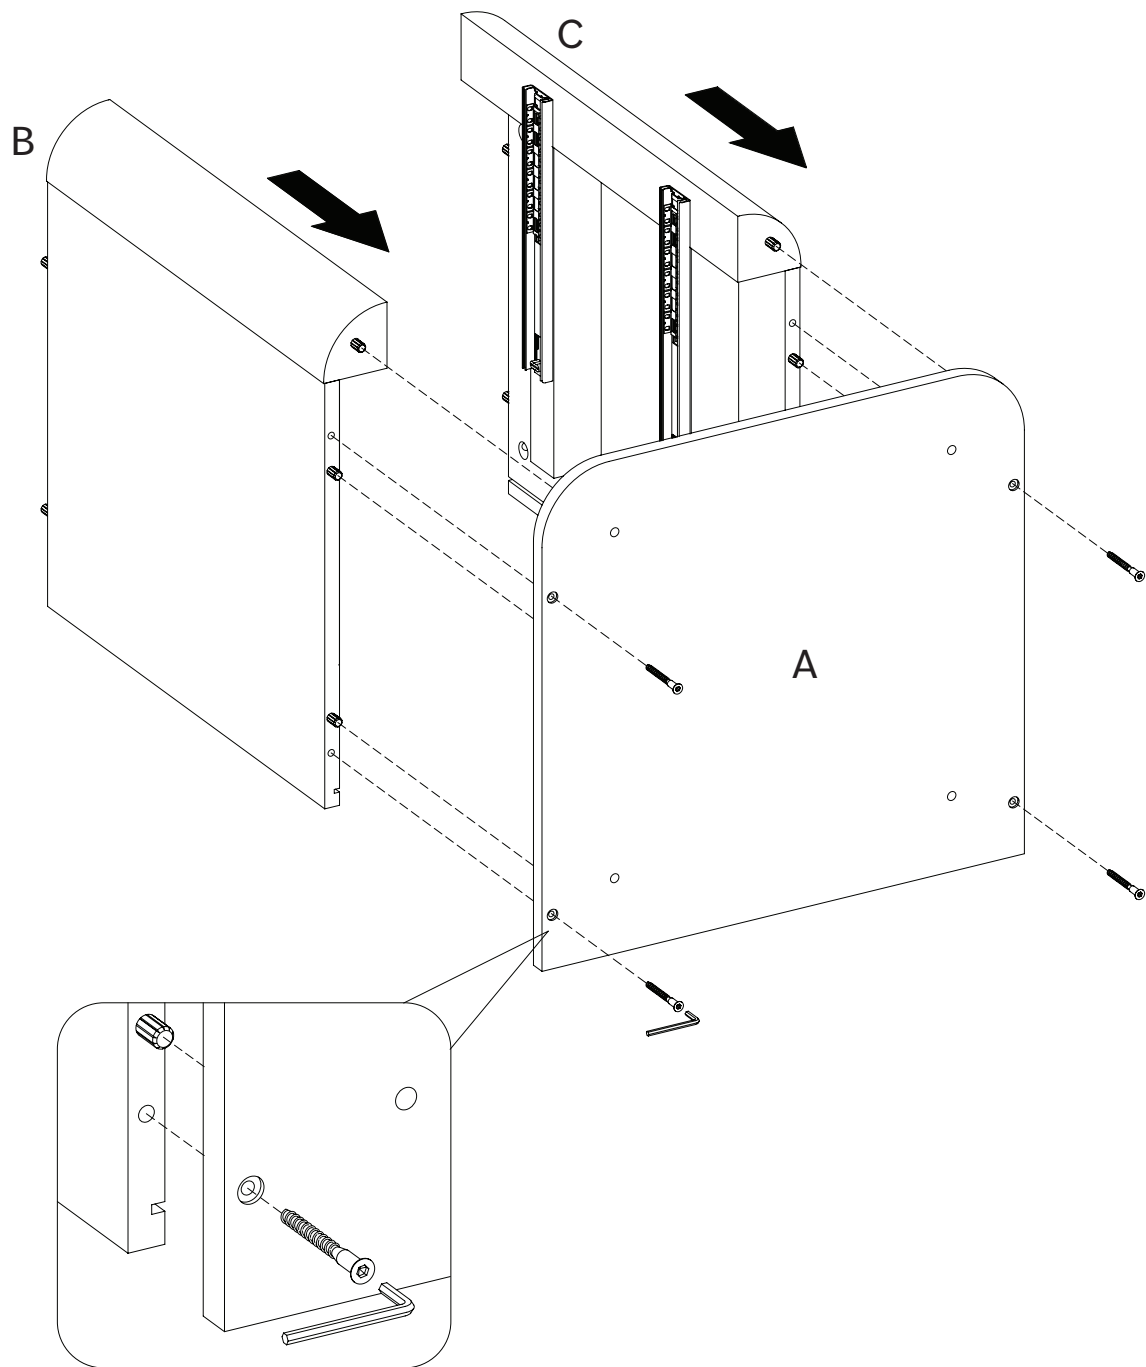


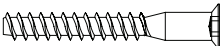BB  [x4]

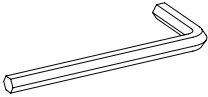CC 


Step 3

Now, let's attach the feet! Insert the feet (D) into the pre-drilled holes in the bottom panel (A) and rotate clockwise until the feet are securely fixed to the bottom panel (A).

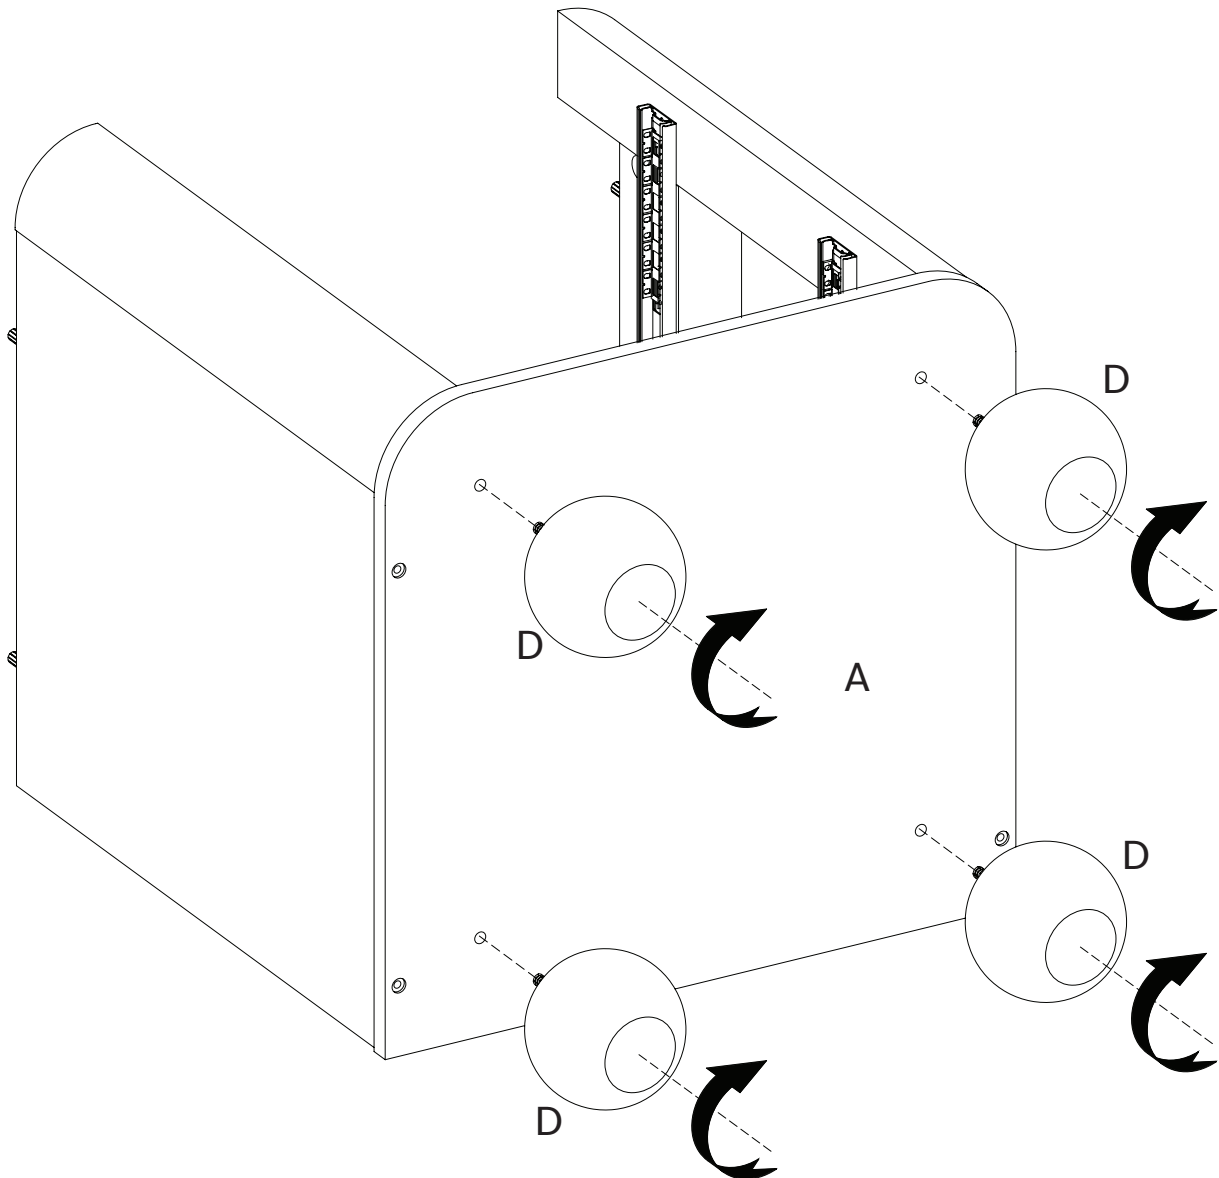


Step 4

Slide the back panel (E) into position as shown.

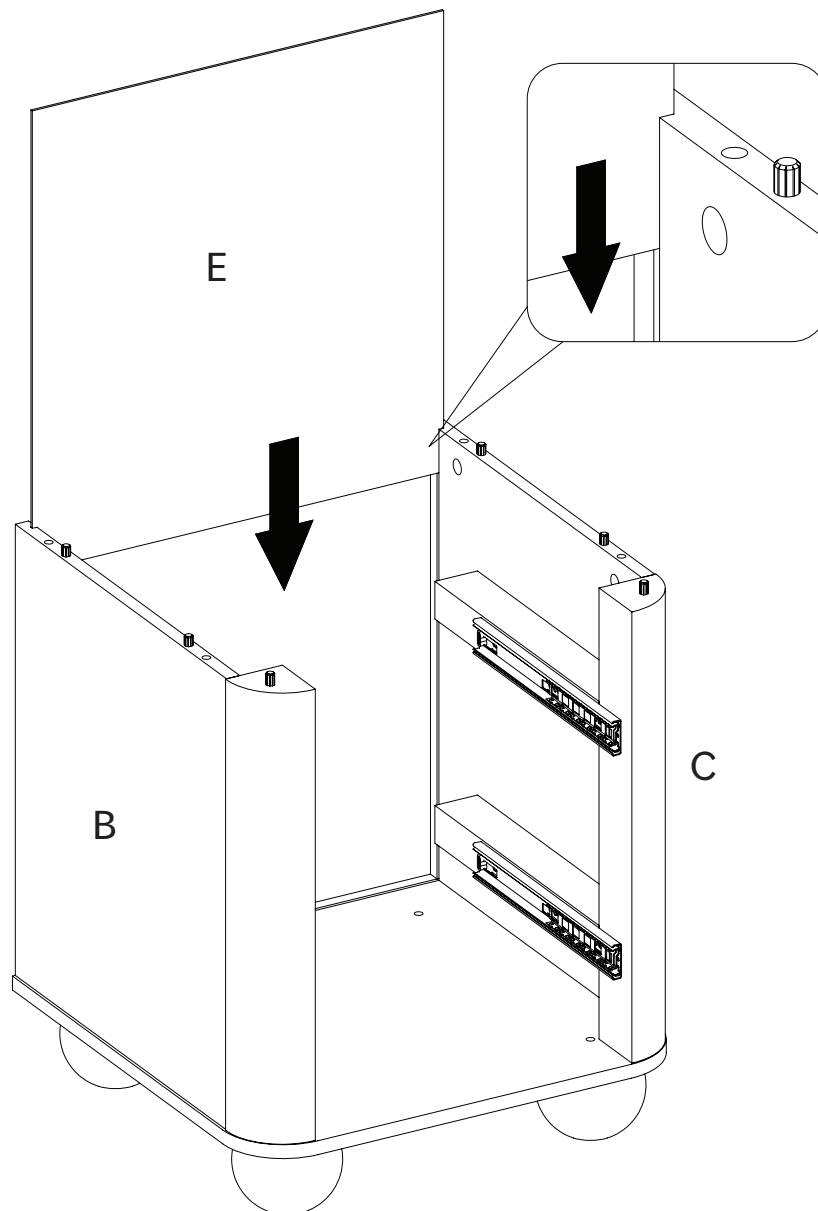


Step 5

Screw the cam bolts (DD) into the pre-drilled holes into the top panel(G).

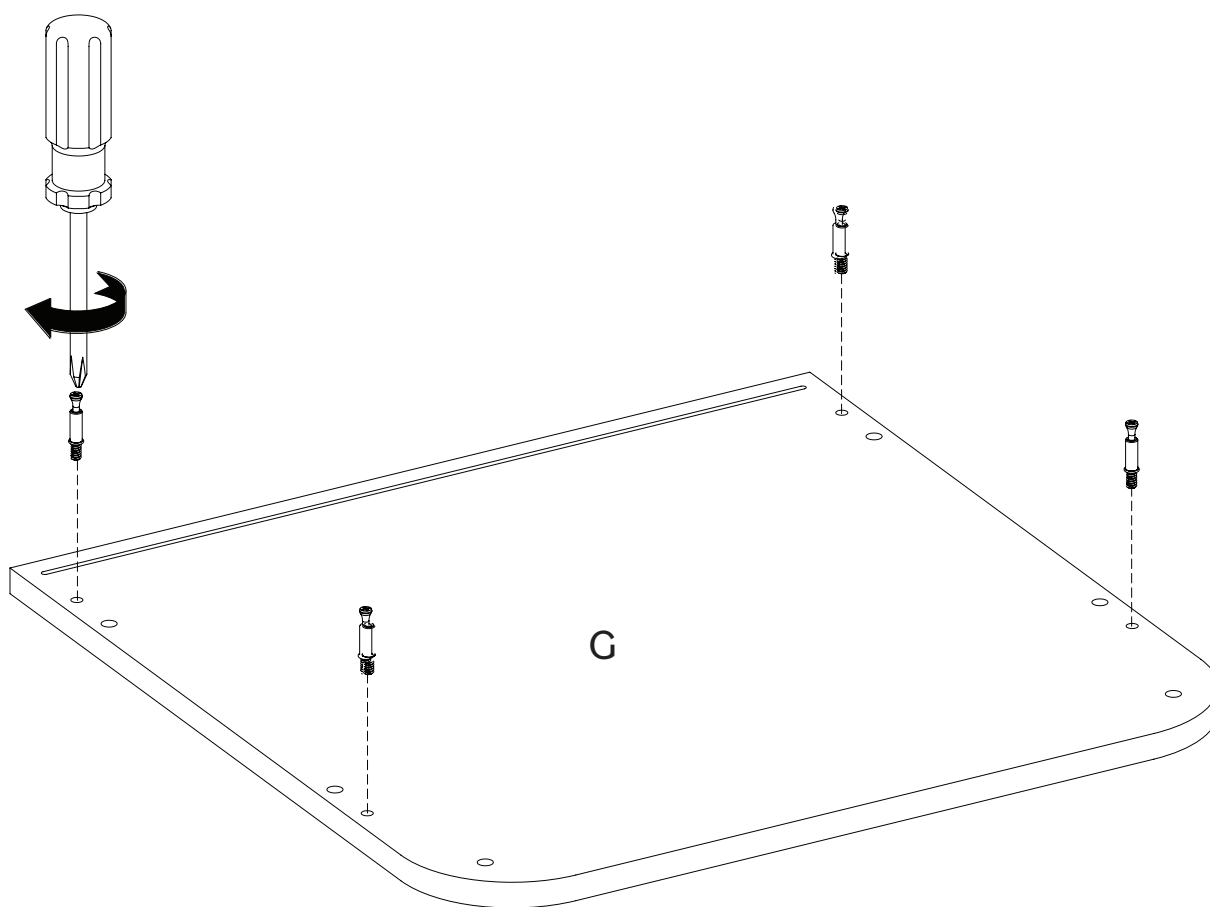



DD

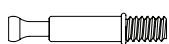

[x4]

Step 6

Flip the top panel(G) over, align the cam bolts to the pre-drilled holes and attach the top panel (G) to the main assembly using the cam locks (EE).

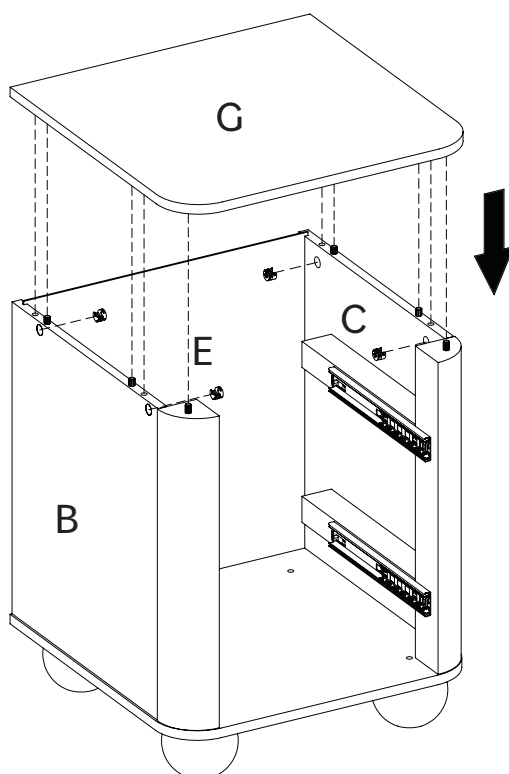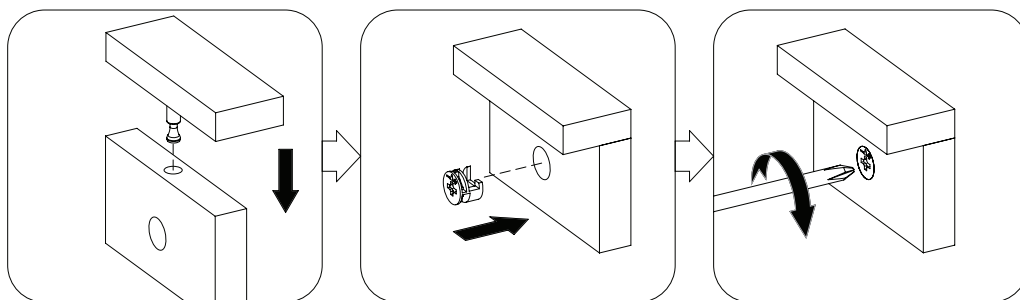



EE




[x4]

Step 7

Place the back panel bracket (FF) between the back panel and the grooves of the assembly as shown. Fasten each back panel bracket (FF) using pre-attached screws.

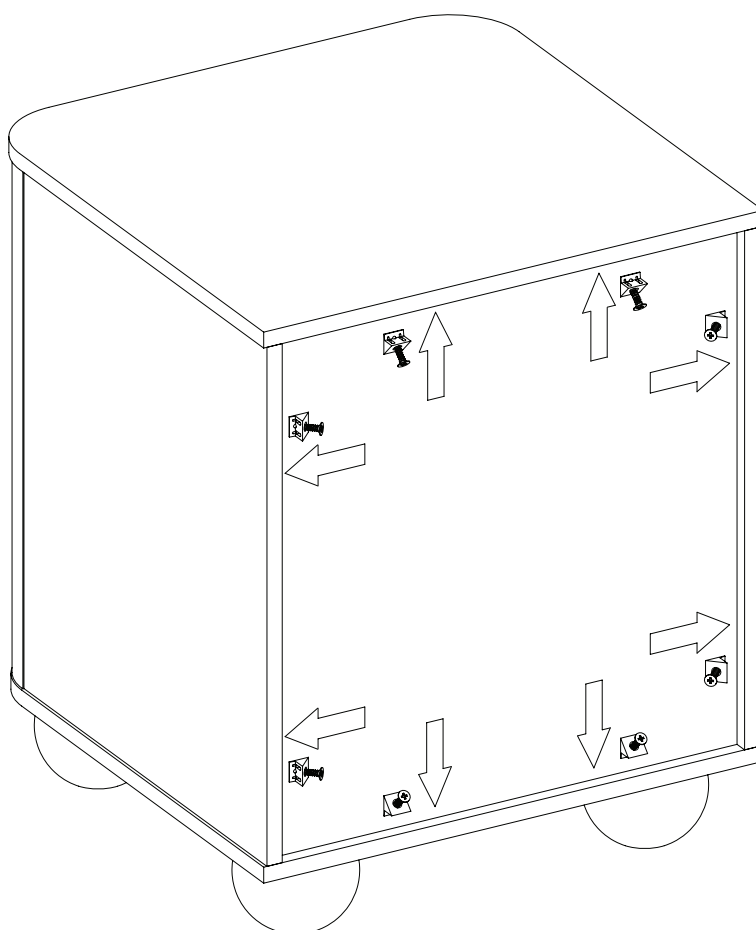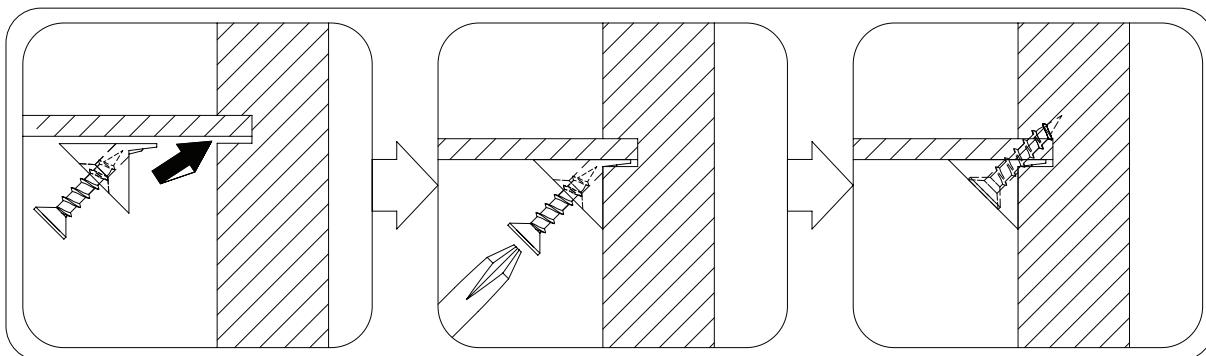



FF

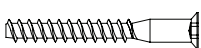

[x8]



Step 8

We're almost done! Now it's time to assemble the drawers. Following the directions of the arrows below, push the tabs up before attaching the drawer left side panel (F) and drawer right side panel (H) to the drawer back panel (I). Once the panels are in place, push the tabs back down.

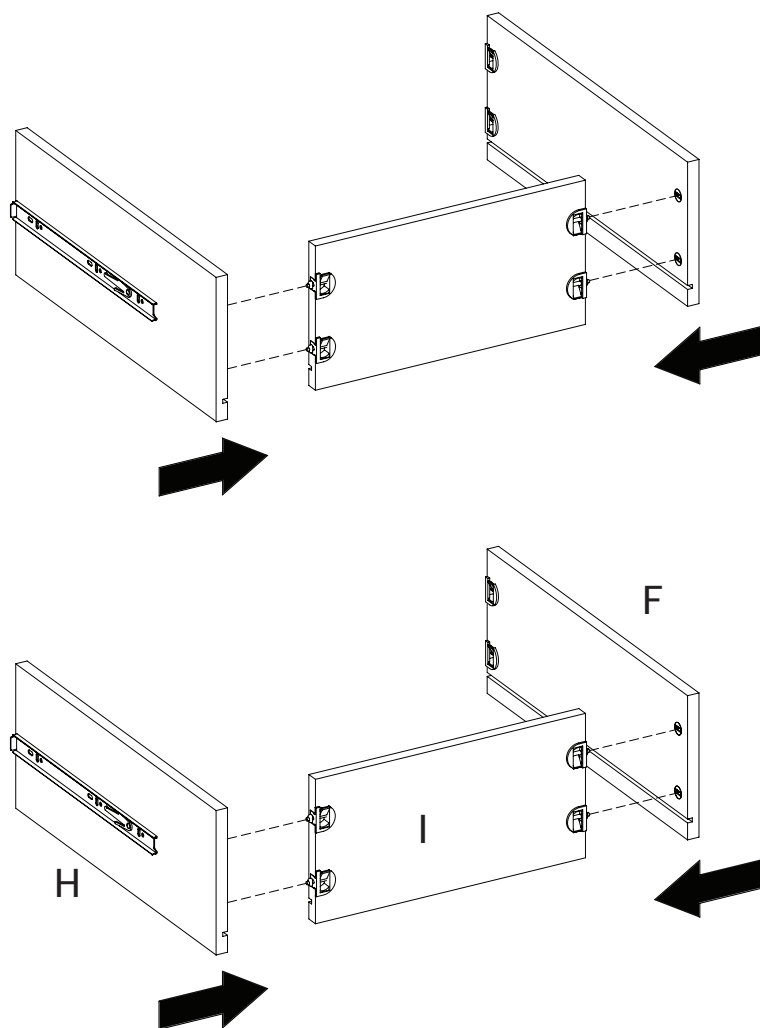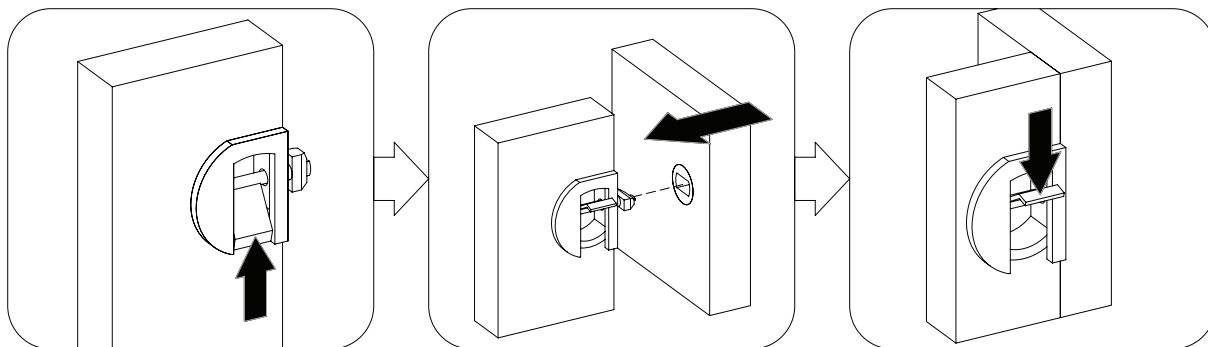




Step 9

Slide the drawer bottom (J) down into place.

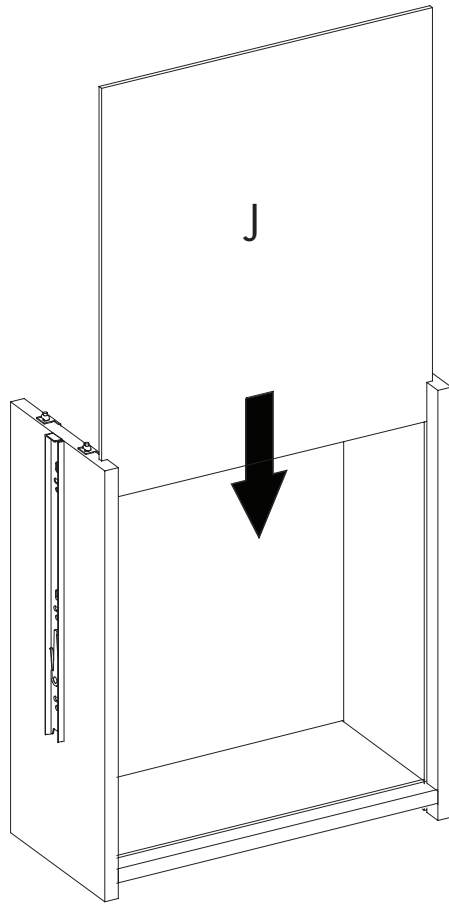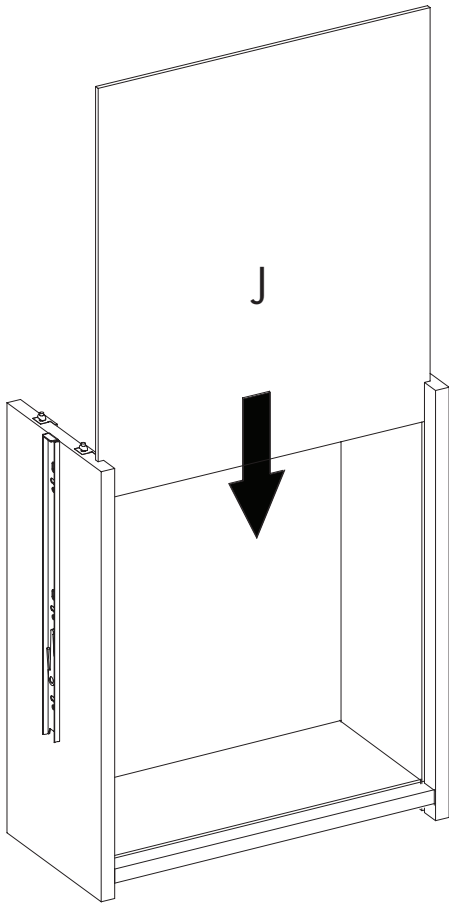


Step 10

Again, following the directions of the arrows below, push the tabs up before attaching the drawer face panel (K) to the drawers. Then push the tabs forward to secure them in place.

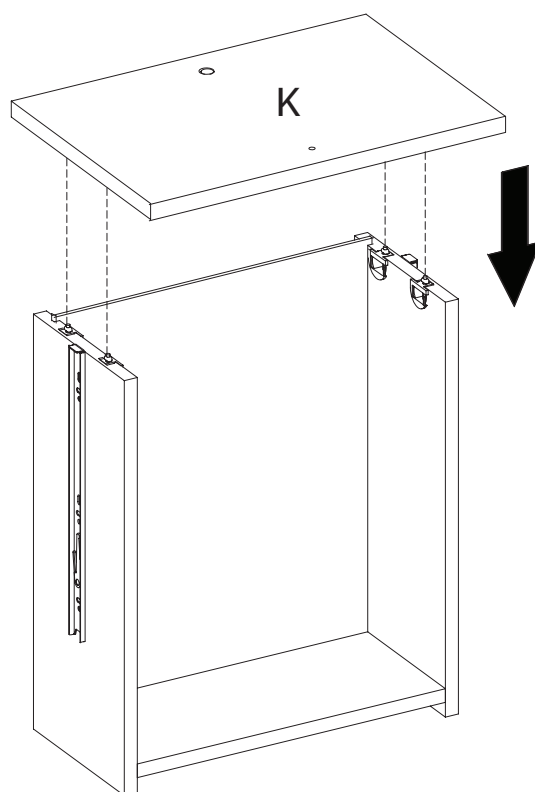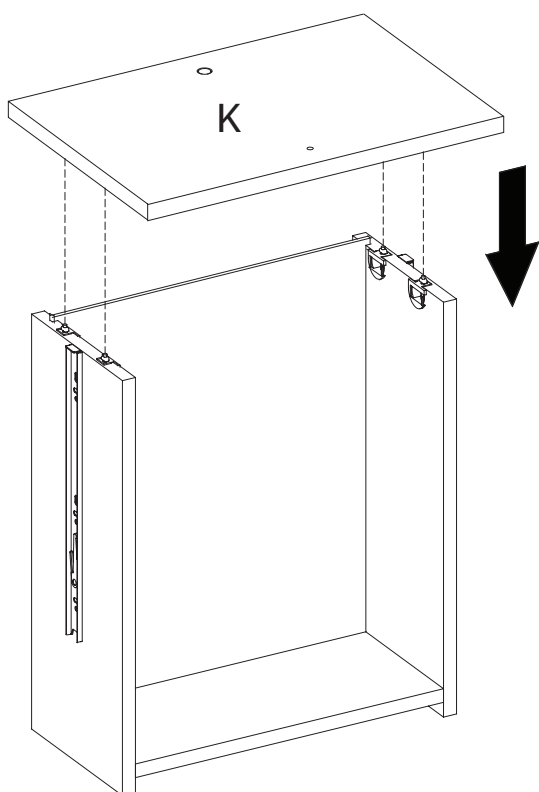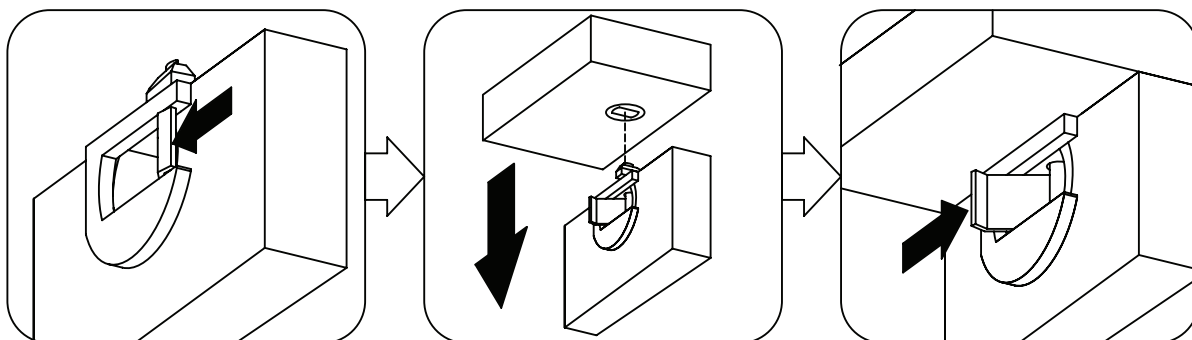

Step 11

Let's attach the handles. Align the handle (GG) to the pre-drilled holes on the outside of the drawer and insert the screw on the other side to secure it in place. Please repeat this process with the other drawers.

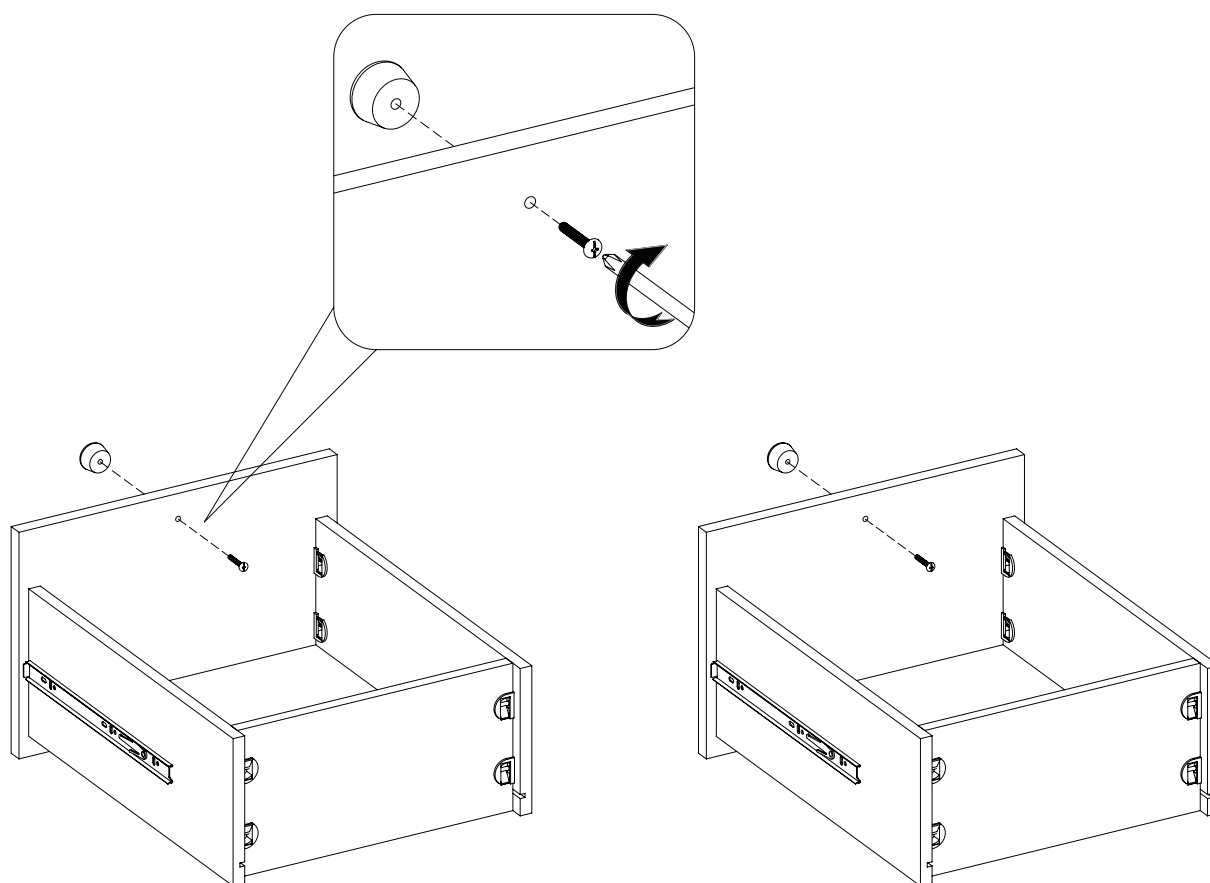



GG



[x2]


Step 12

Now, align the slider brackets to the slider arms and glide the drawers closed.

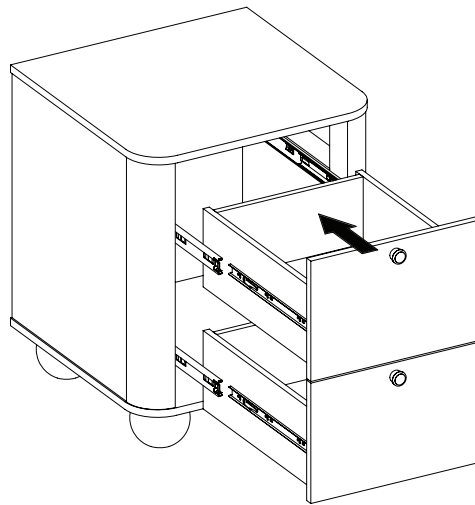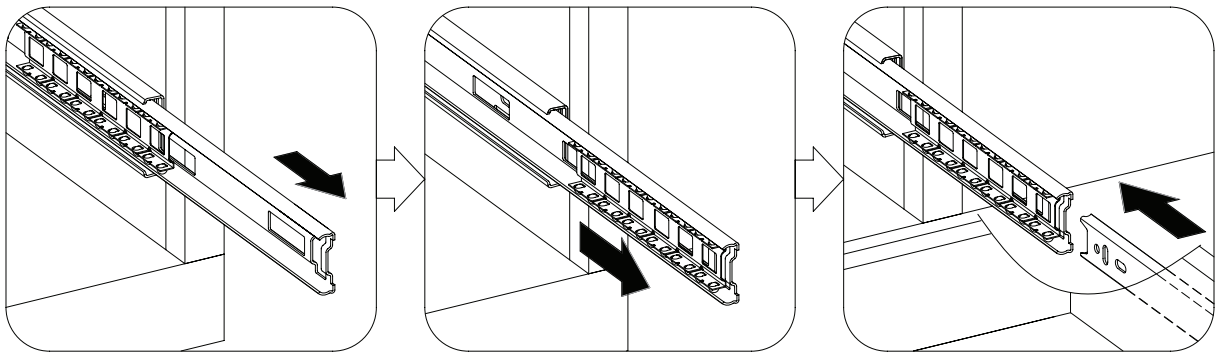

Step 13

Attach the tip-restraint hardware (HH) to the back before securing it to the wall, as shown below.

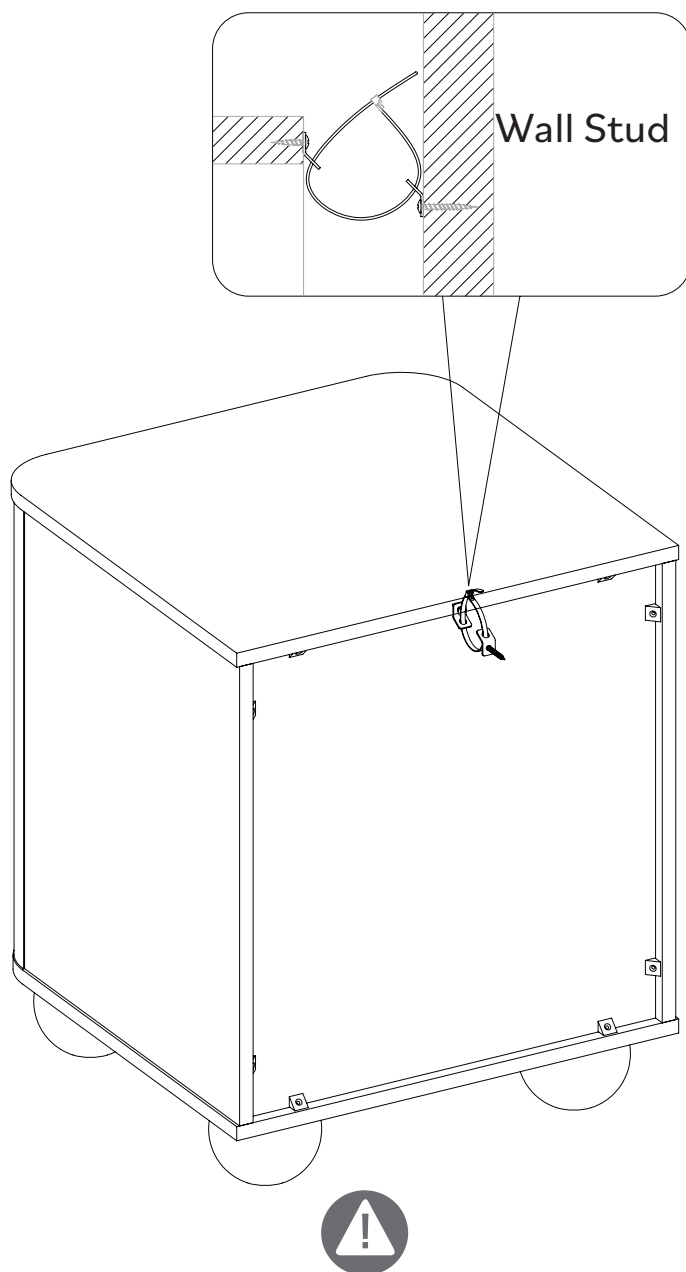


Warning: You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

HH



[x1]

Final Assembly

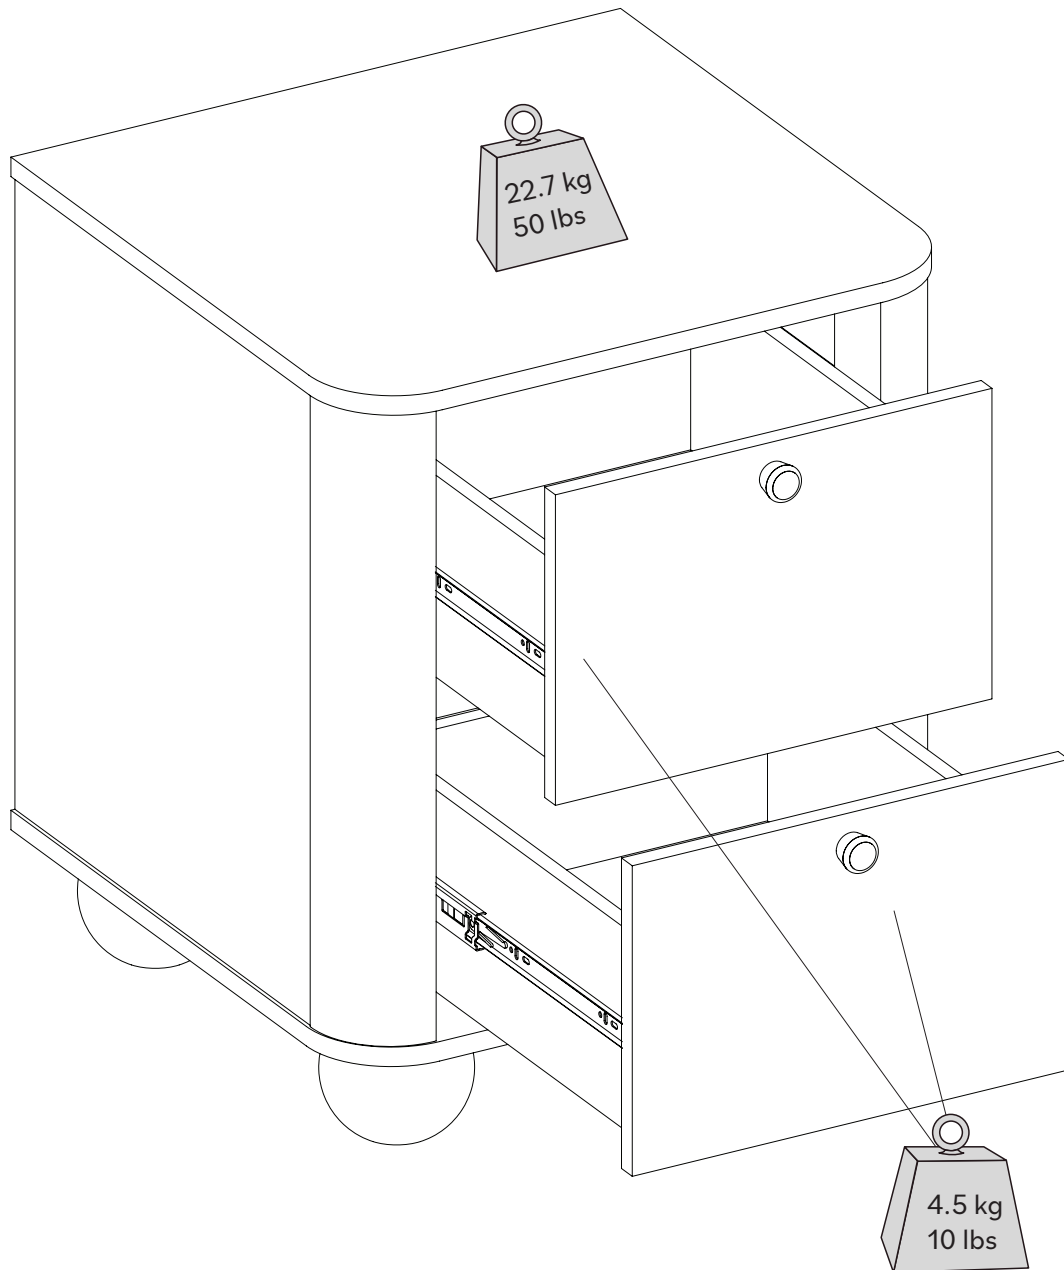

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkerredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

