

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: CB30D-LCH/CB30D-MHG/
CB30D-BE/CB30D-RC/CB30D-WHT

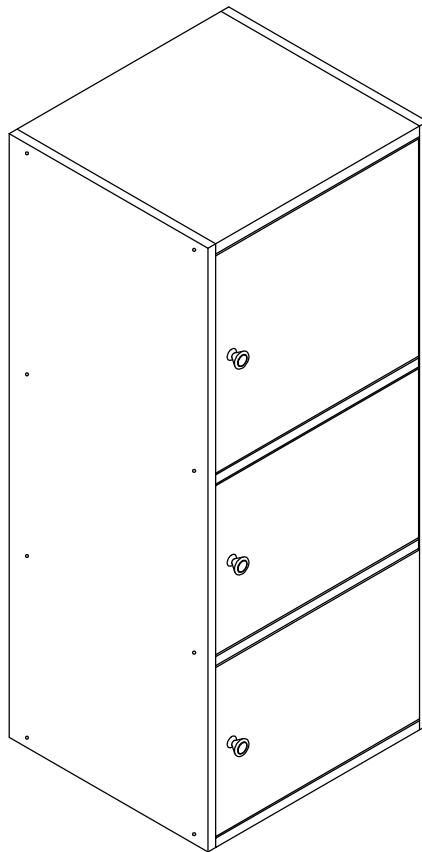

PARTS IDENTIFICATION




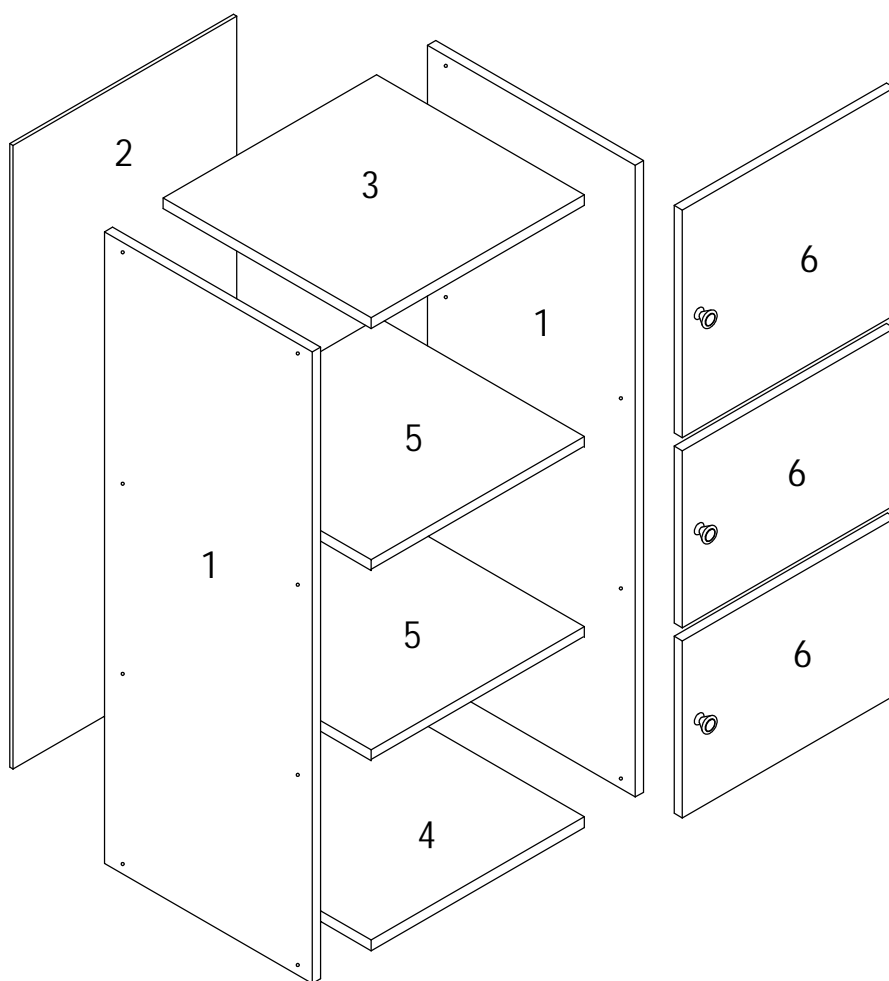











ITEM#: CB30D-LCH/CB30D-MHG/
CB30D-BE/CB30D-RC/CB30D-WHT



(1)	2pcs	(5)	2pcs
(2)	1pcs	(6)	3pcs
(3)	1pc		
(4)	1pc		


HARDWARE IDENTIFICATION

ITEM#: CB30D-LCH/CB30D-MHG/
CB30D-BE/CB30D-RC/CB30D-WHT

A		ø4x35	16pcs
B			40pcs
C		ø5	3pcs
D		ø4x25	3pcs
E			3pcs
F			3pcs
G		ø3x16	6pcs
H		ø3x14	6pcs
I		ø8x25	8pcs
J		197×5×1	1pc
K		ø4×25	1pc
L		ø5×40	1pc
M		ø8×40	1pc
N		12×12×1	2pcs
O		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTION

ITEM#: CB30D-LCH/CB30D-MHG/
CB30D-BE/CB30D-RC/CB30D-WHT

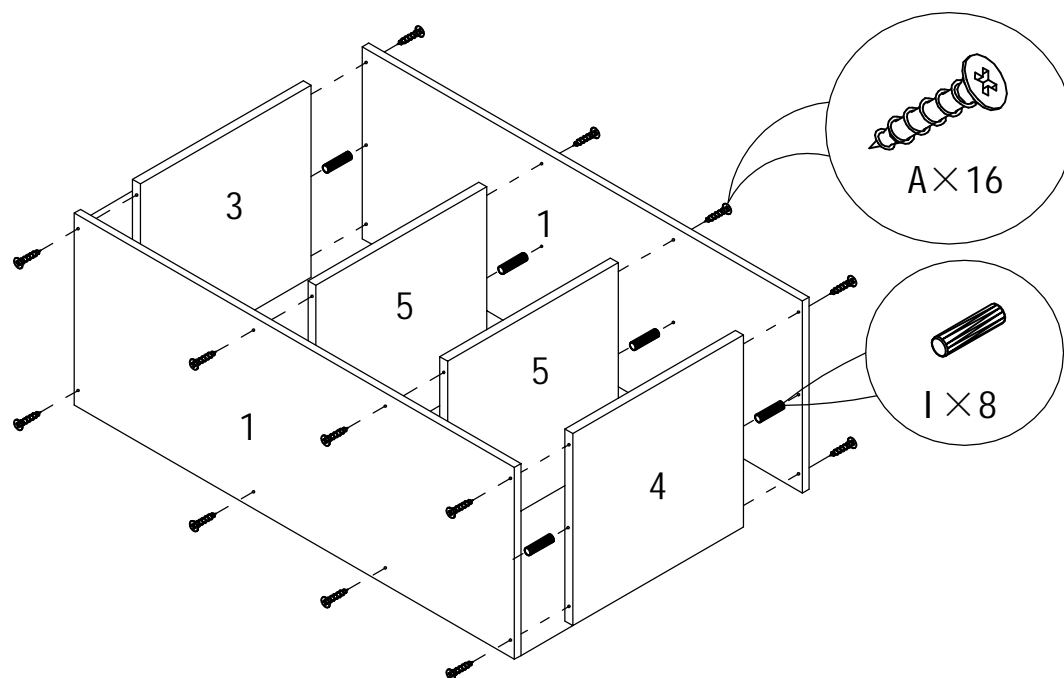


STEP1

STEP2

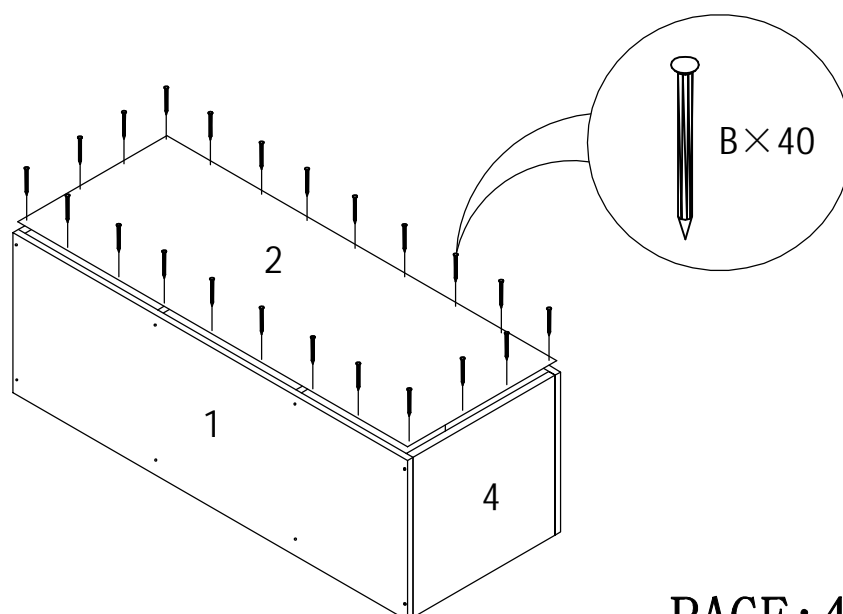


ASSEMBLY INSTRUCTION

ITEM#: CB30D-LCH/CB30D-MHG/
CB30D-BE/CB30D-RC/CB30D-WHT

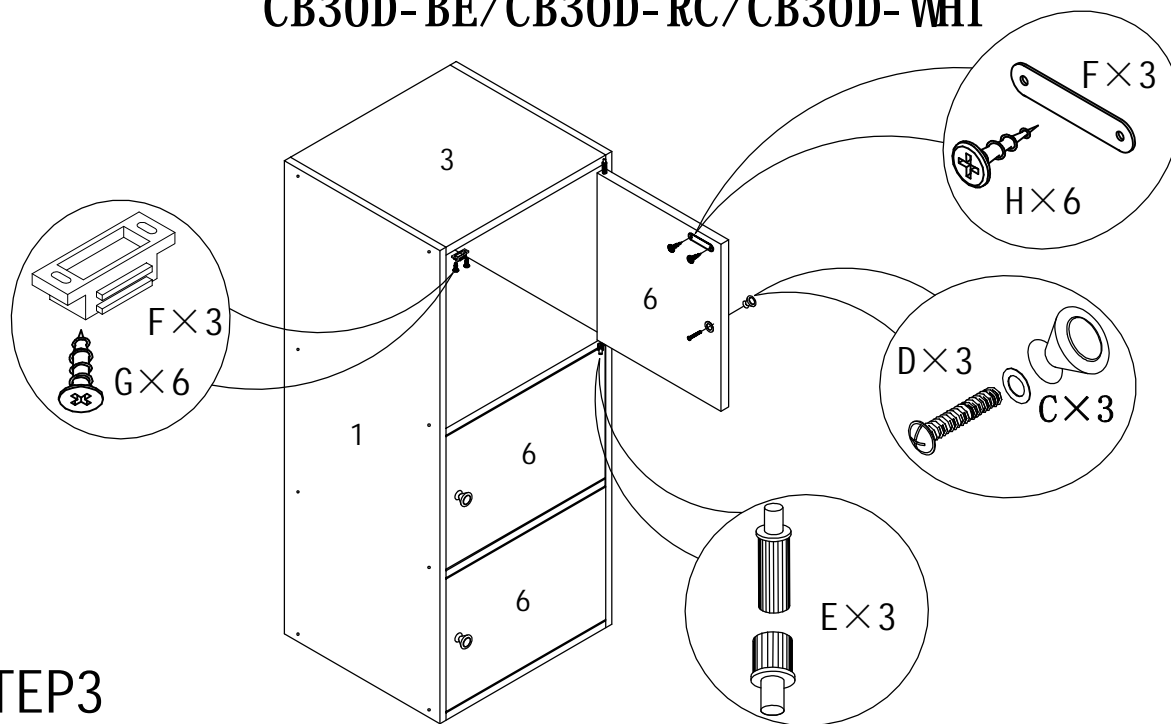

STEP3

STEP4

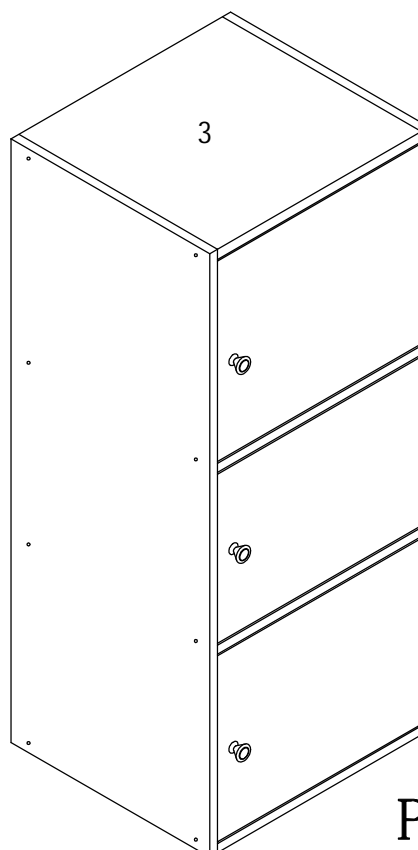


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

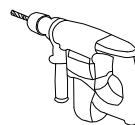


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

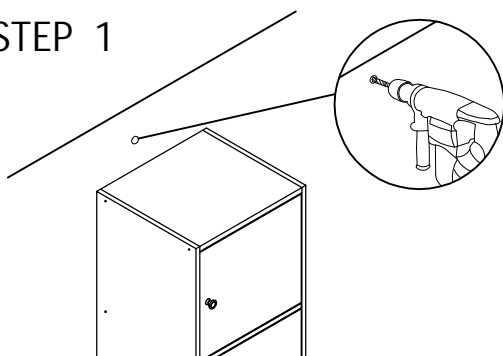


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

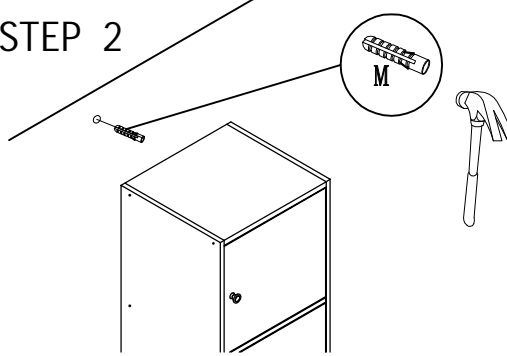


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

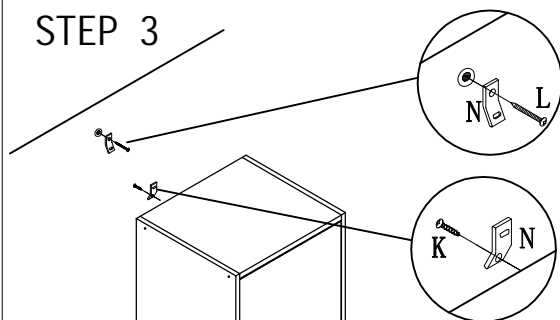

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

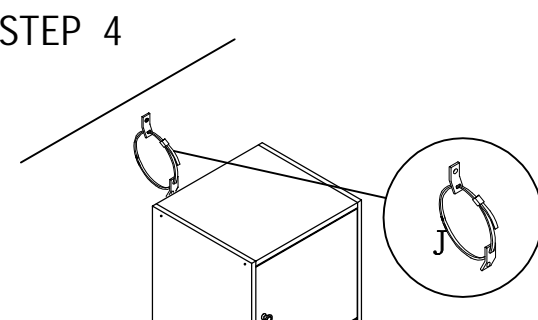

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.