


BED

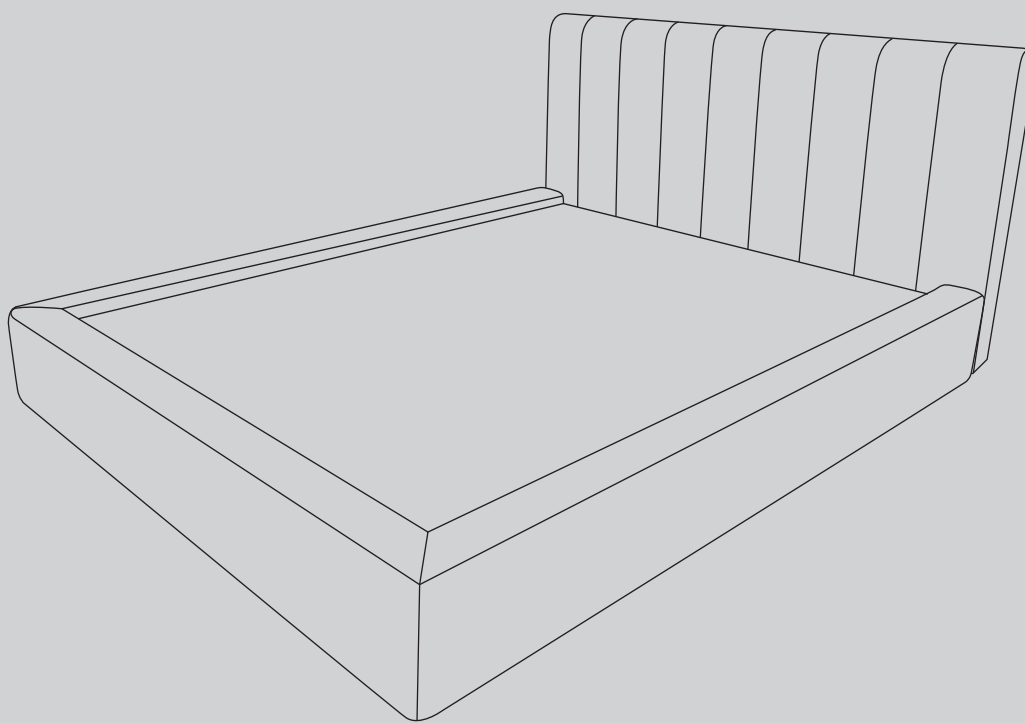

Helpful Hints

1.Regarding the recovery time of the compressed bed :

It will recover to 95% of its original state about **72 hours**.

Please wait patiently for its amazing full recovery.

2. Different lighting conditions and different display devices




may cause color differences. We hope you understand.

Customer Service



Returning and shipping large furniture items can be difficult,
so we kindly request that you contact us if you have any questions.
We will provide professional customer service solutions.

Assembly Instructions






1

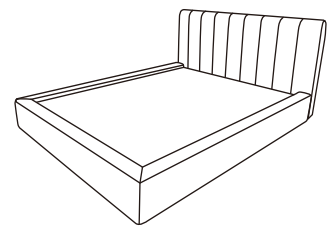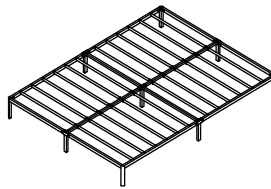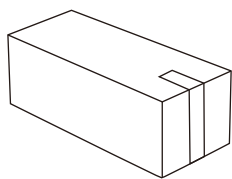

Assembly Instructions

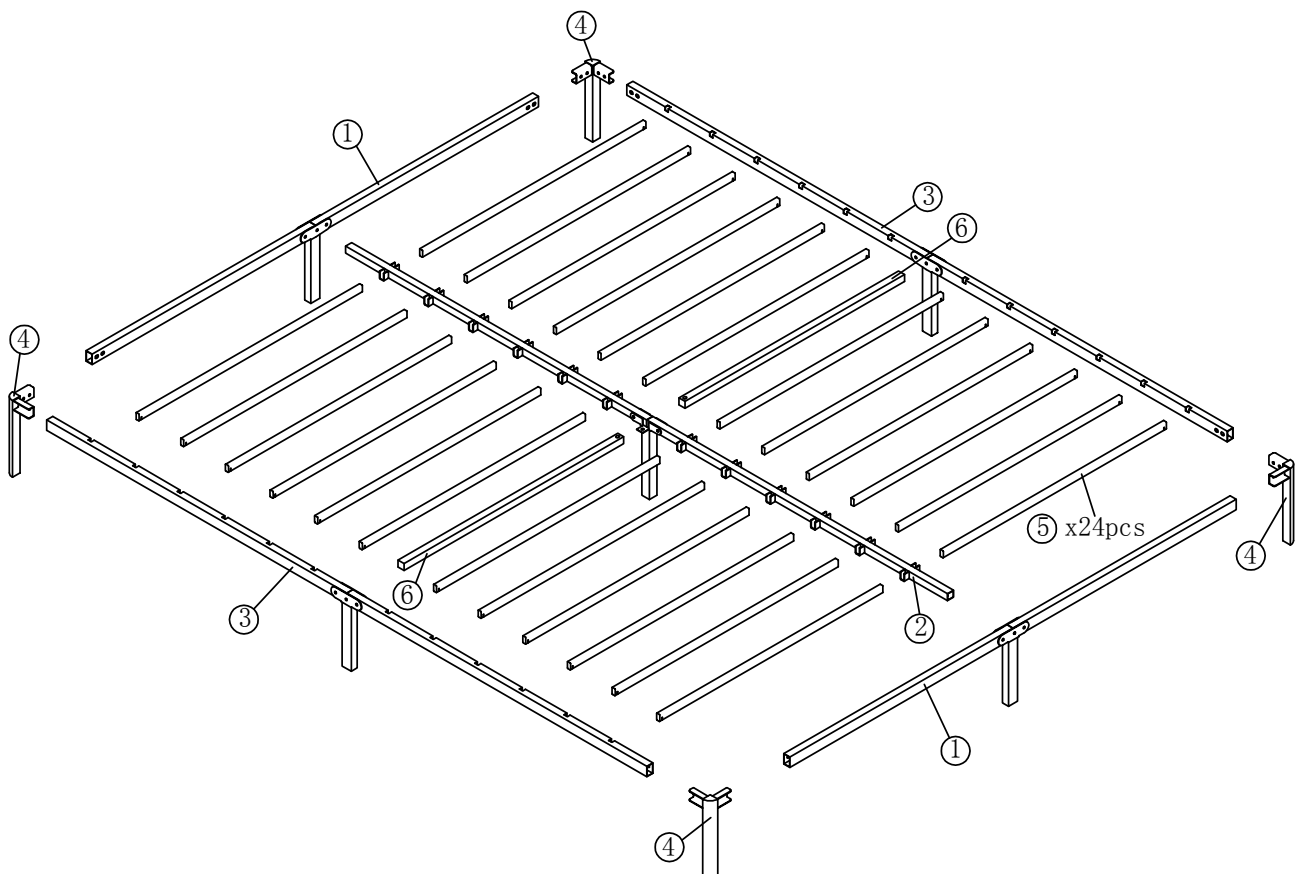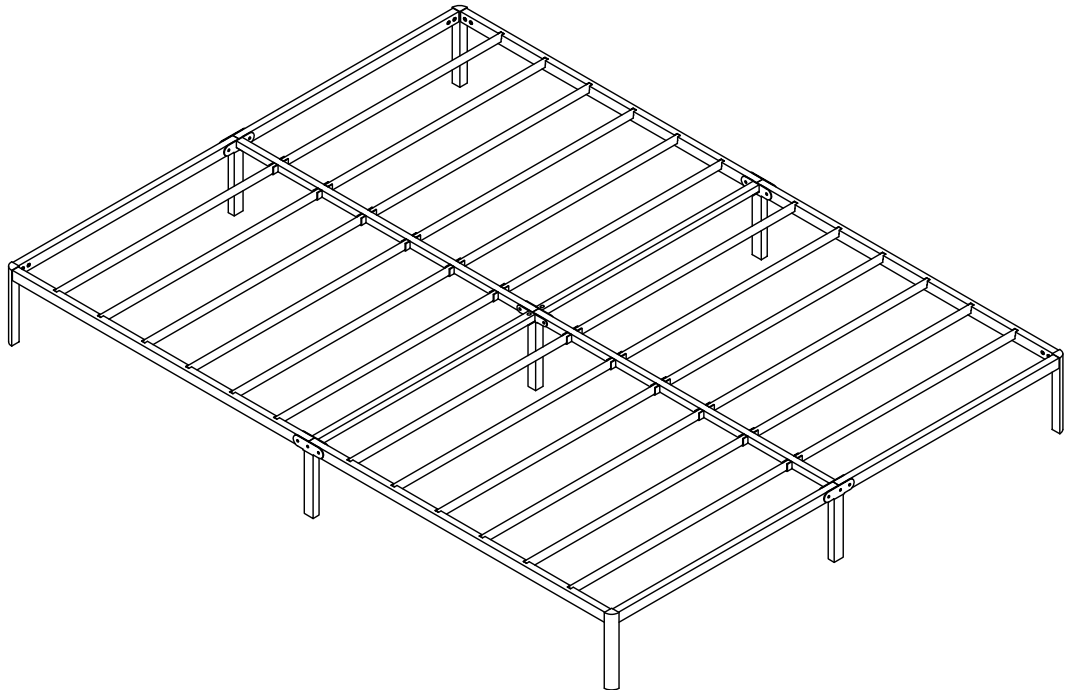


Assembly Instructions

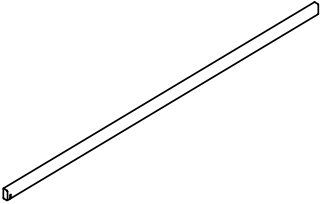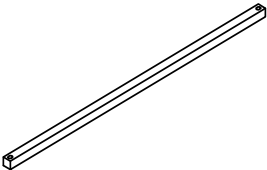①  x2pcs	②  x1pc	③  x2pcs
④  x4pcs	⑤  x24pcs	⑥  x2pcs
A  M6x12mm x16pcs	B  M6x30mm x2pcs	C  M6x40mm x4pcs
D  M4 x1pc		


Assembly Instructions

1

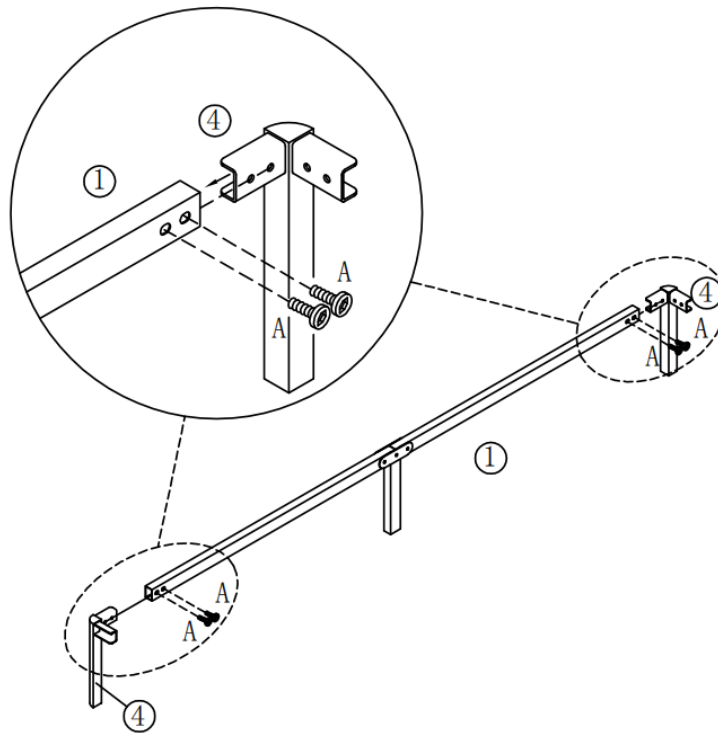

A	x8pcs
 M6x12mm	


2

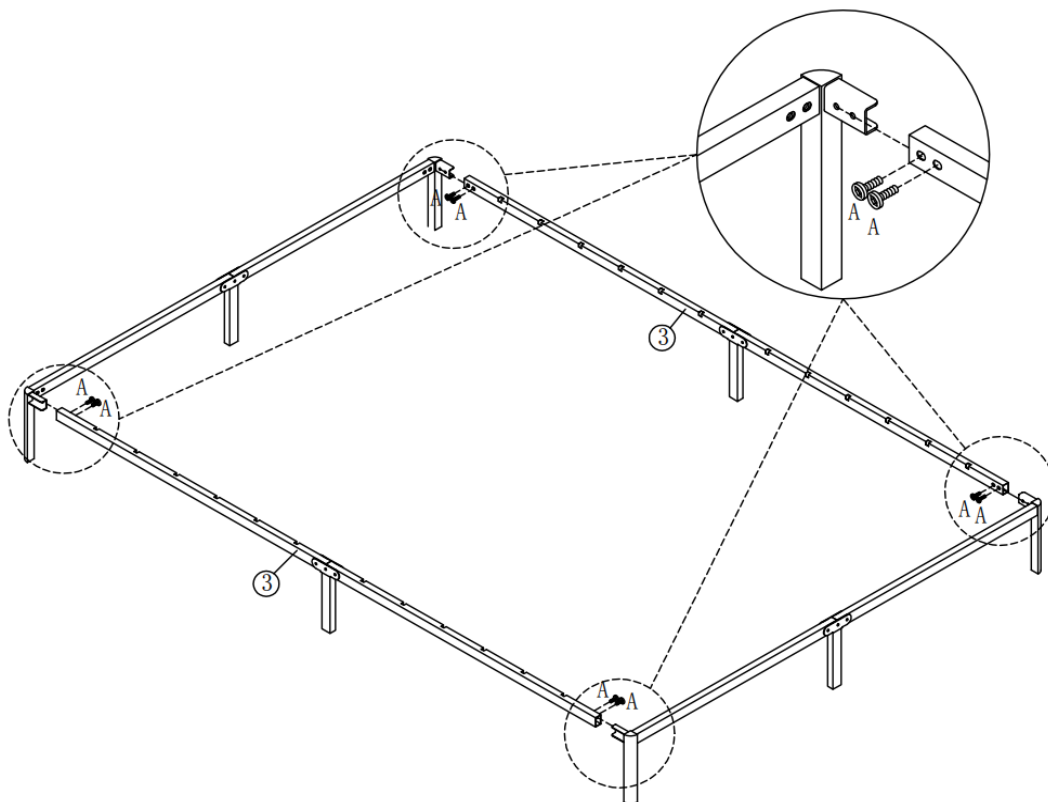

A	x8pcs
 M6x12mm	


Assembly Instructions

3

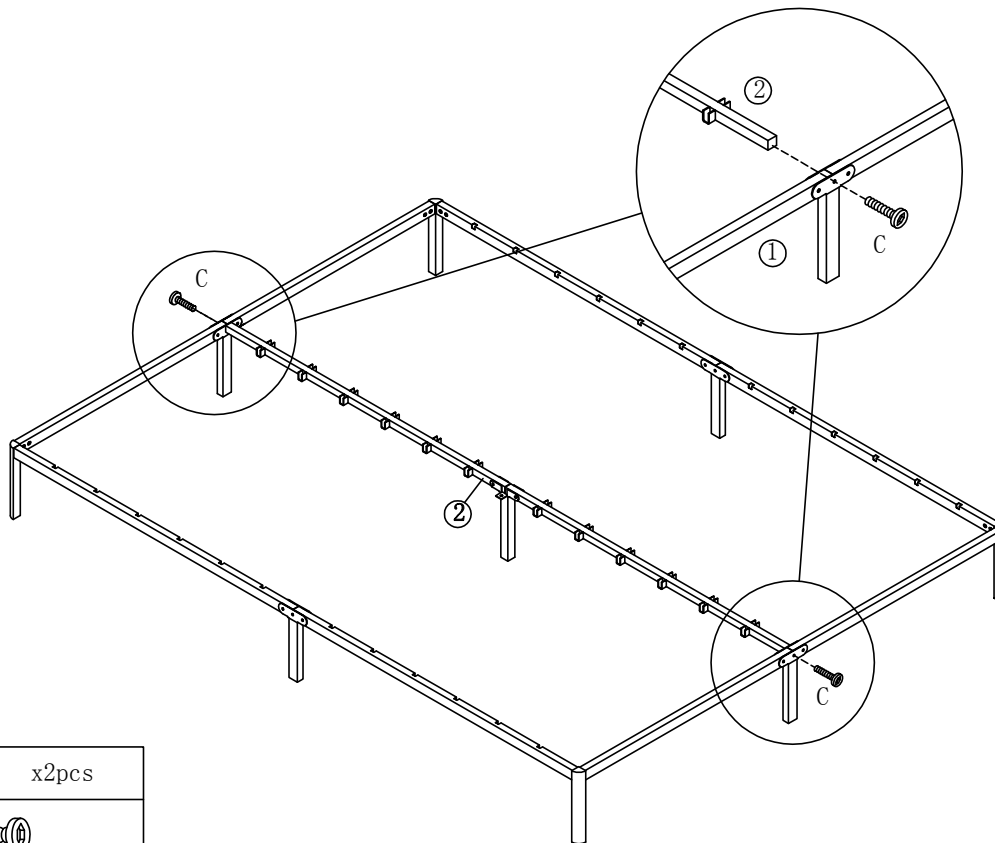

C	x2pcs
 M6x40mm	


4

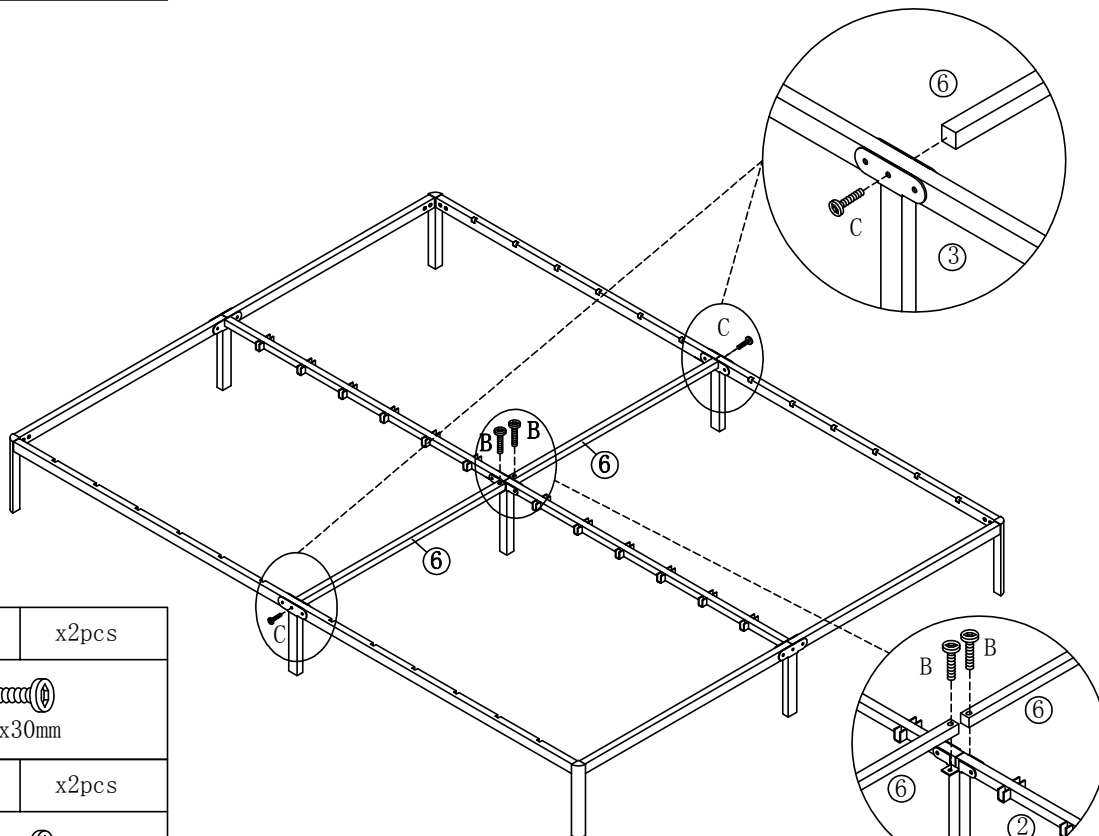


B	x2pcs
 M6x30mm	
C	x2pcs
 M6x40mm	

Assembly Instructions

5

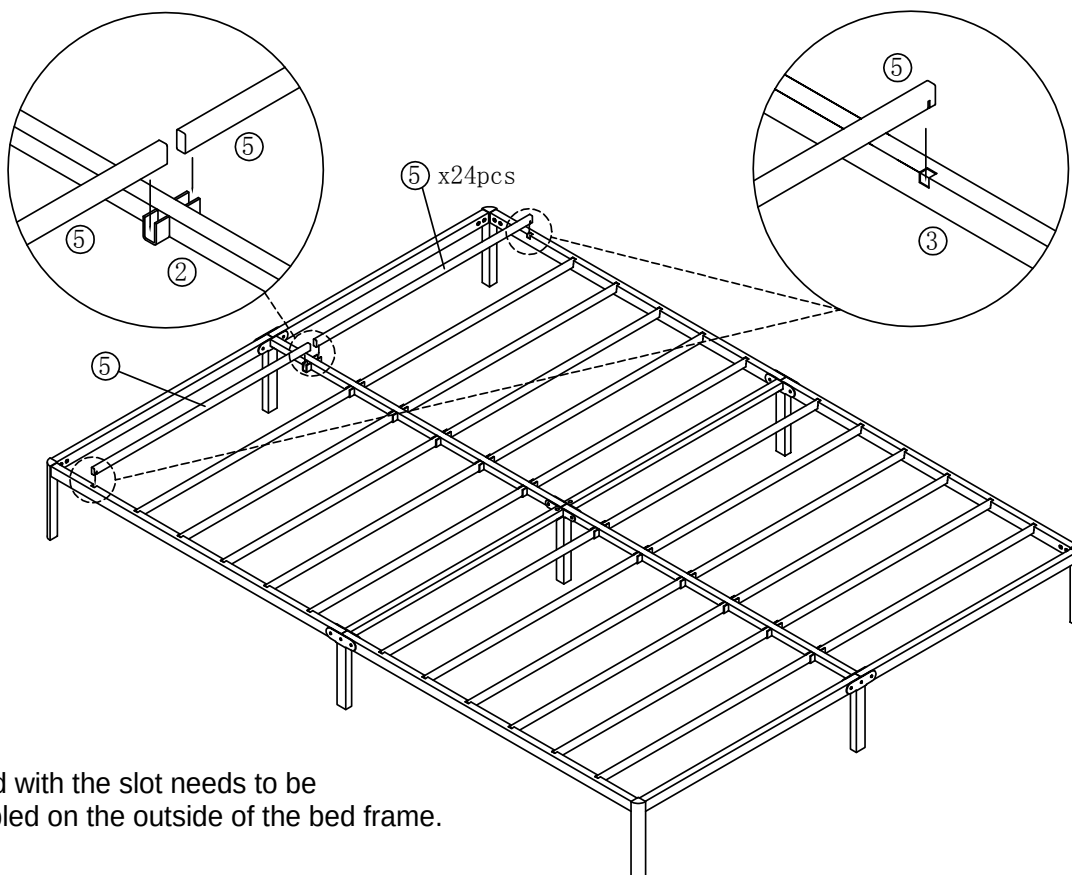

6

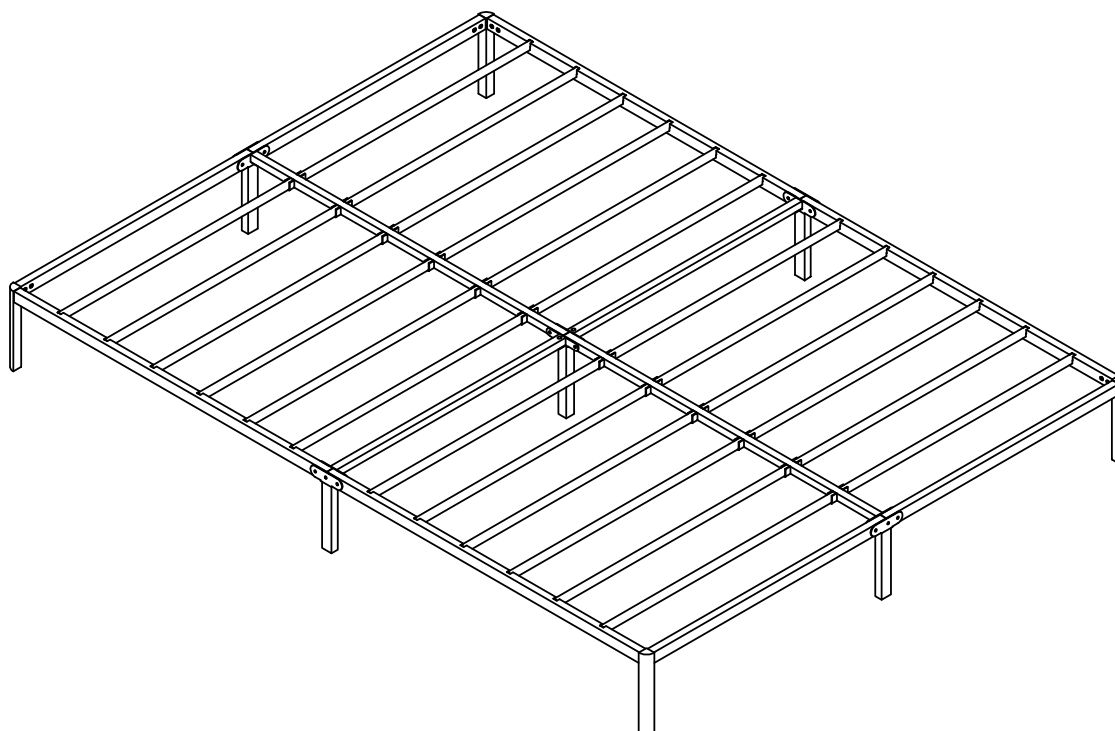


Assembly Instructions


7

Tips: Please use the included tool to unpack, not a knife to avoid damaging the product.


Friendly Reminder

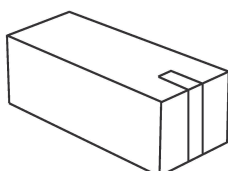

Step 1:
Open the box.

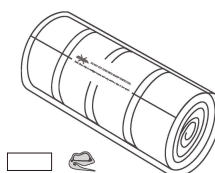

Step 2:
It consists of a packaging box,
a cutter and velcro.


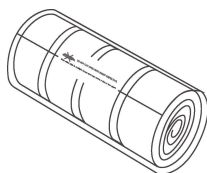


Step 3:
Uncover the mark.




Step 4:
Remove the vacuum-sealed bag.

Step 5:
Assemble.

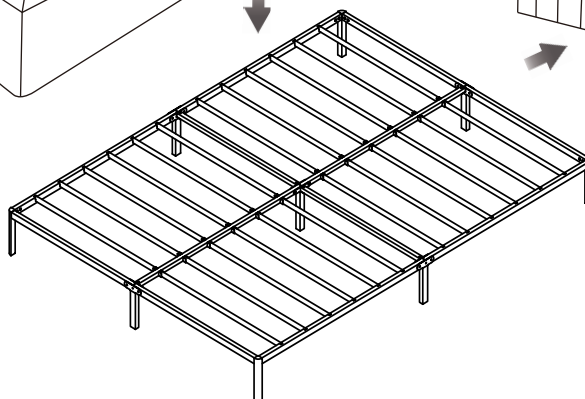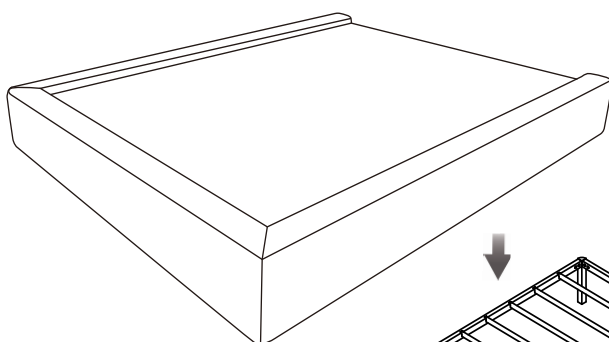

Remove the Velcro from the packaging and stick it separately on both sides of the back of the headboard. Then remove the protective paper from the Velcro and fix the bed board to the wall.

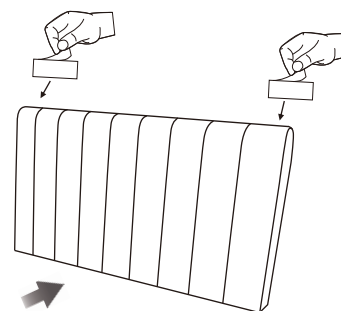


Assembly Instructions

8



Step 6:
Pat and iron it.
and let it stand for 72 hours.

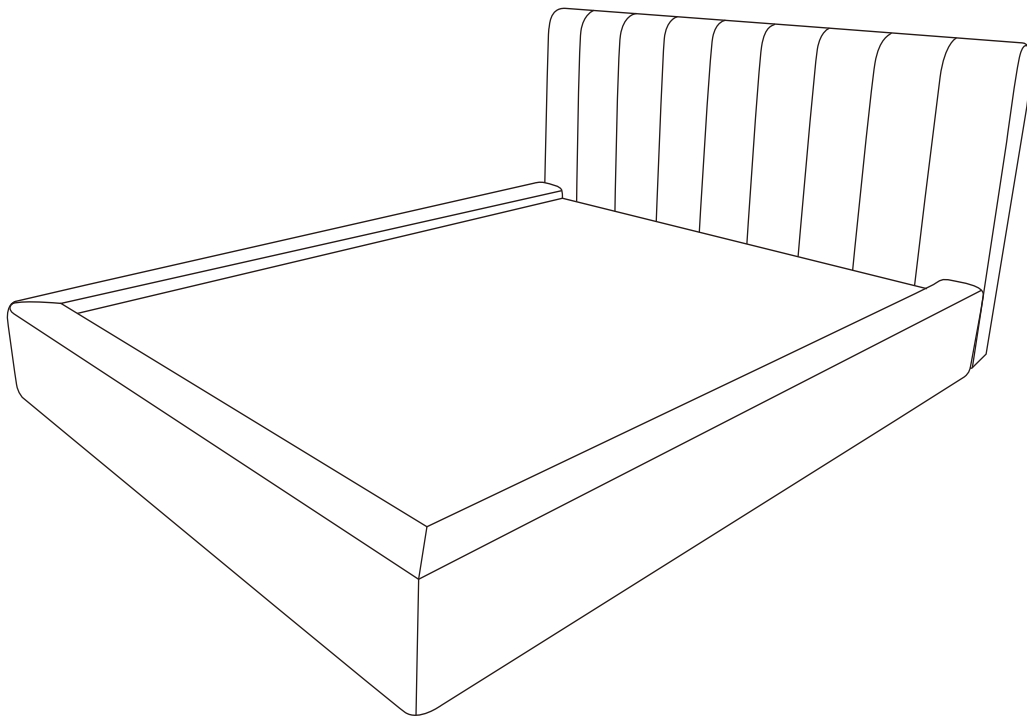

Step 7:
Restore original shape.

Thank you for purchasing our product.

Avoid direct sunlight.

Keep sharp objects away from the surface of the bed.

Clean with a soft-bristled brush or the soft brush head of a vacuum cleaner.