



Wooden Outdoor Sofa

Assembly Instructions

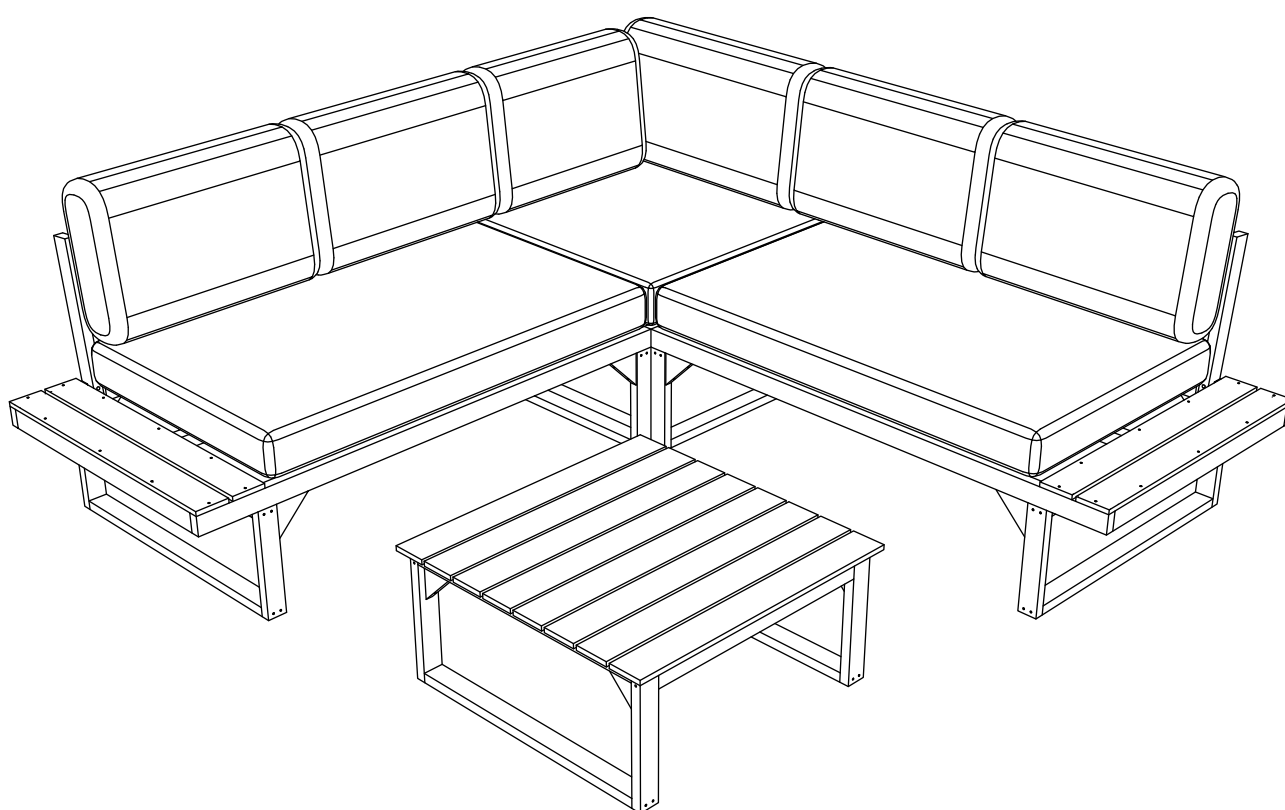


Parts

A

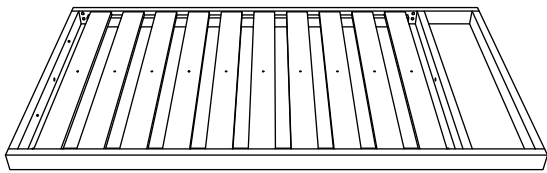


X1

B

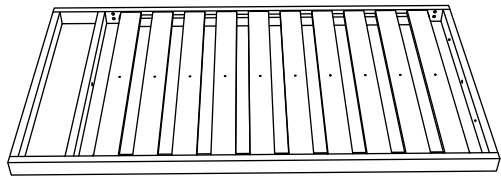


X1

C

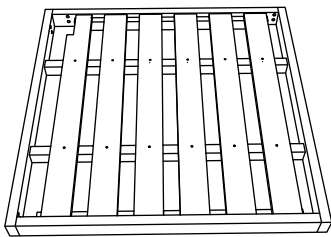


X1

D

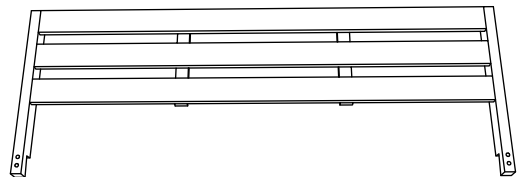


X2

E

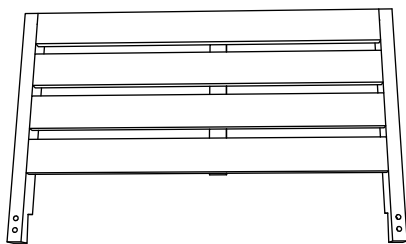


X2

F

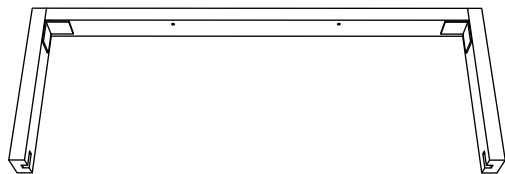


X6

G




X6

H




X2

I

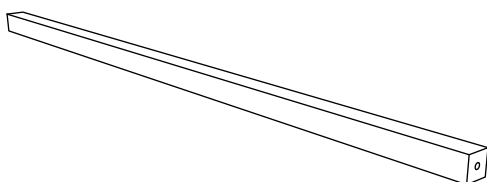


X2

J

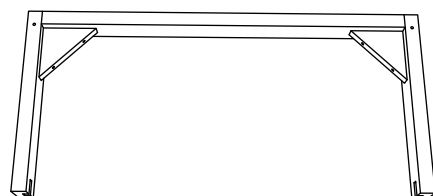

X2


K



Shorter than G

X2

L




X2

M



X1

N

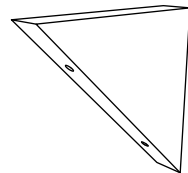


X12

Hardware

1

3.5*50mm



X36

2


3.5*25mm



X40

3


6*40mm



X16

4


6*60mm



X18

5


3.5*35mm



X30


6

6*80mm




X2

7




X1

8

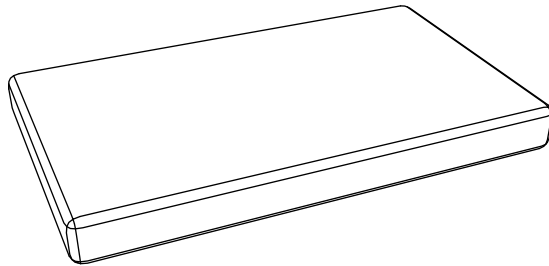


X2

9

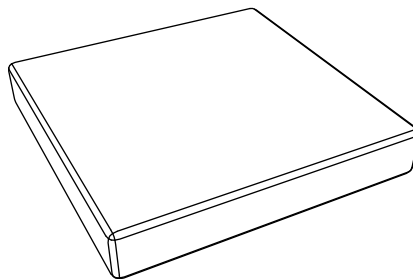

X1


10

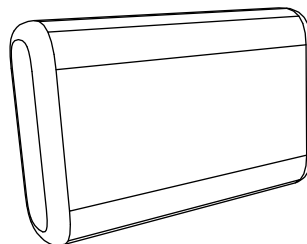

short back cushion

X5

11



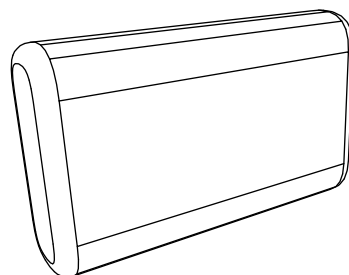



long back cushion

X1

1

A: 1pc
F: 2pcs
G: 2pcs
I: 1pc
1: 8pcs
2: 10pcs
3: 6pcs

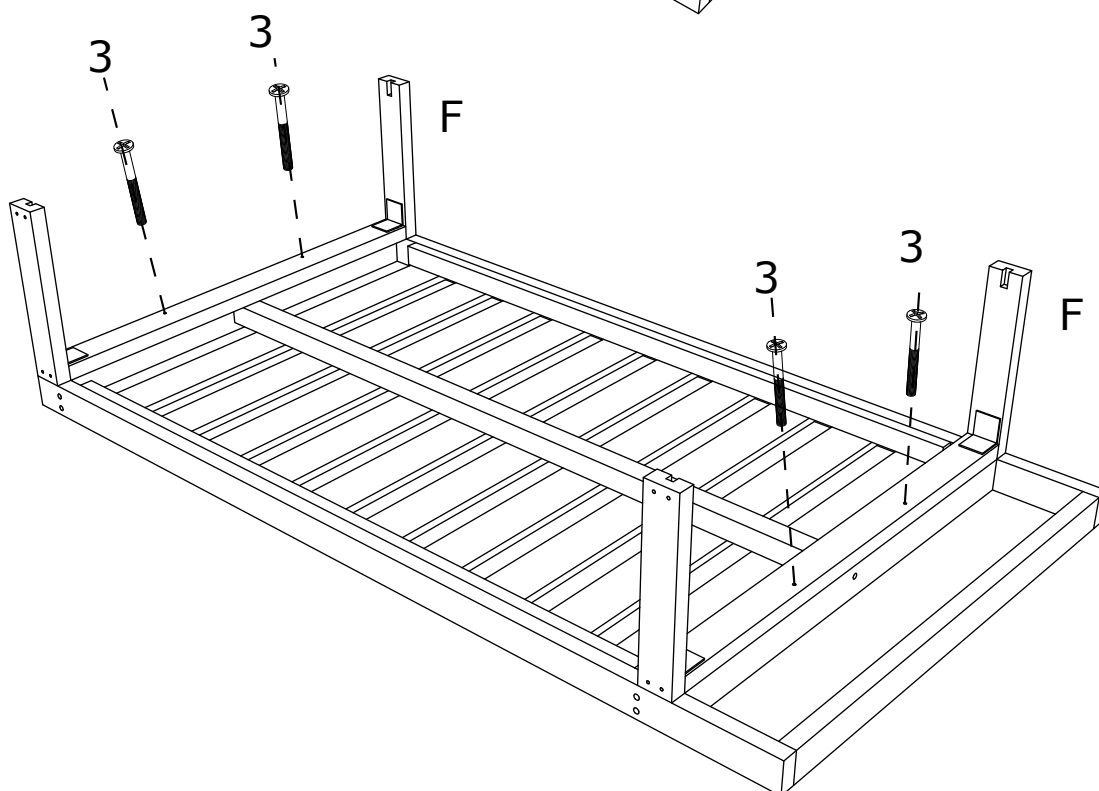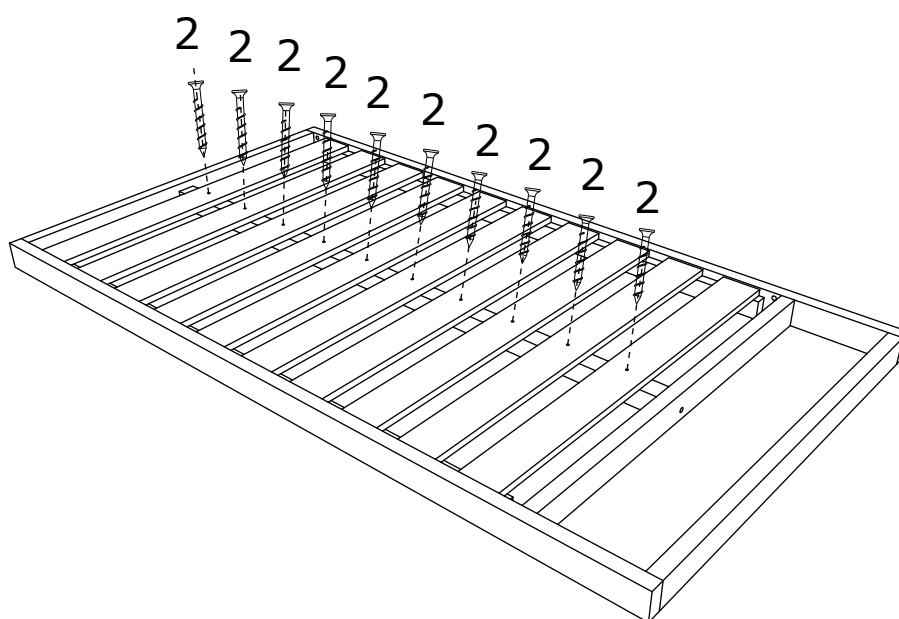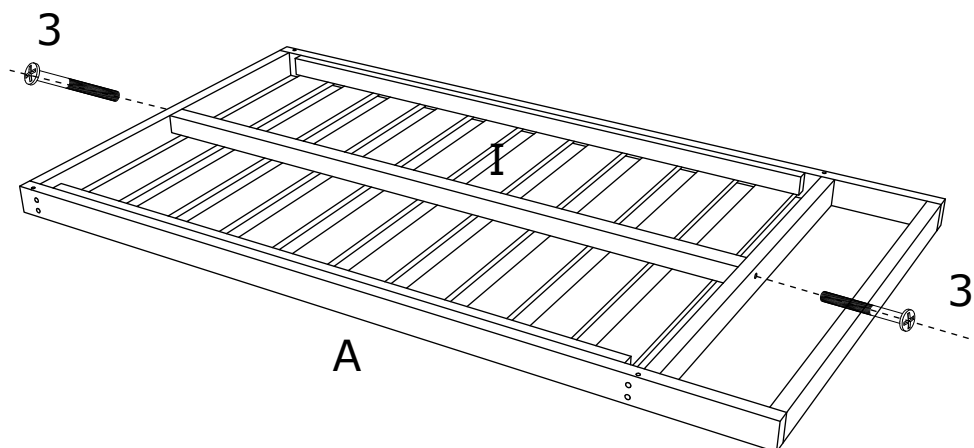


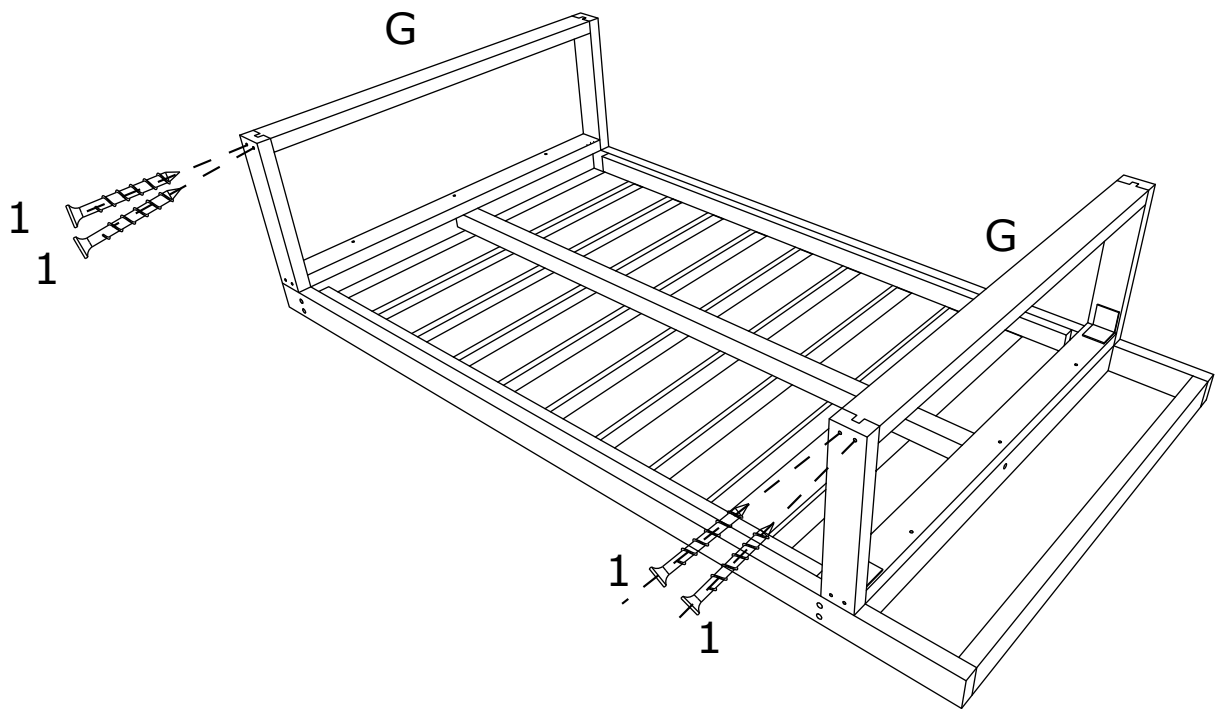

Both Sides Need Screws




2

D: 1pc
4: 4pcs

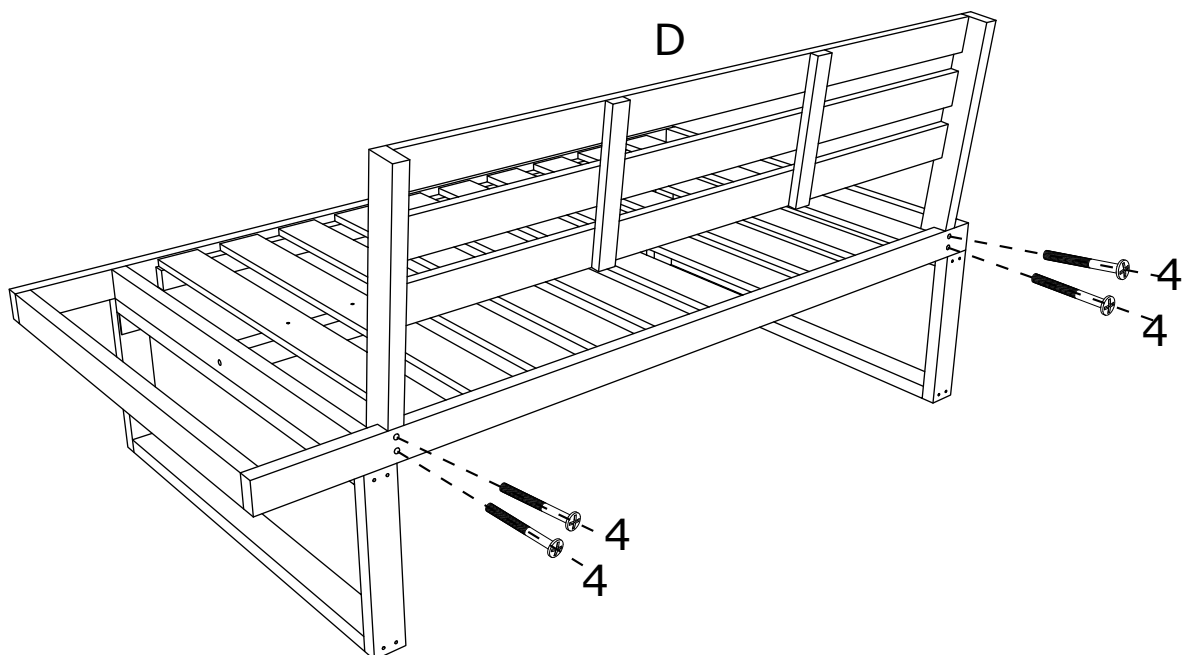


3

H: 1pc
N: 4pcs
2: 10pcs
5: 8pcs

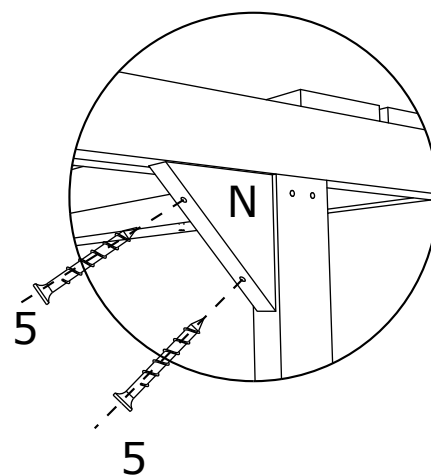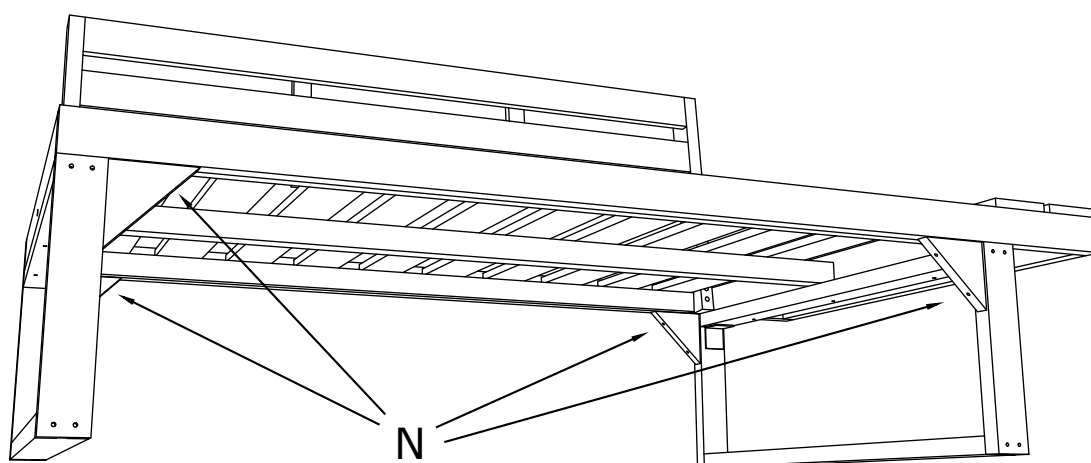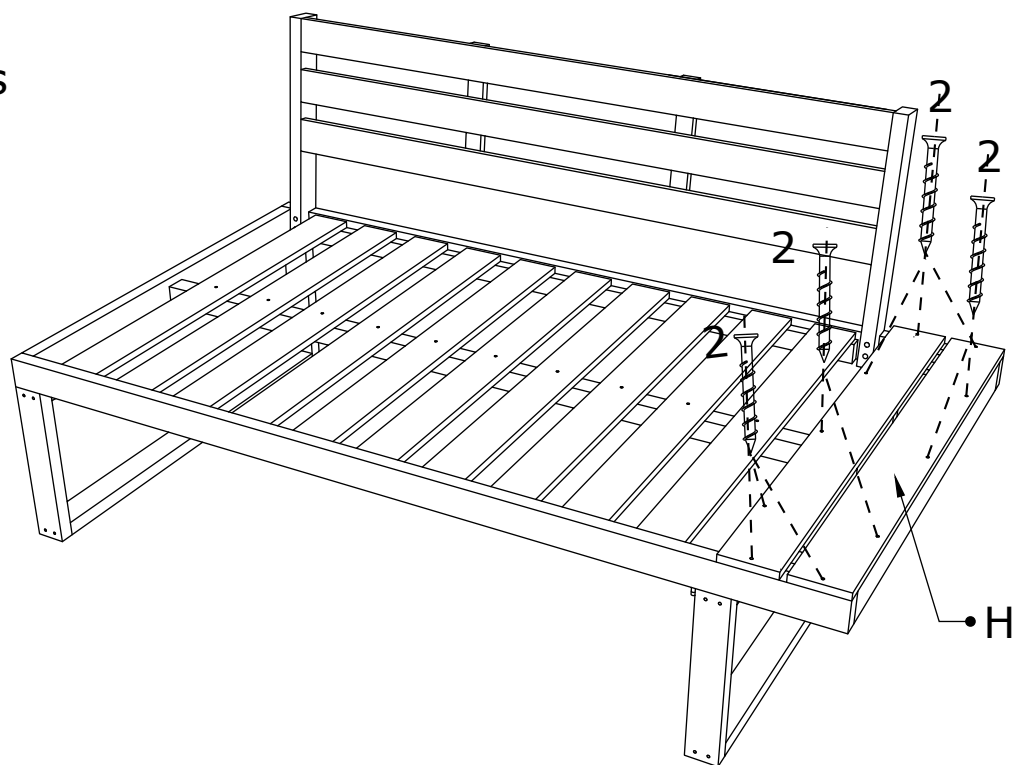

4


- B: 1pc
- D: 1pc
- F: 2pcs
- G: 2pcs
- H: 1pc
- I: 1pc
- N: 4pcs
- 1: 8pcs
- 2: 20pcs
- 3: 6pcs
- 4: 4pcs
- 5: 8pcs

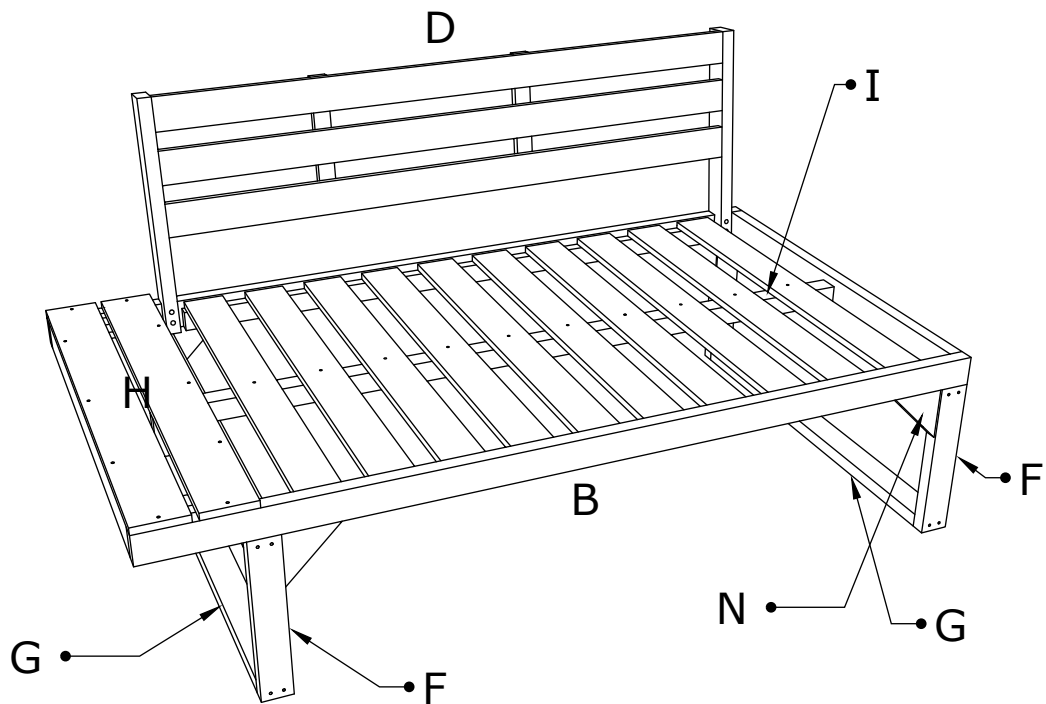

PRPEAT LAST THREE STEPS TO ASSEMBLE
THE OTHER LONG CHAIR


5

- C: 1pc
- F: 2pcs
- 3: 4pcs

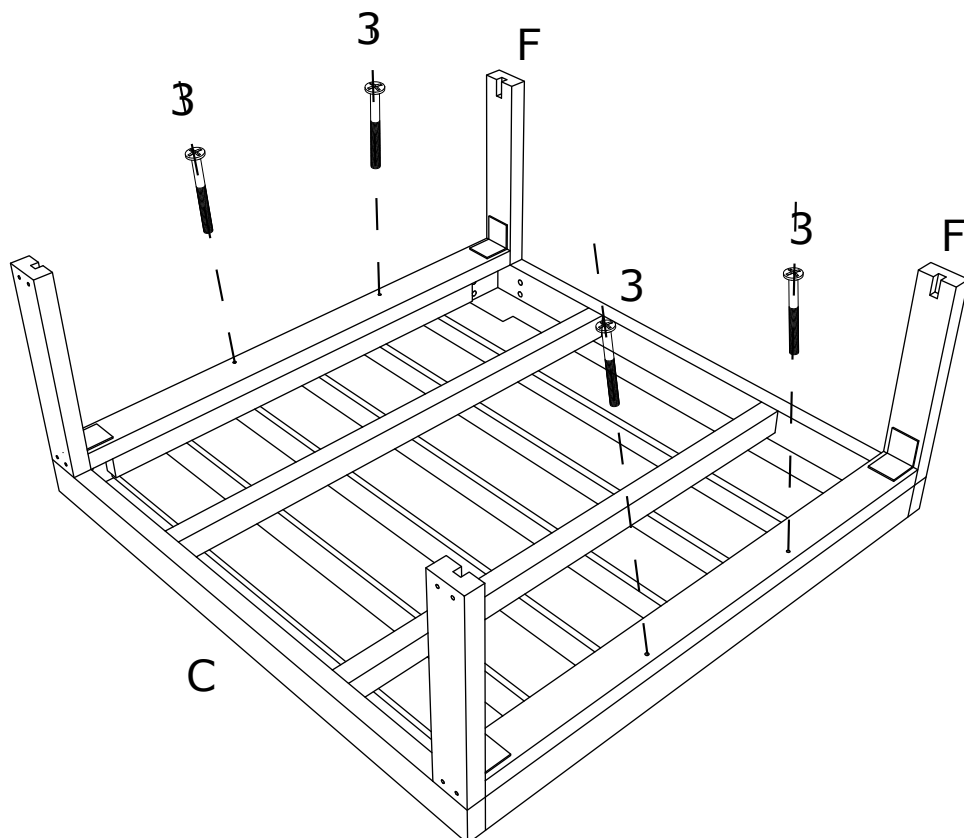

6


G: 2pcs
1: 8pcs

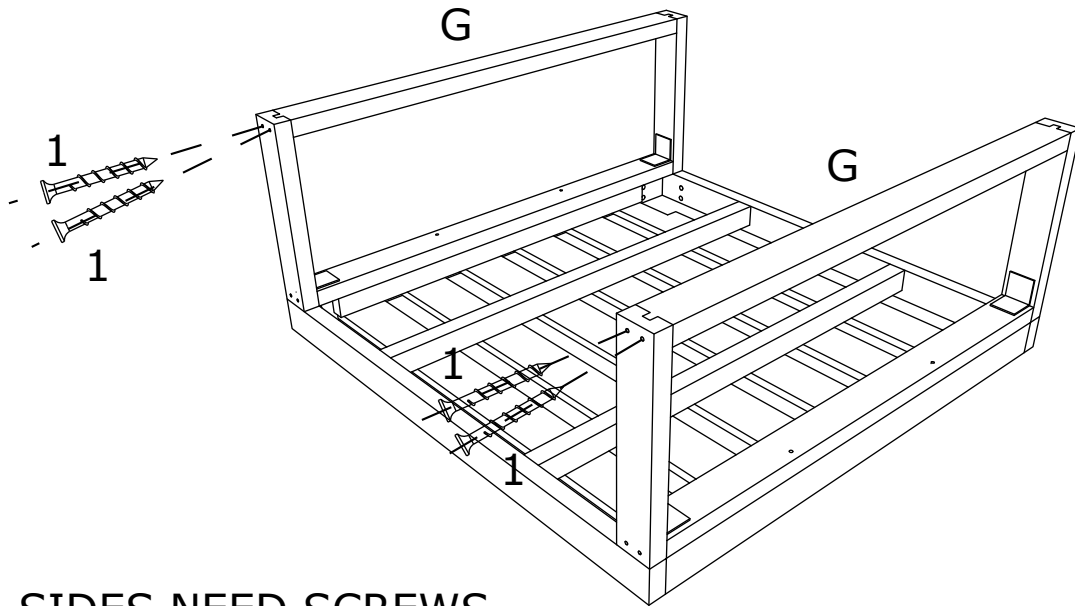

BOTH SIDES NEED SCREWS


7

E: 2pcs
4: 8pcs

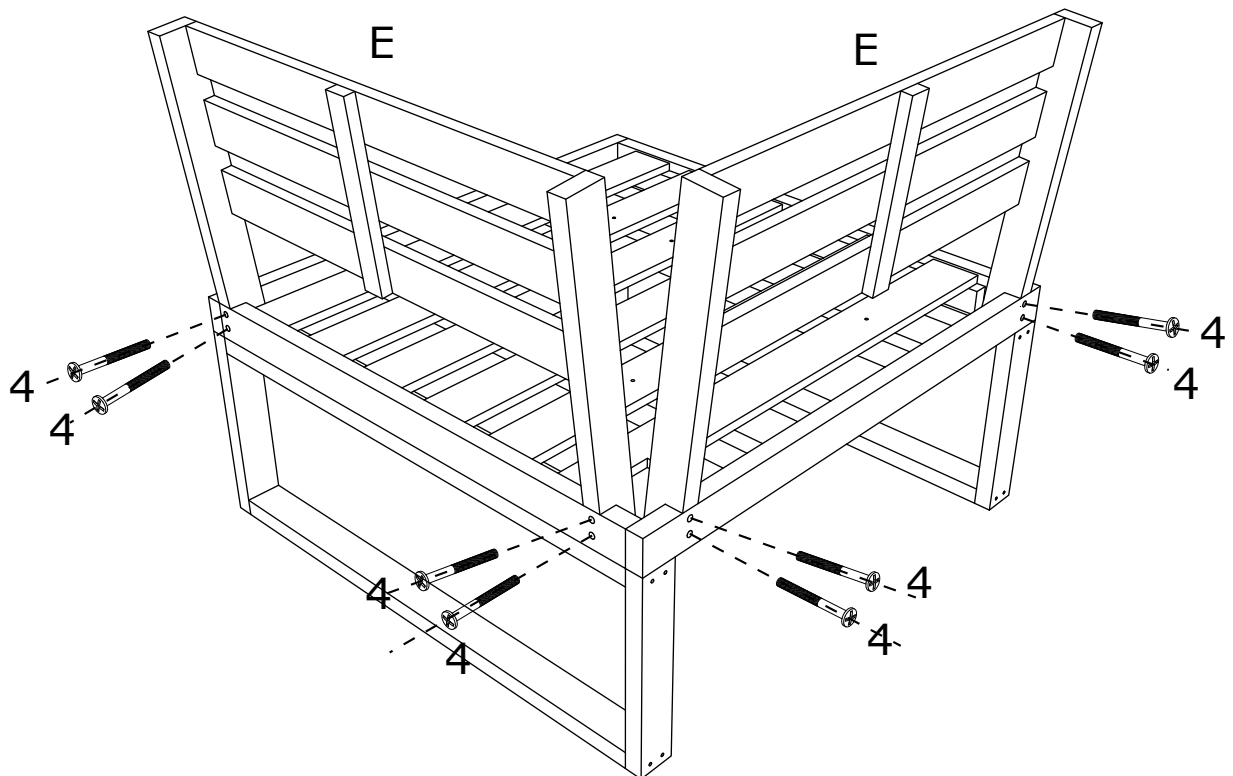

8

N: 4pcs
5: 8pcs

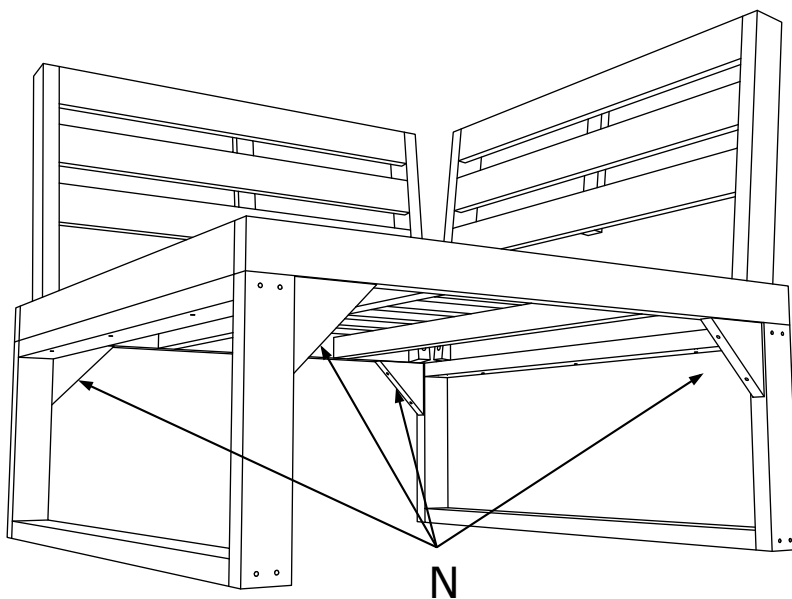


BOTH SIDES NEED SCREWS

9

J: 2pcs
K: 2pcs
1: 8pcs


X2

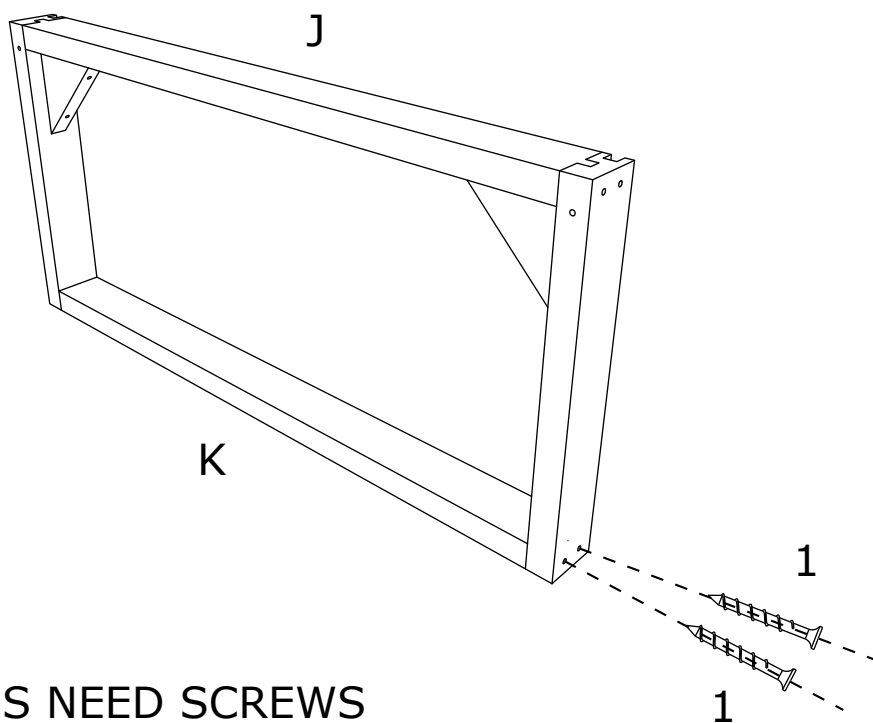

BOTH SIDES NEED SCREWS

10


L: 2pcs
1: 4pcs

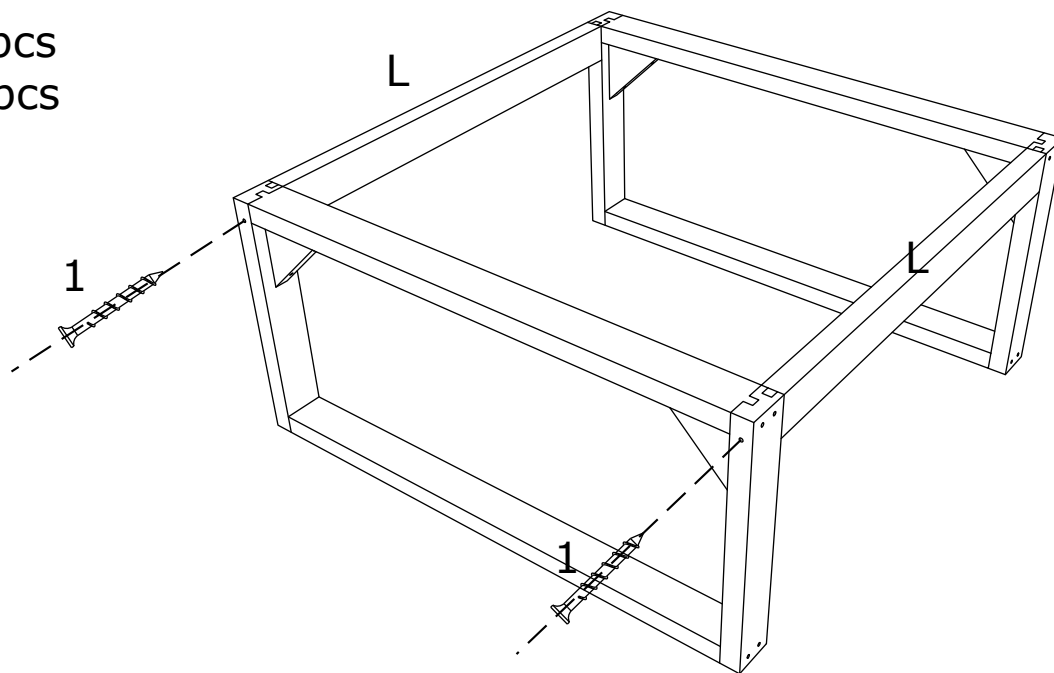

BOTH SIDES NEED SCREWS

11




M: 1pc
5: 6pcs

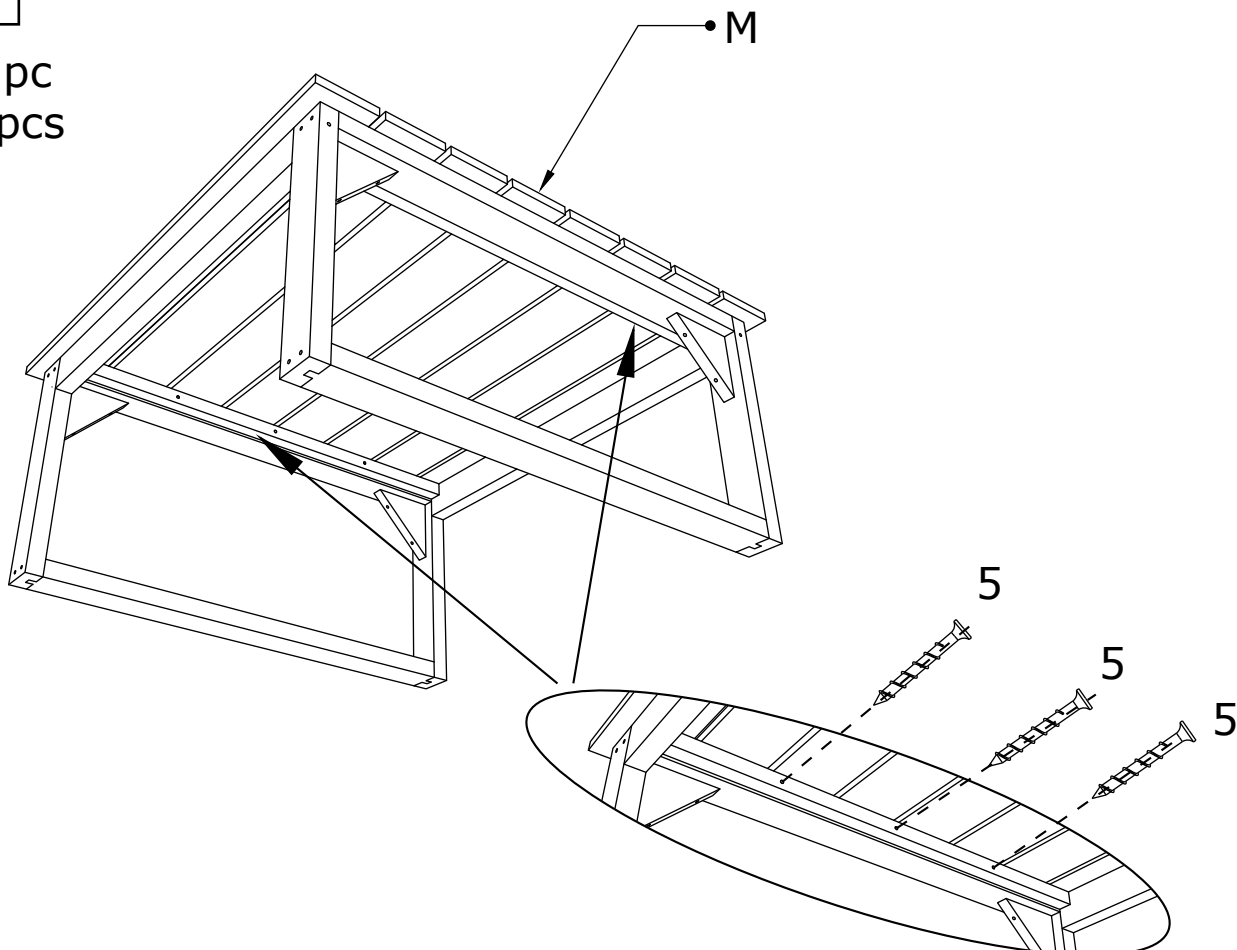


12

4: 2pcs

6: 2pcs

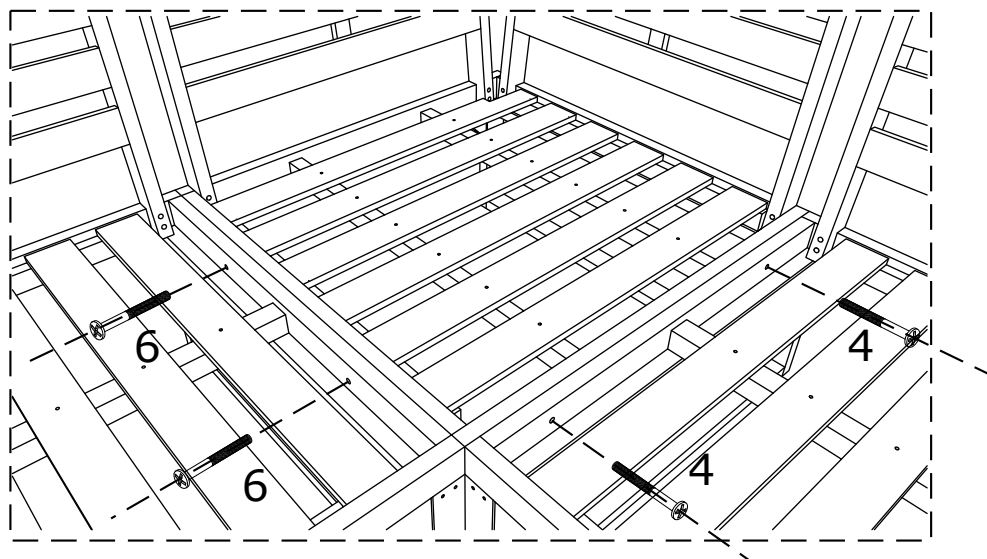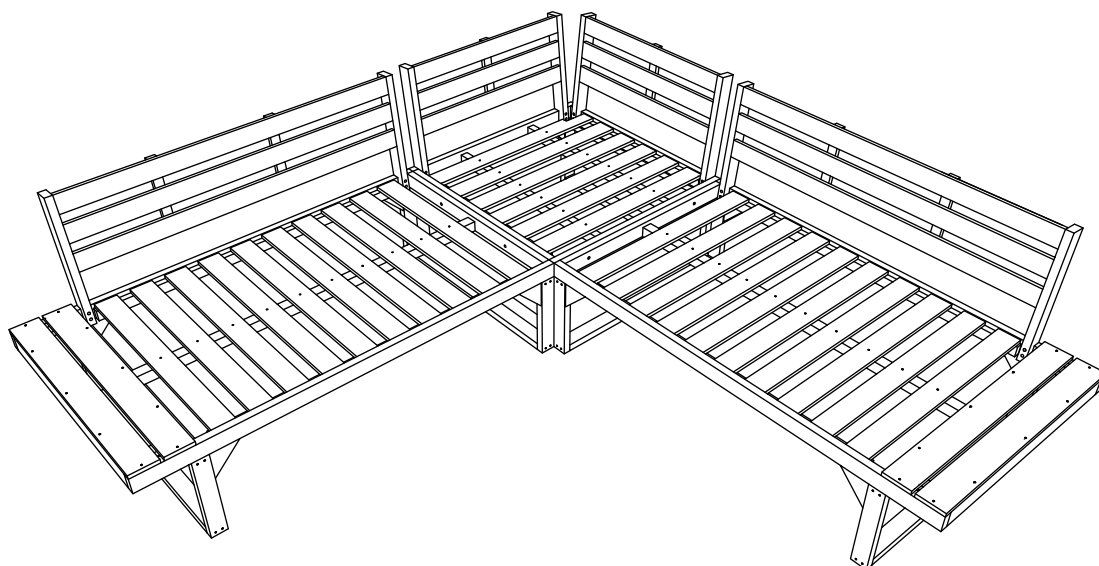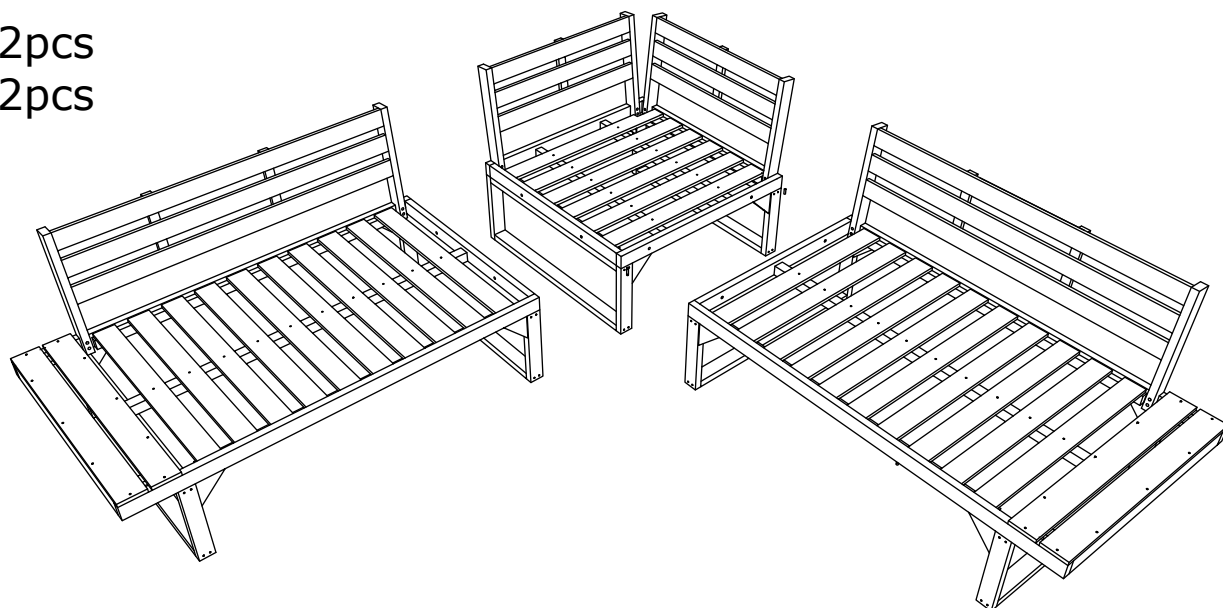

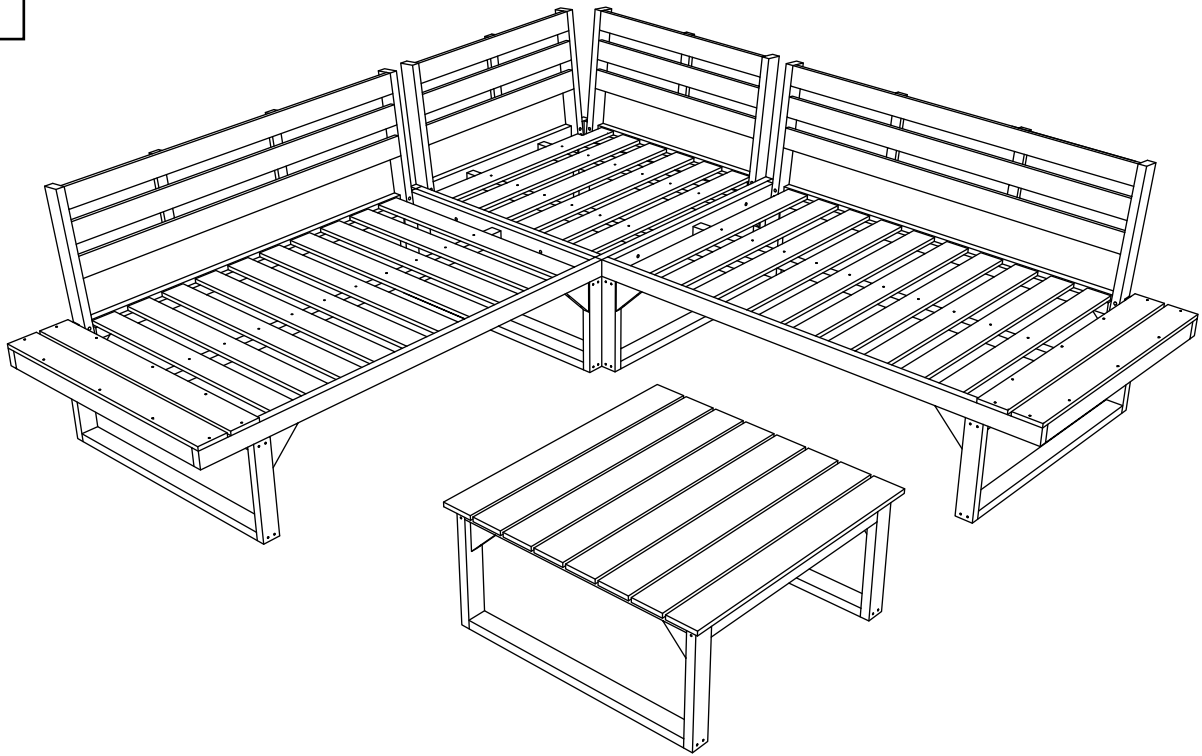

TIGHTEN ALL THE BOLTS AND SCREWS TO BE 100%
ONCE EVERYTHING COMPLETELY ASSEMBLED!

PUT THE CUSHION ON THE SOFA, THEN COMPLETE!

