TWIN BED

Black
White



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

HARDWARE LIST

A (1) M4 x 63mm Allen Key
B (8) M6 x 60mm JCBC Bolts
C (8) M6 x 30mm JCBC Bolts
D (8) M6 x 9.5 x 14mm Barrel Nuts
E (28) Slat Caps
F (8) M10 x 30mm Dowel Pins
G (4) Wood Plugs

PARTS LIST

H (1) Headboard
I (1) Footboard
J (2) Left Side Panels
K (2) Right Side Panels
L (2) Center Legs
M (14) Wood Slats

PART	*QTY*	*HARDWARE*	*PART*	*QTY*	*HARDWARE*
A	*1*		*B*	*8*	
C	*8*		*D*	*8*	
E	*28*		*F*	*8*	
G	*4*				

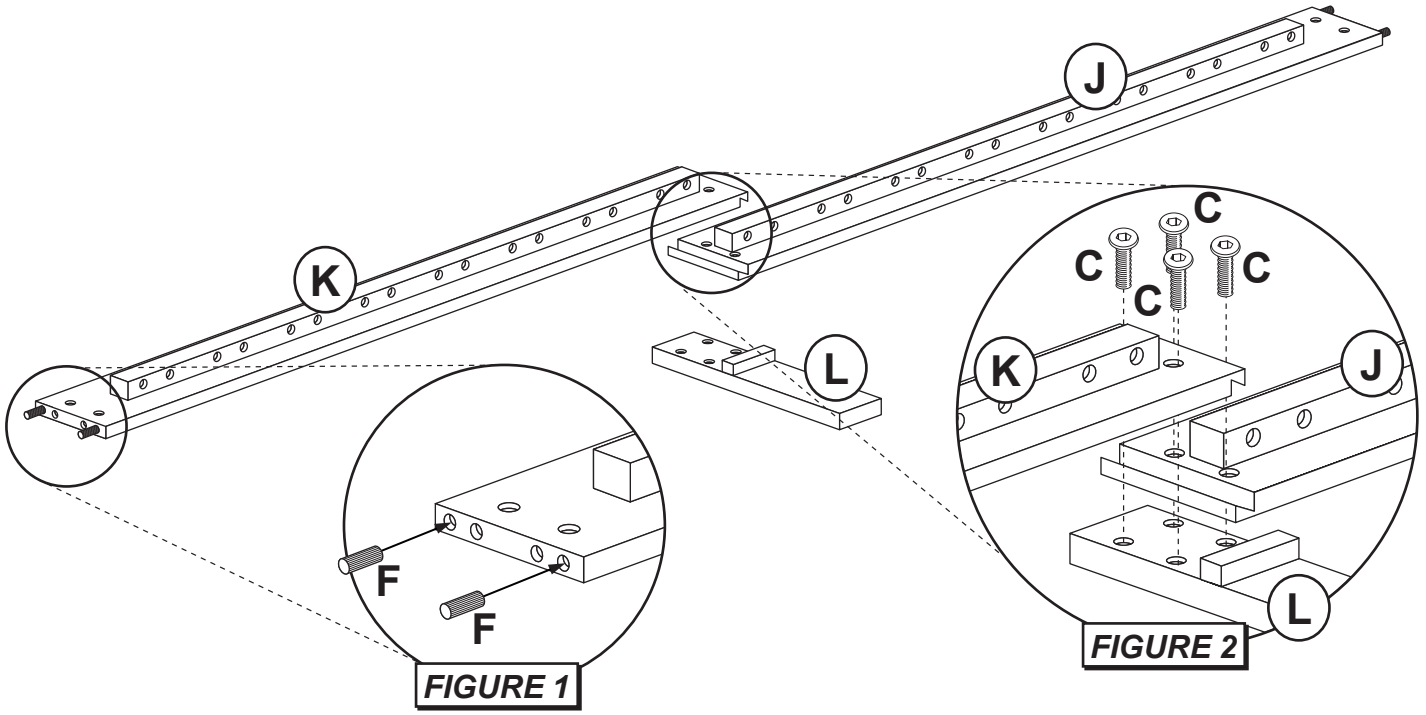


FIGURE 1

FIGURE 2

STEP 1

Begin assembly by inserting 2 Dowel Pins (F) into each end of the Left (J) and Right (K) Side Panels. See **Figure 1**.

STEP 2

Next lay the Center Legs (L) down flat, facing upward, and align the holes of the Left (J) and Right (K) Side Panels on top. Then secure the panels to the legs using 4 Bolts (C). See **Figure 2**.


CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.

TWIN BED

Black

White

FIGURE 3

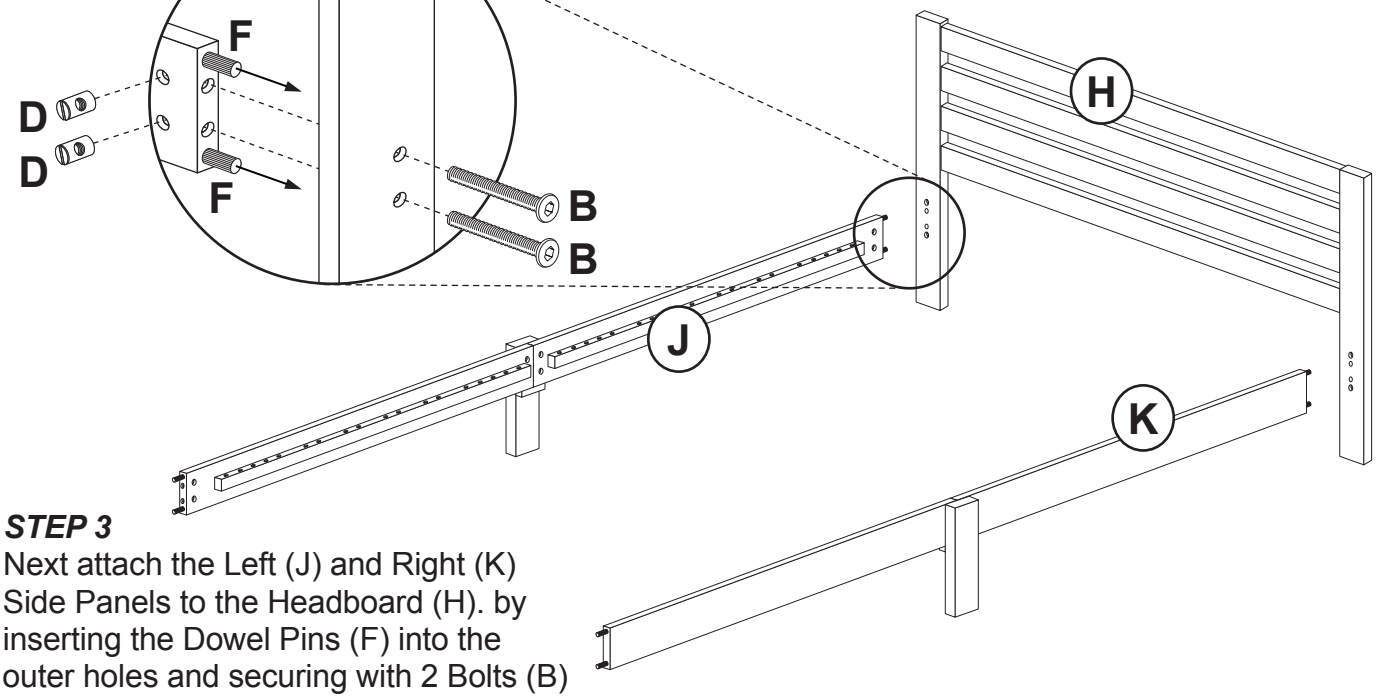


STEP 3

Next attach the Left (J) and Right (K) Side Panels to the Headboard (H). by inserting the Dowel Pins (F) into the outer holes and securing with 2 Bolts (B) from the outside and 2 Barrel Nuts (D) from the inside. See **Figure 3**.

STEP 4

Next attach the Left (J) and Right (K) Side Panels to the Footboard (I). by inserting the Dowel Pins (F) into the outer holes and securing with 2 Bolts (B) from the outside and 2 Barrel Nuts (D) from the inside. See **Figure 4**.

FIGURE 4

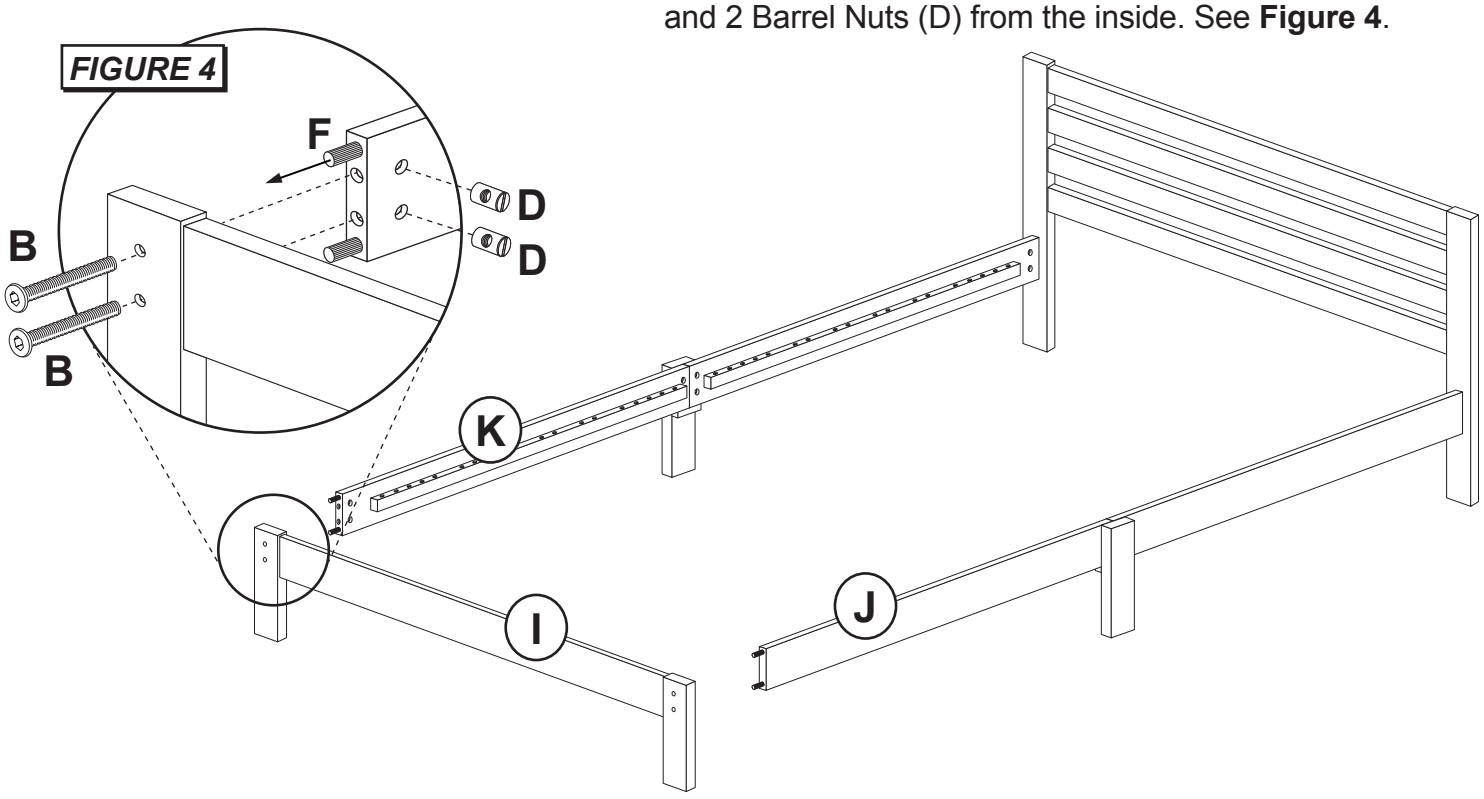

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.

TWIN BED

Black
White

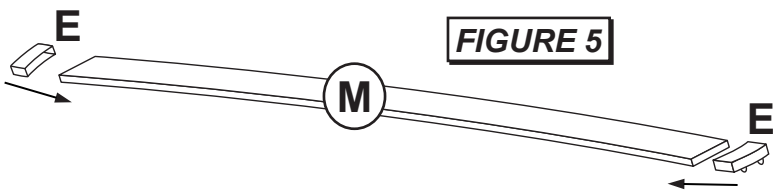


FIGURE 5

STEP 5
Attach the Slat Caps (E) on both ends of each of the Wood Slats (M). See **Figure 5**.

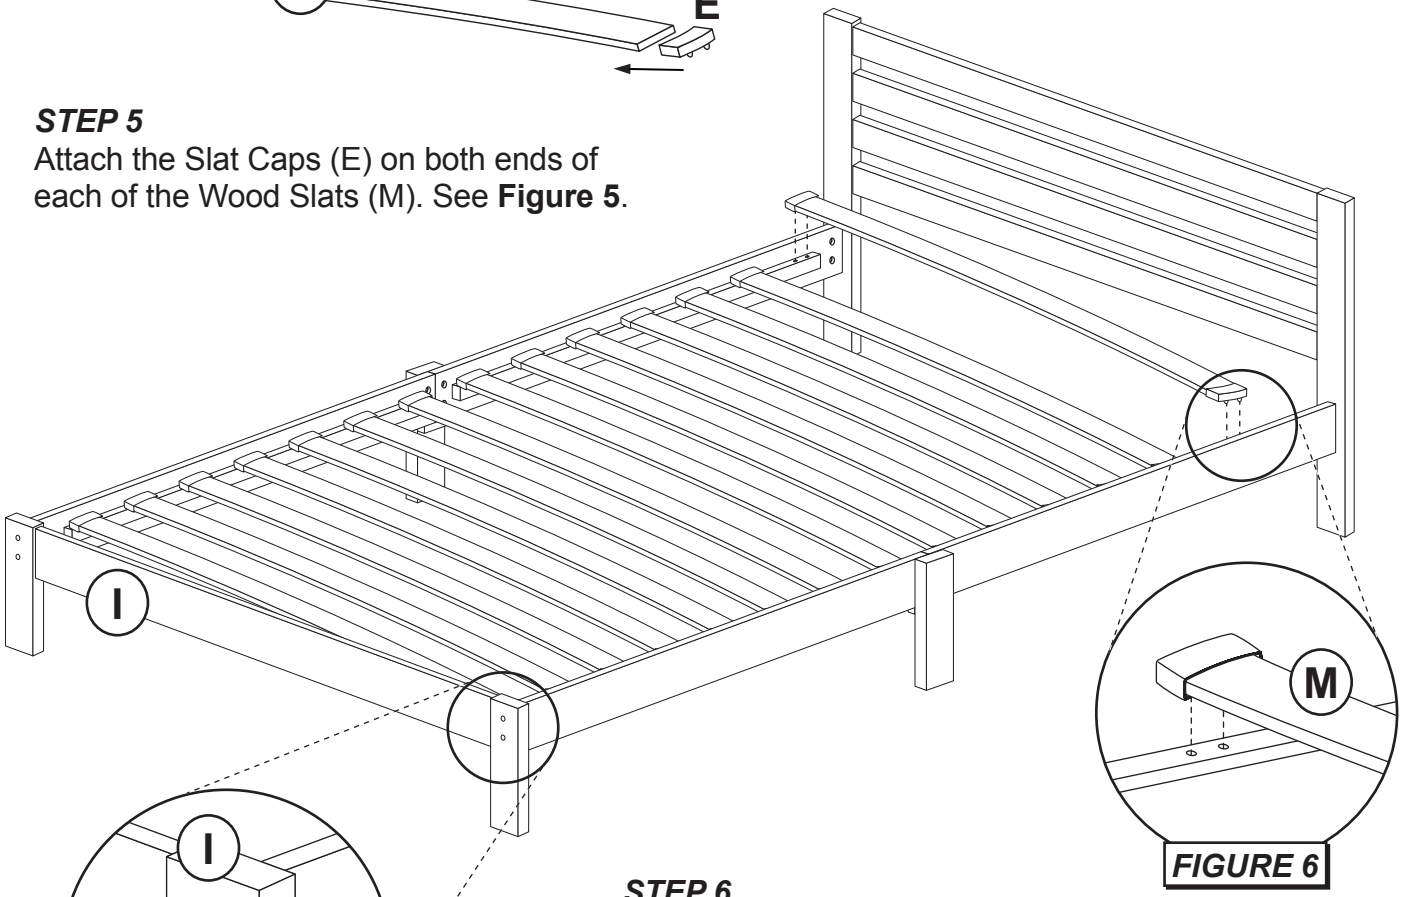


FIGURE 6

STEP 6
Next insert the Wood Slats (M) to both sides of the bed arch side up, by pushing into place into the holes. See **Figure 6**.

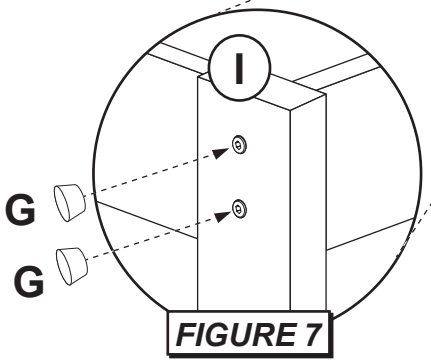


FIGURE 7

STEP 7
Finally place 2 Wood Plugs (G) into each end of the Footboard (I) covering the bolts. See **Figure 7**. The assembly is now complete.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.