


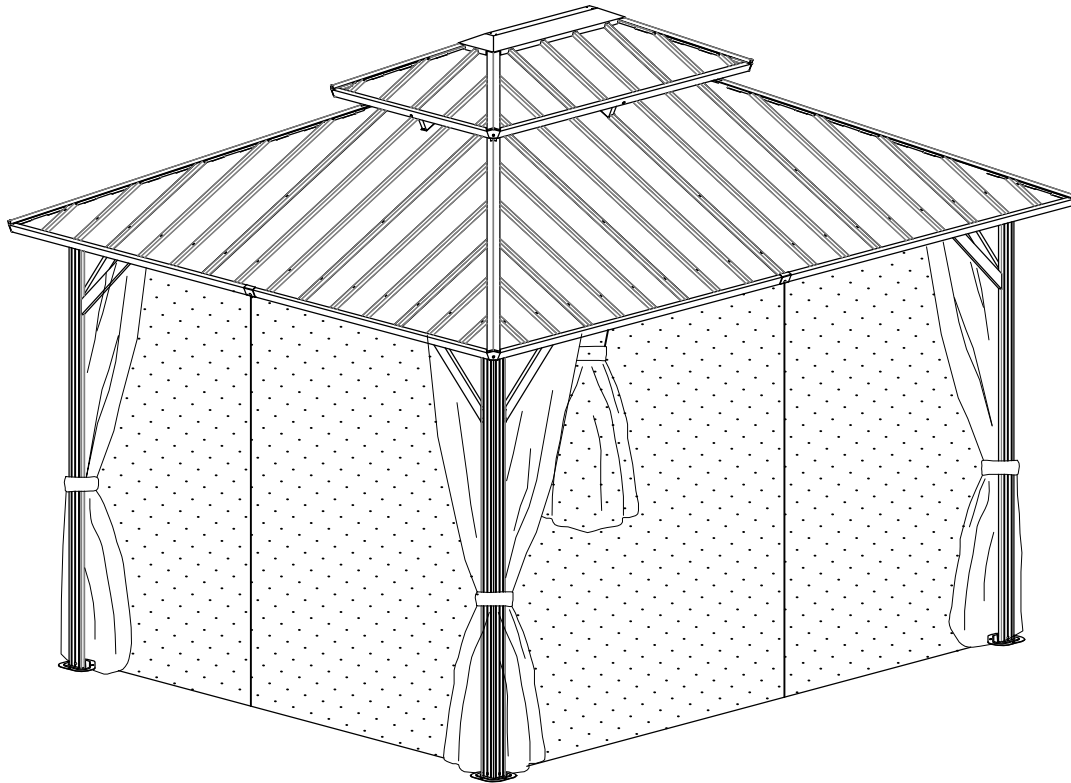

INSTRUCTION MANUAL

10FT x 12FT Gazebo

Series A42

IF YOU PURCHASED THE GAZEBO ONLINE AND HAVE ANY
QUESTIONS OR CONCERNS
PLEASE CONTACT US WITH EMAIL OR TEXT


Email : Hiwarrantyservice@outlook.com
Text : +1 628 263 4608



A3 4x



W1 2x



W2 2x



W3 2x



W4 2x



D3 4x




D4 2x




D5 2x





E5 4x




C7 2x




C8 2x



C9 2x




C10 2x



G1 2x




G9 2x




I1 2x




I9 2x



F6 2x



F7 2x




F9 2x




F10 2x







(H) 4x




(H1) 4x




(V1) 2x



(V6) 2x

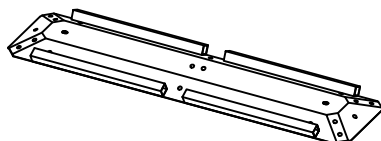


(L6) 1x

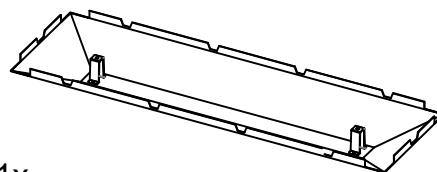

(M2) 1x




(J) 4x




(P) 4x




(V) 4x




(Q2) 4x



(Z) 56x

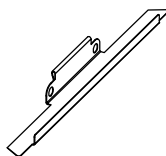

(Z1) 8x

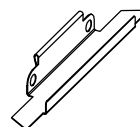

(Z2) 8x



(Y) 68x




(U1) 104x




(N) 12x



(N1) 4x

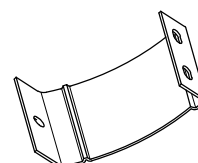


(K1) 4x

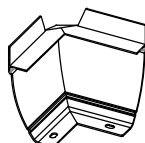


(K2) 4x




(Q4) 8x















(Q5) 8x

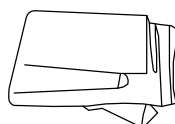

(T) 4x

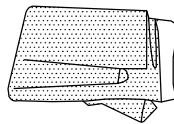


(T1) 4x

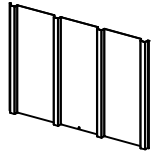
 O1 4x	 O2 4x	 O3 4x	 O4 4x
 O5 2x	 O6 2x	 O7 2x	 S1 4x
 S2 4x	 S3 2x		
 M6x15 1 144x	 M6x23 2 60x	 M6x25 3 4x	 ST 4.8x12 4 16x
 5 2x	 M5x12 6 4x	 M6x45 7 8x	 8 16x
 M6x10 9 8x	 10 12x	 11 1x	 4mm 12 2x
 6mm 13 1x	 14 1x	 M5x15 15 32x	




A3 4x



J 4x



Q4 8x



Q5 8x



M6x15

1 12x




M5x15


15 32x

5

<1>

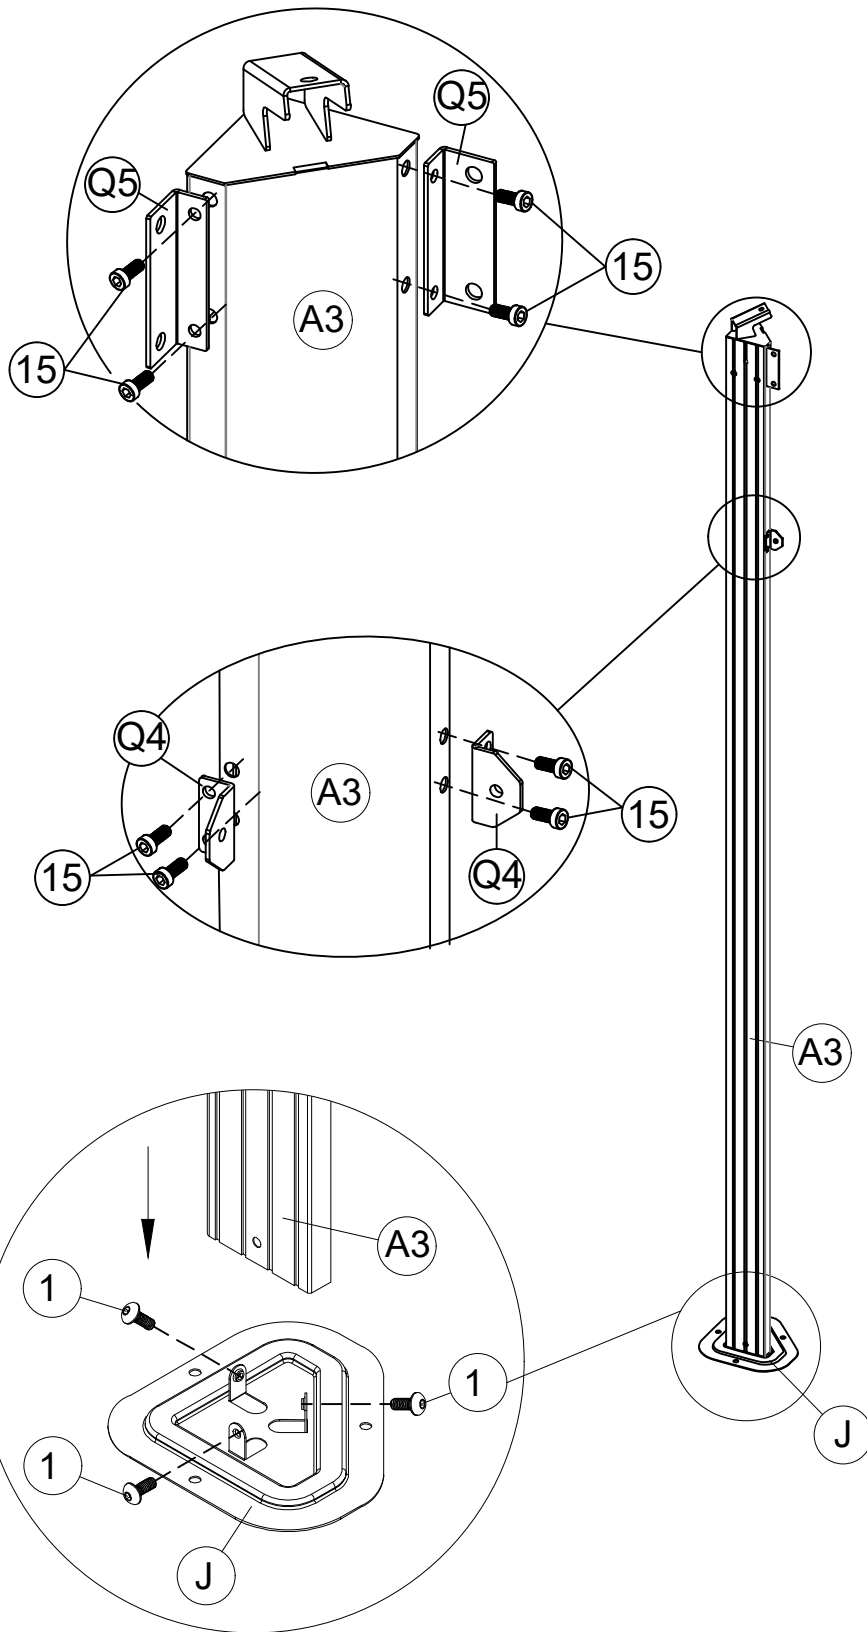


<2>

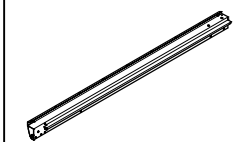

W1 2x




W2 2x

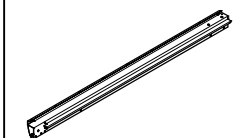

W3 2x



W4 2x

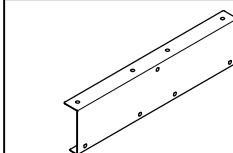



P 4x



M6x15

1 32x

6

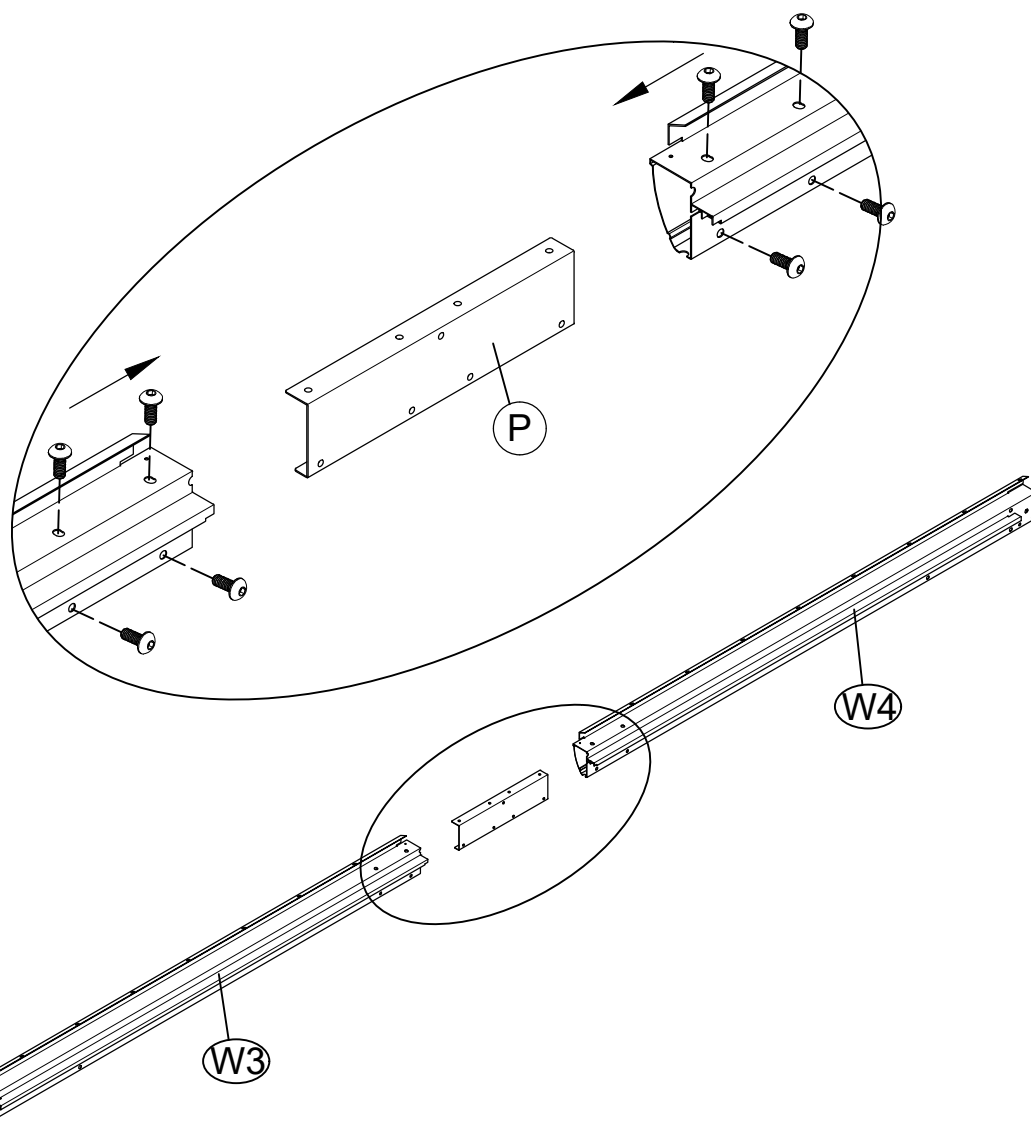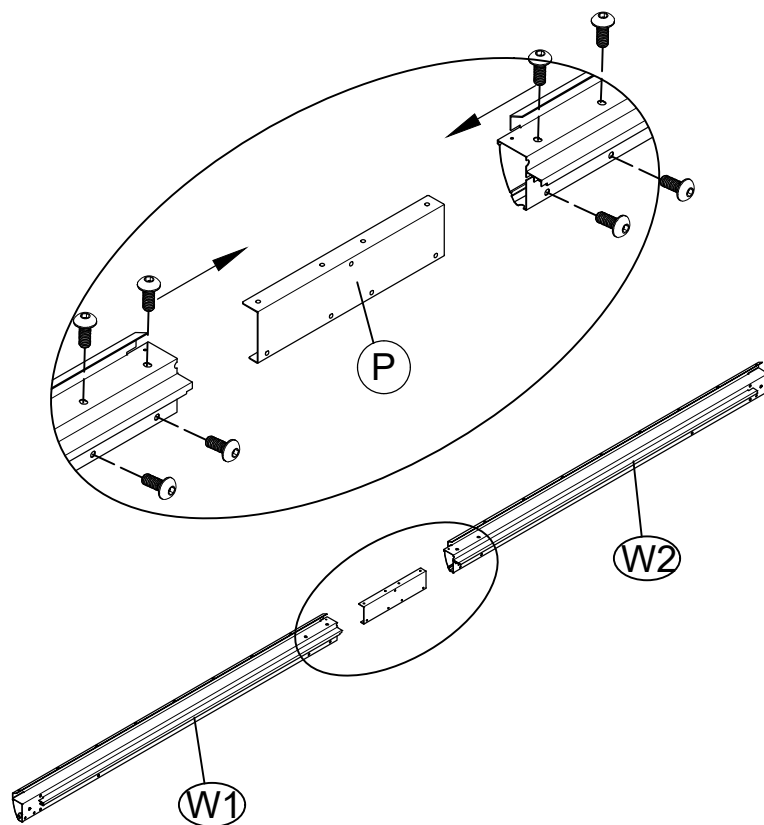




8 16x




M6x15


1 16x

<3>

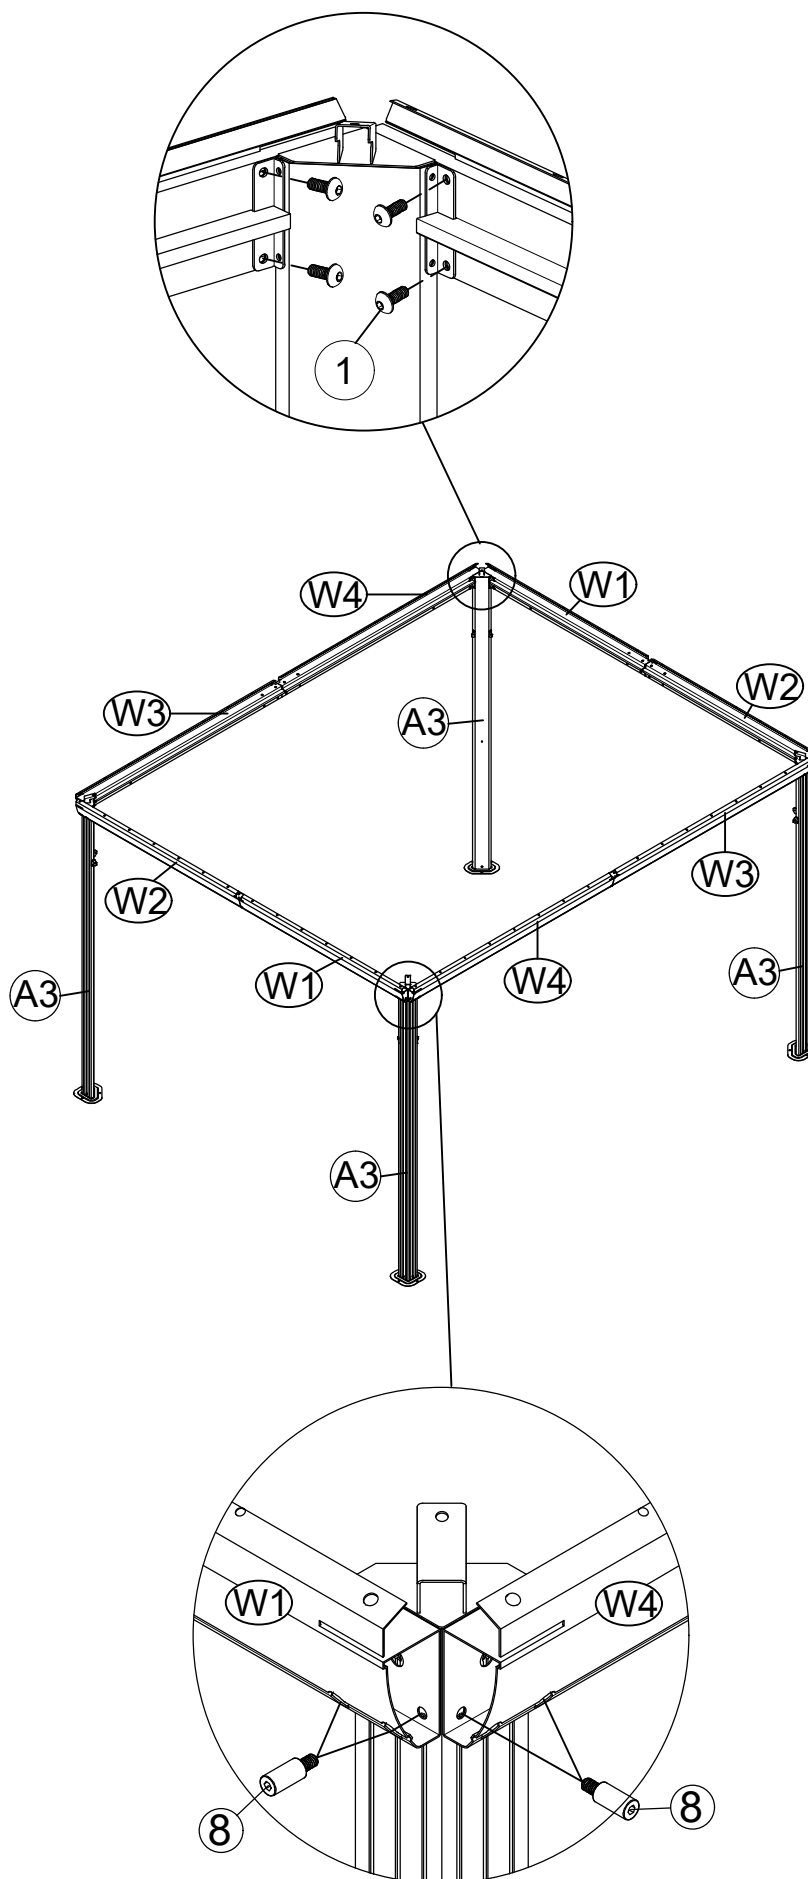



H1 4x



H 4x






M6x15

1 16x




10 12x


<4>

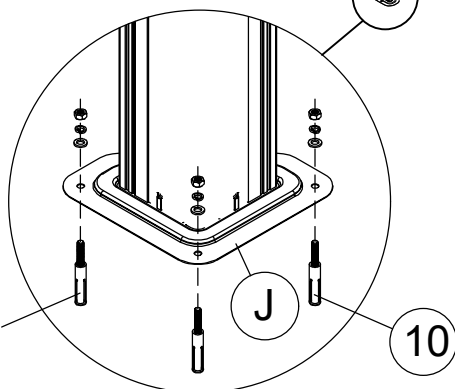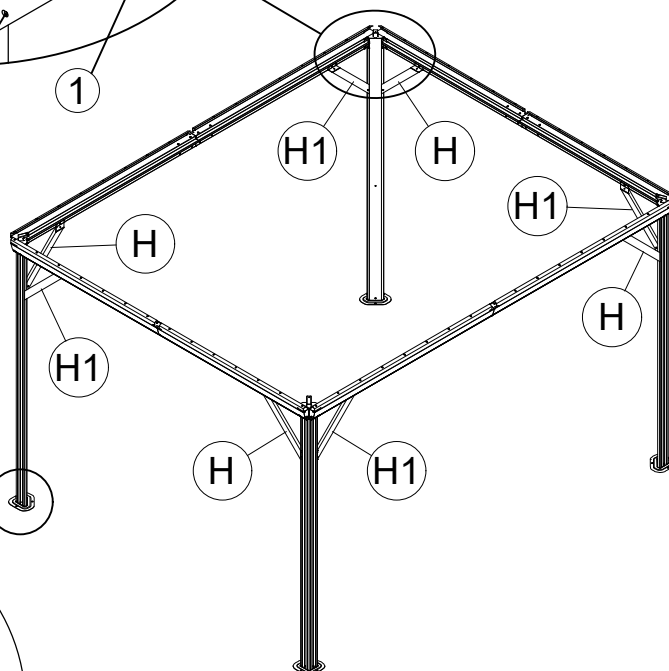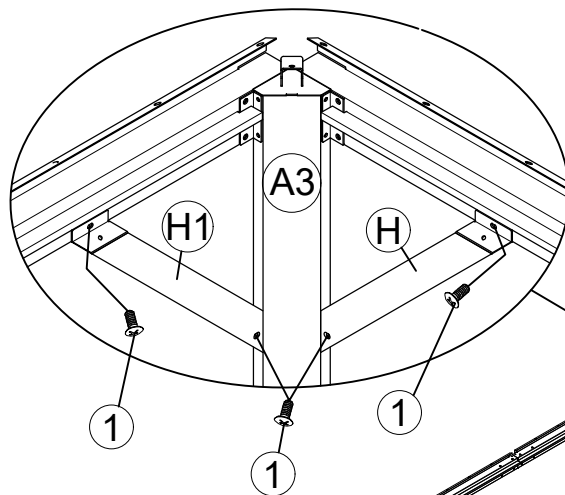


i d1=d2

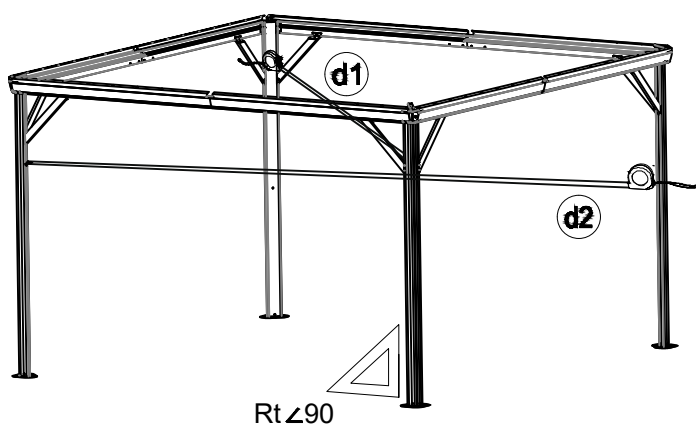

Tips: Please measure to make sure the length of d1 is equal to d2 before moving to next step to ensure a square frame and best results. Keep the beam at right angles to the post, the post at right angles to the ground, and keep the beam horizontal.

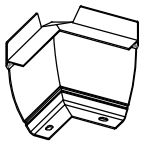

K2 4x

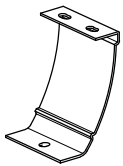

K1 4x



U1 104x



V 4x



M5x12

6 4









ST4.8x12

4 16x


9

<5>

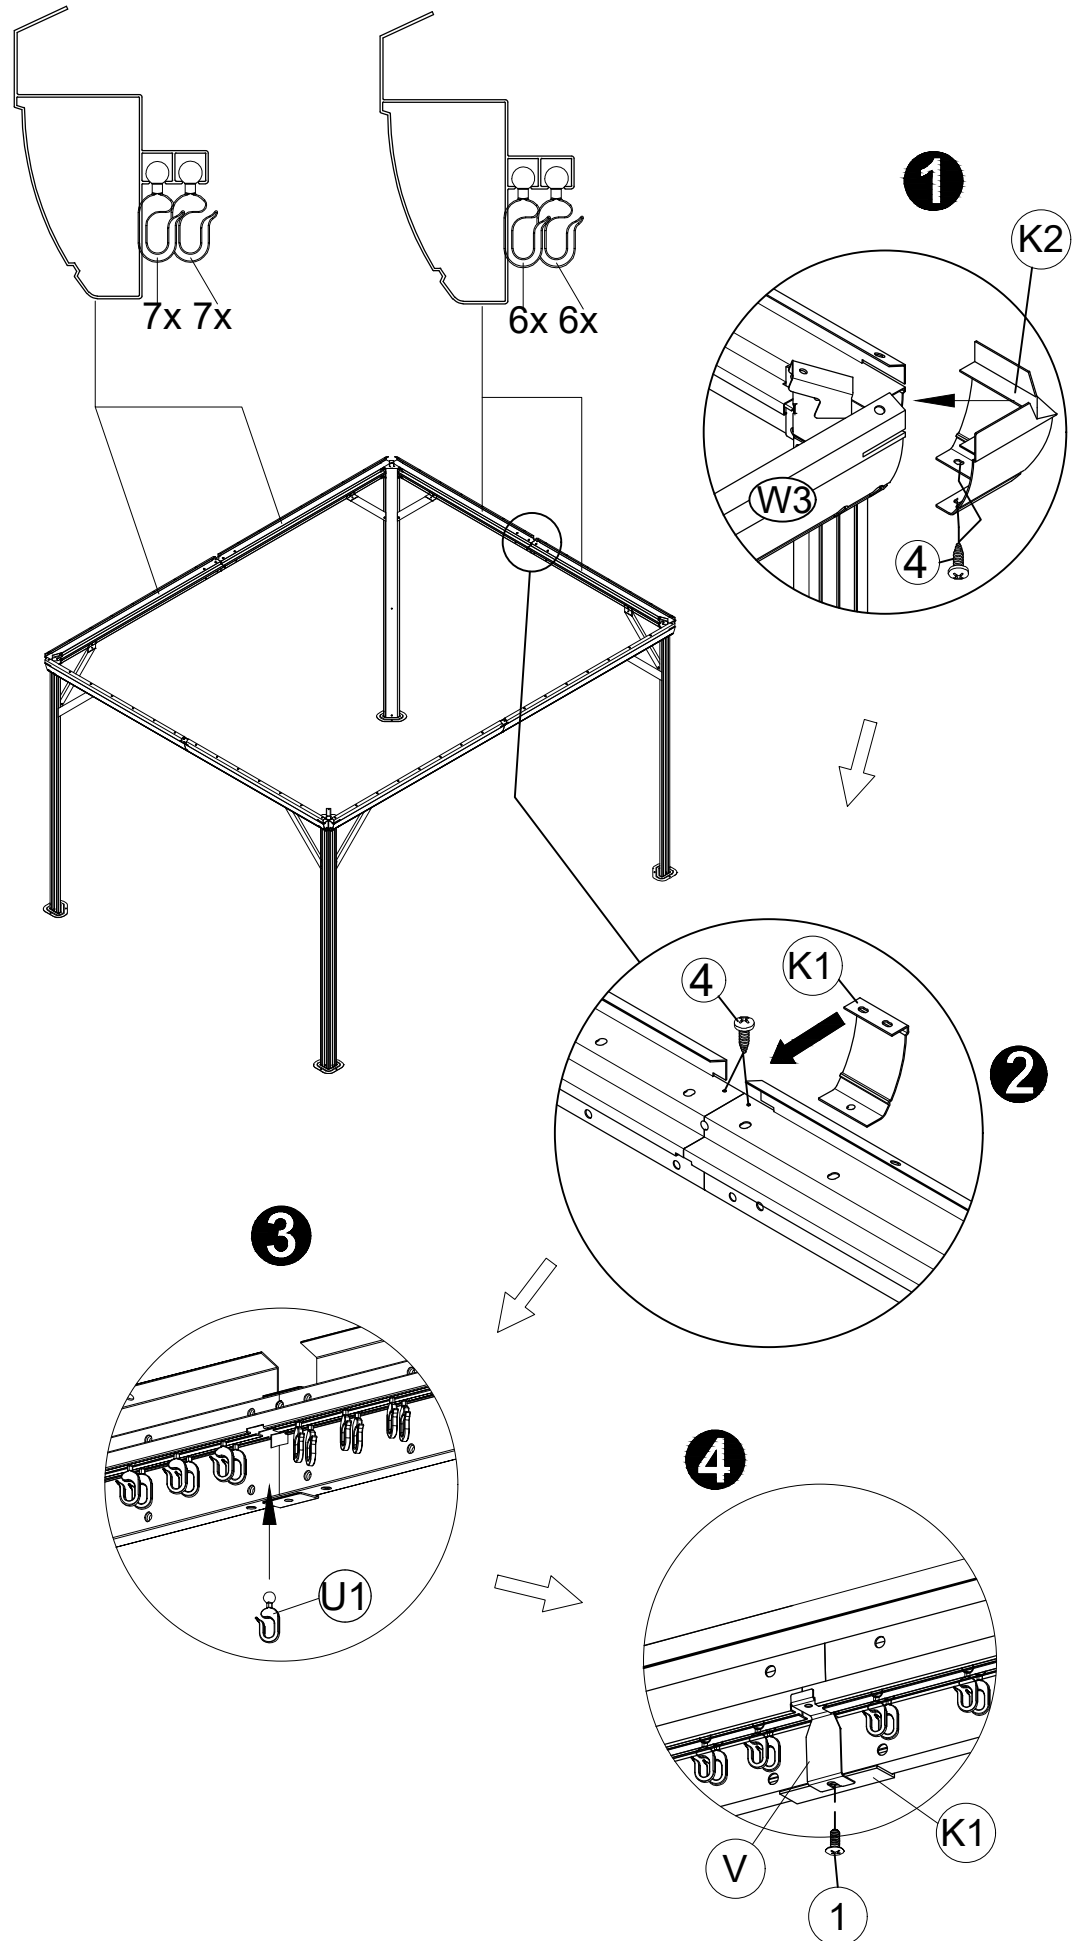

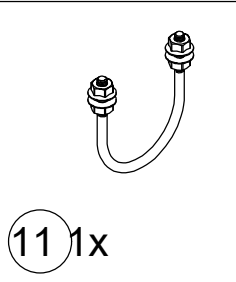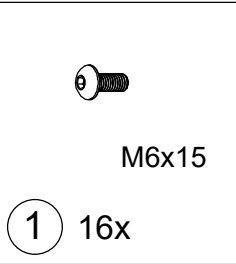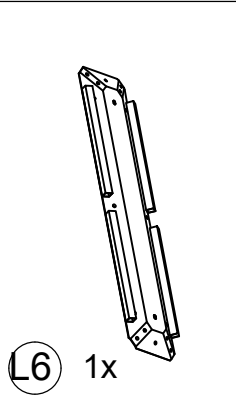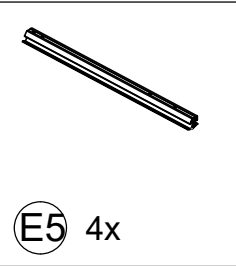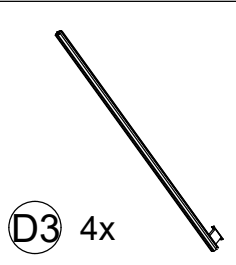


<6>

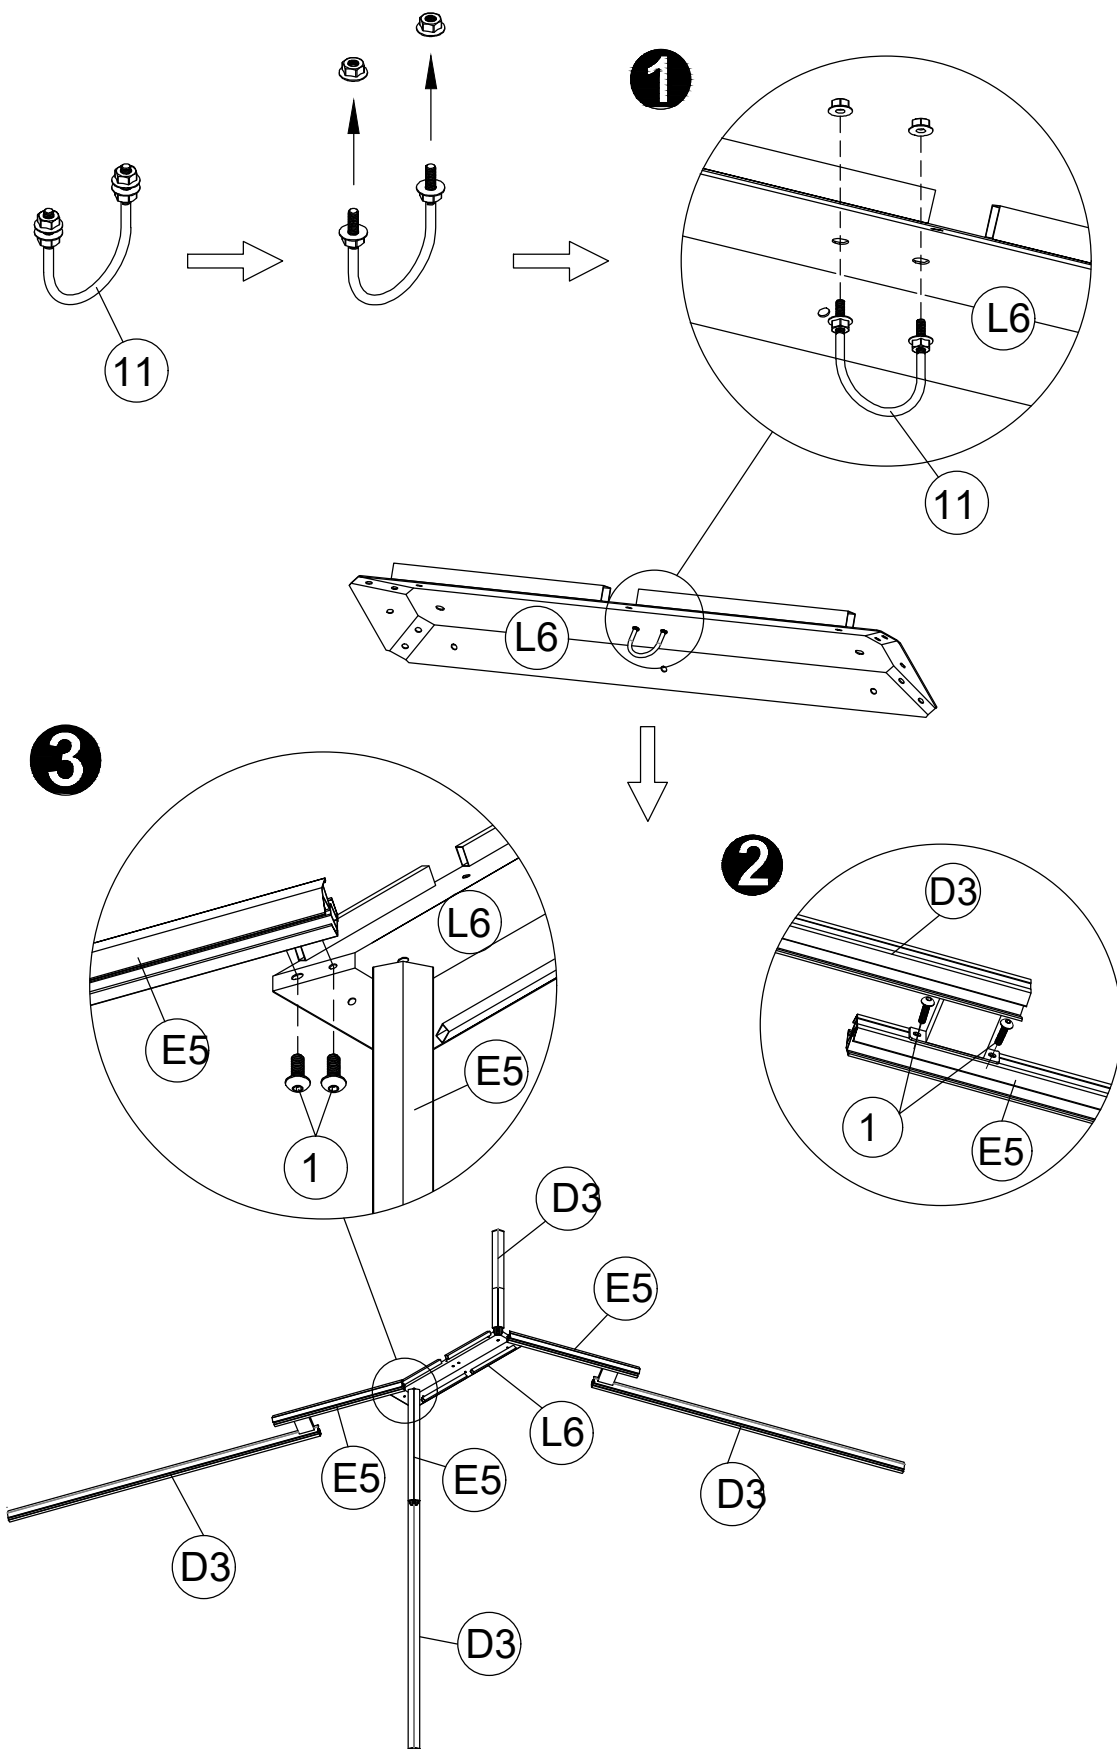




<7>

1 4x M6x15

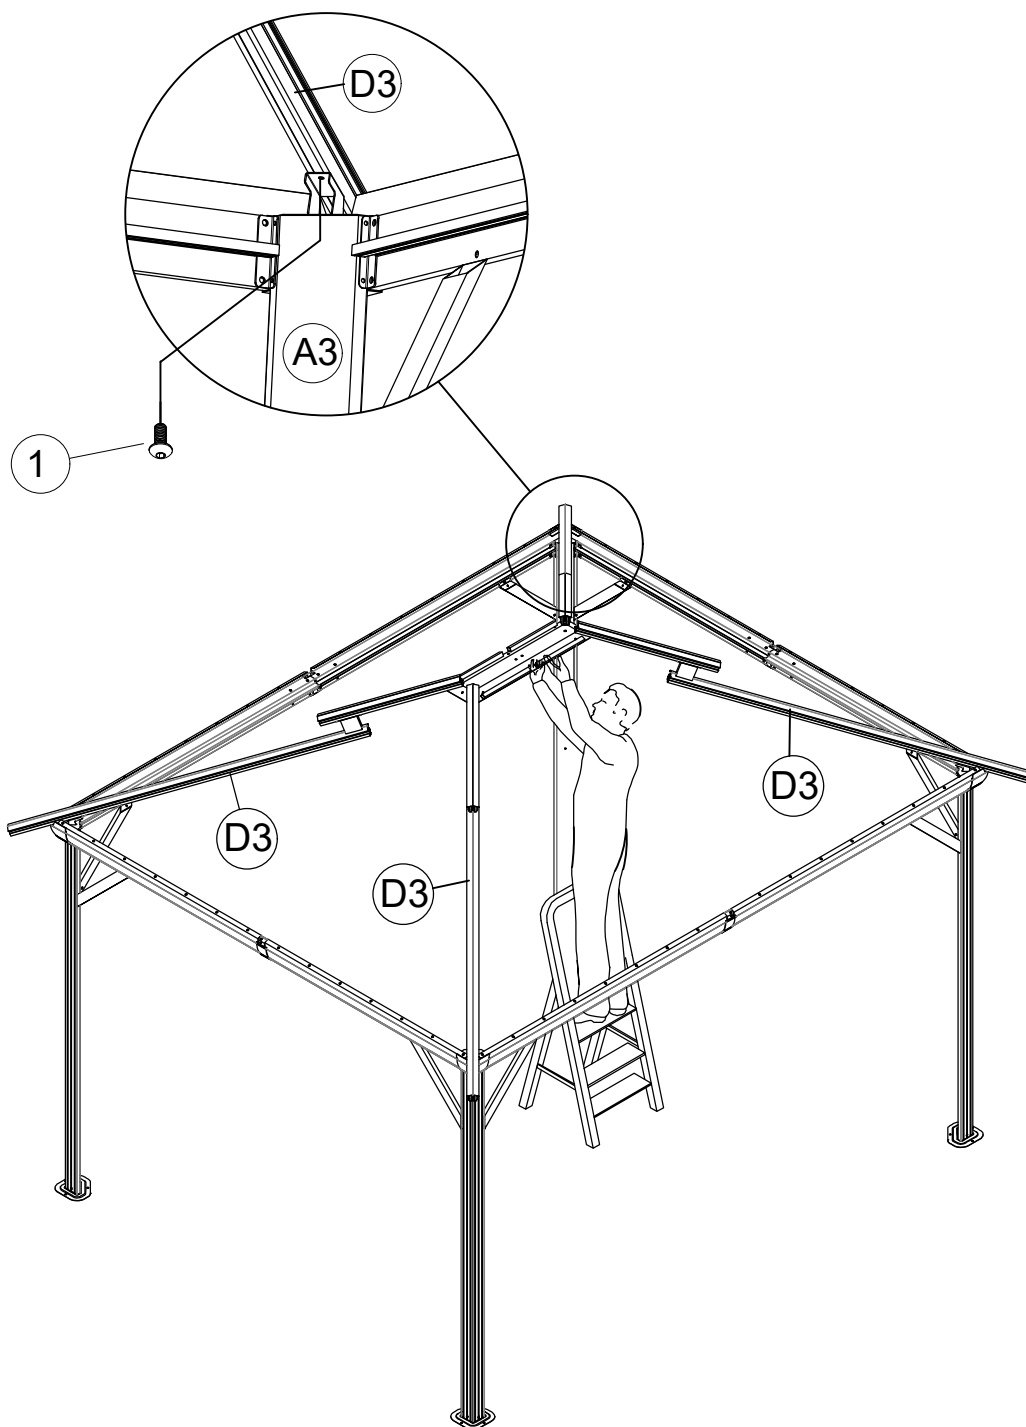


Note:


1. Let one person stand on the ladder to lift "L6" and hold and let others fasten the screws connecting both ends of "D3".
2. Please do not let go of holding "L6" until all the "D3" screws are installed.

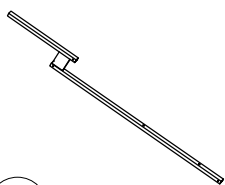

D4 2x

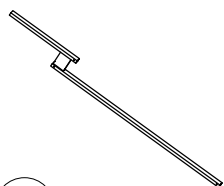

D5 2x




Q2 4x




M6x15

1 16x

<8>

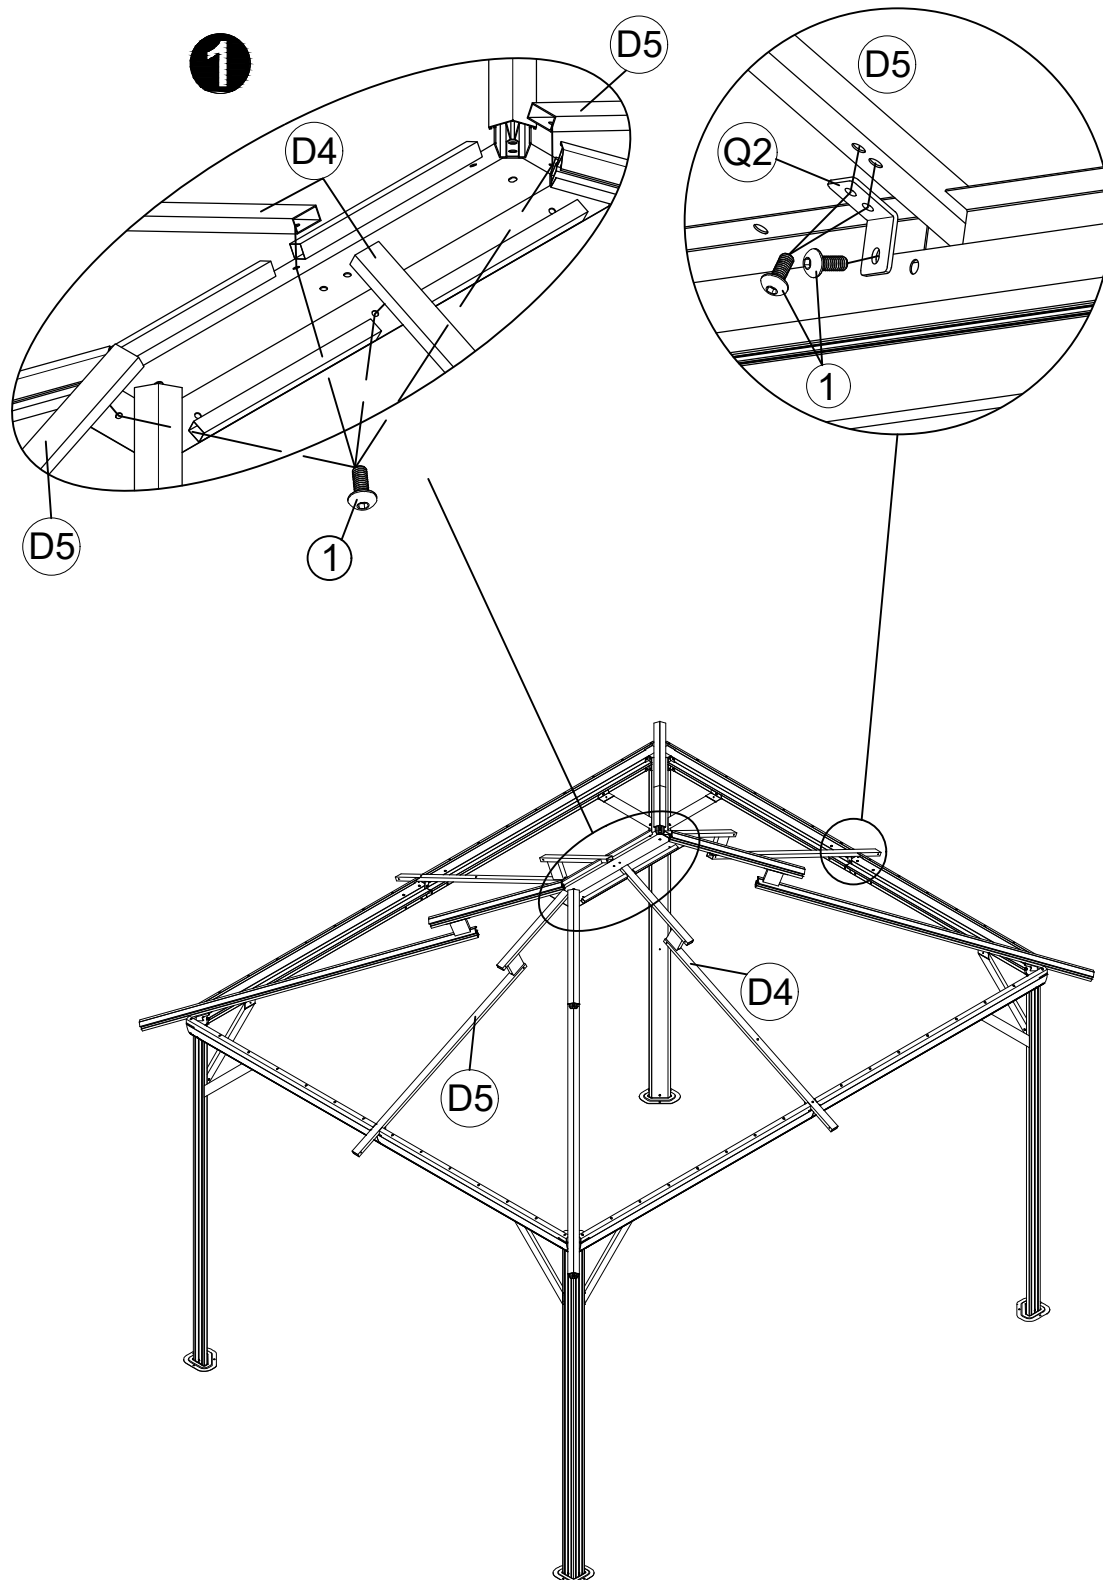

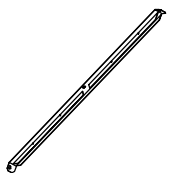

G1 2x



G9 2x







N 4x




M6x15


1 8x

<9>

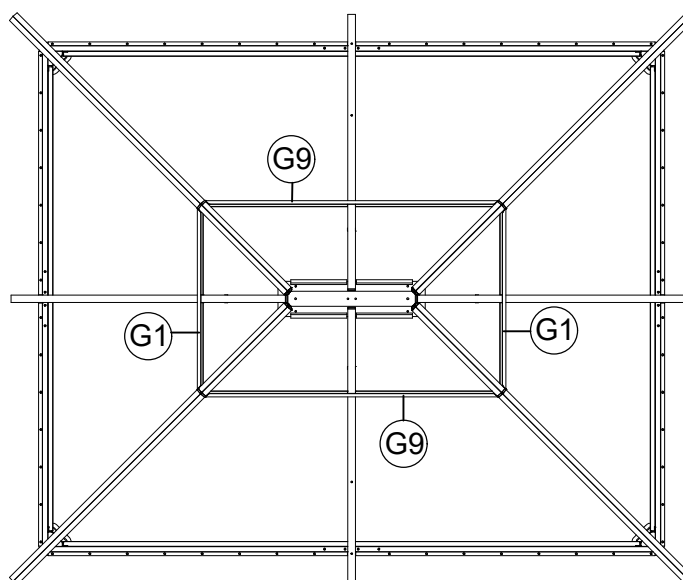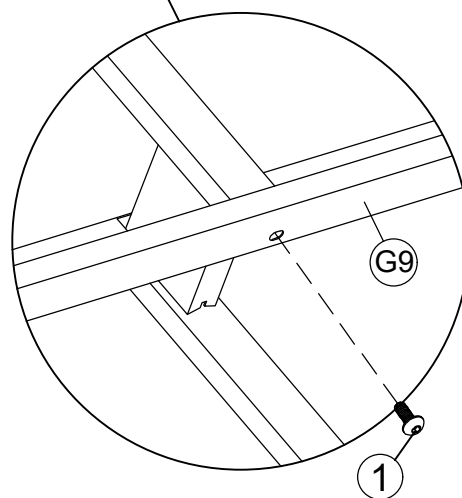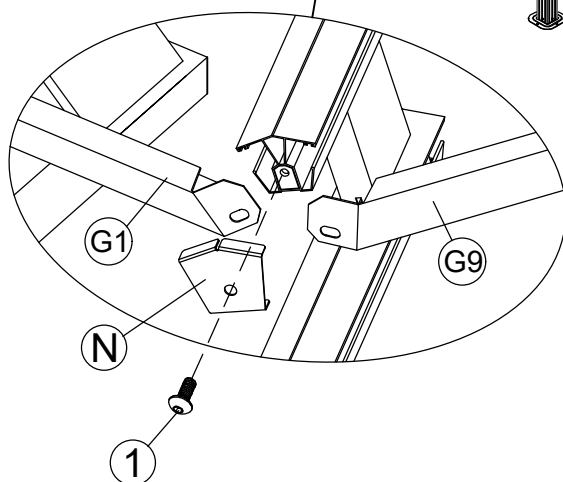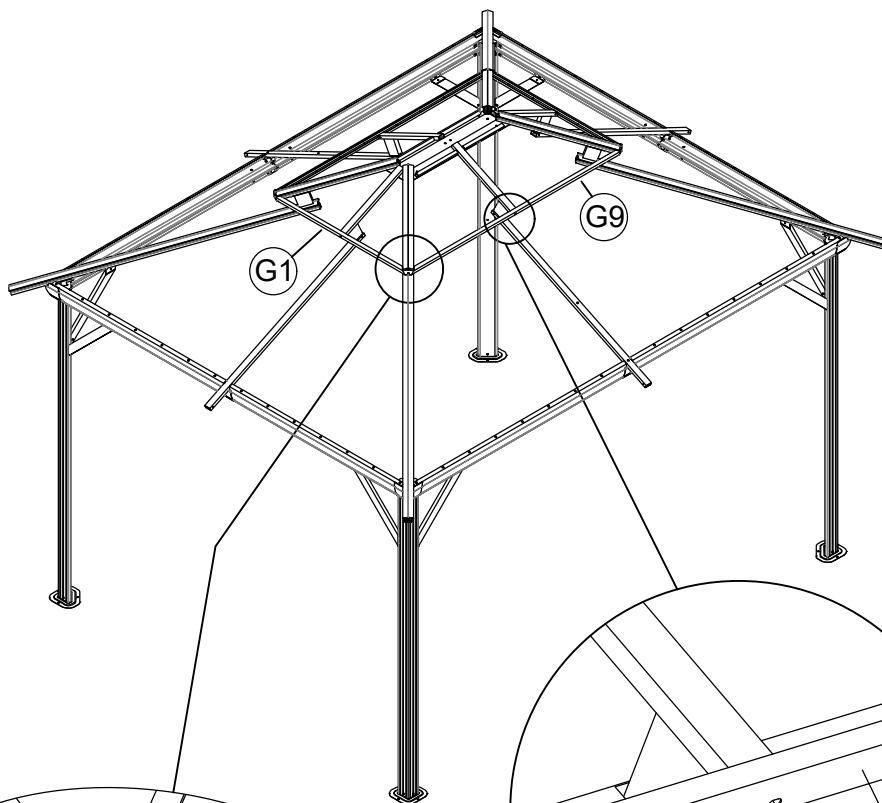





(S1) 2x (S2) 2x




(O1) 2x (O2) 2x

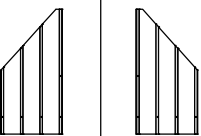


(O3) 2x (O4) 2x

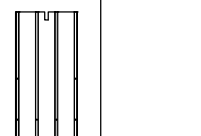


(O7) 2x



(Z) 28x

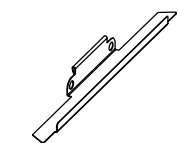


(Z1) 4x


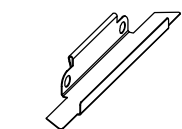


(Z2) 4x


<10>

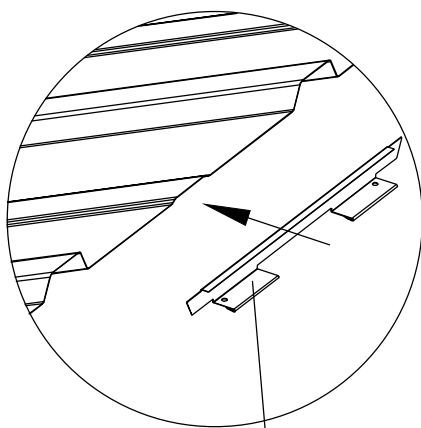


(Z) or (Z1) or (Z2)

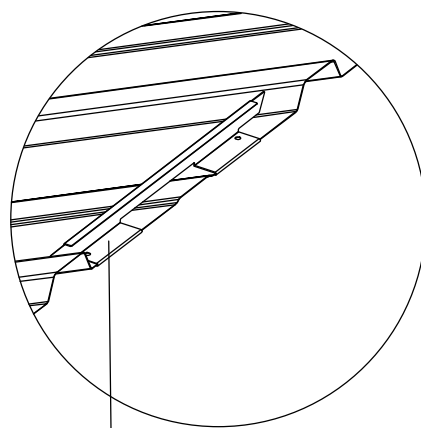


(Z) or (Z1) or (Z2)

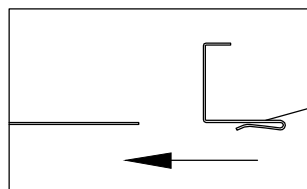


(Z) or (Z1) or (Z2)

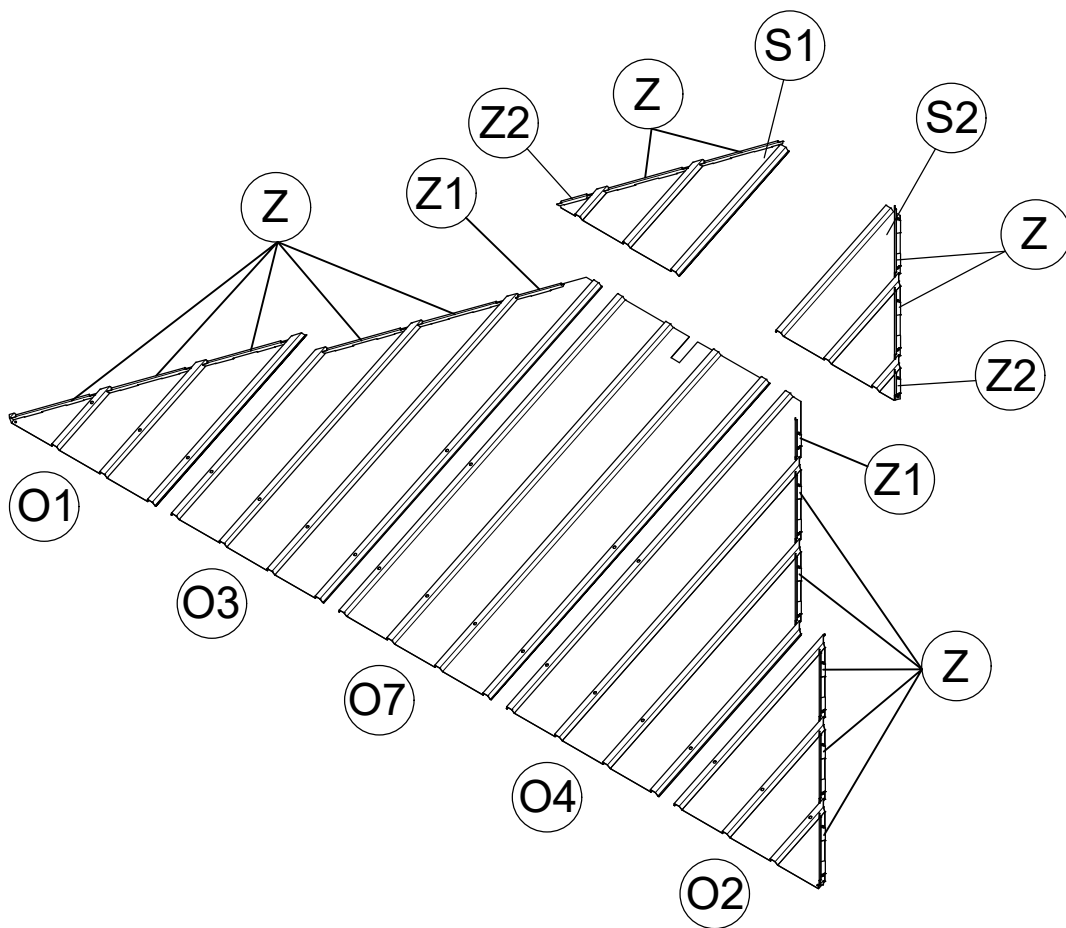





(S1) 2x (S2) 2x

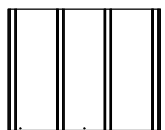


(S3) 2x




(O1) 2x (O2) 2x

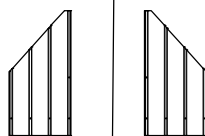


(O3) 2x (O4) 2x

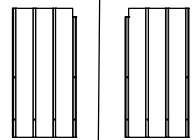


(O5) 2x (O6) 2x



(Z) 28x




(Z1) 4x





(Z2) 4x


<11>

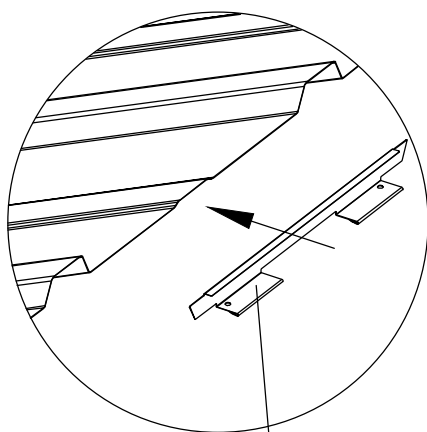


(Z) or (Z1) or (Z2)

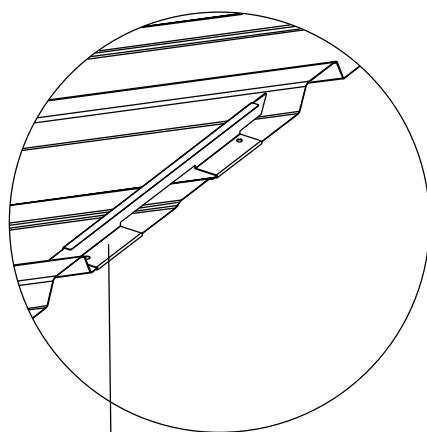


(Z) or (Z1) or (Z2)

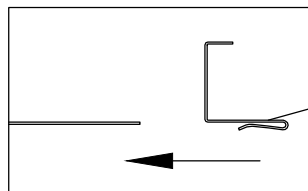


(Z) or (Z1) or (Z2)

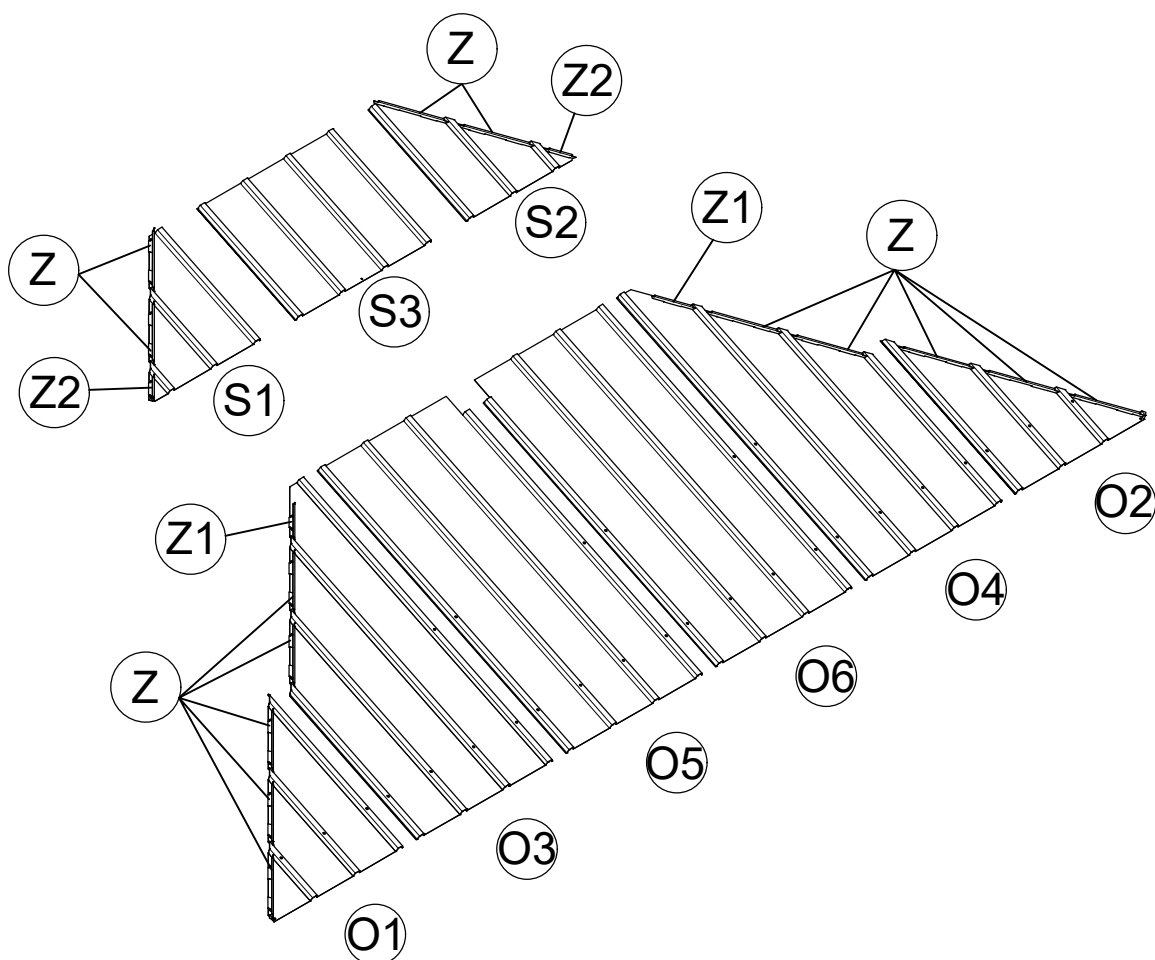


<12>

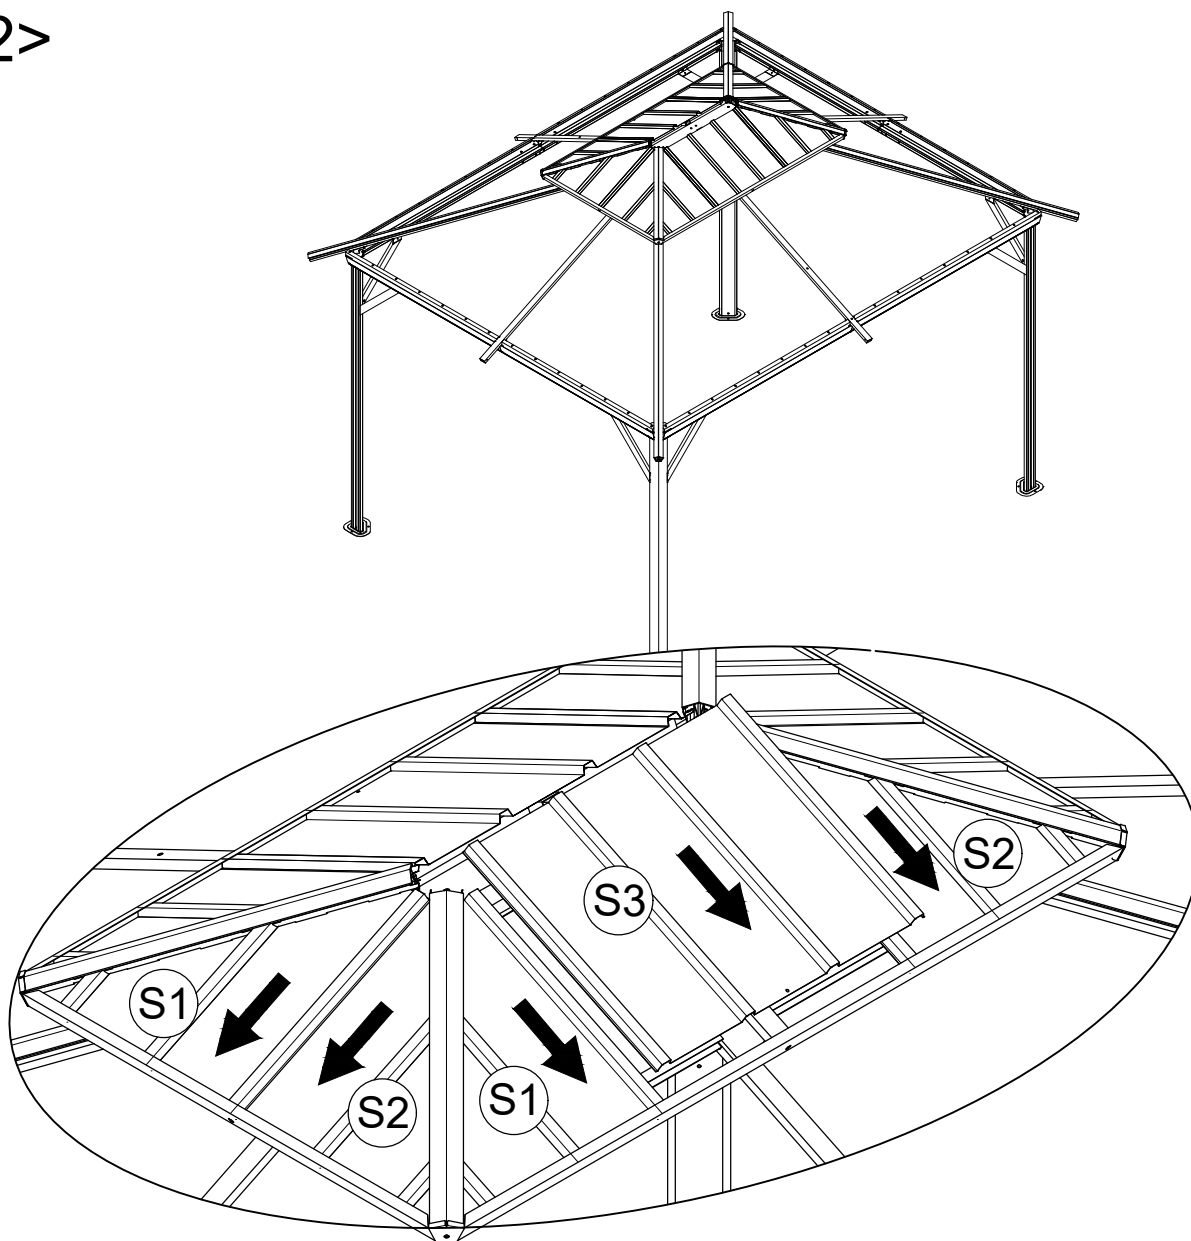

When installing the Roof plates (S2) onto short side, pls detach the right end of Roof Rib(G1) first. And then install the right end of Roof Rib (G1) again after S2 is installed.

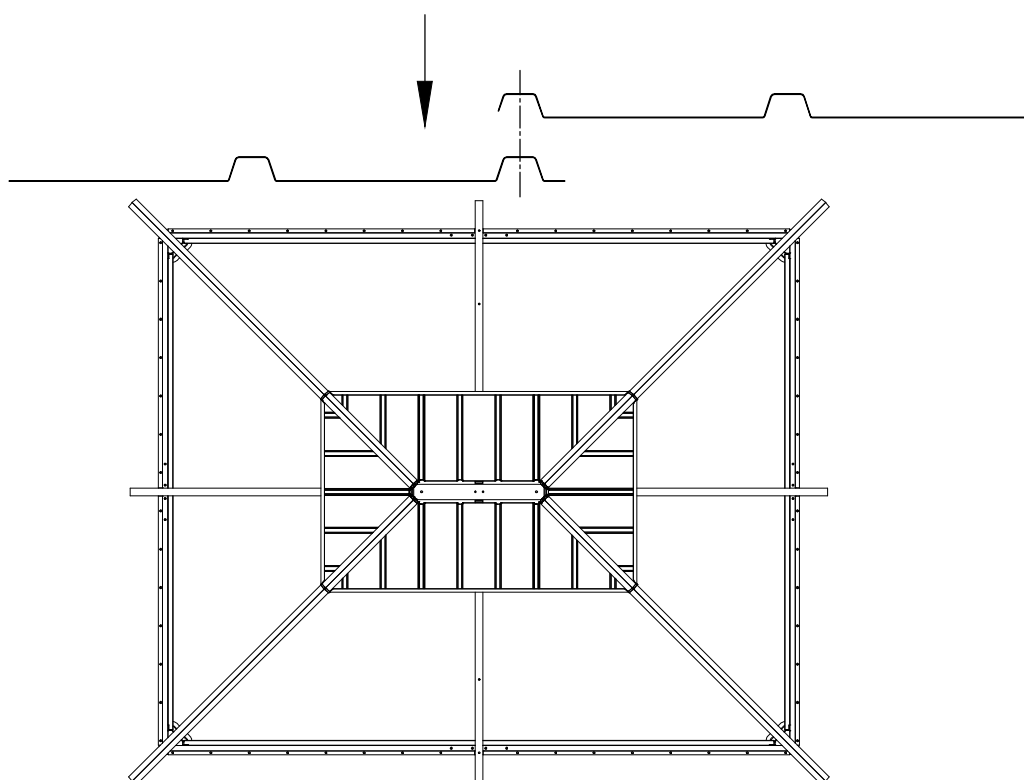






M2 1x



5 2x

<13>

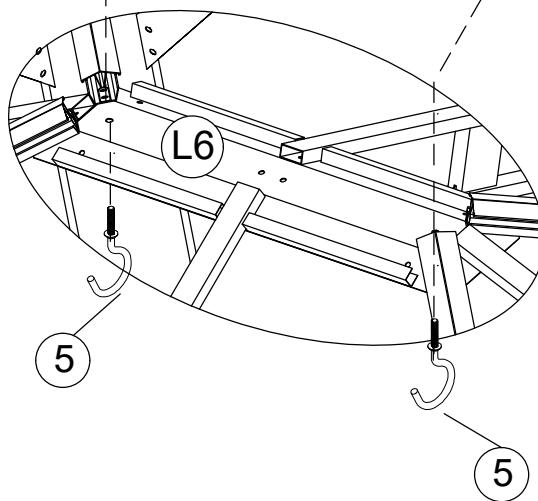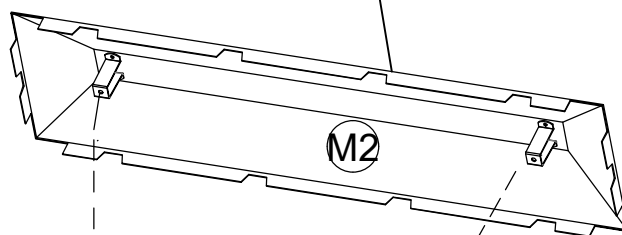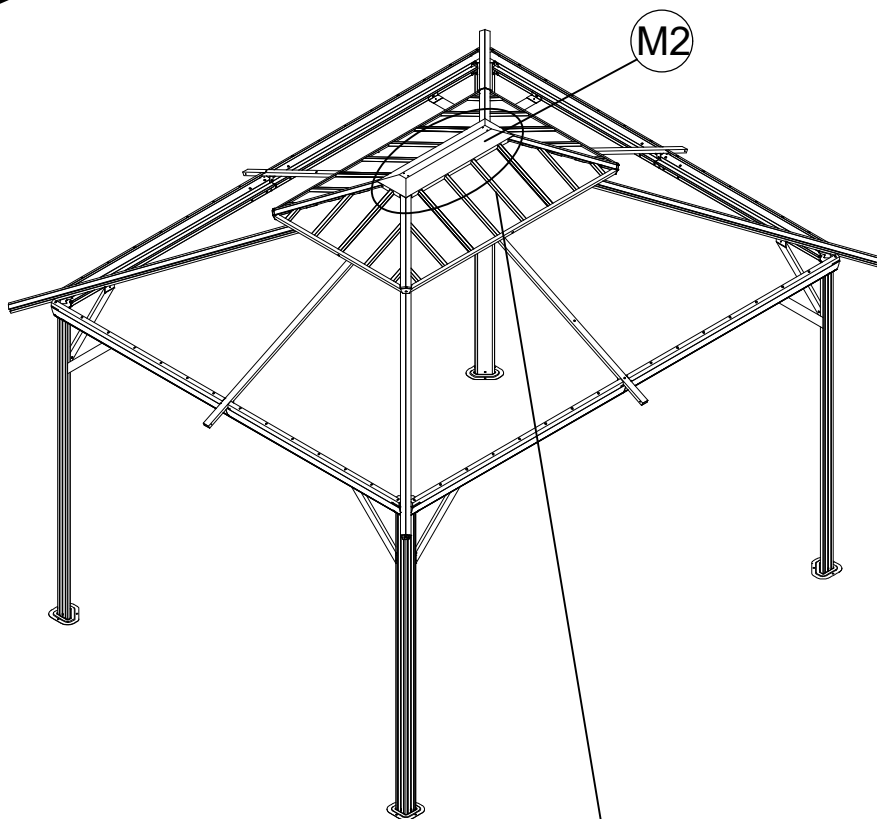

<14>





F7 4x

F6 4x












F9 2x

F10 2x


1 8x M6x15

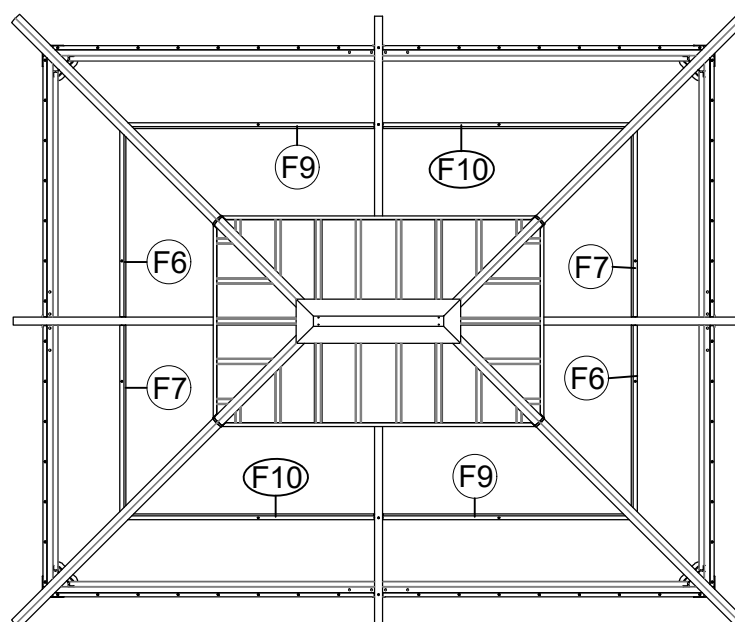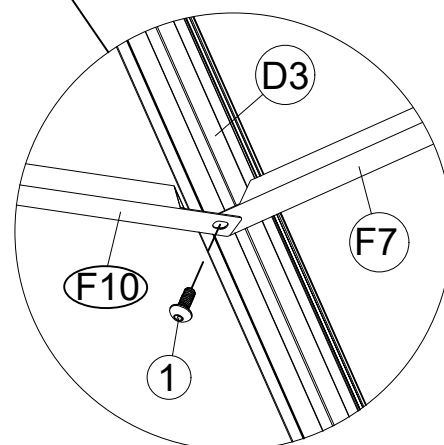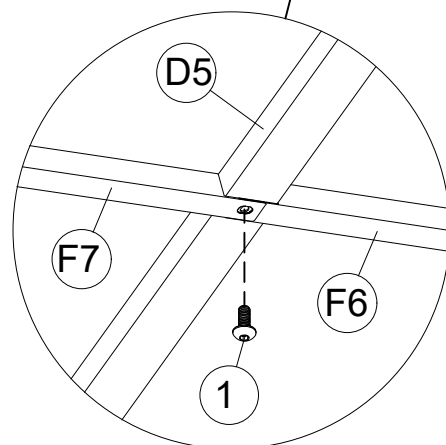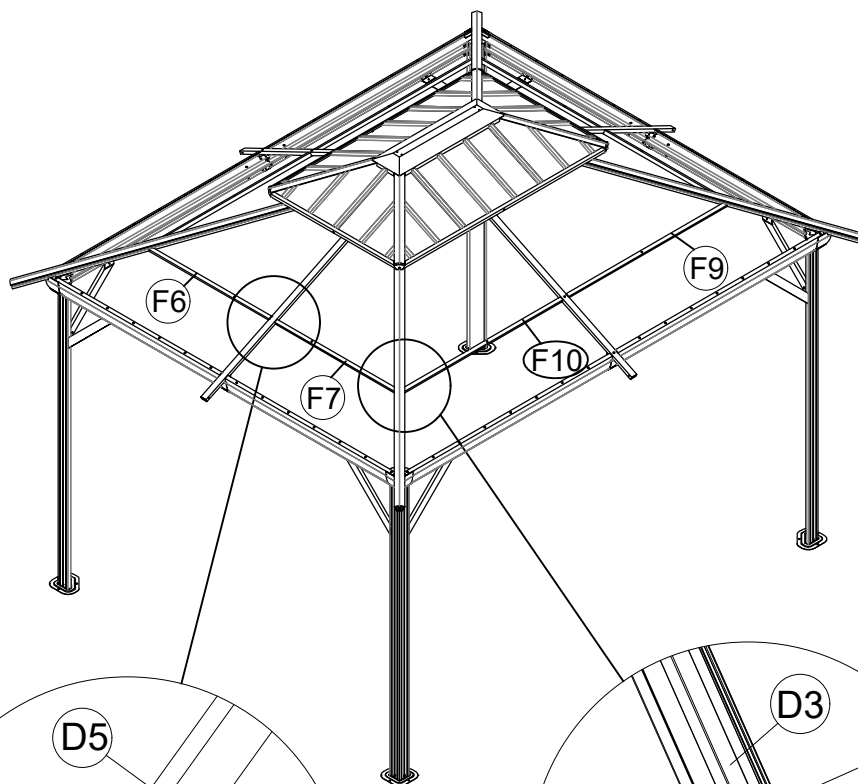



<15>

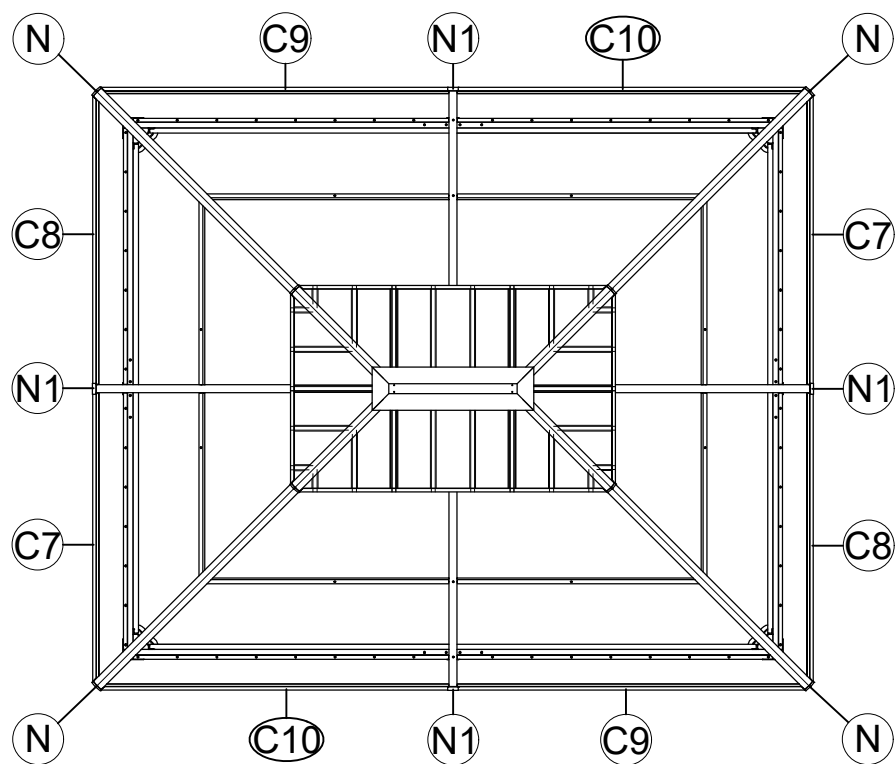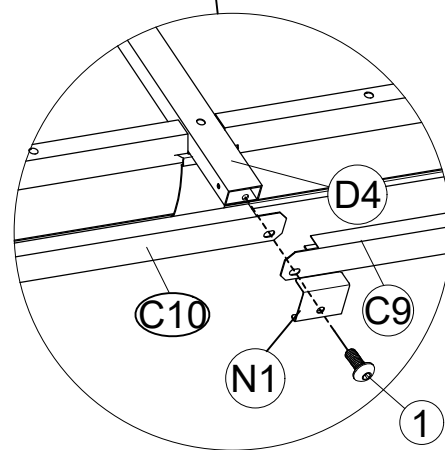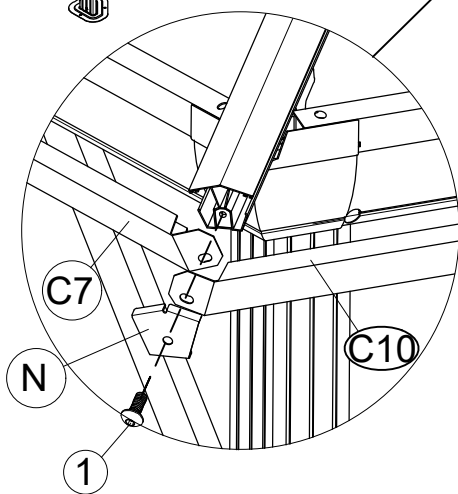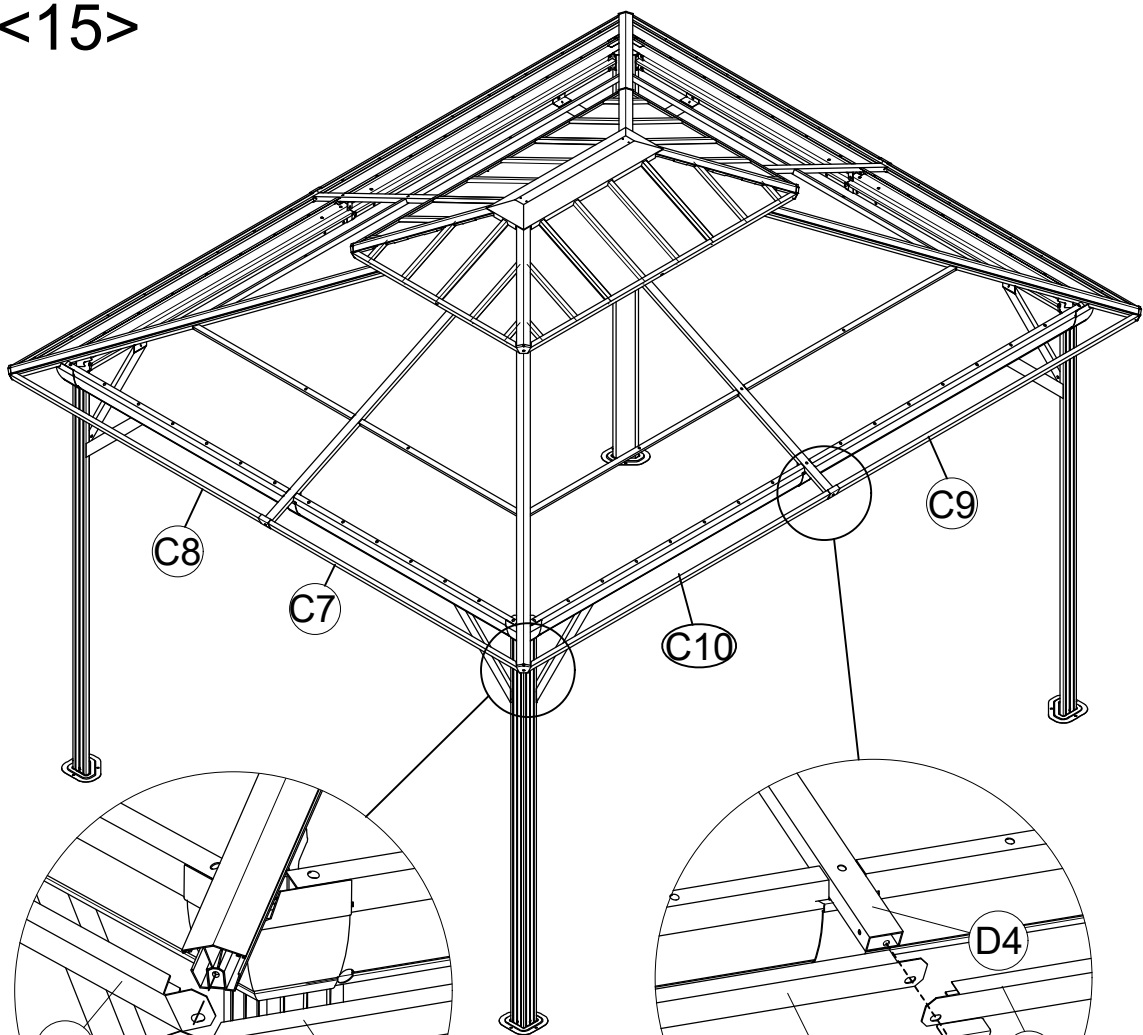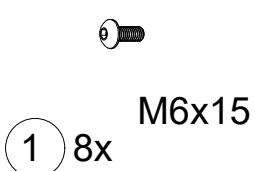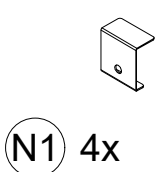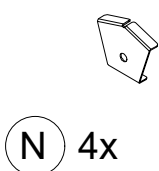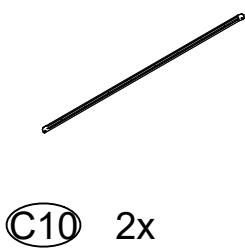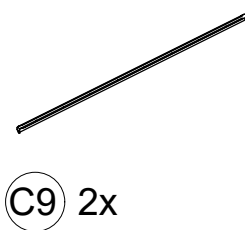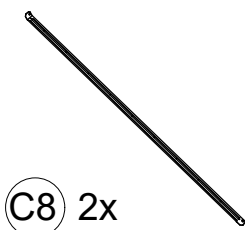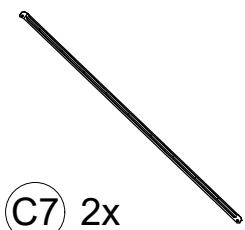



<16>

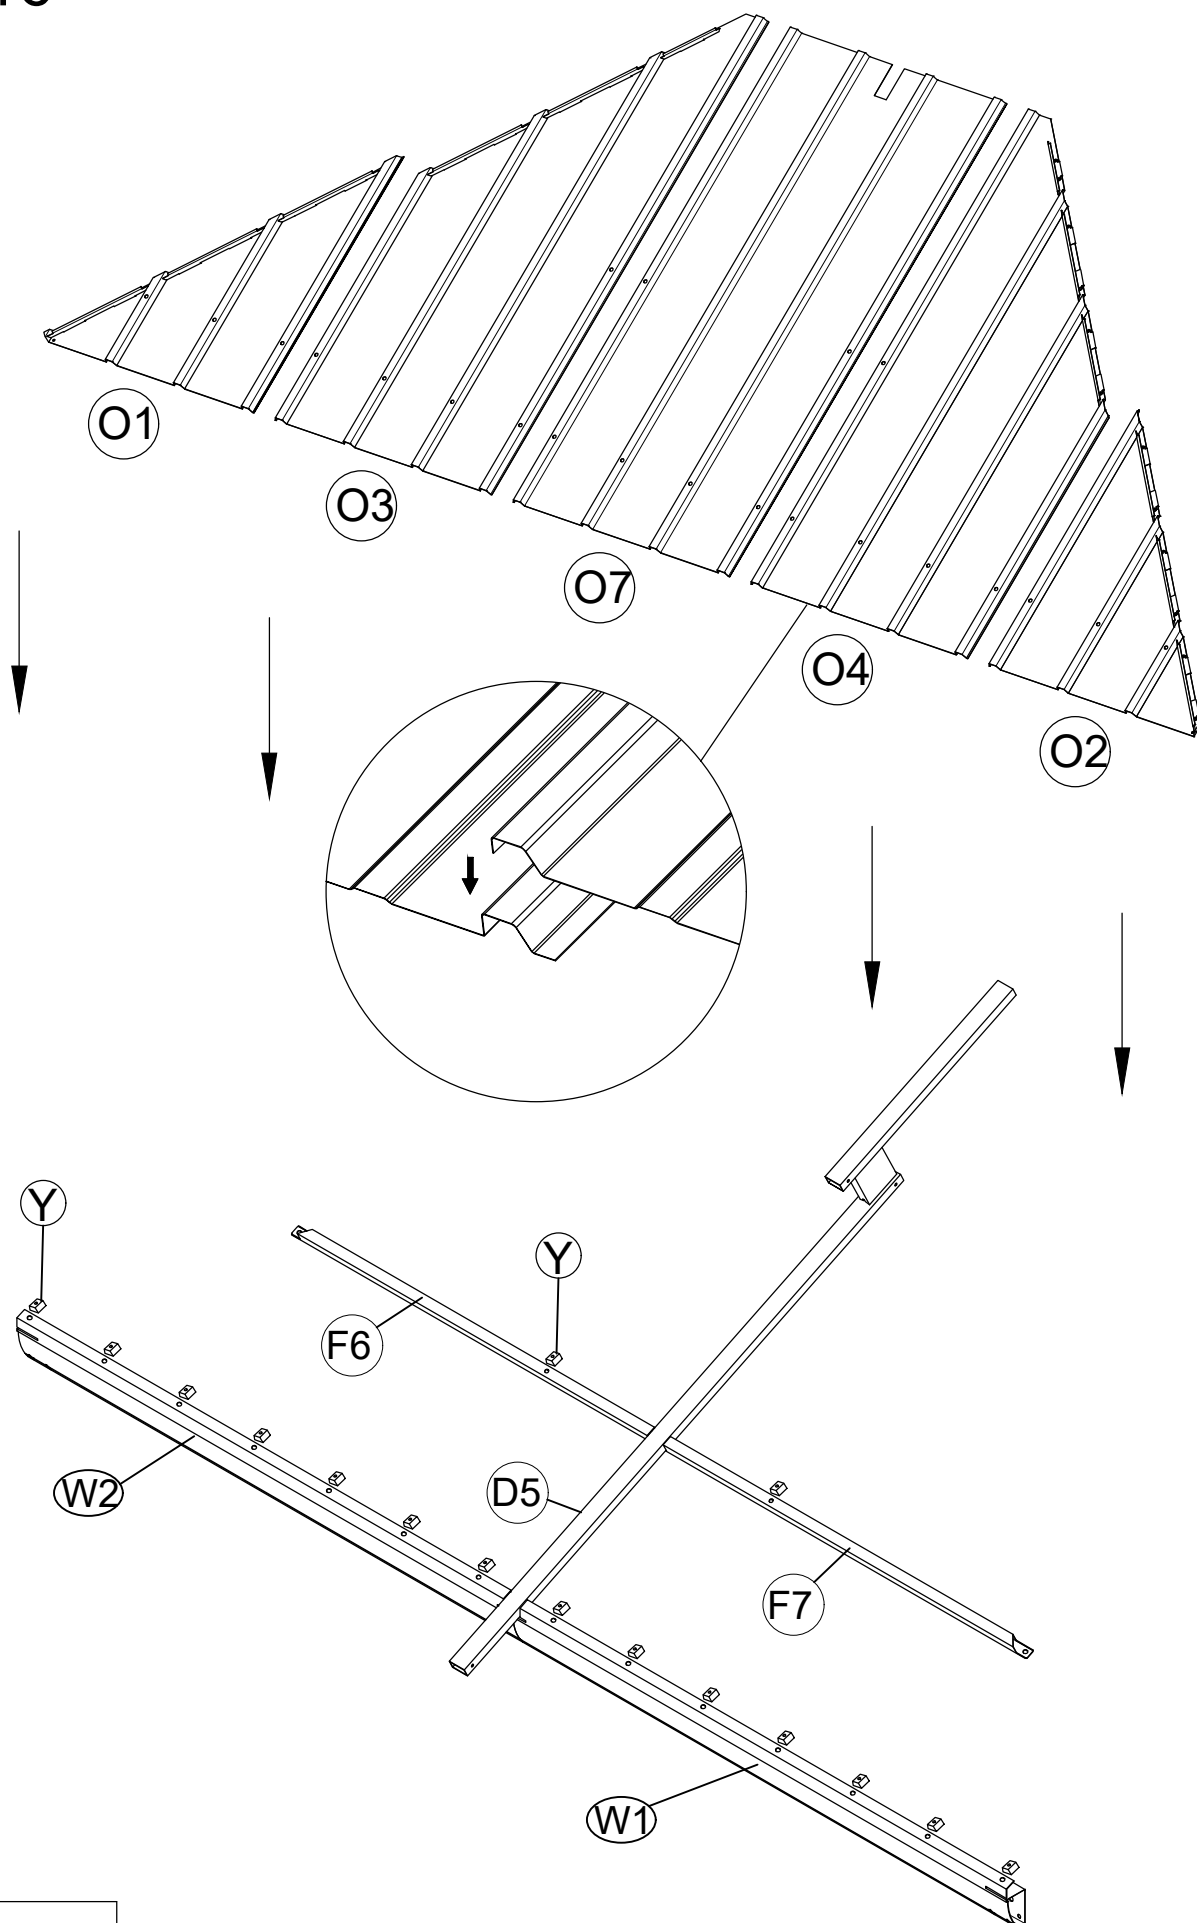

<17>

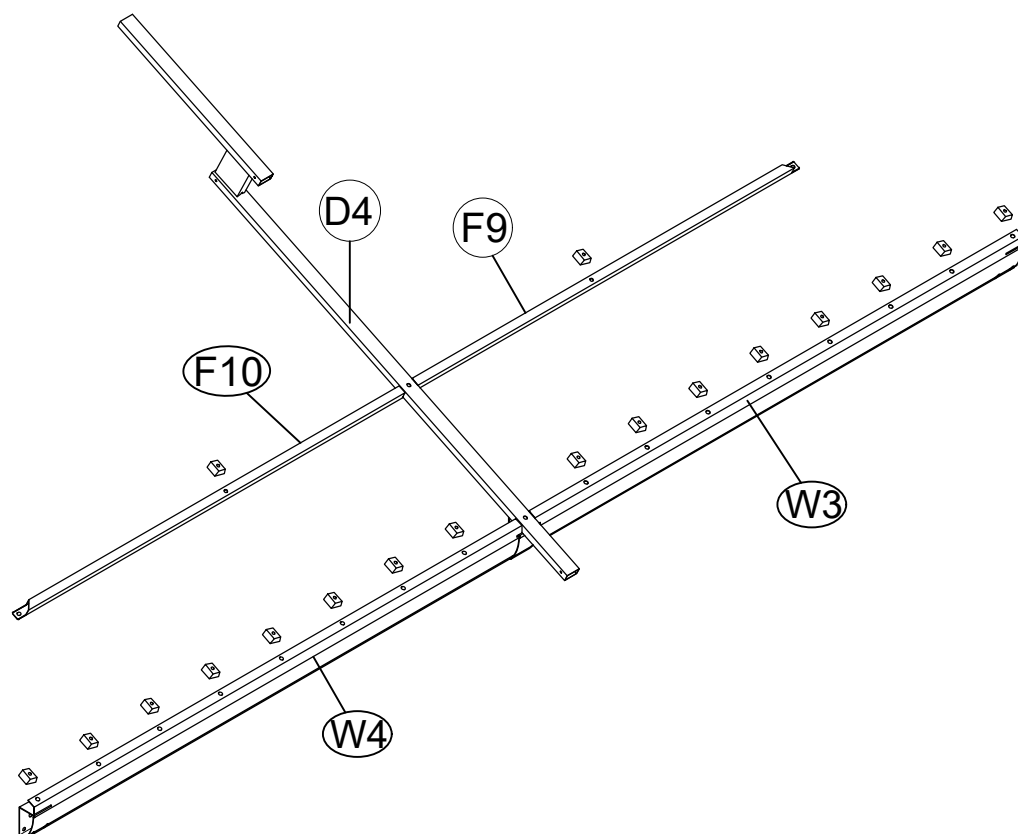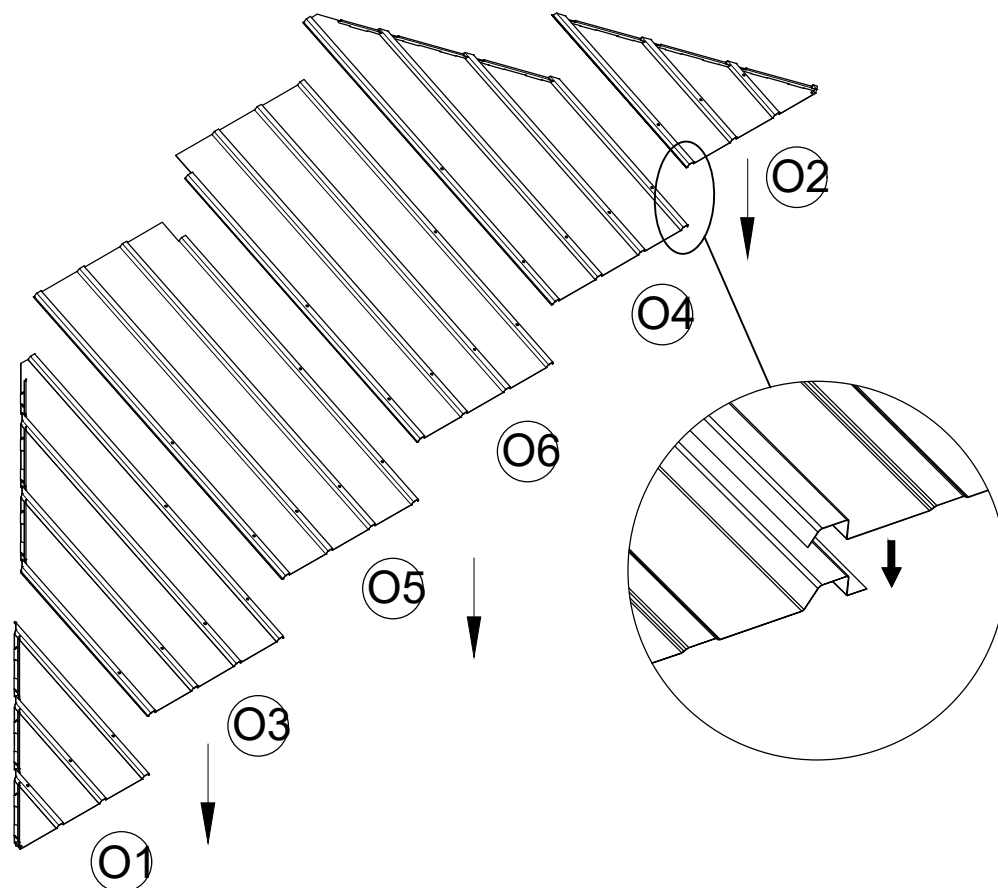

<18>

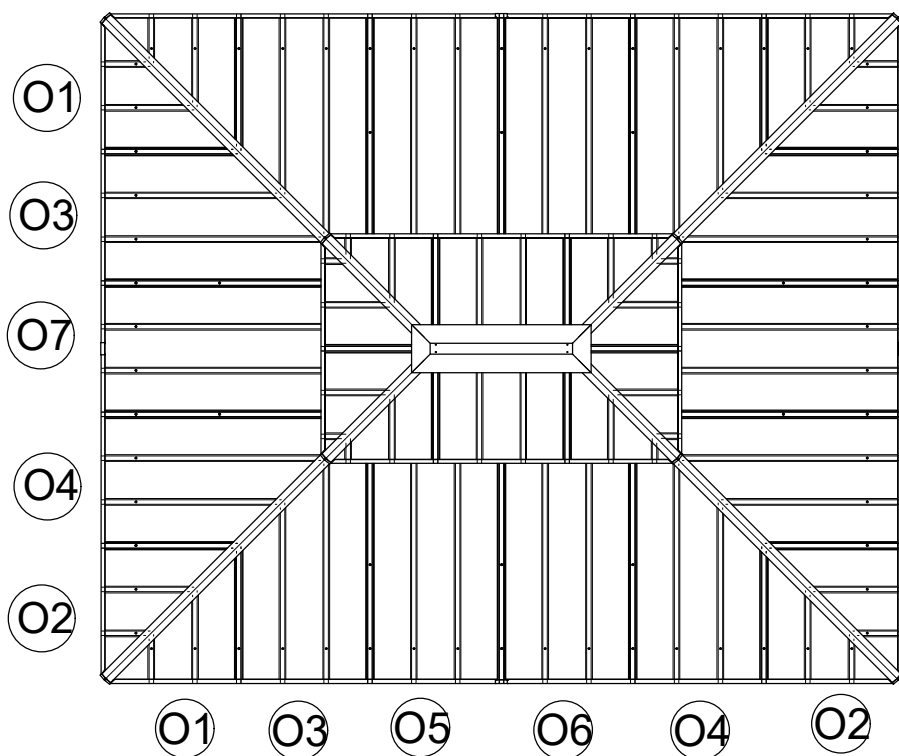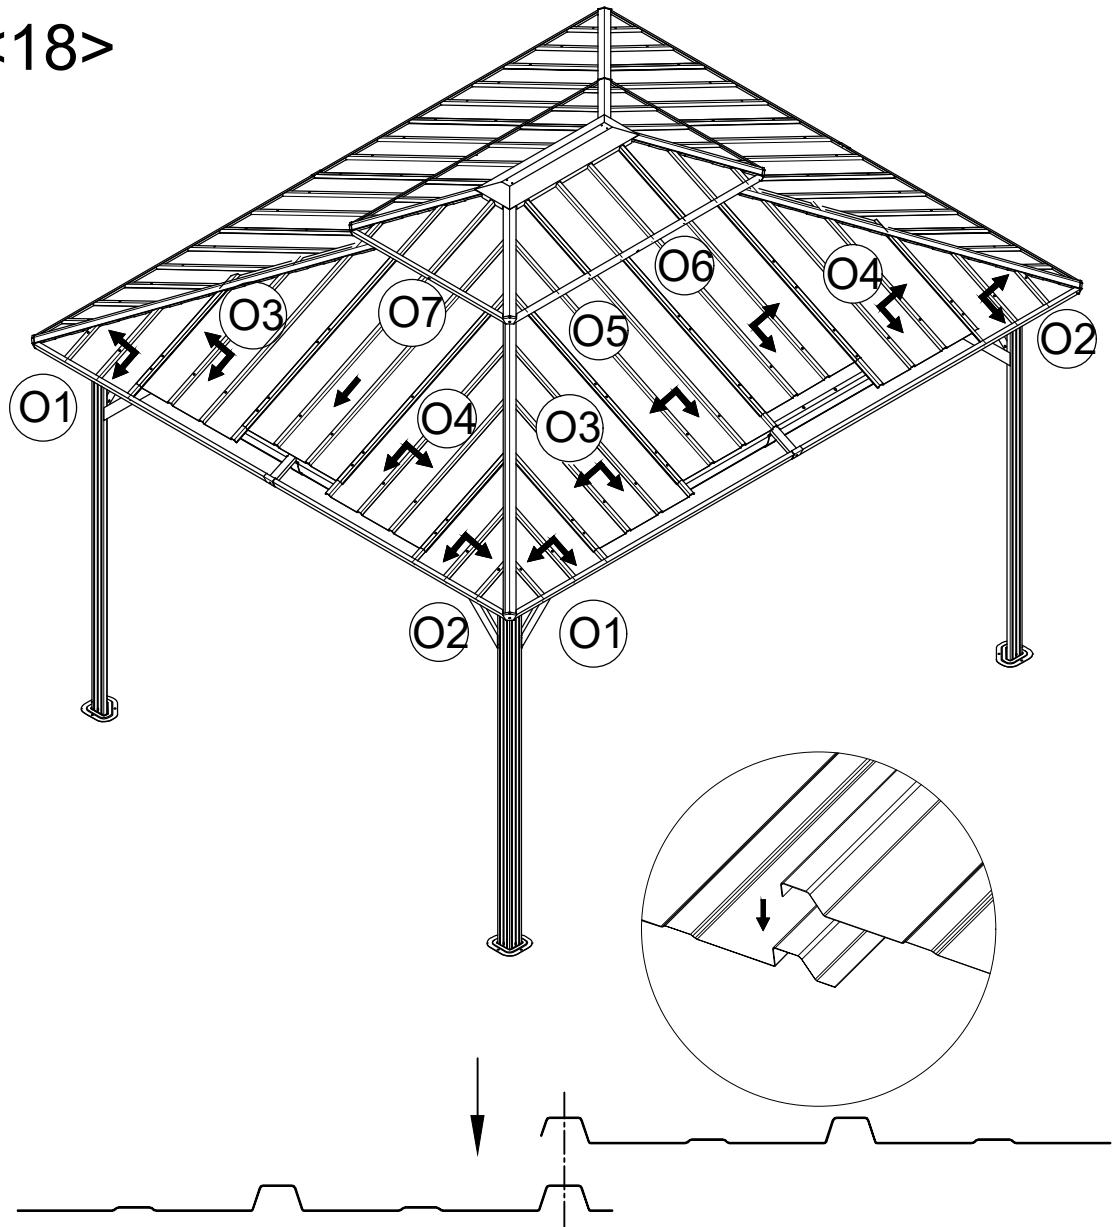



Y 68x



M6x25

3 4x



M6x23




2 60x




M6x45


7 8x

<19>

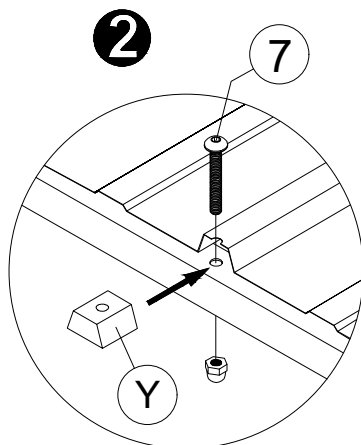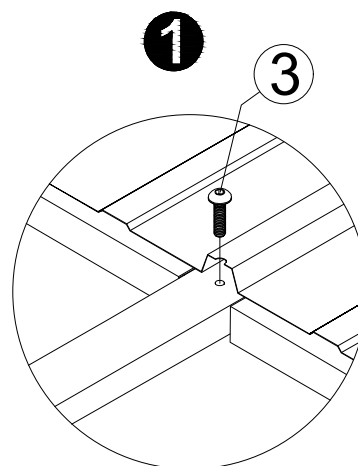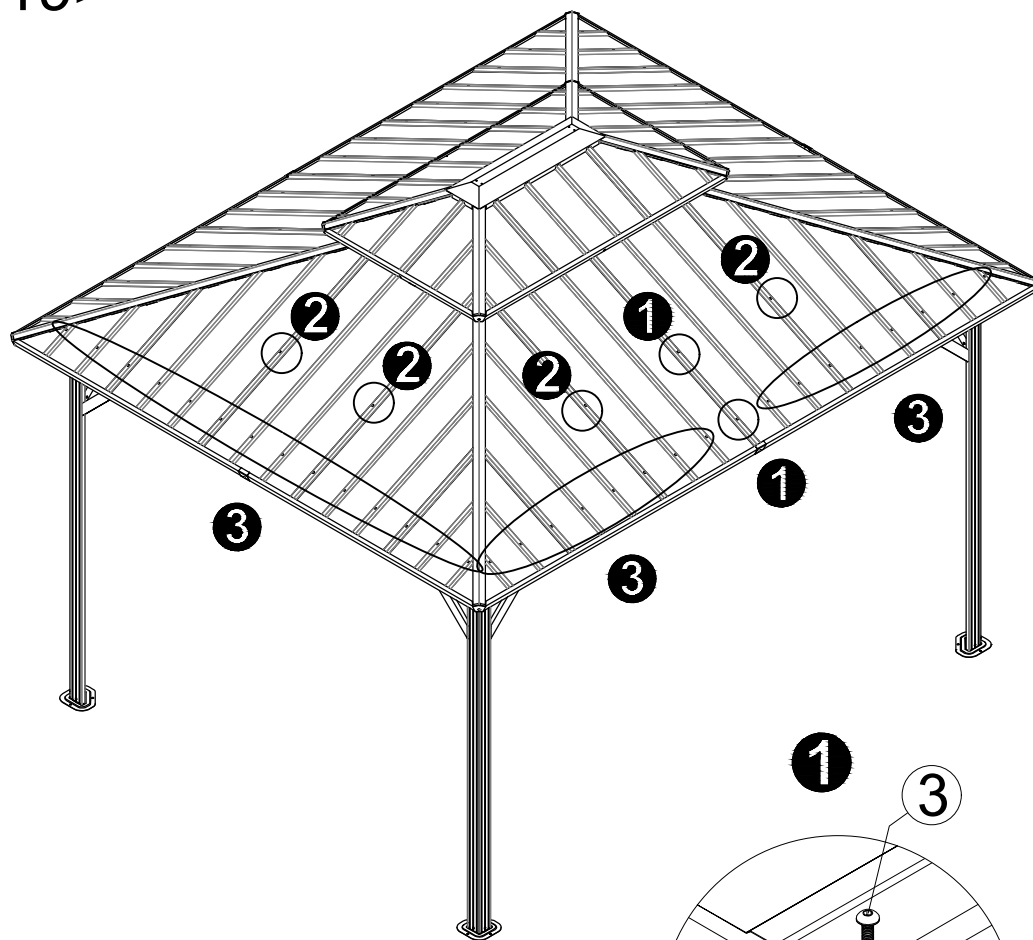


Note: When installing the roof top plates, if the roof plates are slightly uneven, please press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

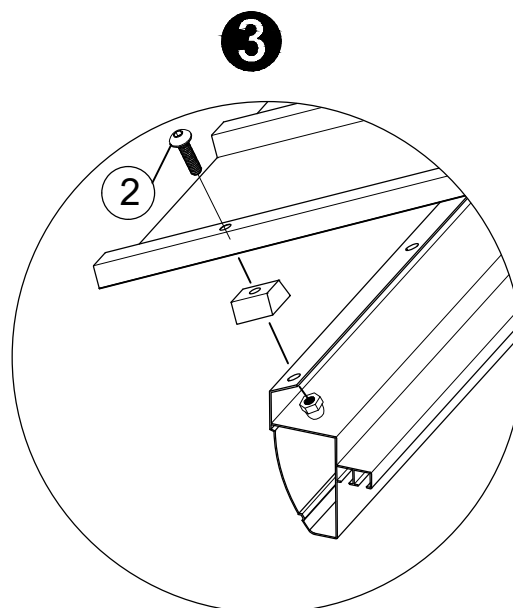


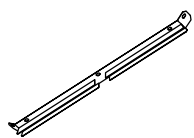


I1 2x

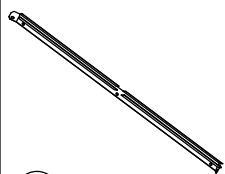

I9 2x



V1 2x

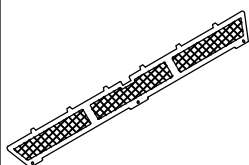

V6 2x



N 4x



M6x15

1 8x







M6x10

9 8x

24





<20>

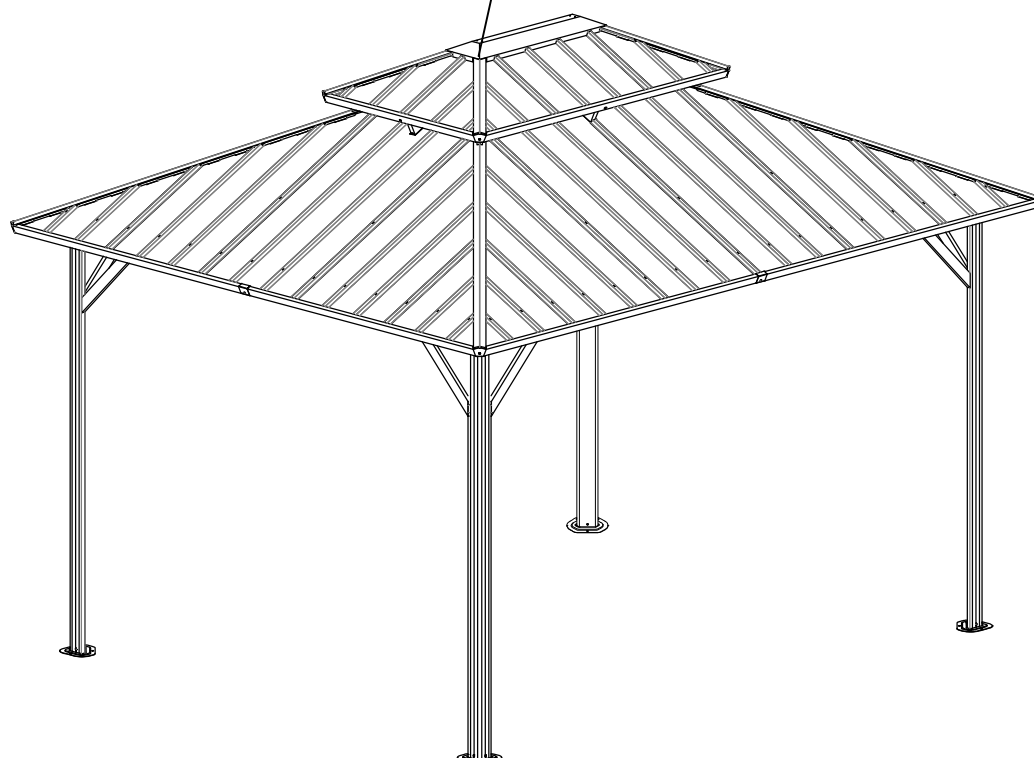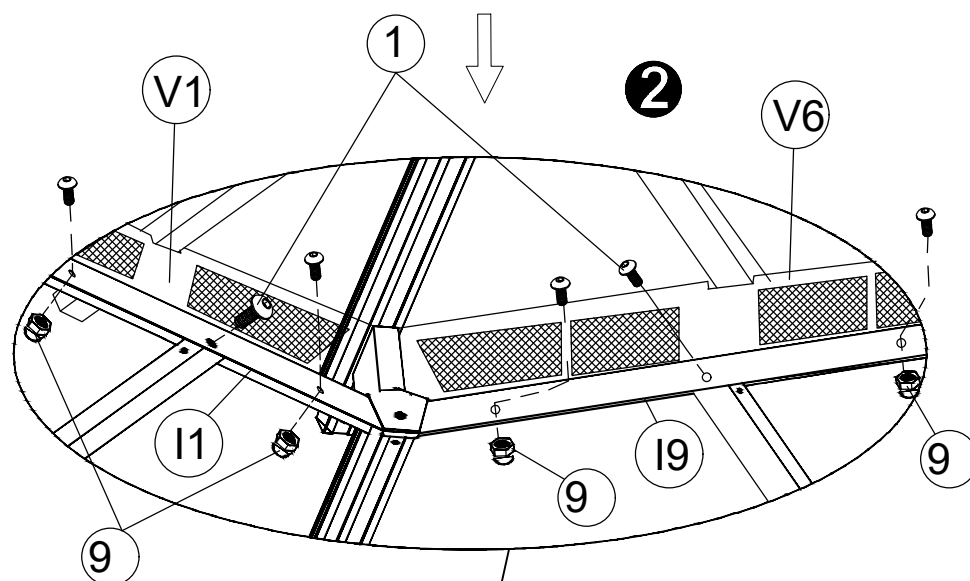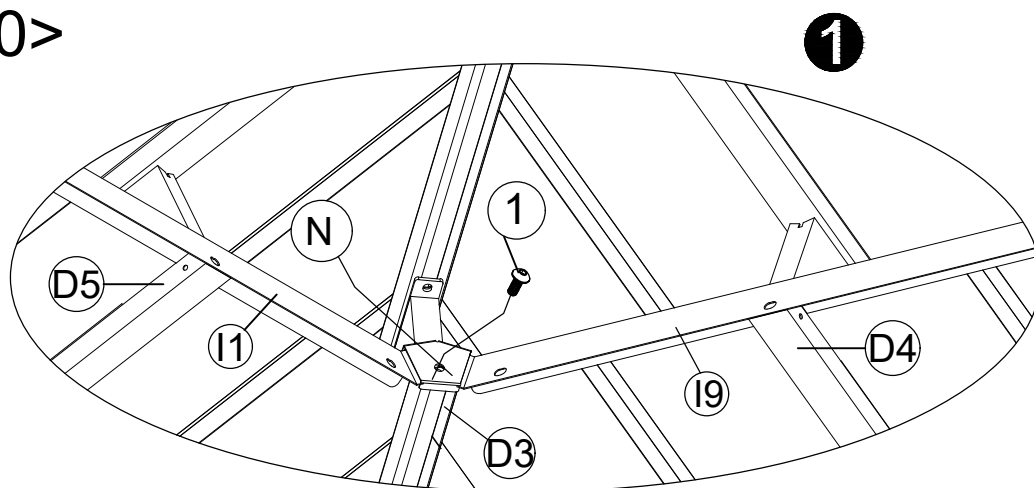




T 4x






<21>

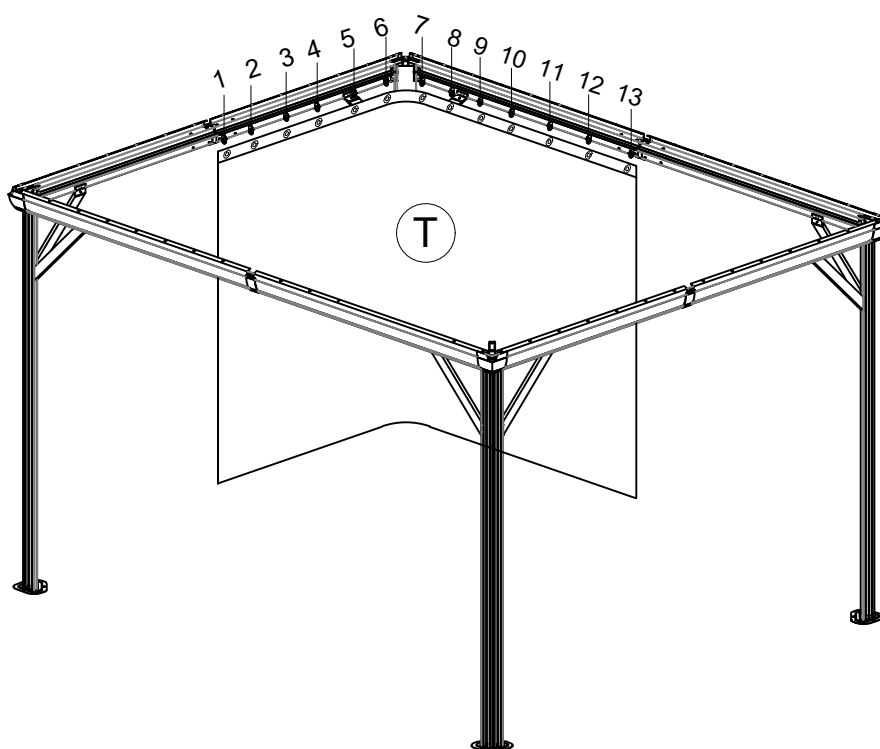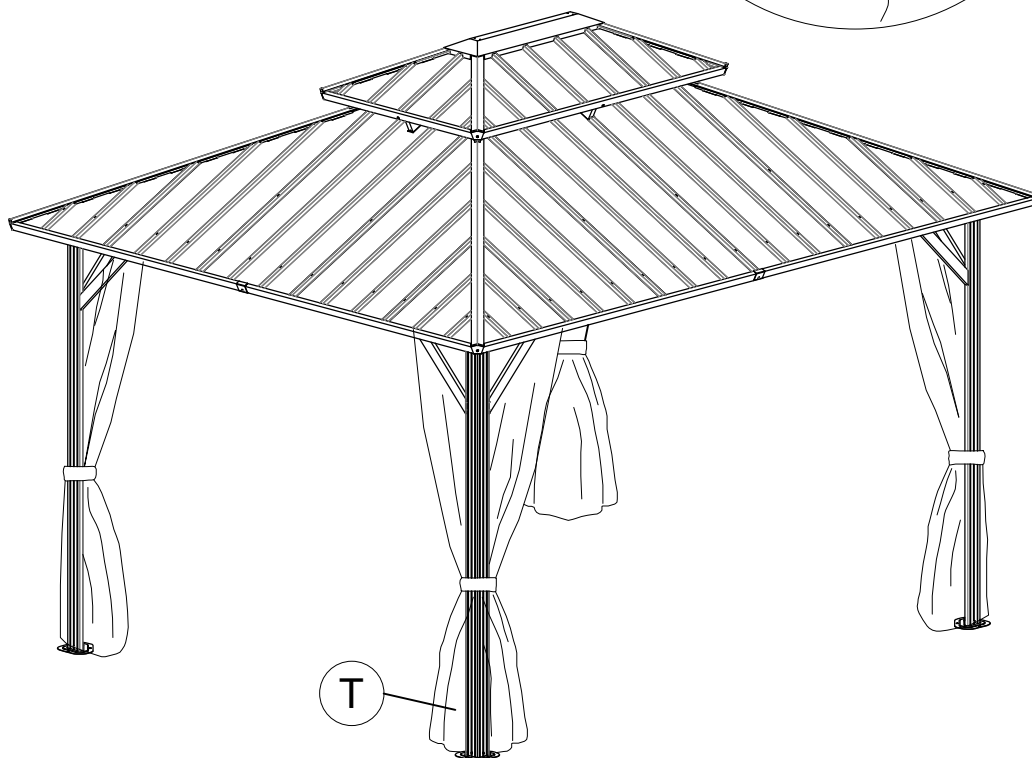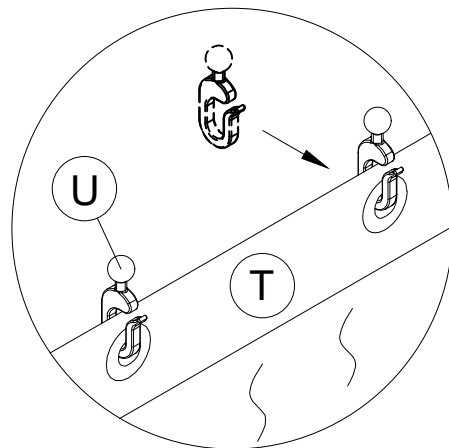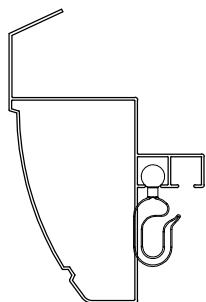



T1 4x

<22>

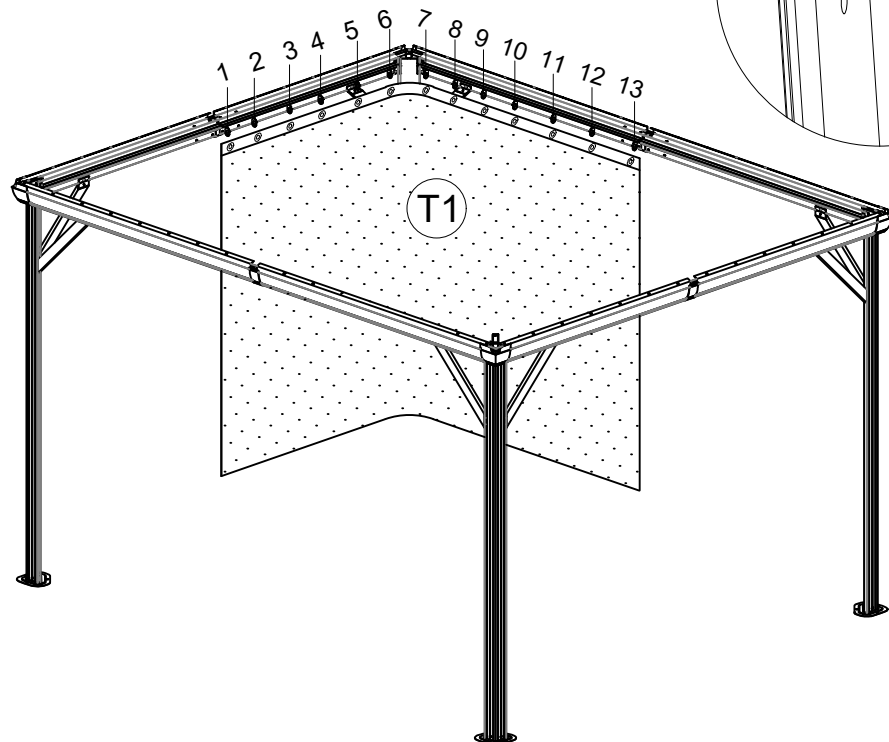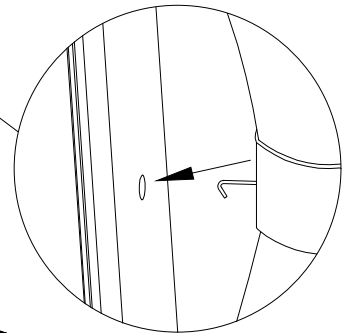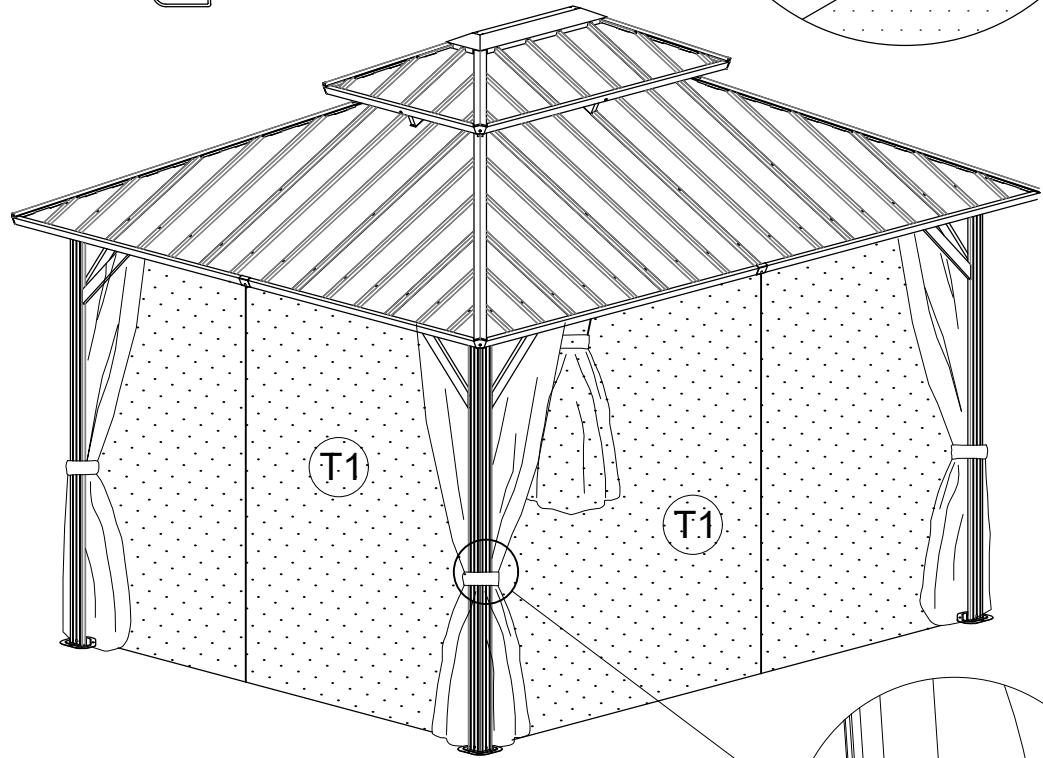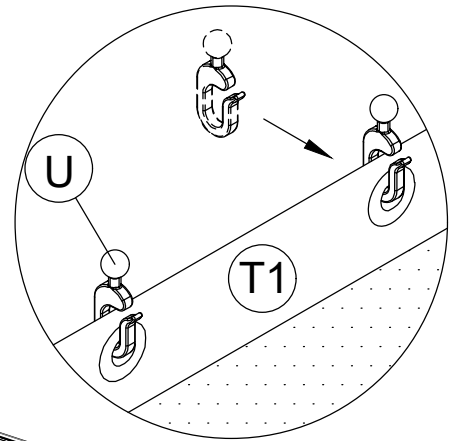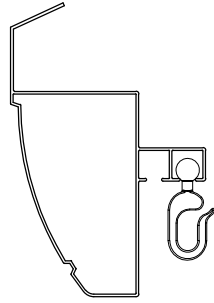

Carton-1/3		Carton-2/3		Carton-3/3	
Part	Qty	Part	Qty	Part	Qty
A3	4	E5	4	O1	4
D3	4	G1	2	O2	4
C7	2	V1	2	O3	4
C8	2	V6	2	O4	4
C9	2	L6	1	O5	2
C10	2	M2	1	O6	2
I1	2	P	4	O7	2
I9	2	K1	4	S1	4
G9	2	K2	4	S2	4
F6	2	V	4	S3	2
F7	2	Q2	4		
F9	2	Q4	8		
F10	2	Q5	8		
H	4	Z	56		
H1	4	Z1	8		
J	4	Z2	8		
		Y	68		
		U1	104		
		N	12		
		N1	4		
		T	4		
		T1	4		
Carton-2/3		1.2.4.5.6.7.8.9.10. 11.12.13.14.15	1		
Part	Qty				
D4	2				
D5	2				
W1	2				
W2	2				
W3	2				
W4	2				