
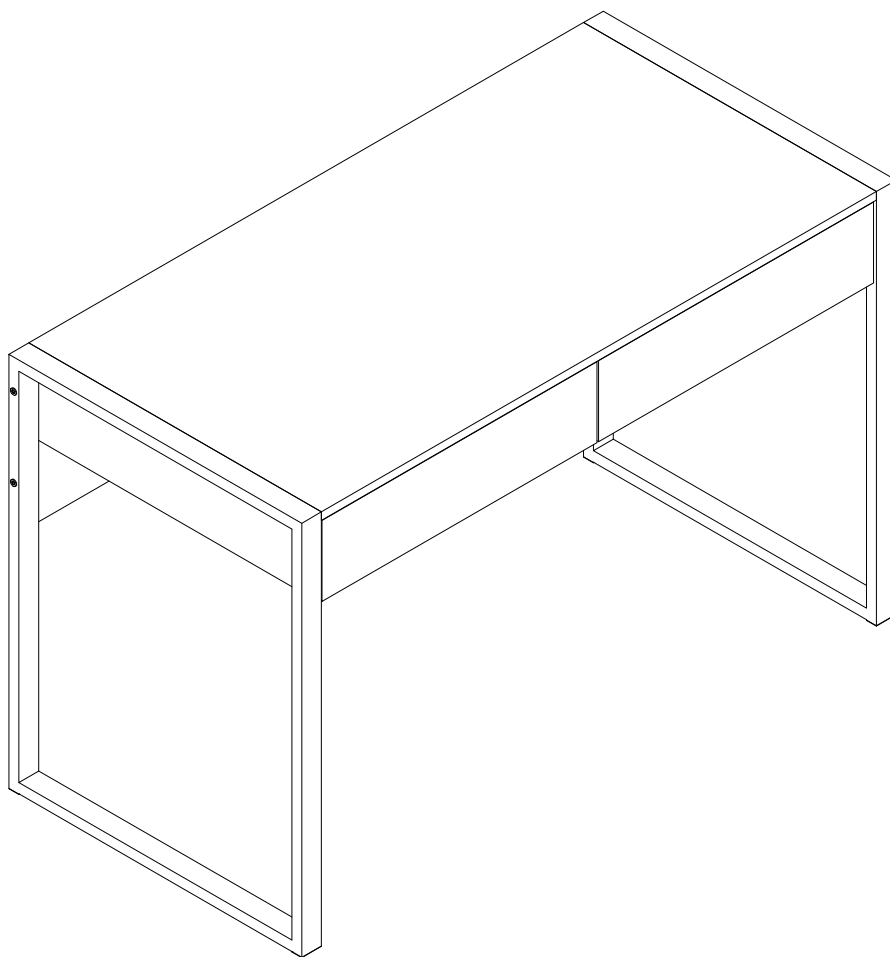













# ASSEMBLY INSTRUCTIONS INSTRUCTIONS D'ASSEMBLAGE

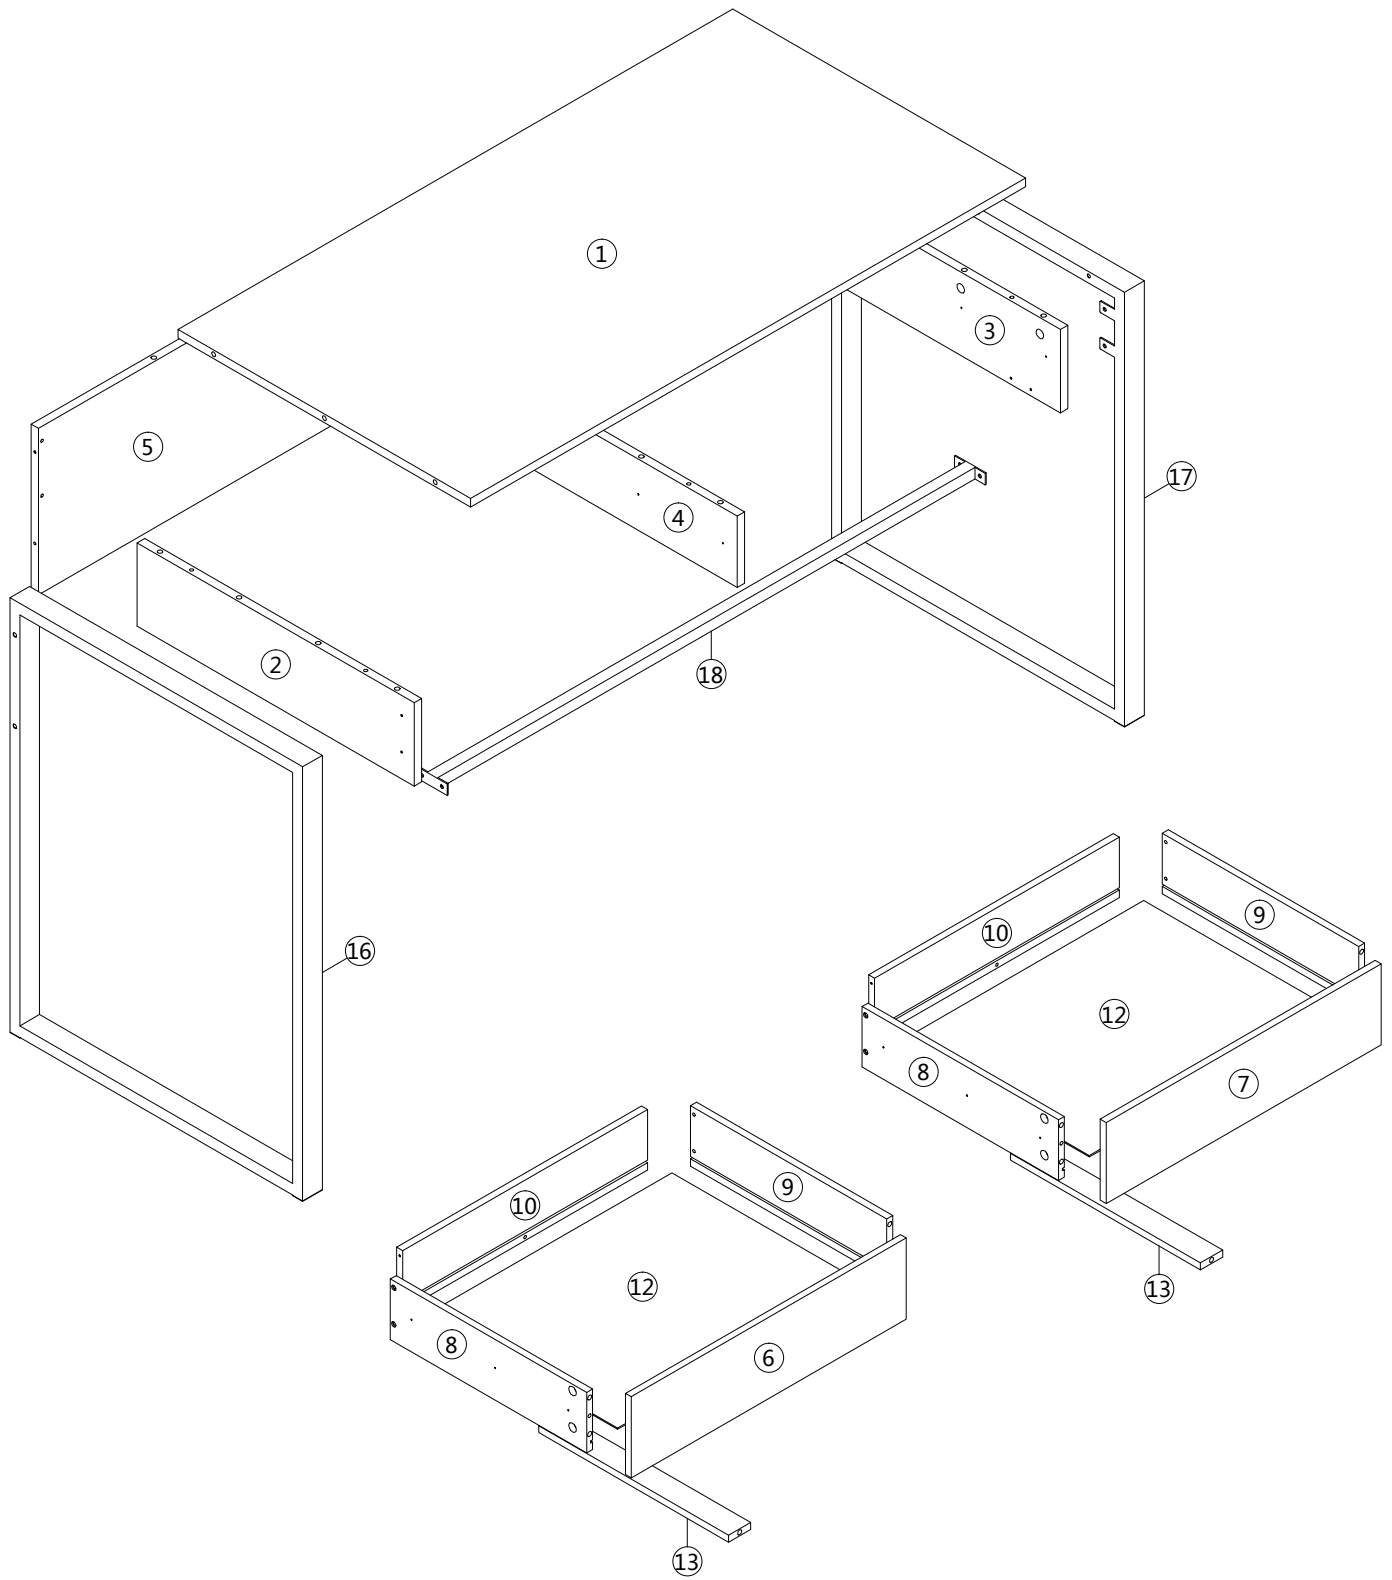









COMPUTER DESK BROWN RECLAIMED WOOD 2 DRAWERS BLACK METAL

BUREAU BOIS BRUN RÉCLAMÉ 2 TIRROIRS MÉTAL NOIR



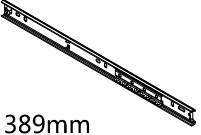						
6x35mm	Ø15x9mm	4x40mm	6x30mm	3x12mm	6x35mm	389mm
<b>A</b>   25PCS	<b>B</b>   31PCS	<b>C</b>   15PCS	<b>D</b>   12PCS	<b>E</b>   24PCS	<b>F</b>   6PCS	<b>G</b>   4PCS
						
387mm	5x65mm		4x12mm			
<b>H</b>   4PCS	<b>I</b>   4PCS	<b>J</b>   1PC	<b>K</b>   8PCS			



# step 1

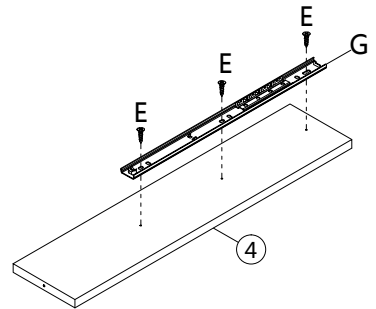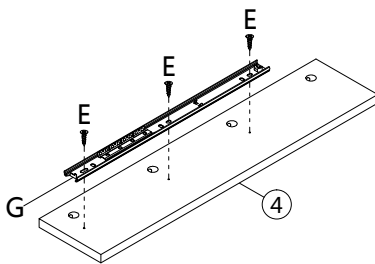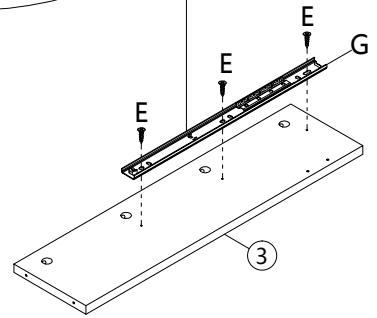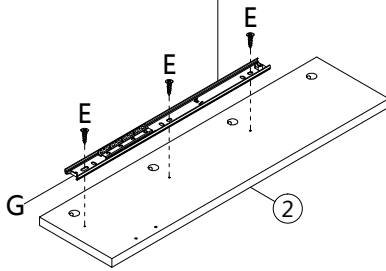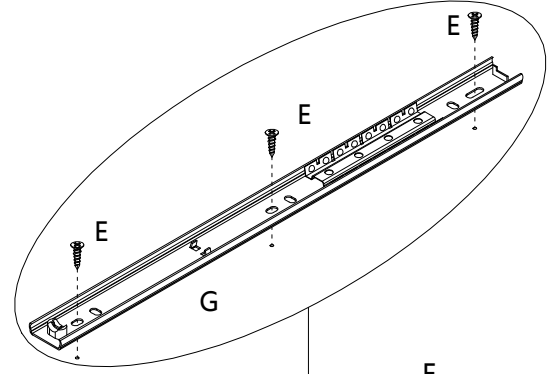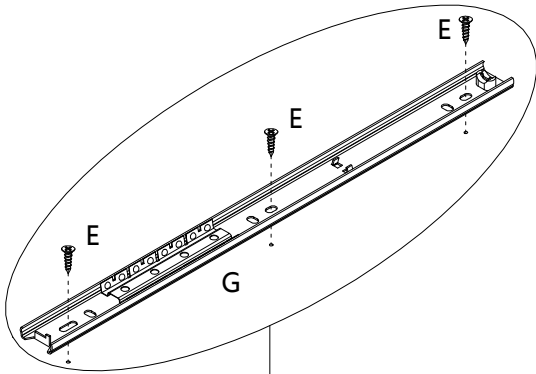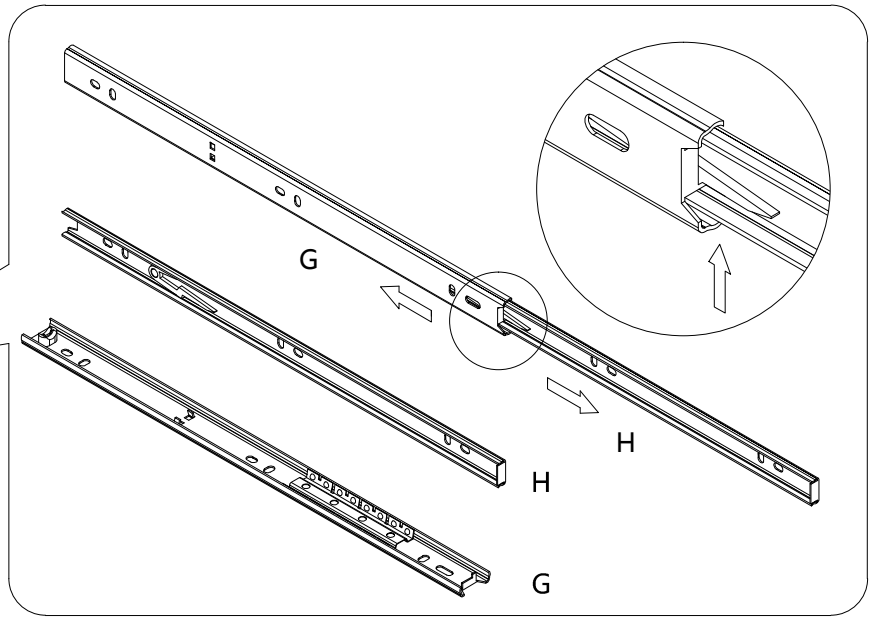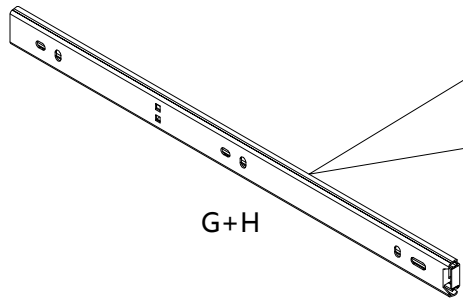



180°




## step 2

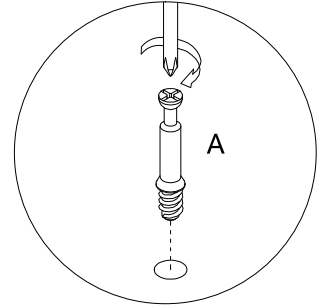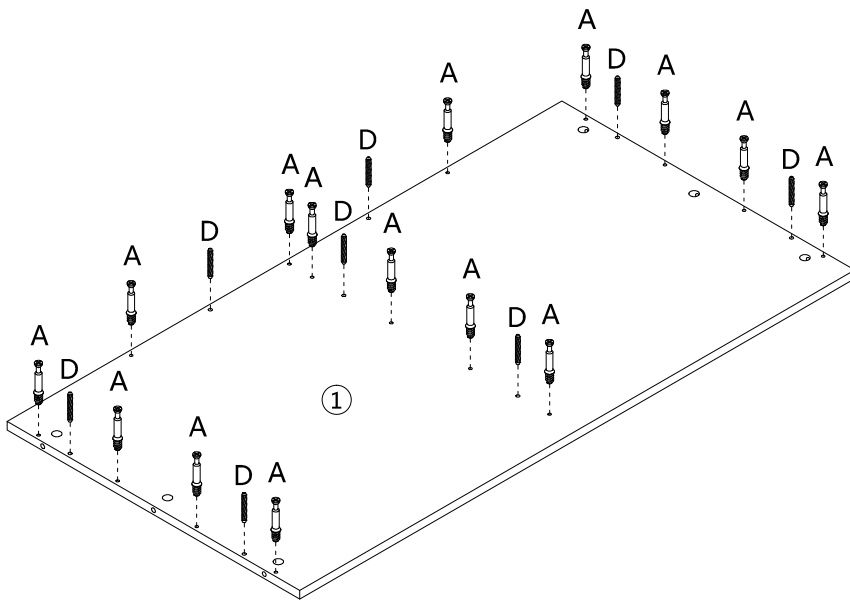


## step 3

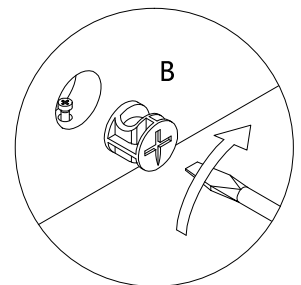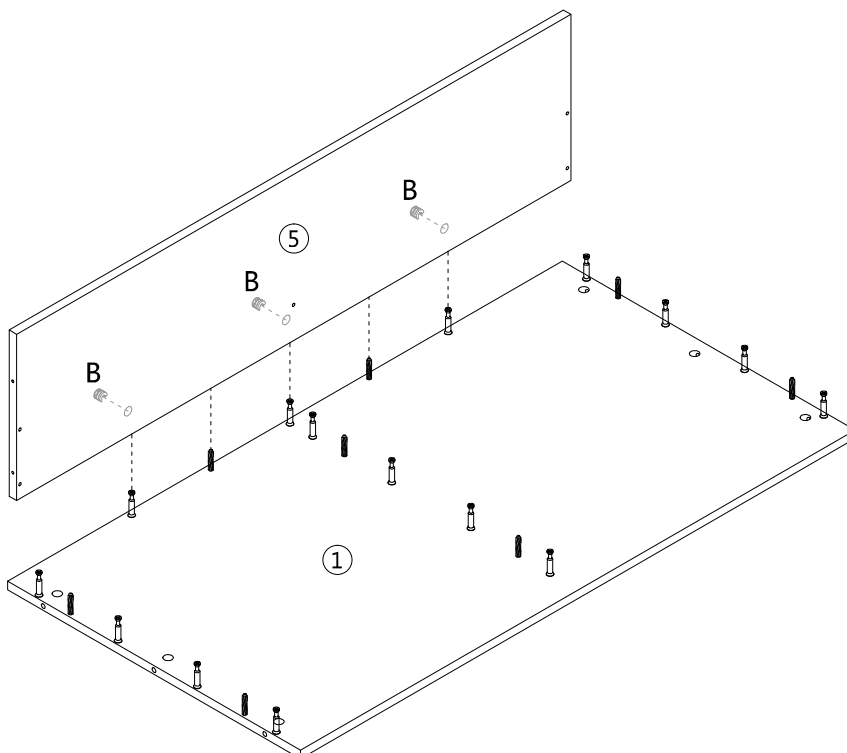


# step 4

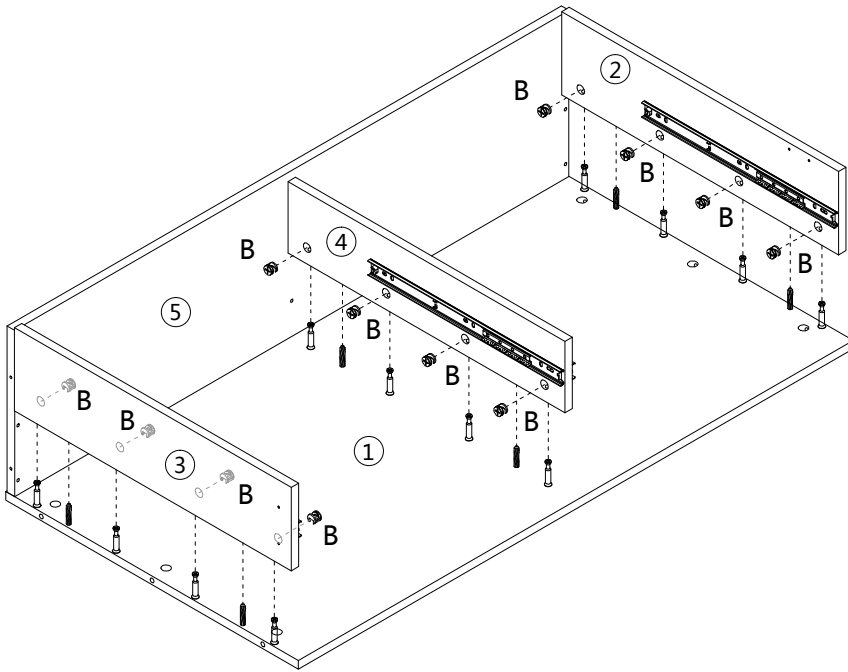



# step 5

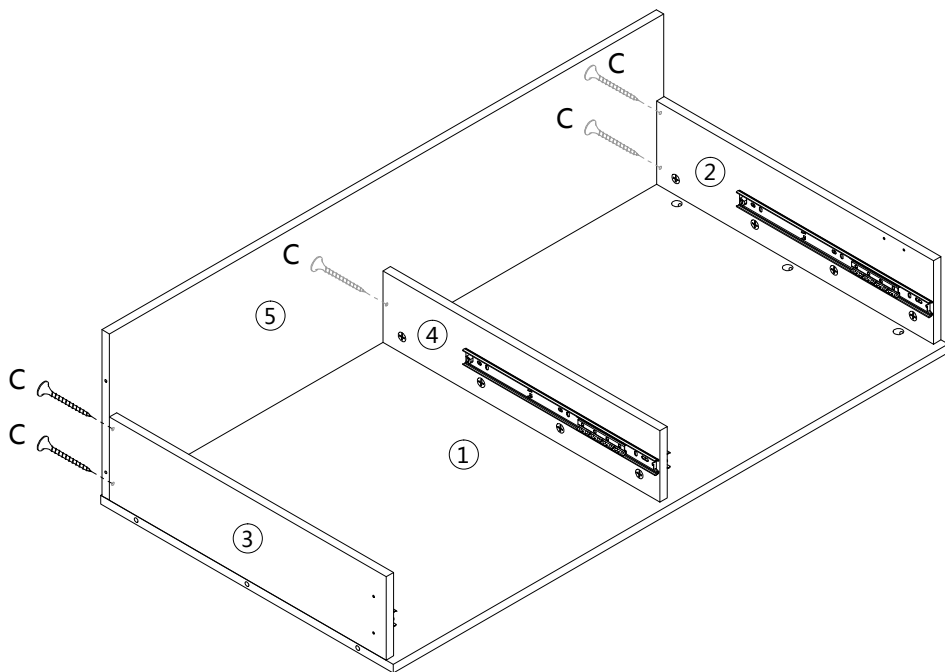


## step 6

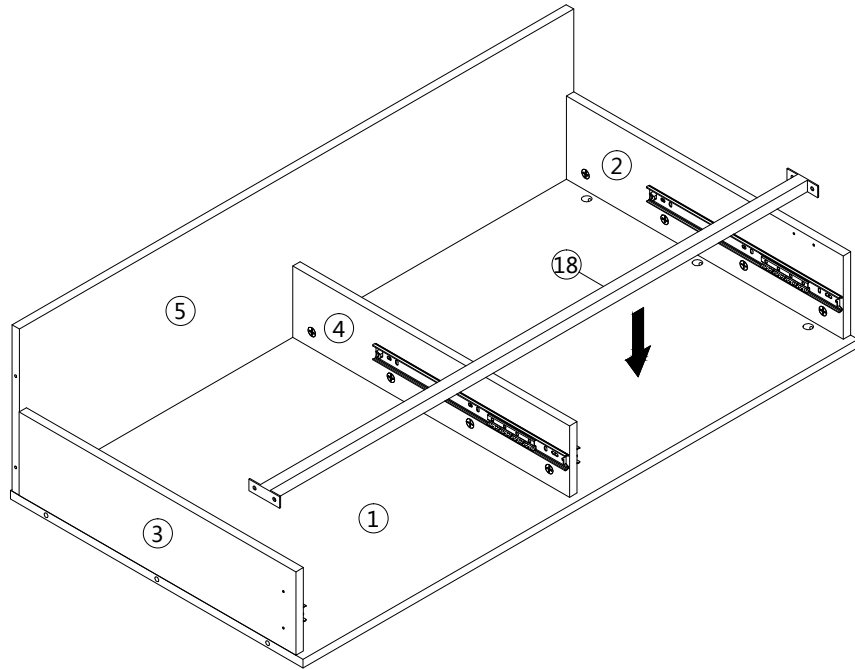


## step 7

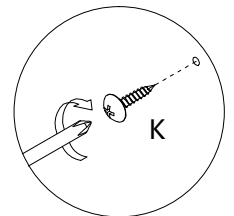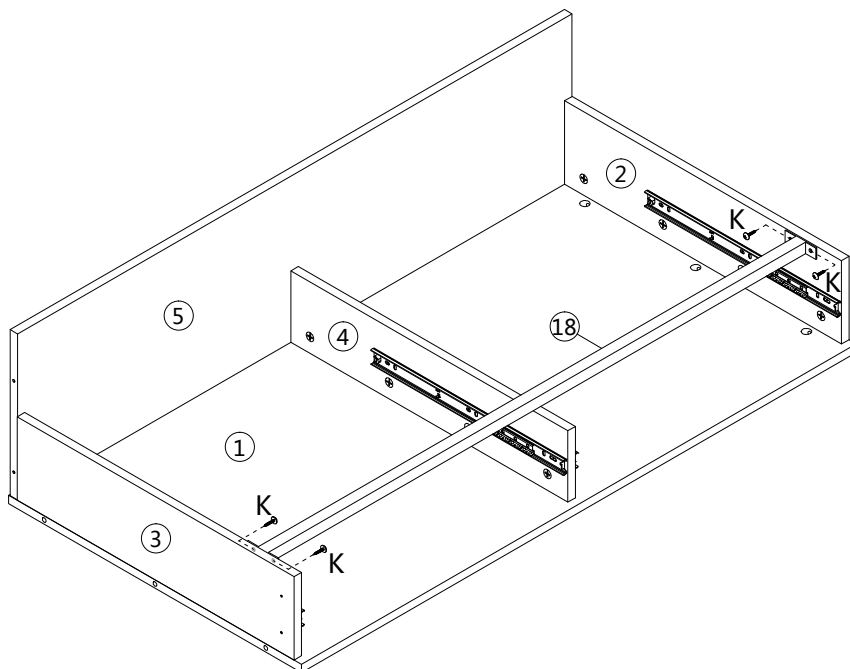


# step 8

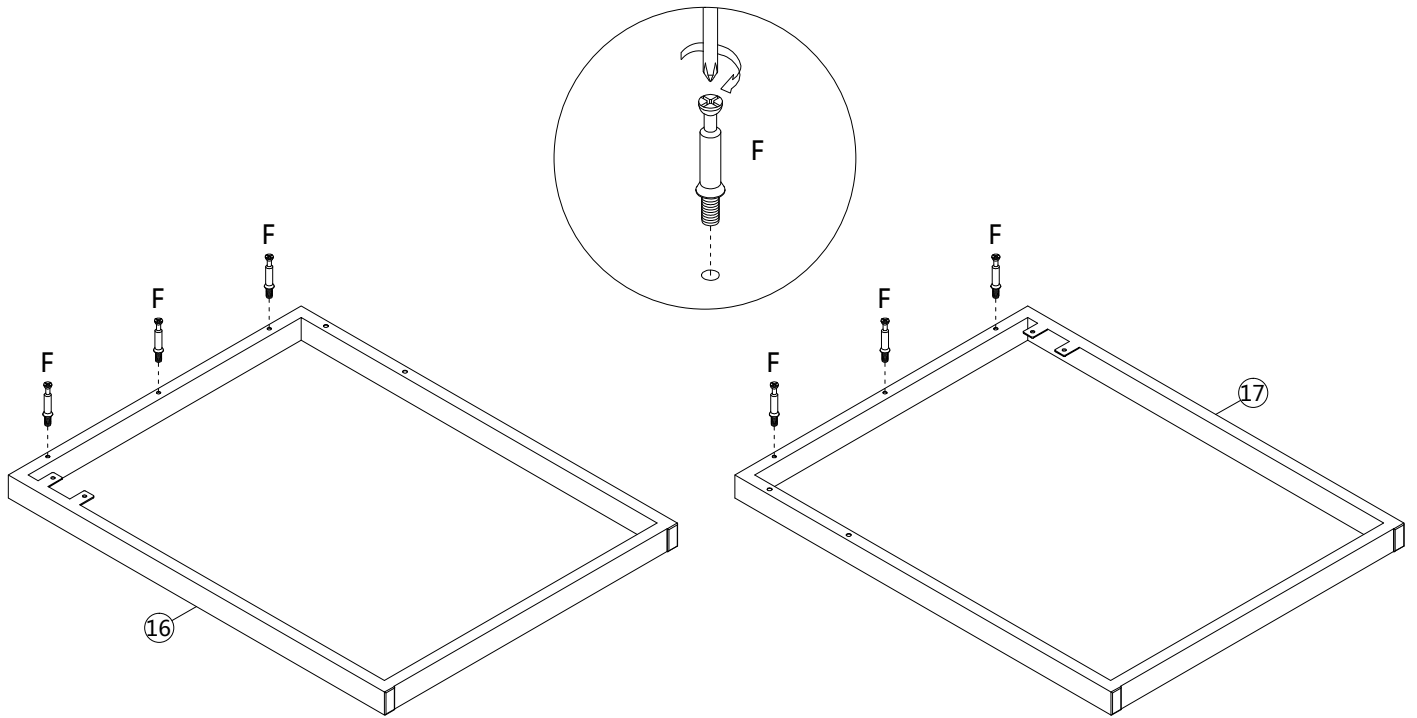


# step 9

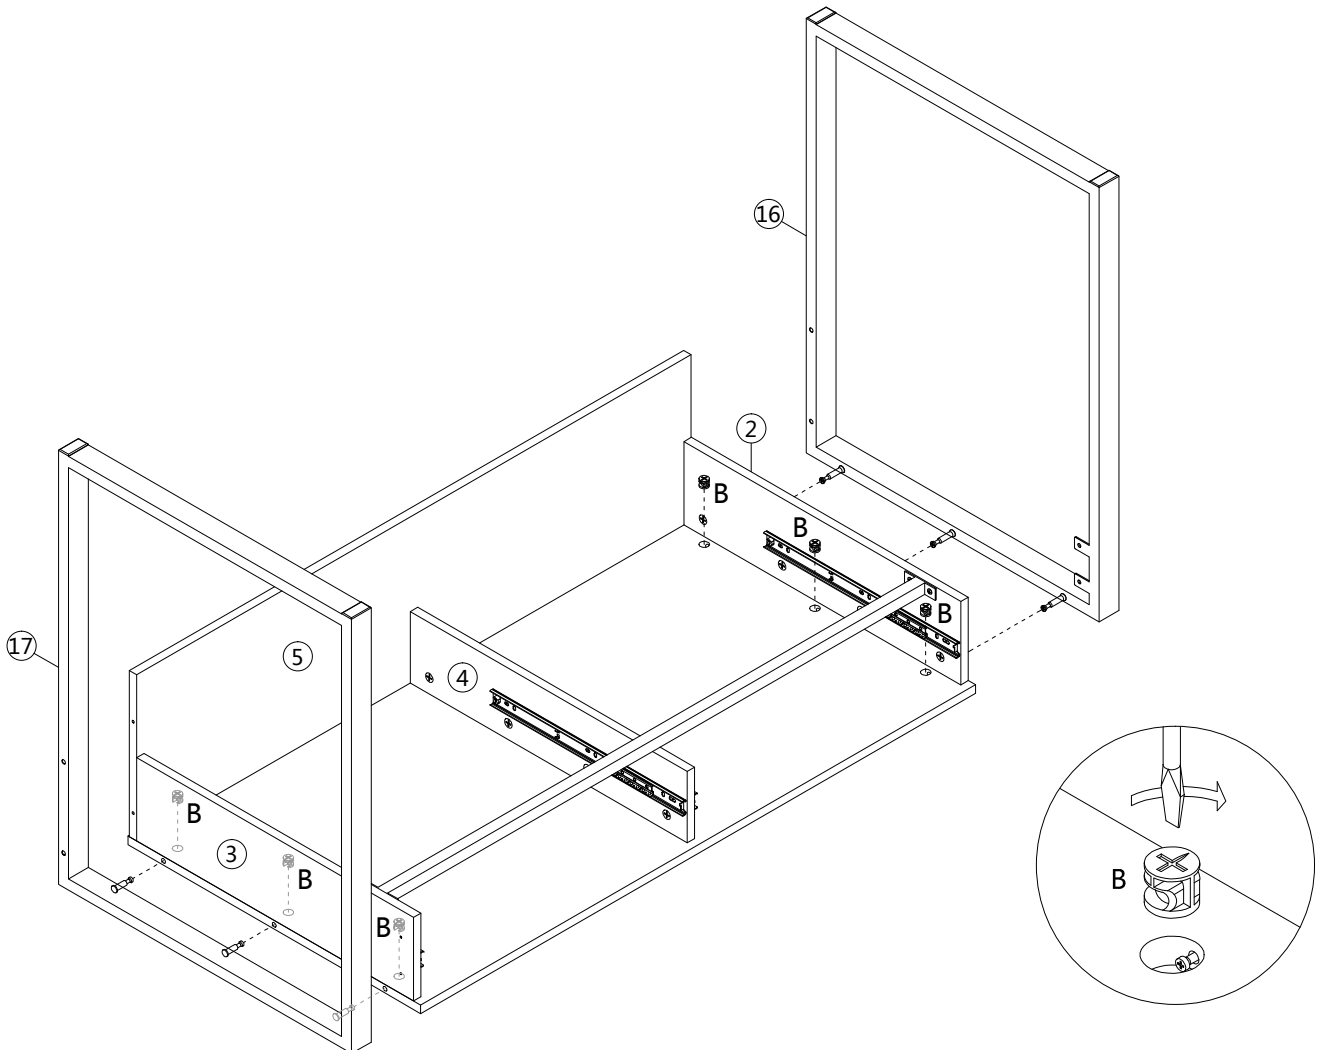


# step 10

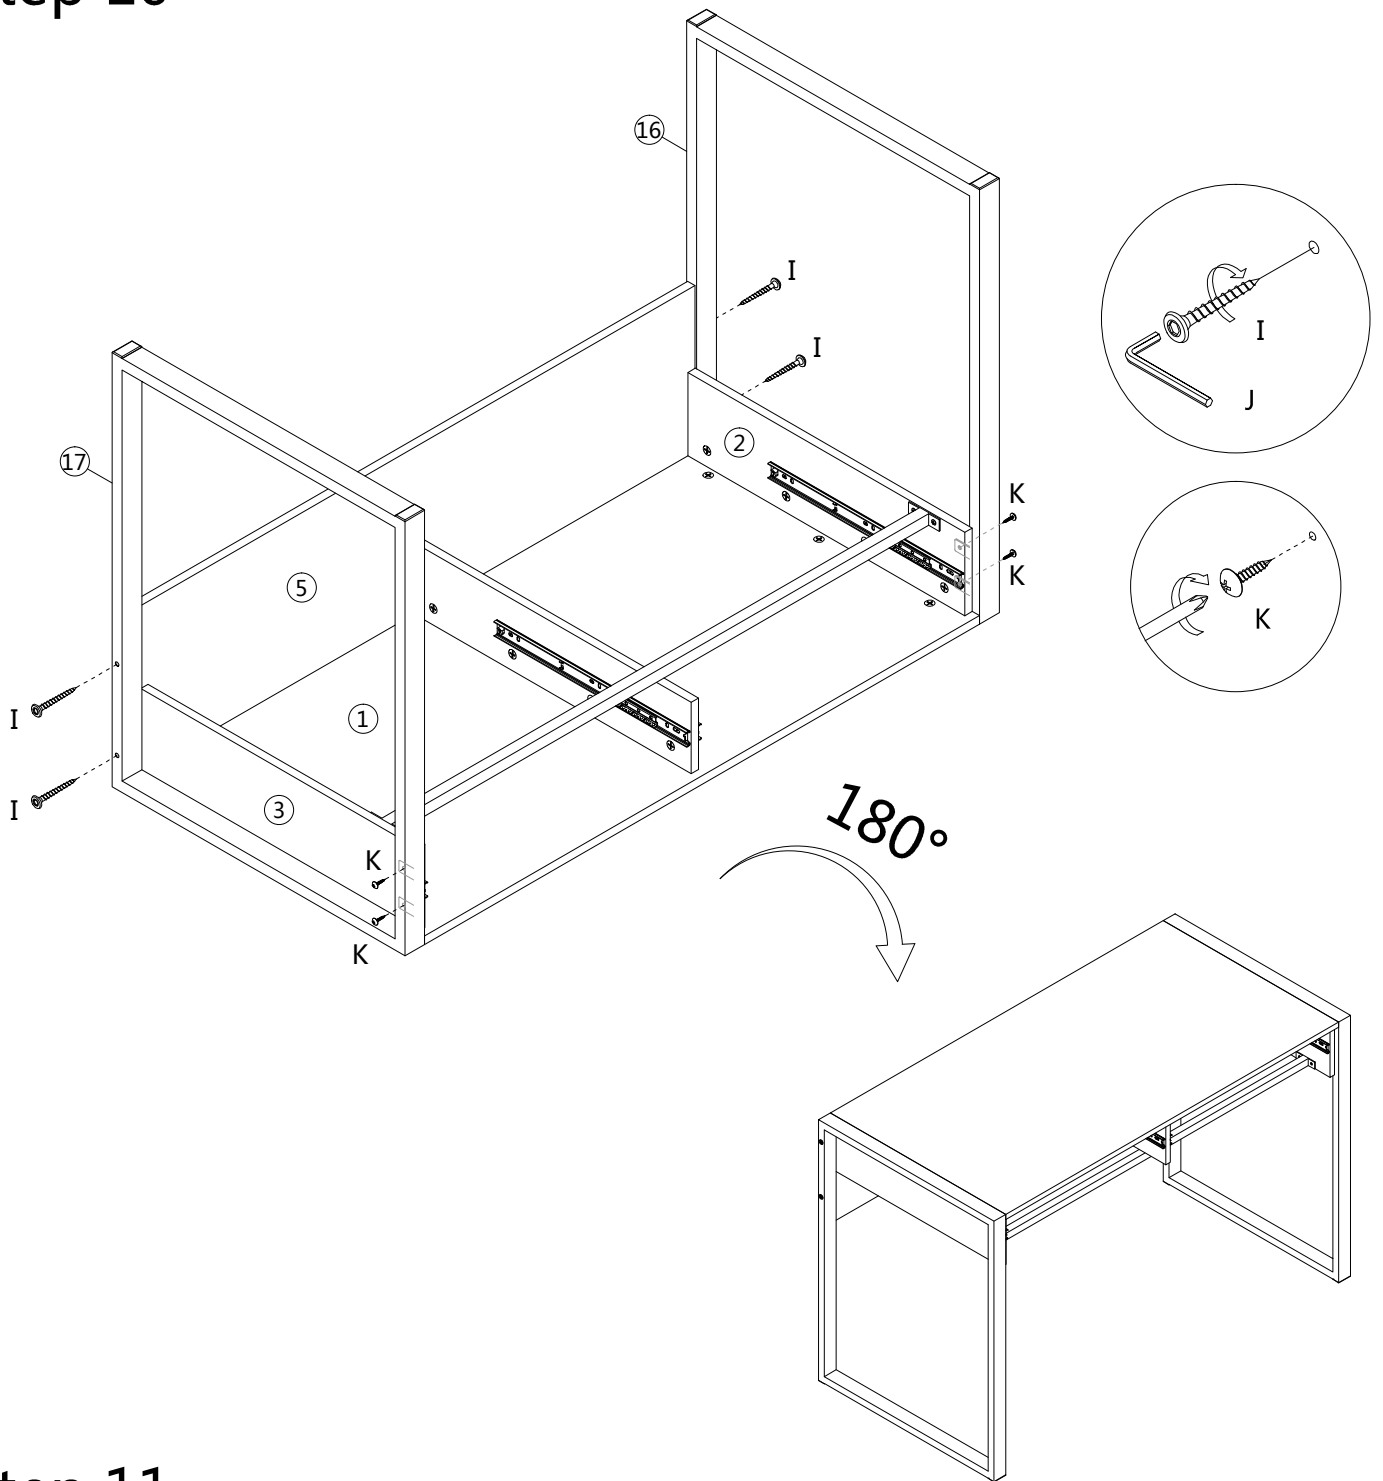


# step 11

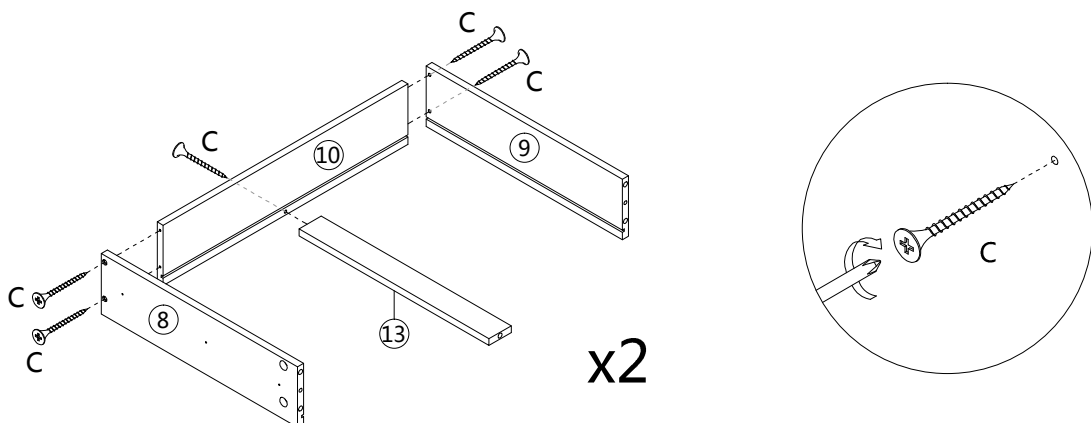


# step 12

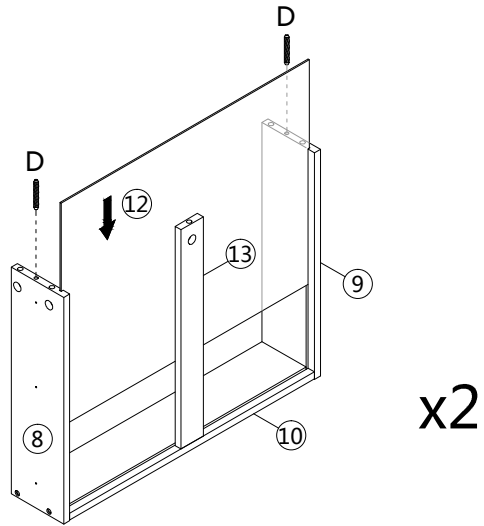


# step 13

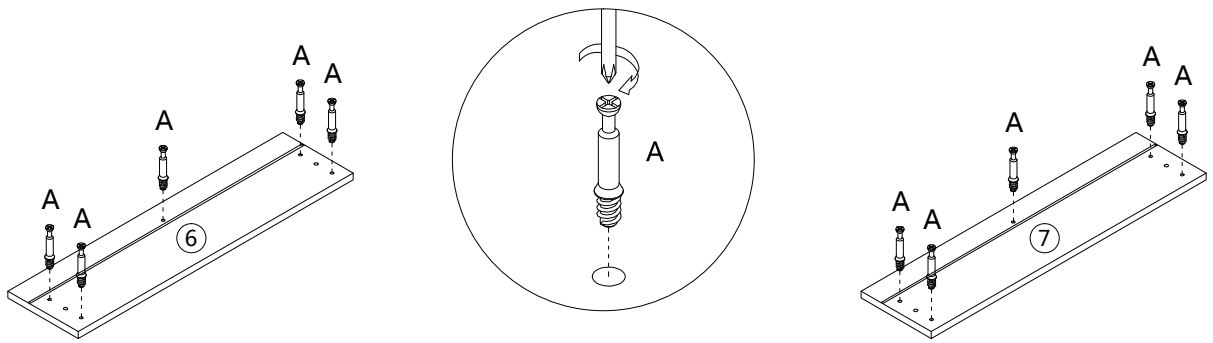

# step 14

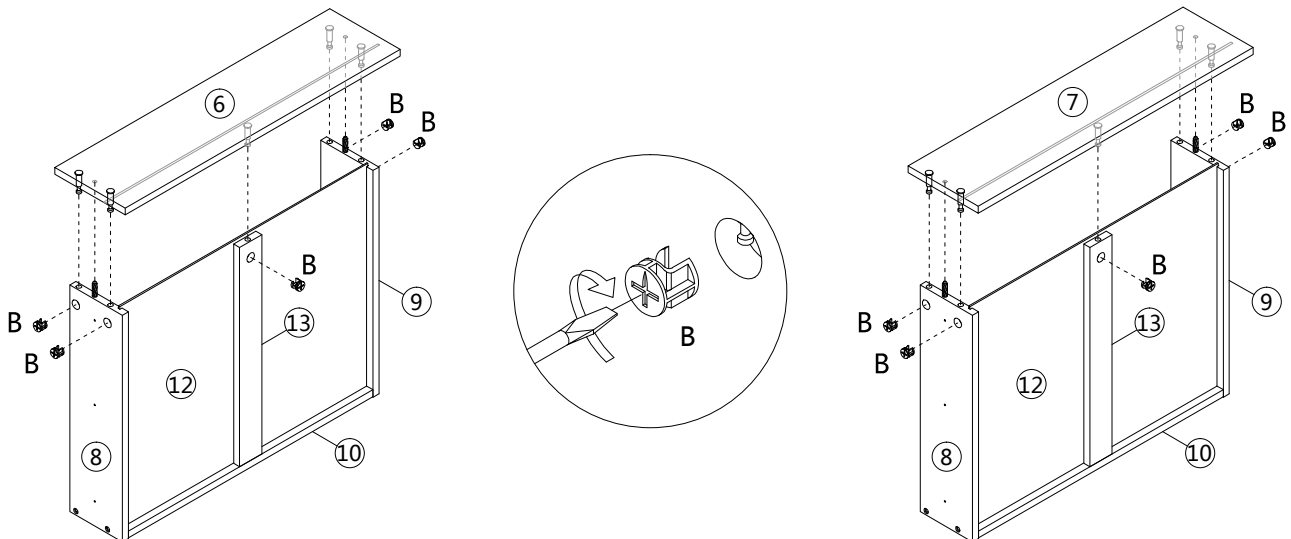

# step 15

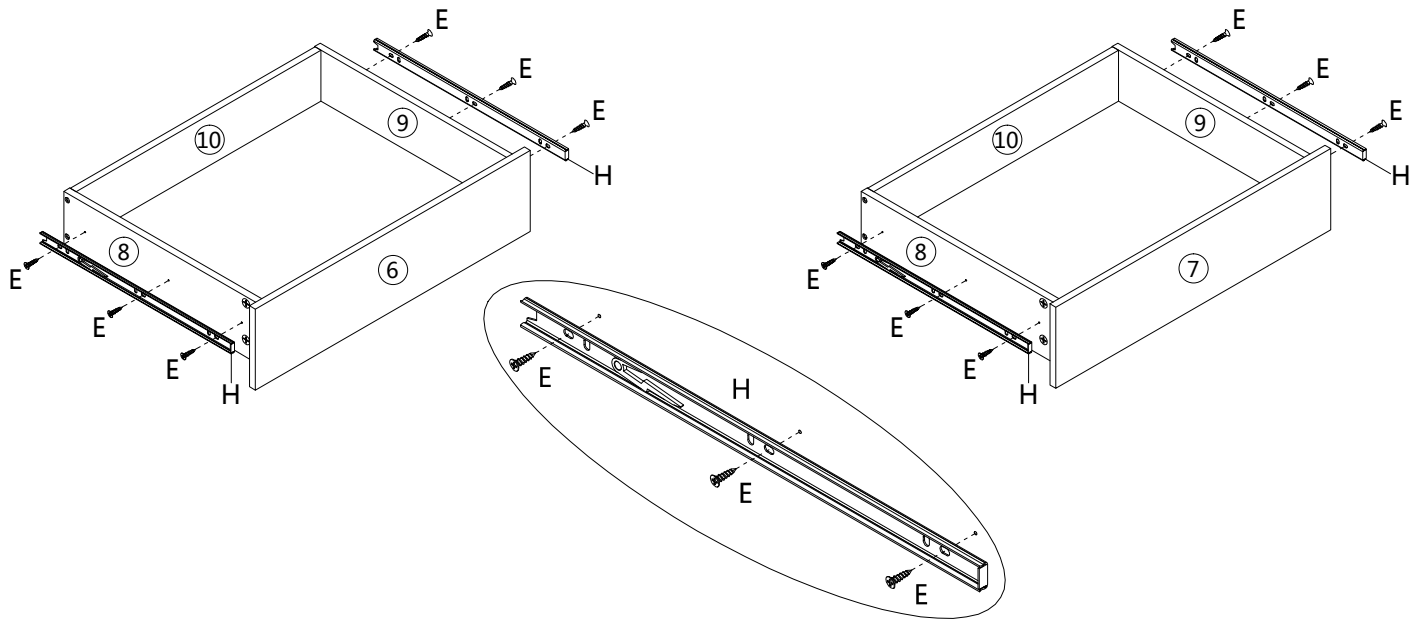

# step 16

