


ASSEMBLY INSTRUCTIONS

Α	В	С	D
BOLT 1/4" x 1-1/2"	FOOT CAP	BOLT CAP	GLASS PAD
22PCS	8PCS	18PCS	12PCS
E	F	G	Н
BOLT	NUT	BOLT 1/4" x 1-3/4"	ALLEN WRENCH
2PCS	2PCS	4PCS	1PC

ASSEMBLY INSTRUCTIONS

1	2	3	4
STOOL BOTTOM			
STRETCHER	STOOL SIDE PANEL	CUSHION	TABLE SIDE PANEL
2PCS	2PCS	1PC	2PCS
(5)	6	7	8
TABLE FRONT FRAME	TABLE BACK FRAME	MIRROR STRETCHER	MIRROR
1PC	1PC	2PCS	1PC
9	10	11)	
	TABLE BOTTOM		
GLASS	STRETCHER	STOOL TOP STRETCHER	
2PCS	1PC	2PCS	

STEP 1

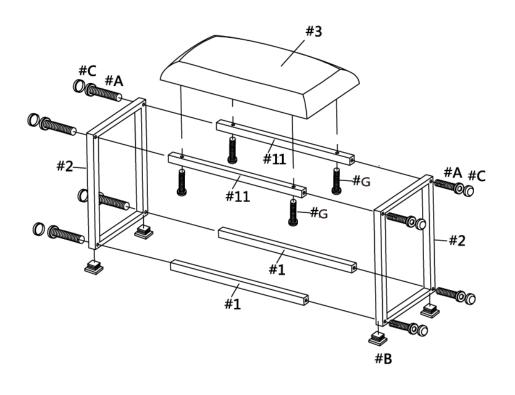


Attach stool side panels (2) to stool top stretchers (11) and stool bottom stretchers (1) together using bolt (A) as shown.

Attach cushion (3) to the assembled metal base using bolt (G) as shown.

Then, cover the bolts
(A) by bolt caps (C),
and insert foot caps (B)
into the bottom of stool
side panels (2) as
shown.

STEP 2

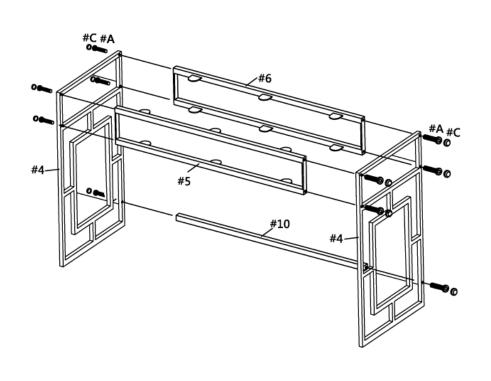

Attach table side panels (4) to table front frame (5), table back frame (6) and table bottom stretcher (10) together using bolt (A) as shown.

Then, cover the bolts (A) by bolt caps (C) as shown.

STEP 3 Attach mirror stretchers (7) to the table frames #E using bolts (A) as #E shown. Align mirror stretchers (7) to the holes of the mirror (8). Make sure to place the nuts (F) in-between the holes of the mirror (8) and mirror stretchers (7), then screw the bolt (E) tightly. STEP 4 Attach glass pads (D) to the table frames, then carefully place the

glass (9) to the table as shown.