

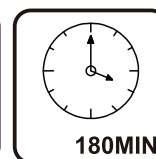
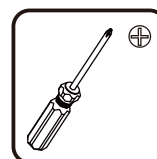
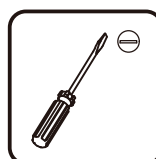



Installation & Assembly

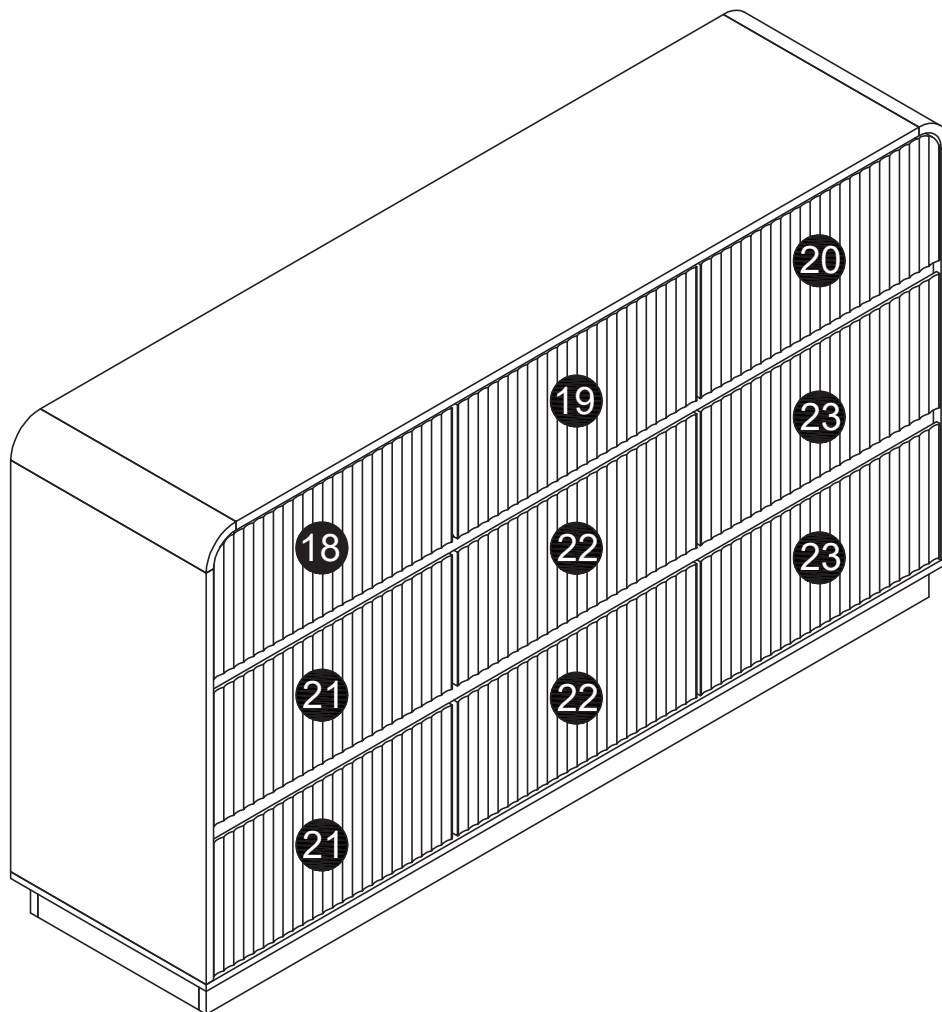


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

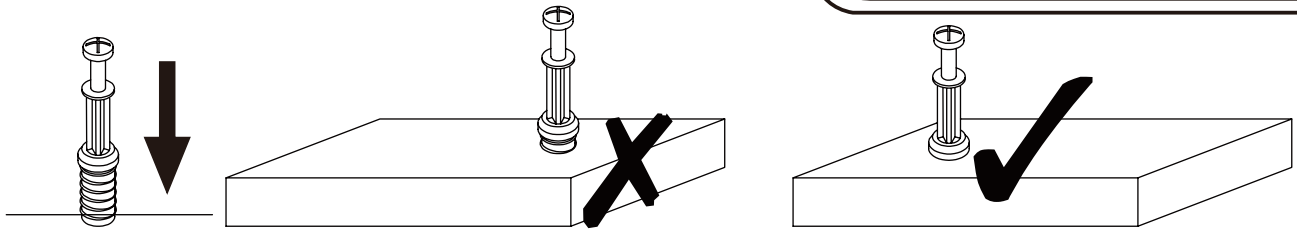


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

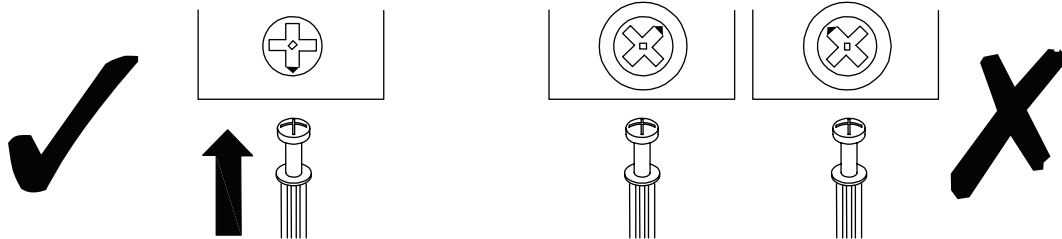

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







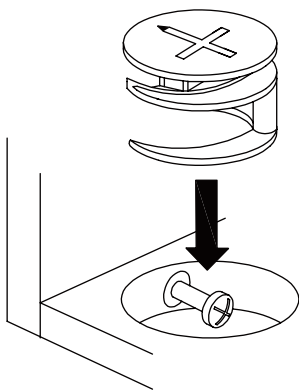


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










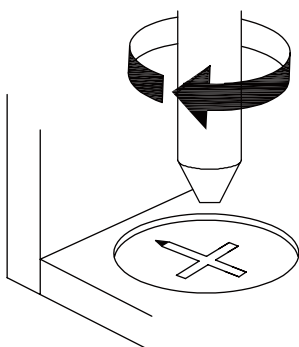


EN_Turn cam lock clockwise to tighten.






Carton A




NO.	PARTS	QTY	SPARE
②		x2	
①⑥		x9	
①⑧		x1	
①⑨		x1	
②①		x1	
②①		x2	
②②		x2	
②③		x2	
	 Hardware Kit		






Carton B

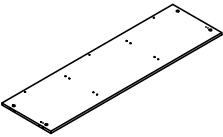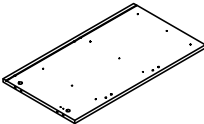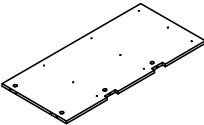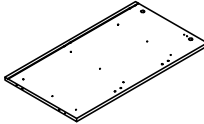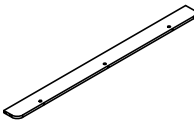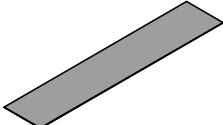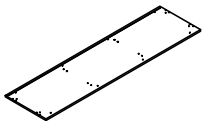NO.	PARTS	QTY	SPARE
①		x1	
③		x1	
④		x2	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	
⑪		x2	

Carton B


NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x9	
⑭		x9	
⑮		x9	
⑰		x9	

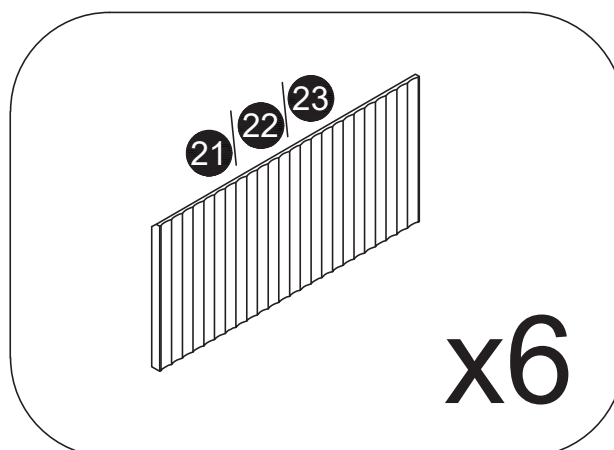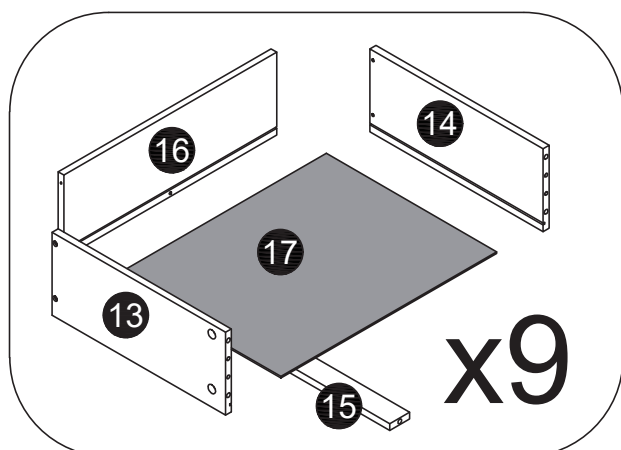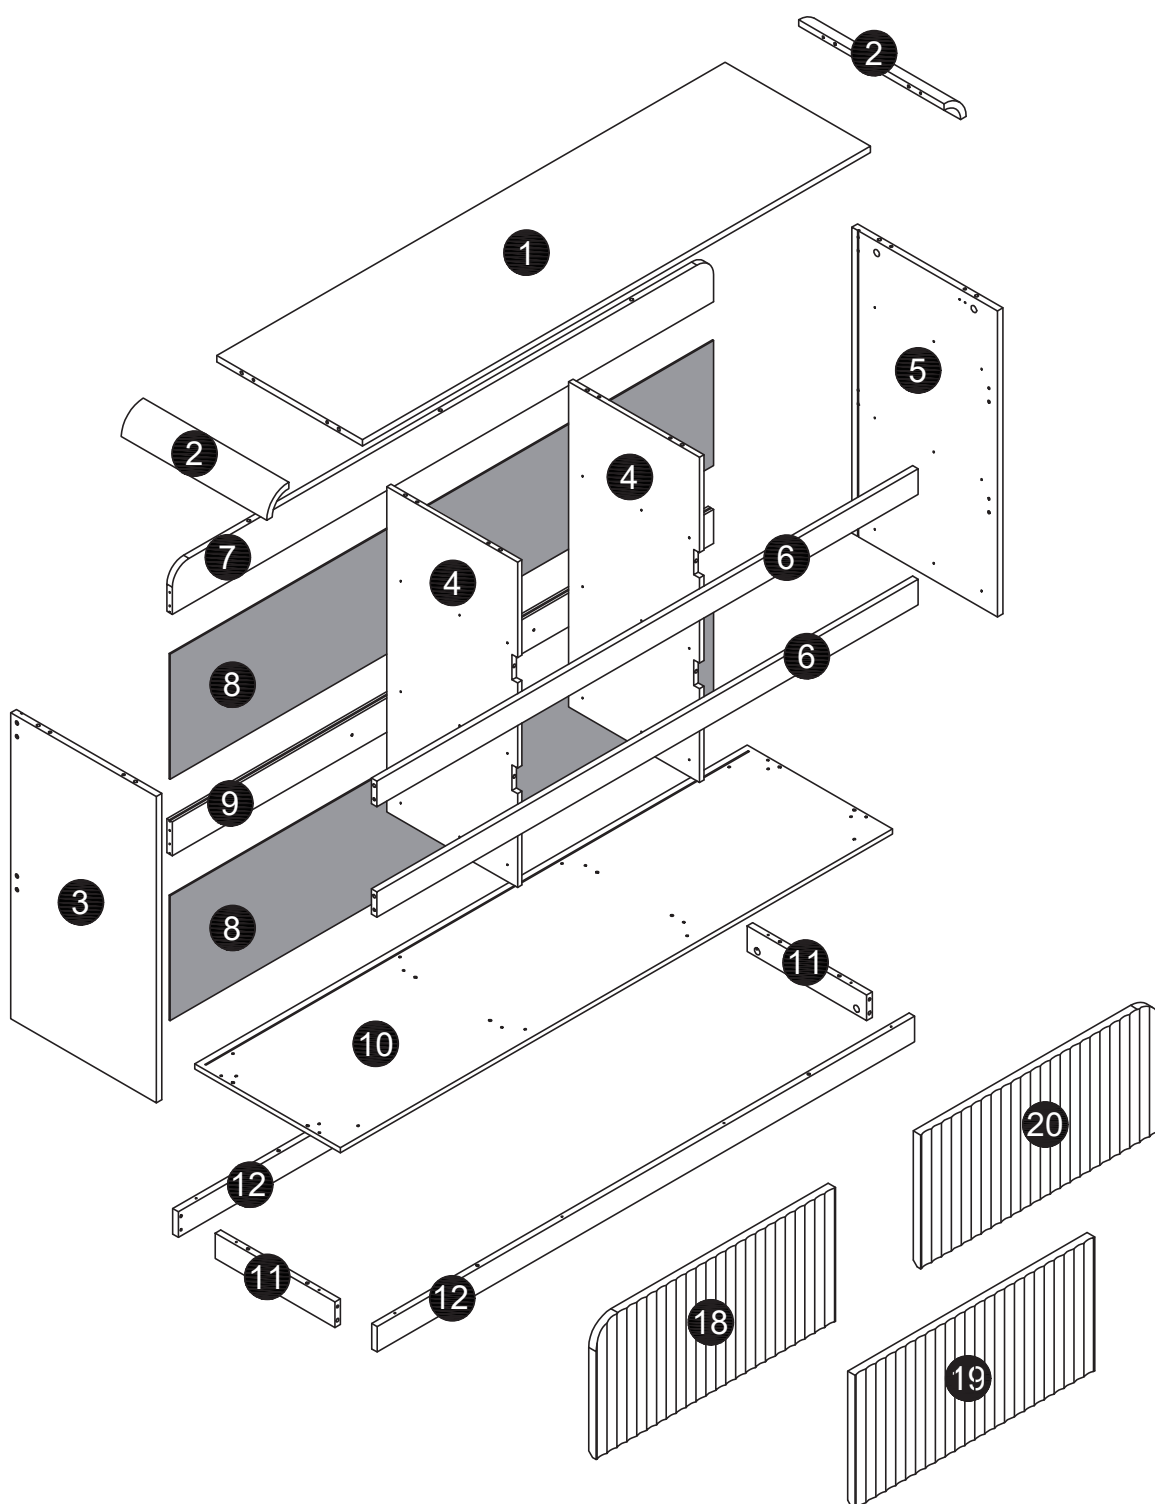

 A x64 Ø6x35mm +3(spare)	 B x72 Ø15x10mm +3(spare)	 C x72 Ø6x30mm +5(spare)	 D x47 Ø4x35mm +4(spare)	 E x108 Ø3.5x12mm +5(spare)	 F x8 Ø6x40mm
 G x18 Ø5x40mm +1(spare)	 H x8 Ø15mm +2(spare)	 I x12 Ø4x30mm	 J x2	 K x8 Ø4x14mm	 L x2 Ø6x30mm
 M-1	 M-2	 N-1	 N-2		
 CL x9 L350mm	 CR x9 L350mm	 DL x9 L350mm	 DR x9 L350mm		

01



D x45

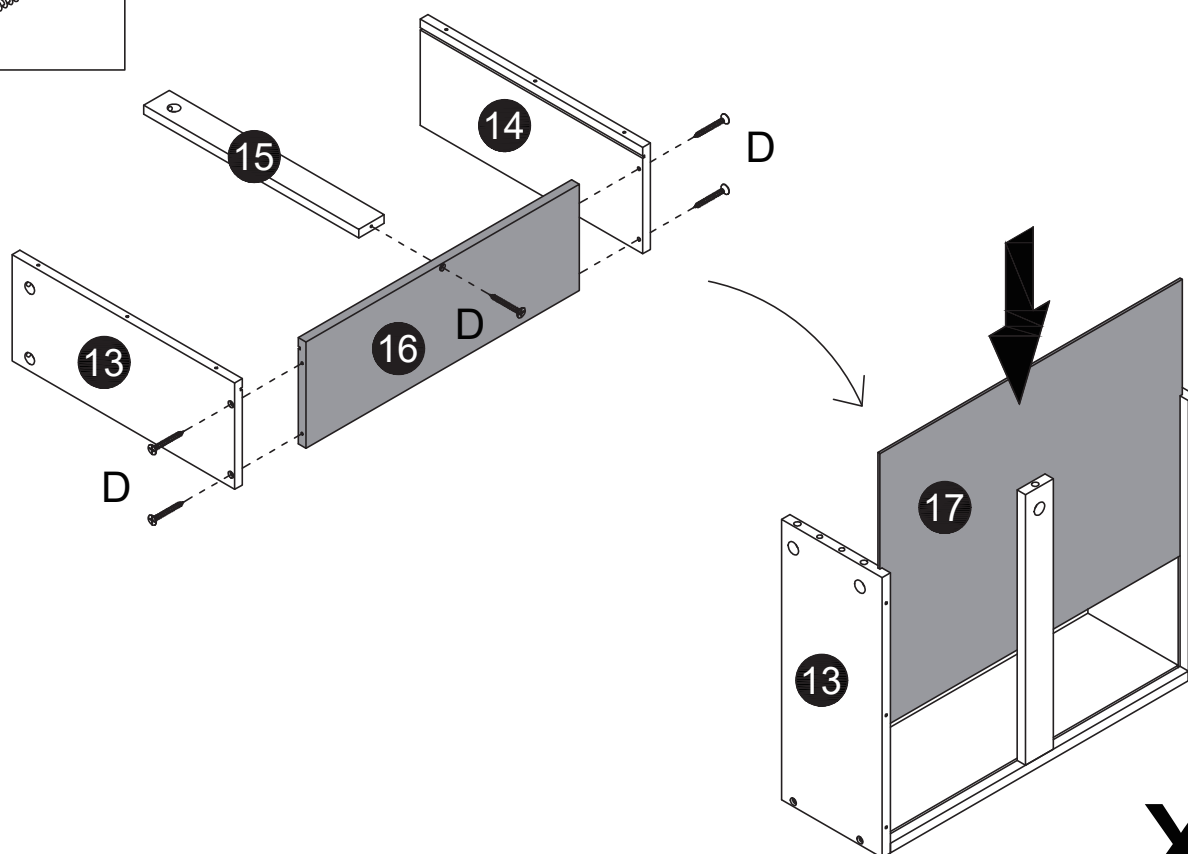



x9

02


A x45

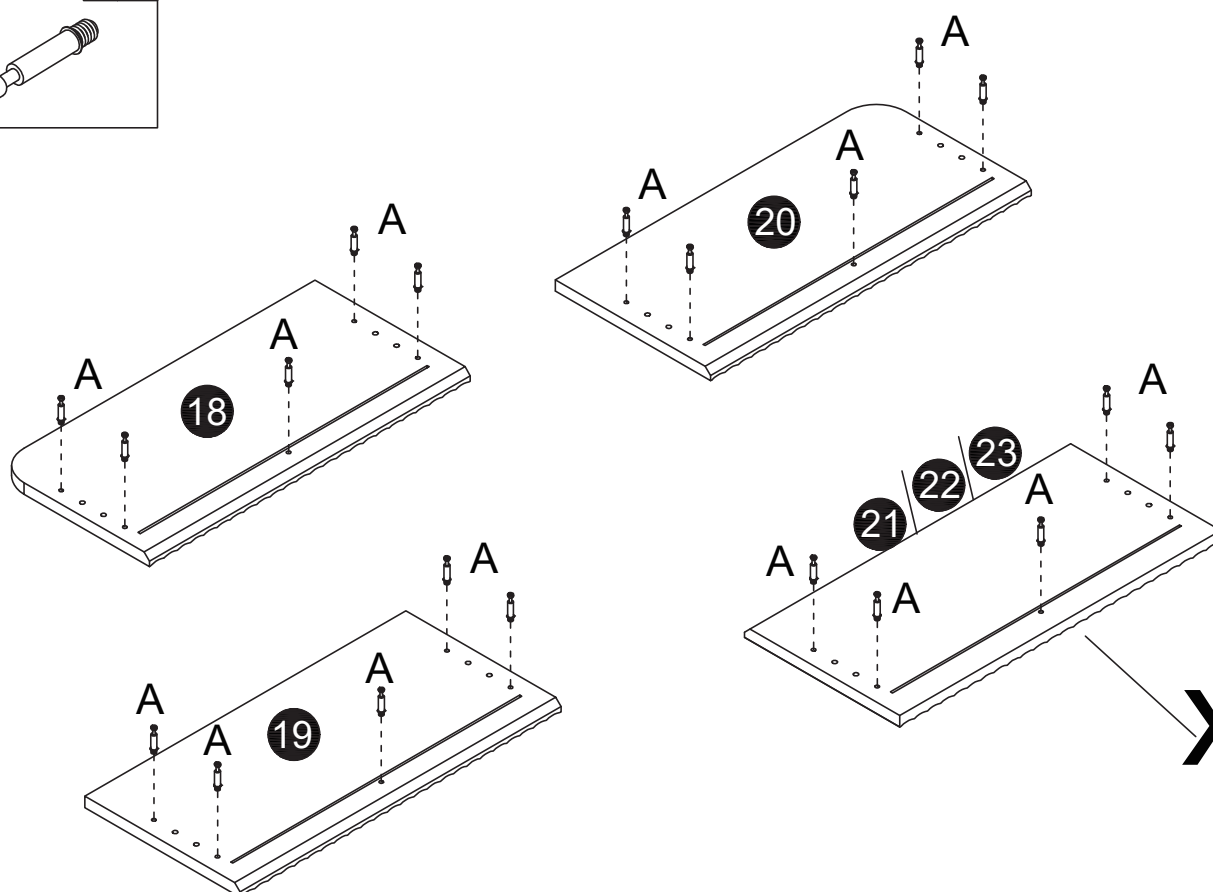

x6

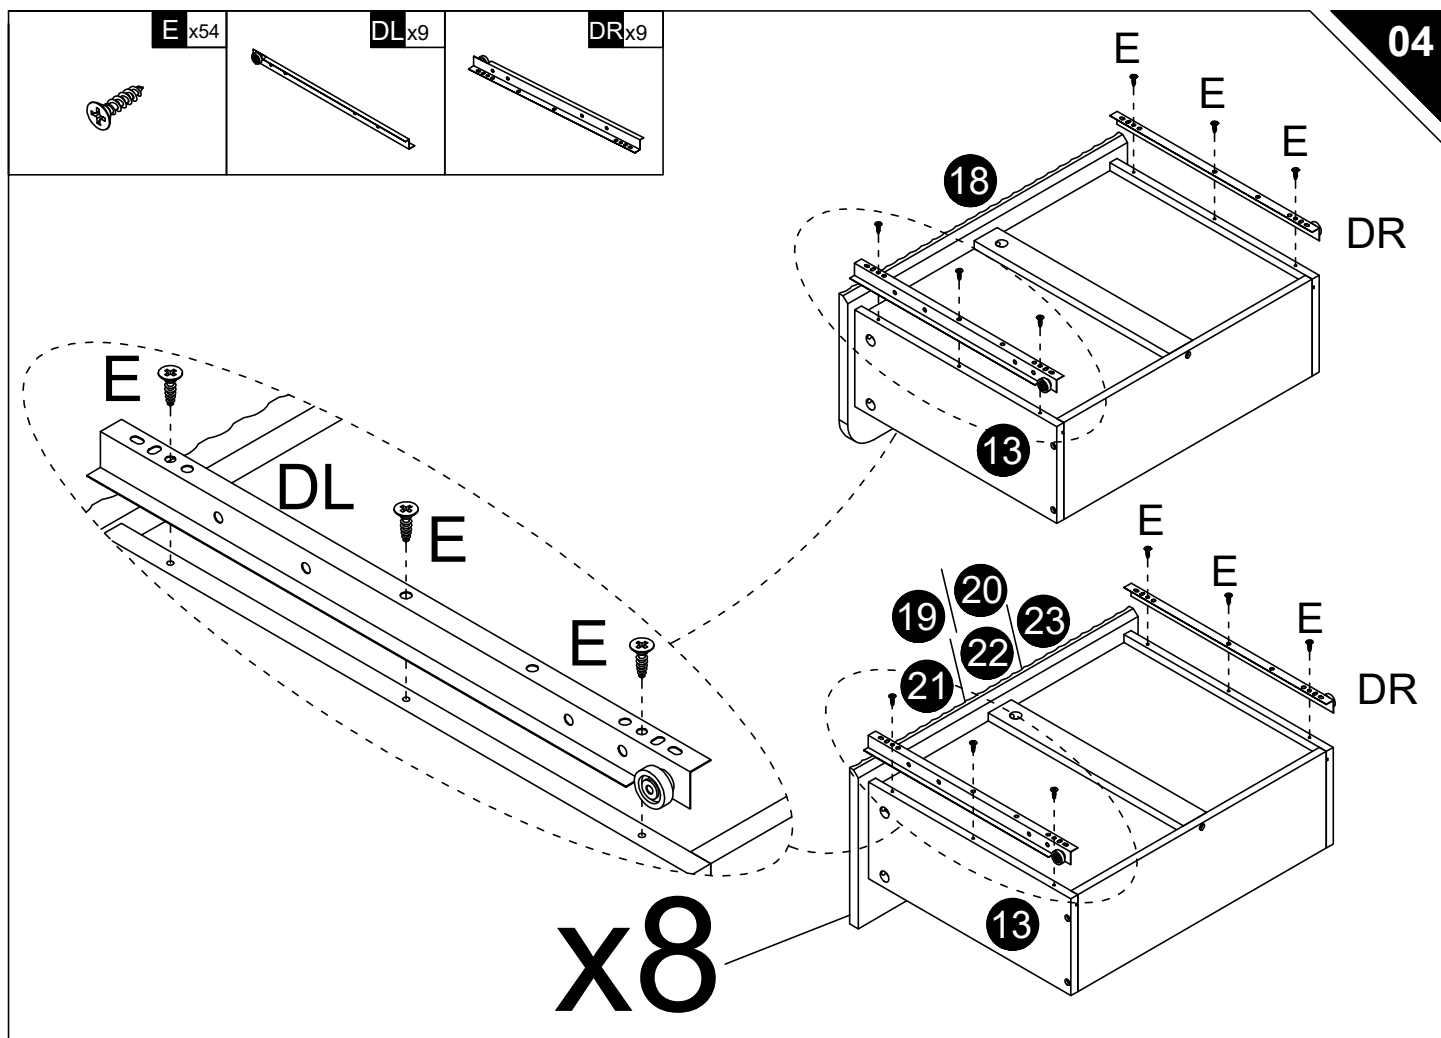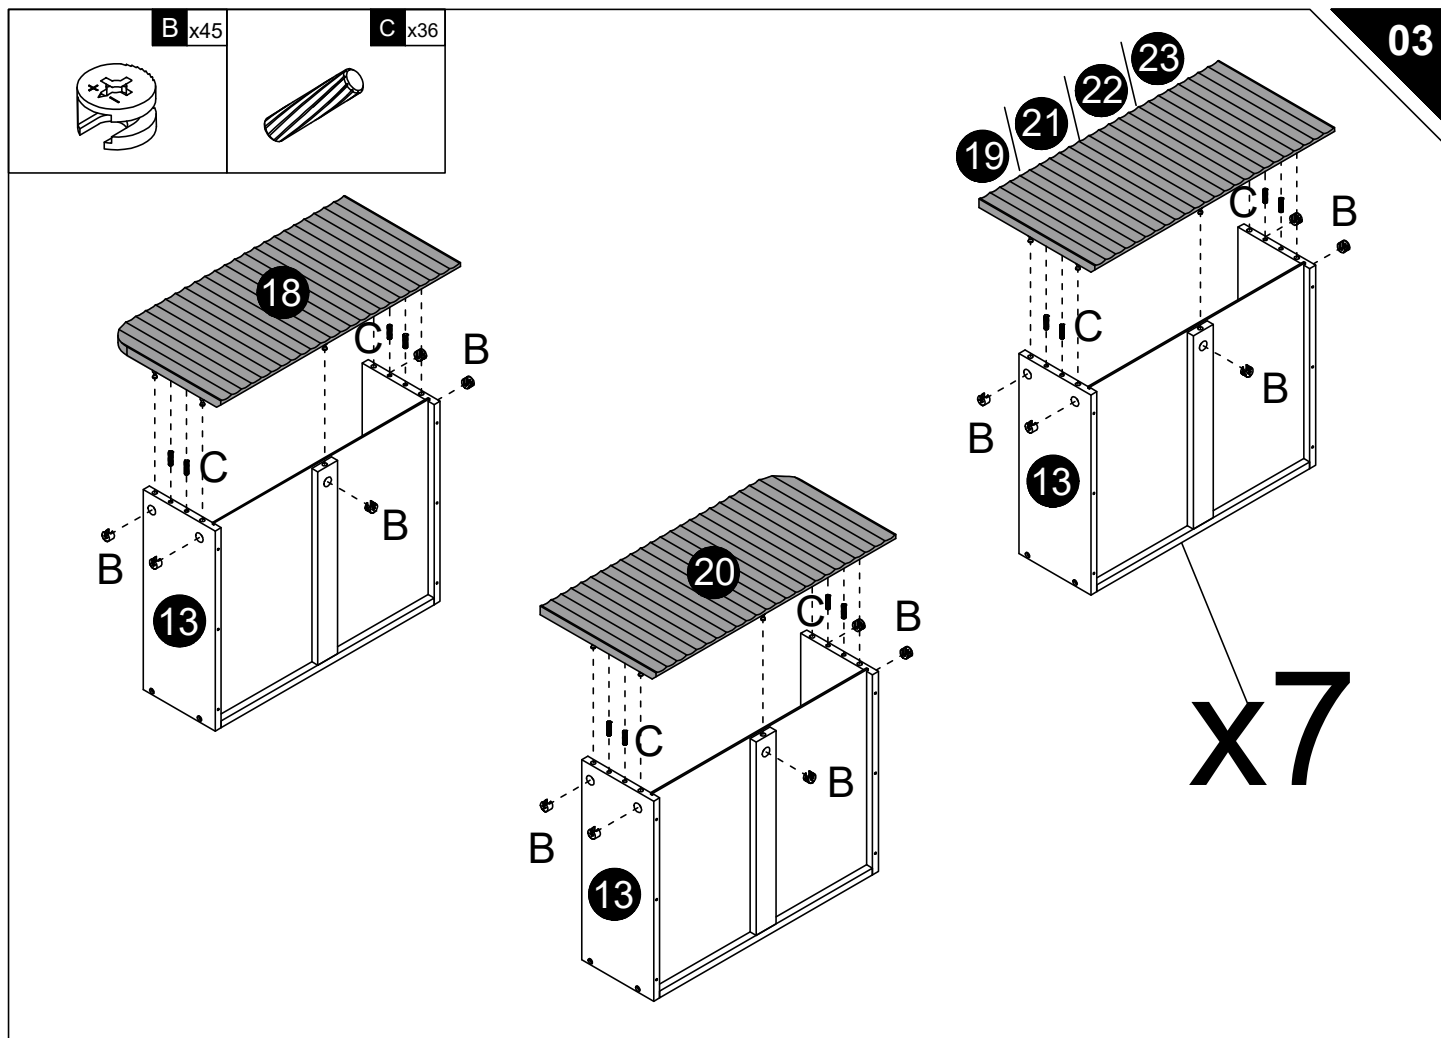

A x4









E x18



CL x3




CR x3

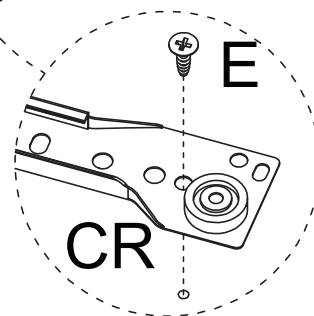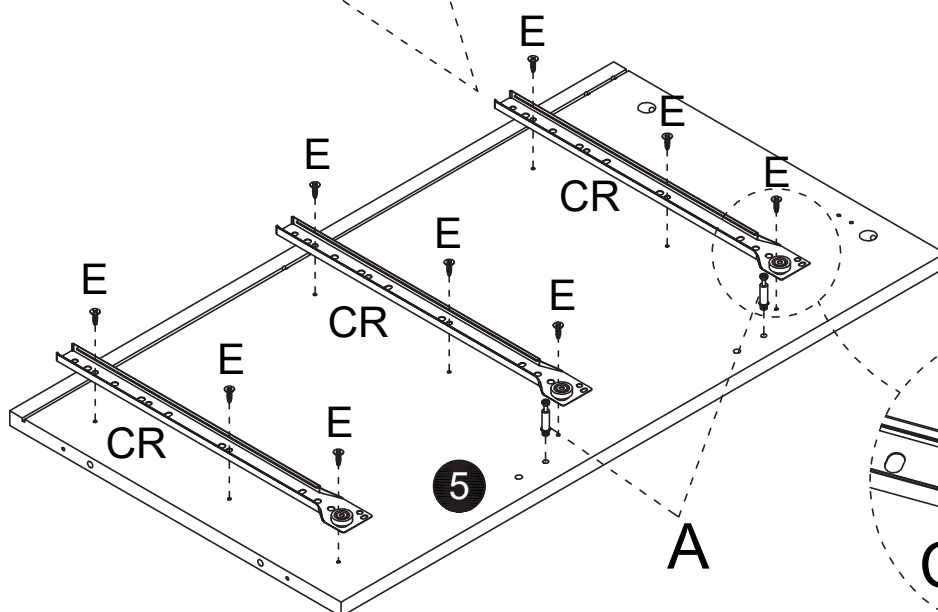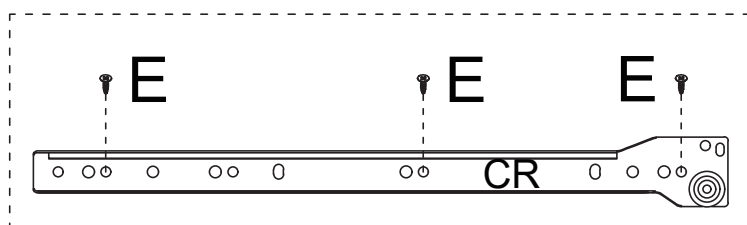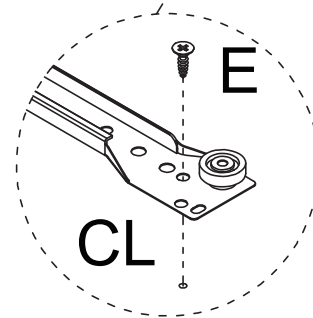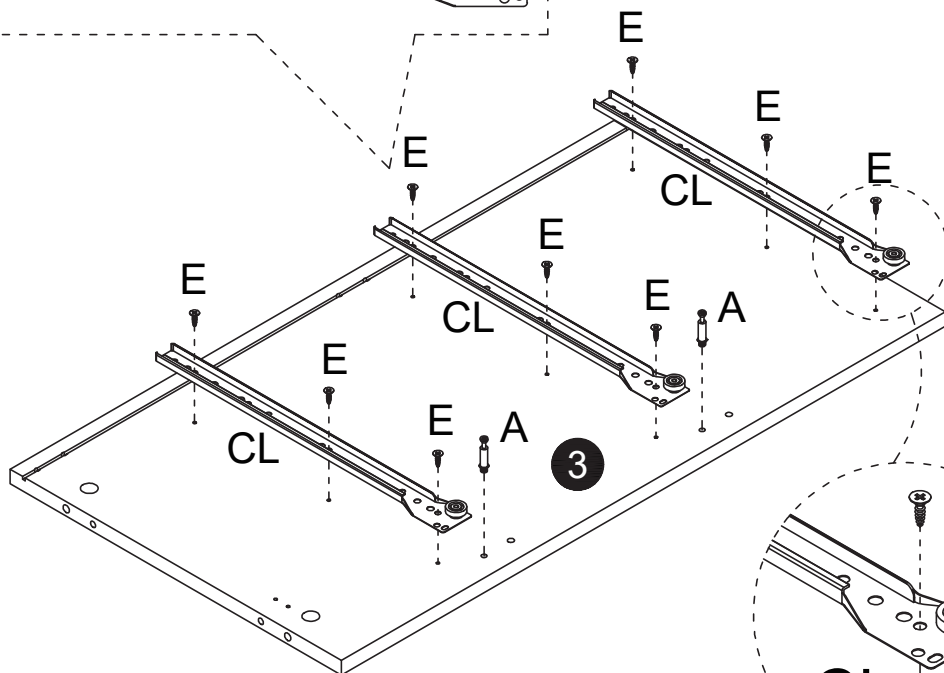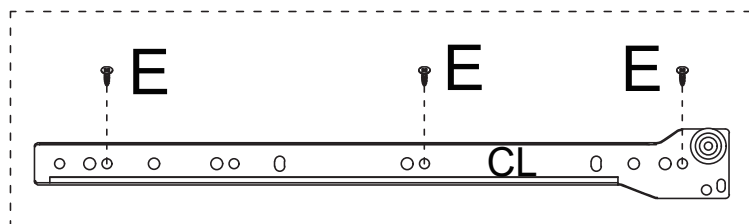



E x36

CL x6




CR x6

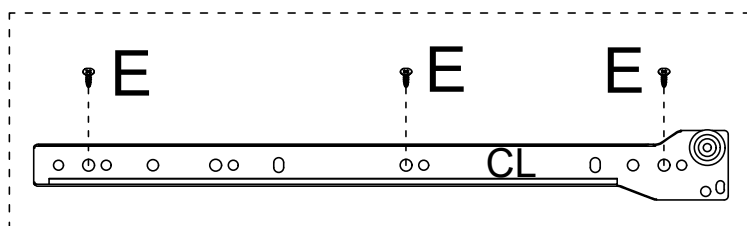

Second hole

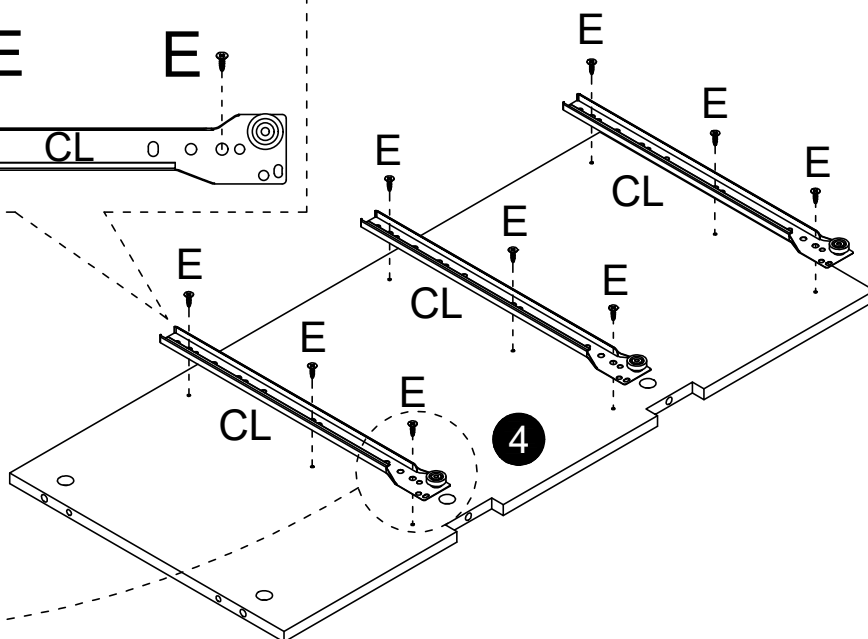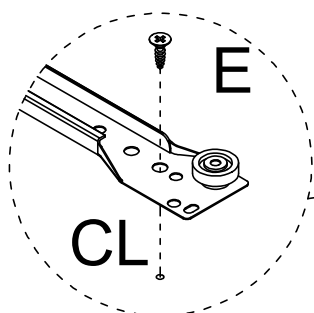


180°

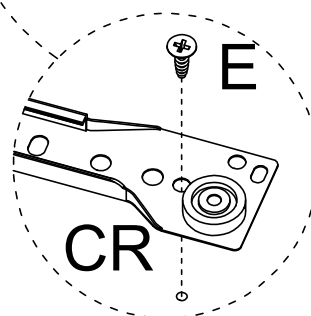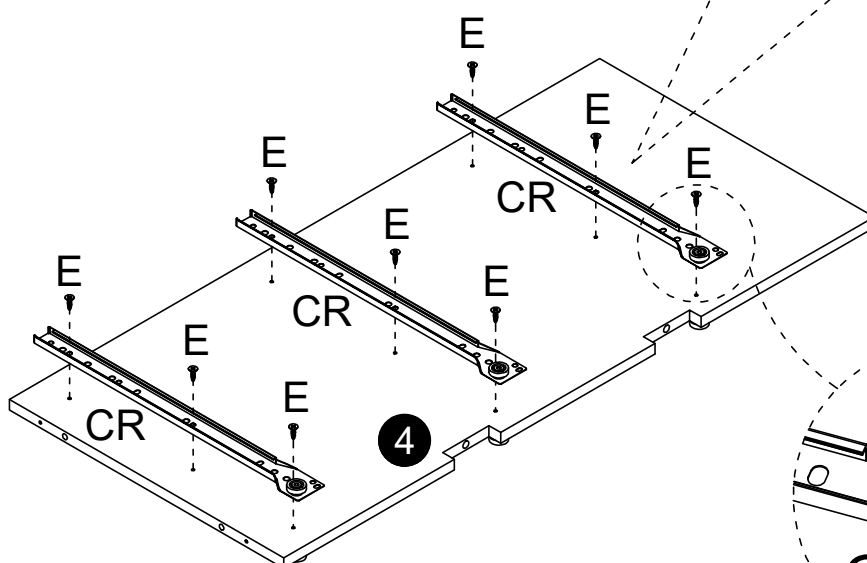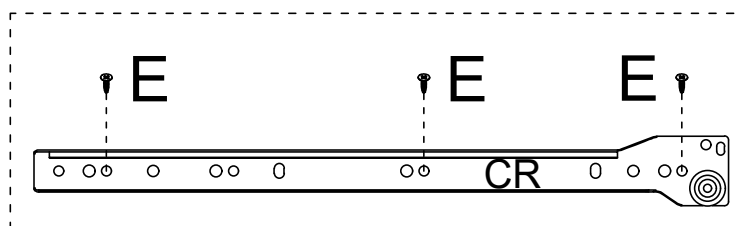


x2

A x4



07

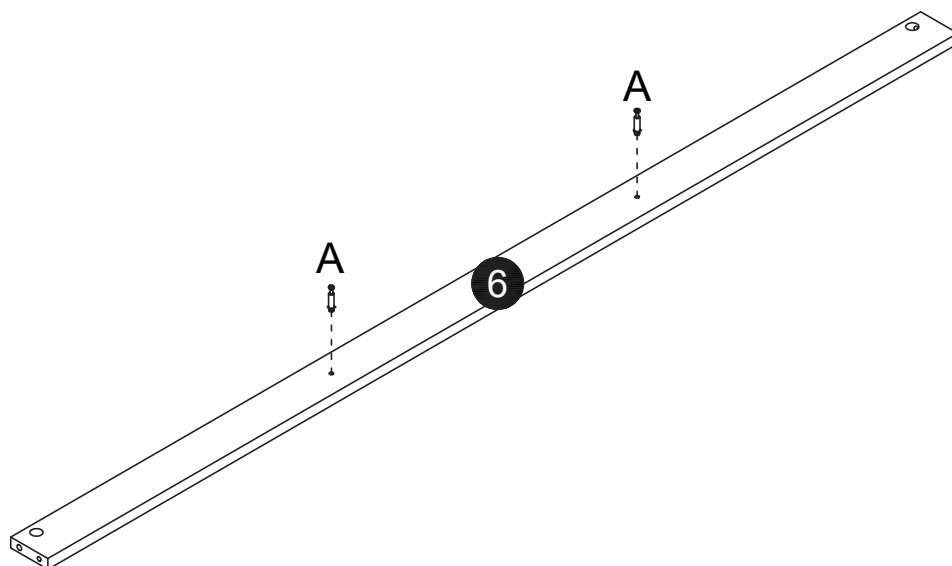


x2

B x4




08

For easier installation, please pad two piece of foam under the product (take it from the packaging box).

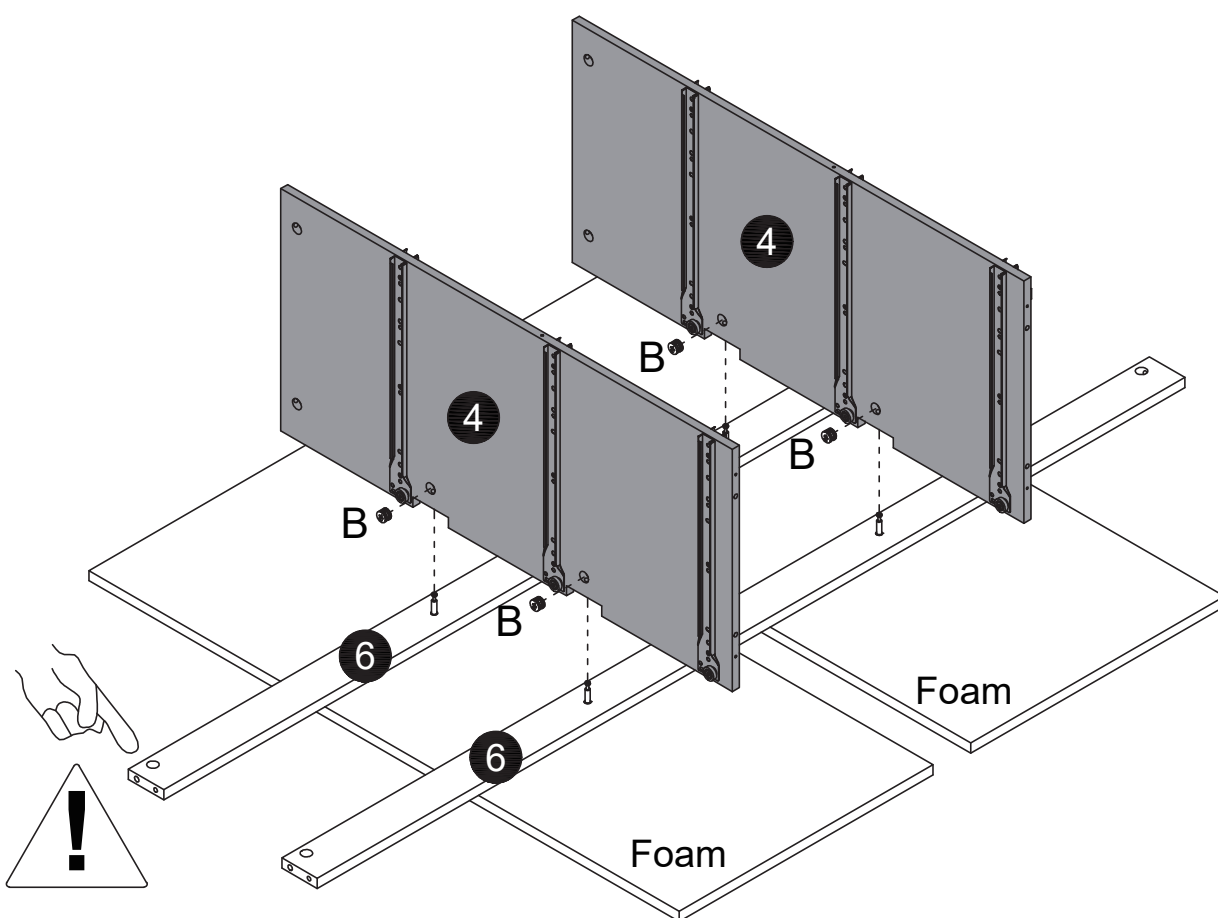

G x2

09

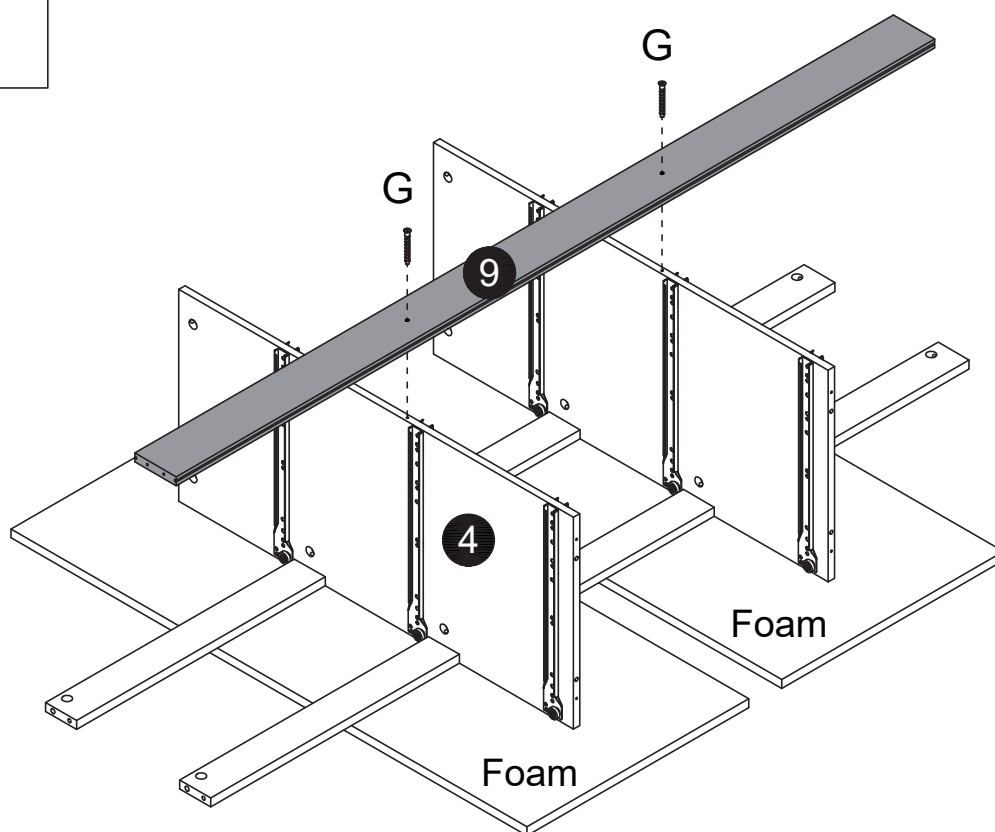




B x2

C x2

G x2


10

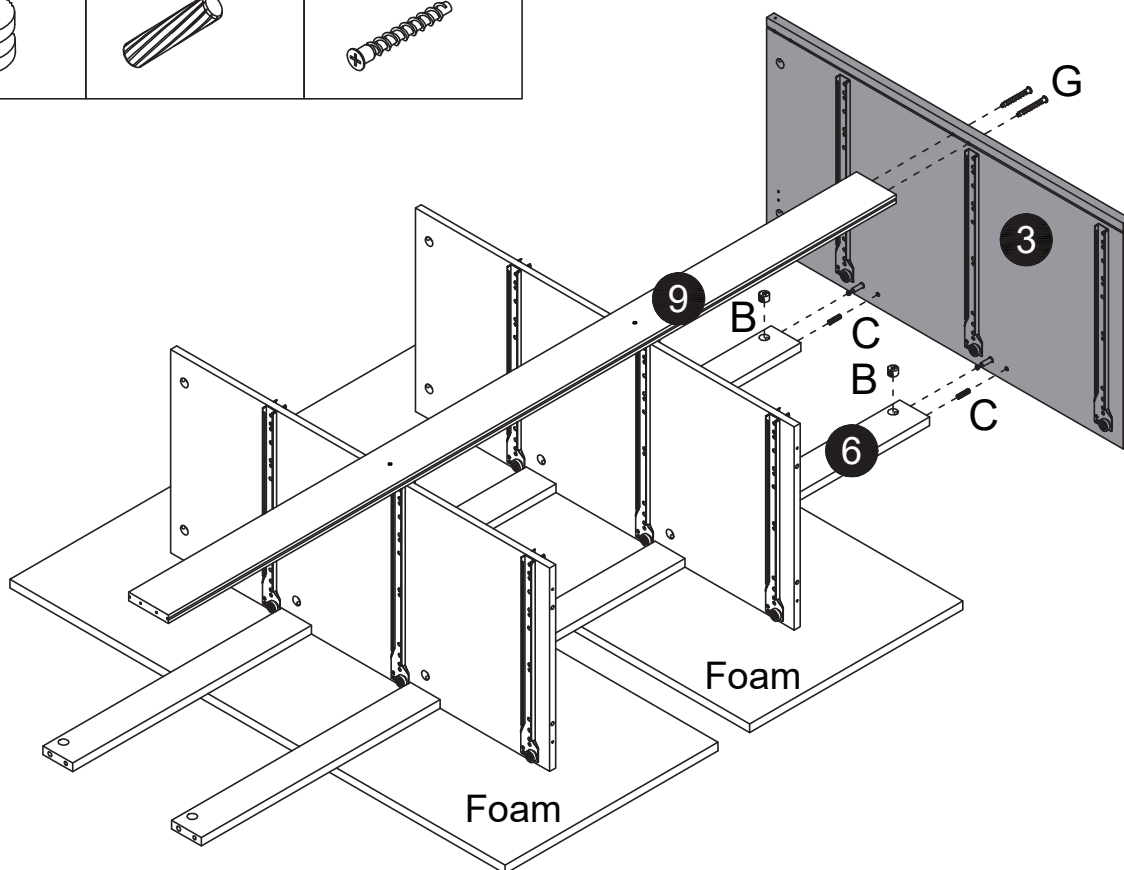

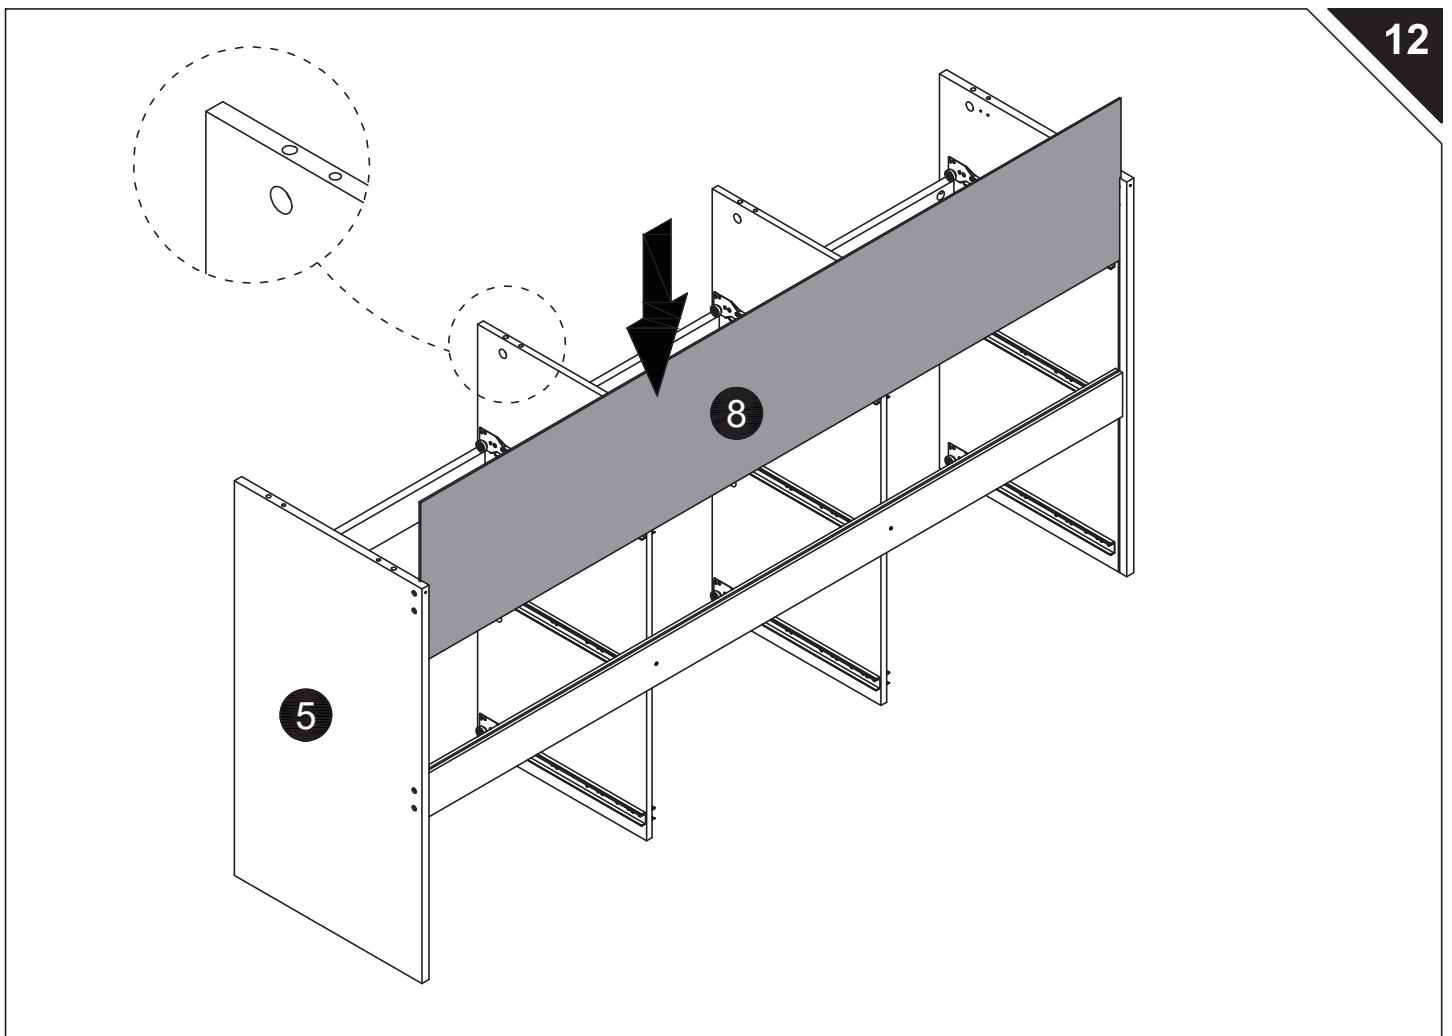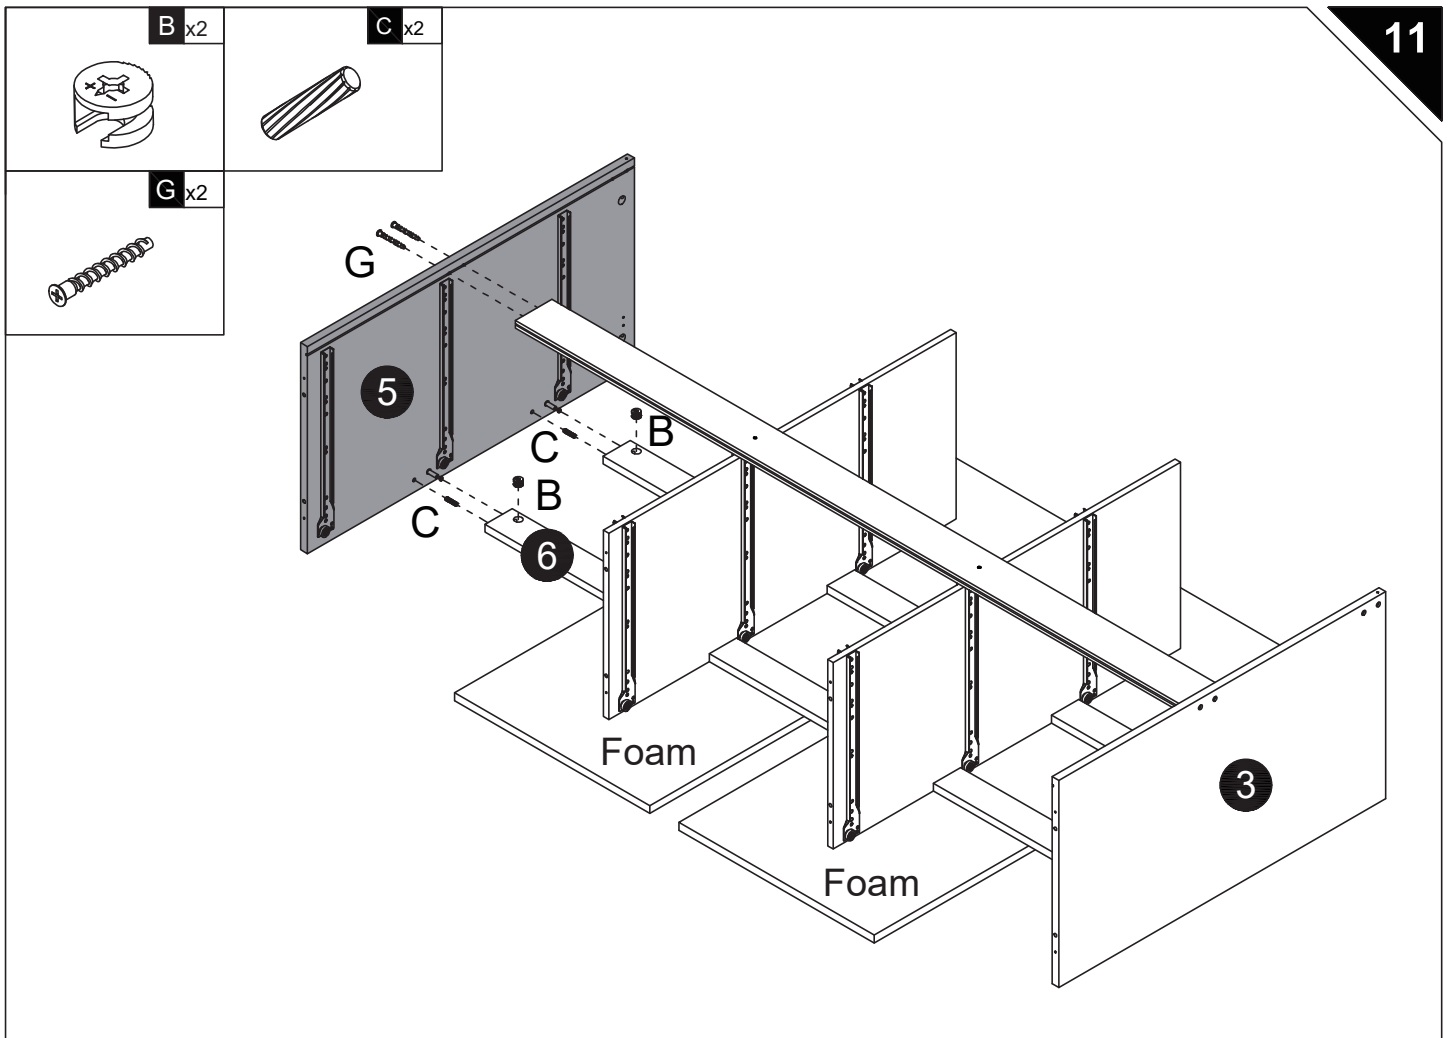


G x4

13

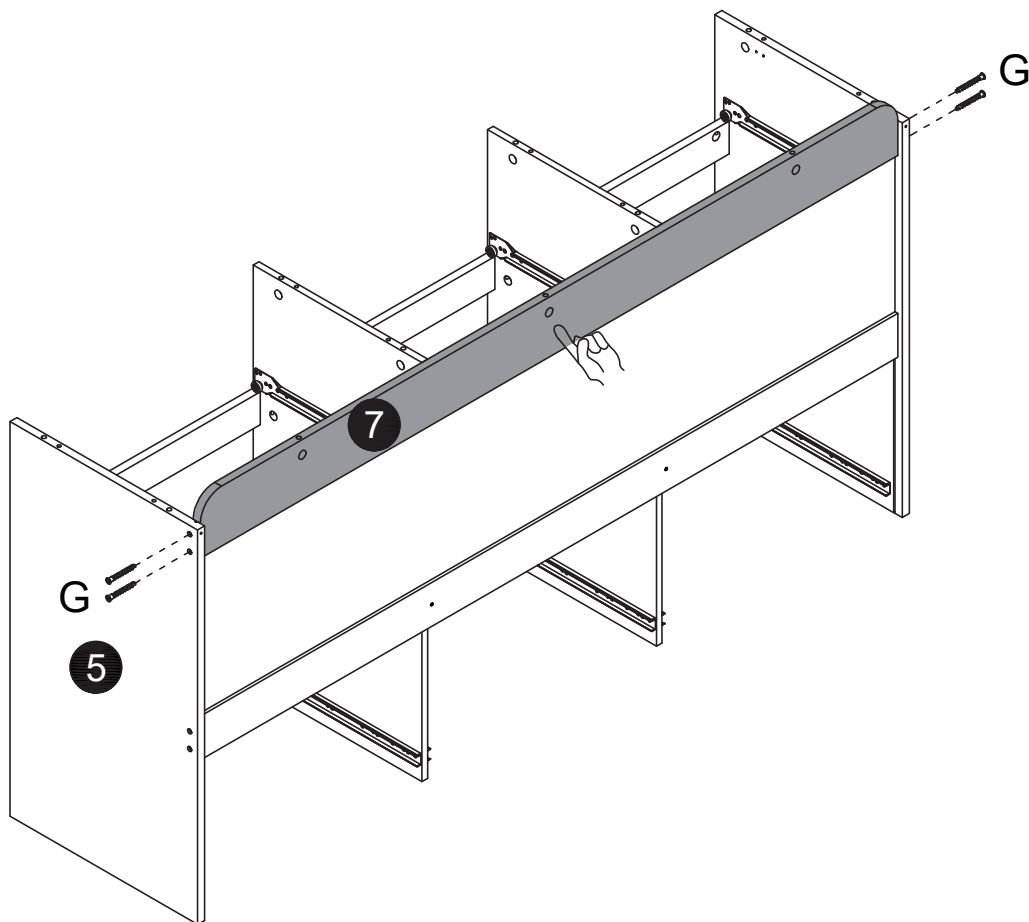


F x8

14

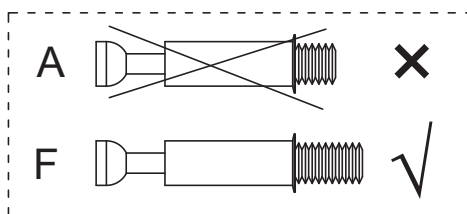

Caution : Need to use the correct part #F instead of part #A.

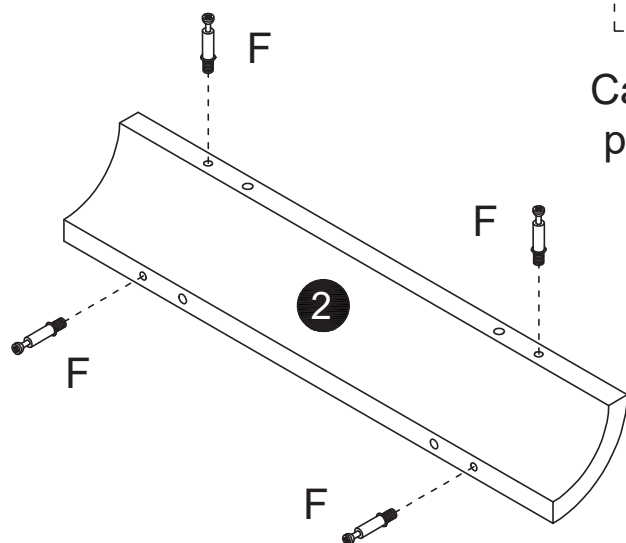

x2


B x4




C x4




15

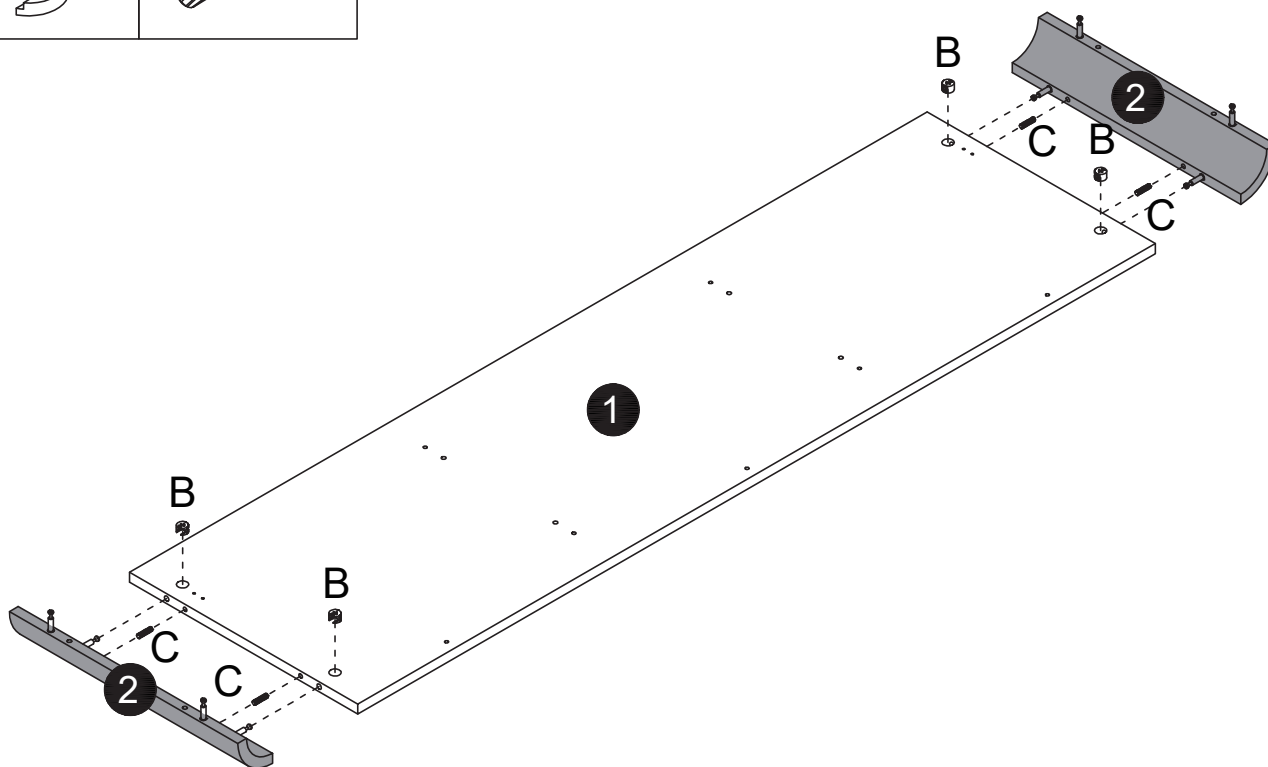

A x7






16


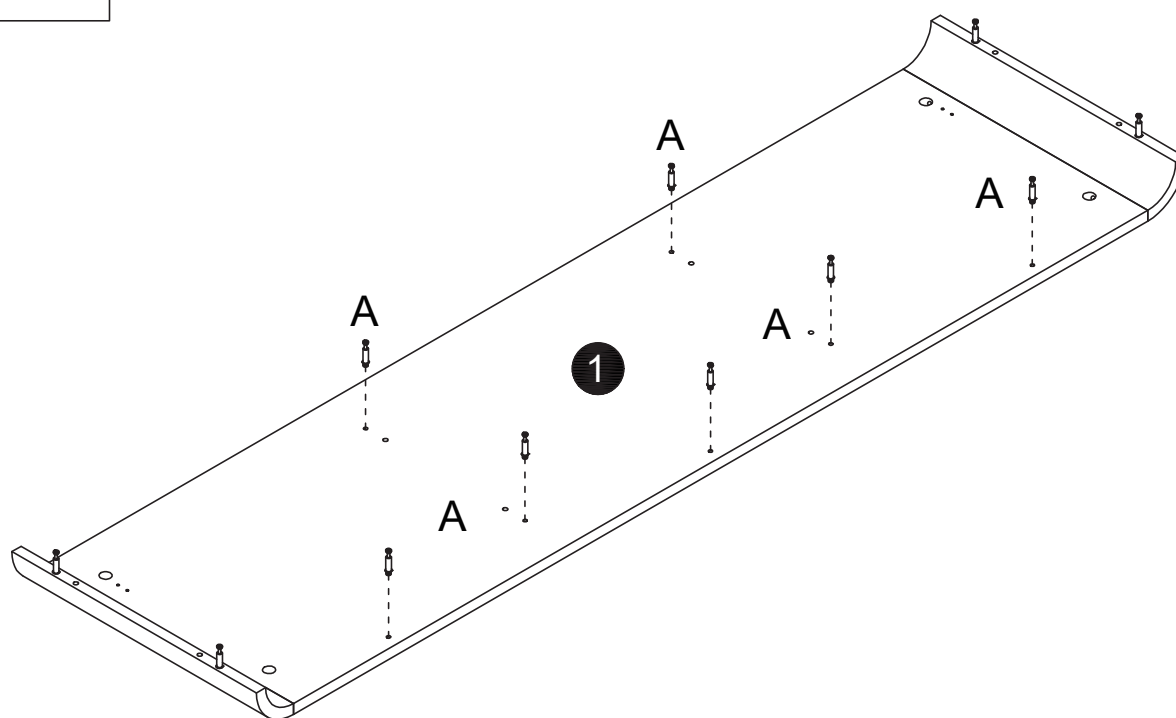


B x11


C x8

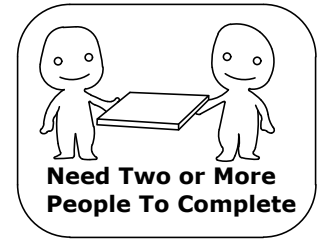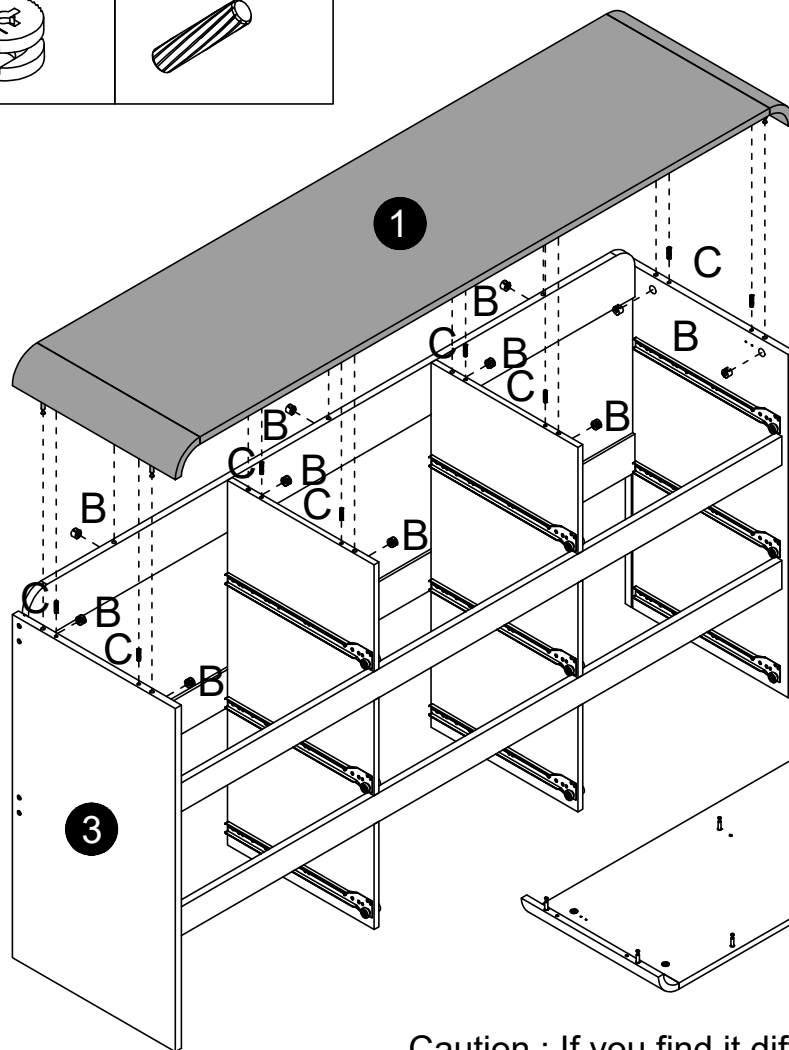


Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

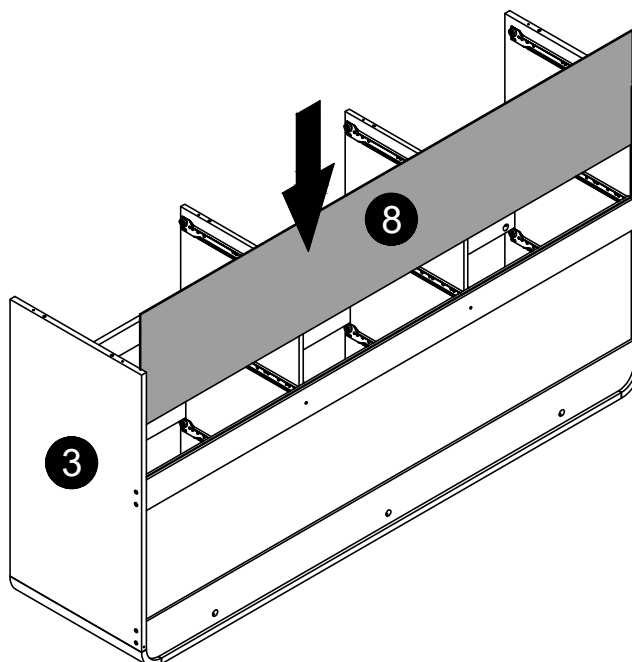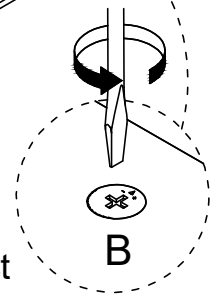

A x4



19

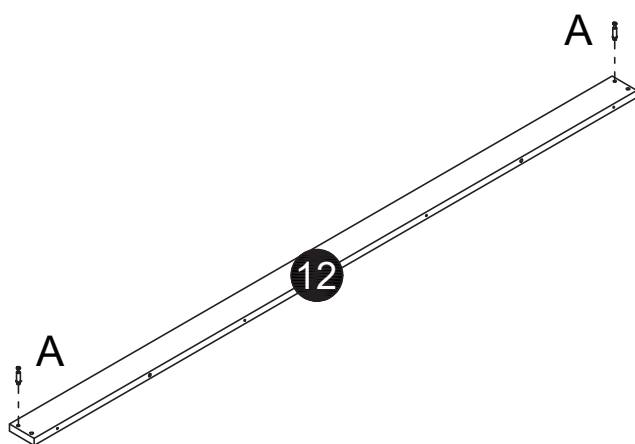

x2

B x4





C x12



I x12





20

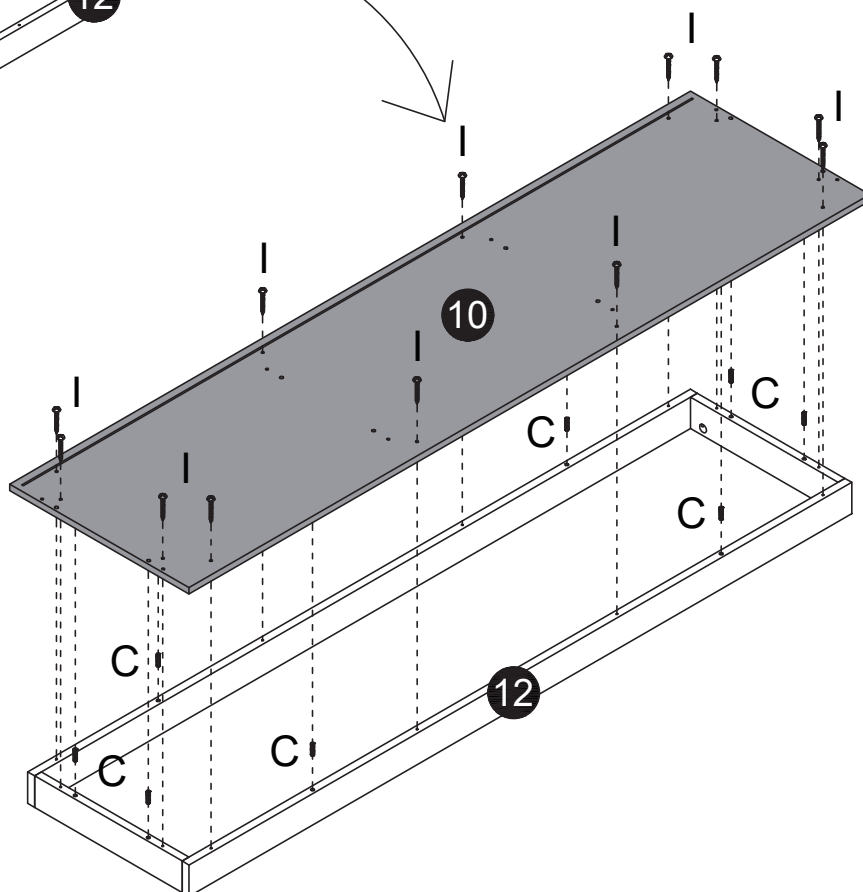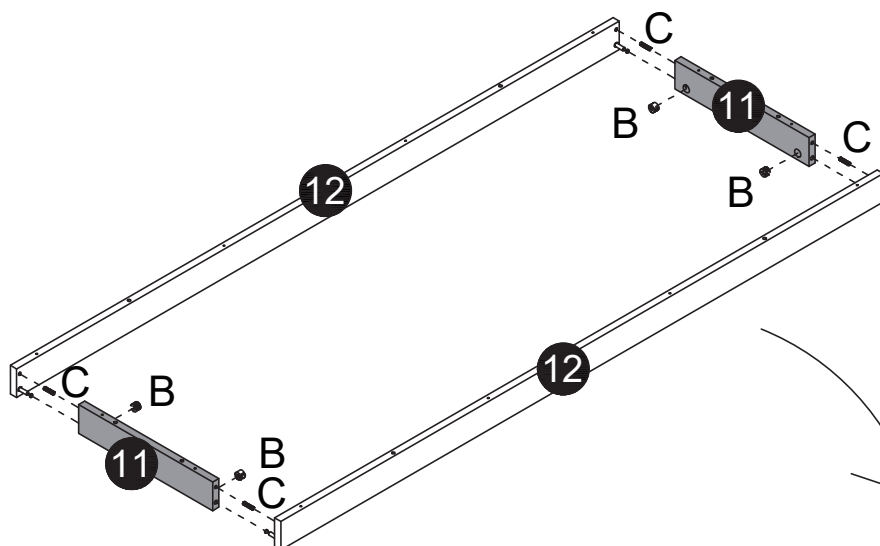

C x8



G x8

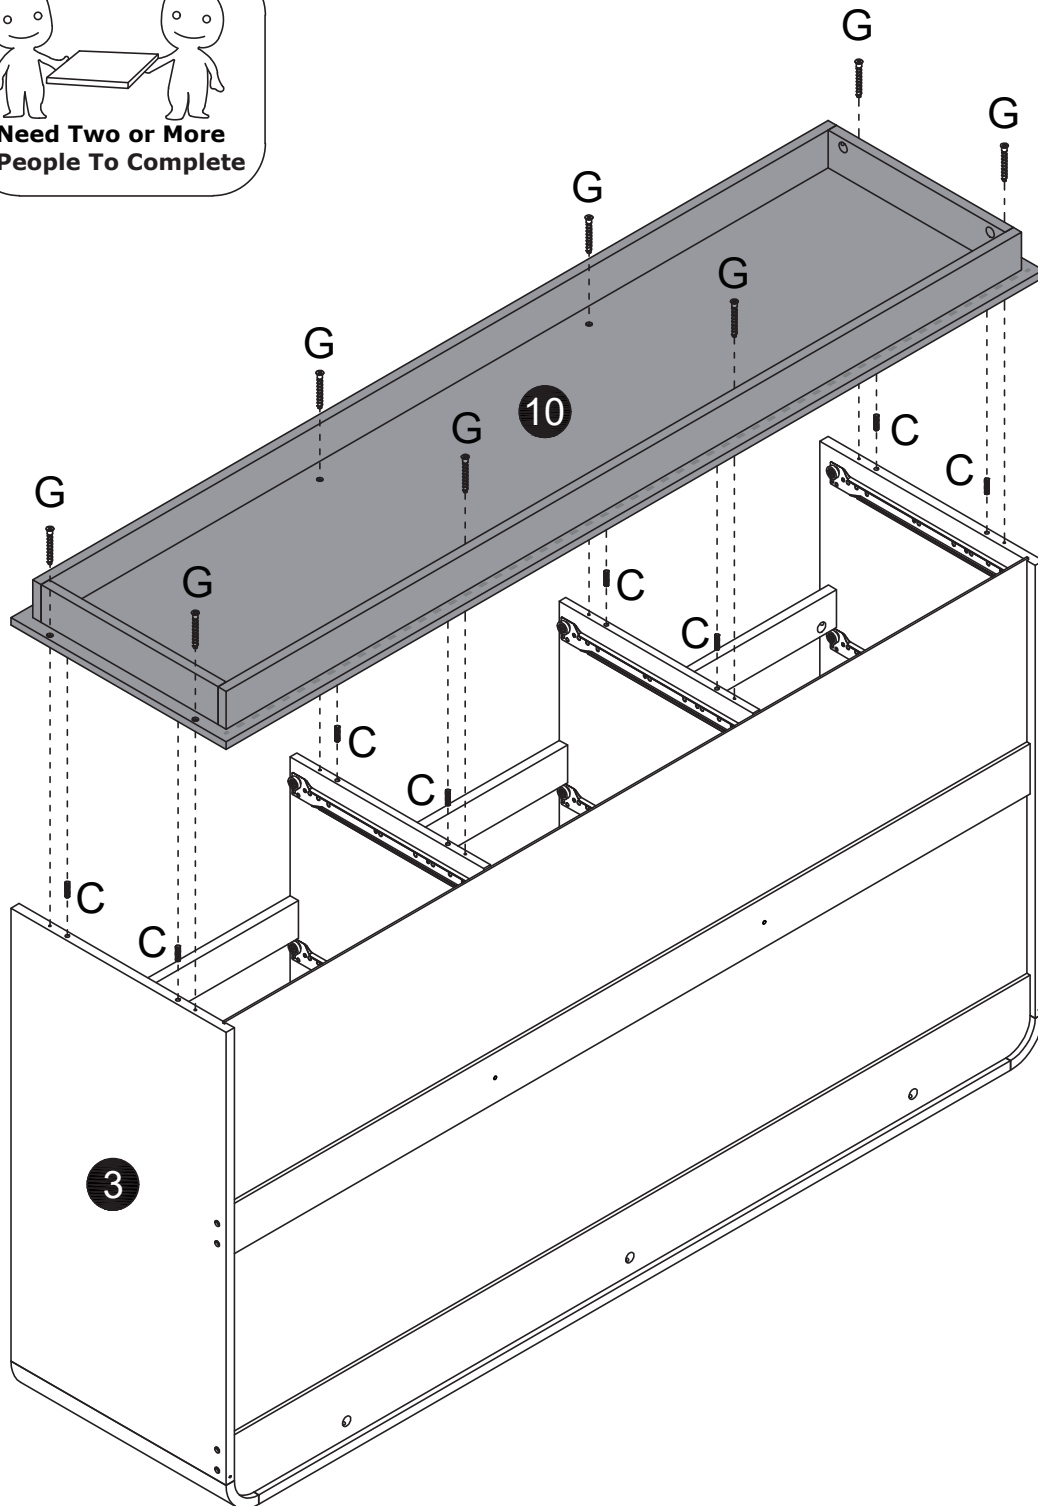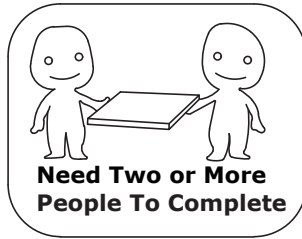

H x8



J x2



K x8



H

H

J K

1

K

J

M x10



M-1



M-2

M

M

5

M



M

M

M


M-1

M-2

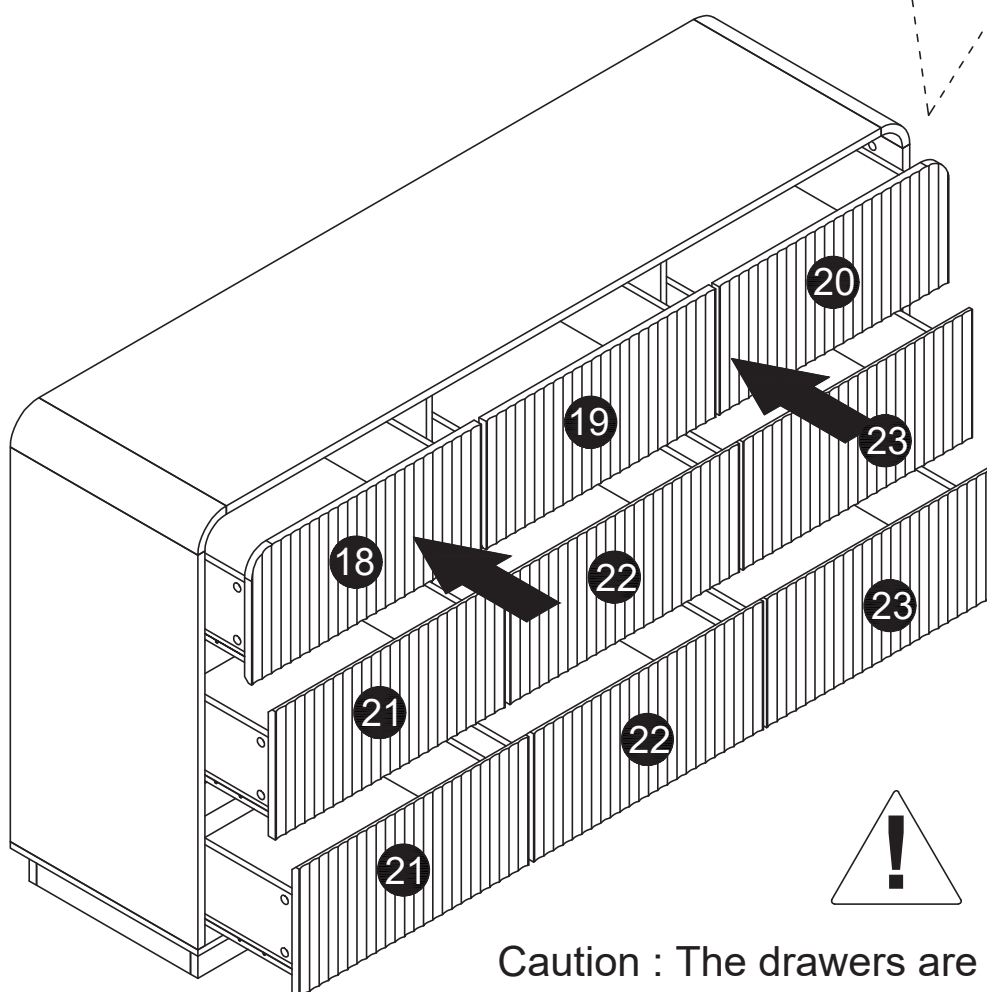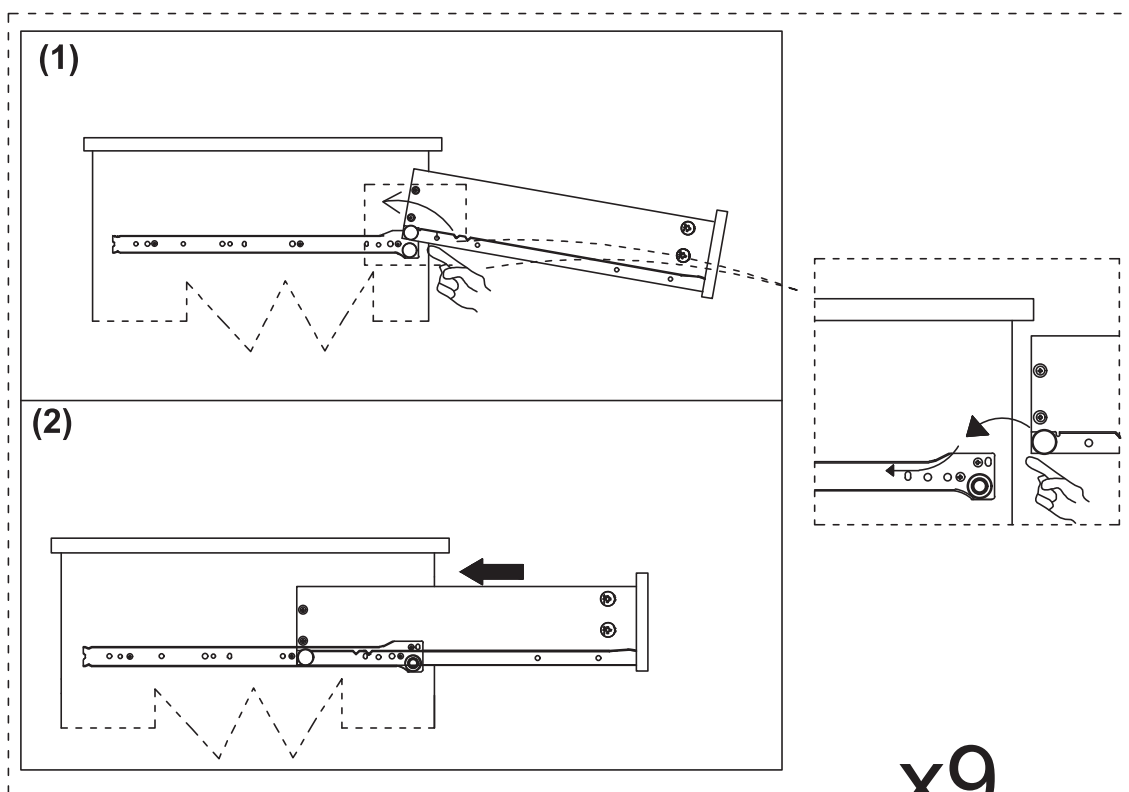


Caution : The drawers are differentiated on the left and right, please place them according to the corresponding numbers.

D x2



L x2




N x2




N-1


N-2

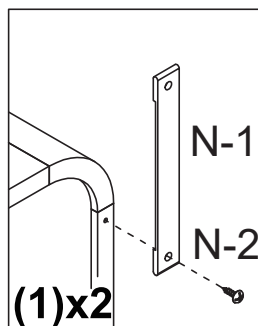


First fix the anti-rewind screw in the reserved hole of the product.

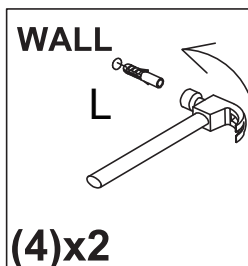


Then, put the expansion bolt into the hole

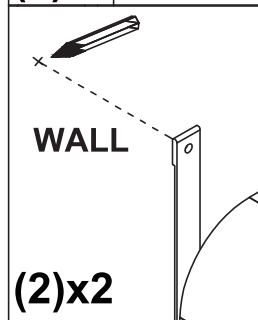

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

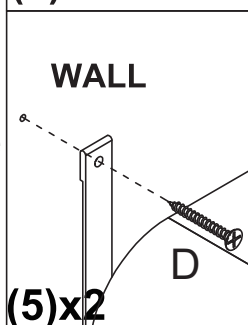

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

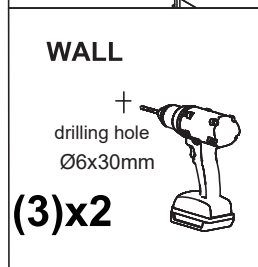

Then use a tape drill to make holes in the wall that are suitable for the product screws.

