

INSTRUCTION MANUAL

Tips: Be sure to use gloves to installation, since the plant stand is carbonized at 300 °C, direct contact with cause your hands to turn black.

When you receive the plant stand, please sort the accessories first, check the quantity of each accessory in the figure below.



1 partition shelf x 14



2 short upright x 36



3 medium upright x 38



4 long upright x 16



5 triangle connector x 60




6 T-shaped connector x 4

Tips: Put all the grooves towards to the same side, and make sure each connector is knocked to the bottom when installing.

1 Use 1 medium upright and 2 triangle connectors to install 30 sets of accessories, this accessory is "A".



use 1 medium upright and 2 T-shaped connectors to install 2 sets of accessories, this accessory is "B".


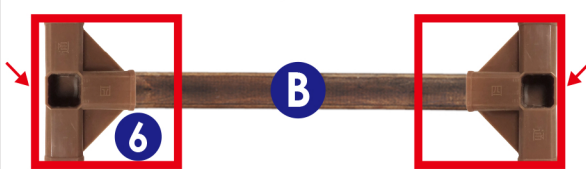


2 Use 2 "A" accessories and 1 partition shelf to install 12 partition shelves.





3 Use 1 "A" accessory, 1 partition shelf, 1 "B" accessory to install 2 partition shelves, and then use 2 medium upright to install a partition shelf, named "C".

3 medium upright

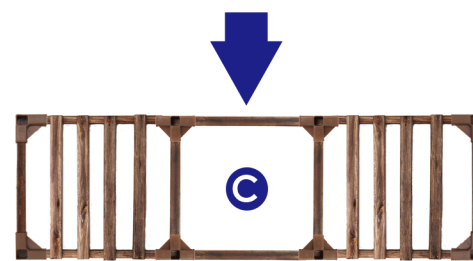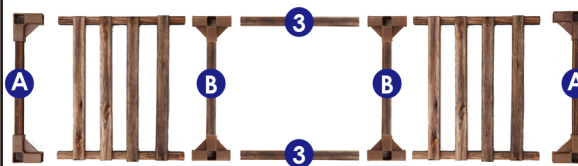

4 Use 2 "A" accessories and 2 medium upright to install 2 partition shelves, named "D".


3 medium upright

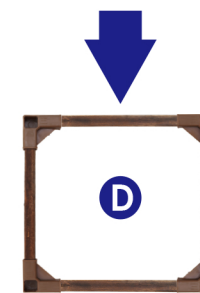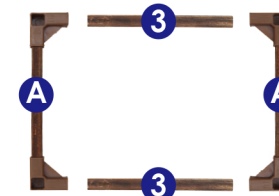

5 Use 8 short upright, 5 shelves of step 2 and 4 long upright to install the first layer. (Tips: When installing partition shelf, make sure all shelf are facing in the same direction).


2 short upright

4 long upright

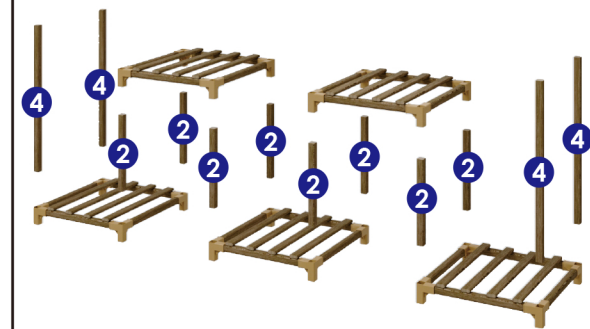

6 Use 8 short upright and 3 shelves of step 2 to install the second layer.


2 short upright

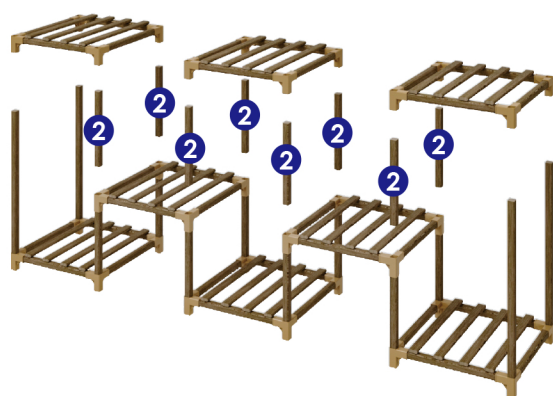

7 Use 8 short upright, 4 long upright and 2 "D" accessories to install the third layer.

2 short upright


4 long upright

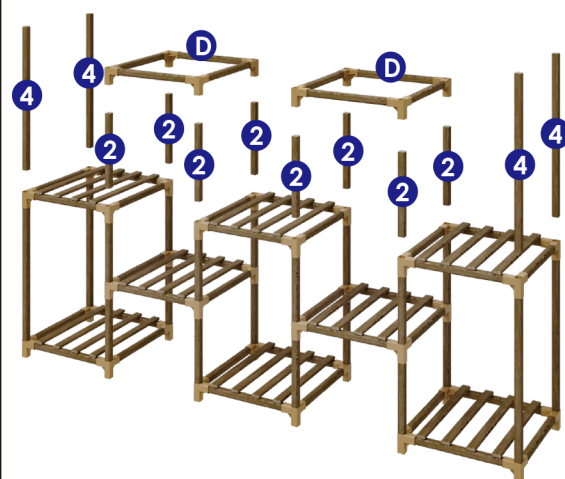

8 Use 4 short upright, 4 long upright and 2 shelves of step 2 to install the fourth layer.

2 short upright


4 long upright

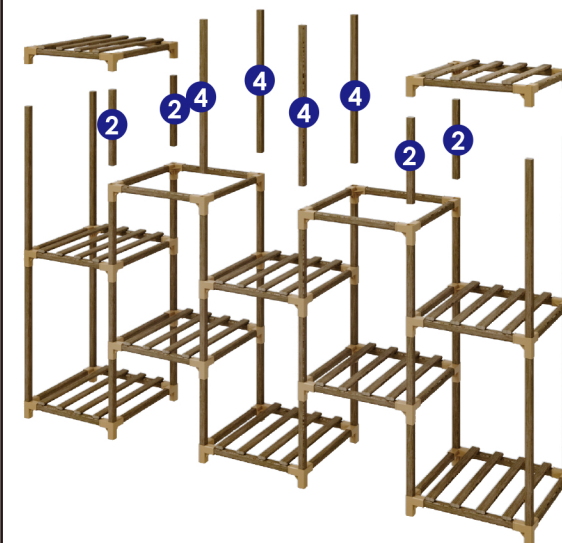

9 Use 4 short upright, 4 long upright and 1 "C" accessories to install the fifth layer.

2 short upright

4 long upright

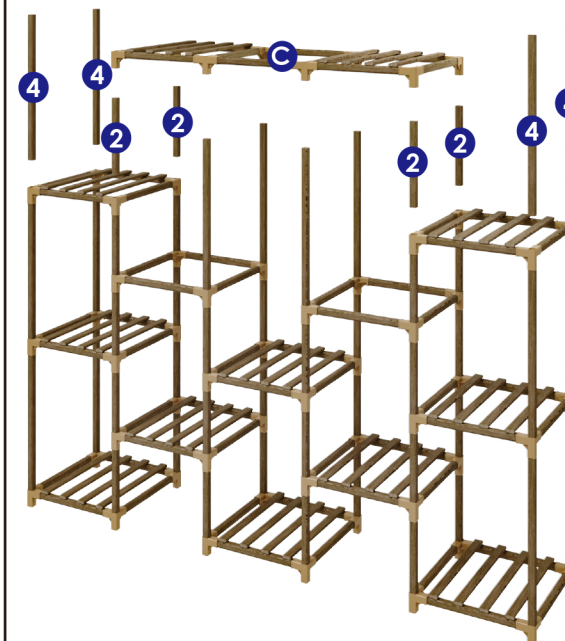

10 Use 4 short upright and 2 shelves of step 2 to install the last layer. As shown in the picture below, the plant stand is completed.

2 short upright

