



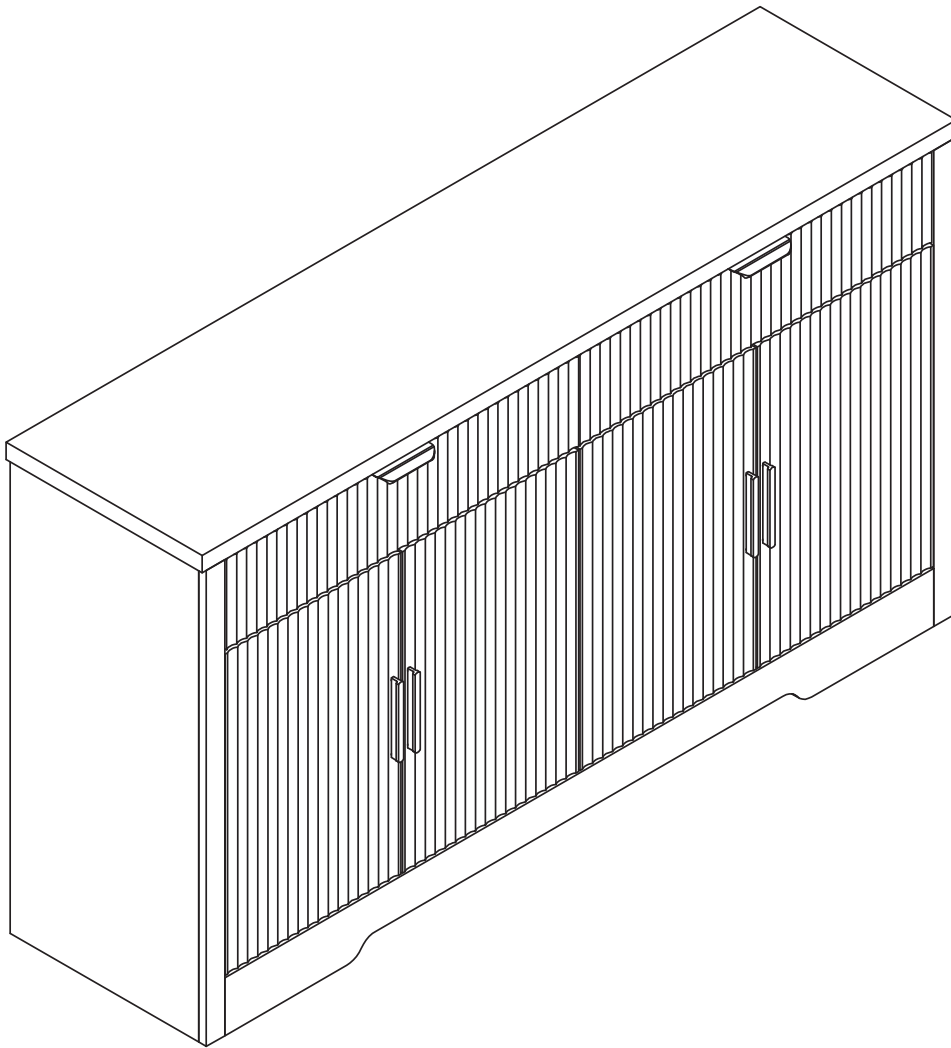


Please note: Items cannot be returned once assembled.

Installation & Assembly




**IT IS RECOMMENDED
TO USE POWER TOOLS**

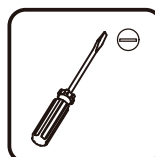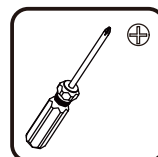


180MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

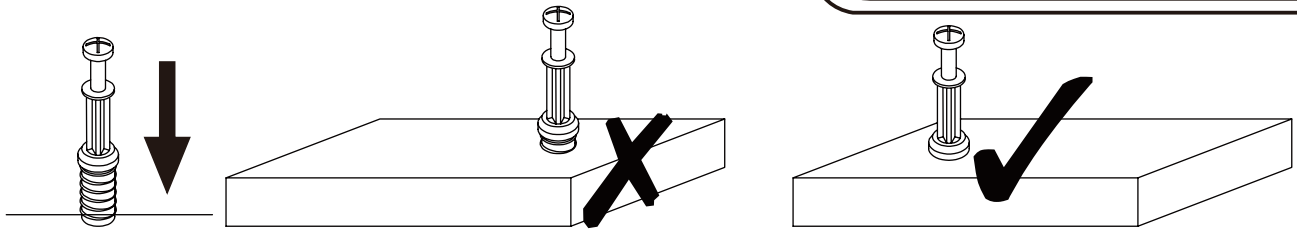


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

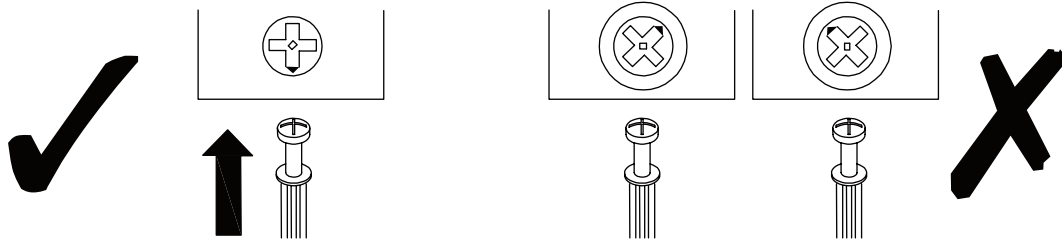











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










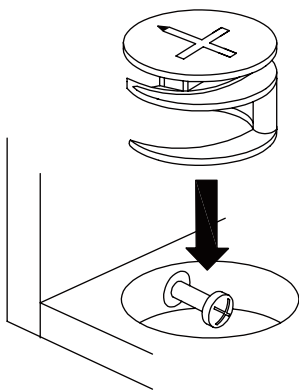








EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

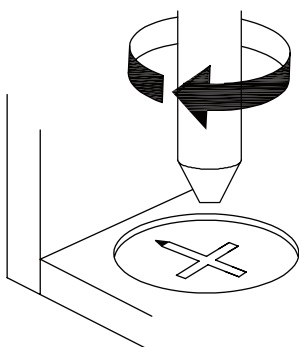



EN_Turn cam lock clockwise to tighten.

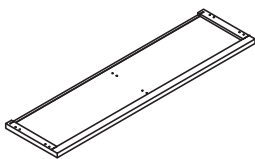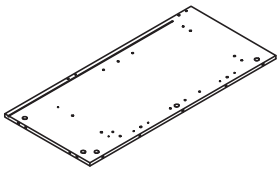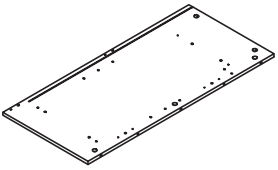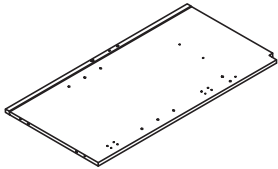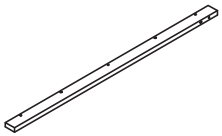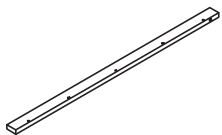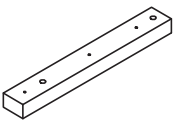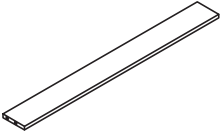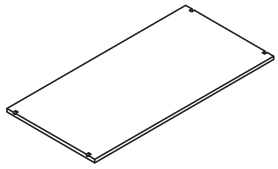NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x4	
⑨		x2	
⑩		x2	

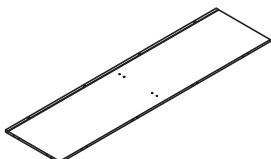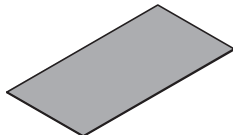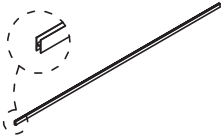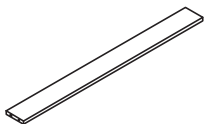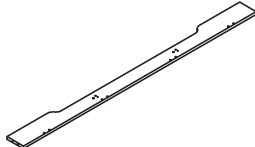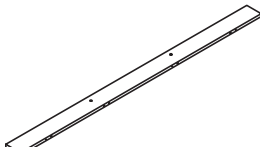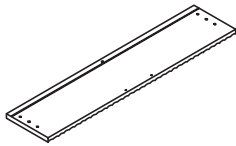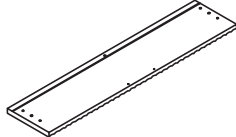
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x4	
⑬		x2	
⑭		x2	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x1	
⑲		x1	
⑳		x2	

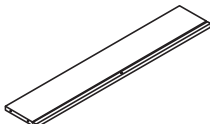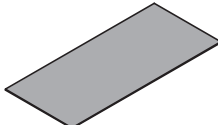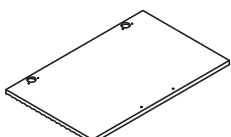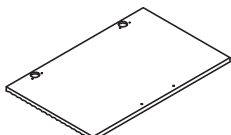NO.	PARTS	QTY	SPARE
(21)		x2	
(22)		x2	
(23)		x2	
(24)		x2	
(25)		x3	
(26)		x1	
	 Hardware Kit	x1	

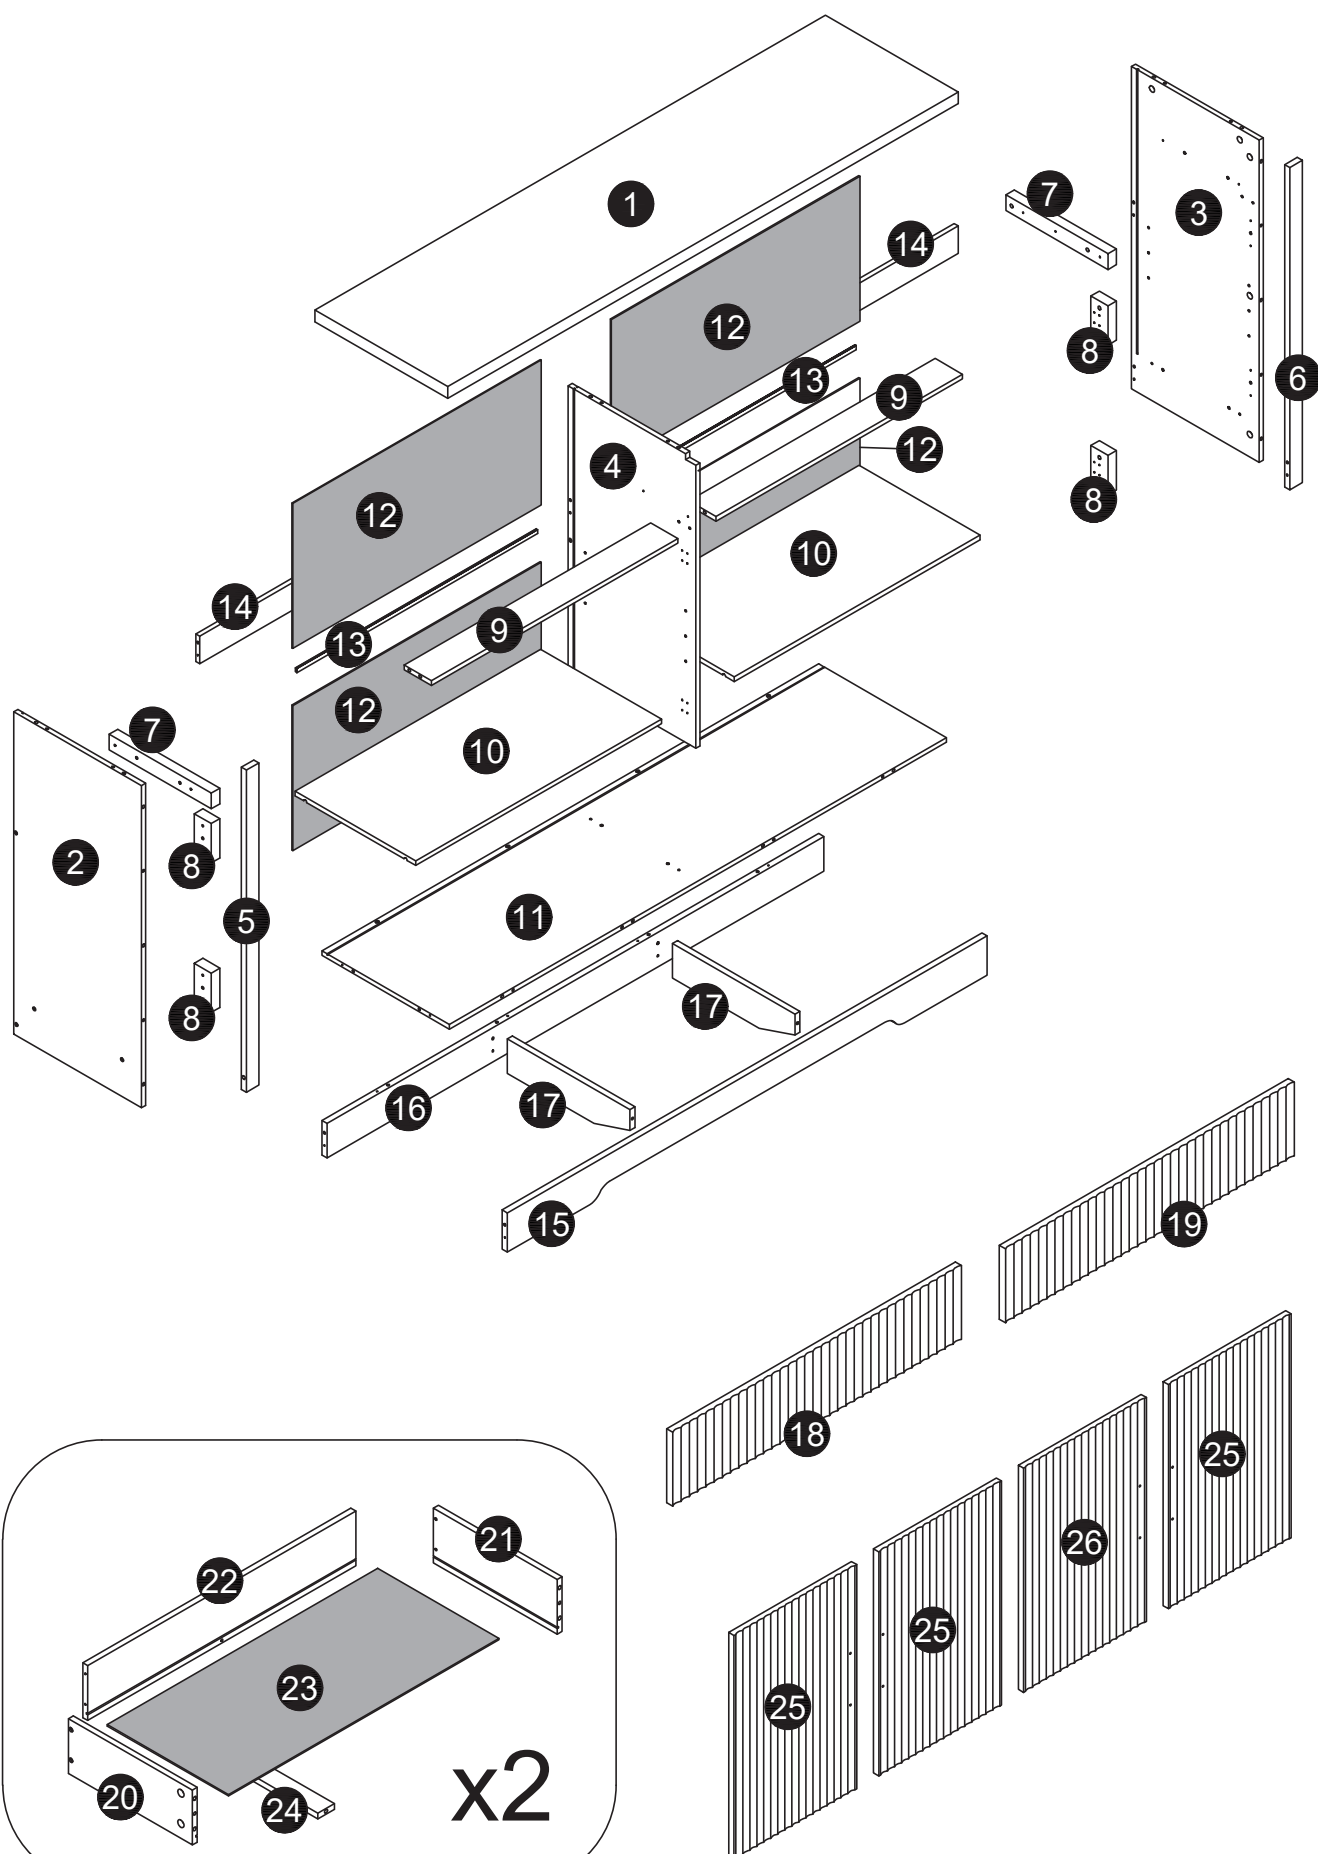

 A x34 Ø6x35mm +3(spare)	 B x34 Ø15x10mm +3(spare)	 C x48 Ø6x30mm +4(spare)	 D x30 Ø4x35mm +3(spare)	 E x84 Ø3.5x12mm +5(spare)	 F x2
 G-1	 G-2	 H x8	 I x2	 J x12 Ø4x30mm +1(spare)	 K x2
 L x2 Ø4x50mm	 M x4	 N x4	 O x10 Ø15mm +2(spare)	 P x2 Ø6x30mm	 Q-1
 Q-2	 R-1	 R-2	 CL x2 L300mm	 CR x2 L300mm	 DL x2 L300mm
 DR x2 L300mm					

A x10





B x10



C x4



D x10


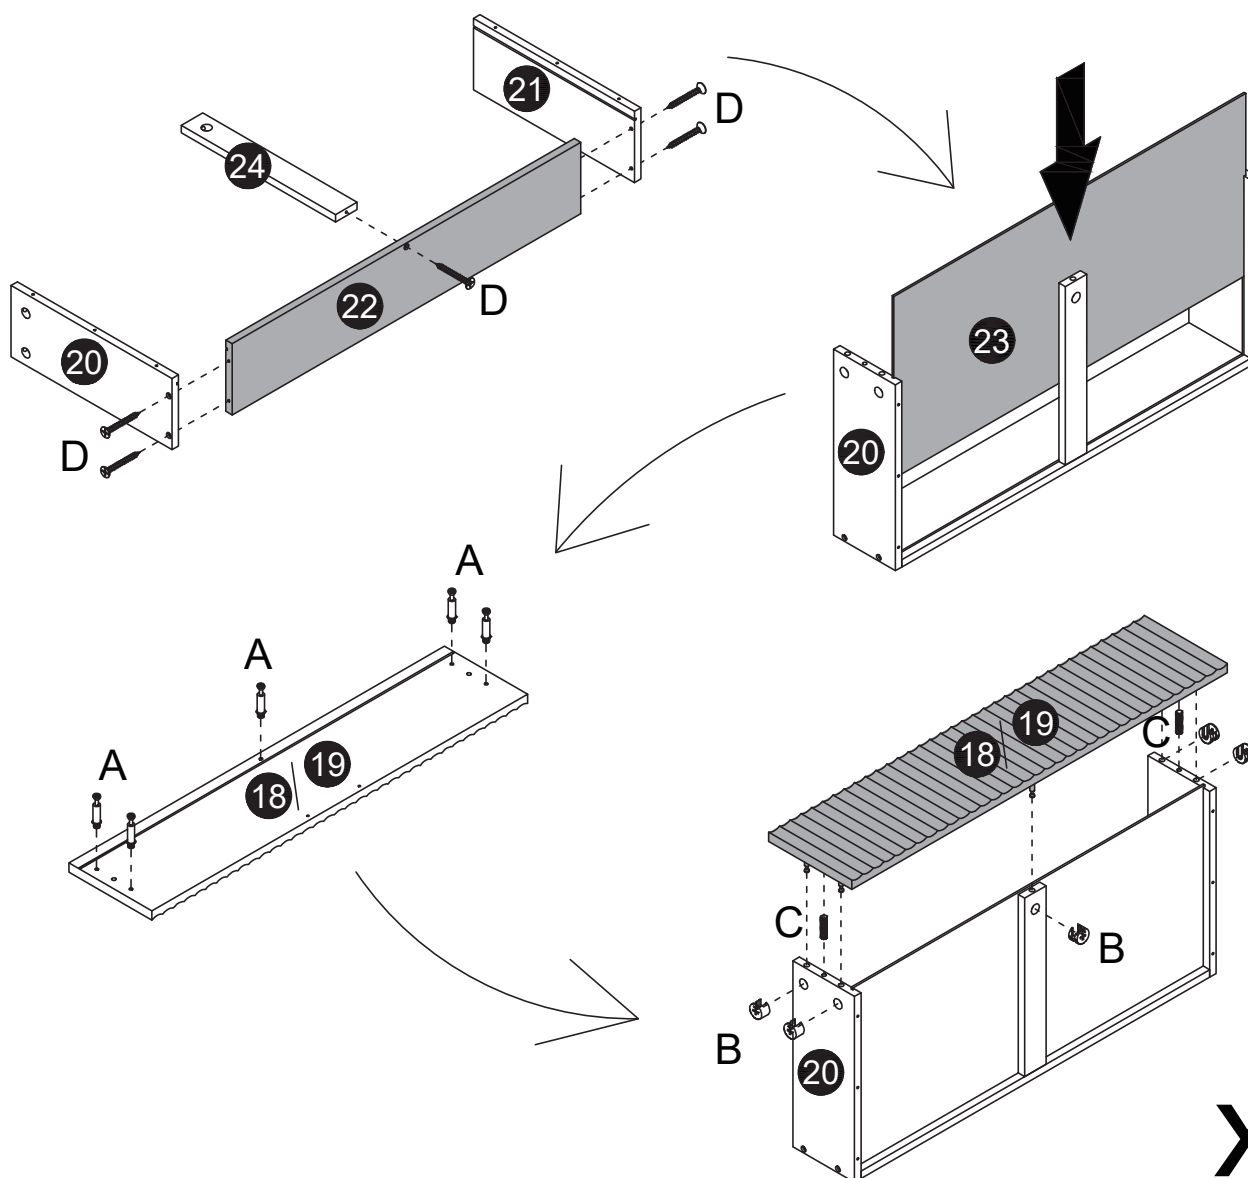


x2

E x4



F x2

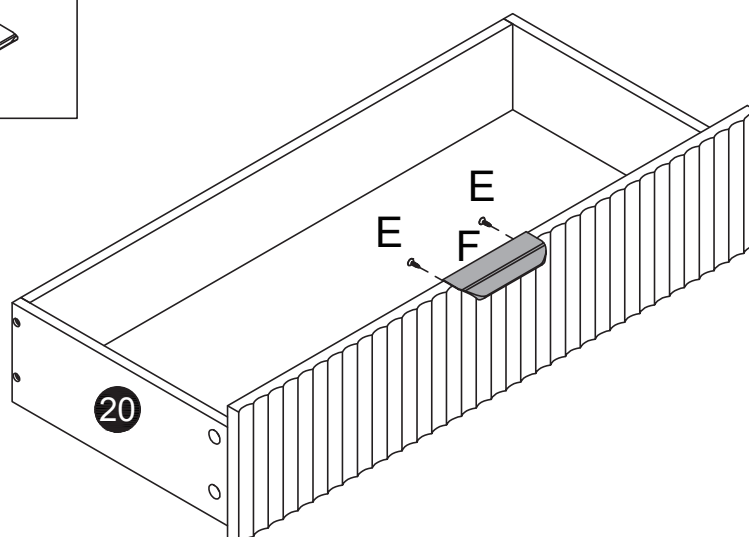


x2



E x12



DL x2



DR x2

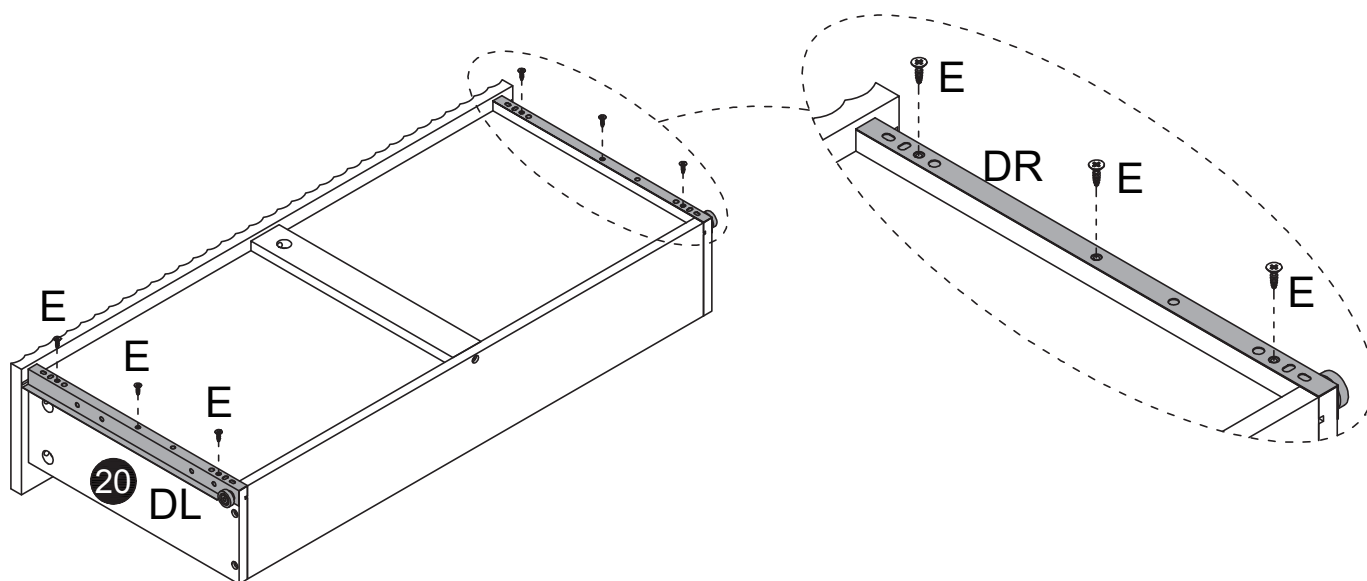

x2


C x4




D x4



Caution : The side with the counterbore should face up.

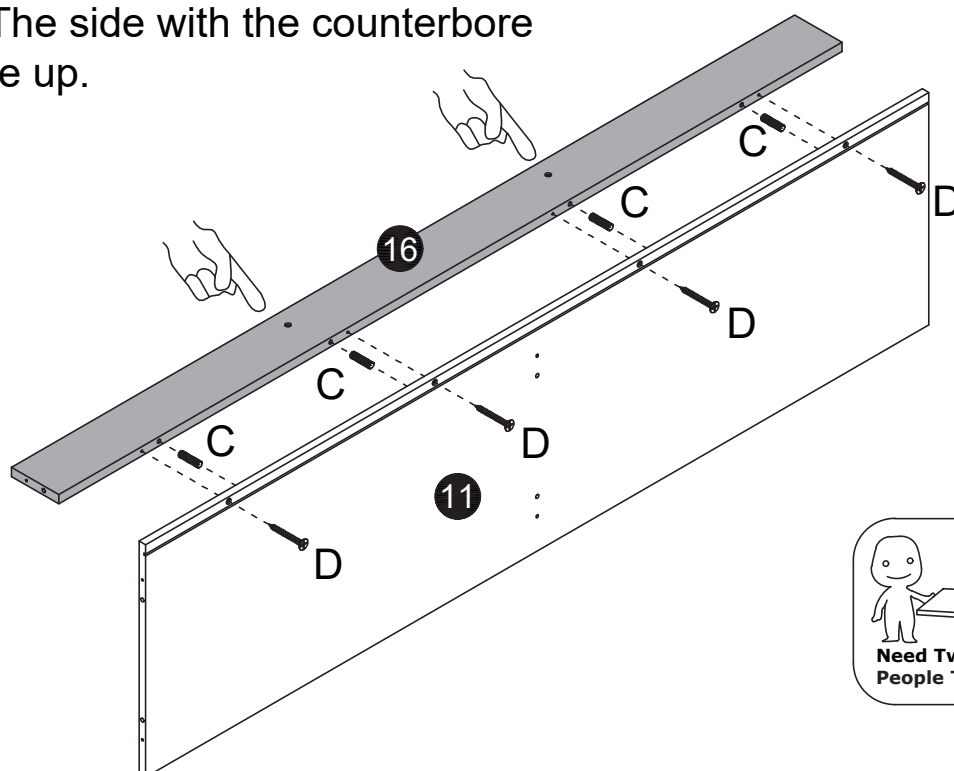


A x4



E x4




K x2

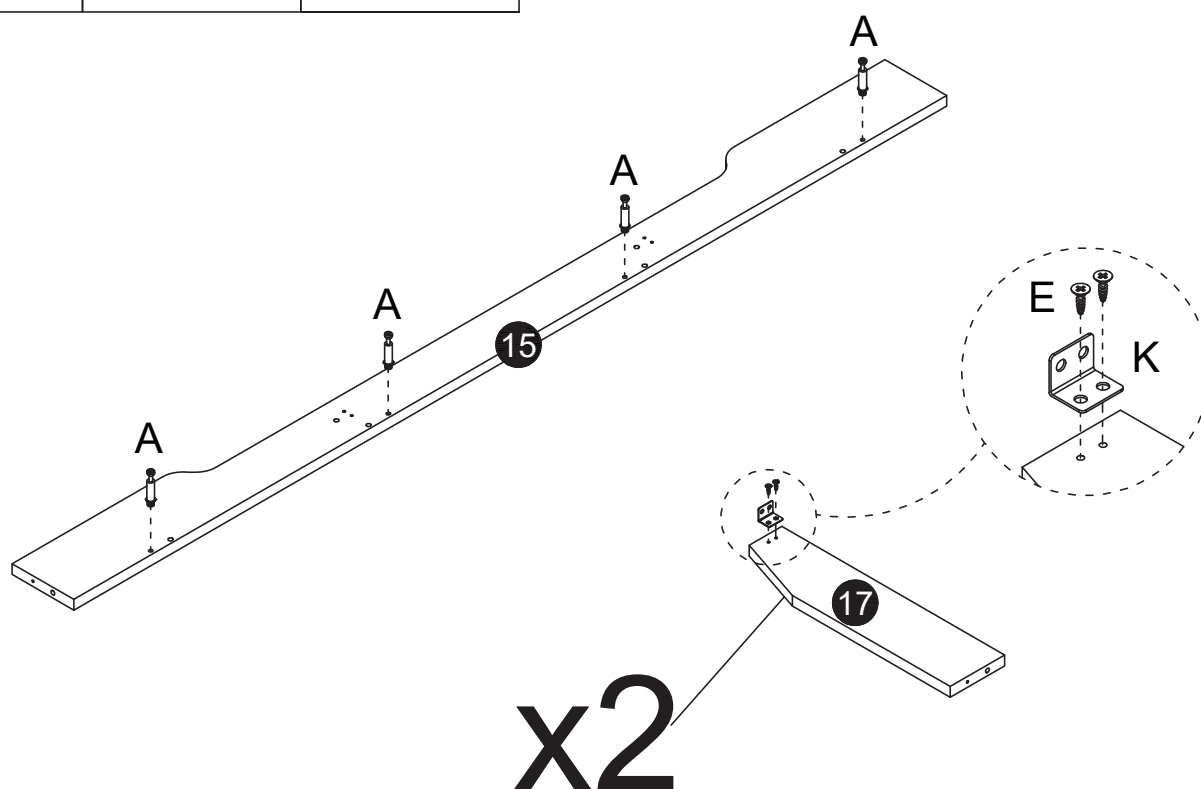

C x2




D x2

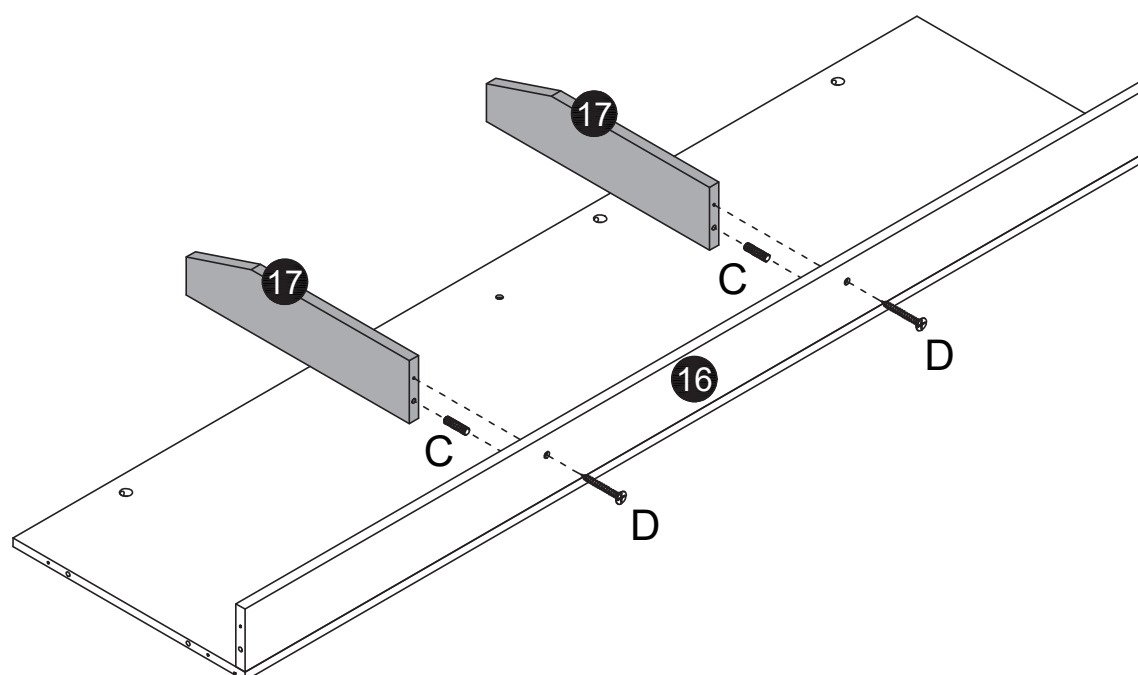

C x6


07

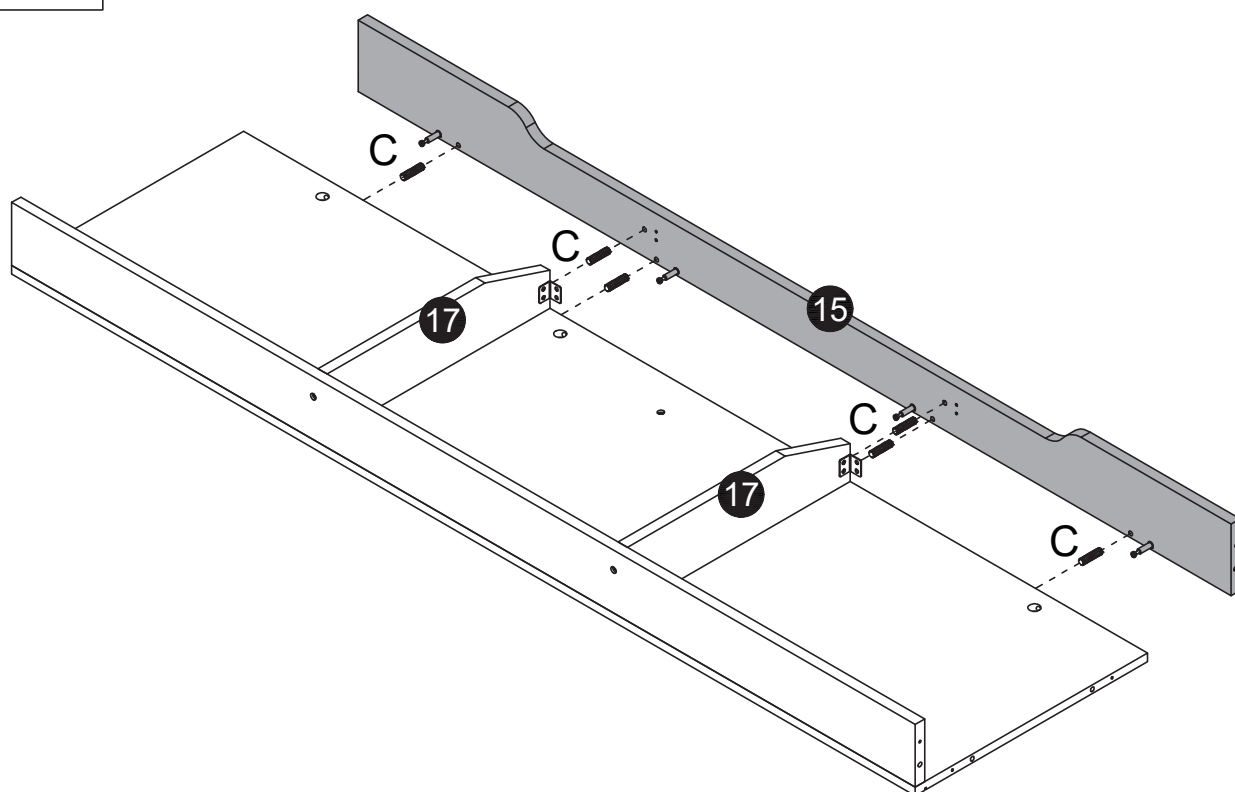

B x4



E x4

08

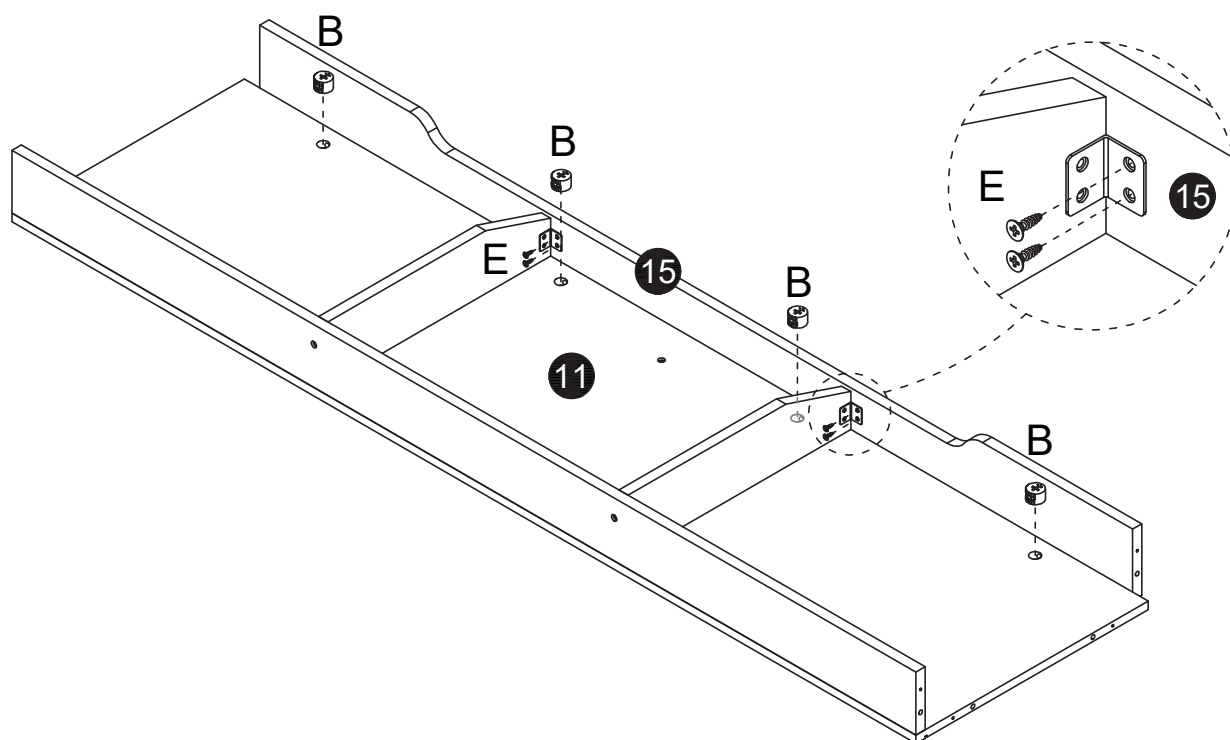

A x6


09

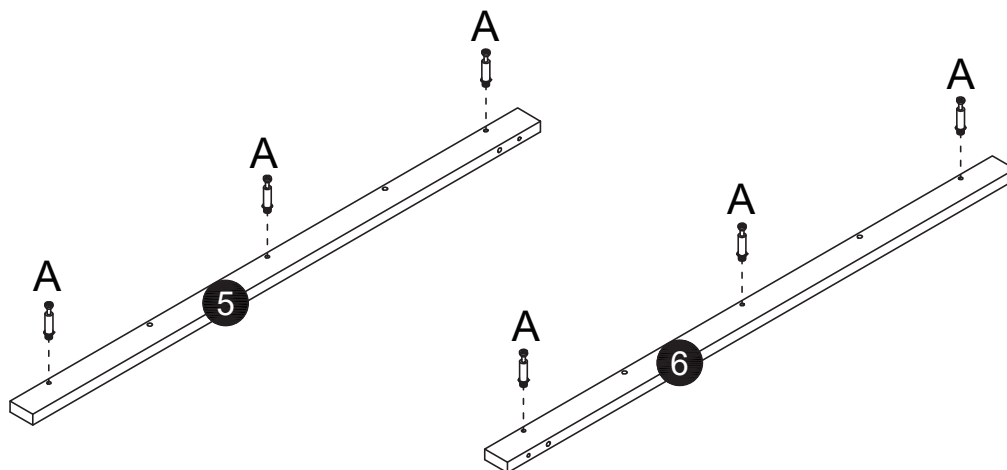

C x4


J x6

10

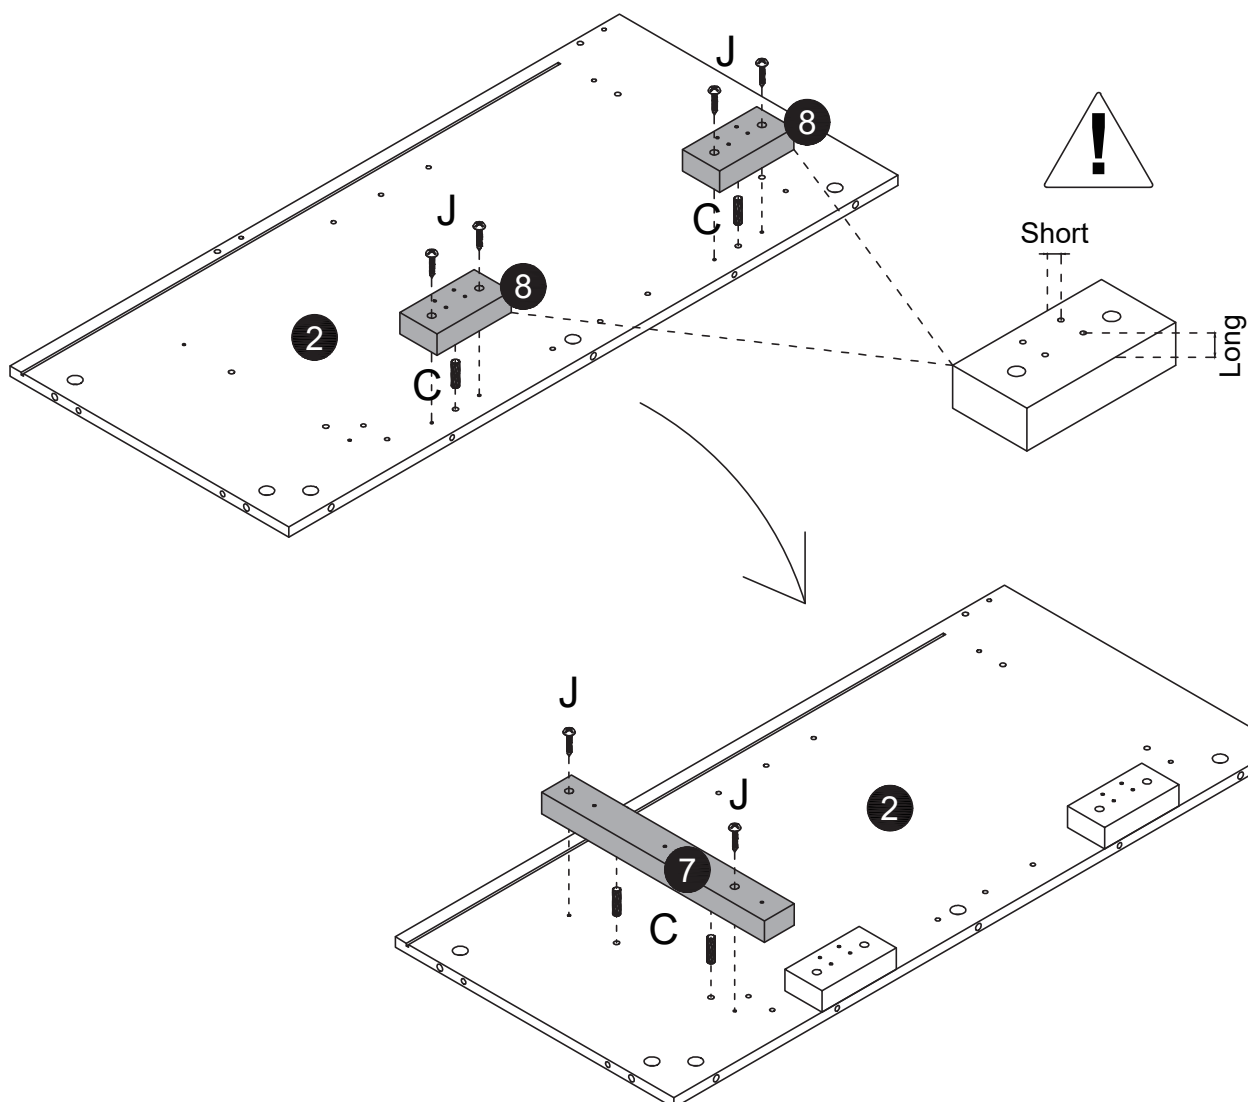


B x3

C x2

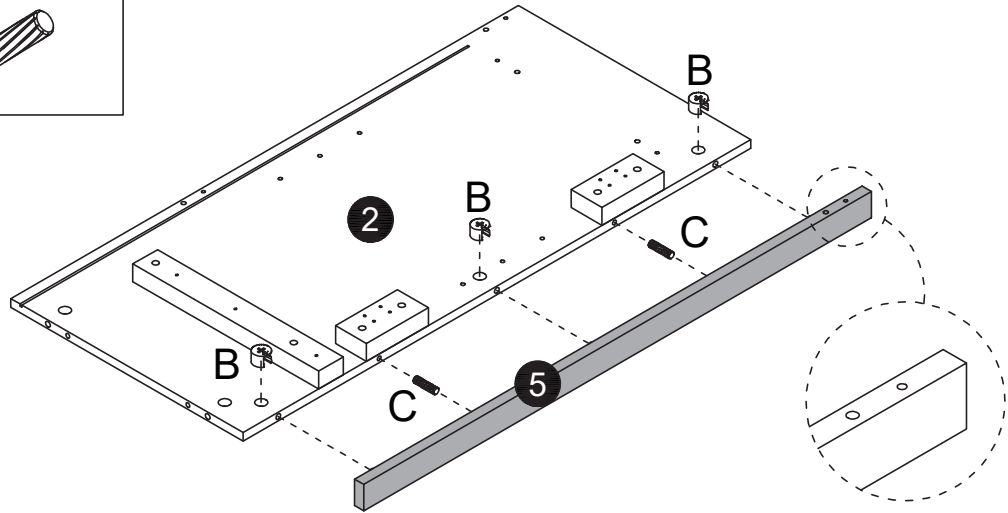


C x4

J x6

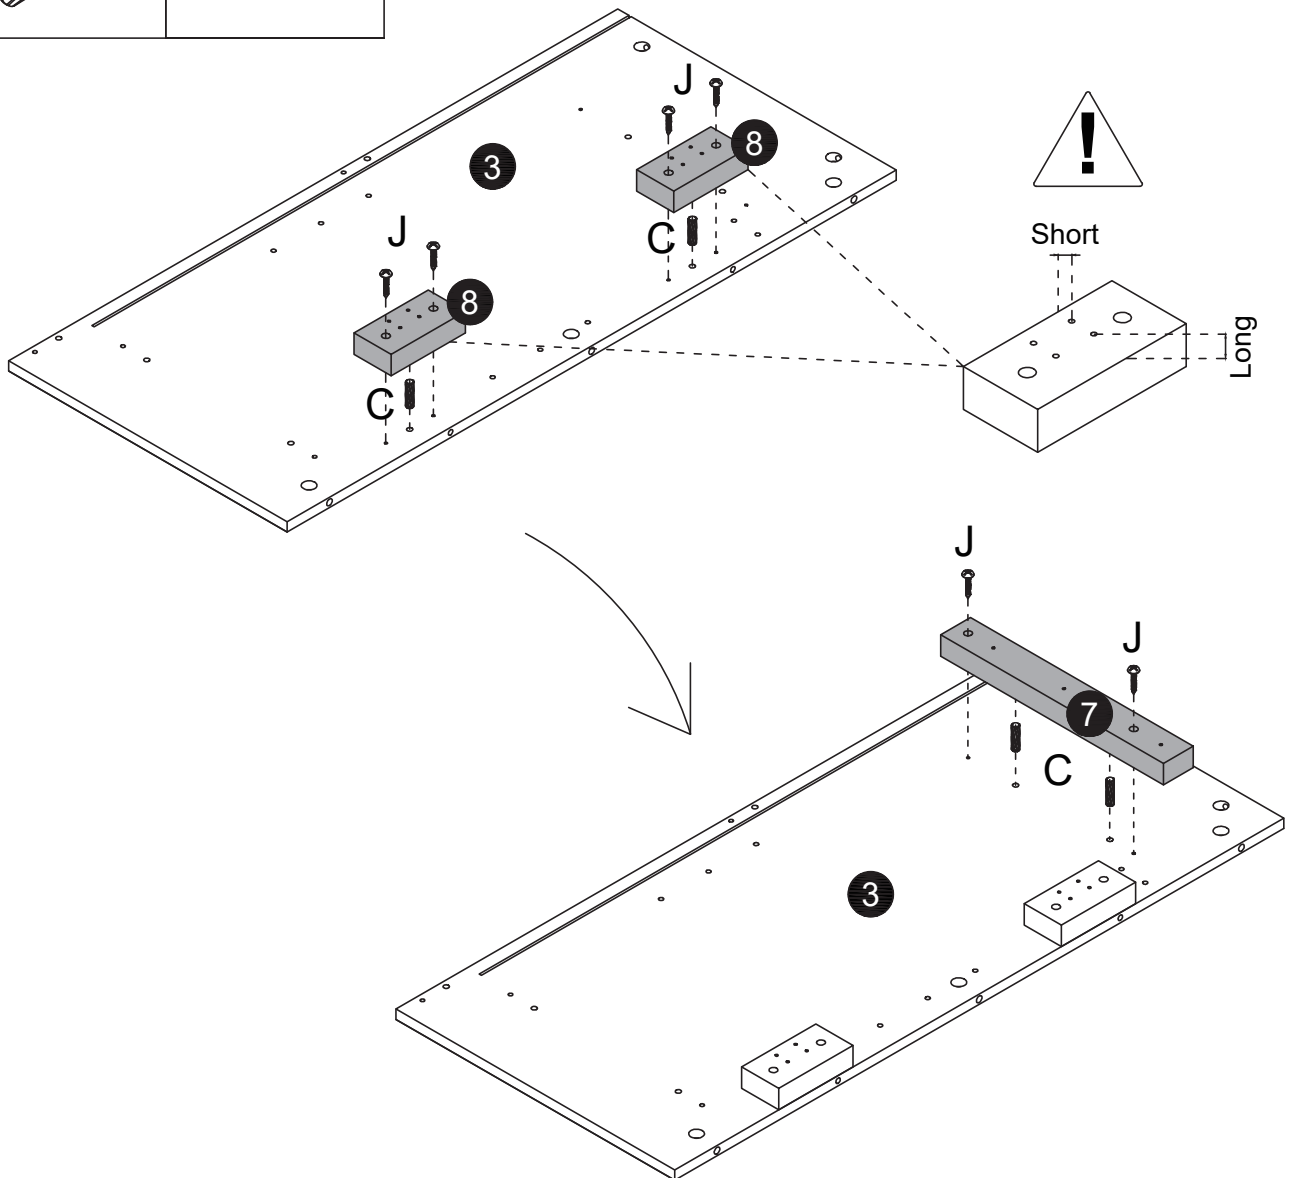

B x3

C x2






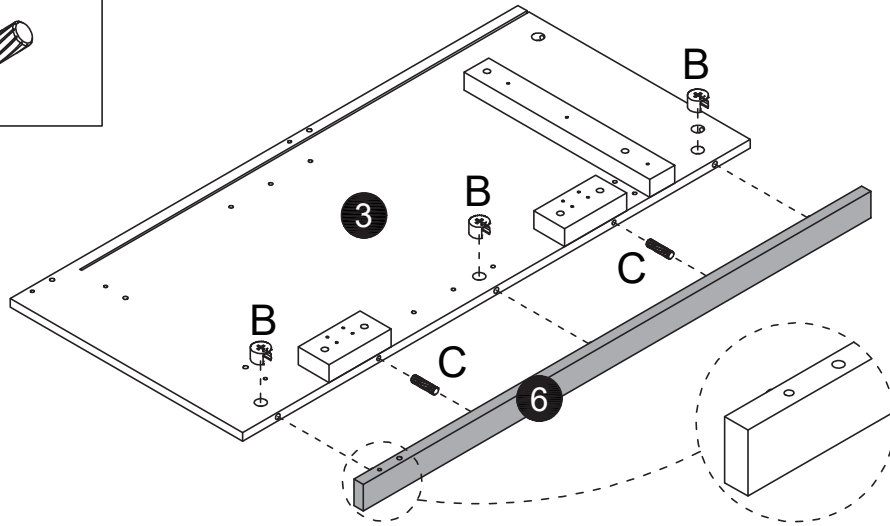




A x4



E x6

CL x1

CR x1

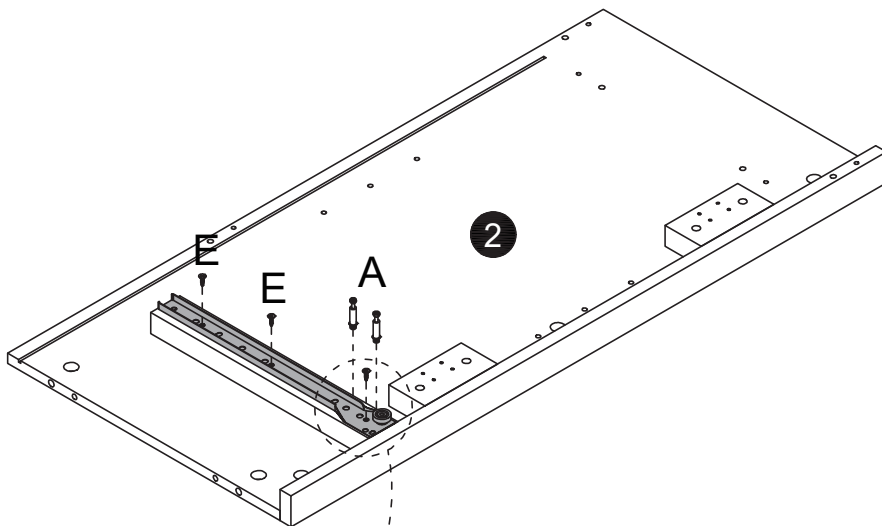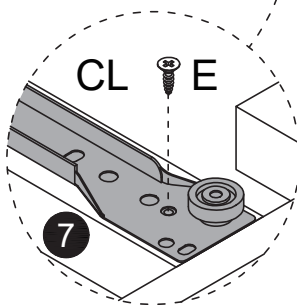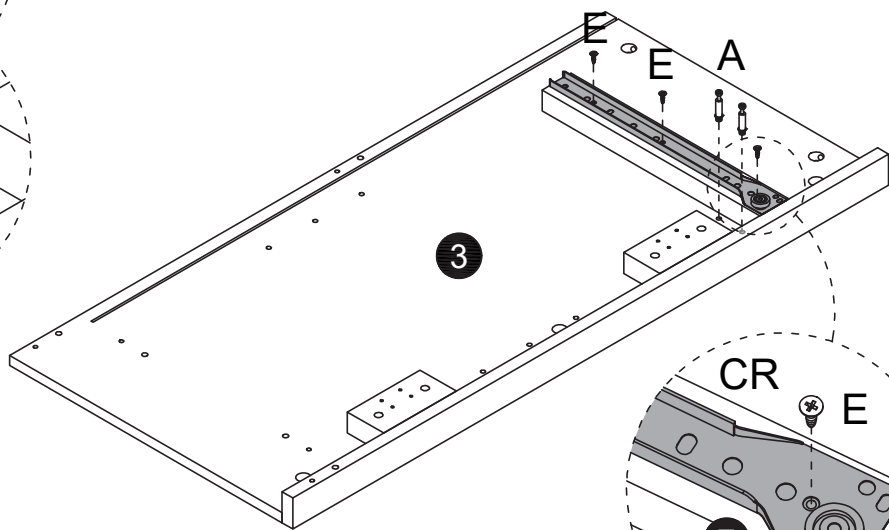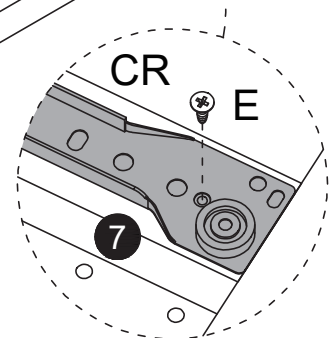

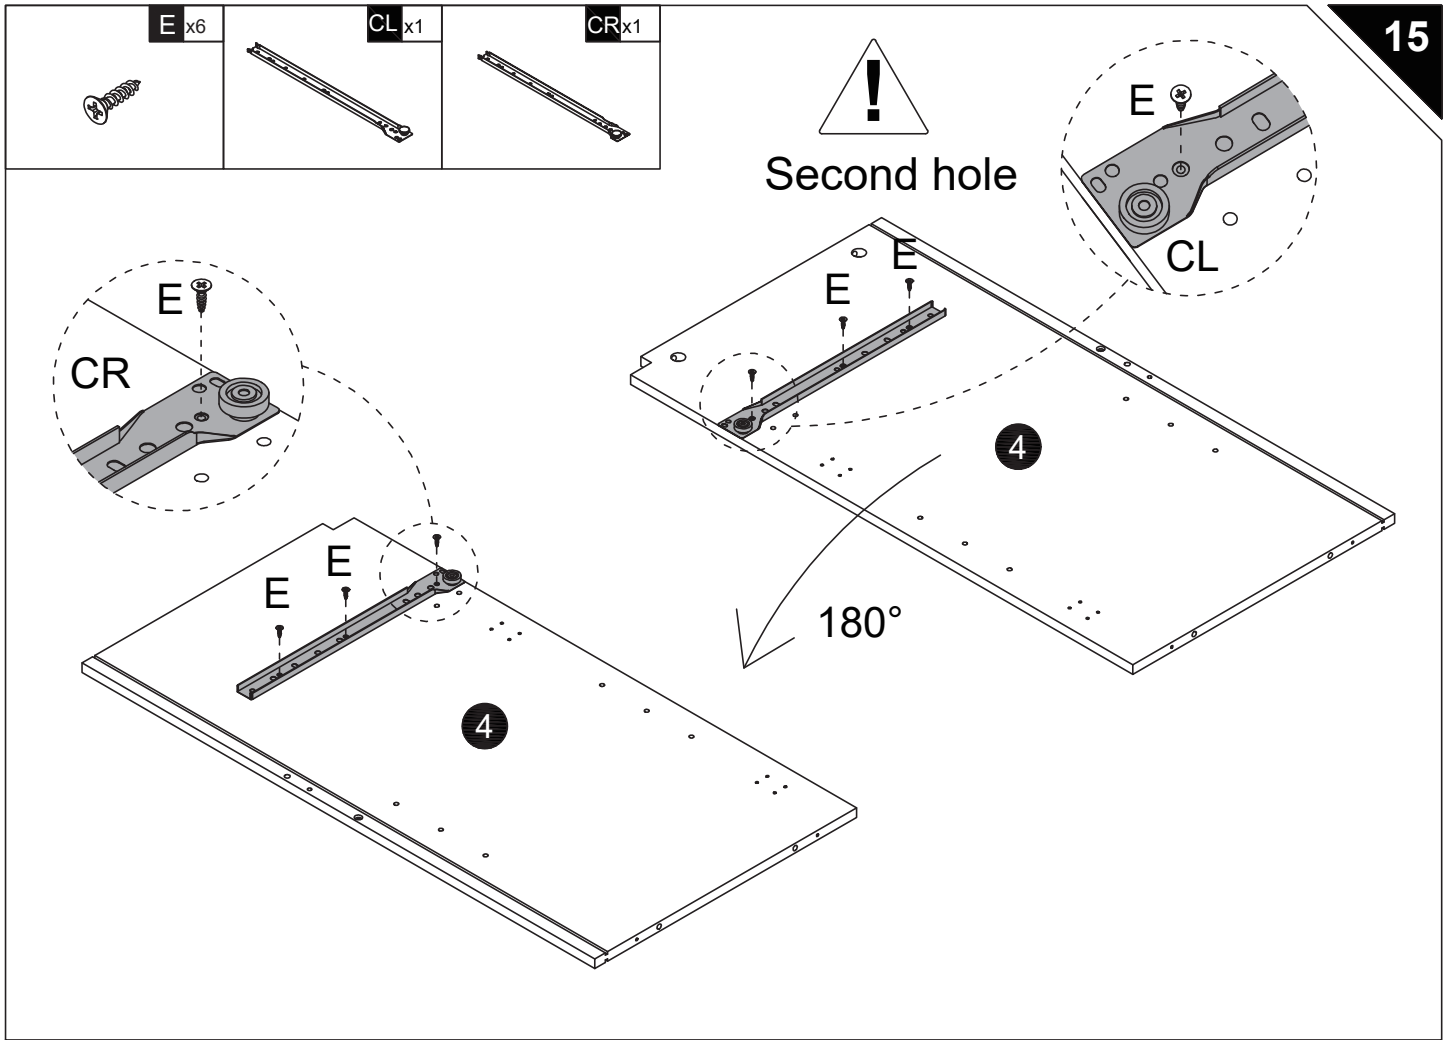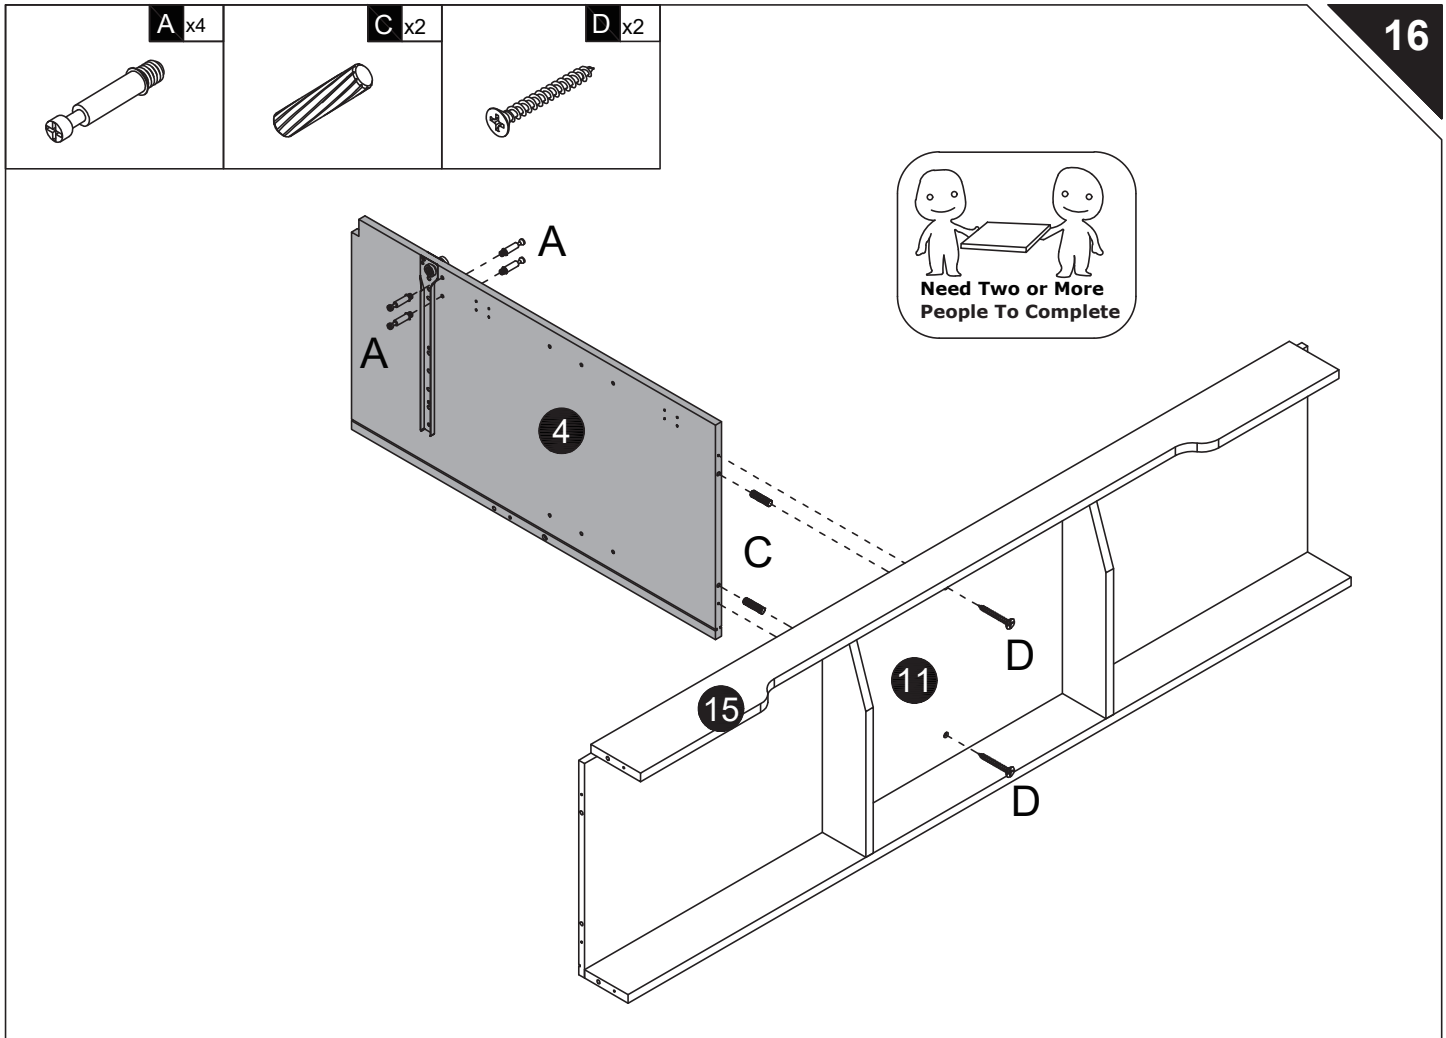

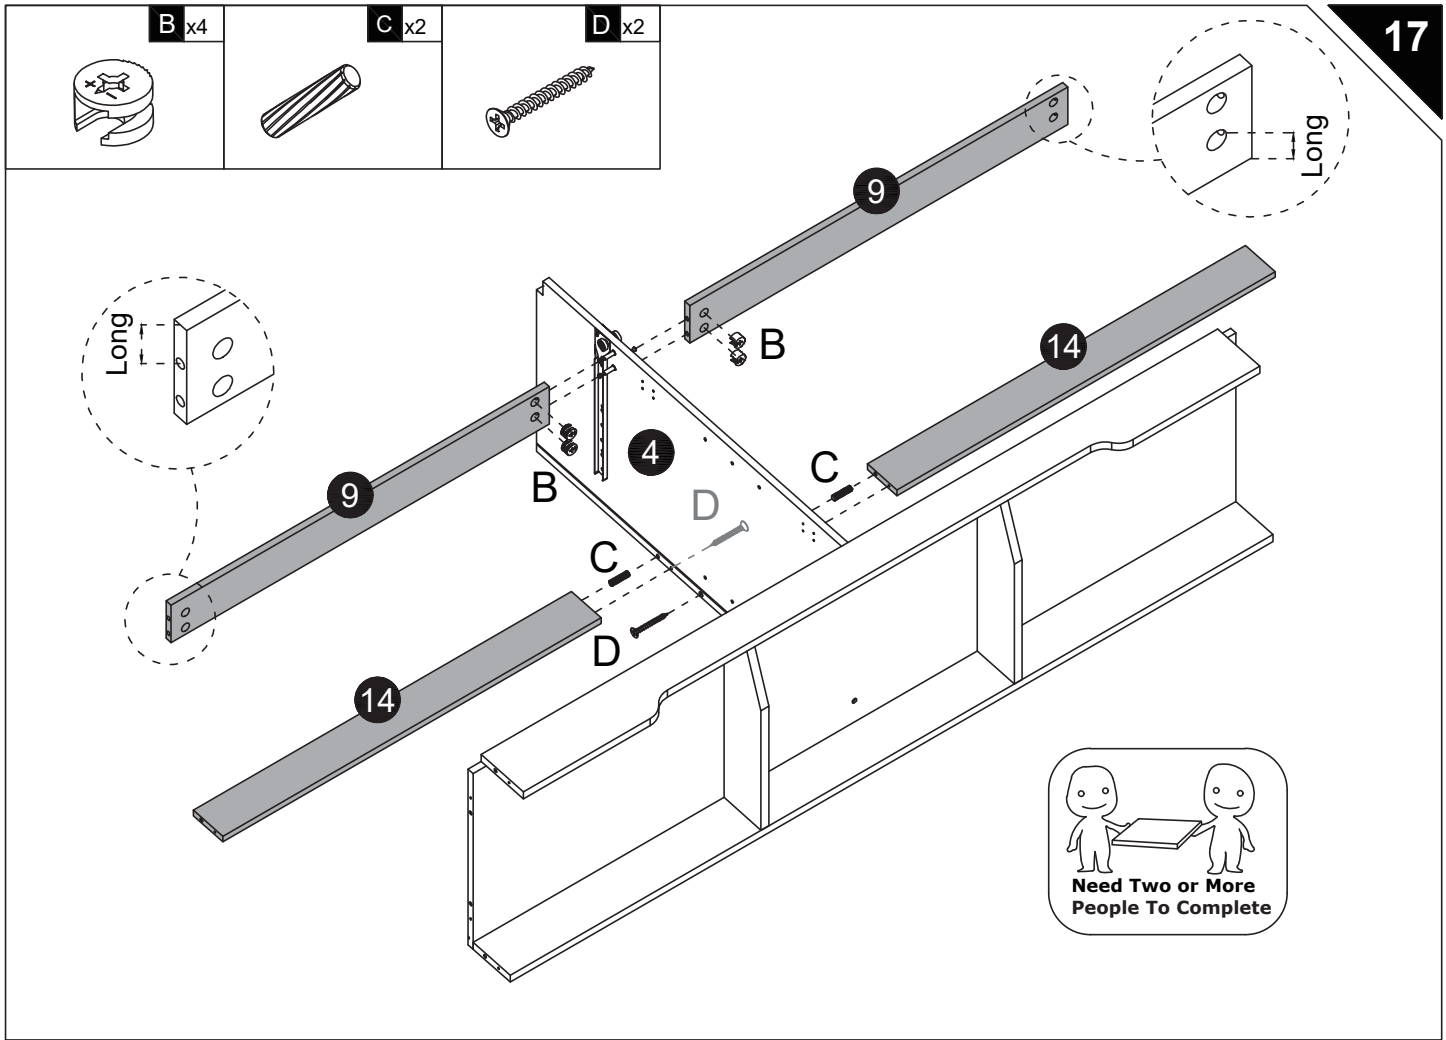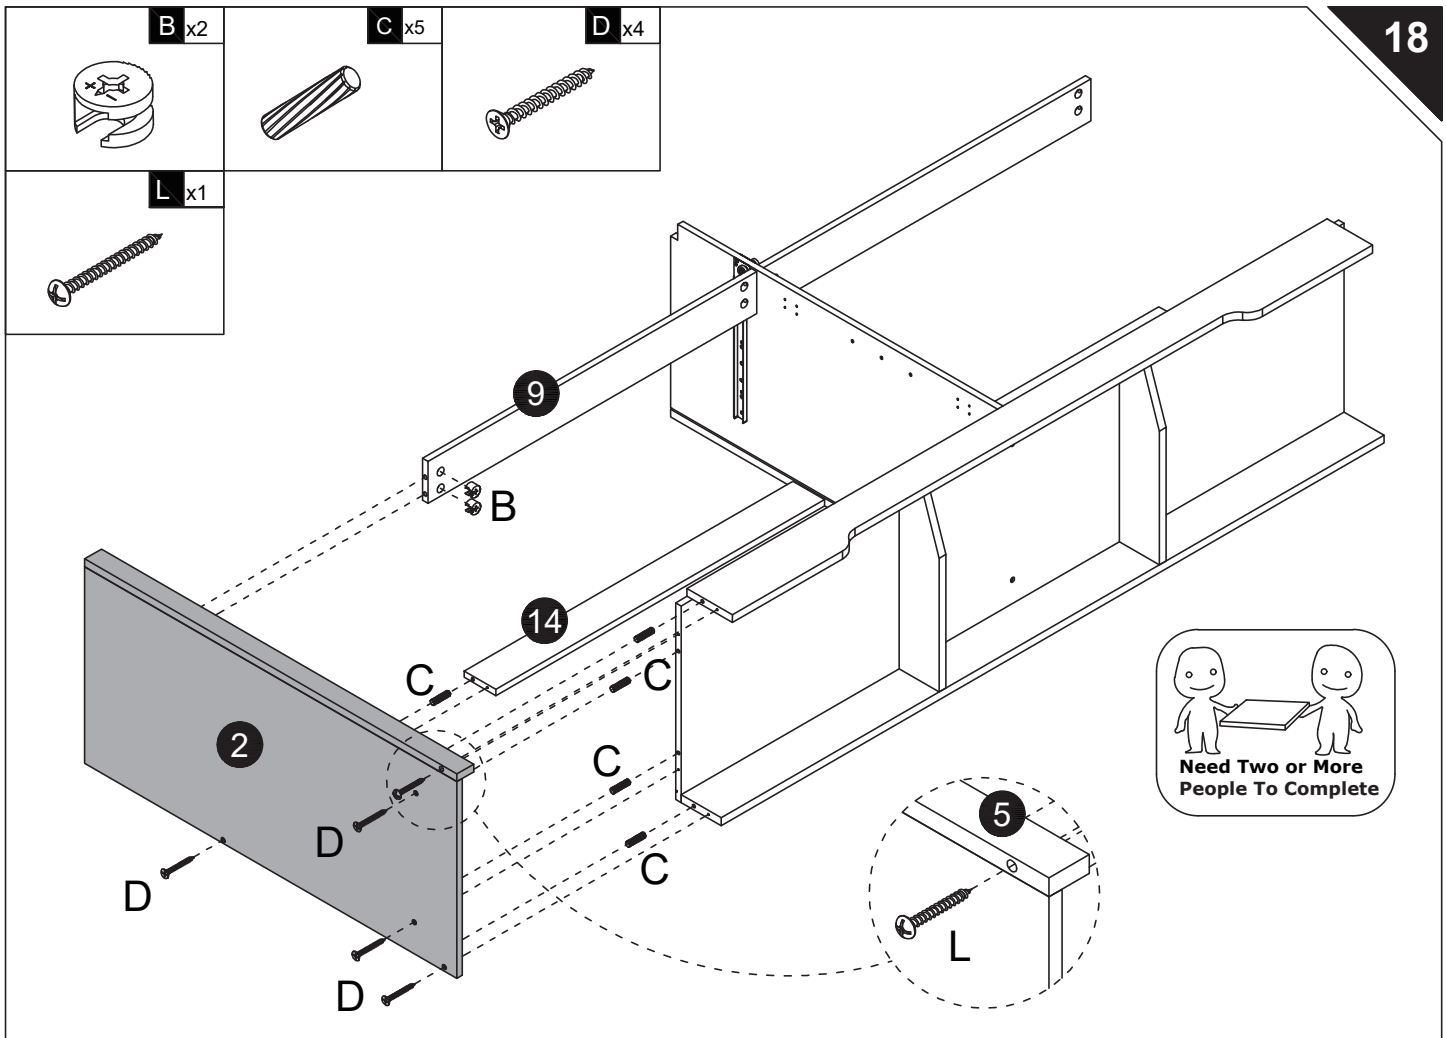

B x2




C x5





D x4





L x1

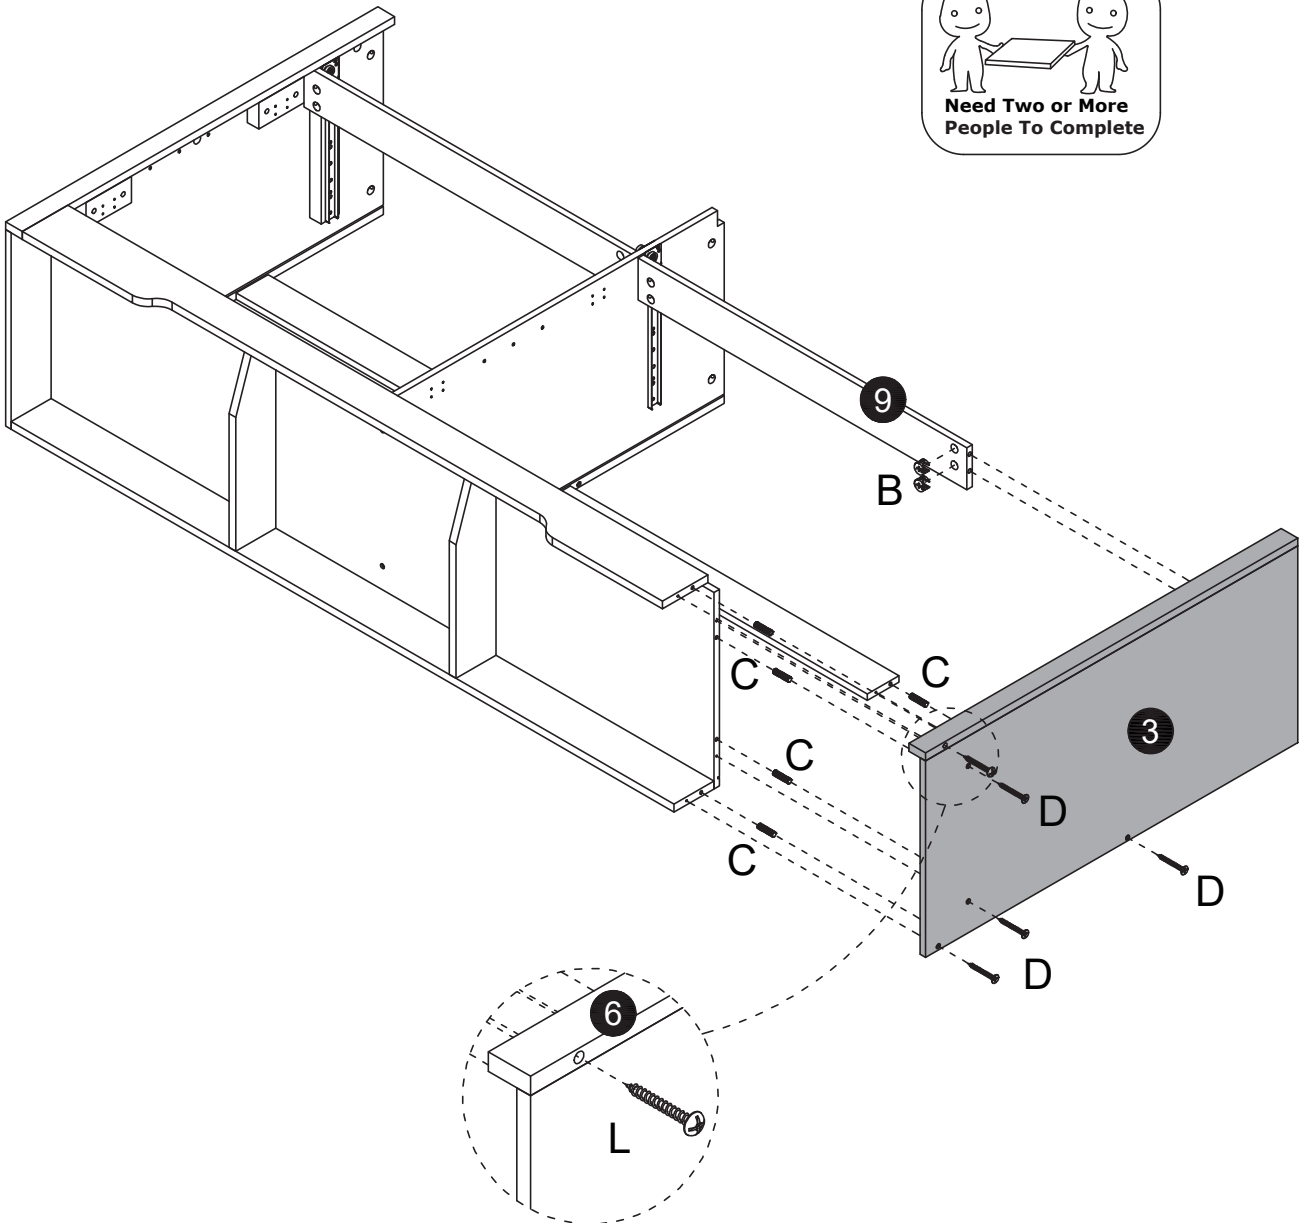

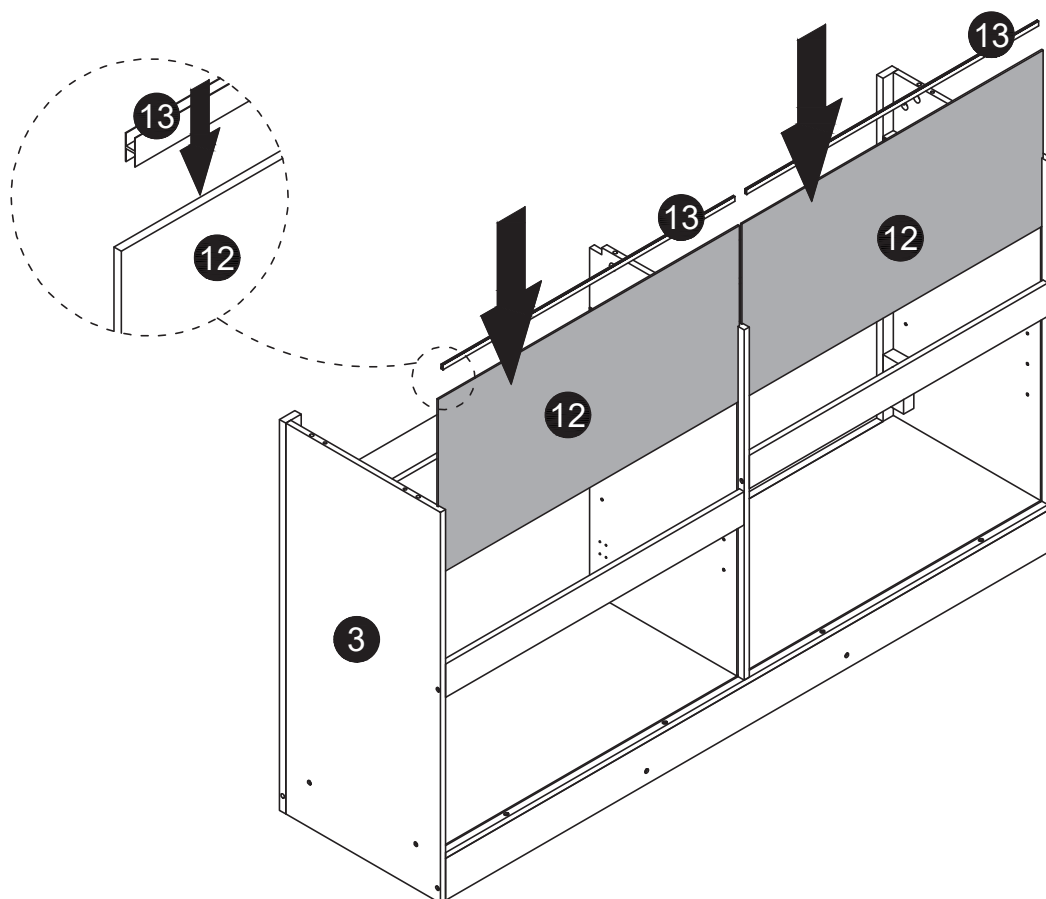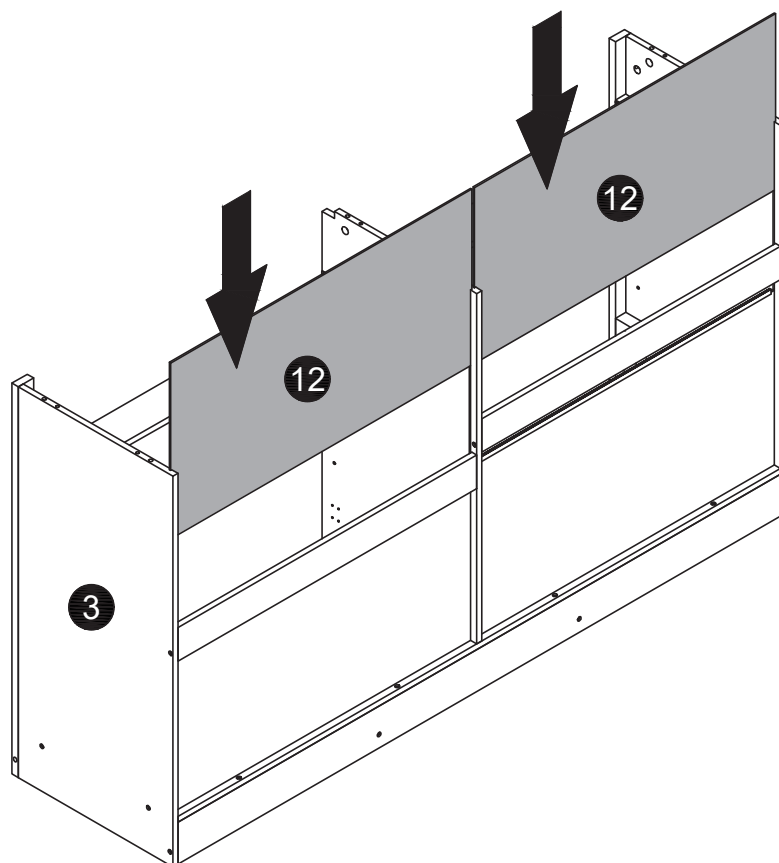


A x6

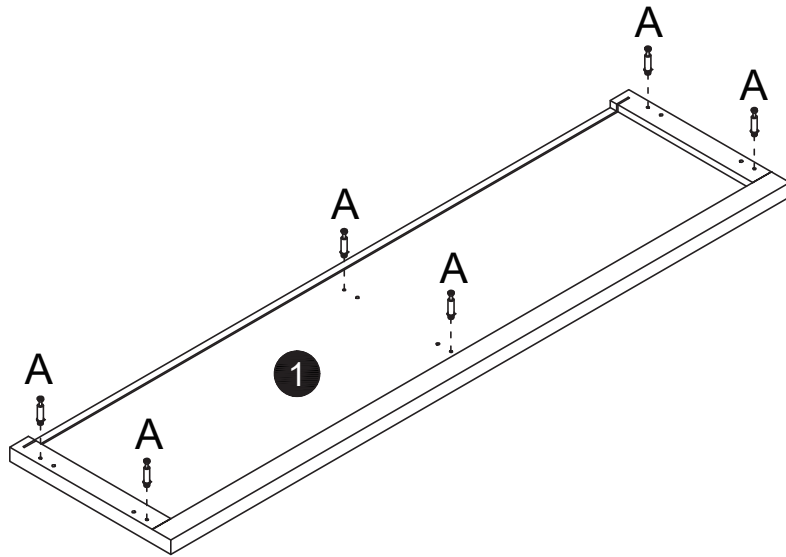

B x6



C x6

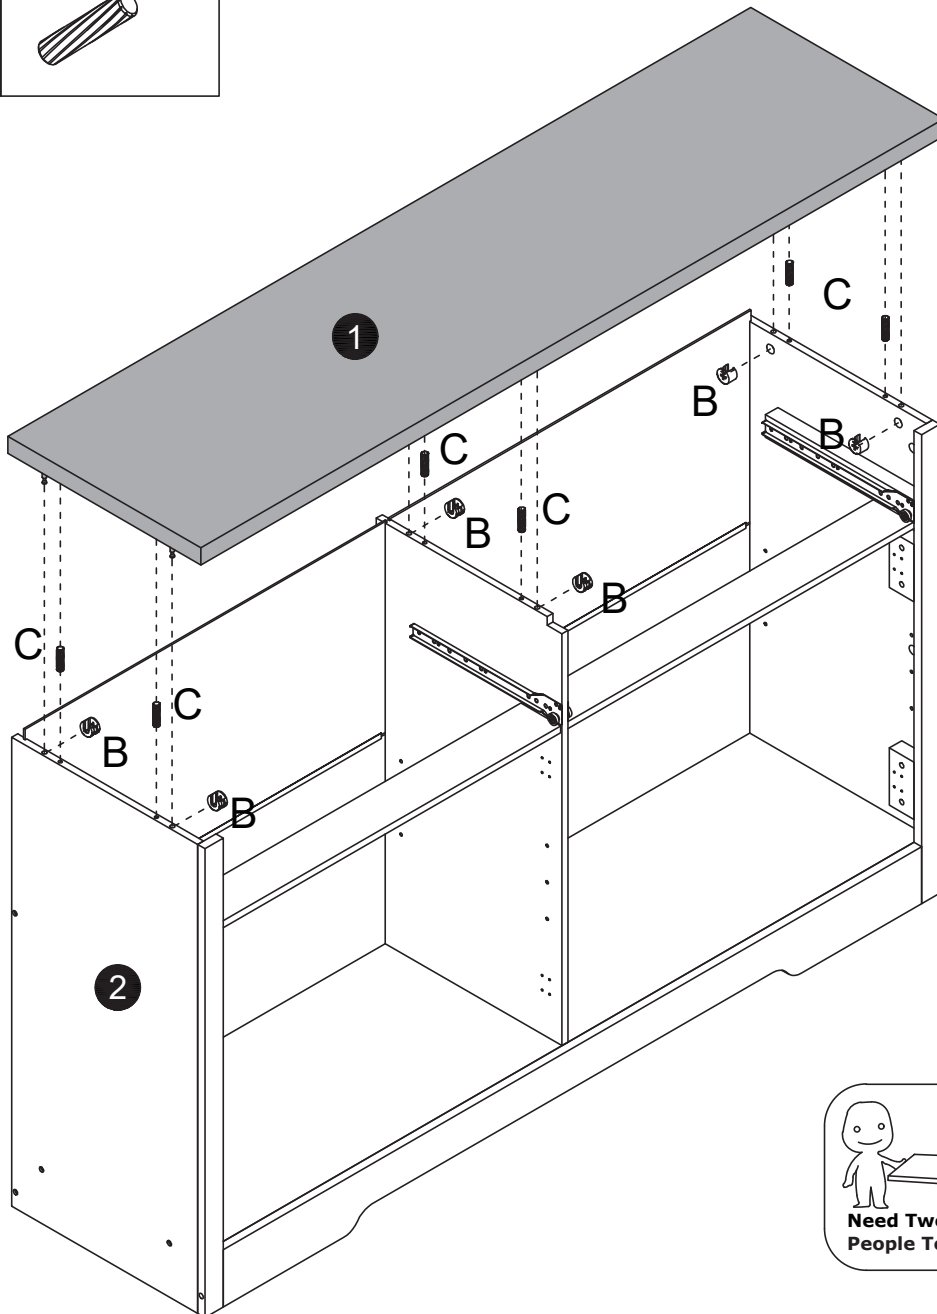

H x8






I x2






There are multiple options for arranging the left and right side panels, and corresponding quantities of accessories can be matched according to different methods.


- 1** The No. 10 plates on the left and right sides are at the same height.

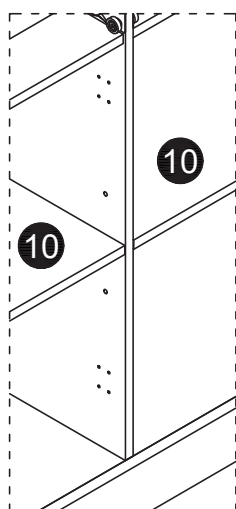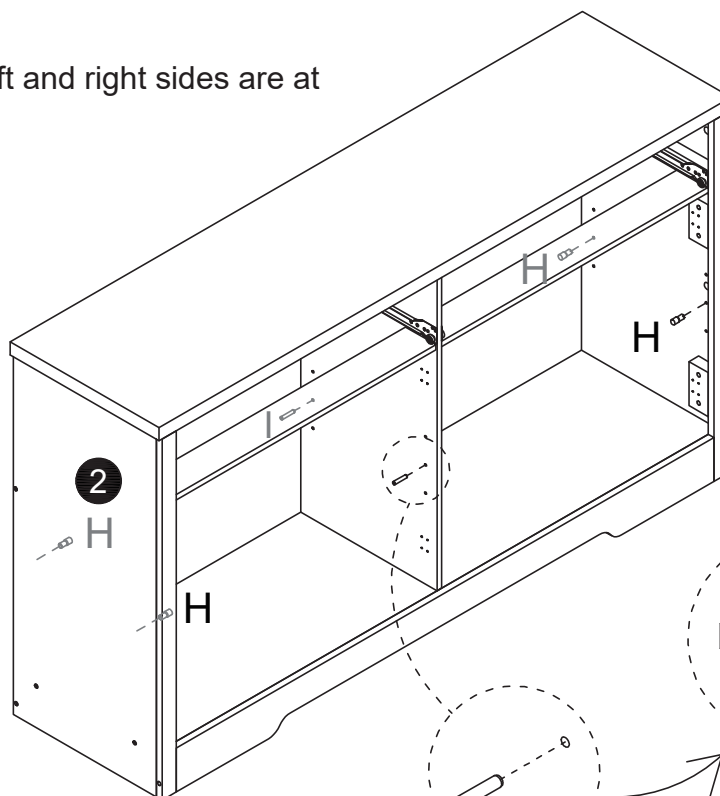

- 2** The No. 10 plates on the left and right sides are not at the same height.

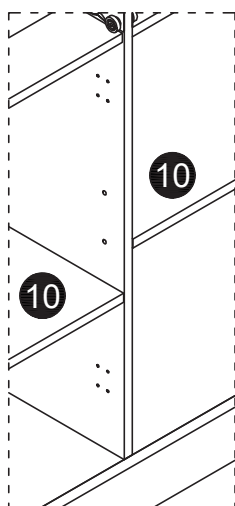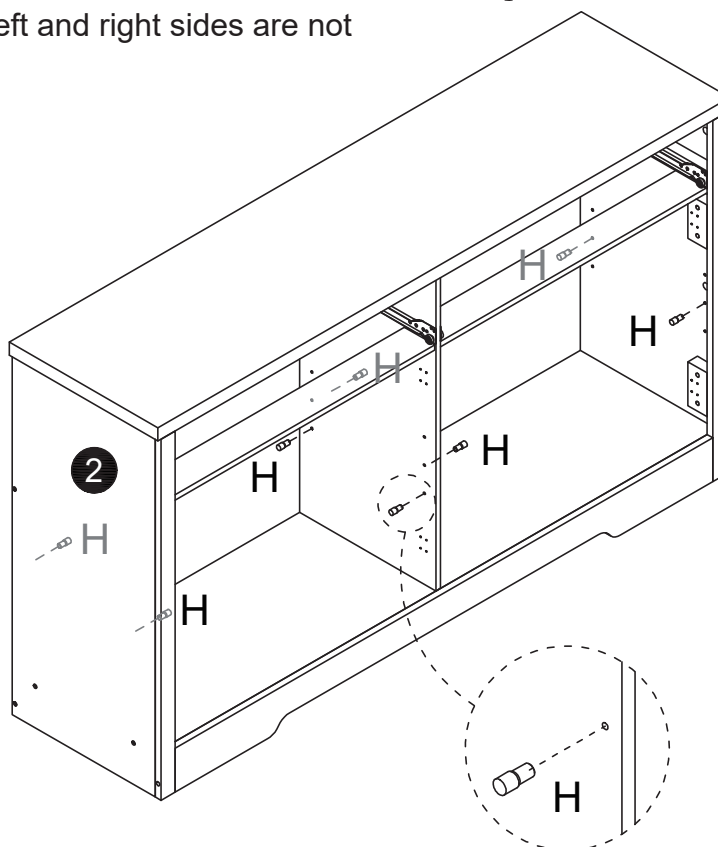

Caution : Please keep the extra accessories properly so that you have the corresponding parts when you switch to another assembly method later.

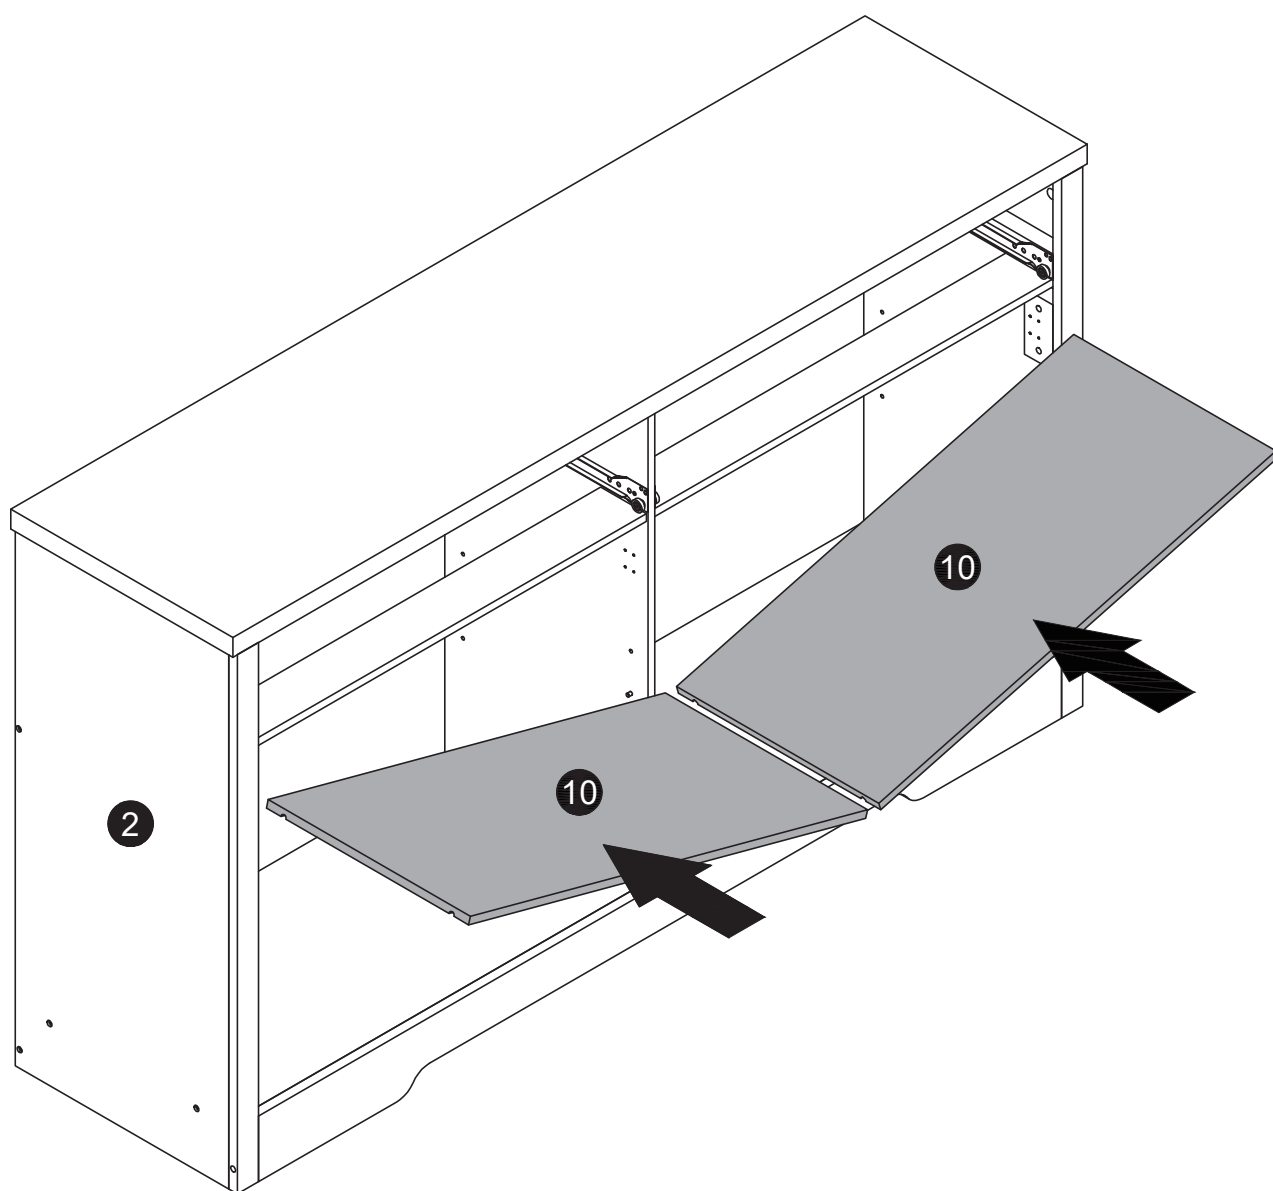

E x8



G x2





G-2




M x4



Caution : In this step, please use accessory M instead of accessory N, and pay attention to the distinction.

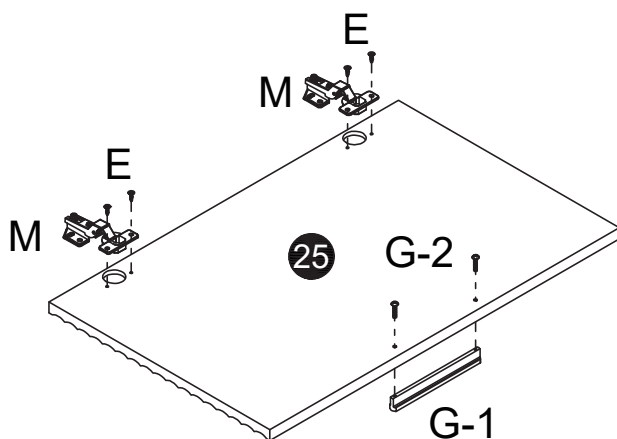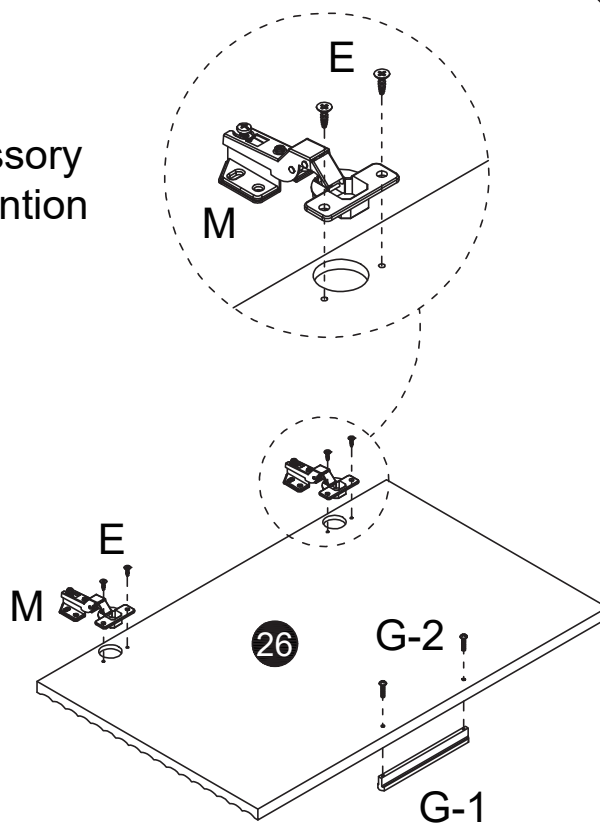


E x16

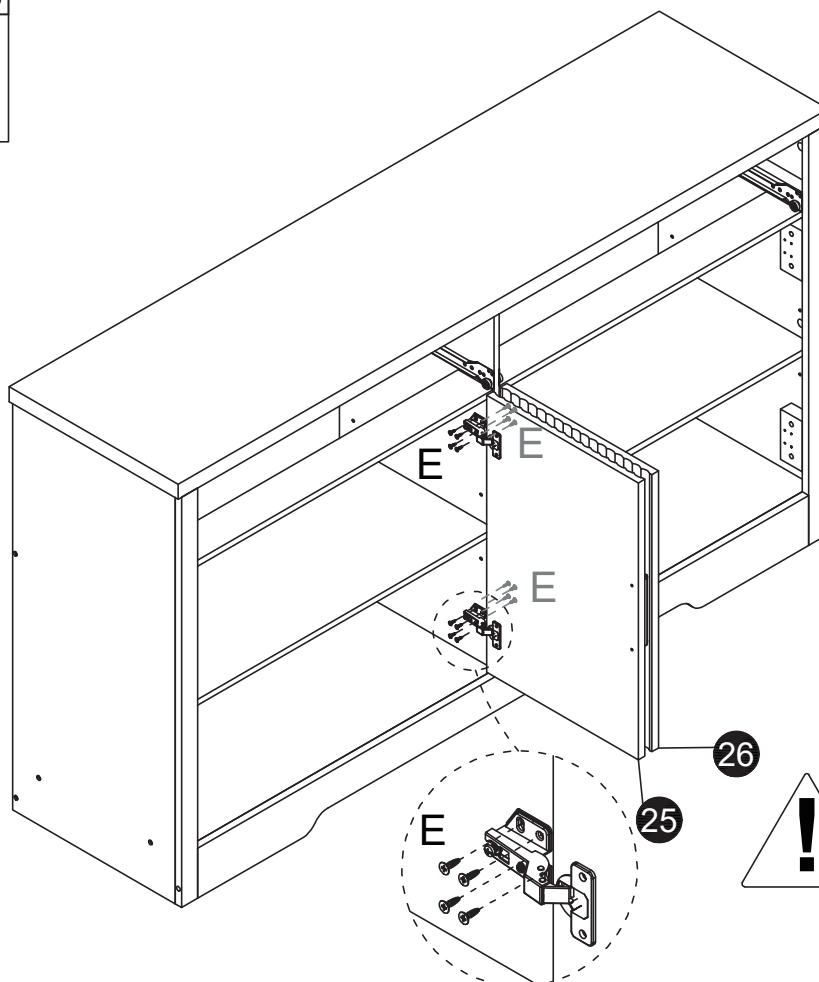

E x8




G x2



G-2







N x4

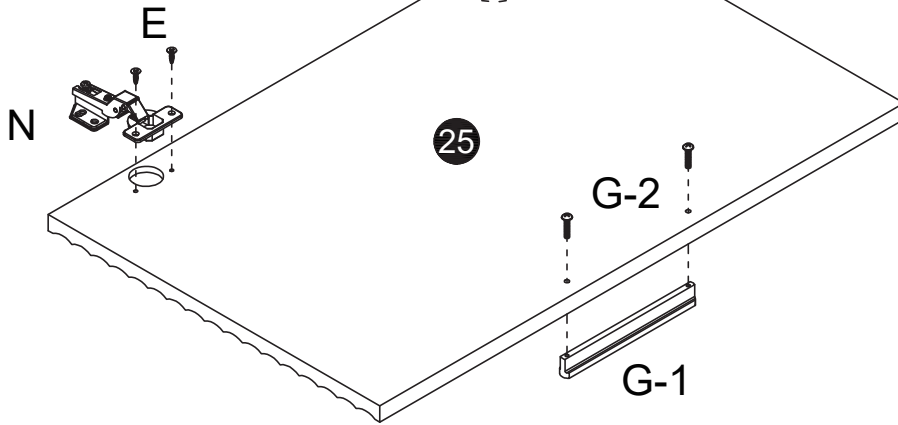

x2


E x16

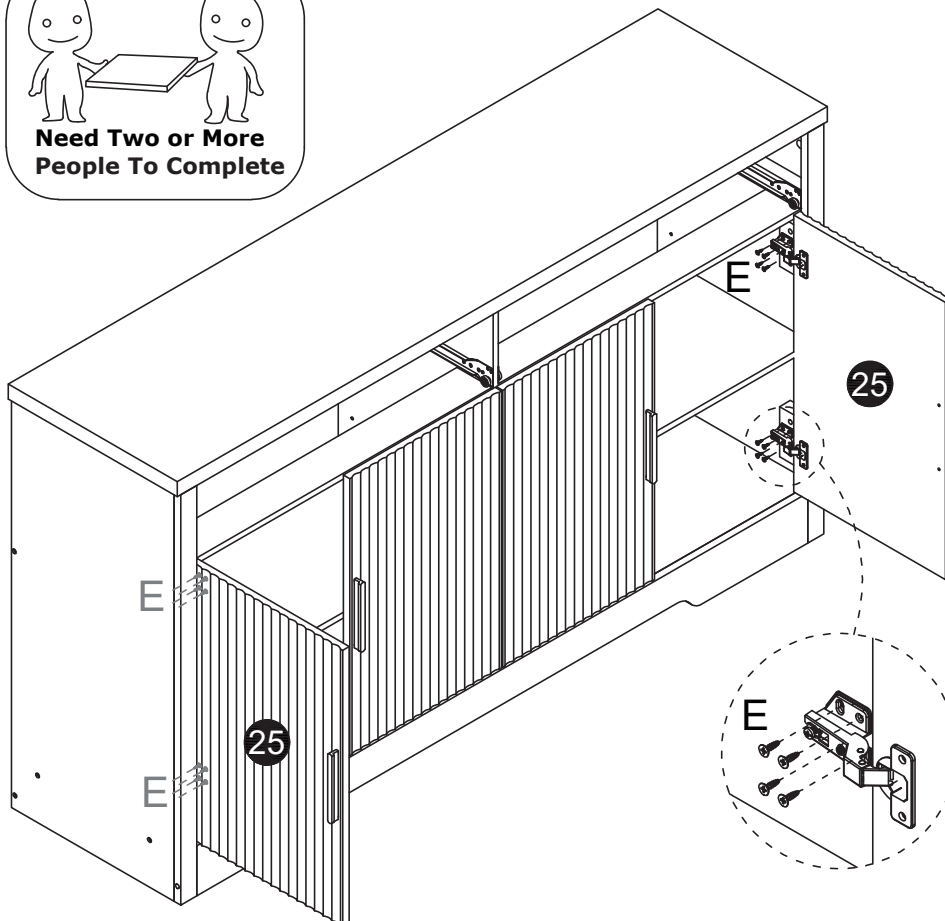

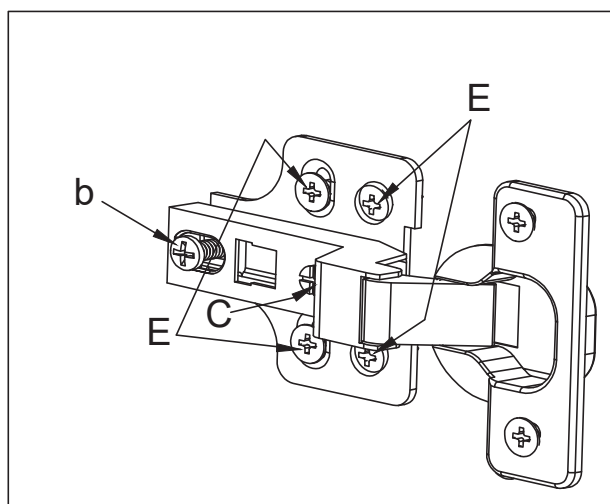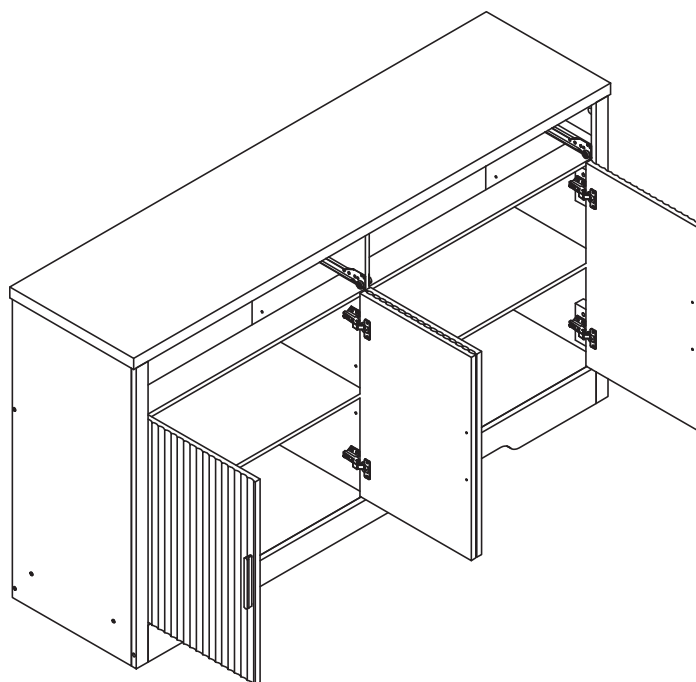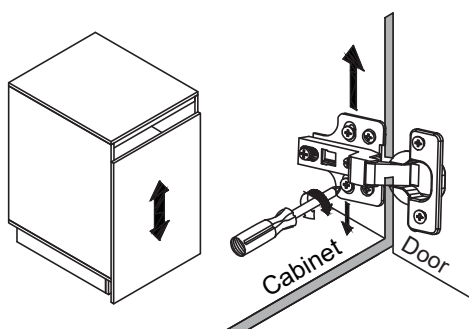


To adjust the vertical height.

Loosen the four screws "E" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

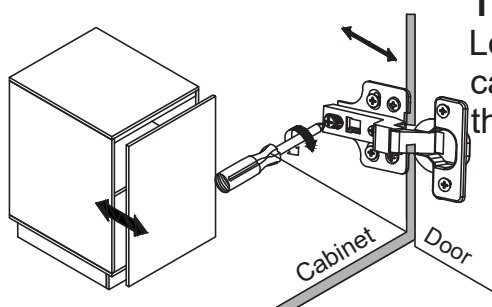



To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

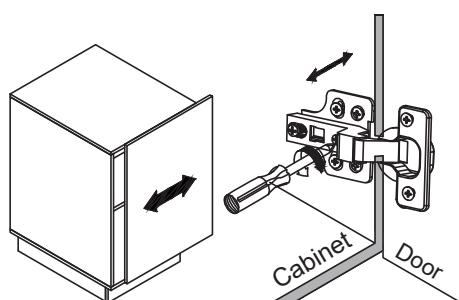

To adjust side ways.

Turning the screw "c" on BOTH hinges on each door.

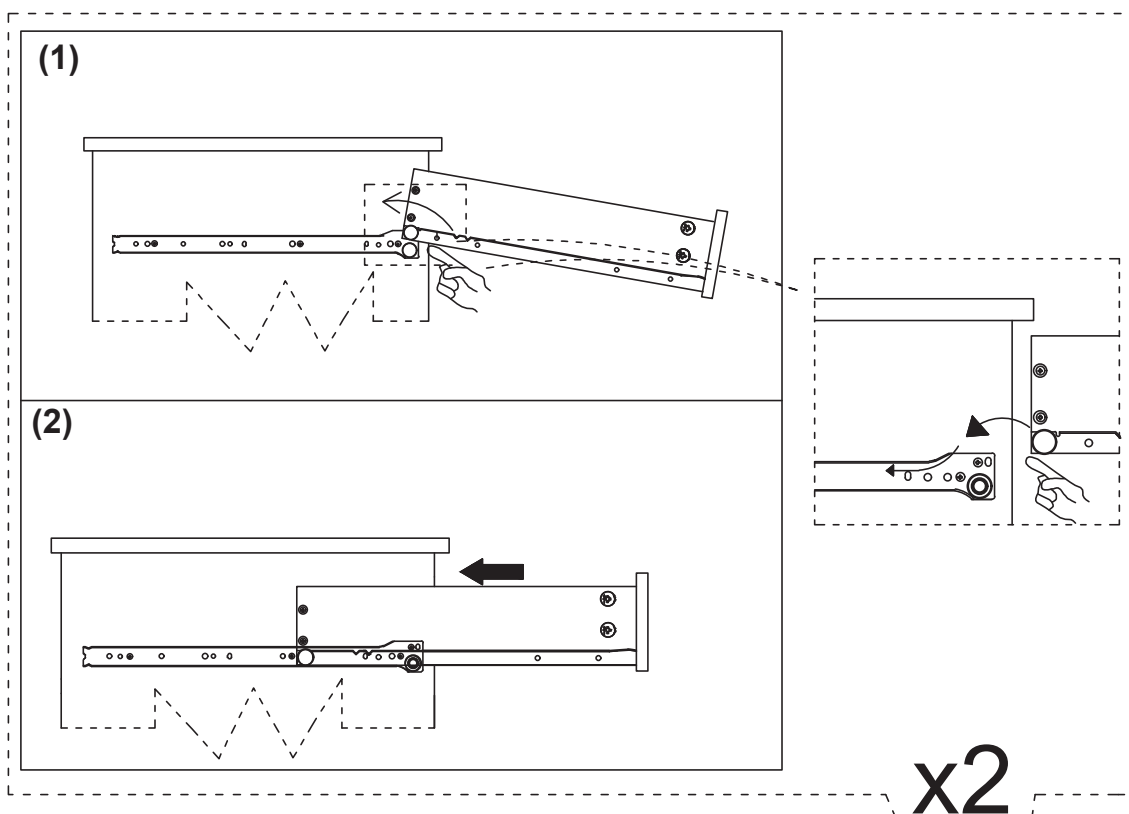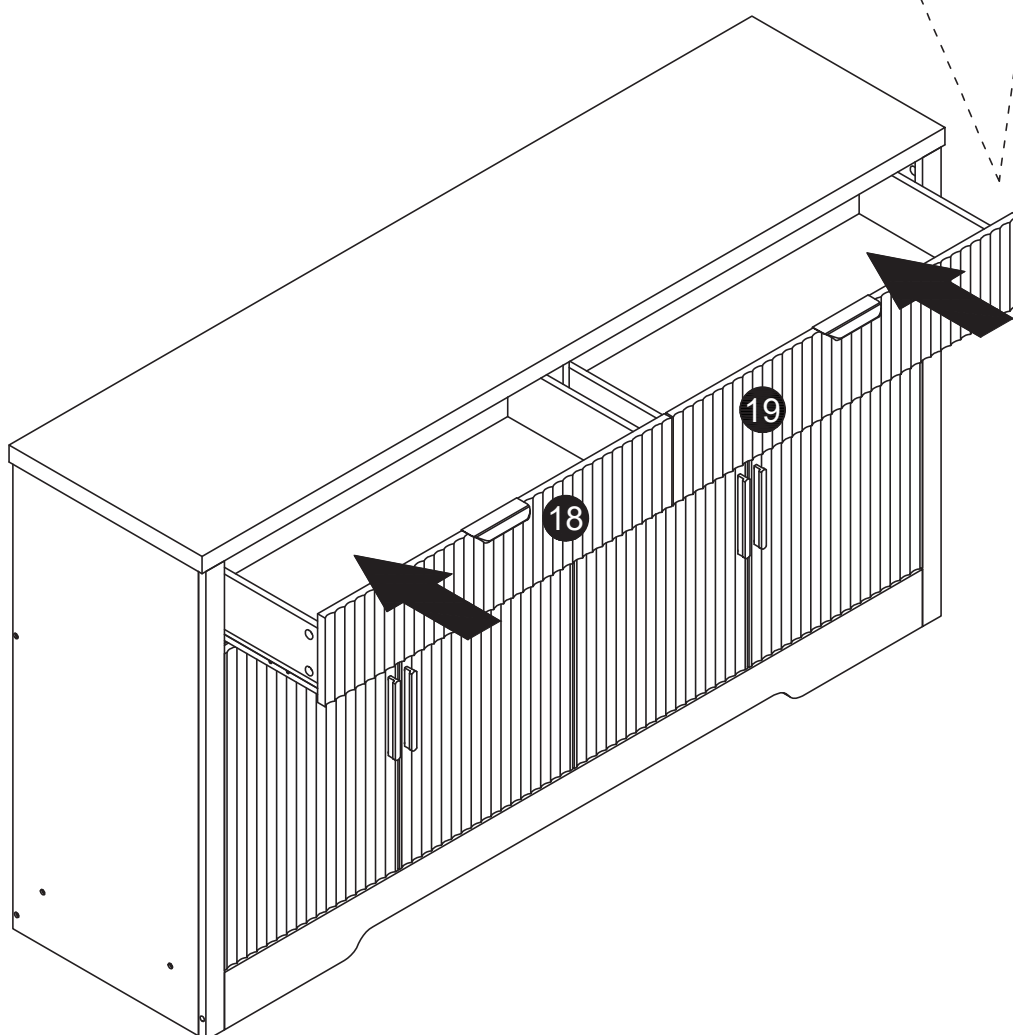

O x10





Q x12




Q-1



Q-2

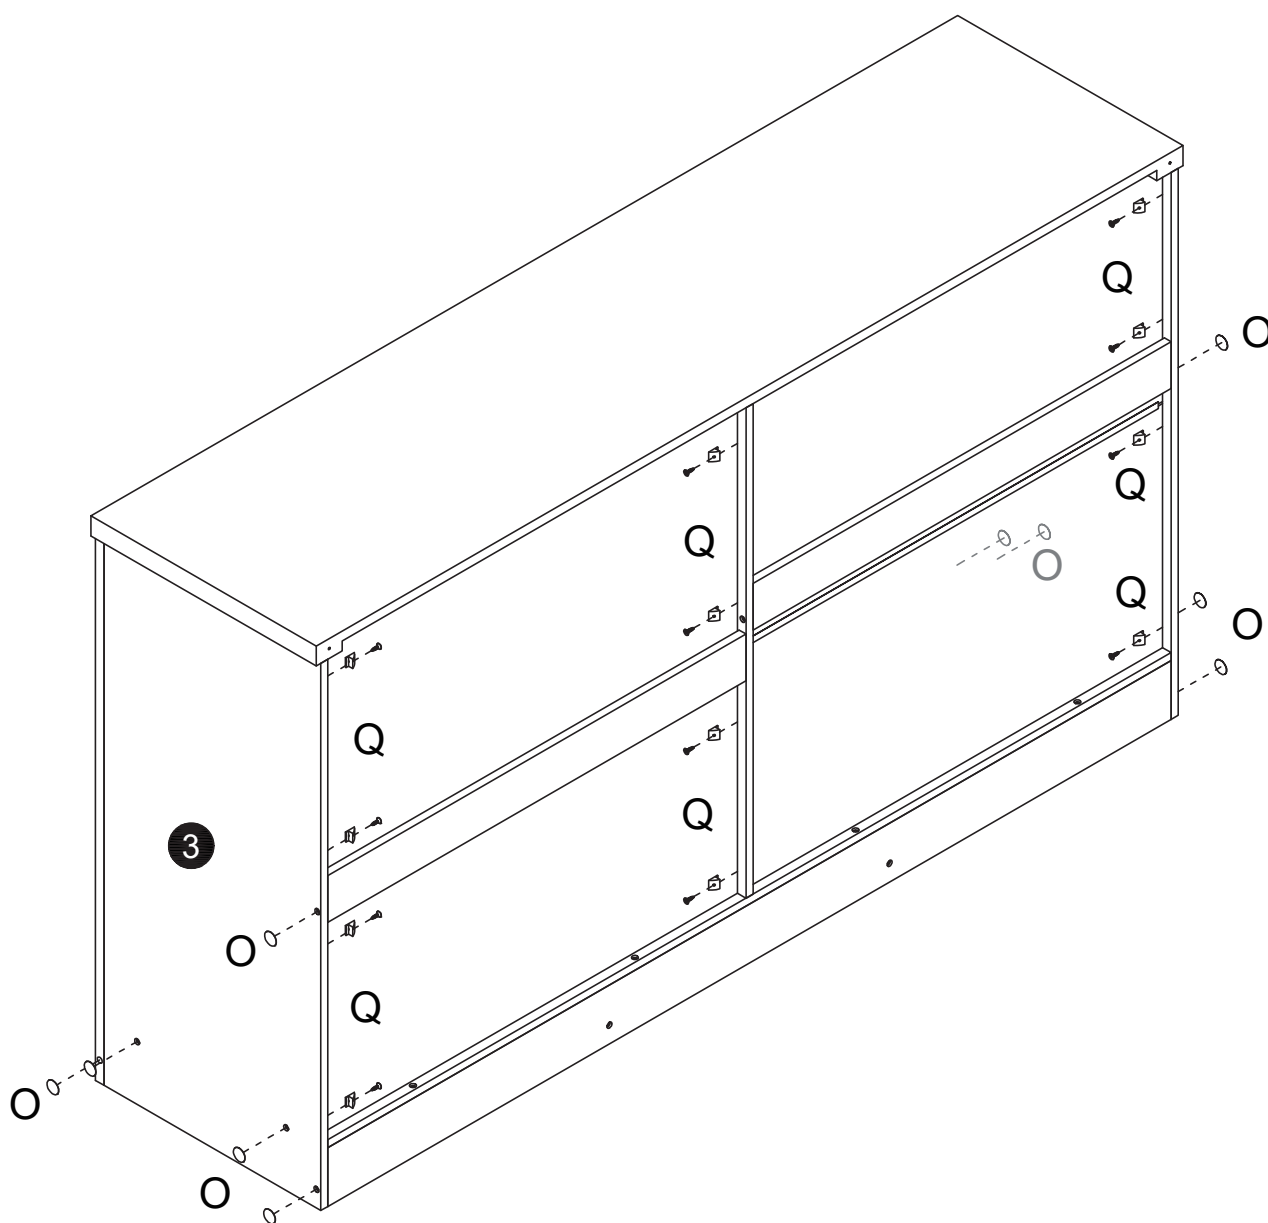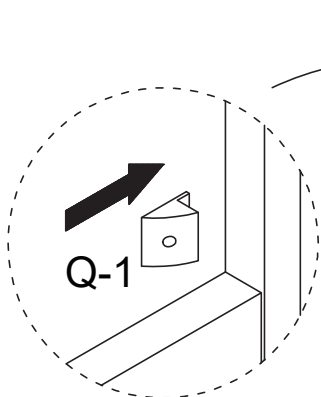


Q-1

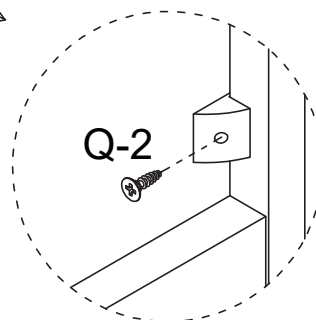


Q-2


D x2



P x2




R x2




R-1


R-2

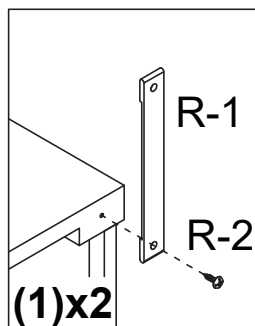


First fix the anti-rewind screw in the reserved hole of the product.

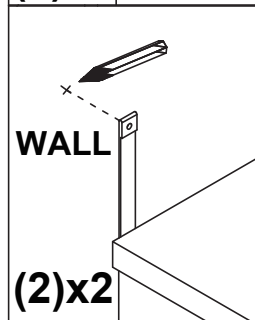


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

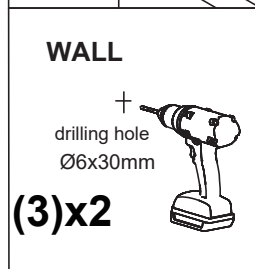

Then use a tape drill to make holes in the wall that are suitable for the product screws.

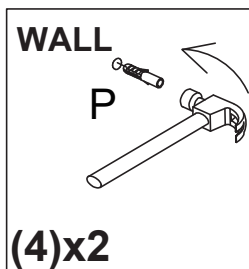

Then, put the expansion bolt into the hole

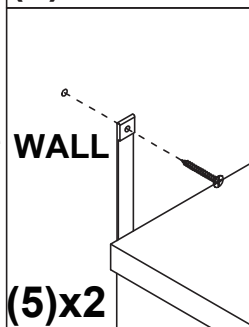

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

