



Owner Manual

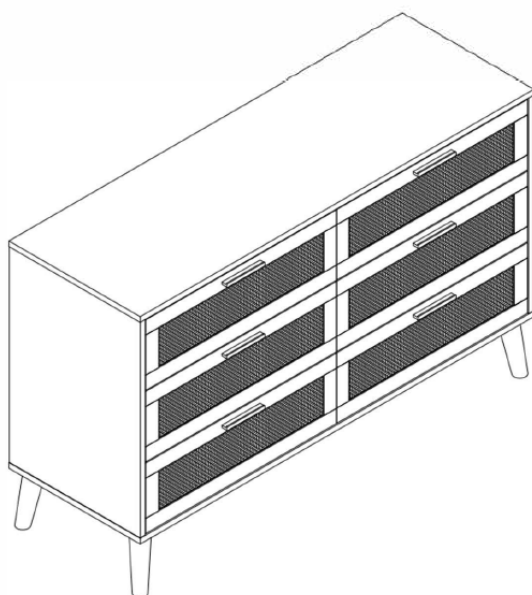

WARRANTY

We strive to offer high quality product and we also try our best to satisfy each customer that order from us, no matter on products or services as needed. Each customer receives a record of their order, such as the order number or item receipt. For any items that are out of warranty period, you may still be able to purchase the replacement parts from our company if they are available.

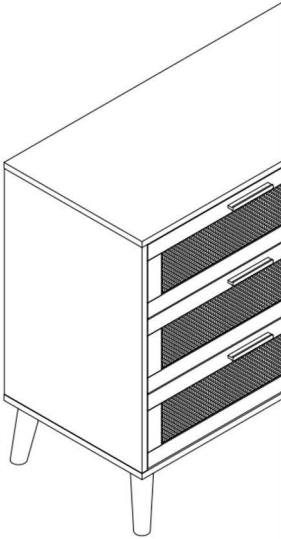

MAINTENANCE AND WARNING

If you are experienced in furniture assembly, you may work alone. Otherwise, please assemble with assistance.

Follow the step-by-step instructions carefully. This instruction manual will reduce your assembly time and difficulties. Please pay close attention to part orientation and fitment during assembly.

Keep away from heat and open flames.

Protect the surface from sharp or abrasive objects.

Do not use harsh cleaners, polishes, or solvents.

Use a mild soap and warm water solution (1:10) to clean.

Do not place in direct sunlight; fading may occur over time.


Avoid jumping or striking the cabinet. Do not write on it without a protective surface.

For residential use only. Not designed for commercial use.

Do not jump on the product.



Two people

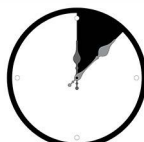

Around 60 min

PRODUCT DESCRIPTION

Modern minimalist solid wood **six-drawer dresser**. It features a minimalist square shape with clean, crisp lines. The six drawers are neatly arranged for a balanced, elegant look, and the natural rattan inlay on the drawer fronts adds rich visual layers and tactile interest. The overall style is calm, warm, and modern.


Solid wood cabinet body and **solid wood legs**. The cabinet features a sturdy, integrated solid wood structure, with solid wood legs at the bottom. This not only raises the cabinet to protect against moisture but also greatly enhances overall visual stability and physical stability, delivering exceptional load-bearing capacity.

Exquisite rattan door panels: Not only do they create a sense of visual continuity and refined detail, but they also offer a unique tactile experience.











All-solid-wood construction. The cabinet body, door panels, and thick base are all crafted from natural solid wood, featuring clear, **natural grain** and a sturdy texture. The use of solid wood throughout ensures outstanding stability, load-bearing capacity, and environmental health, making it highly durable.

Six large-capacity drawers plus a spacious solid wood tabletop. The **broad wooden surface** is ideal for placing lamps, photos, and flowers, while the six deep drawers offer plenty of storage for clothing, books, and all your bedtime essentials, keeping everything neat and organized.

EXPLODED VIEW

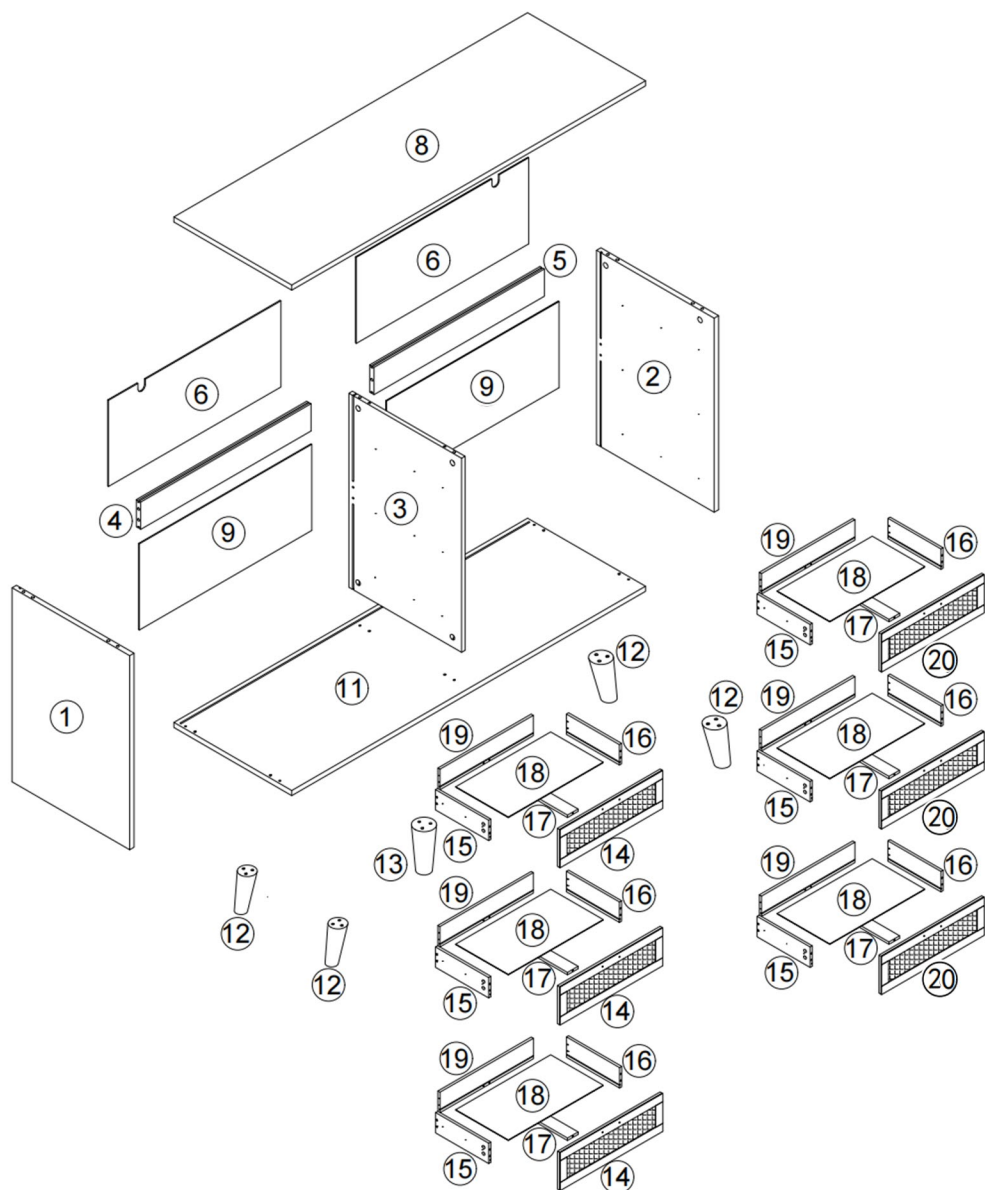

PARTS

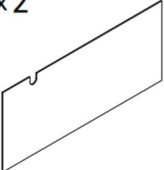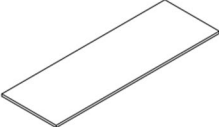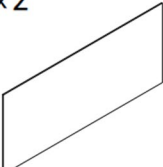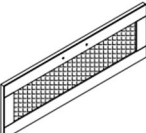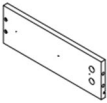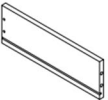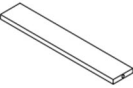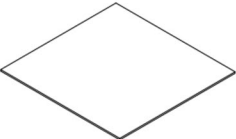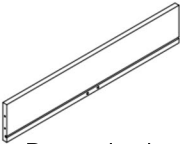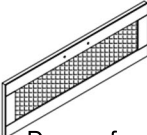① x1  Side panel	② x1  Side panel	③ x1  Middle partition board	④ x1  Back rail
⑤ x1  Back rail	⑥ x2  Back panel	⑧ x1  Top panel	⑨ x2  Back panel
⑪ x1  Bottom panel	⑫ x4  Legs	⑬ x1  Middle leg	⑭ x3  Drawer front
⑮ x6  Drawer side	⑯ x6  Drawer side	⑰ x6  Drawer bottom	⑱ x6  Drawer bottom panel
⑲ x6  Drawer back	⑳ x3  Drawer front		

HARDWARE

TOOL LIST






A x 46+1  Cam bolt	B x 46+1  Cam nut	C x12+1  Wooden dowel	D x1  Screwdrivers
E x 24  Screws M3 x 16 mm	F x 24  Back plate buckle	G x2  Anti-tip hardware	H x 72+2  Screws M3.5 x 12 mm
S x 20+1  Anti-slip pad Ø5"12mm	J x 36+1  Screws M4 x 35 mm	K x12  Drawer slide 12"x1.2	L x 4  Screws
M x 6  Handle	N x 12  Screws M4 x 16 mm	P x 5  Levelling legs	Q x 16+1  Screws Ø3.5 X25mm
R x 5  Connecting bracket			

Please make sure all hardware&packing material fitting the list.

Especially some small accessories may be missing during transportation. Please contact us if you have any question.


step 1 ---Install the Cam bolt (A)

Insert cam bolt (A) into pre-drilled holes of Side panel (1&2) and Middle partition board (3), tighten it with screwdriver.

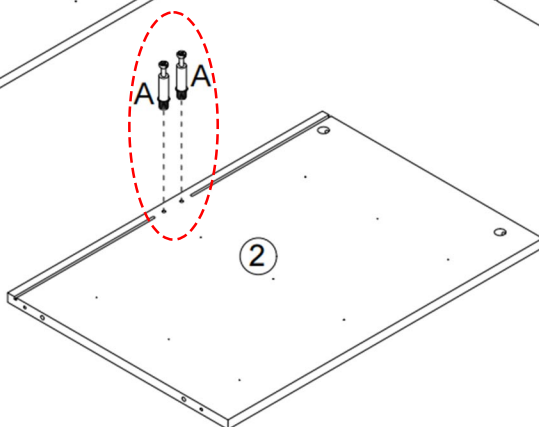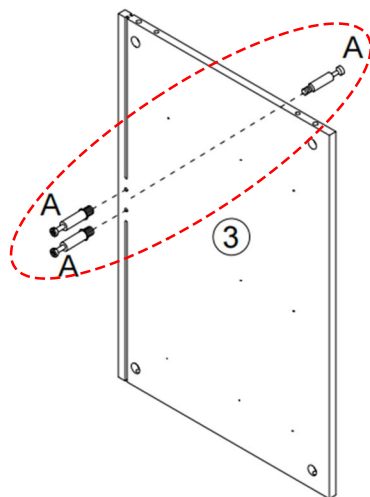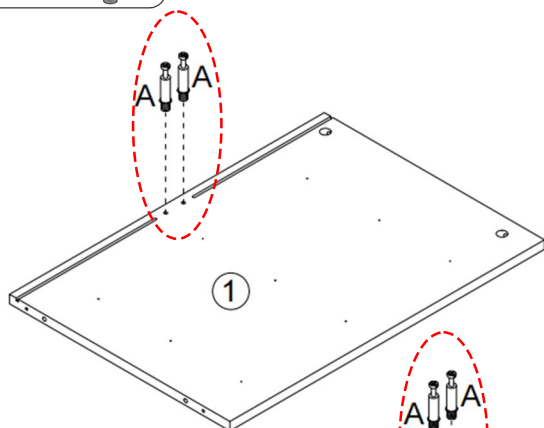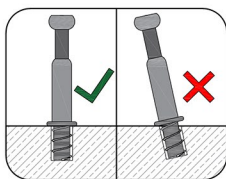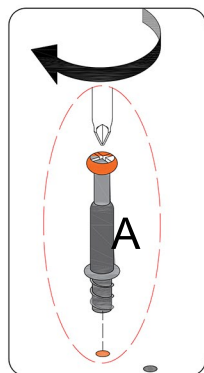


step 2 ---Install the Back rail (4&5)

1. Then insert Back rail (4&5) into Side panel (1&2&3) as shown.
2. Insert Cam nut (B) into the pre-drilled holes of Side panel (4&5), tighten it with screwdriver.

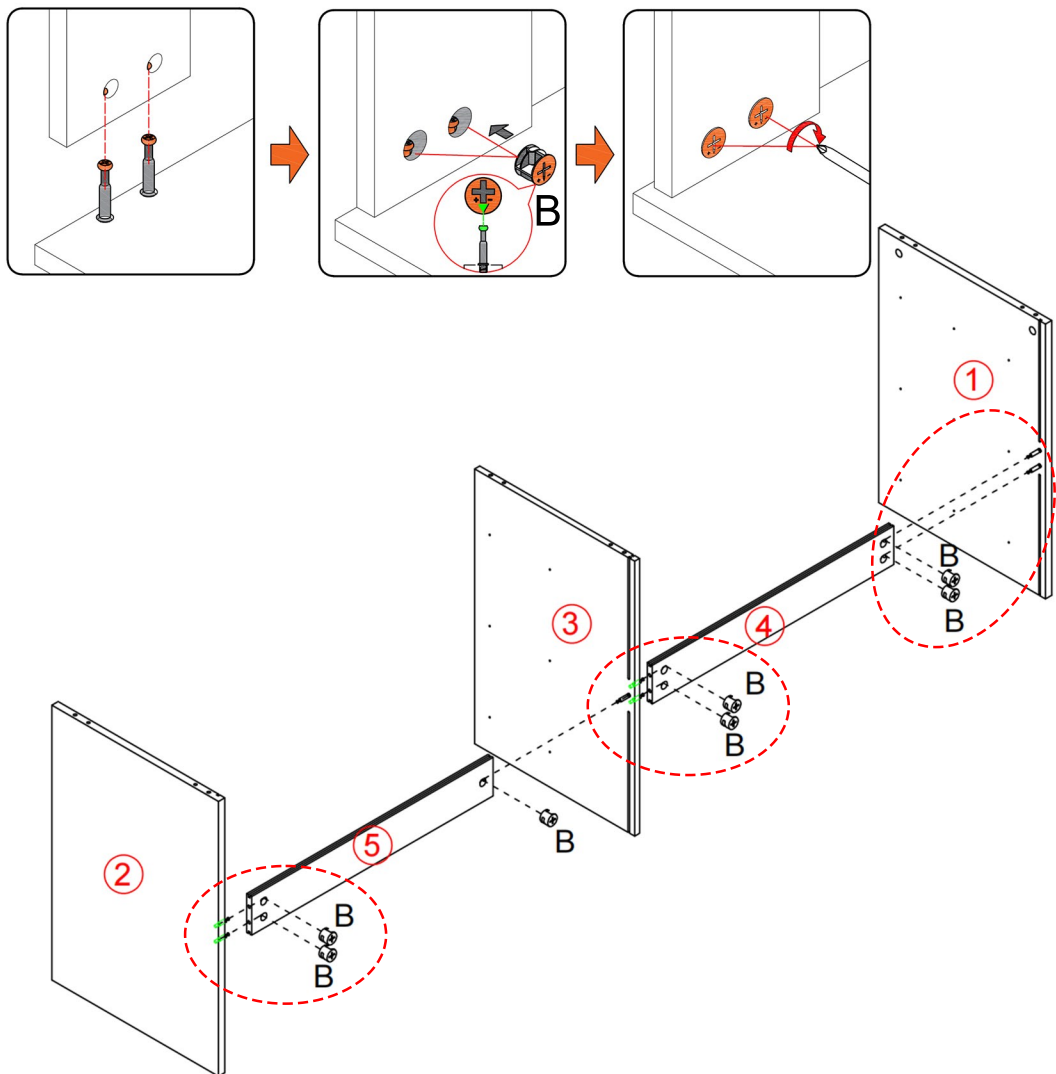




step 3 ---Install the Cam bolt (A) & Anti-tip hardware

- 1.Insert cam bolt (A) into pre-drilled holes of Top panel (8) ,tighten it with screwdriver.
- 2.Use screws (J3) to attach Anti-tip hardware (J1) to Top panel (8), tighten it with screwdriver.

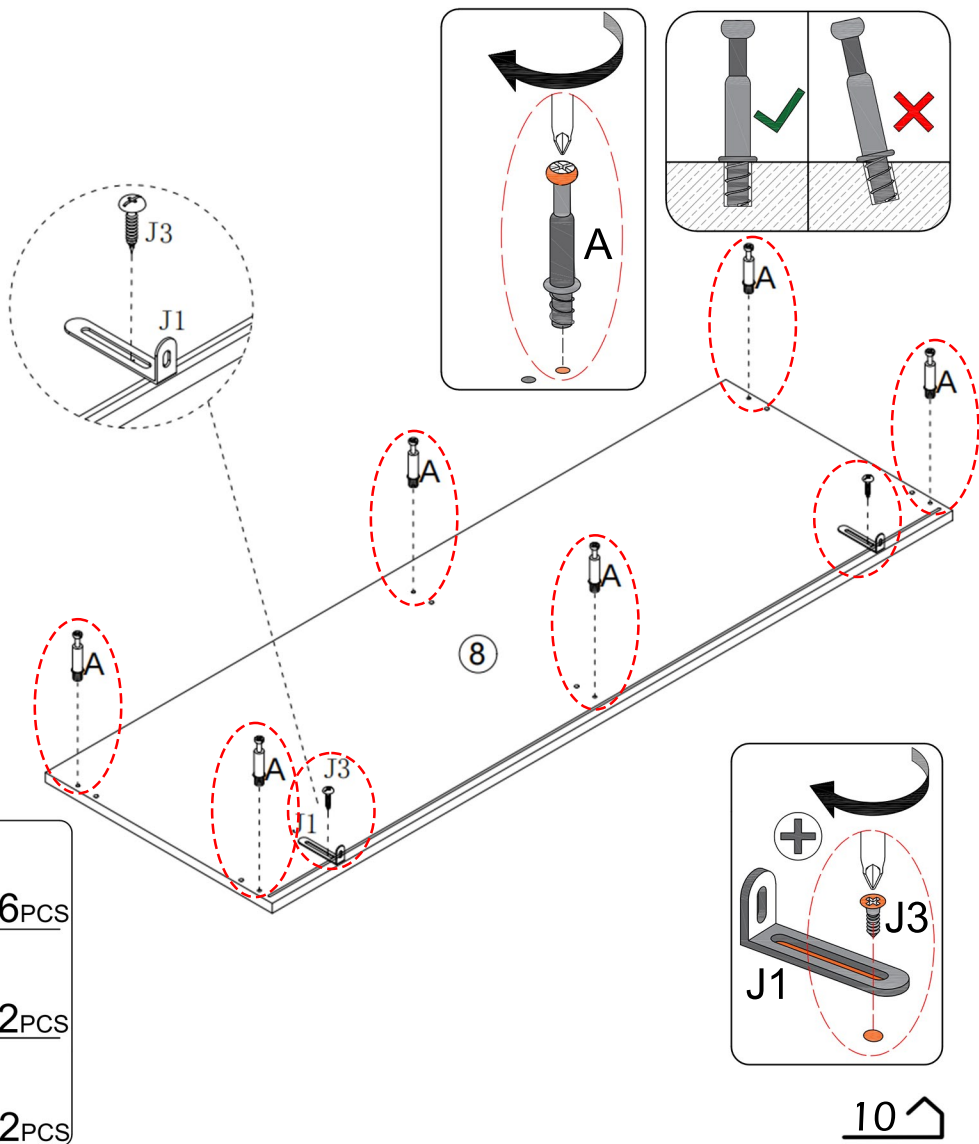


step 4 ---Install the Cam bolt (A)

Insert cam bolt (A) into pre-drilled holes of Bottom panel (11), tighten it with screwdriver.

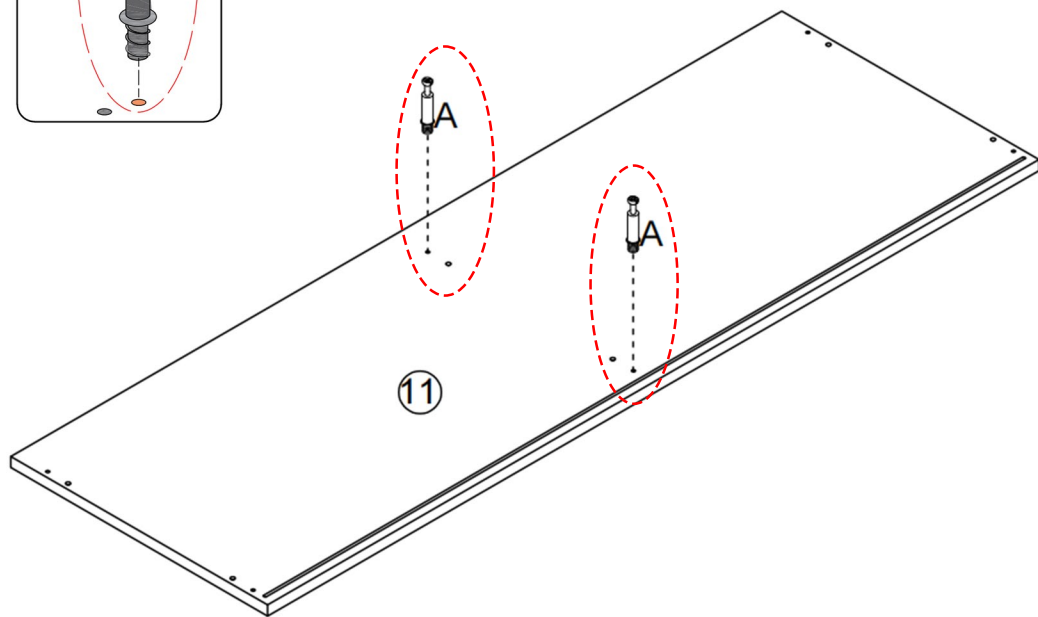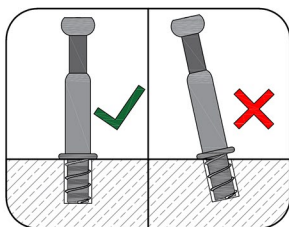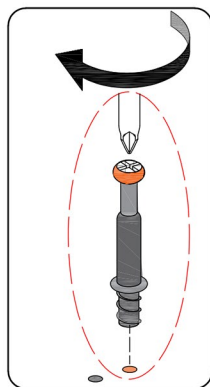

step 5 ---Install the Back panel (6)


Slide the Back panel (6) into the grooves along the Side panel (1&2) and Middle partition board (3). Ensure it fits flush and aligns tightly with the internal channels.

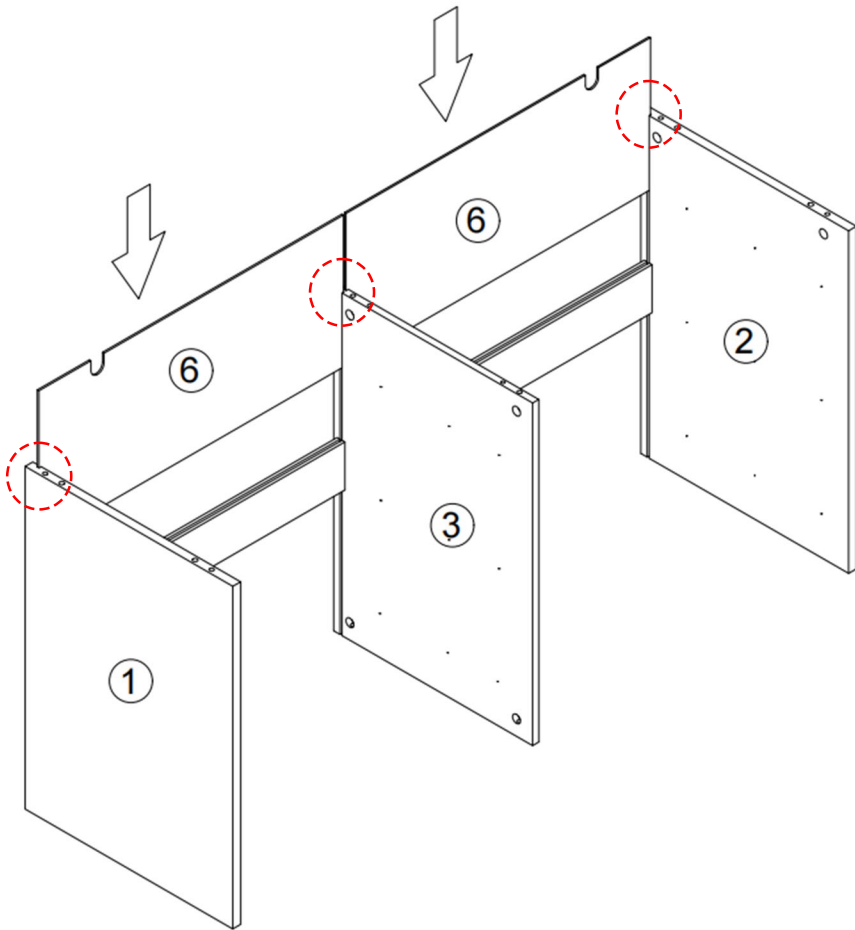

step 6 ---Install the Top panel (8)


1.Insert Wooden dowel (C) into pre-drilled holes of Side panel (1&2) and Middle partition board (3),and then insert Pre-assembly Top panel (8) into it as shown.

2.Insert Cam nut (B) into the pre-drilled holes of Side panel (1&2) and Middle partition board (3),tighten it with screwdriver.

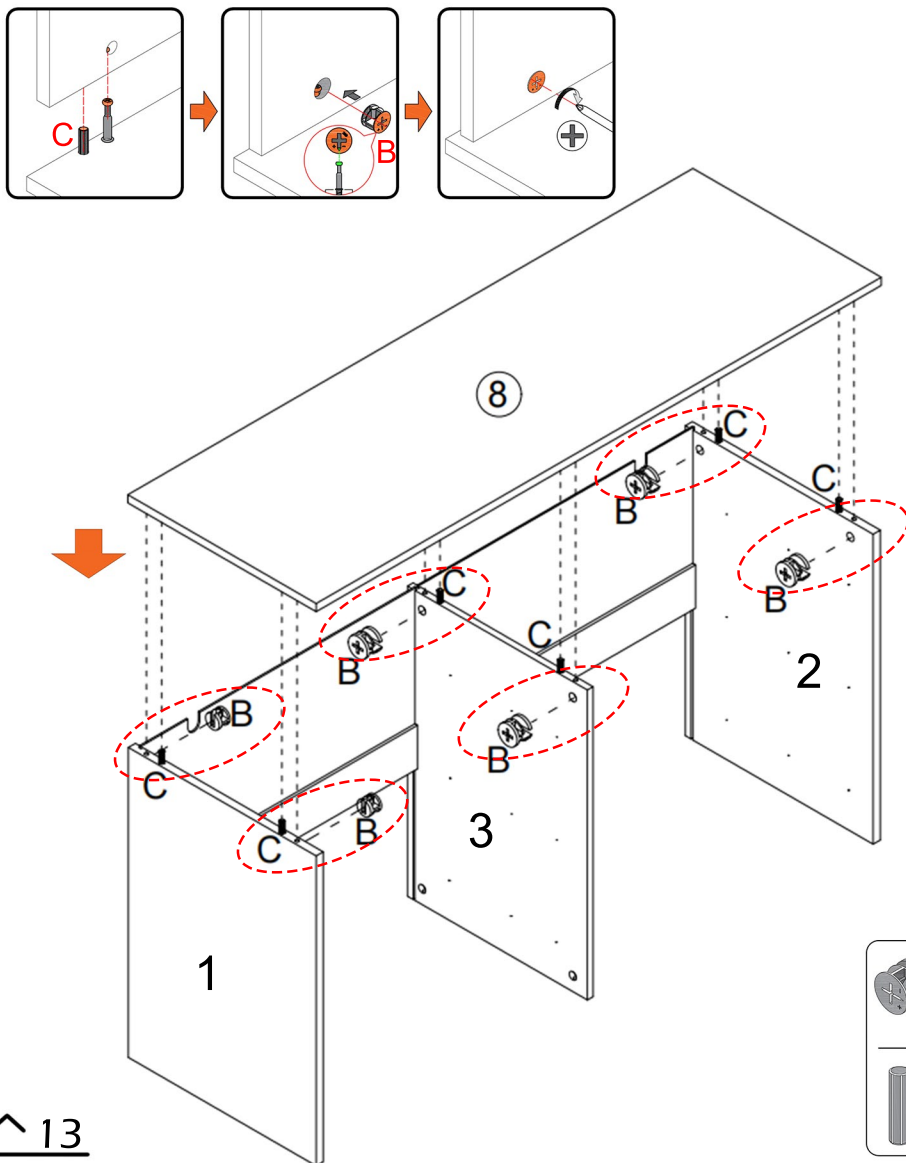



step 7 ---Install the Back panel (9)

Slide the Back panel (9) into the grooves along the Side panel (1&2) and Middle partition board (3). Ensure it fits flush and aligns tightly with the internal channels.

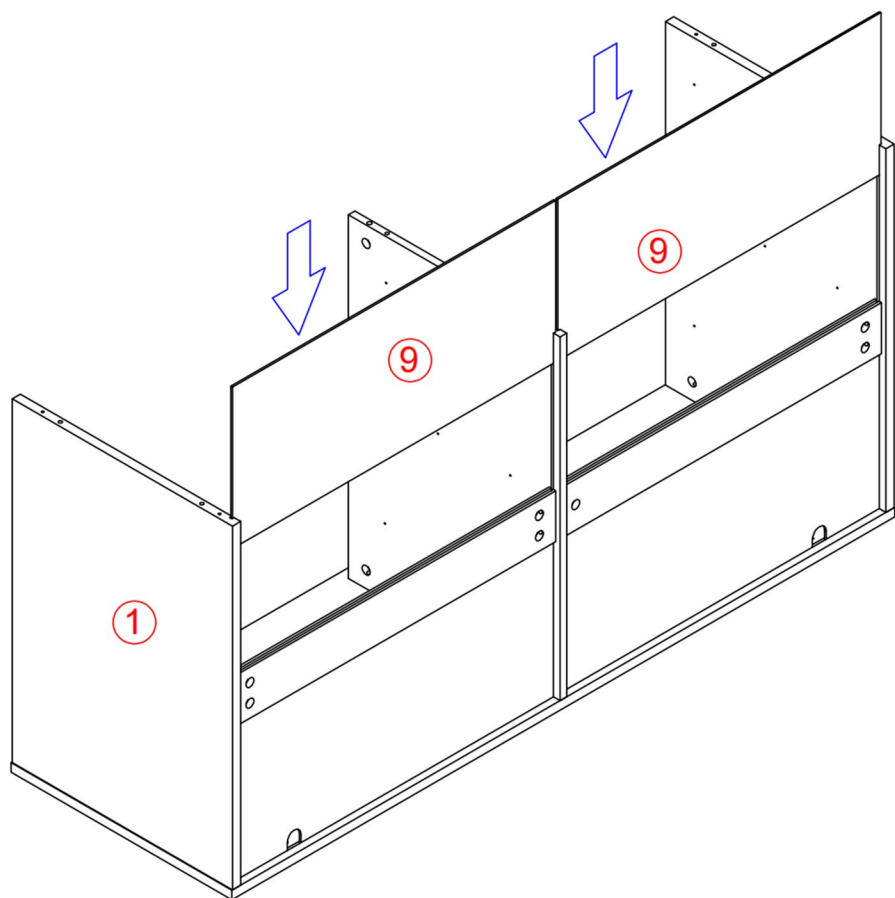



step 8 ---Install the Bottom panel (11)

- 1.Insert wooden dowel (C) into it as shown.
- 2.Use Screw (L) to attach Bottom panel (11) to preassembly part at step 7 .
tighten it with screwdriver.
- 3.Insert Cam nut (B) into it as shwon, tighten it with screwdriver .

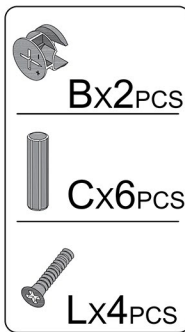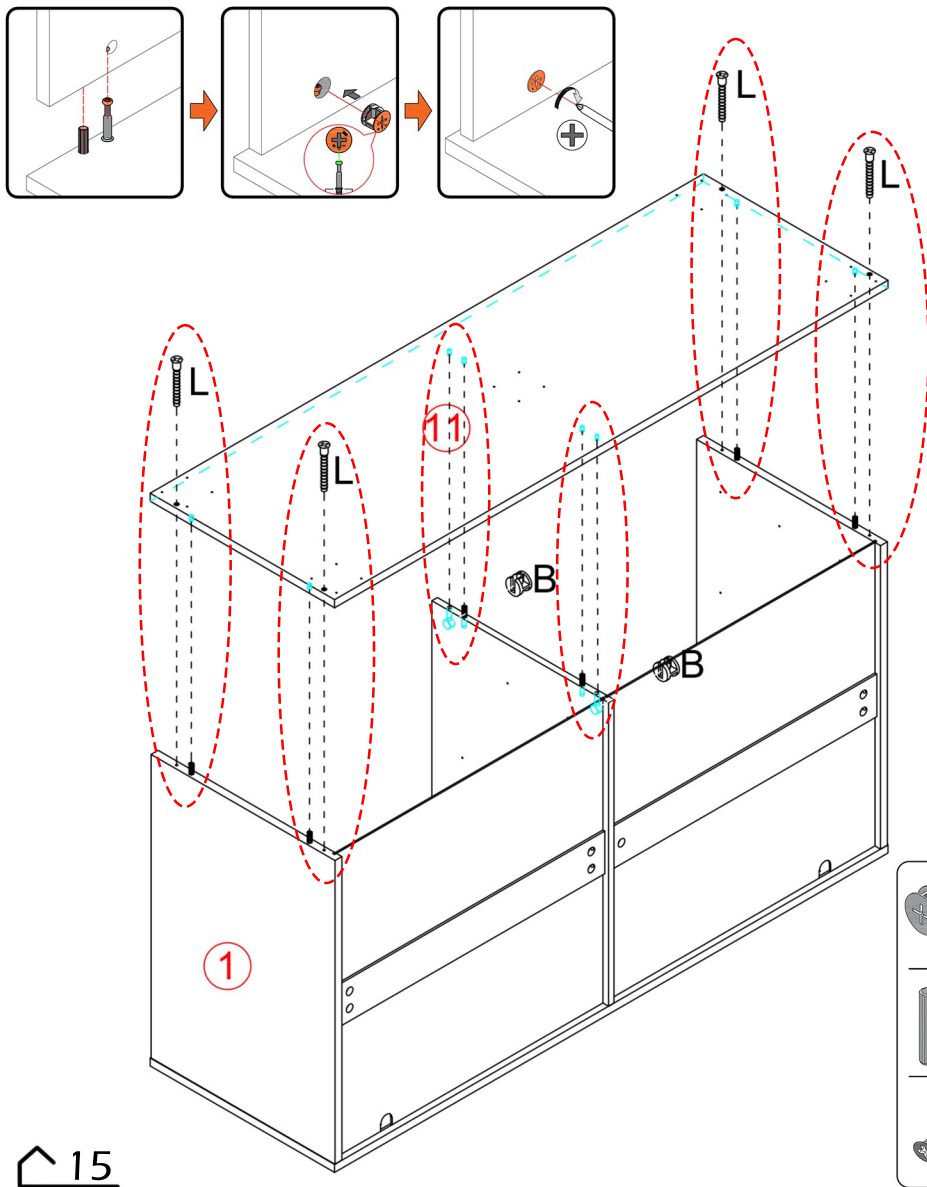

step 9 ---Install the Connecting bracket (R)

Use screws (Q) to attach Connecting bracket (R) to Legs (12) and Legs (13),tighten it with screwdriver.

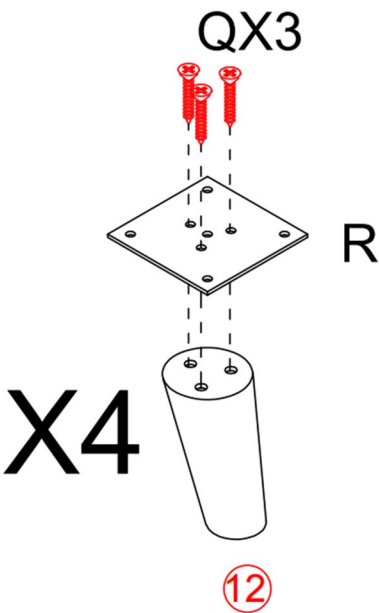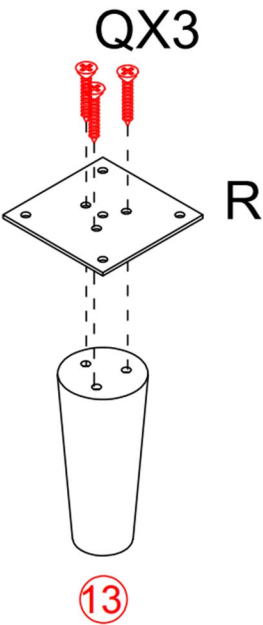




QX15PCS




RX5PCS

step 10 ---Install the Legs (12&13)

Use screws (S) to attach Legs (12&13) to it as shown,tighten it with screwdriver.


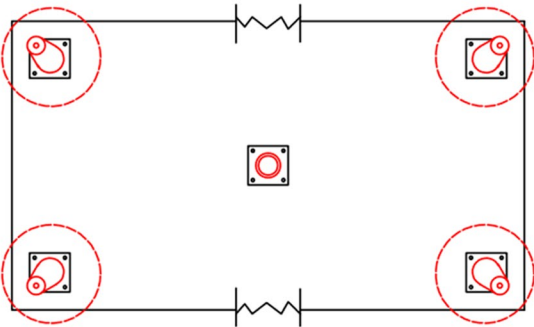


Pay attention to the direction of your Legs

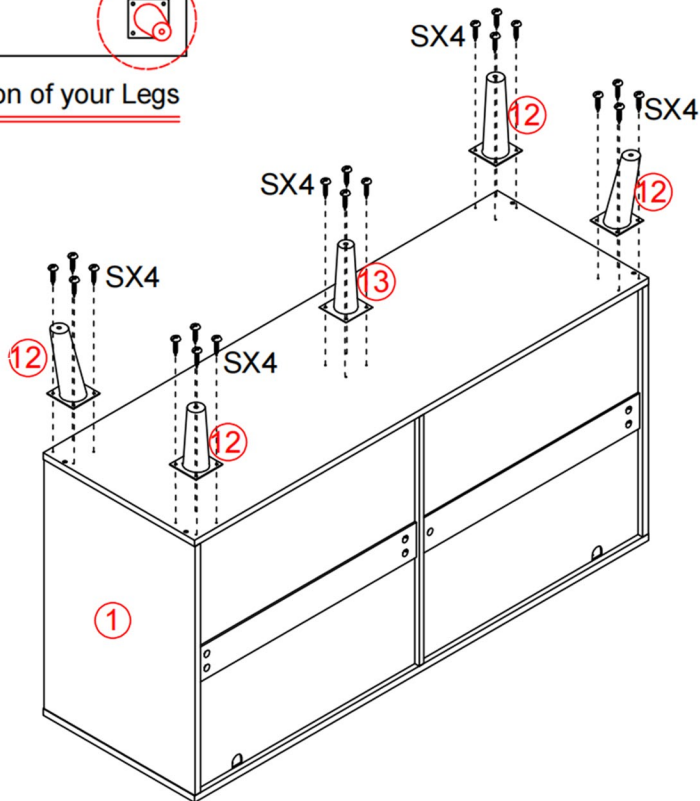

step 1 1 ---Install the Leveling legs (P)

Insert the Leveling legs (P) into the adjustment hole at the bottom of the wooden leg. If the cabinet is unbalanced, you can adjust these screws accordingly to correct it.

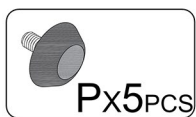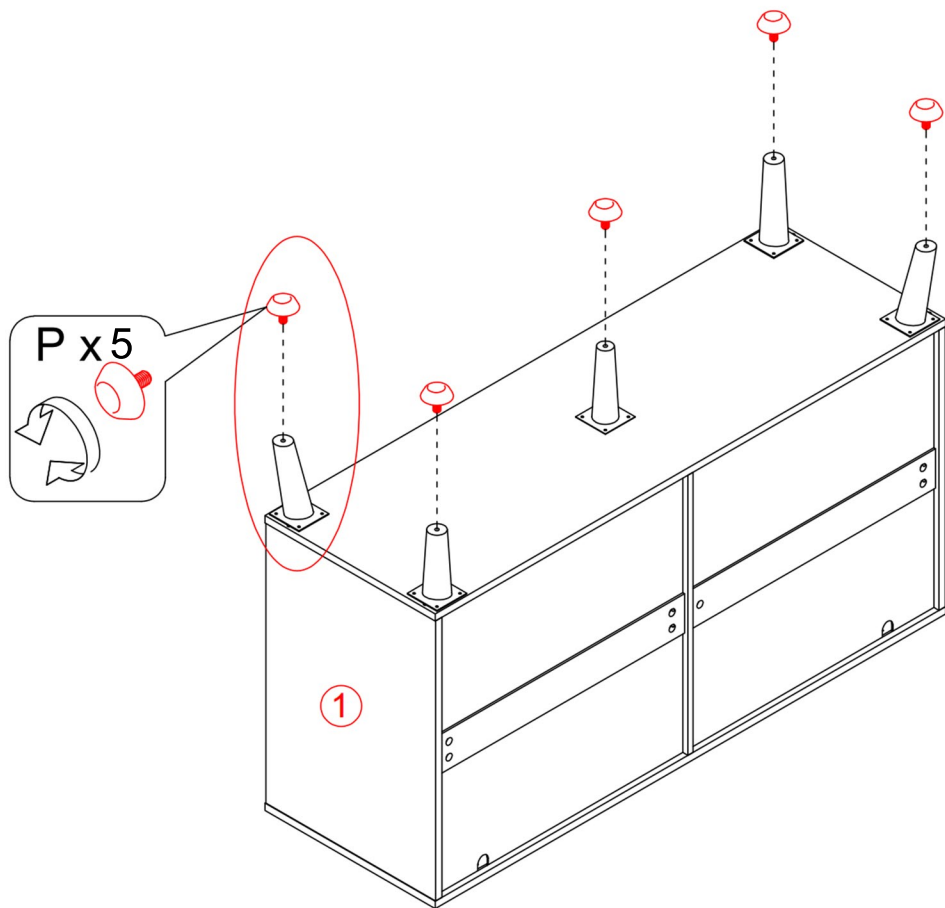


step 12 ---Select the sliding track (K2)

Disassemble the slide rail (K) into K1 and K2 as shown in the diagram. Install **sliding track(K1)** at the corresponding positions on the side panel and center panel according to the illustration in **step 13**, and install **sliding track(K2)** on both sides of each drawer in **step 18**.




Take care when installing the slide rails as they have been pre-lubricated

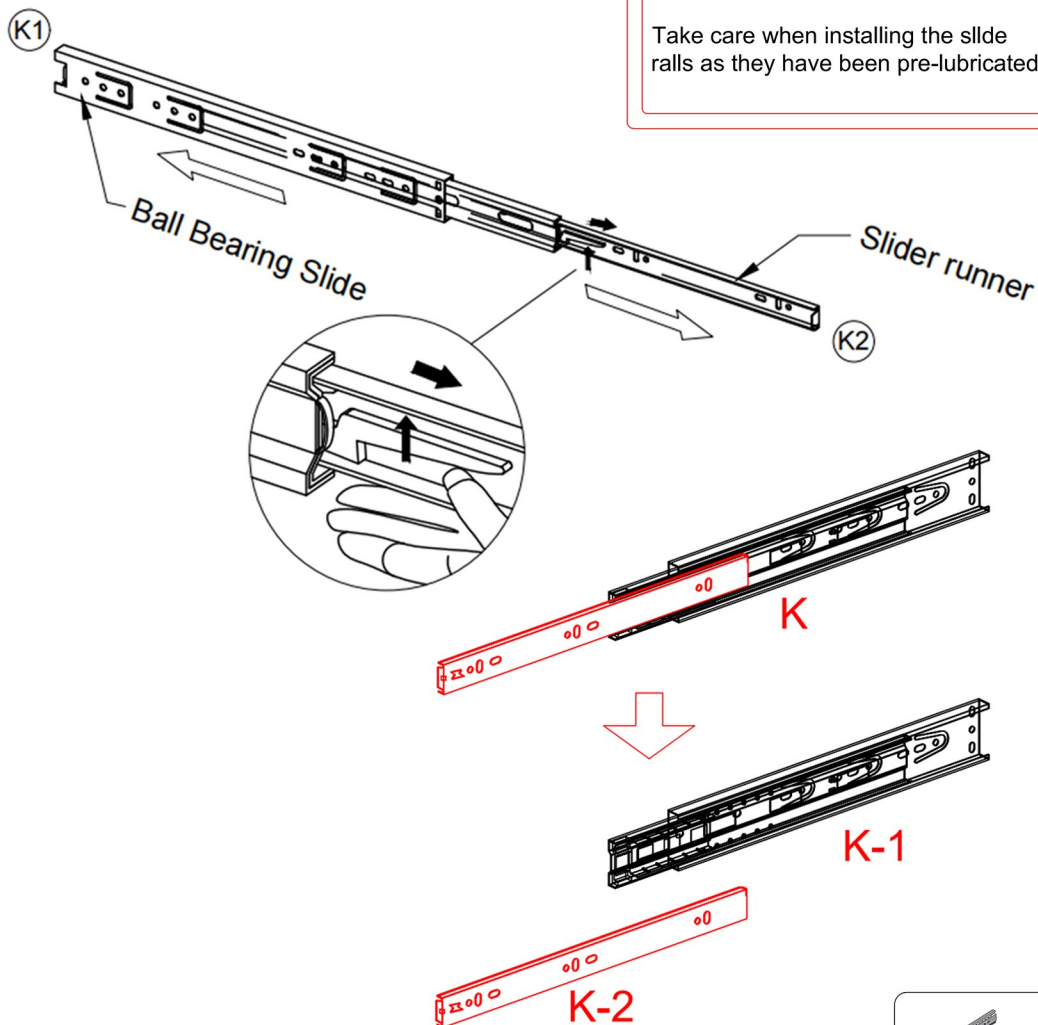


step 13 ---Install the Slide rail(K-1)

Use the screws (H) to attach the Slide rail (K-1) to the Side panel (1&2), middle partition panel (3), Tighten it with screwdriver.




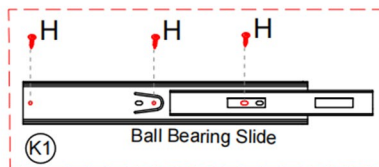


Make sure to insert screws in the correct opening.

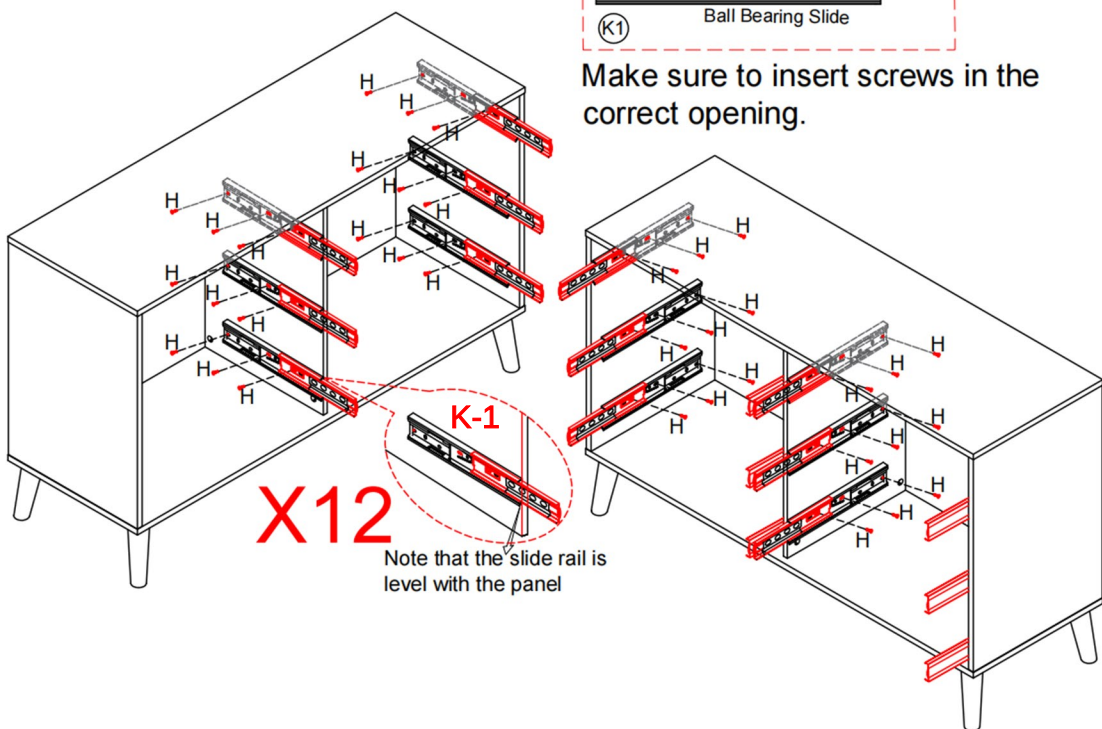

step 14 ---Install the Cam bolt (A)

Insert cam bolt (A) into pre-drilled holes of Drawer front (14),tighten it with screwdriver.

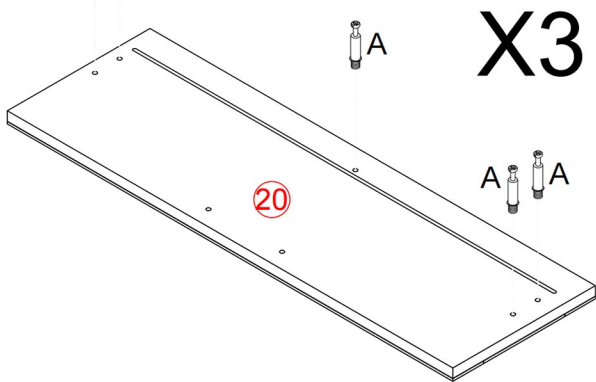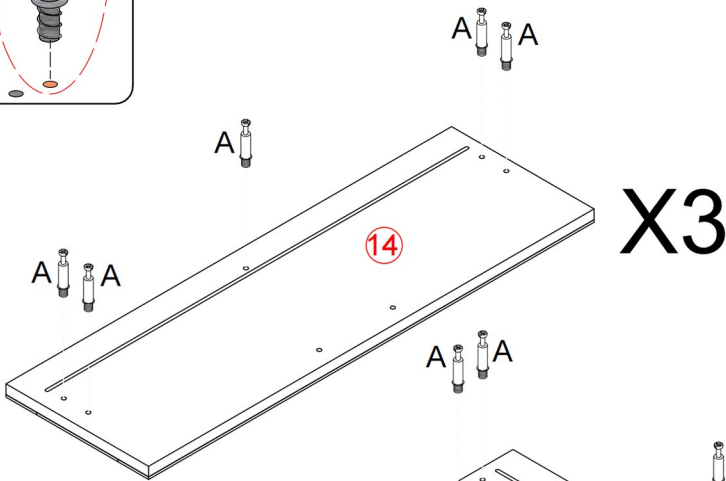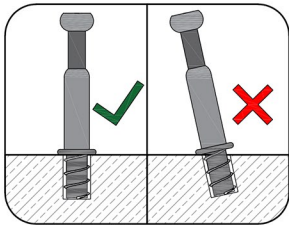
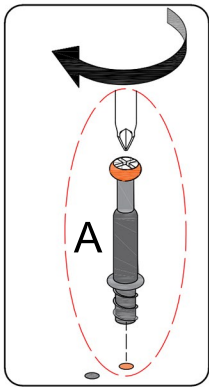


20




step 15 ---Install the Drawer side (15&16) & Drawer bottom (17)

- 1.Insert Drawer side (15&16) & Drawer bottom (17) into Drawer front (14) as shown.
- 2.Then insert Cam nut (B) into the pre-drilled holes of Drawer side (15&16) & Drawer bottom (17),tighten it with screwdriver.

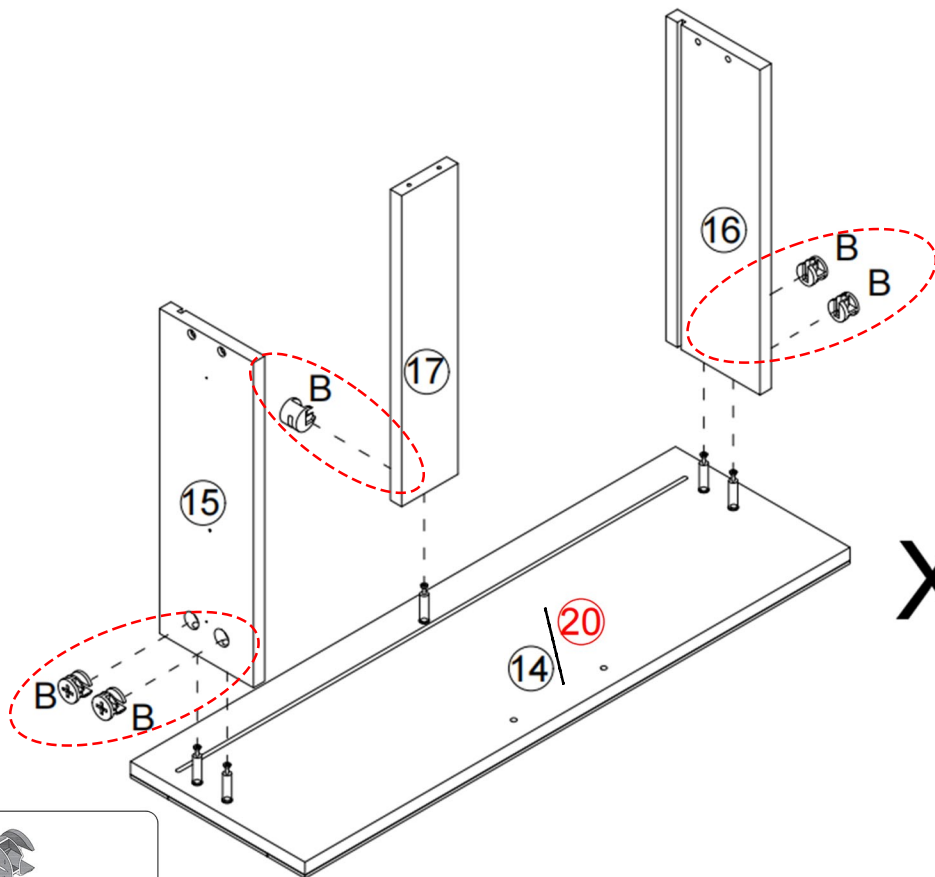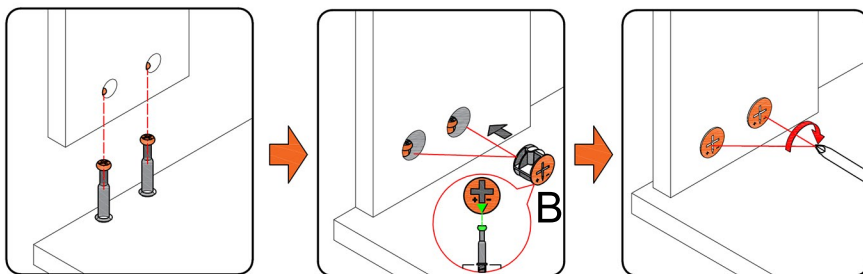


step 16 ---Install the Drawer bottom panel (18)

Slide the Drawer bottom panel (18) into the grooves along the Drawer Side, Ensure it fits flush and aligns tightly with the internal channels.

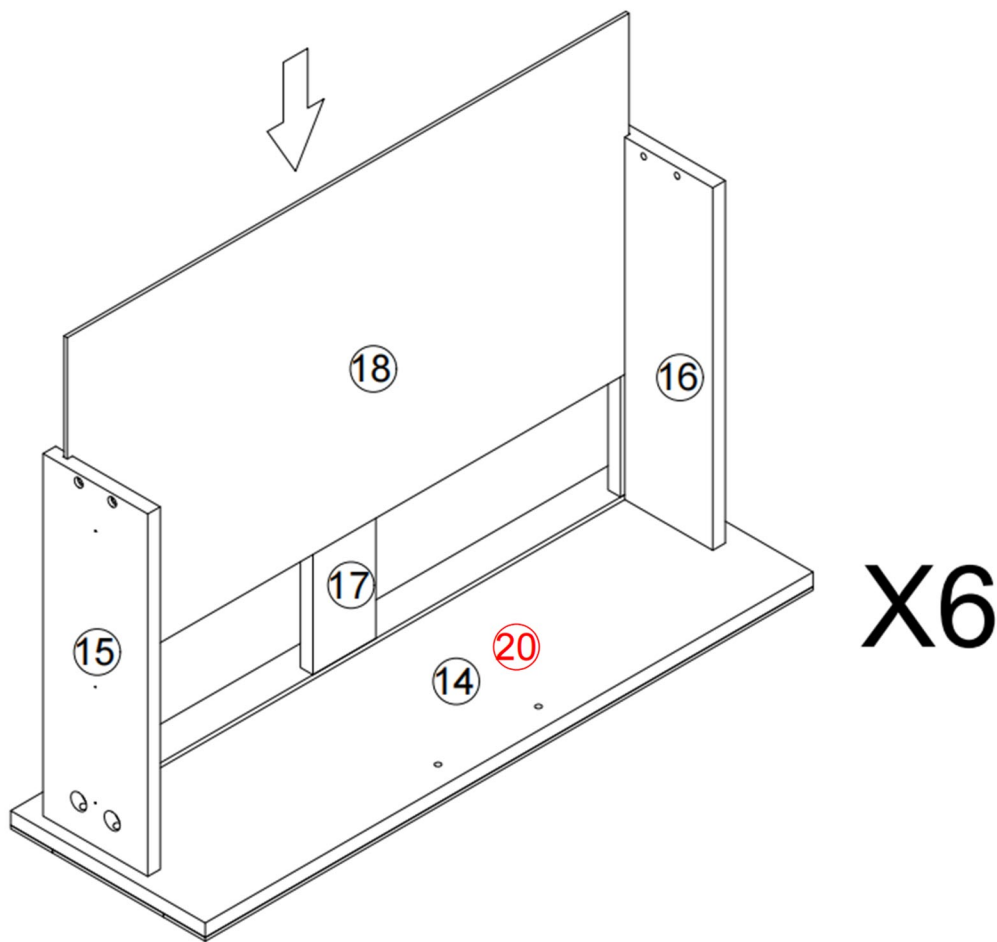


step 17 ---Install the Drawer back (19)

Use screws (J) to attach Drawer back (19) to them as shown.


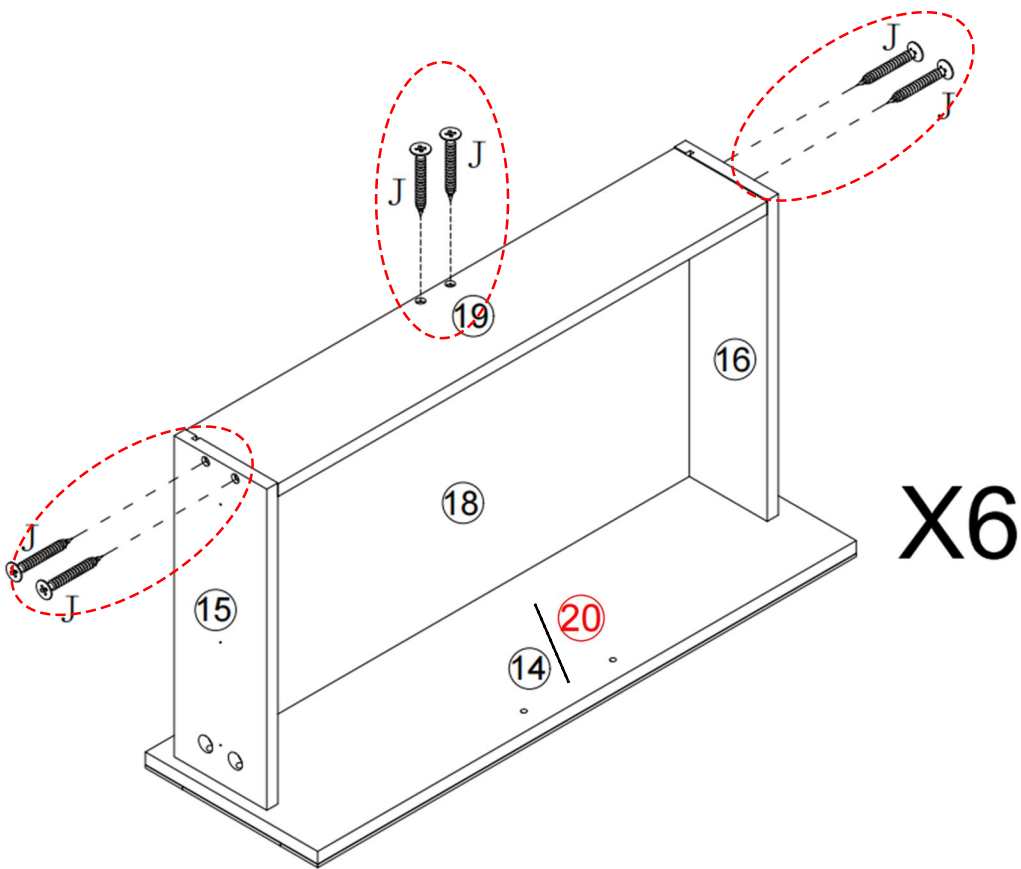


step 18 ---Install the Slide rail(K-2)

Use the screws (H) to attach the Slide rail (K-2) to the Drawer side (15&16), Tighten it with screwdriver.

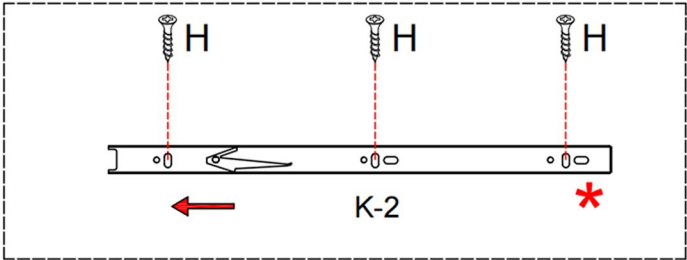


Please note the direction of opening

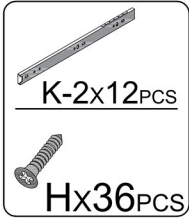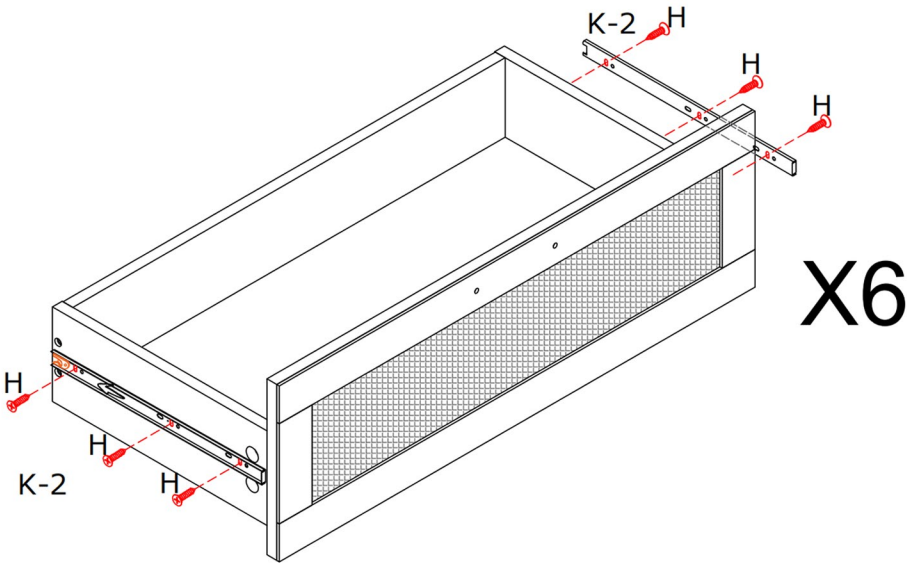


step 19 ---Install the Handle (M)

Use the screws (N) to attach the Handle(M) to the Drawer front (14),
Tighten it with screwdriver.

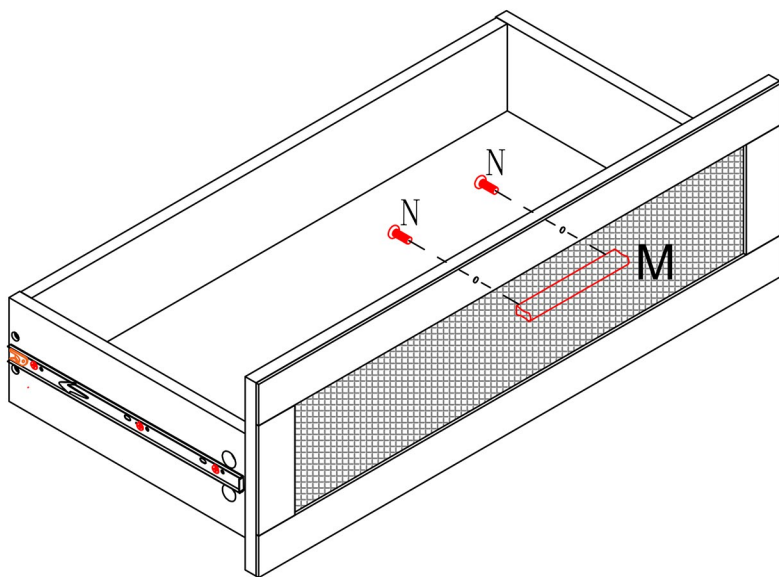

X6

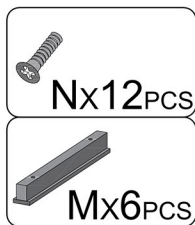

step 20 ---Install the drawer



Align the drawer slide and push it in.

Pay attention to the numbering of the drawer panels(14&20) as shown.







Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

★If the drawer does not go in smoothly please take it out and repeat the step

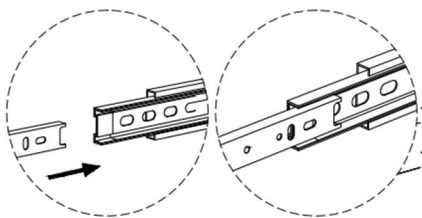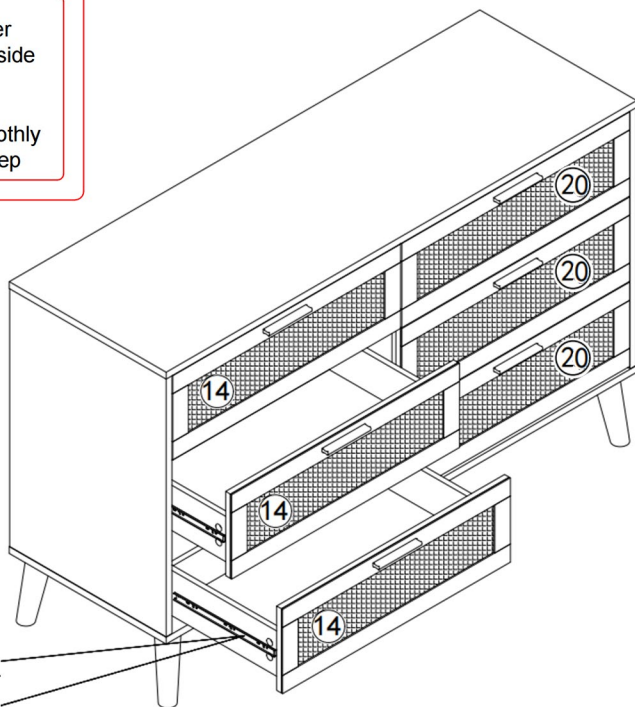

step 21 ---Install the Backplate buckle (F)


Insert the Backplate buckle (F) into it as shown, Use the screws (E) to attach the Backplate buckle(F), Tighten it with screwdriver.

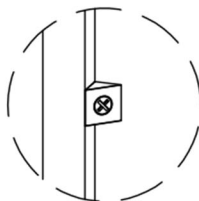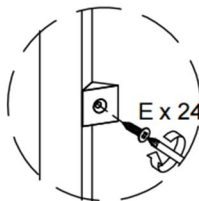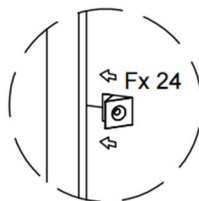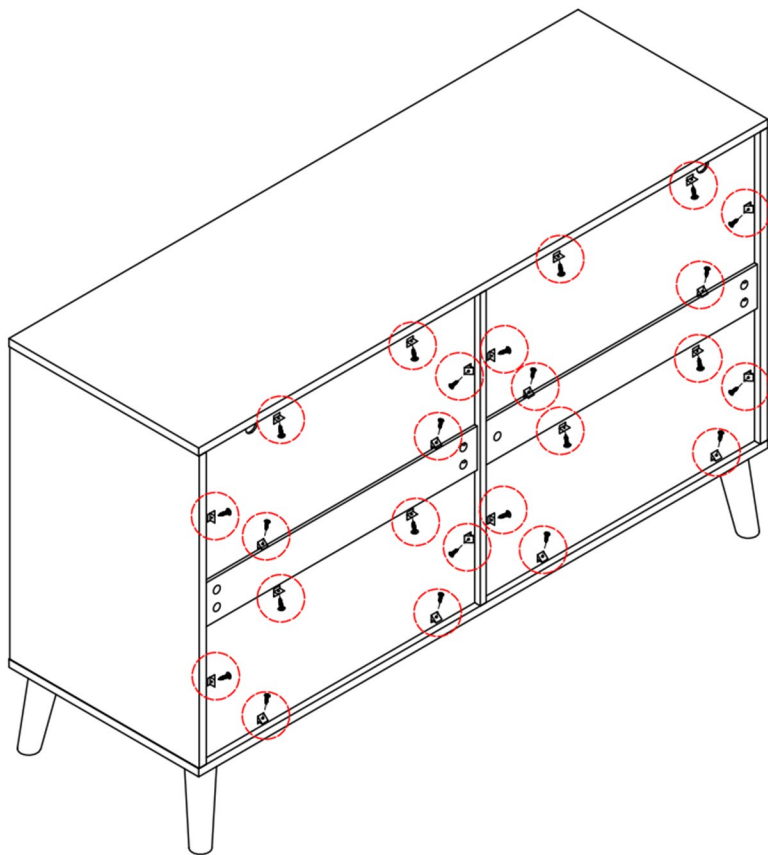


step 22 ---Install the Anti-falling hardware

In order to fix the cabinet to the wall.

First move the cabinet against the wall, then hold the Iron Plates (J1) near the back-top edge of the cabinet to determine position, and mark the positions on the wall with a pencil. Use a drill or powertool to make holes at the marked spots (For at least 30 mm depth). Hammer the Wall Plugs (G4) into the drilled holes until flush. Insert the screw (J2) through Iron Plate (J1) and tighten into the Wall Plugs (G4).

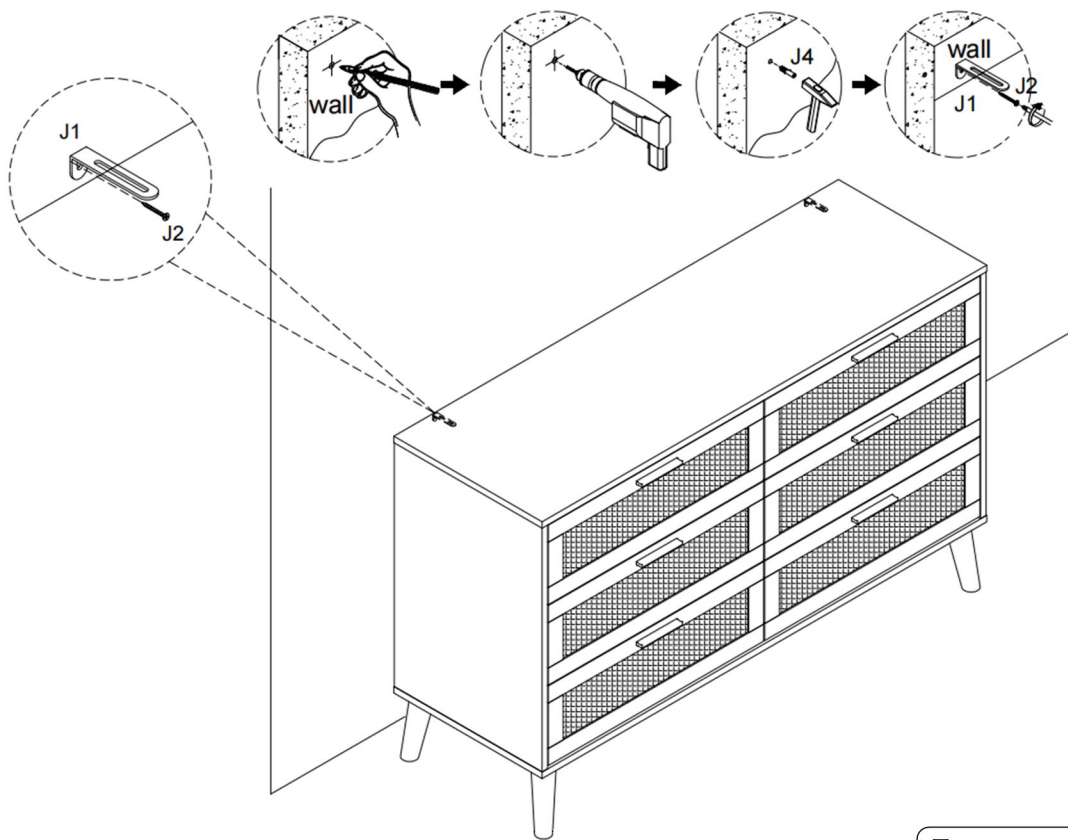

For your **safety**, this **Anti-falling hardware** must be **installed**.

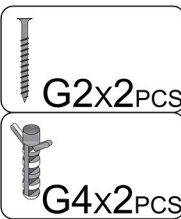

step 23 ---Assembly complete

Congratulations! You have finished the assembly, thank you again for choosing our product! Please enjoy!

