




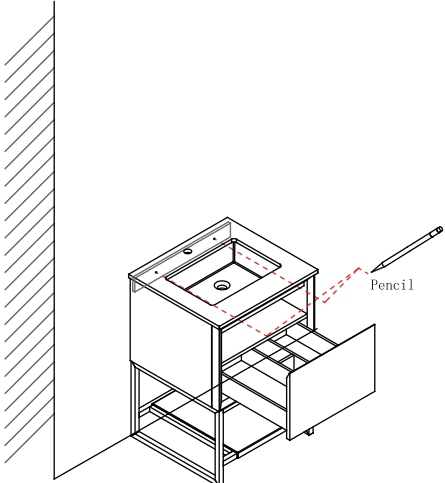
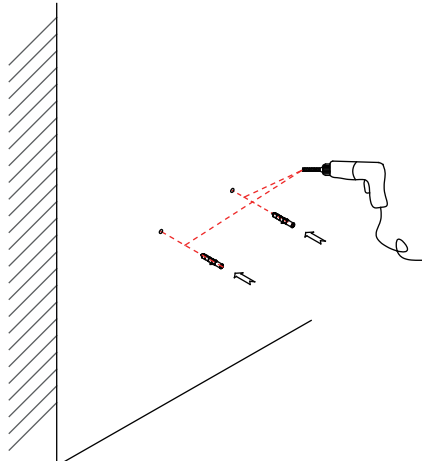
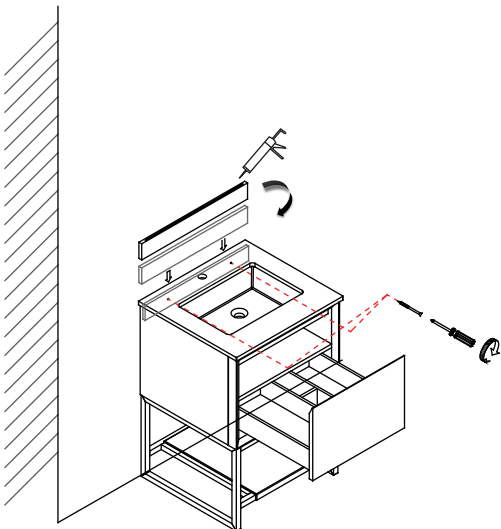


24"

Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
The vanity should be installed by a professional plumber.
Drainer pipe and trap are not included.
If you experience any difficulties with this product,do not return to the point of purchase. Please contact us and we will help resolve your issue.

Part List				
A (cabinet) B (backsplash) C (Screw) D (Expansion plastic)				
   				
x1 x1 x2 x2				
Tools required				
   				
screwdriver(phillips) silicone level tape measure				
Step 1				
				
Step 2				
				
Step 3				
				
Step 4				
