
ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. READ AND SAVE THESE INSTRUCTIONS.

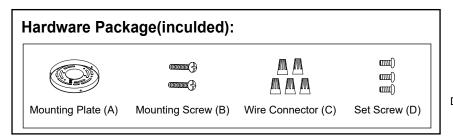

Installation Steps

Turn off the power at fuse or circuit box.


- The fixture of the top iron tube. put into the metal pad and rubber pad, Through the hole of the upper glass shade, after put a rubber pad use the casting to fix it.
- 2. Attach the threaded pipe into the coupling of the fixture and secure the hex nut.

NOTE: Depth of threaded pipe may need to be adjusted to properly fit glass shade, rubber pad and finial.

- Attach the lower glass shade to the fixture by inserting the threaded pipe, then secure it with a rubber pad and finial.
 Note: Do not over tighten, breakage of glass shade could be occurred.
- 4. Attach mounting plate (A) to the outlet box using two mounting screws (B).
- 5. Rod Connections:
 - a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wire through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.

Note: Length adjustable from 18" to 60". Use fewer rods if shorter length is desired.

- 6. Thread the fixture wire through the canopy, then secure the rod assembly to the coupling kit of the canopy.
- 7. Make wire connections using wire connectors (C) as follows:
 - ---Connect the smooth-coated wire (marked) from the fixture to the red wire from the driver output.
 - ---Connect the ribbed-coated wire (unmarked) from the fixture to the black wire from the driver output.

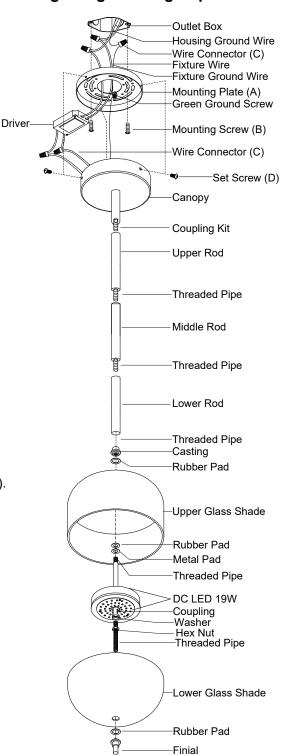

- 8. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - --- Connect the black wire from the driver input to the black wire from the power source.
 - --- Connect the white wire from the driver input to the white wire from the power source.
 - --- Attach the fixture ground wire to the mounting plate (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).

Carefully put the wires back into the outlet box.

- 9. Attach the canopy to the mounting unit by inserting the set screws (D) .
- Angled mounting recommended for a vaulted or angled ceiling.
 (See Fig. 1)

Turn on the power at fuse or circuit box.

