




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

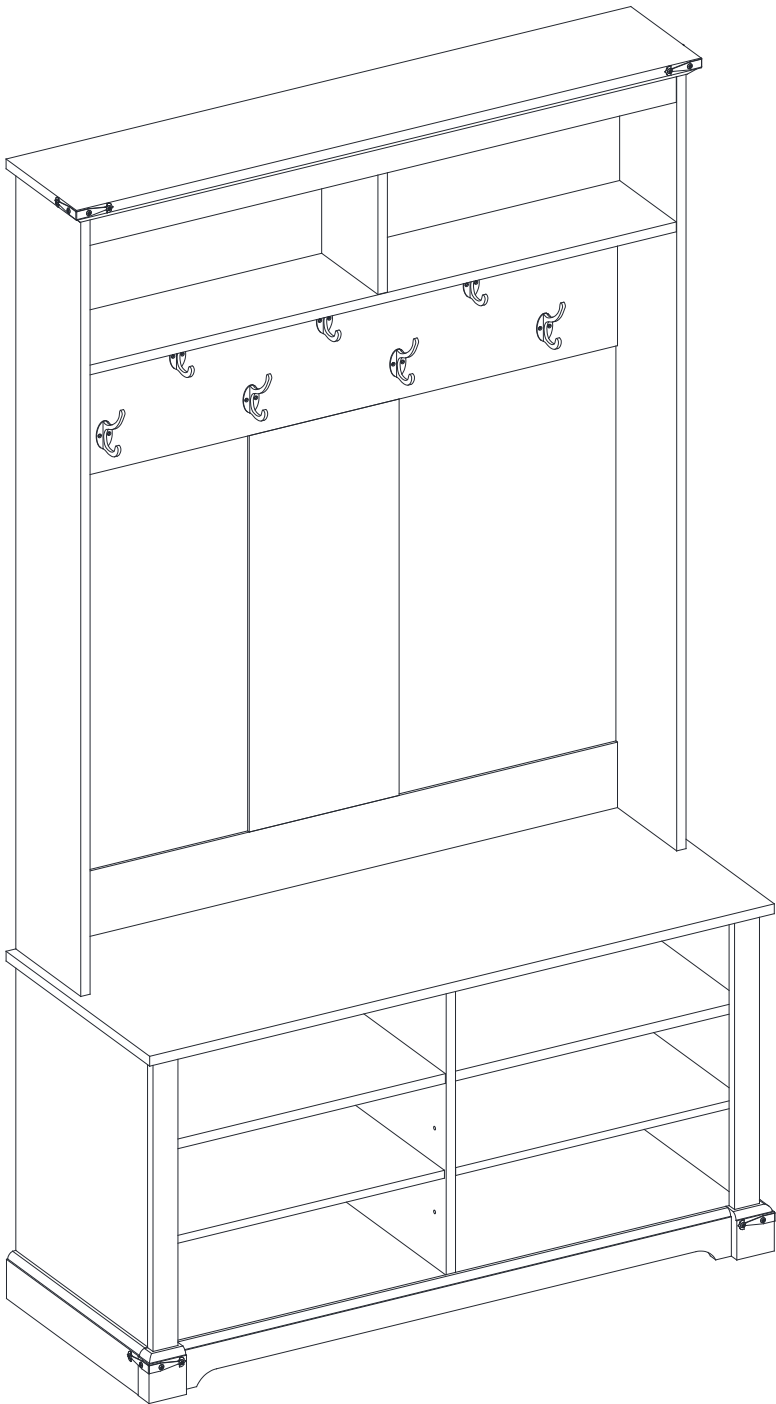

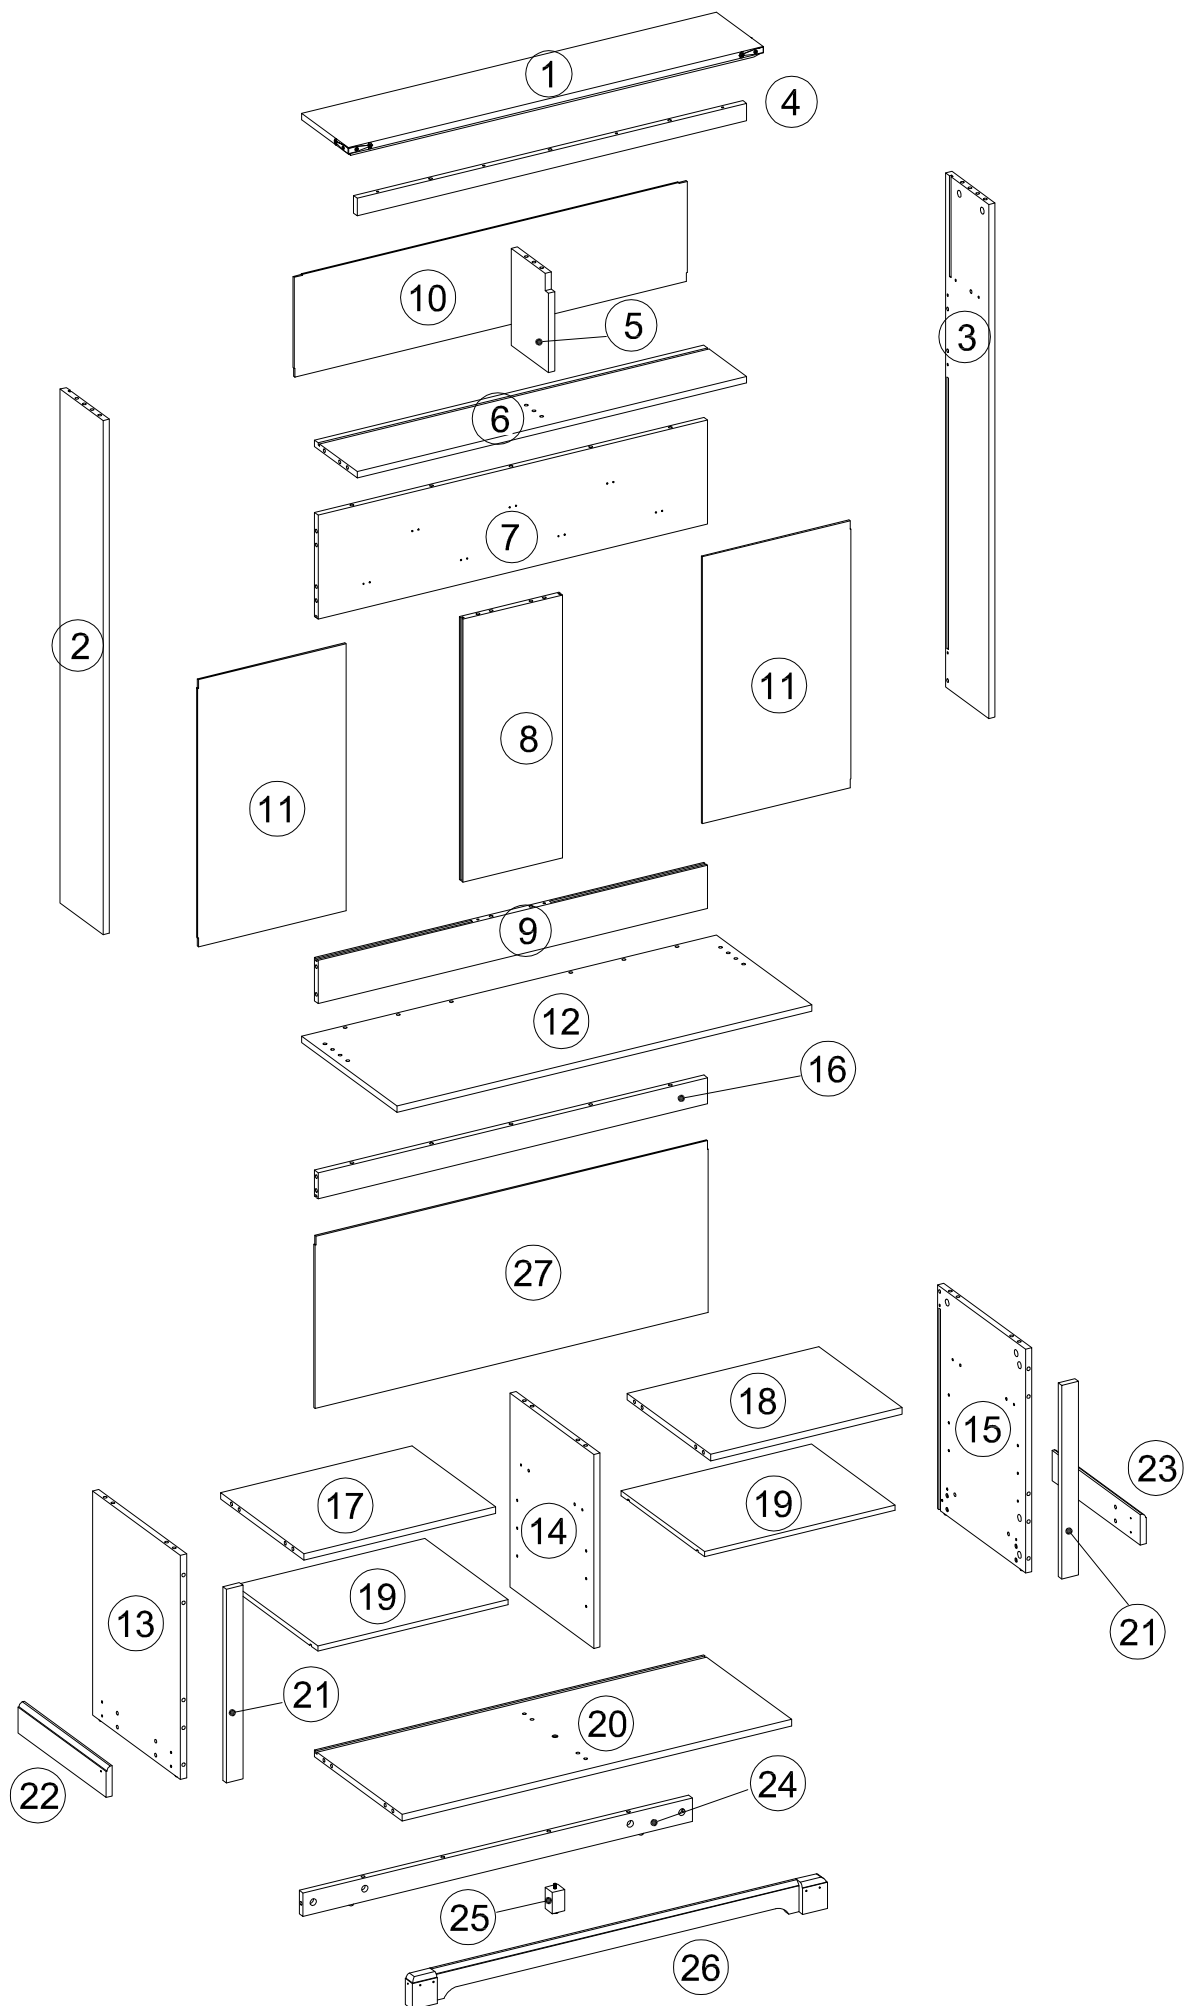



① x1



② x1



③ x1




④ x1



⑤ x1



⑥ x1




⑦ x1



⑧ x1




⑨ x1




⑩ x1




⑪ x2




⑫ x1




⑬ x1




⑭ x1




⑮ x1




⑯ x1




⑰ x1



⑱ x1



⑲ x1



⑳ x1




㉑ x2




㉒ x1





㉓ x1













㉔ x1







 (25) x1







 (26) x1



 (27) x1

A	x56	B	x48	C	x51	D	x8	E	x56
									
Ø6x35mm		Ø15x11mm		Ø8x30mm		Ø6x30mm		Ø30mm	



F	x4	G	x8	H	x1	I	x6	J	x8
									
Ø4x44mm		Ø15x9mm		M4x57mm		M6x12mm		Ø4x25mm	

K	x8	L	x7	M	x14	N	x12	O	x3
									
Ø5x16mm				Ø3.5x14mm		Ø6.7x48mm		58x20x20mm	



P	x2	Q	x8	R	x2	S	x18	T	x18
									
59x59x14mm		Ø3.5x12mm						Ø3x17mm	

U	x8
	
Ø8x20mm	

1

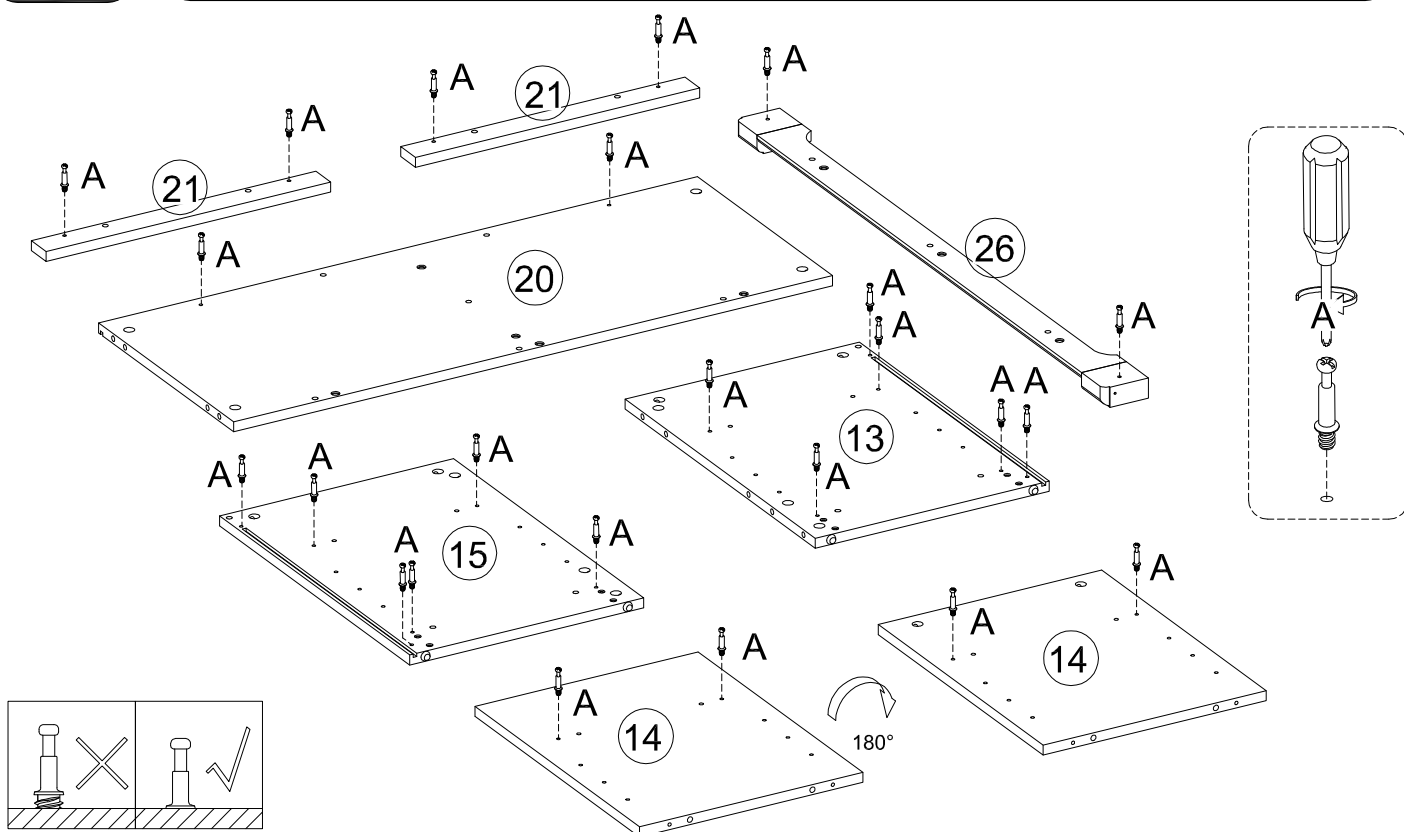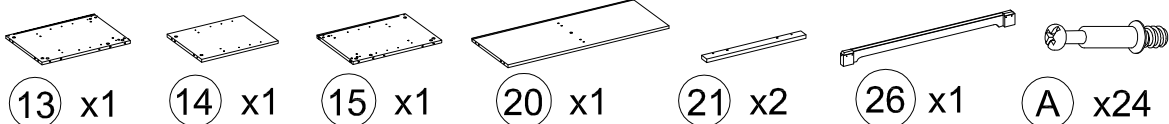


2

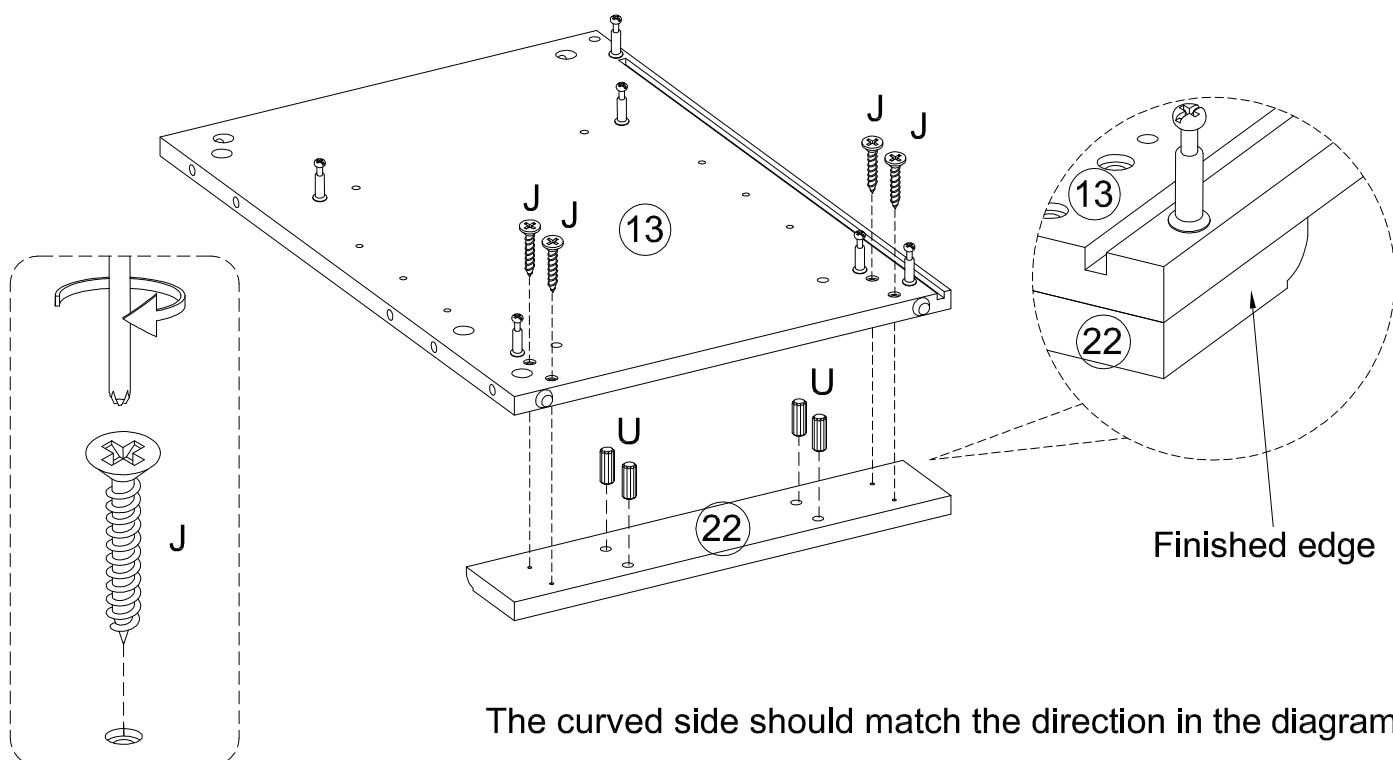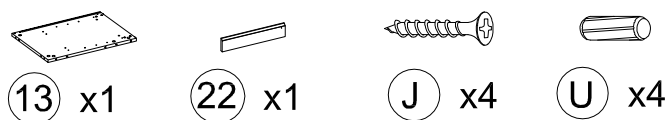

The curved side should match the direction in the diagram.


3



15 x1




23 x1



J x4




U x4

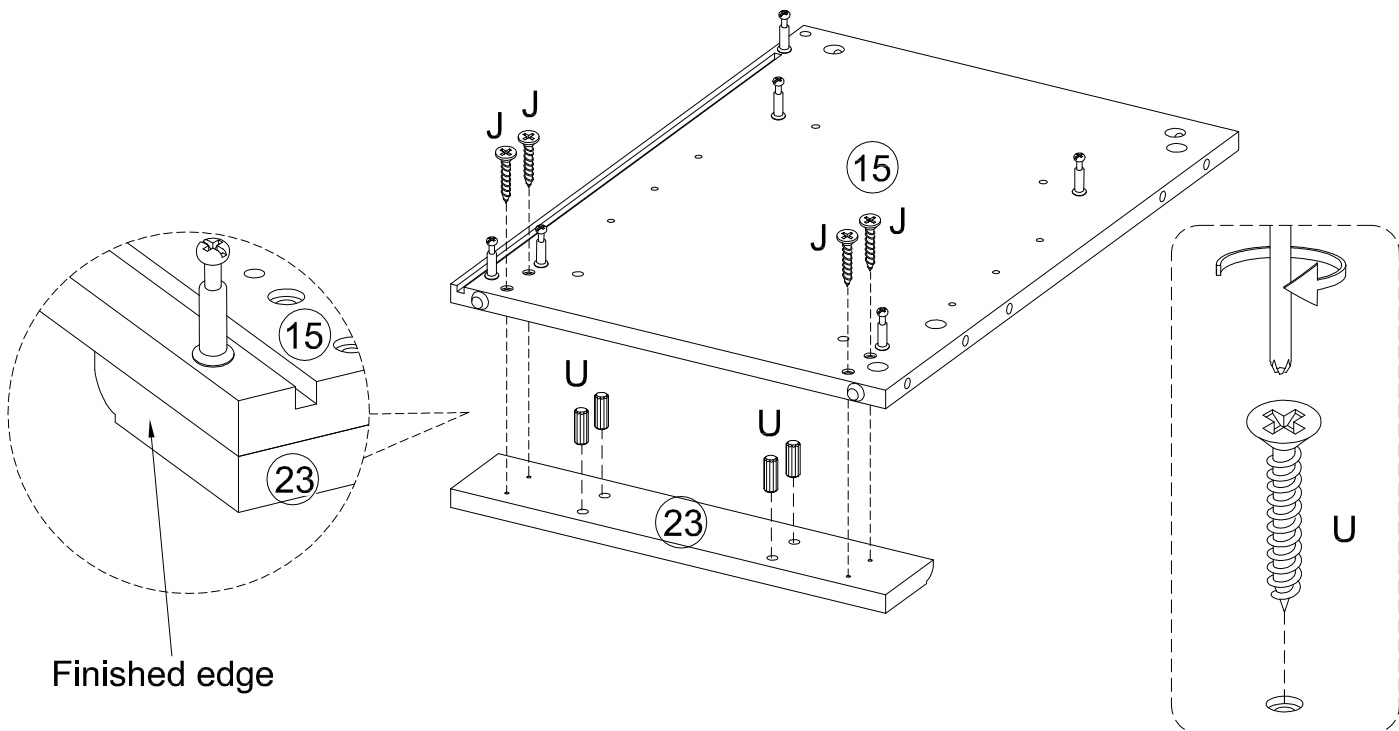


The curved side should match the direction in the diagram.


4



17 x1



18 x1





14 x1






D x4





G x4

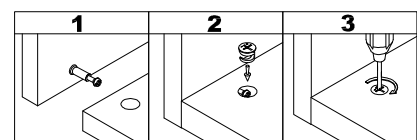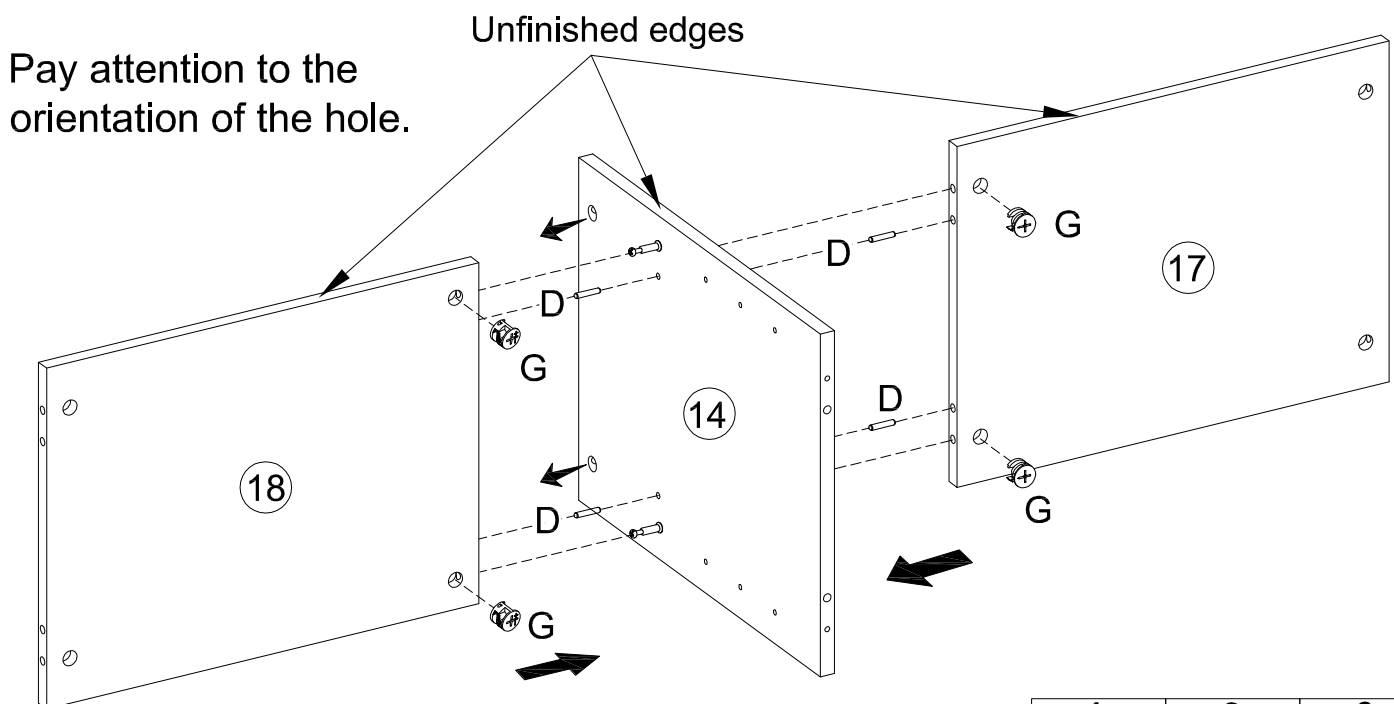

5

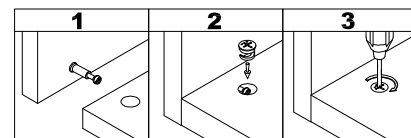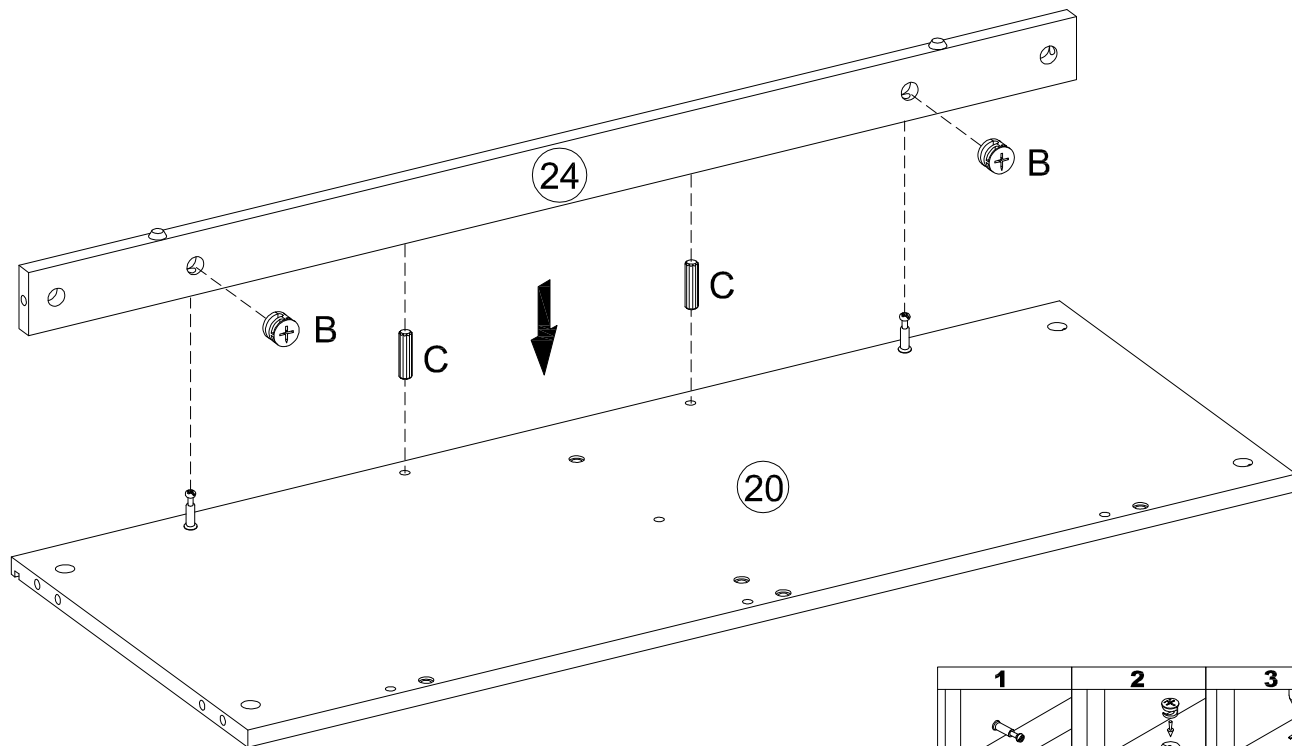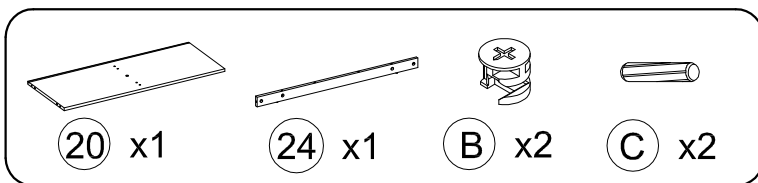

6

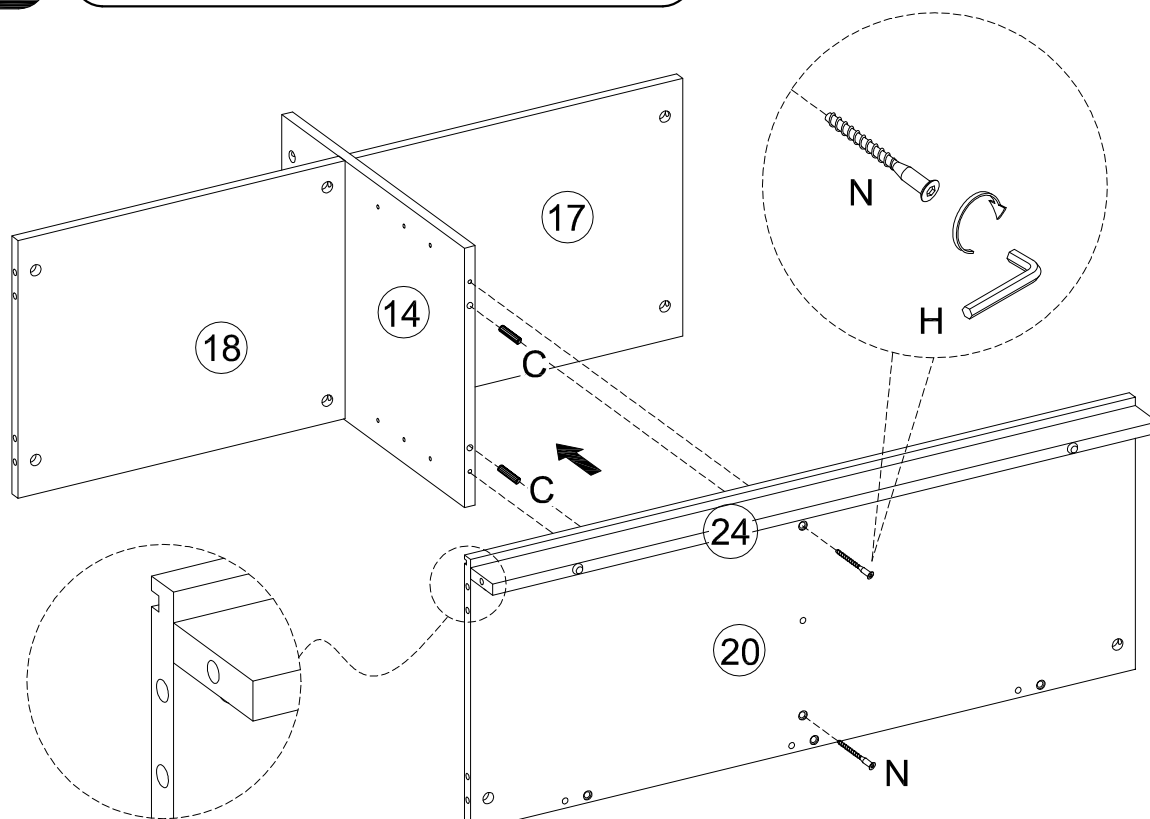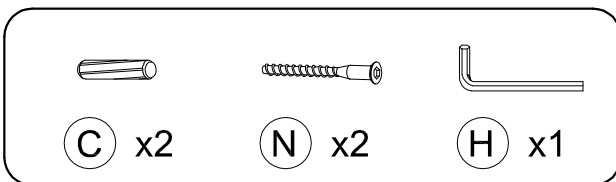

7



16 x1



B x4




C x3



D x2



G x2

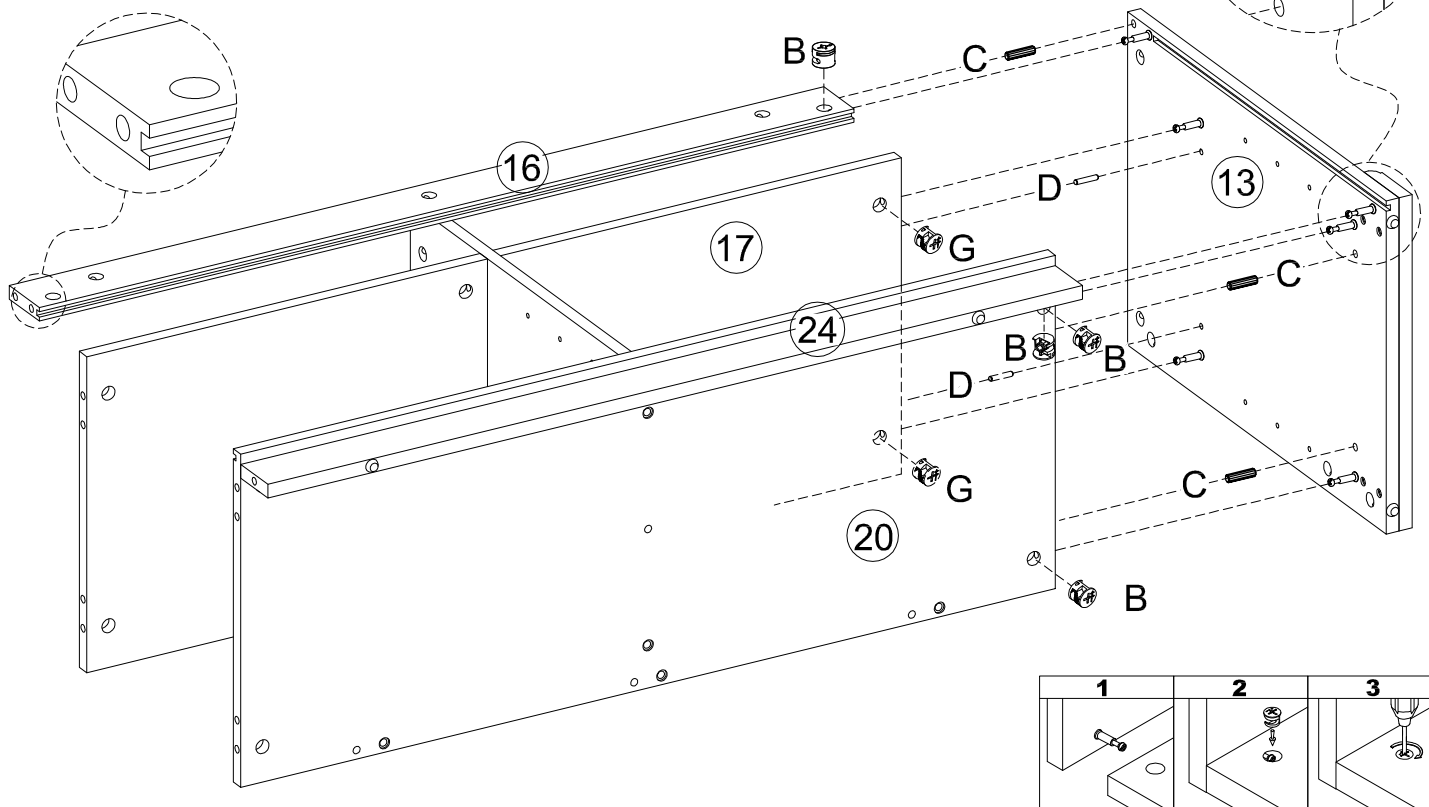


8






27 x1




Pay attention to the cut direction

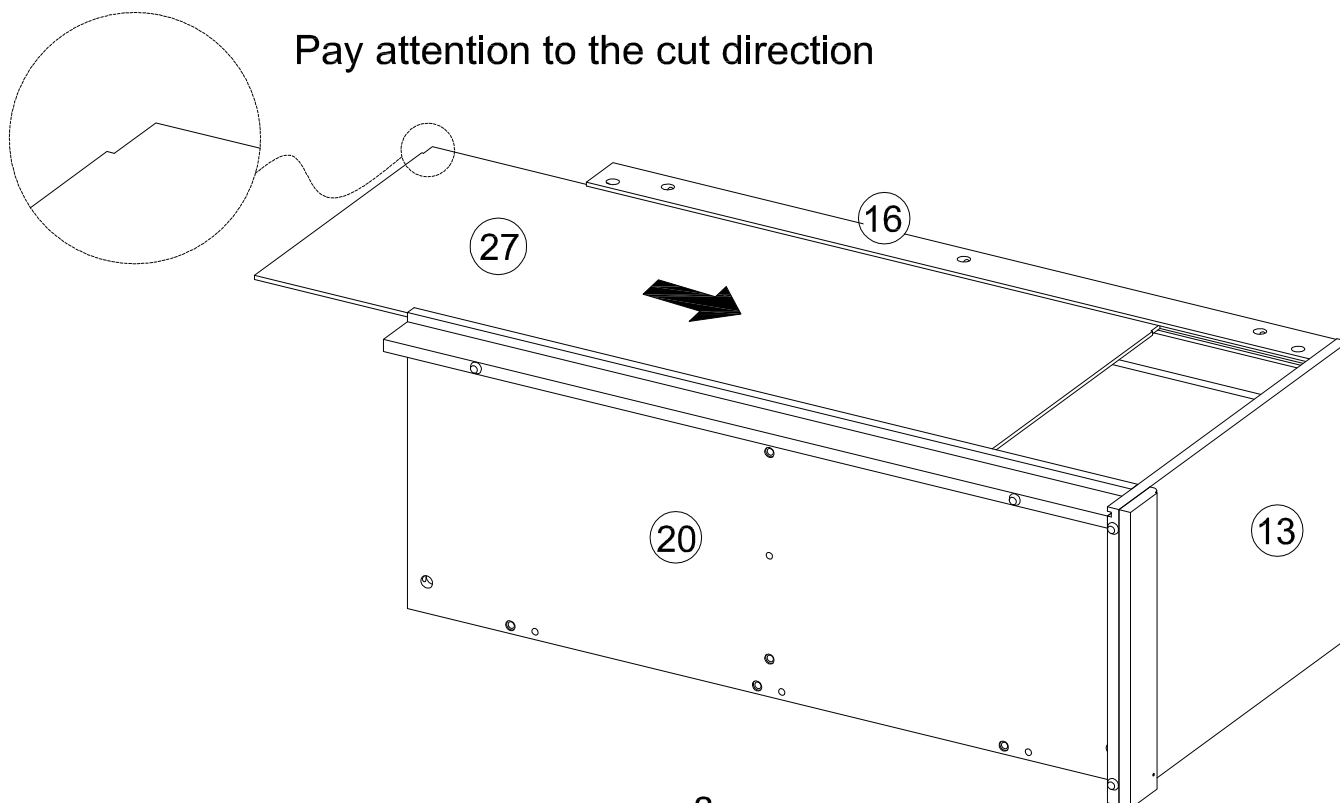



9

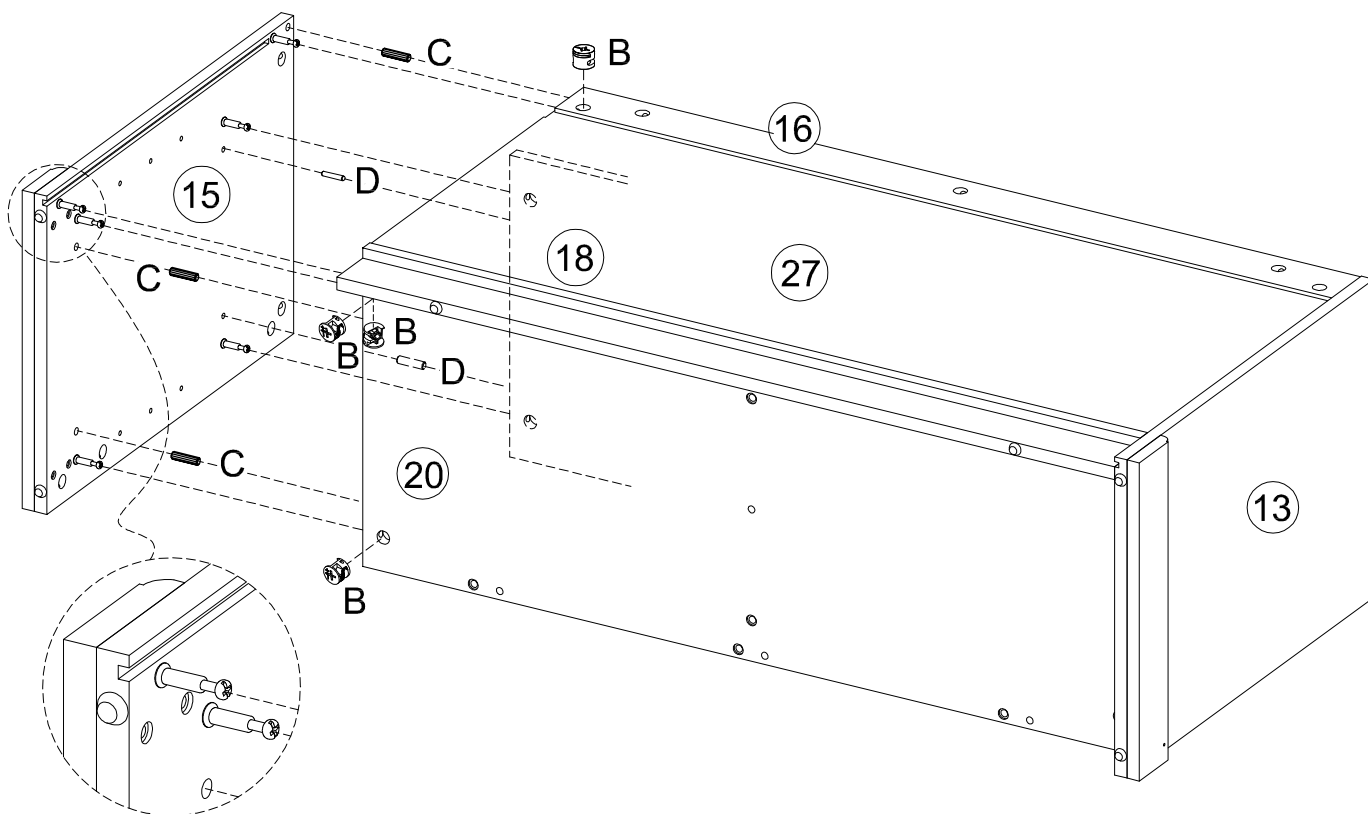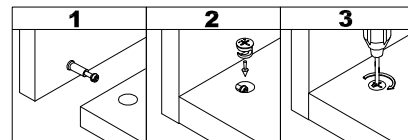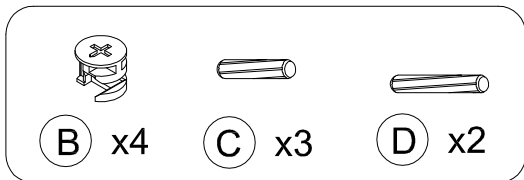



10

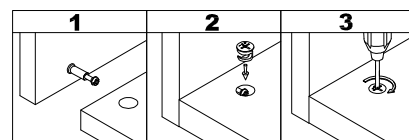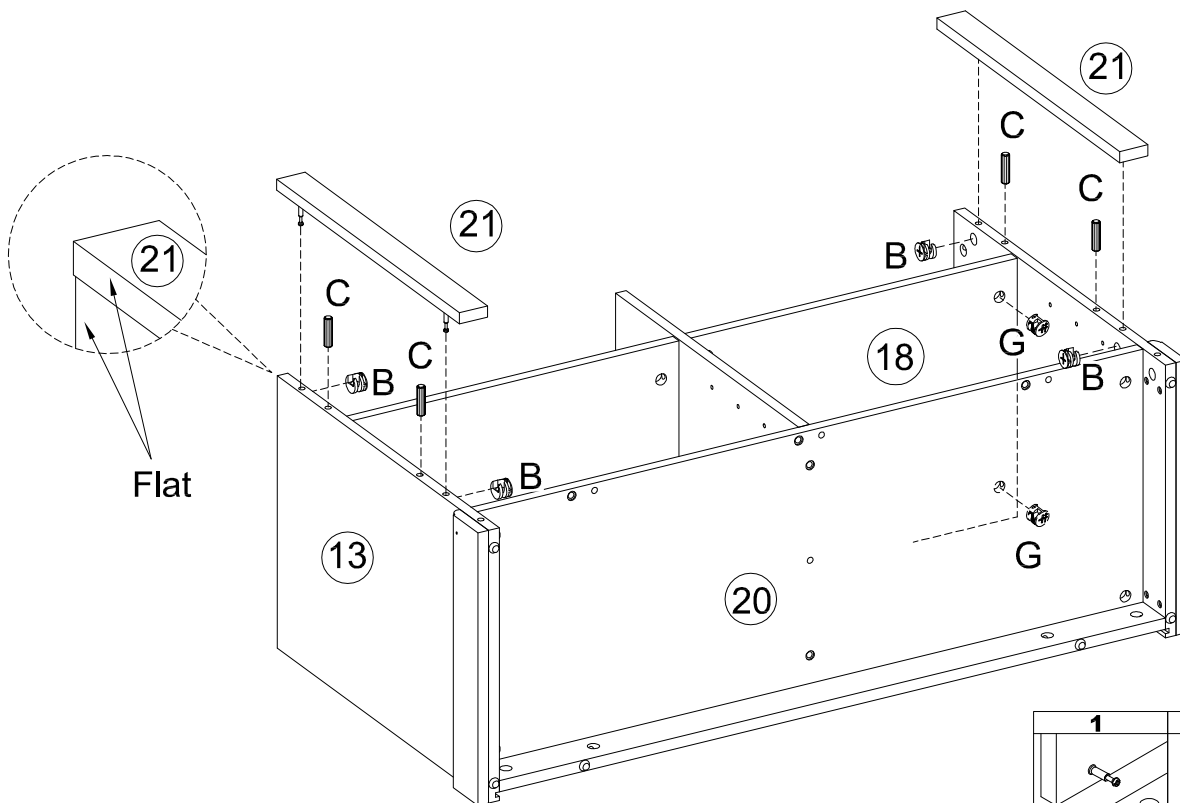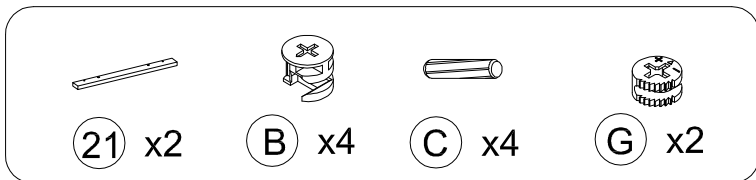


11

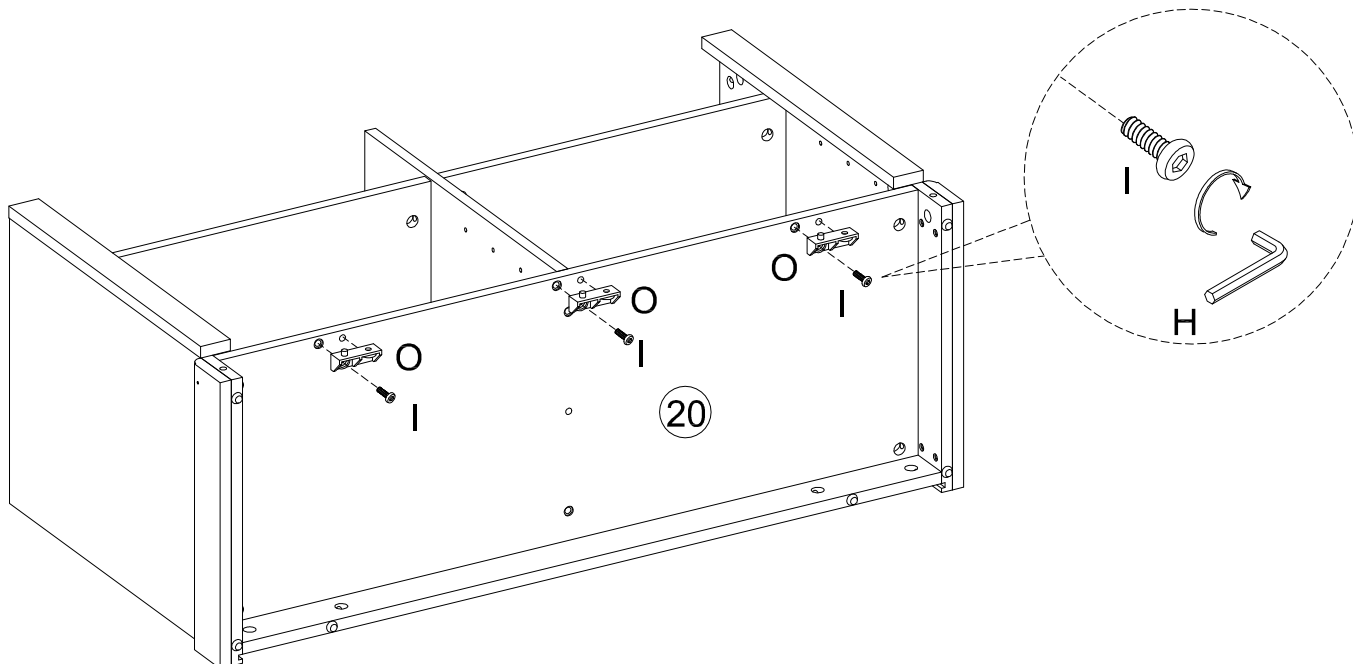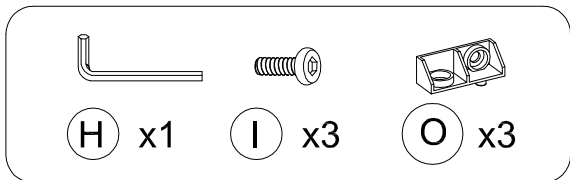


12

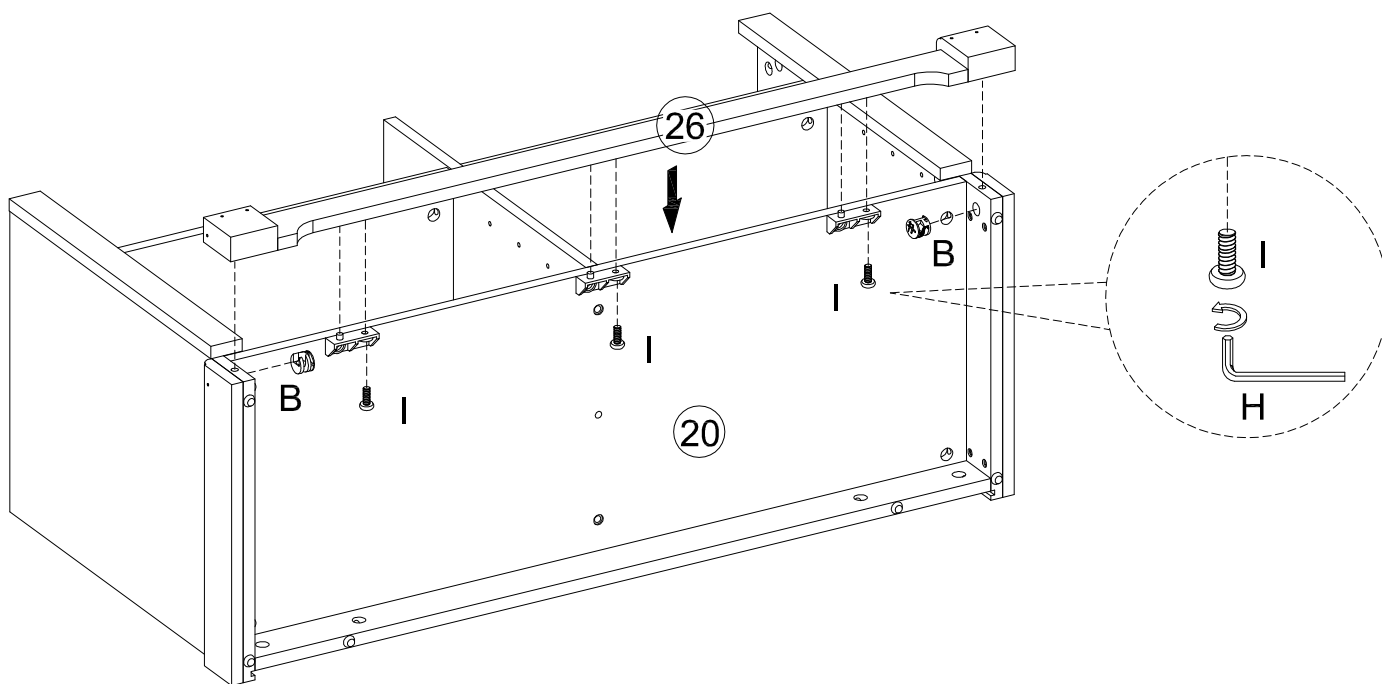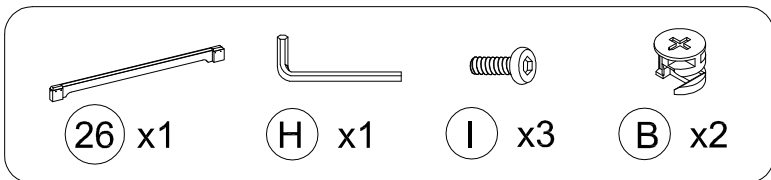



13



 (25) x1

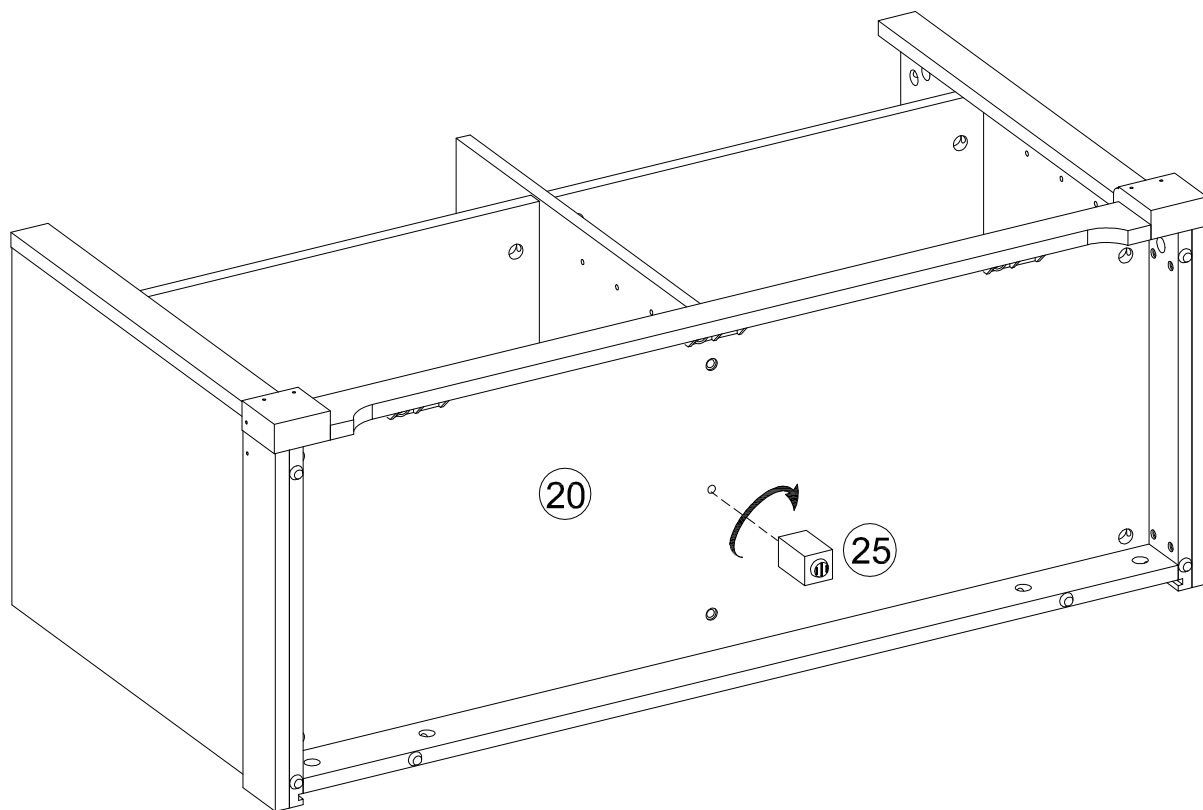



14


 (Q) x8



 (P) x2

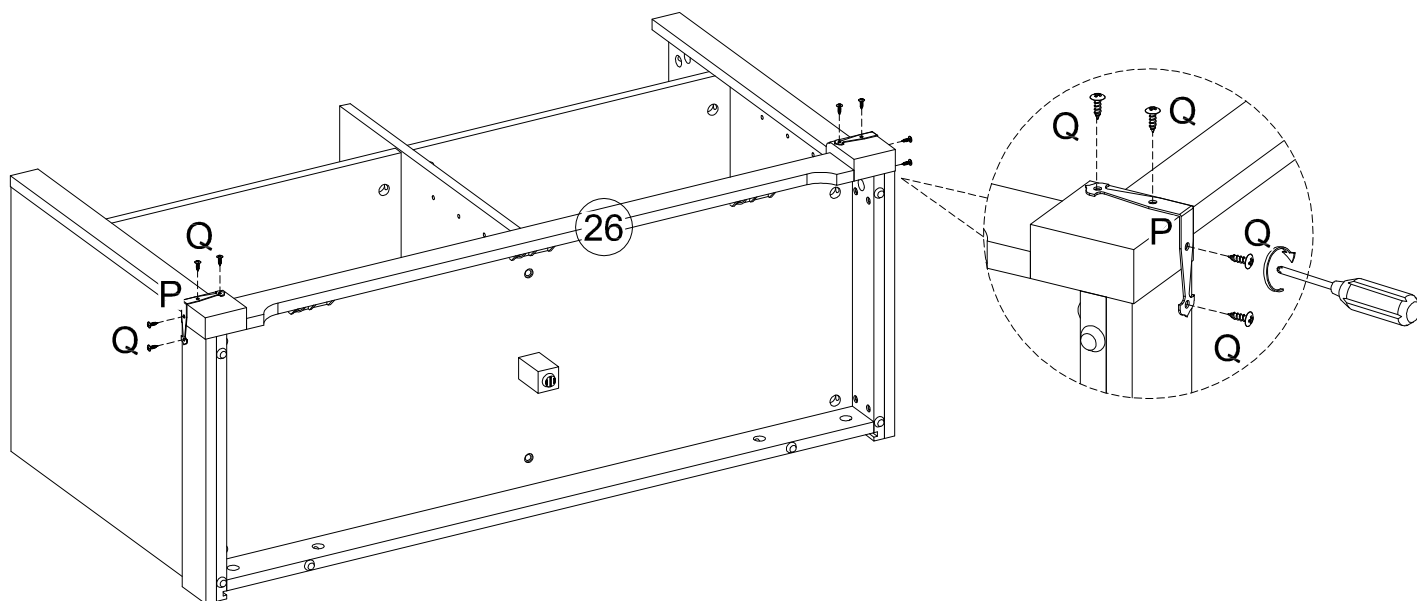



15

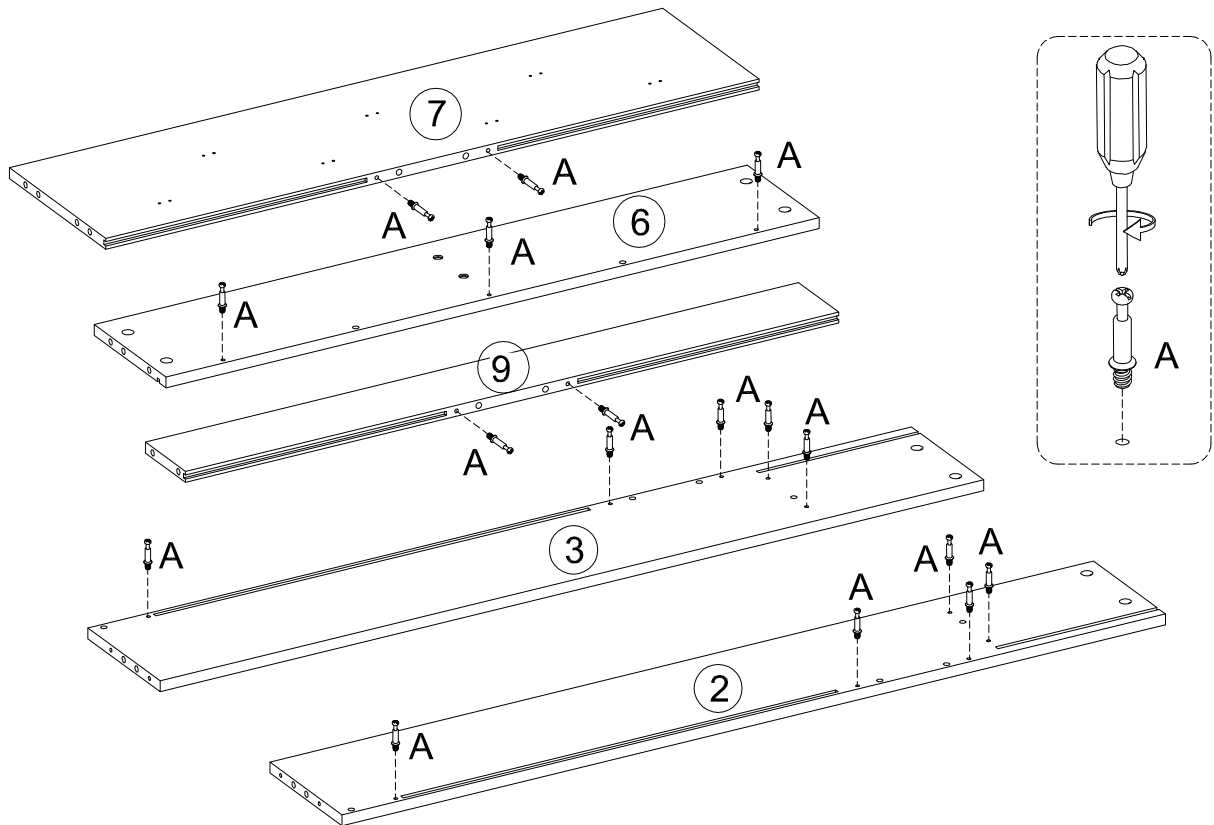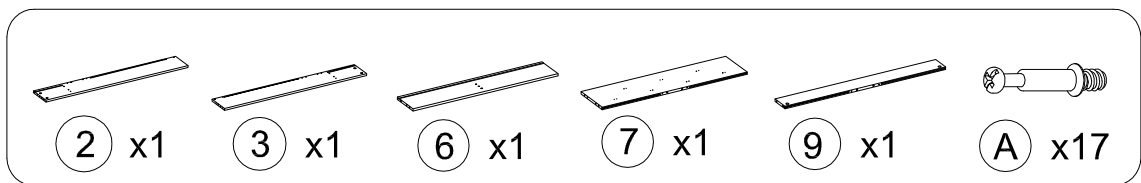

16

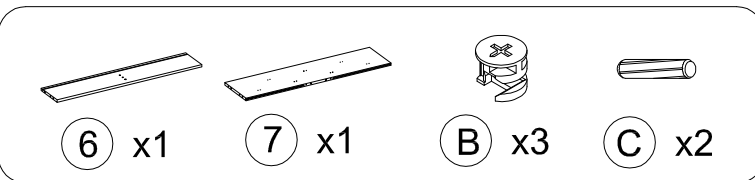

Pay attention to the orientation of the hole.

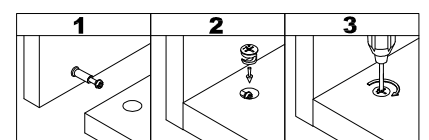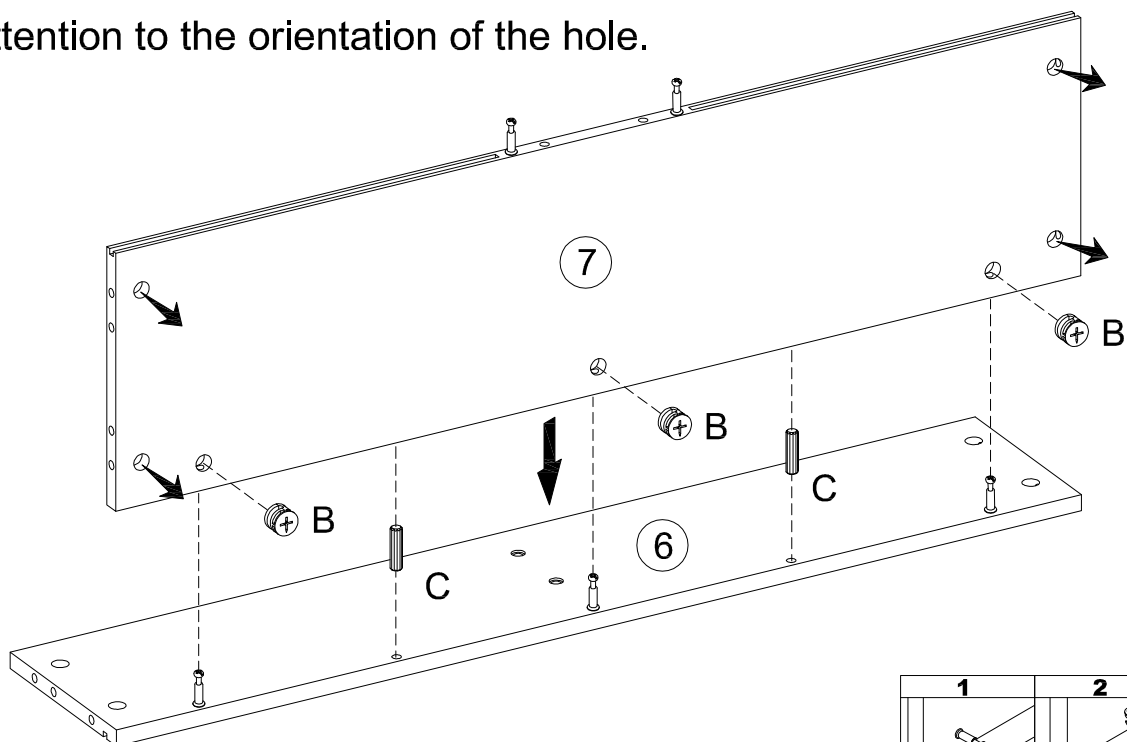

17



5 x1




C x1



N x2



H x1

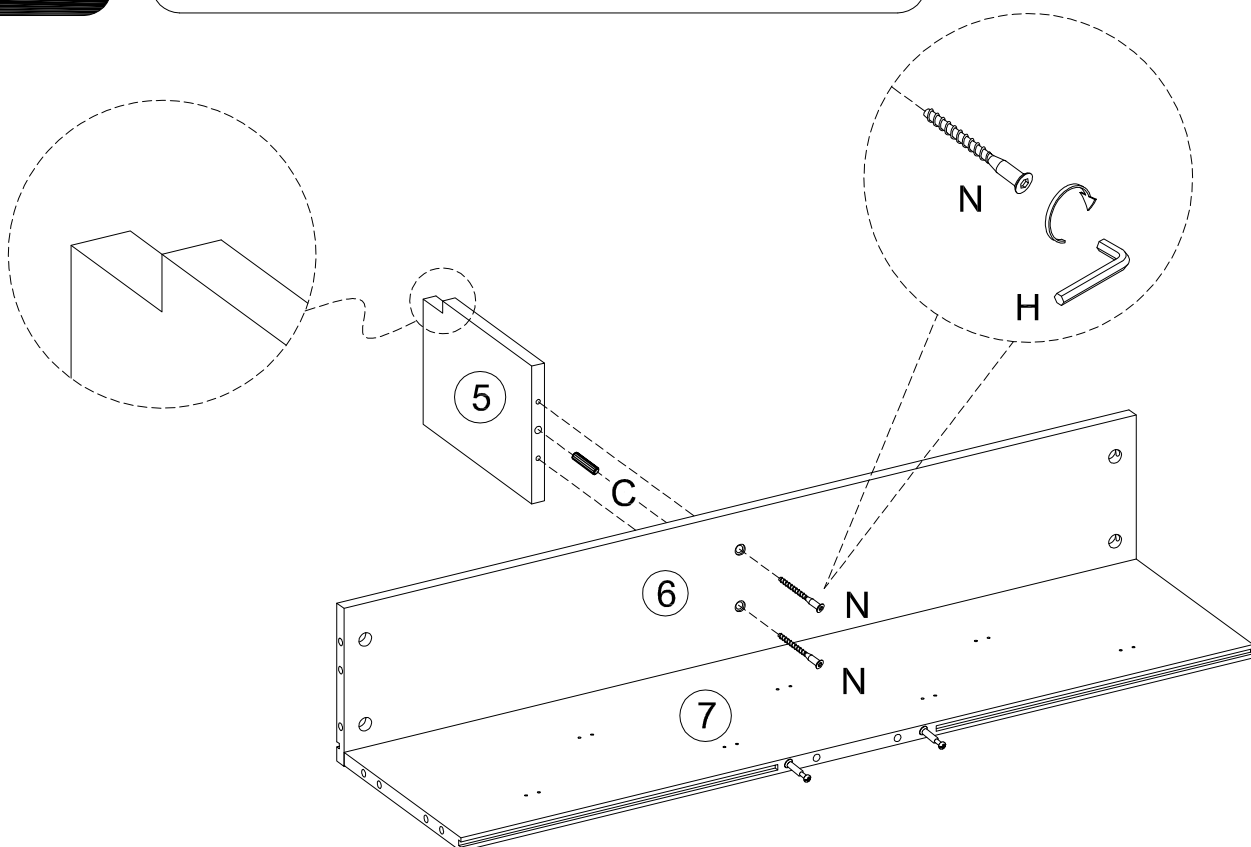


18



L x7



M x14

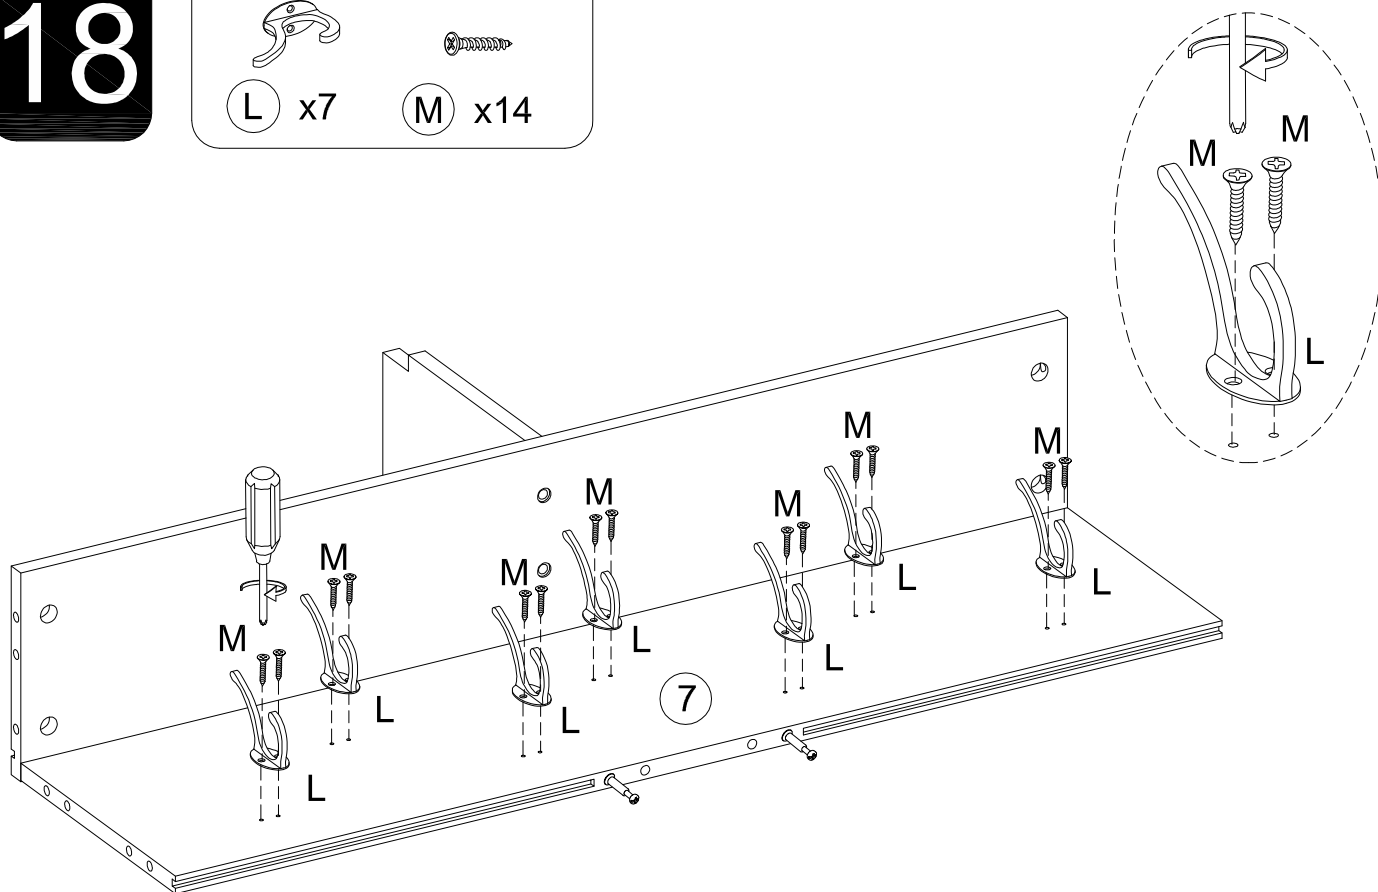

19




8 x1



9 x1




C x4

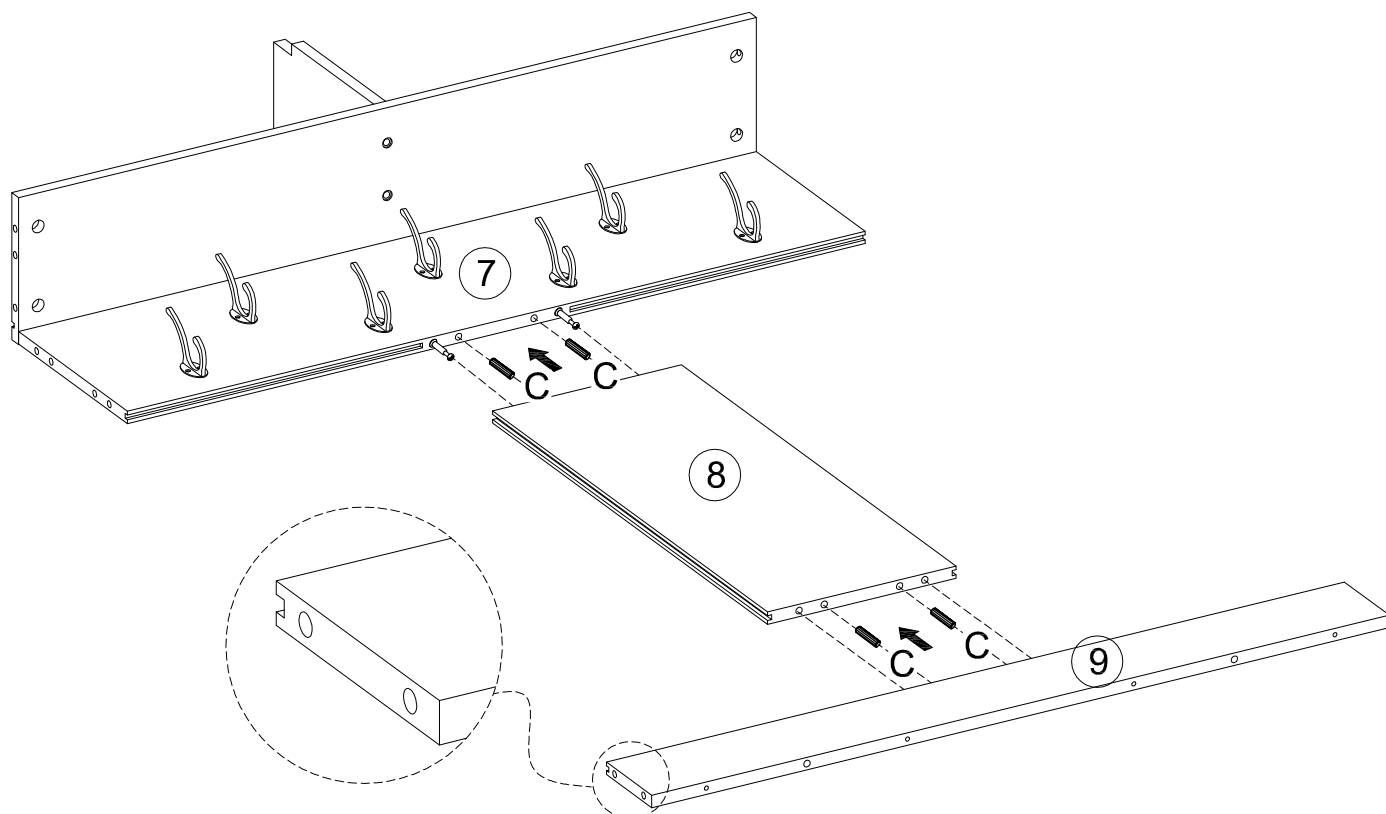

20



11 x2

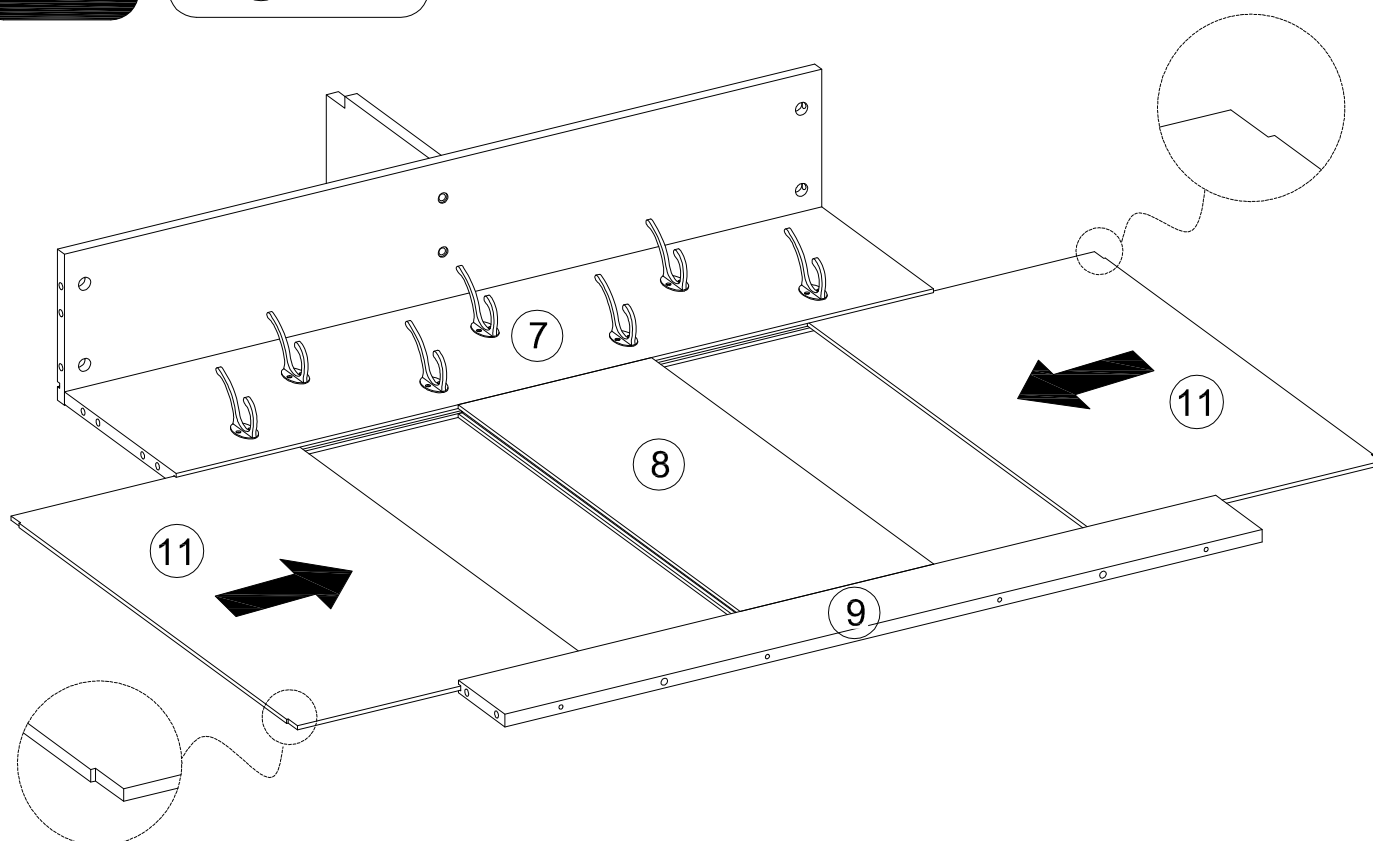

21



2 x1





3 x1



B x4





C x8

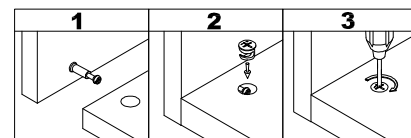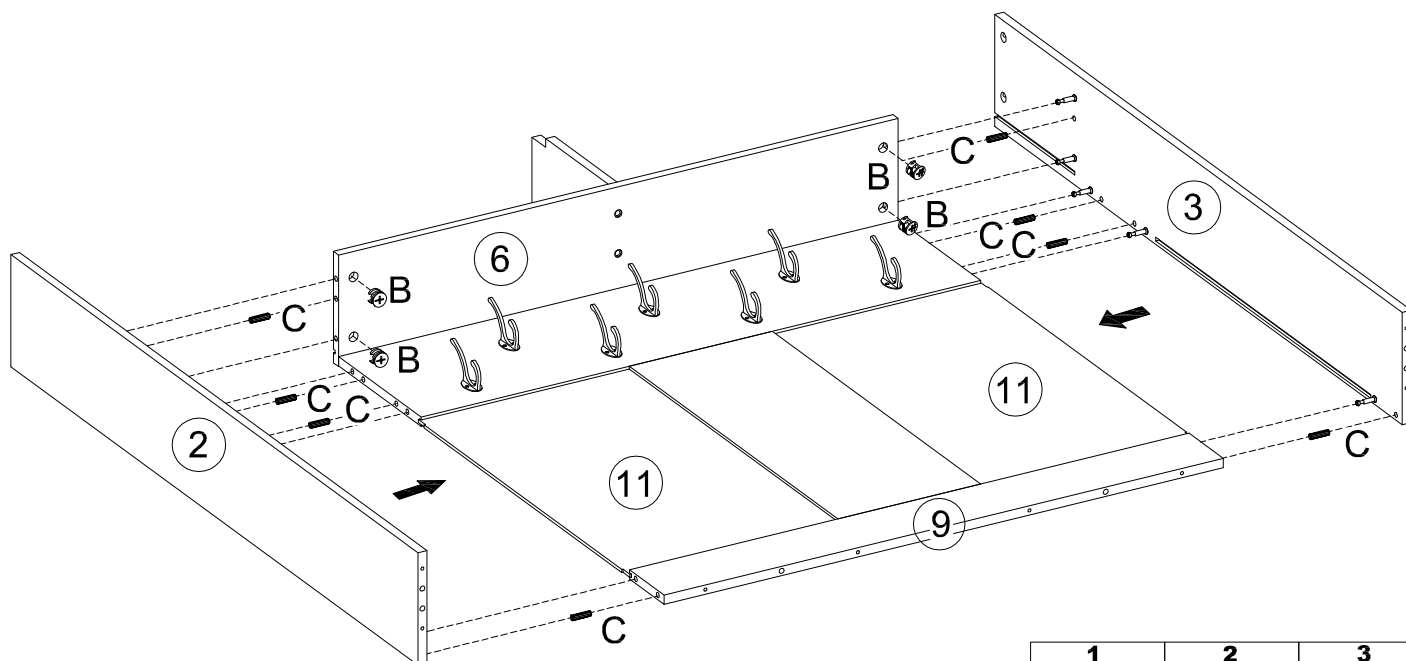



22





B x10

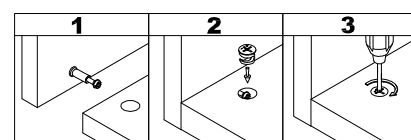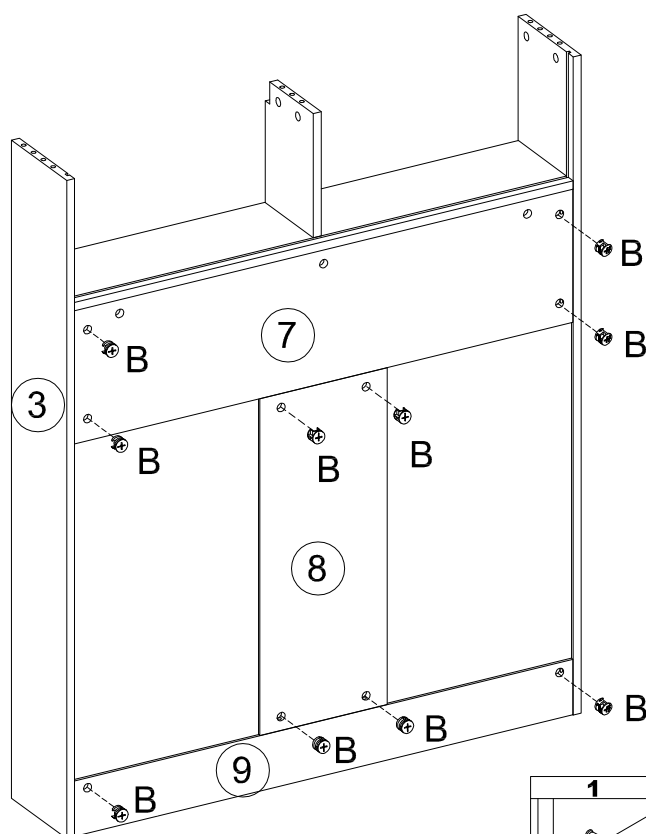

23

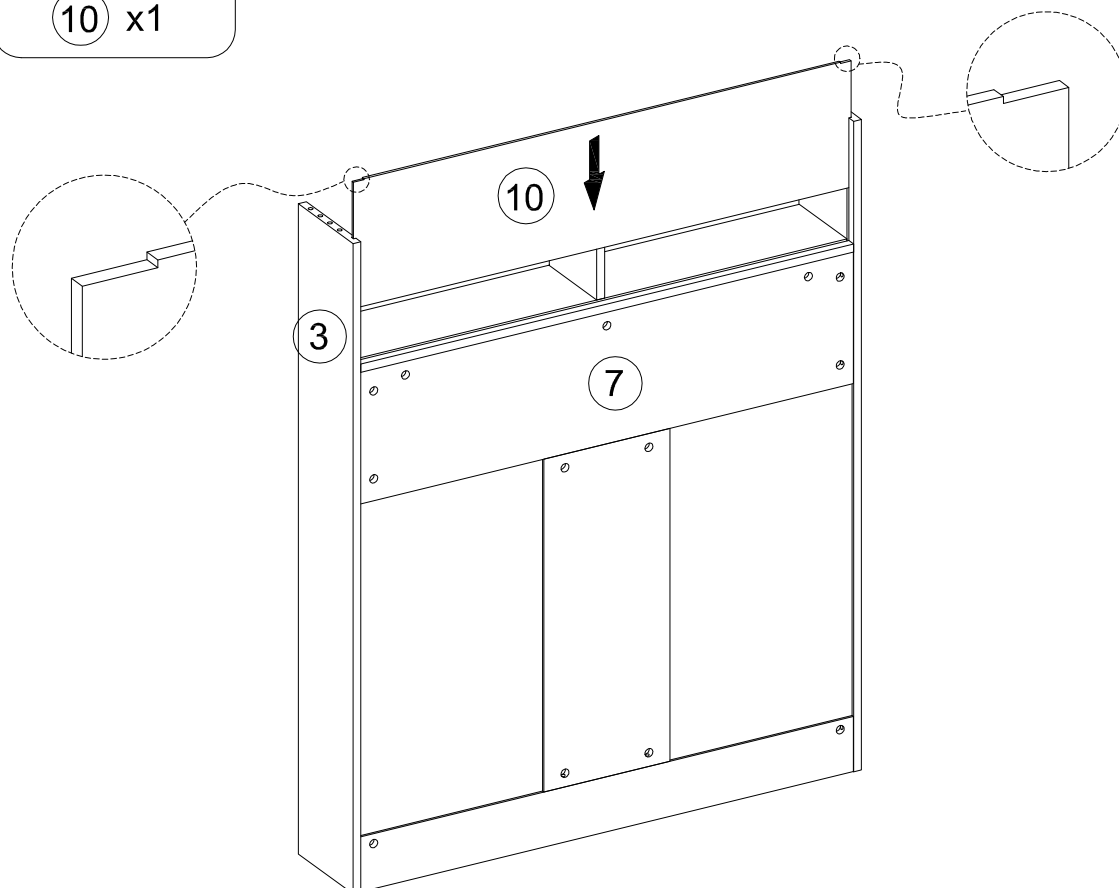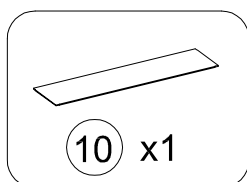

24

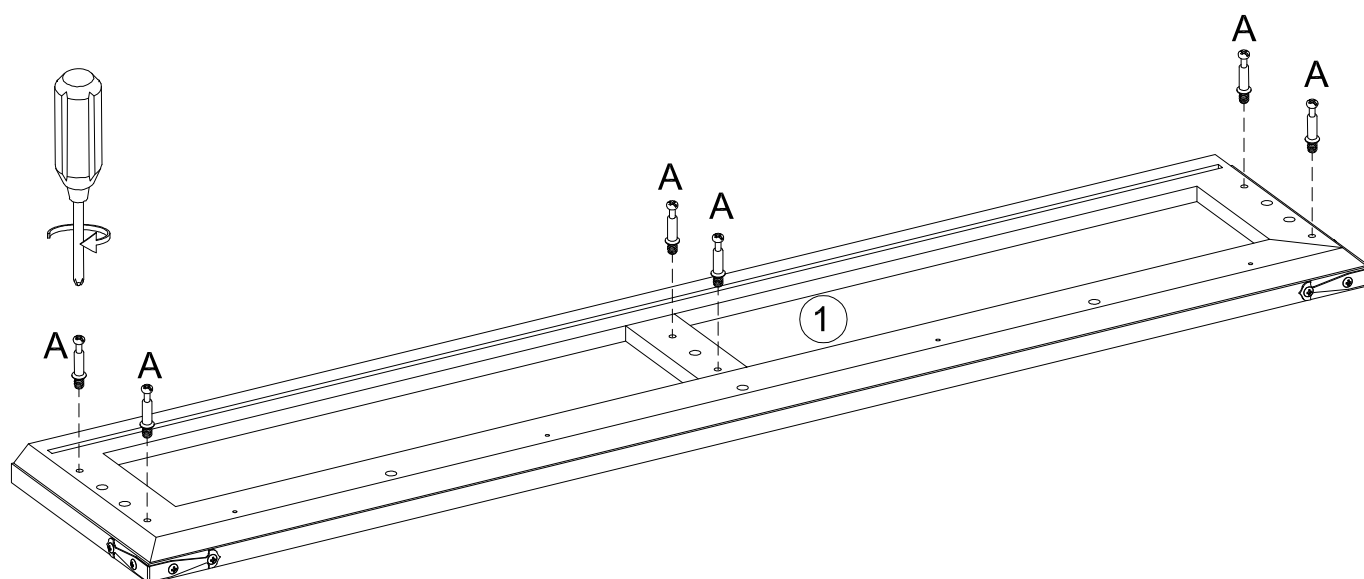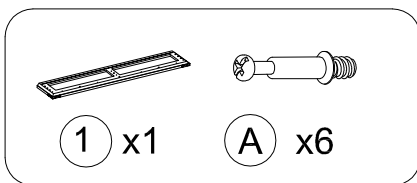


25





④ x1



Ⓢ x3



Ⓕ x4

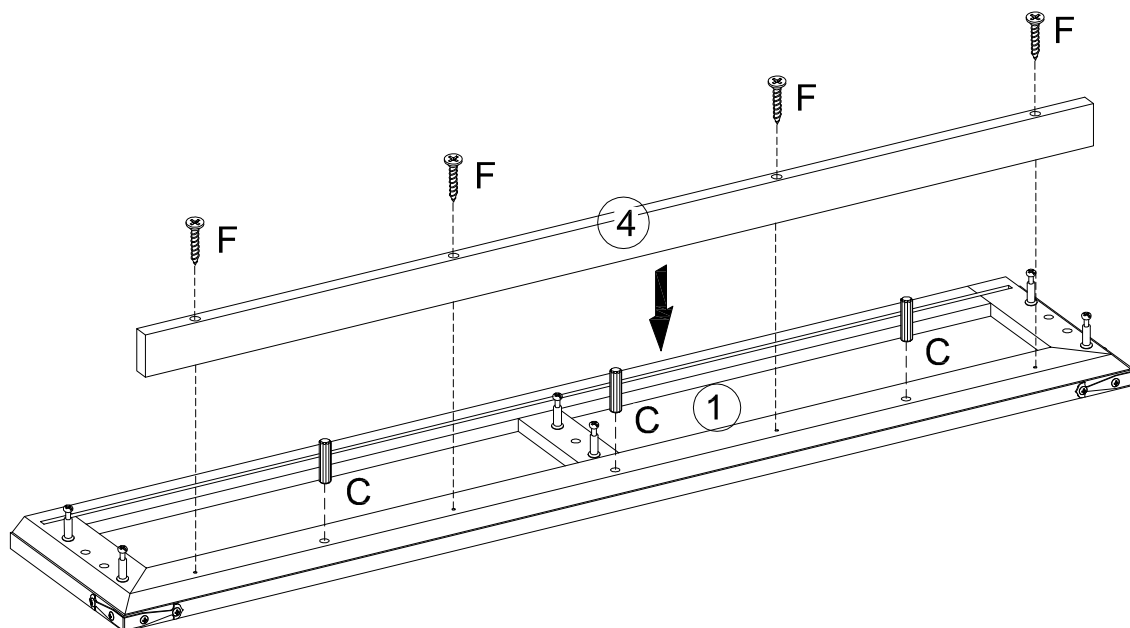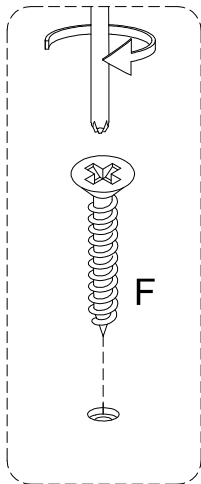




26




Ⓑ x6



Ⓢ x5

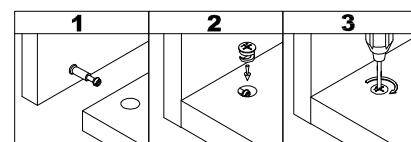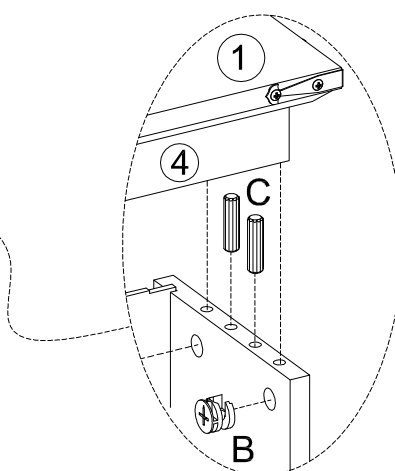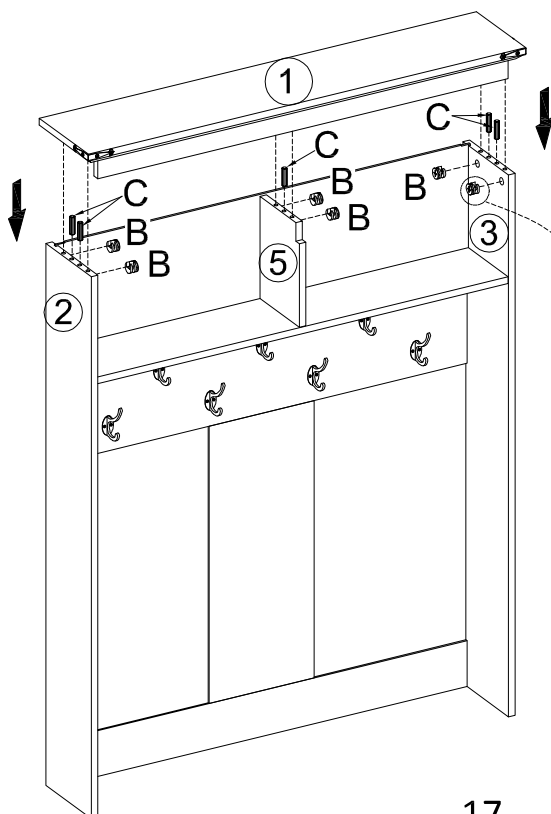


27



12 x1




C x6




N x8




H x1

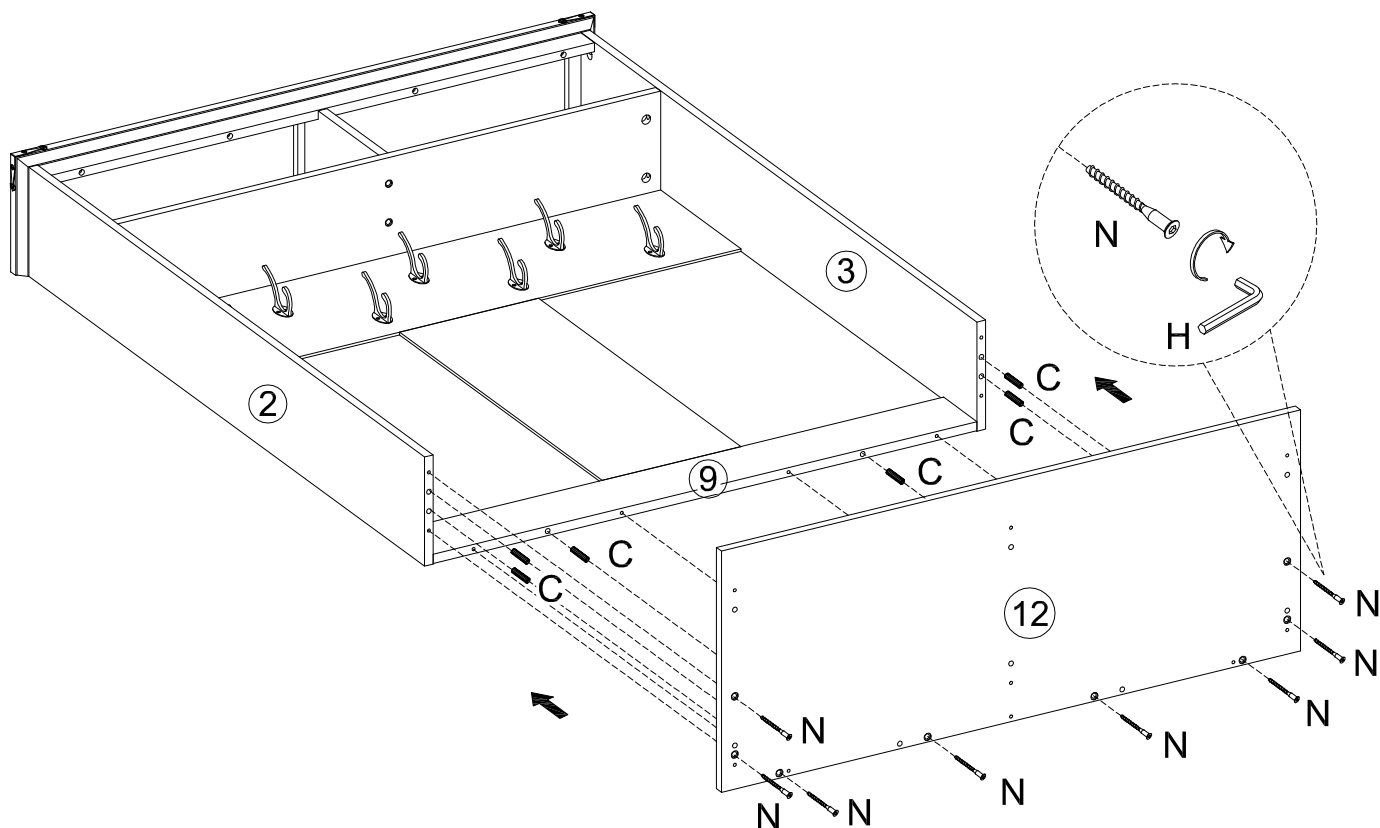




28




A x9

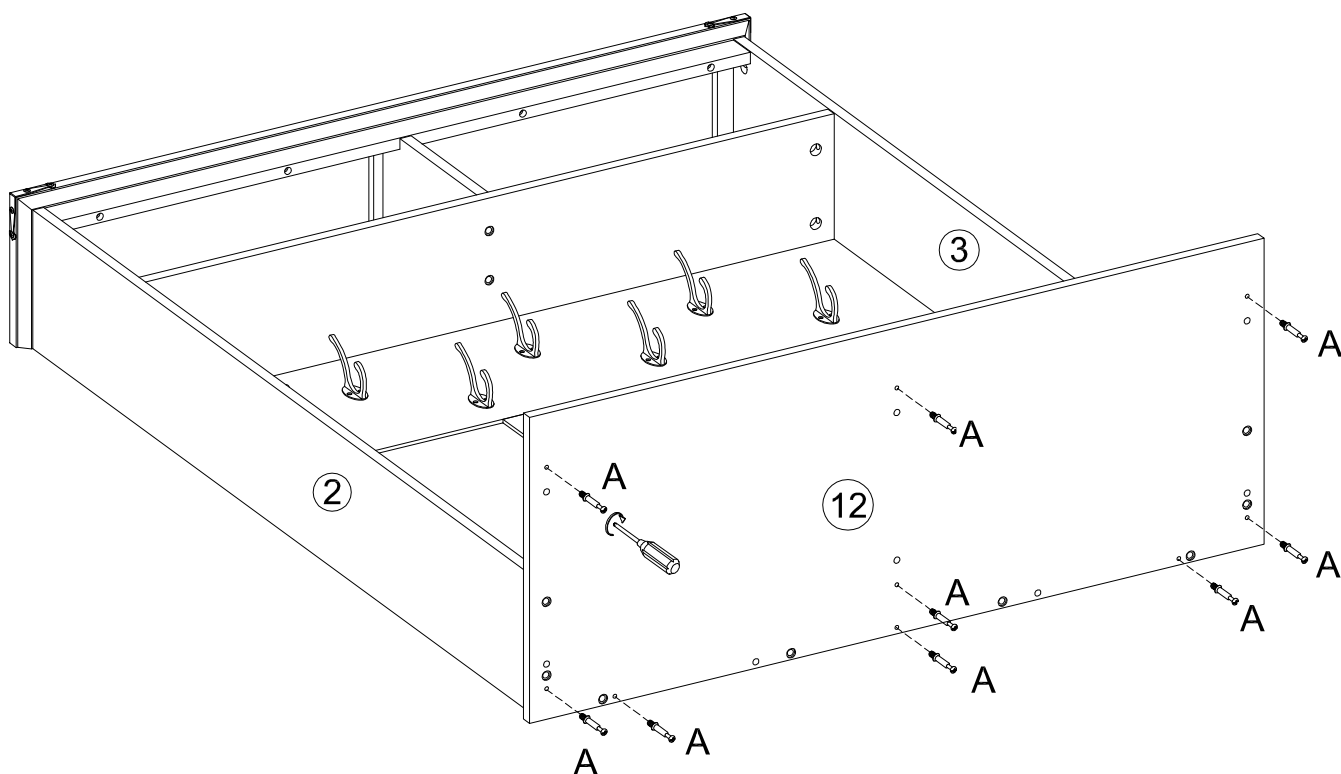

29

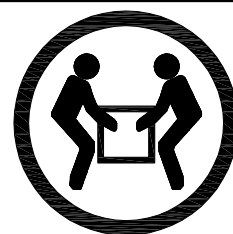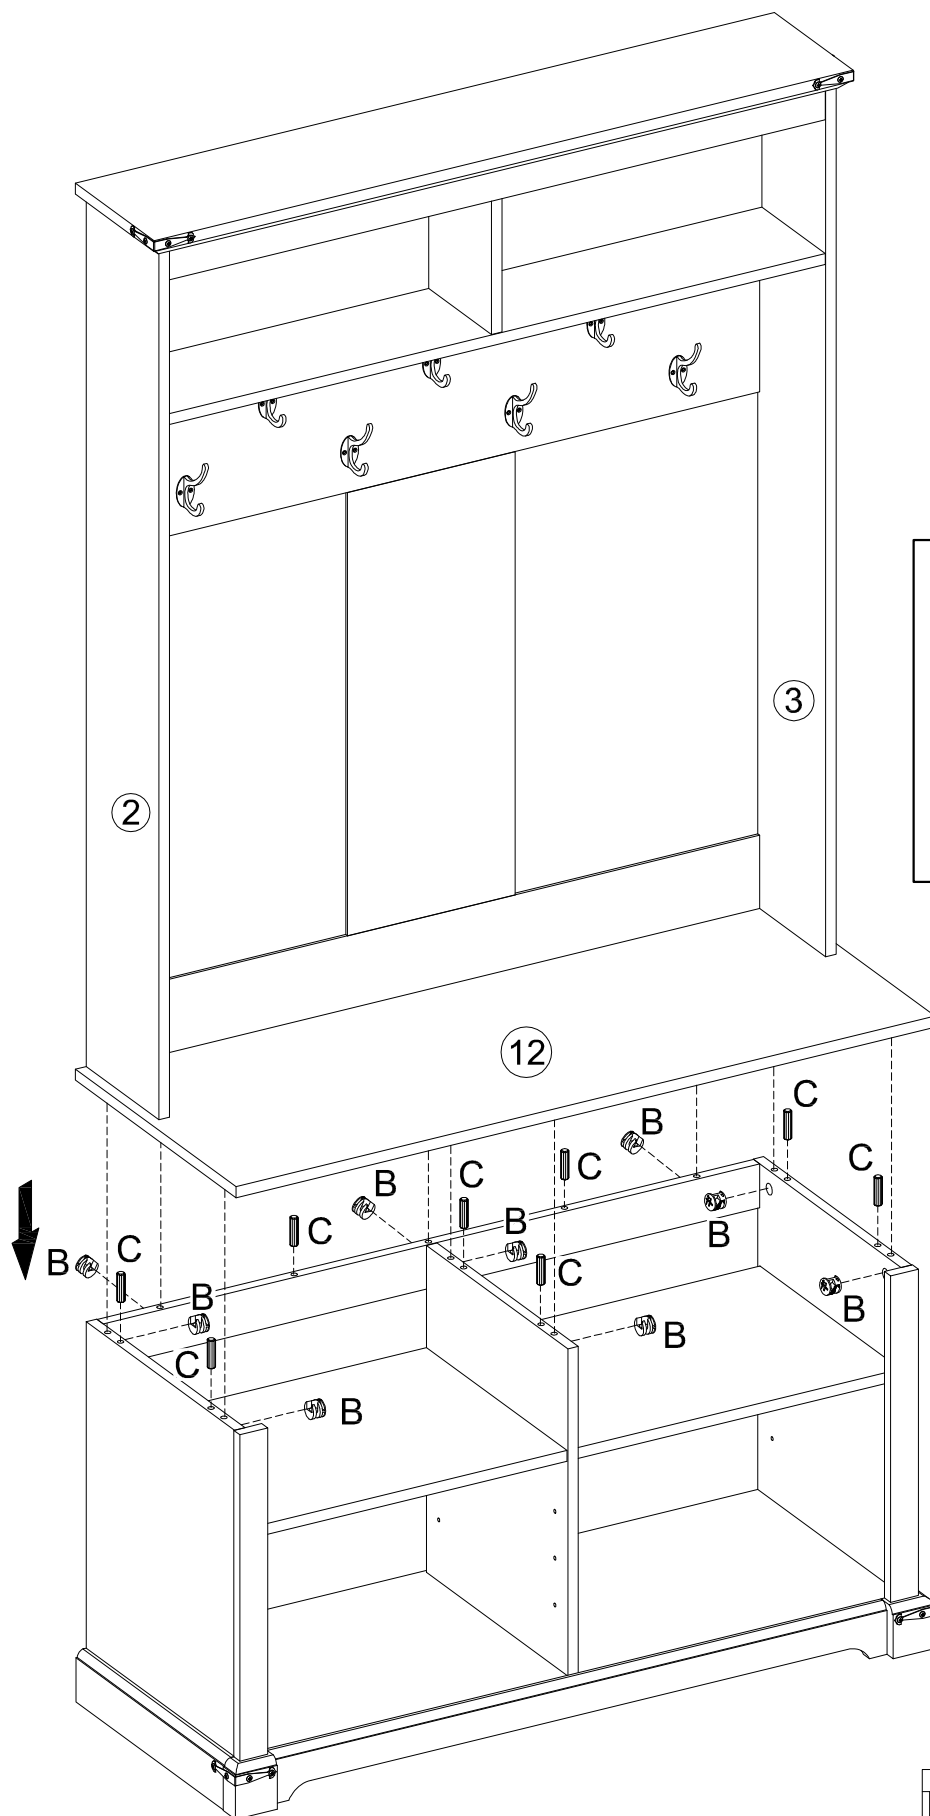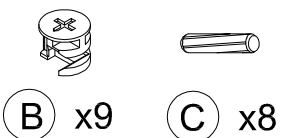

CAUTION: Heavy! You may need assistance with this step.

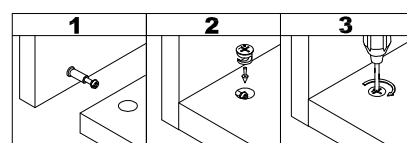


30



(S) x18



(T) x18



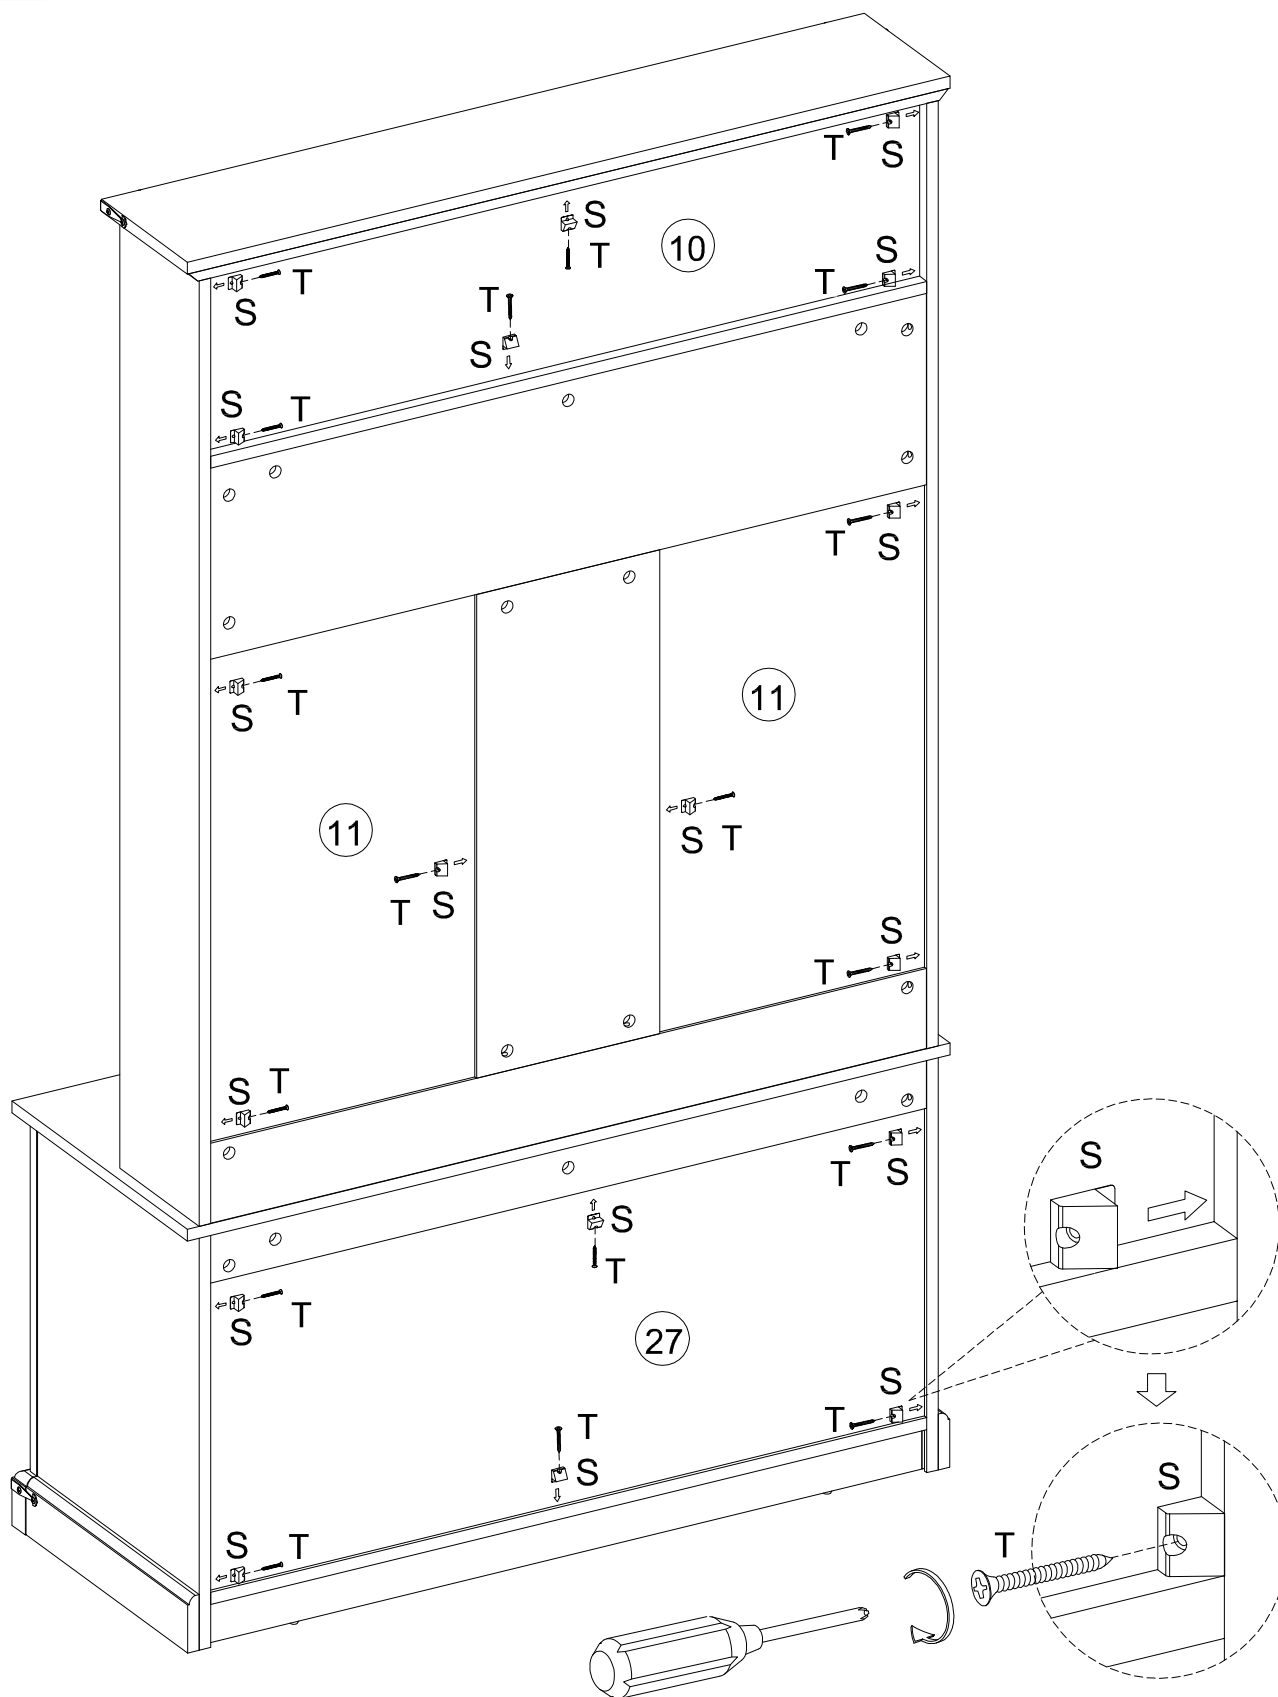


Before attaching the back panel make sure that it is square to the unit .

31


19 x2

K x8

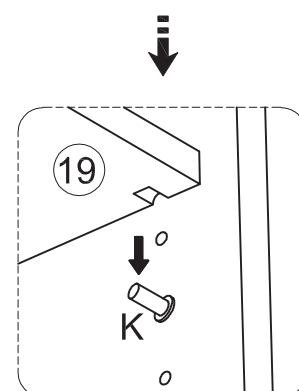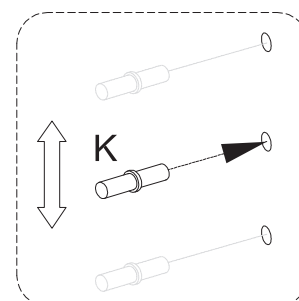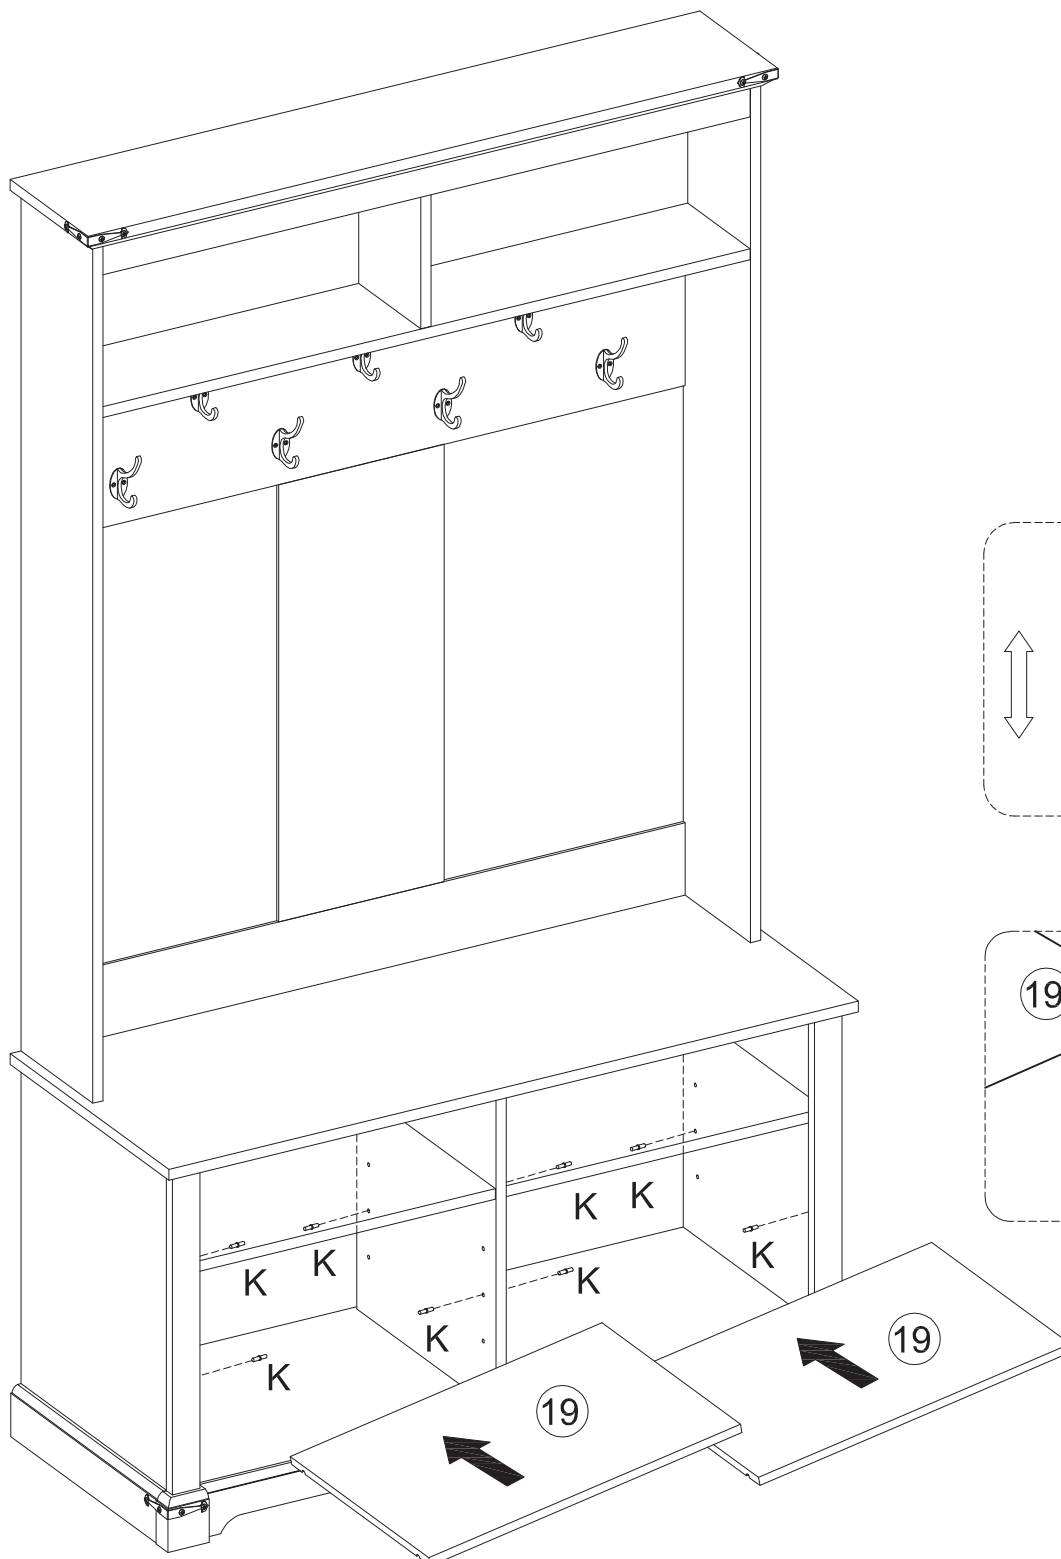

32

E x 56

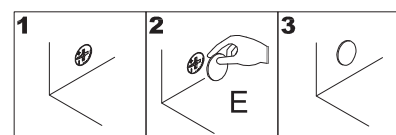

.Stick stickers (E) on cam locks (B)/(G).

33




R x2

WARNING

You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.



Short Screw

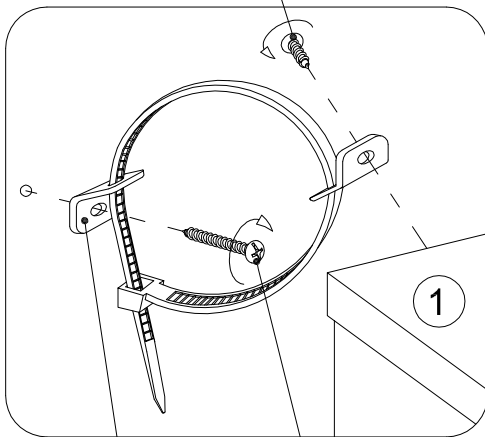

Metal Bracket

Long Screw

1


Wooden Stud

Wall

R

R

1

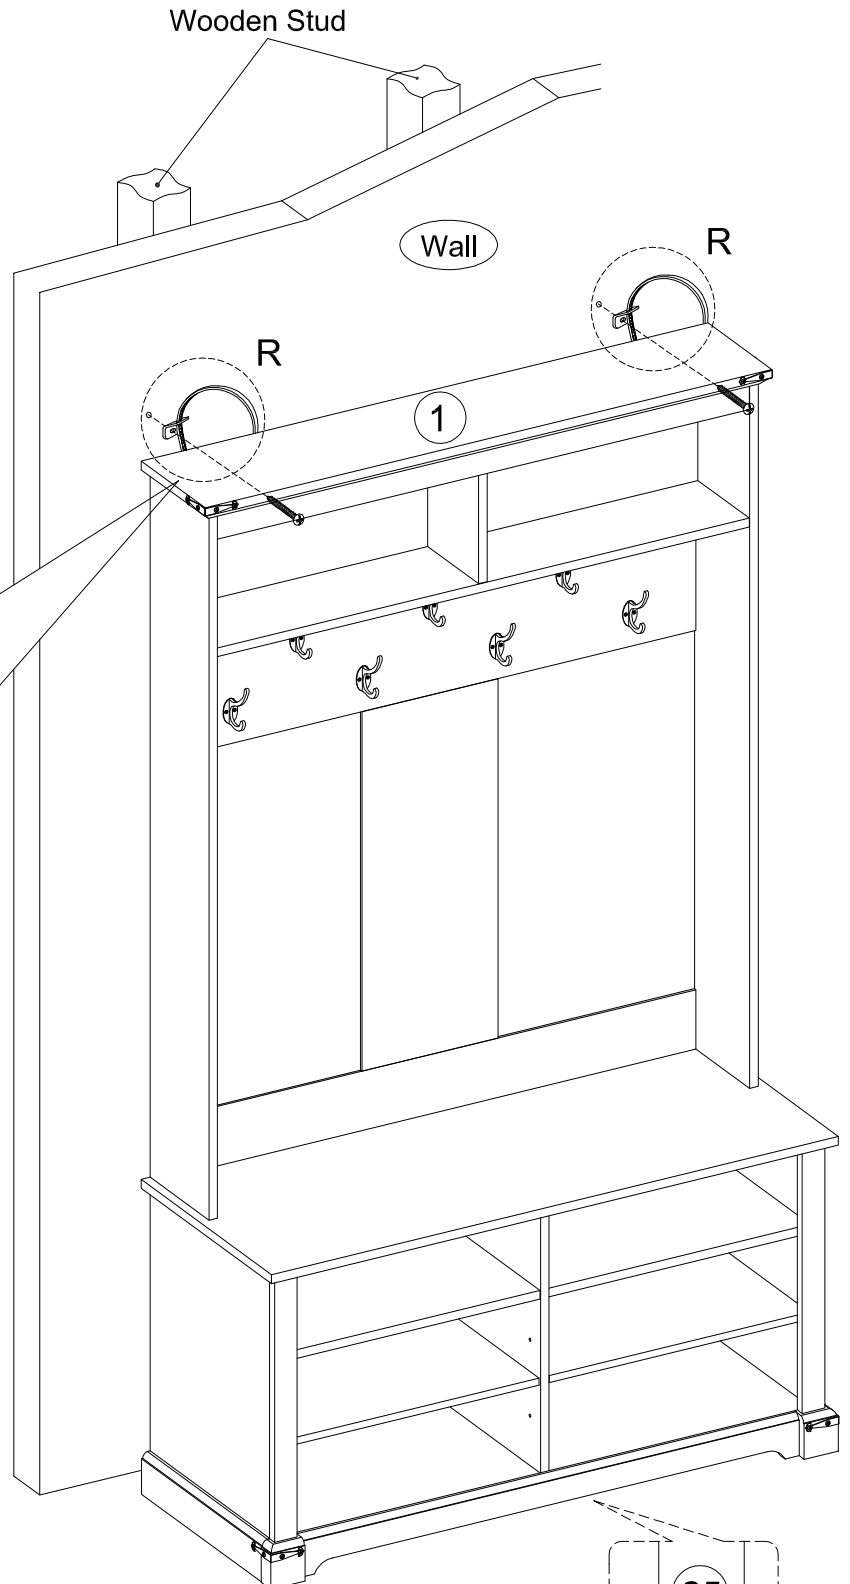

25

Installation Completed