

**6**26-679-3588

service@getprohome.com

www.getprohome.com

• 162 Atlantic St, Pomona, CA 91768

## **ASSEMBLY INSTRUCTIONS**

**BATH VANITY TOP** 



PRODUCT INSTRUCTION VIDEO

PRODUCT SIZE: 43"







NOTE: Any size of the vanity's intallation steps are the same.

## **INSTALLATION STEPS**

- 1.Prepare the Vanity: Make sure the vanity is in place and securely attached to the wall.
- 2.Seal the Edges: To prevent water damage and ensure a clean finish, apply a bead of silicone caulk along the edges where the countertop meets the vanity.

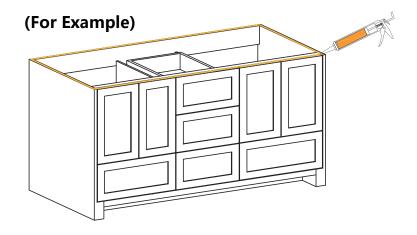

**3.Attach the Countertop:** Secure the solid surface countertop on the vanity.

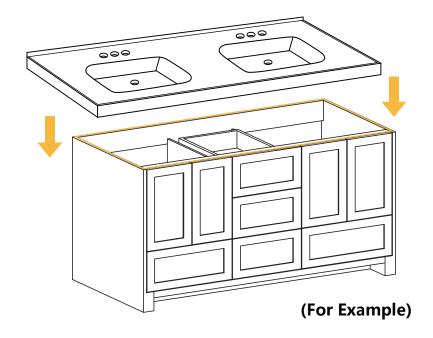

## HOME SERVICES



INSTALLATION VIDEO

## Missing Part or Defective?

Please Contact the Customer Service Team

- service@getprohome.com
- **2** 626 679 3588