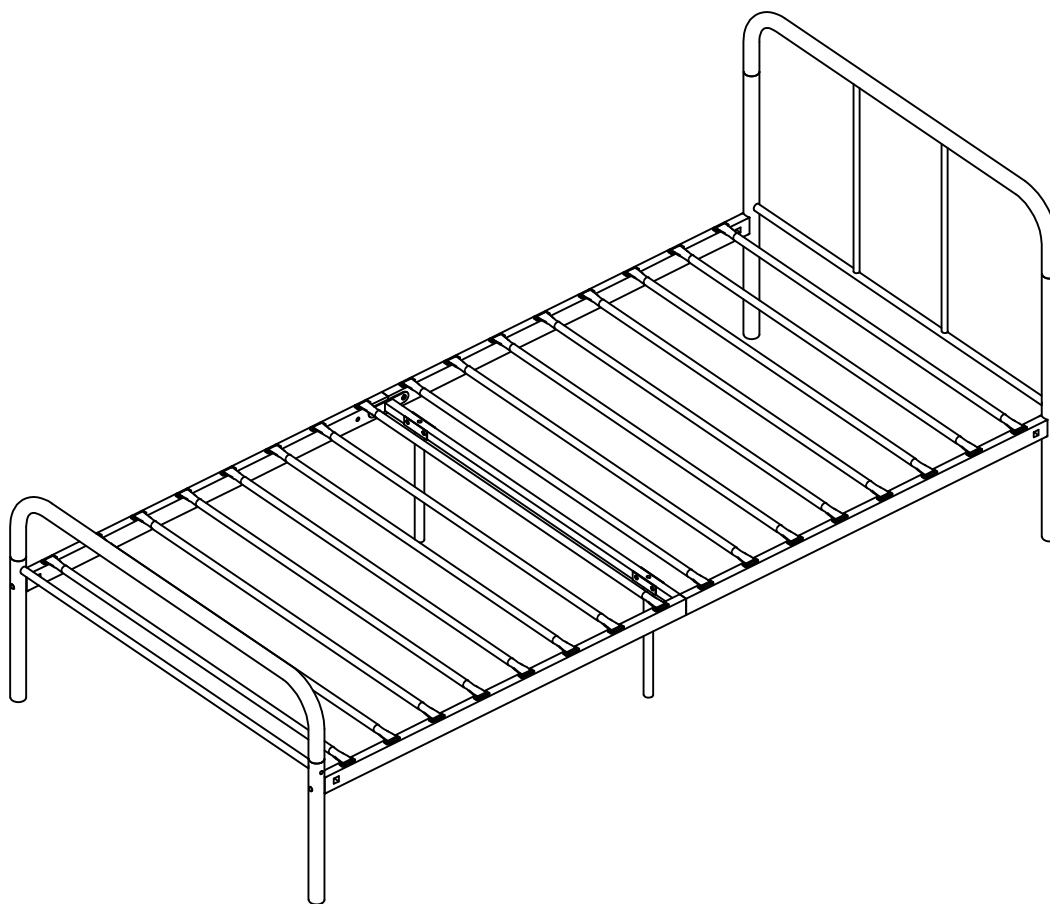
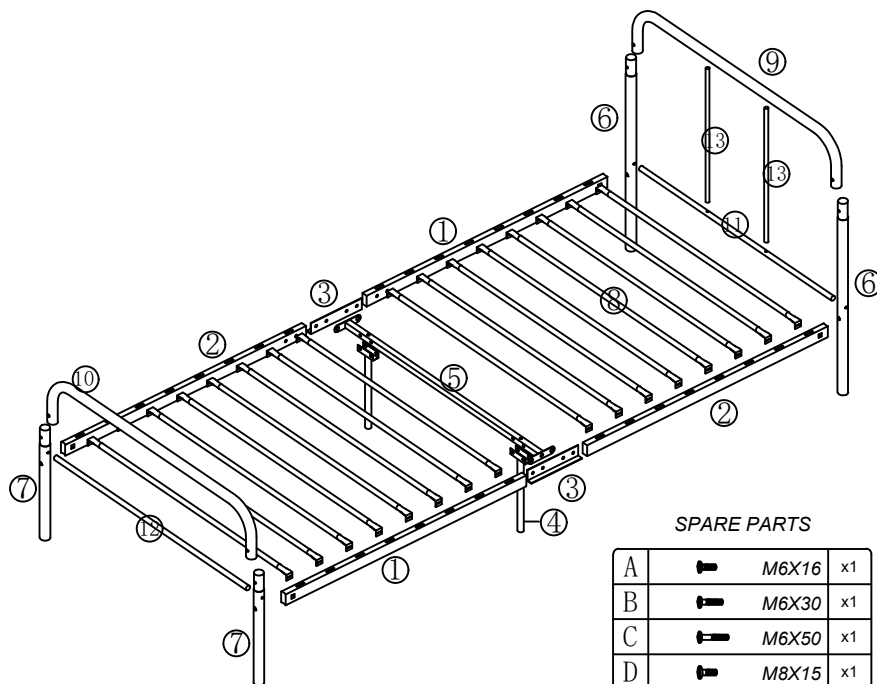




WARNING













·Please don't fasten all screws until you assemble full bed.

A		M6X16	x4
B		M6X30	x6
C		M6X50	x4
D		M8X15	x8
E		M8X35	x2
F		M8X70	x4
G		M6X18	x8
H			x12
I			x2
J			x4
K			x32
L		M4	x2
M		M5	x1




SPARE PARTS


A		M6X16	x1
B		M6X30	x1
C		M6X50	x1
D		M8X15	x1
E		M8X35	x1
F		M8X70	x1
G		M6X18	x1
H			x1
I			x1
J			x1
K			x1

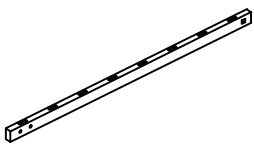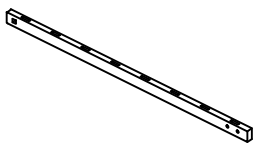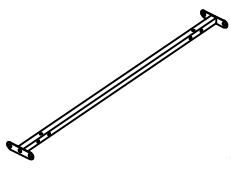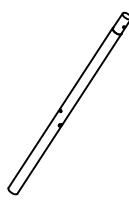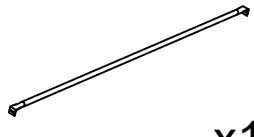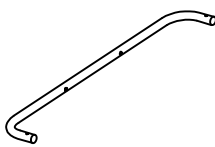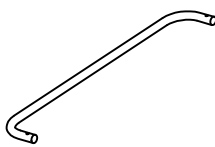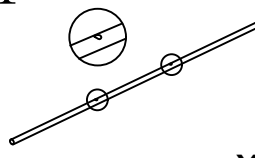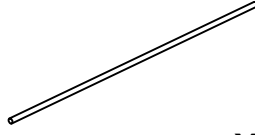1  x2	2  x2	3  x2	4  x2
5  x1	6  x2	7  x2	8  x16
9  x1	10  x1	11  x1	12  x1
13  x2			

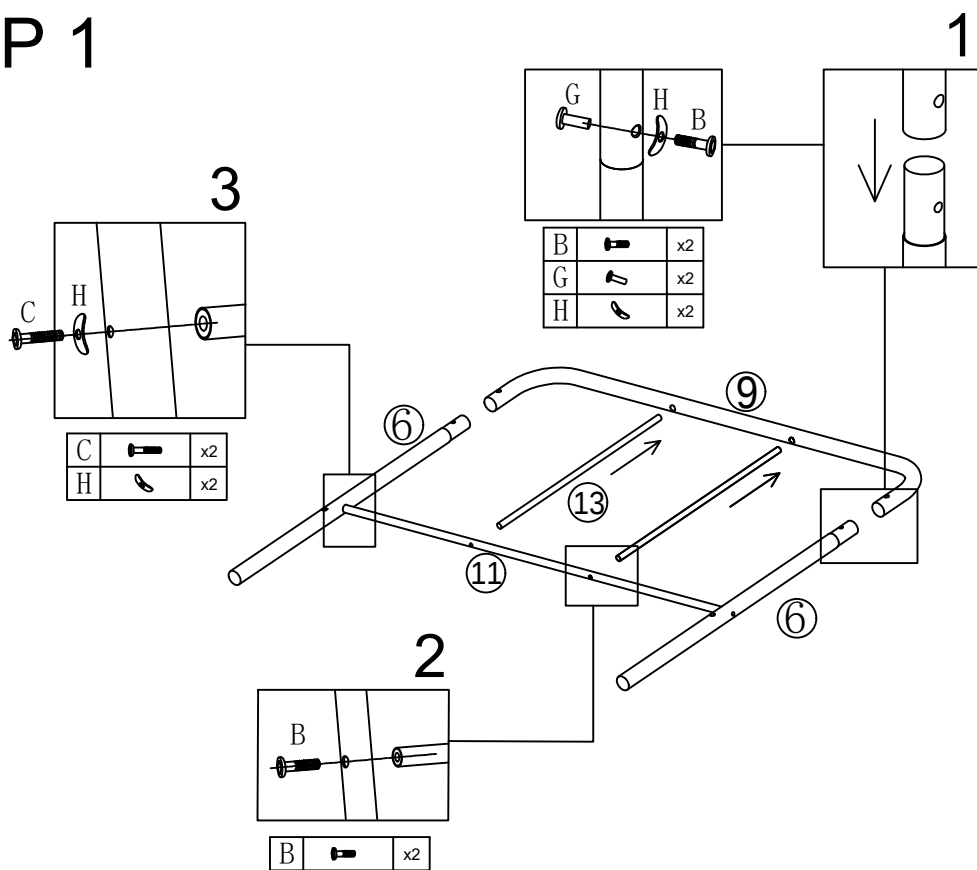
STEP 1



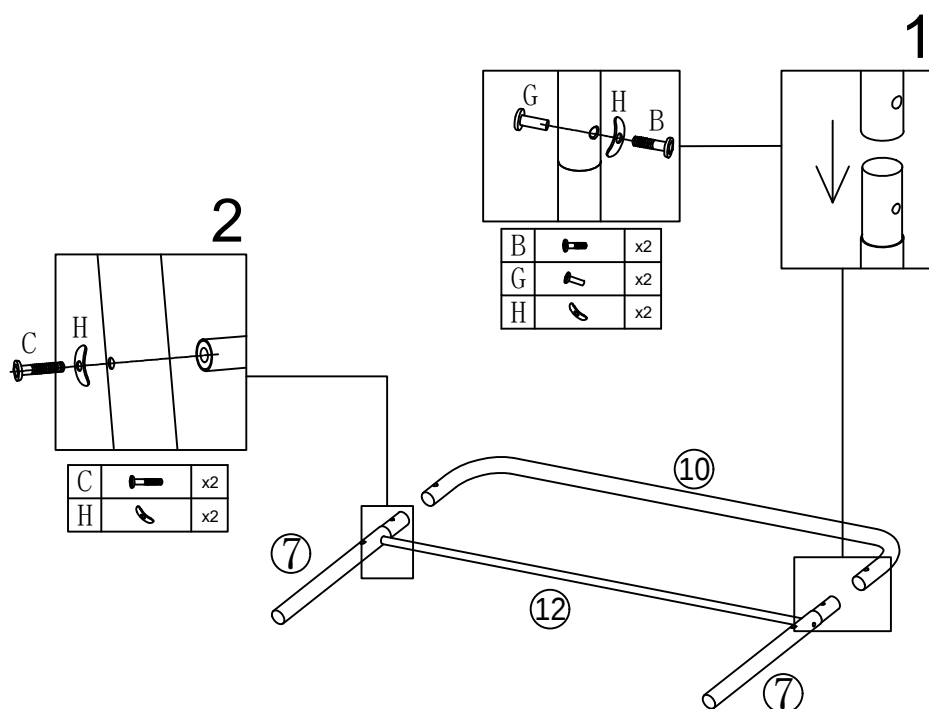STEP 2



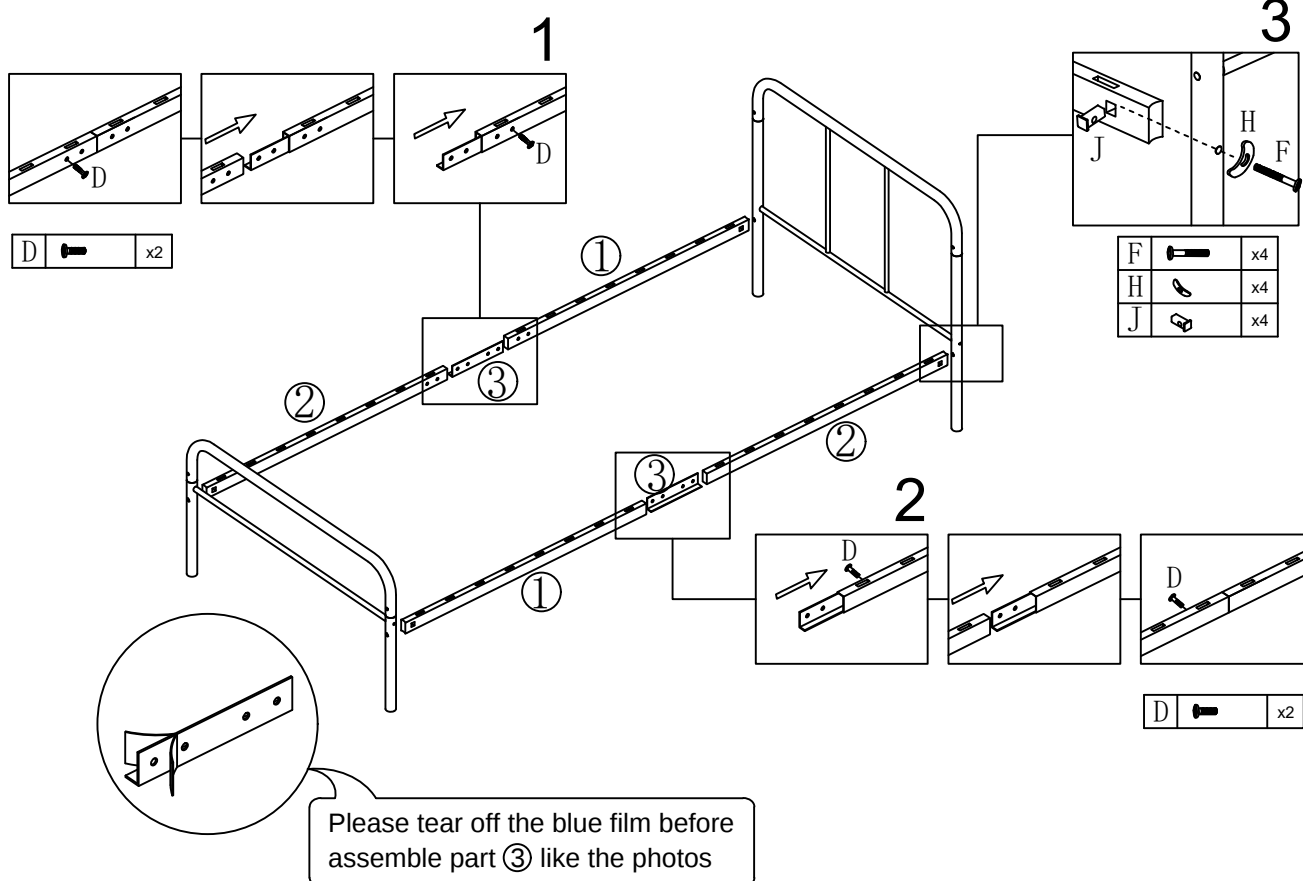STEP 3



STEP 4

