
Bamboo Bed Frame
Set-up Instruction


Size: Queen (8904-16/18)

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!


Components-Parts



①×2PCS



②×2PCS



④×4PCS



A×4PCS
M8*28




B×28
M8×14




C×2PCS
M8*33



D×1PCS
M8*56

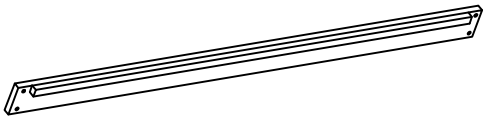

⑤×2PCS



⑥×1PCS



⑧×1PCS



⑩×24PCS




⑪×2PCS




NOTE:The M8*27 for the bolt indicates a diameter of 8 mm (0.315 in) and a length of 27 mm (1.06 in).


Spare: A×1、B×1、C×1、E×1


Component Distribution - Easy Assembly in 6 Steps

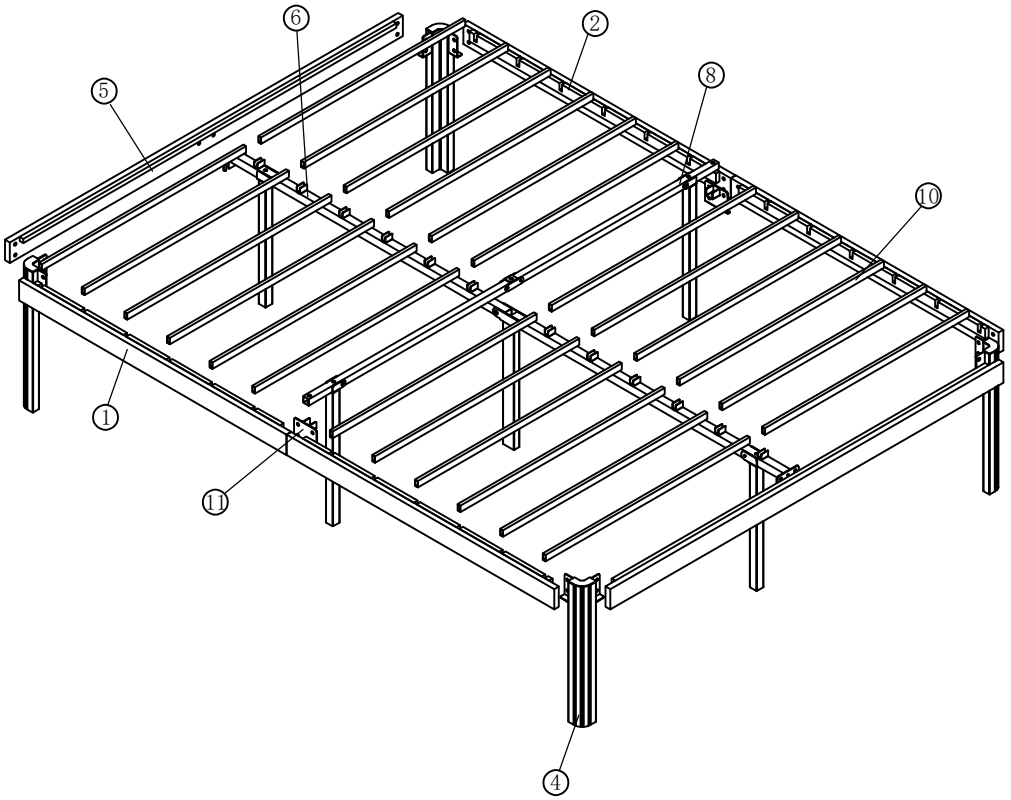


Step1:Take out parts ①&②&⑪; Joint them with screws as shown

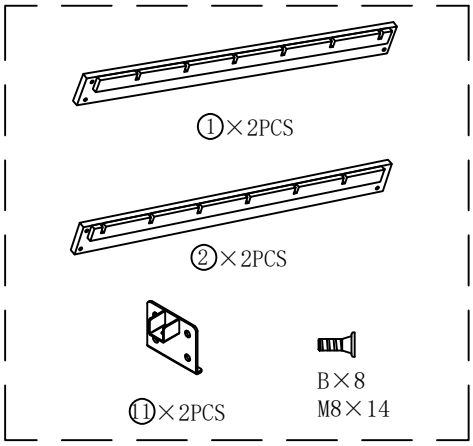


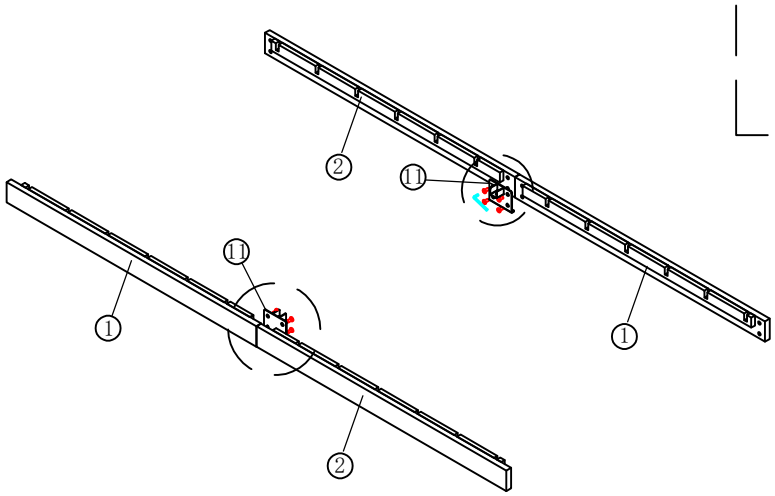


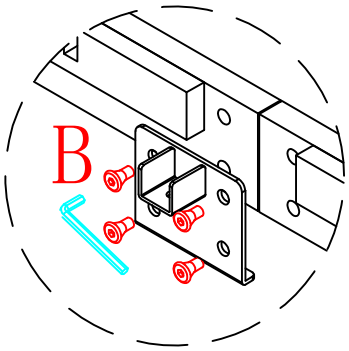


Step2:Joint four corners with screws as shown

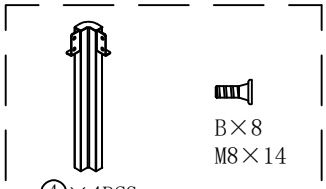

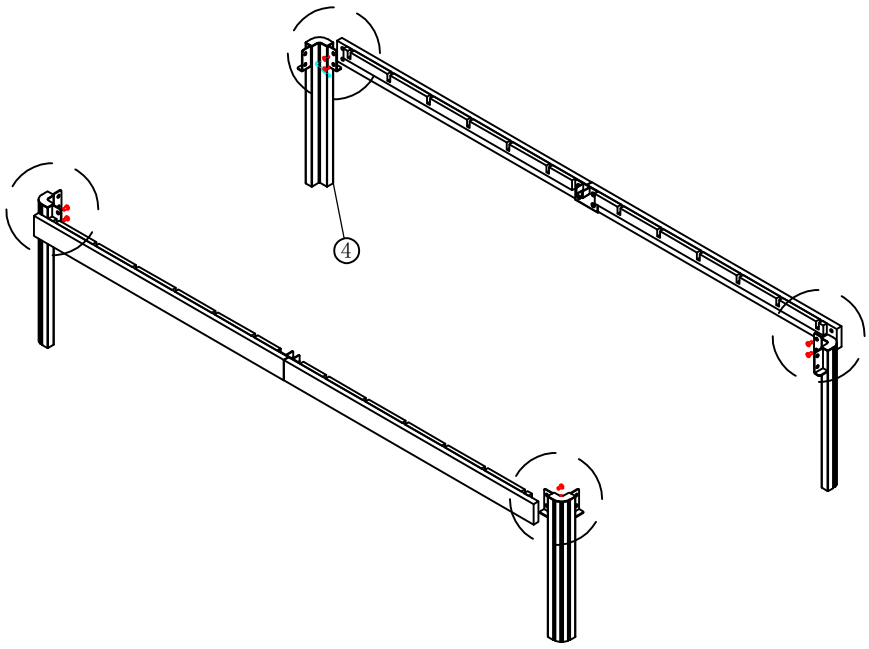

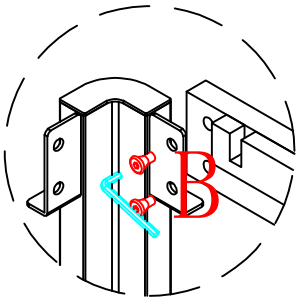



Step3:Joint parts ⑤ with screws as shown

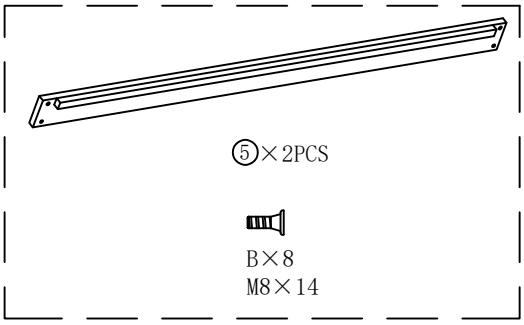


⑤×2PCS

B×8
M8×14

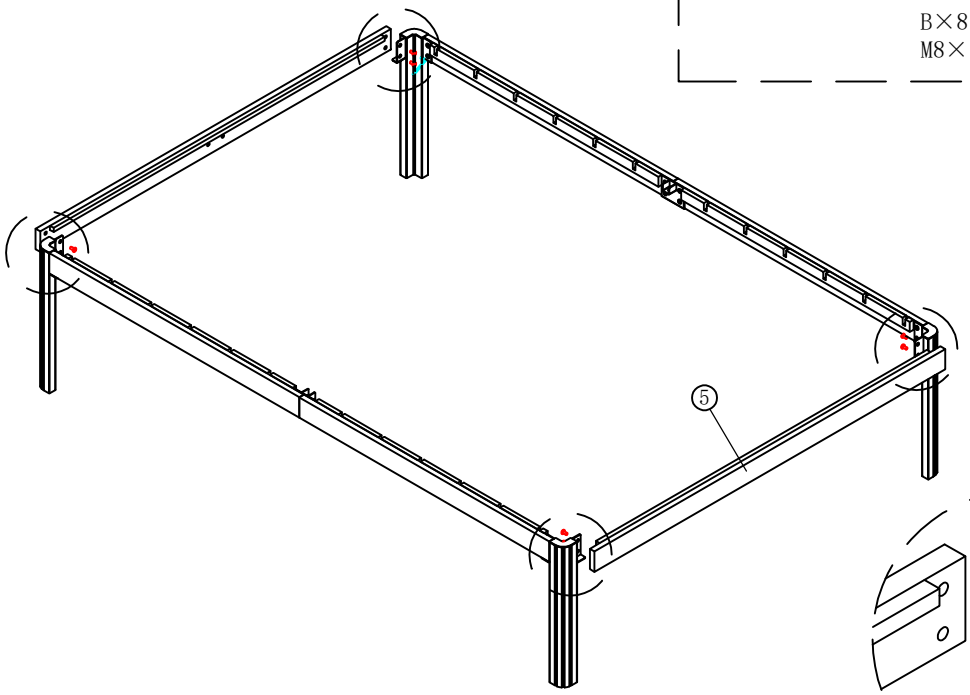

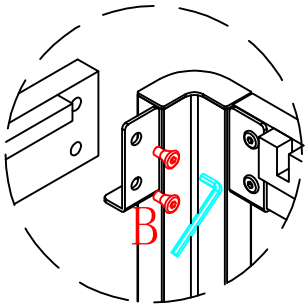


Step5:Joint parts ⑥ with screws as shown

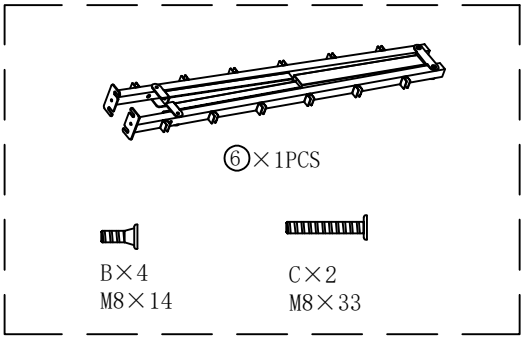



⑥×1PCS

B×4
M8×14


C×2
M8×33

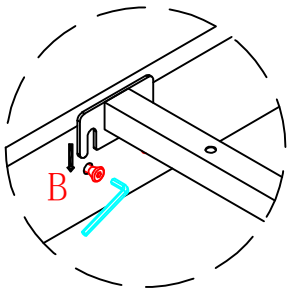

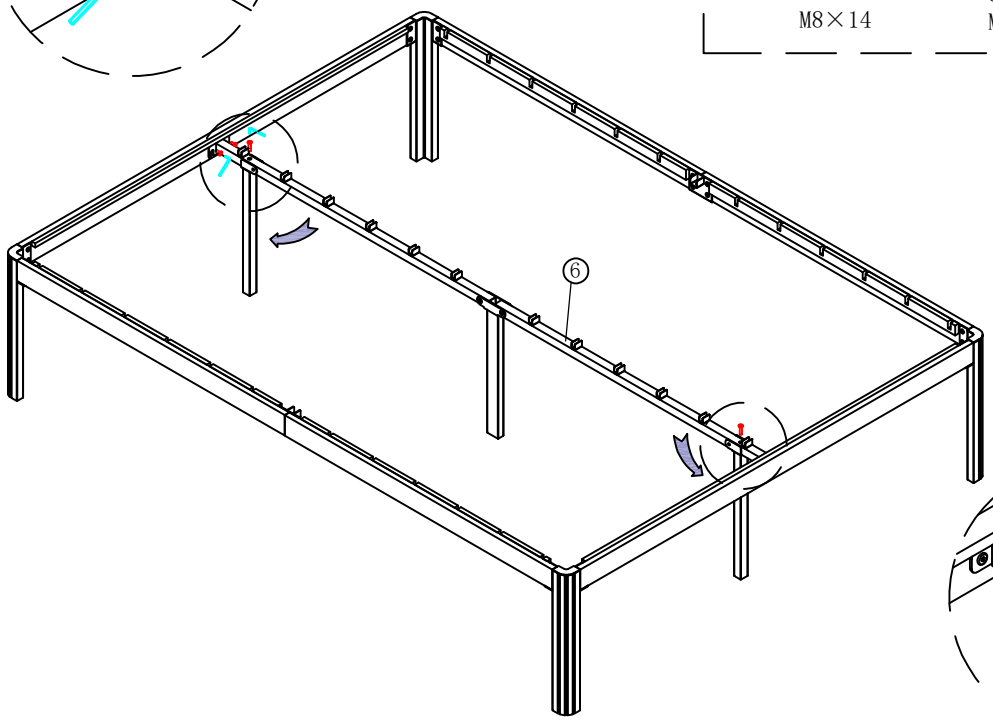

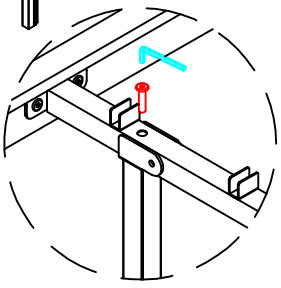

Step6:Joint parts ⑧ with screws as shown

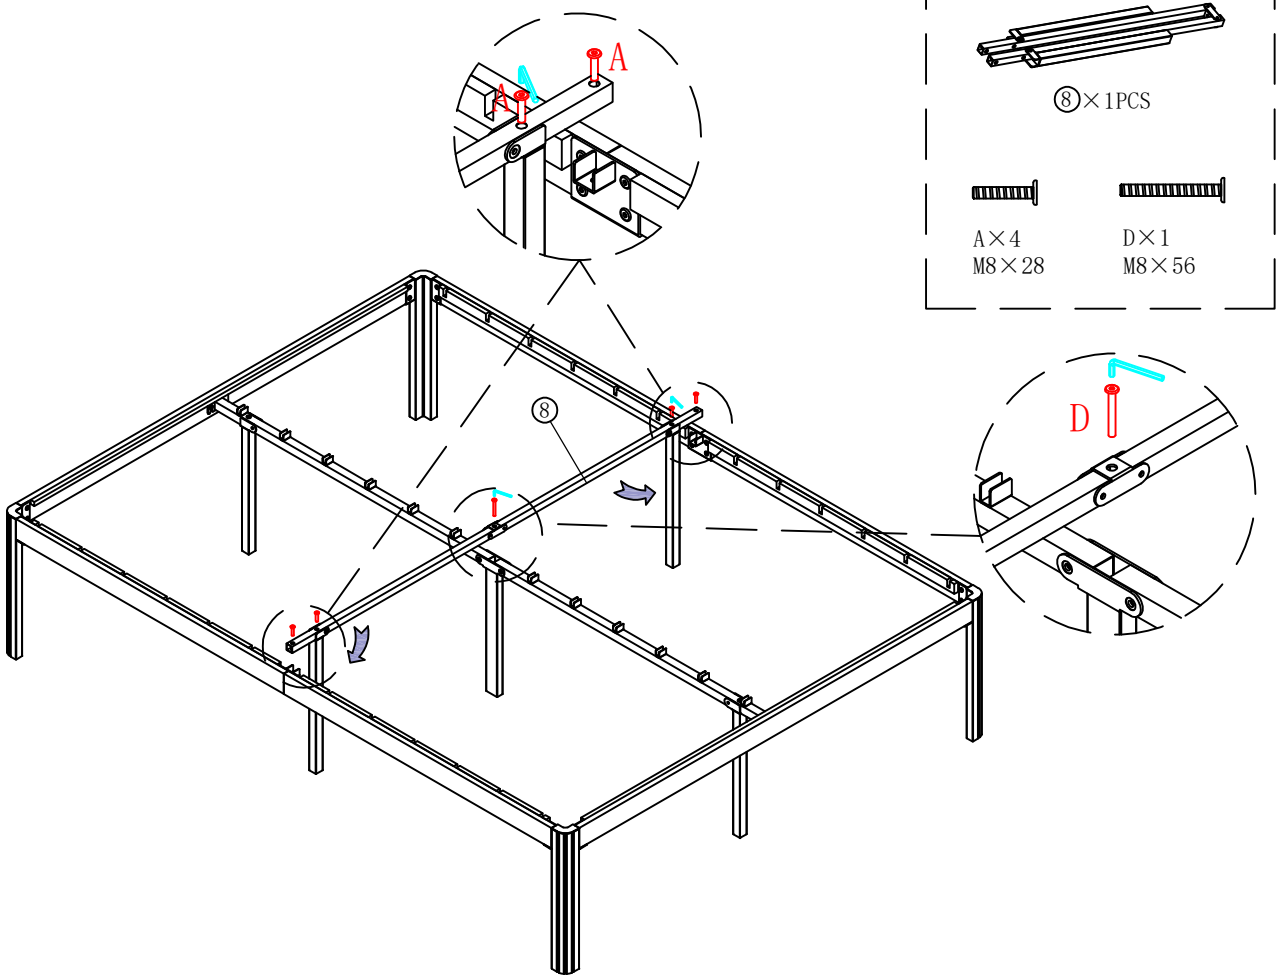


⑧×1PCS

A×4
M8×28

D×1
M8×56

Step7:Insert slats

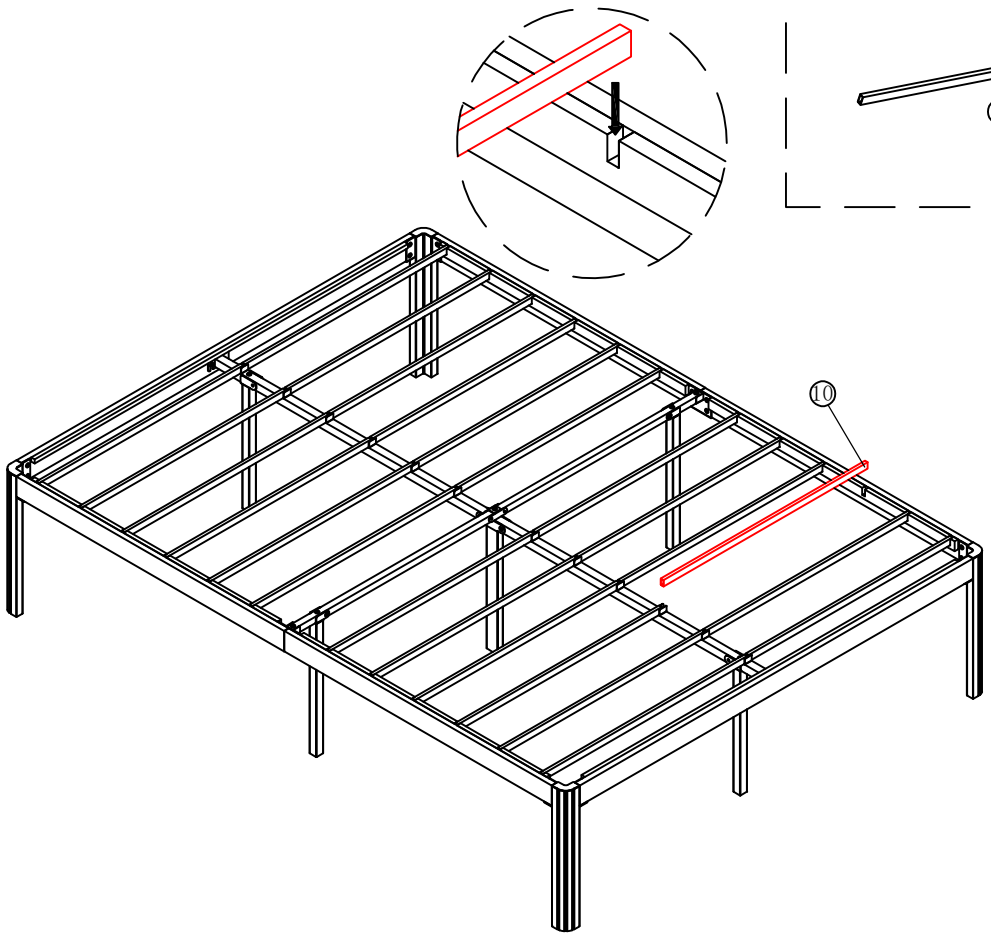

⑩×24PCS

In the last step, please make sure all the screws are tightened.