



BARNDOORHARDWAREKIT  
MF15SN-6FT2  
INSTALLATION GUIDE

Main Components


x1 Rail

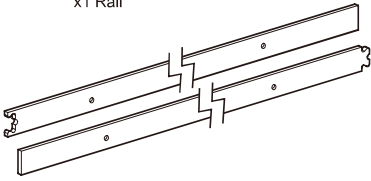


x2 Roller Hanger

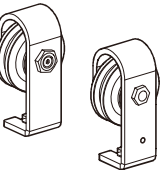

x2 Hex Bolts




x2 Nut




M5x26mm  
13/64" x 1 1/32"


x2 Fixed connector



x4 Screw




x4Hanger roller bracket




M5x6mm  
13/64" x 15/64"

x8 Hex Bolts




M4.8x50mm  
3/16 " x 1 31/32"


x 2 sealing strip




x5 Wall Spacer




x5 25/64" (10mm) Anchor Floor




x5 (8mm x 90mm) 5/16" x 3 35/64" Wall Screw




x5 Washers




x8 (4.2mm x 32mm) 11/64" x 1 17/64" Floor Screws




x8 5/16"(8mm) Floor Anchor




x2 Internal Floor -Mounted Door Guide




x2 Socket



x6 hinge




x24 (6mmX25mm) 15/64"X63/64" hinge Screws




To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

Tools Required


Tape Measure

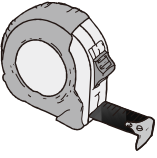


Pencil




Cordless Drill




Phillips Screwdriver



Wrench




1/4" Mortise Router Head

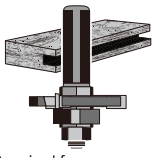


Required for Floor-Mounted Door Guide InstallationAllen


level



Speed Square



x 1Allen Key

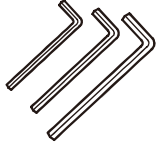


IMPORTANT: BEFORE YOU BEGIN

IF INSTALLING DIRECTLY INTO A NON-CONCRETE WALL, DO NOT ATTEMPT TO INSTALL THE RAIL SOLELY TO THE DRYWALL OR ANY WALL SURFACE AS THIS MAY NOT SUPPORT THE WEIGHT OF THE RAIL AND MOUNTED DOOR. THE RAIL MUST BE INSTALLED ONTO A PIECE OF SOLID WOOD BLOCKING (PACKAGE NOT INCLUDED) USING MOUNTING SCREWS ( PACKAGE NOT INCLUDED). ENSURE THE SOLID WOOD BLOCKING IS SECURED INTO THE STRUCTURAL SURFACE. USE A STUD FINDER WHERE NECESSARY TO LOCATE STUDS AND SECURE SAFELY. TYPICAL SOLID WOOD BLOCKING SHOULD BE 81 3/4" x 5 1/2" x 7/8".

NOTE,SEPARATEBOLTSAREPROVIDEDFOR13/8"DOORSANDLONGERBOLTSPROVIDEDFOR13/4"DOORS.IF INSTALLINGWITHTHEINTERNALFLOOR-MOUNTEDDOORGUIDE,THEDOORMUSTBEMORTISED1/4"WIDEX3/4" DEEPCENTRALLY.


**Kindly reminder: Connect the two pieces of the rail before installing**

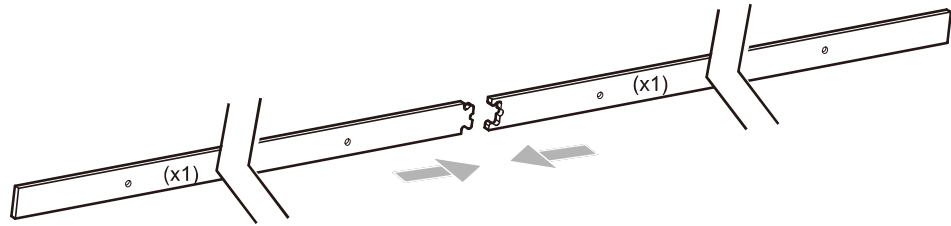

**Fit door panel width:  $9\frac{27}{32}$ "~ $11\frac{13}{16}$ "**

**Step 1. CONCRETE Wall Preparation1**


Position the rail by measuring up from the door height (H) +  $1\frac{17}{32}$ " to the centre of the track. Also ensure a gap of  $\frac{25}{64}$ " -  $\frac{1}{2}$ " at the bottom. Ensure the rail is level and leave a minimum of 2" from the end of the rail to the side of the opening.

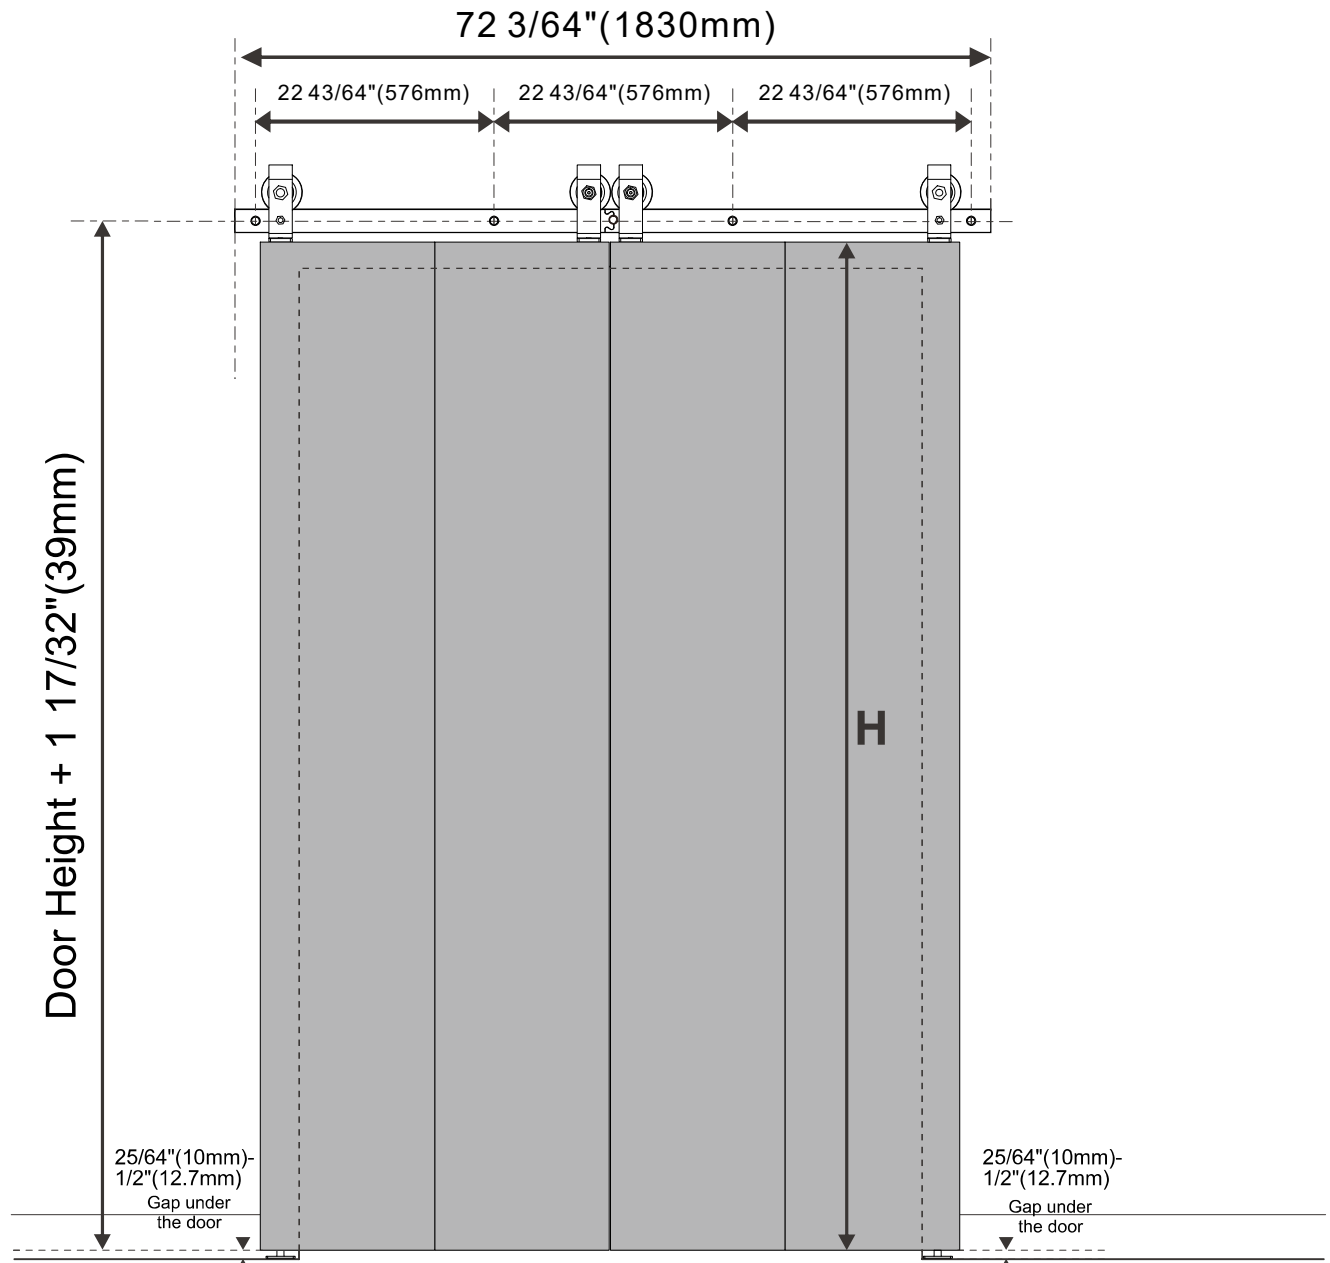

BARNDOORHARDWAREKIT  
MF15SN-6FT2  
INSTALLATION GUIDE


### Step 2. CONCRETE Wall Preparation2

Position the rail in place ensuring that it is level, mark the holes on the rail using a pencil and pre-drill  $\frac{3}{8}$ " holes into the concrete.

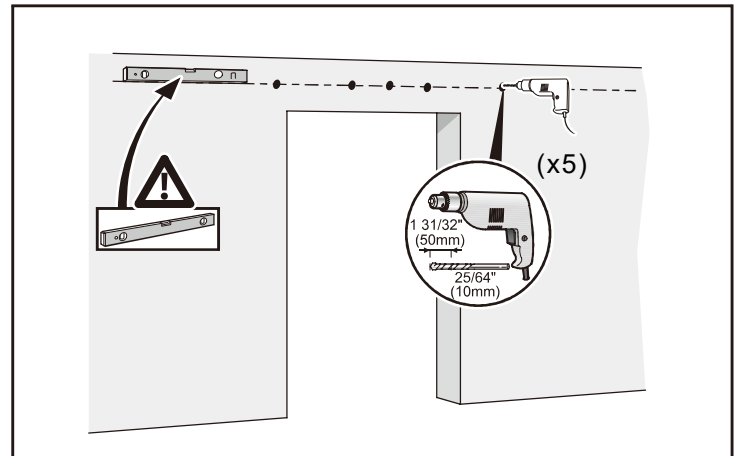


### Step 3. CONCRETE Rail Installation

When installing directly into concrete, align the spacers to holes, insert using the provided anchors and hex bolts (with washers). Ensure the nut-screw to separate the hex bolt and anchor to install correctly, securing with a wrench.

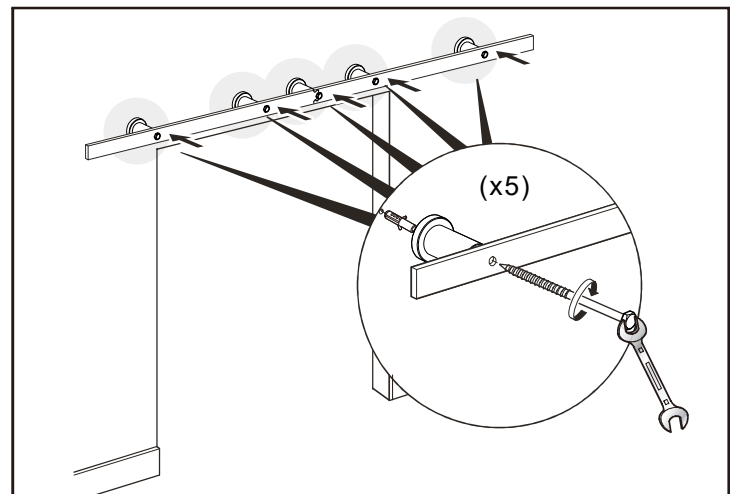

### Step 4. DRYWALL Wall Preparation



Position the rail on top of the wood blocking ensuring levelness, mark the holes using a pencil and pre-drill  $\frac{3}{16}$ " holes into the wood blocking.

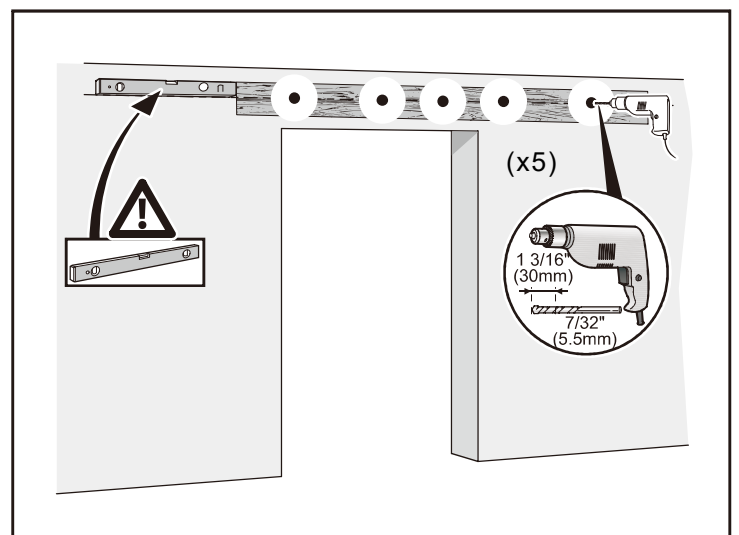

BARNDOORHARDWAREKIT  
MF15SN-6FT2  
INSTALLATION GUIDE


**Step 5. DRYWALL Rail Installation**

When installing into the solid wood block and wall, insert using the provided wall screws. Align each spacer to the rail holes, inserting screws (with washers), securing with a wrench.

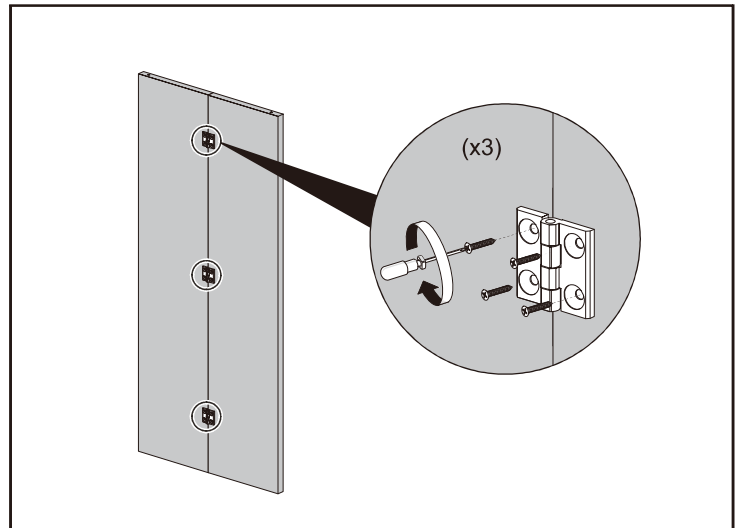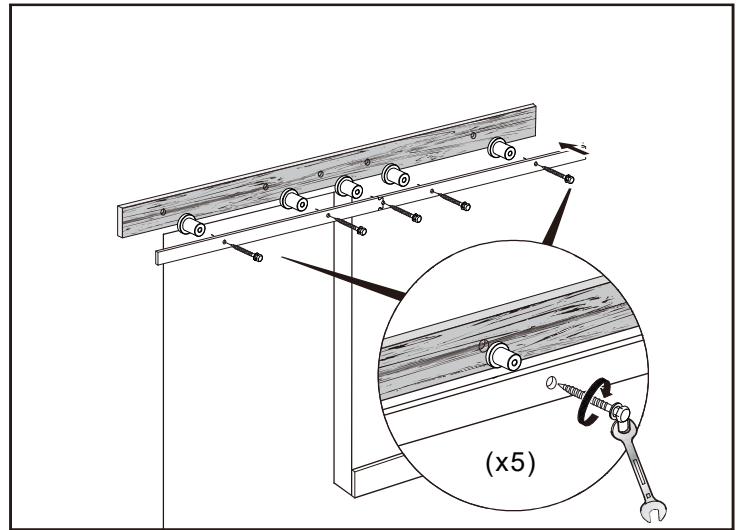


**Step 6. Door Preparation-Strap Installation**

Install the hanger roller bracket on the reserved hole of the top of door by  $\frac{3}{16}$ " x  $1 \frac{17}{64}$ " screw.

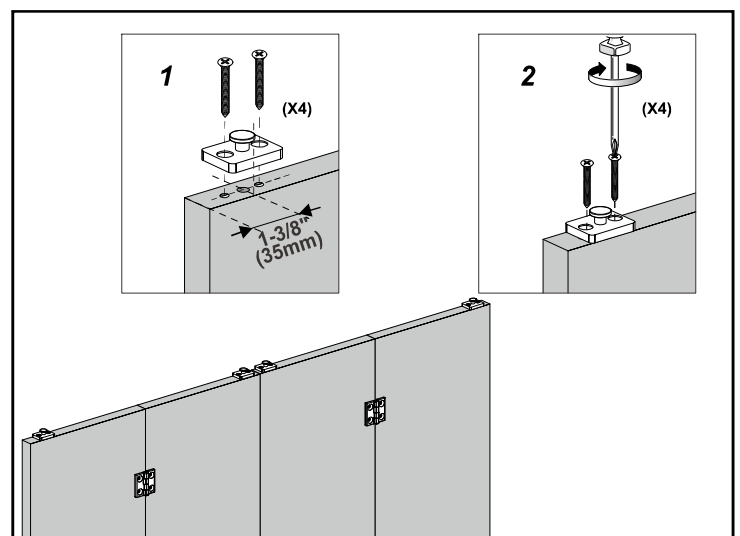


## Step 7. Hanging the rollers

Put the 4 rollers on the rail

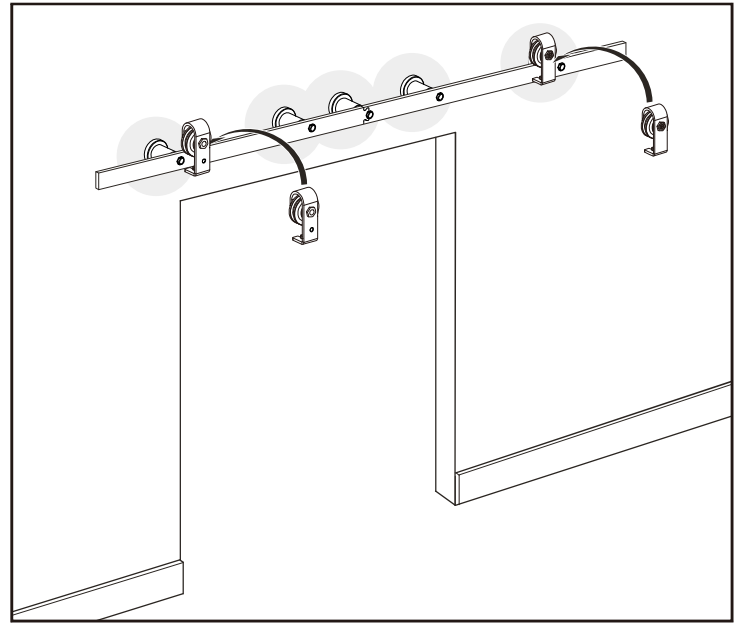

## Step 8. Floor-Mounted Door Guide Installation





Mark the hole position on the bottom of the door with a pen, punch a hole with diameter  $5/16"$  depth  $29/32"$ . Then put the socket on the hole, and knock it in with a wooden hammer. Finally, put the floor guide into the socket.

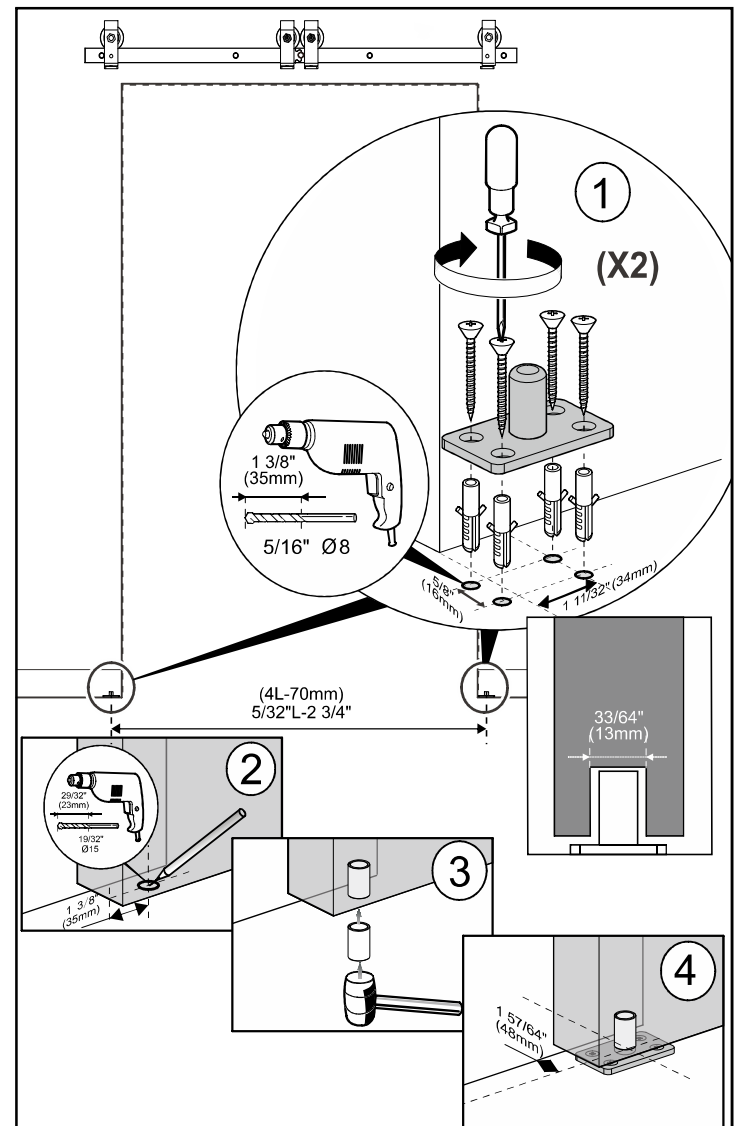

BARNDOORHARDWAREKIT  
MF15SN-6FT2  
INSTALLATION GUIDE

**Step 9. Install hanger roller 1**







Unscrew the screw, adjust the position of the door and the floor guide, then push in the hanger roller slot, and fix it with screw.

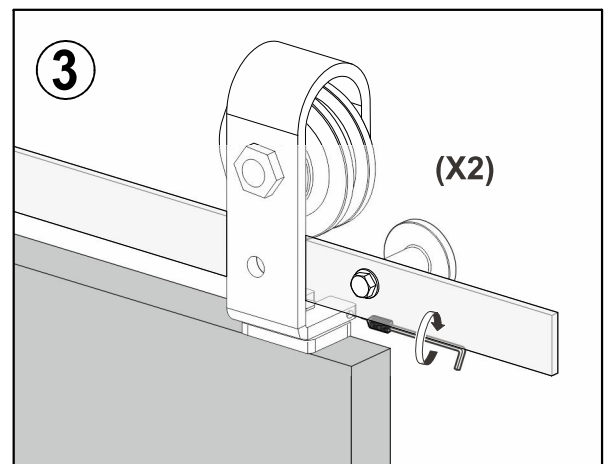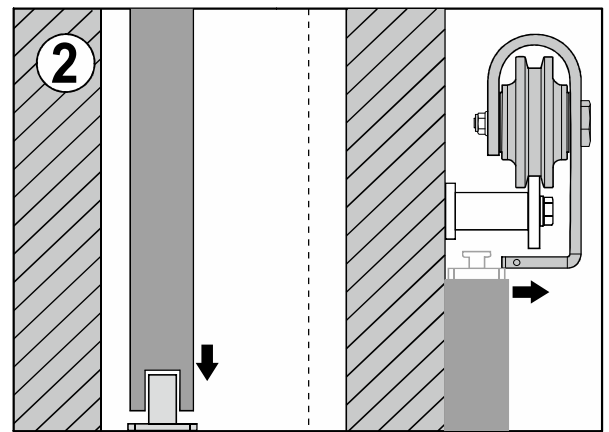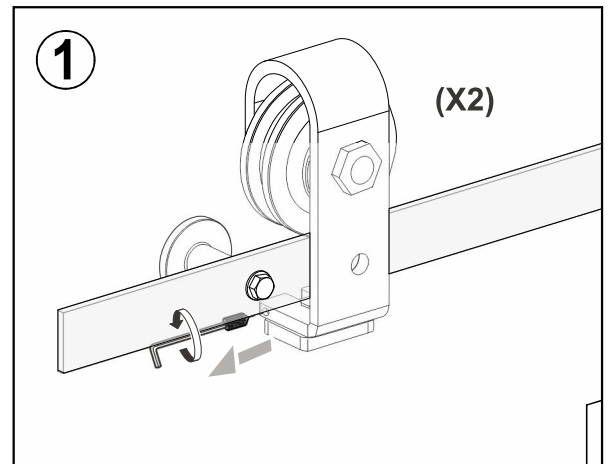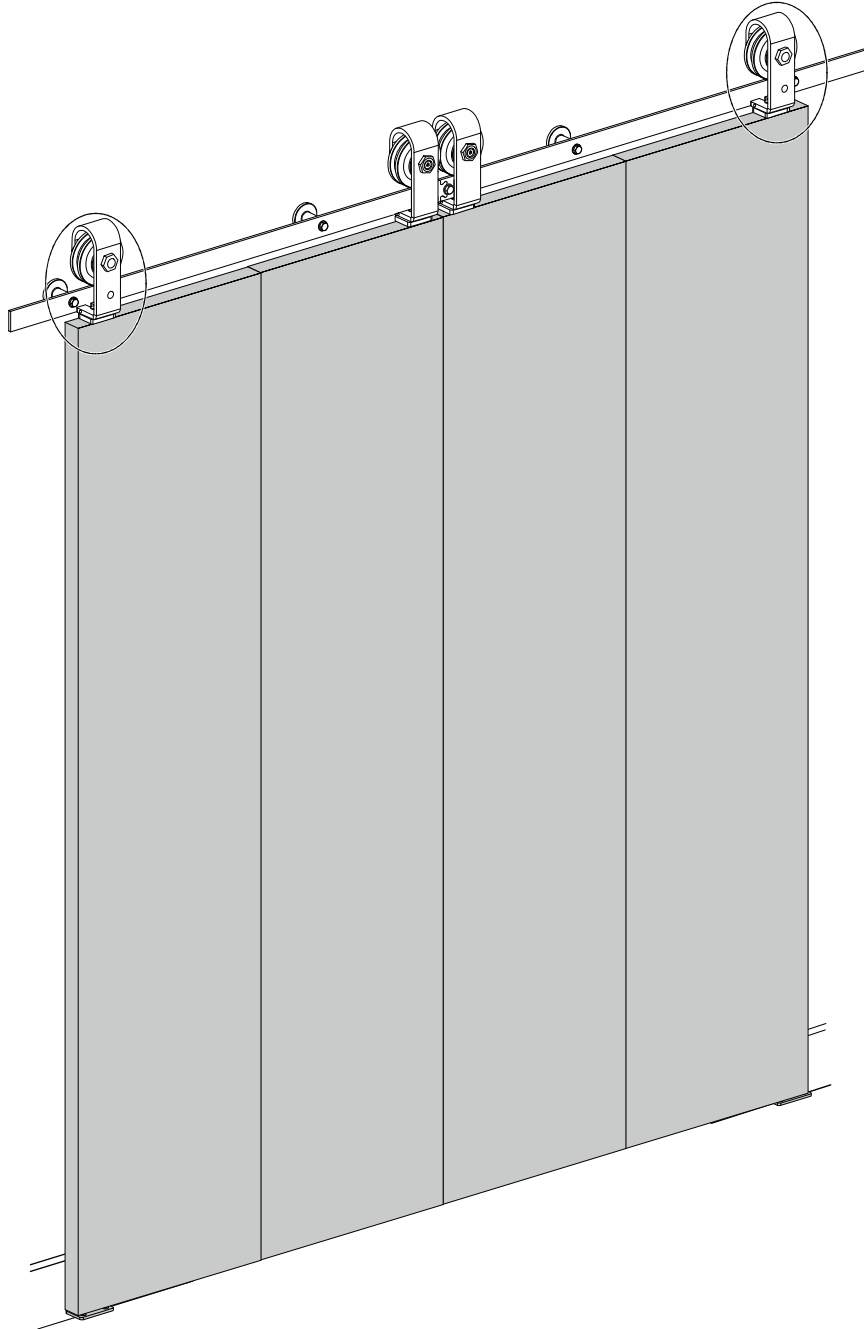

### Step 10. Install hanger roller 2

Unscrew the screw, adjust the position of the door and the floor guide then push in the hanger roller card slot, fix it with screws.

Using a wrench to adjust the height of the hanger roller to a suitable position, and tighten it.

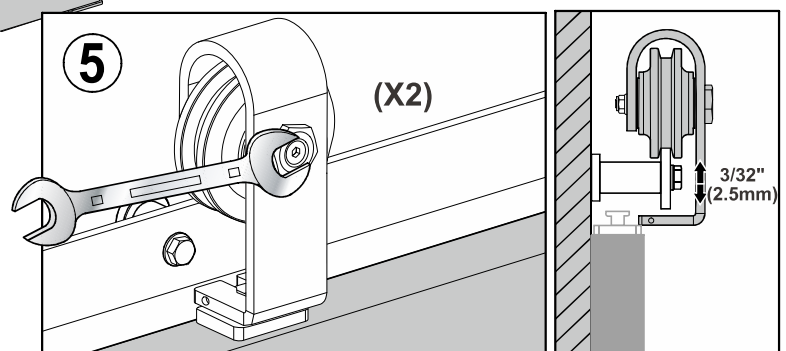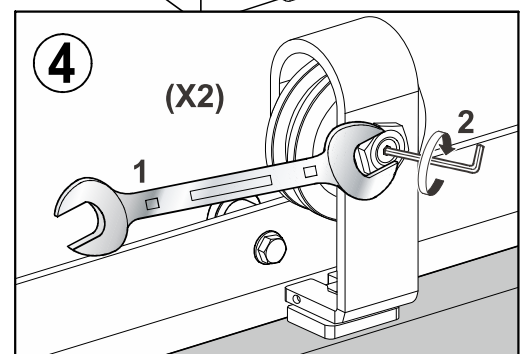
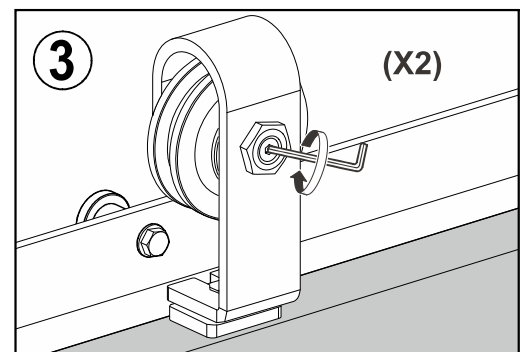
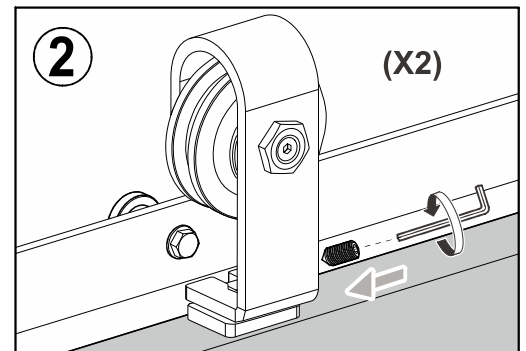
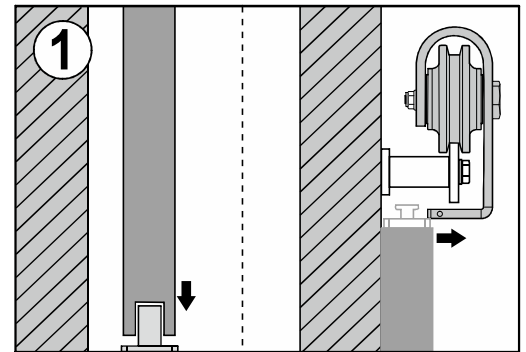
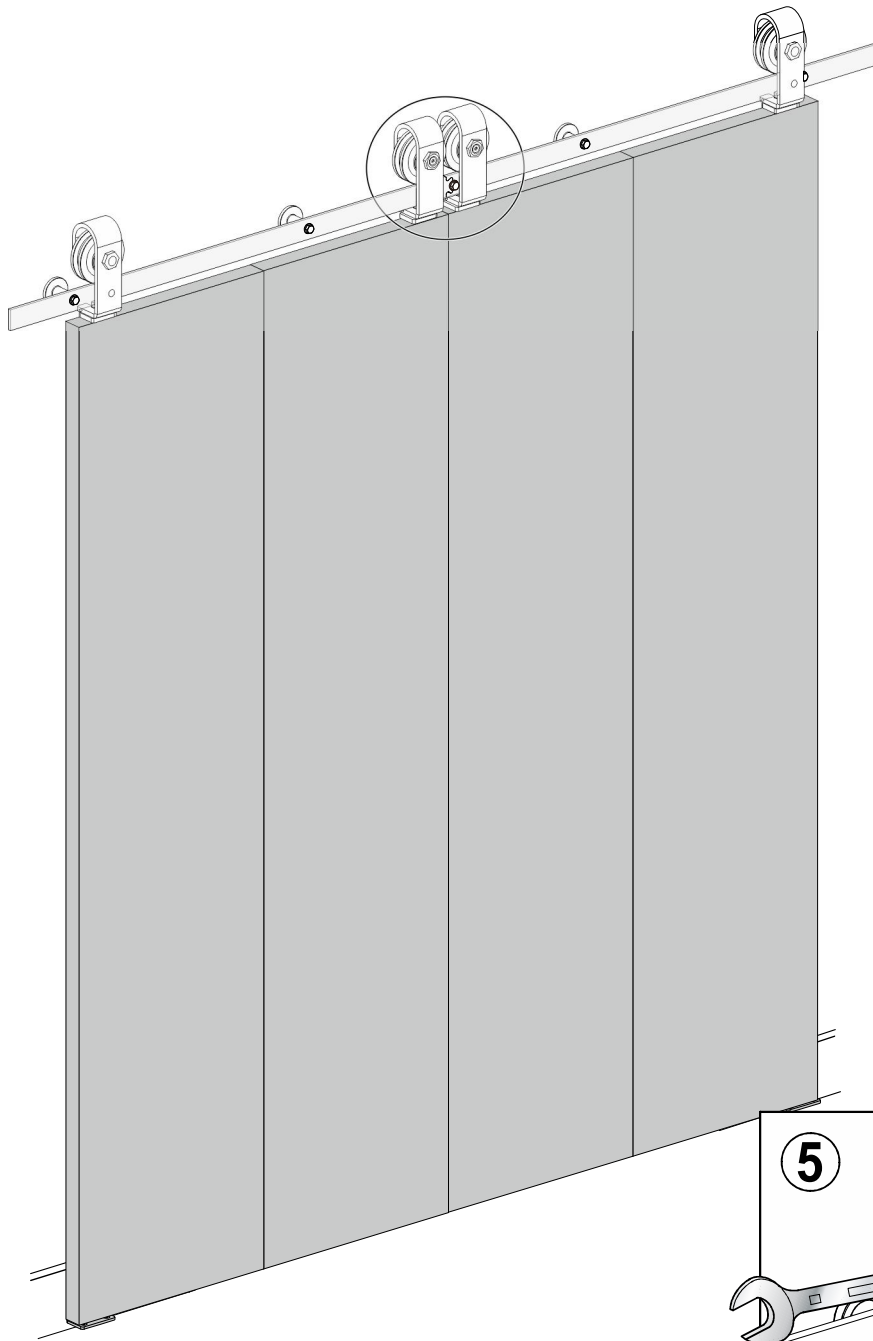


### Step 11. Install the fixed connector

Align the hole of the connecting piece with the lower hole of the hanger roller plate.

Using a wrench to pass through the hanger roller plate and the connecting piece.

Tighten the other two holes of the connector with a screw. Then install the nut with the wrench.

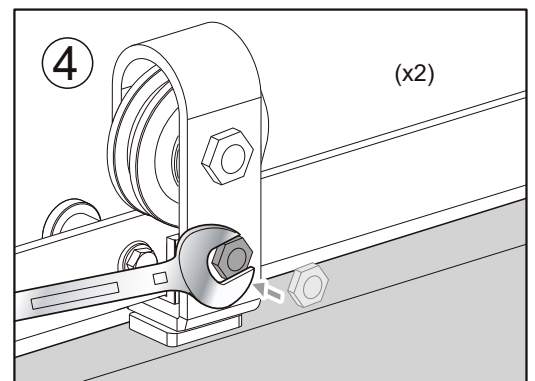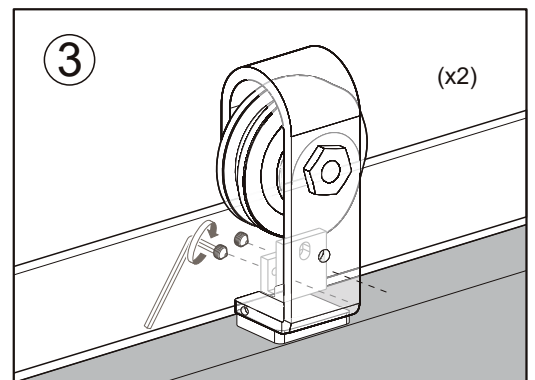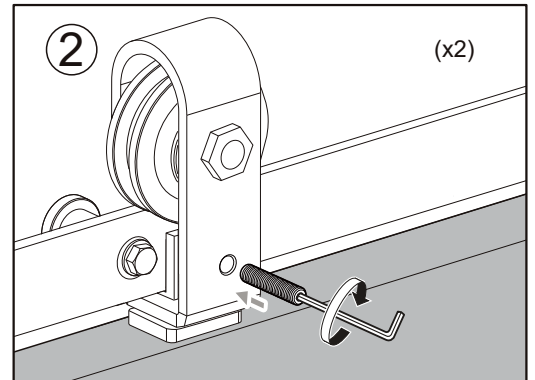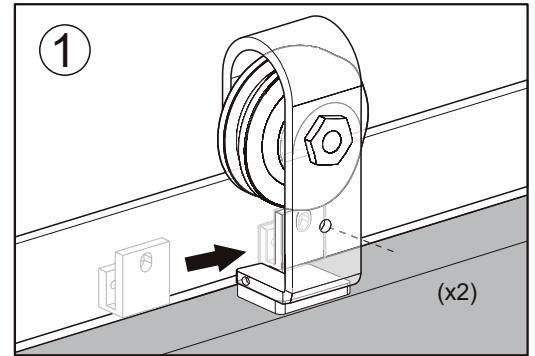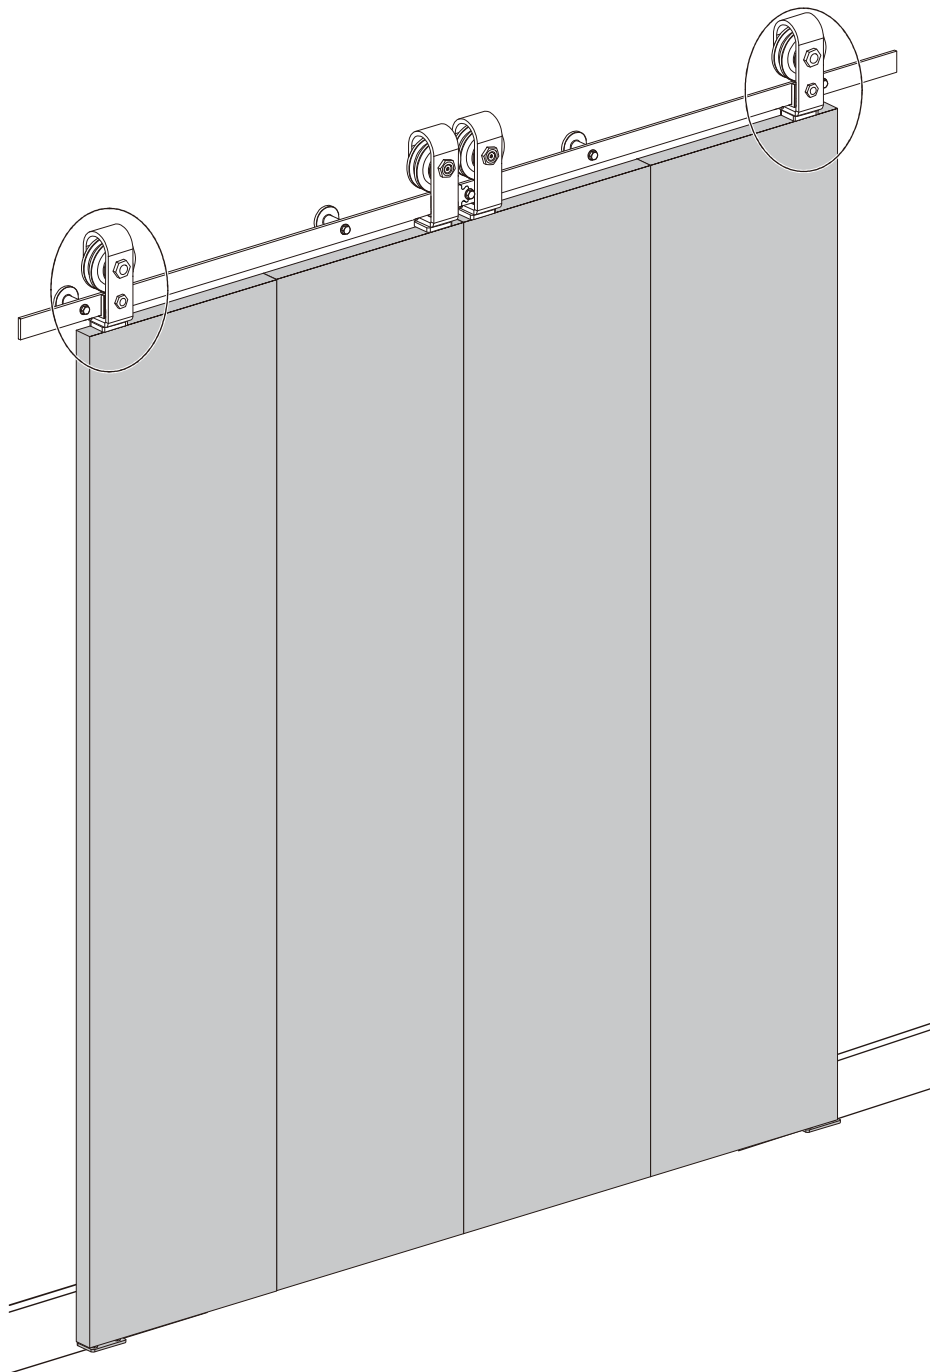



### Step 12. Install the sealing strip

Tear off the sealing strip and stick it to the side of the door

