



5-Foot Swing

Assembly Instructions

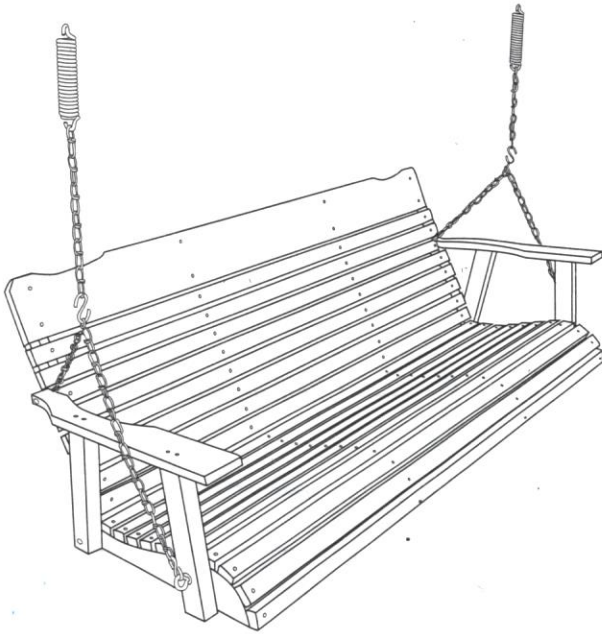


Parts List


(4) 1/4-inch x 3-inch Carriage Bolts




(2) 1/4-inch x 3-1/4-inch Carriage Bolts

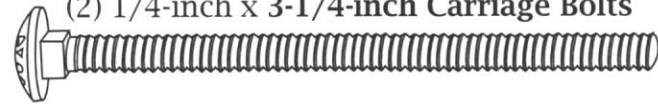


(2) 1/4-inch x 4-inch Carriage Bolts

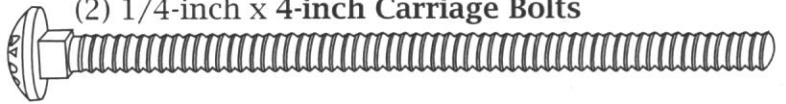

(8) 1/4-inch Washers

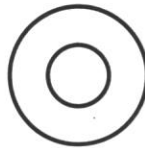

(4) 5/16-inch Washers

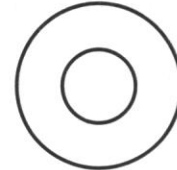

(2) 5/16-inch x 5-inch Eyebolts w/chain

(2) S-Hooks

(2) Shocks

(2) 6-foot Lengths of Chain

(8) 1/4-inch Nuts



(2) 5/16-inch Nuts




* Tools required: 1/2-inch wrench, 7/16-inch wrench, hammer

1. Armrest to Seat Assembly

Select proper armrest. (Curve side goes towards seat)

Place a 5/16-inch washer on a 5-inch eyebolt and insert through top hole in front armrest support. Insert a 3-1/4-inch carriage bolt through bottom hole in front armrest support. Insert the eyebolt and carriage bolt through corresponding holes in side of seat assembly. Next place a 5/16-inch washer and nut on end of eyebolt and tighten. Place a 1/4-inch washer and nut on end of carriage bolt and tighten. Repeat on other side.

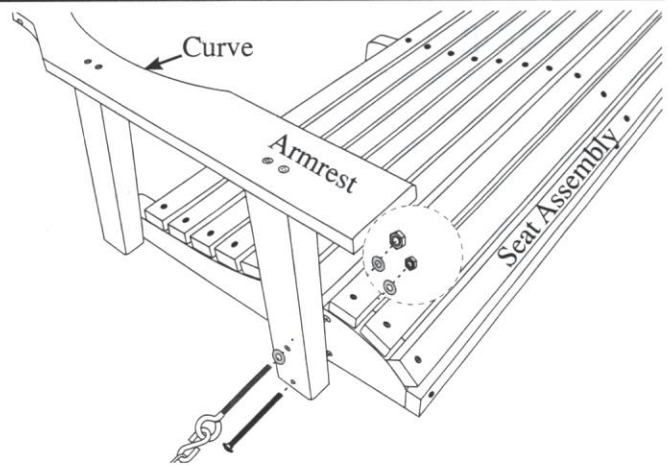

2. Armrest to Seat and Backrest

Insert 4-inch carriage bolt through the bottom rear section of the armrest support, then through seat assembly and backrest. Place a 1/4-inch washer and nut on end of bolt and tighten. Repeat on other side.

