


TV STAND

Assembly Instructions - Please keep for future reference



N721P394506
N721P394508

Dimensions

Width-77.41inch
Depth-15.00inch
Height-30.08inch

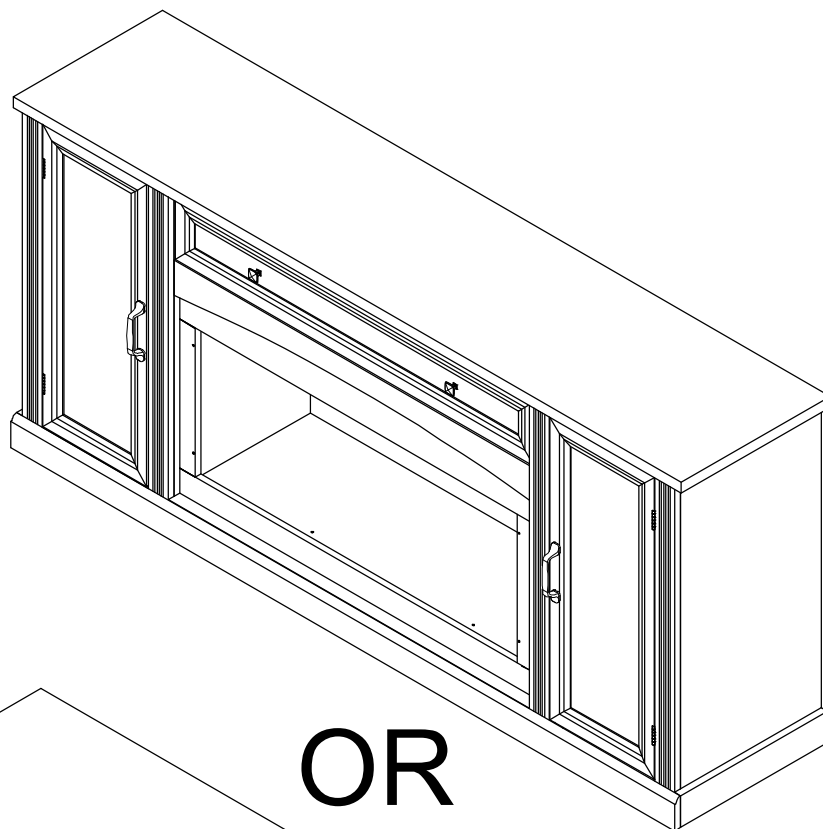

OR

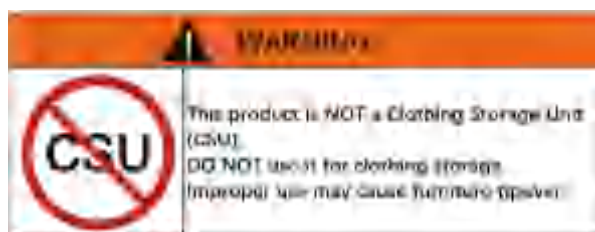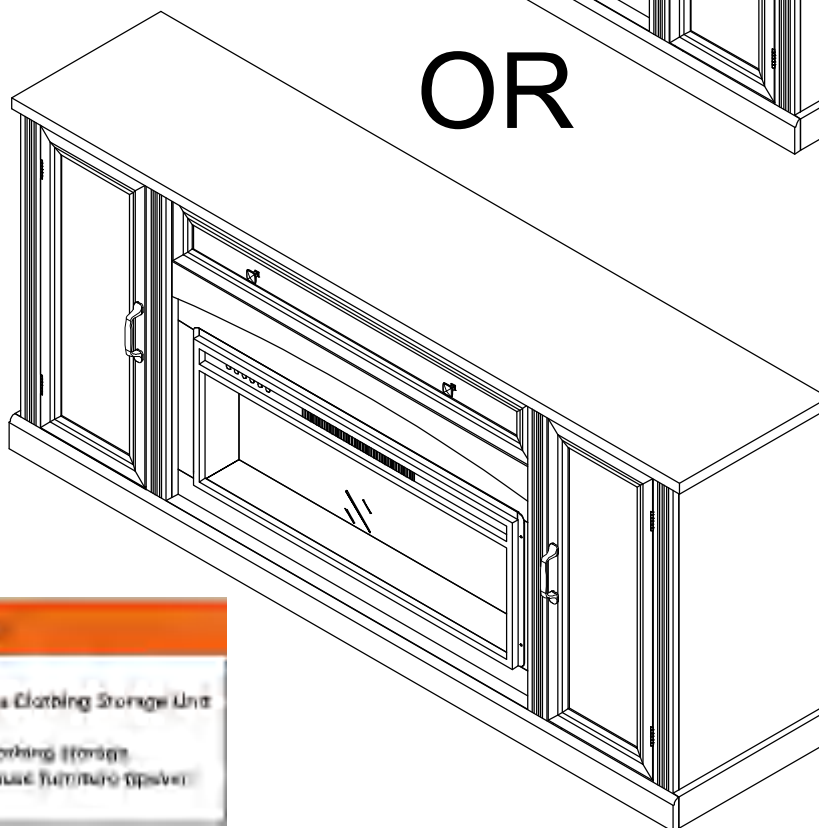

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have **all** the components and tools listed on the following pages.
- Remove **all** fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to **layout** the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its **final** position (in the same room) as possible.
- Assemble on a **soft level** surface to avoid damaging the unit or your floor.
- Parts of the assembly **will** be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a **low torque** setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no **loose screws** on this unit.
- This product should not be discarded with household waste. Take to your **local authority** waste disposal centre.

Handy Hints

- Assemble **all** parts and bolts loosely during assembly, only once the product is complete should you **fully** tighten the bolts
- Regularly check and ensure That **all** bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-














Use the anti tip stap or **wall** fixing method provided (if applicable)
Do not **allow** children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not **place** heavy items in the top drawers
Do not **place** heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below

There are 2 boxes of this product.

Box 1: N721P394506




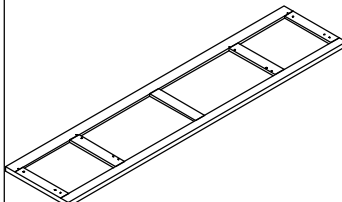
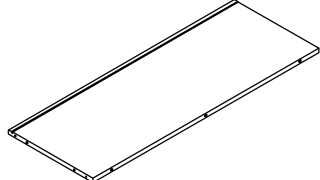
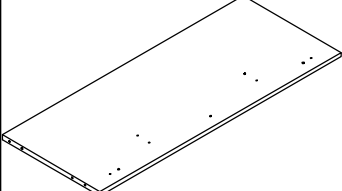
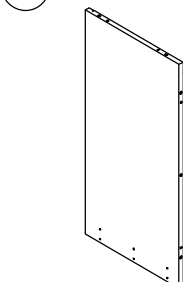



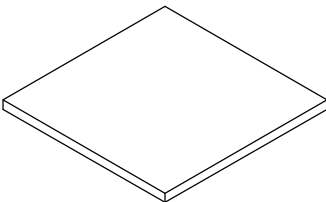
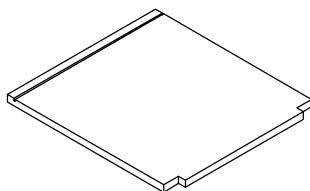
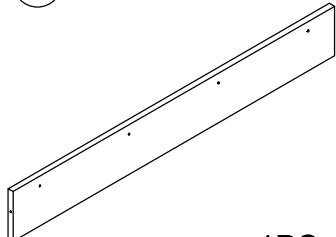
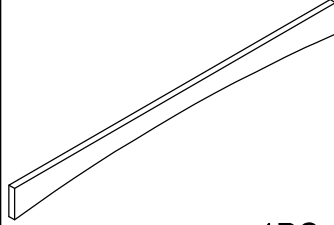
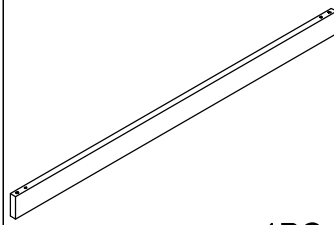
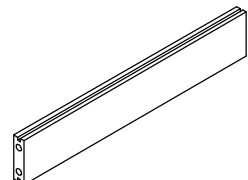
① 1698*378*24  x1PC	② 920*340*15  x1PC	③ 920*371*12  x1PC	④ 740*356*15  x1PC
⑤ 740*356*15  x1PC	⑥ 740*356*15  x1PC	⑦ 740*356*15  x1PC	⑧ 336*330*12  x2PCS
⑨ 340*371*12  x2PCS	⑩ 740*50*15  x1PC	⑪ 740*50*15  x1PC	⑫ 740*50*15  x1PC
⑬ 740*50*15  x1PC	⑭ 920*125*15  x1PC	⑮ 920*78*15  x1PC	⑯ 920*55*15  x1PC
⑰ 327*50*15  x1PC	⑱ 327*50*15  x1PC	⑲ 340*58*12  x2PCS	

Components - Fittings

Please check you have all the panels listed below

There are 2 boxes of this product.

Box 1: N721P394506

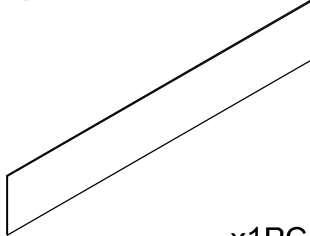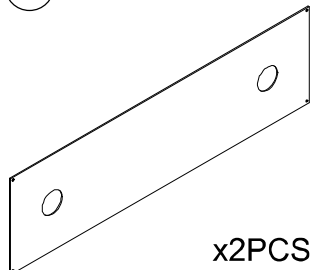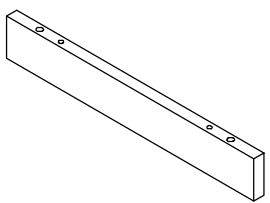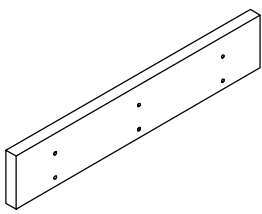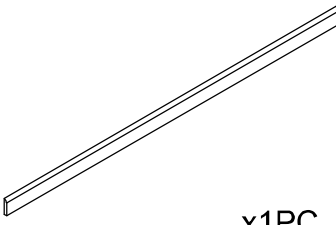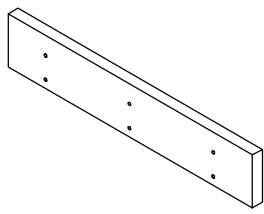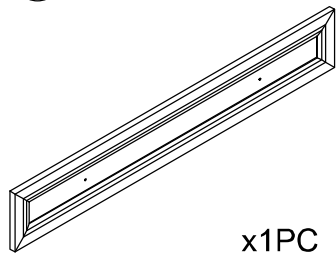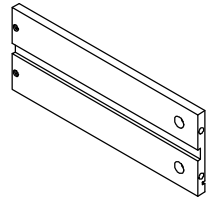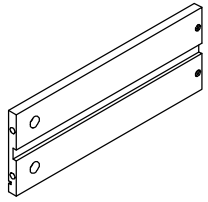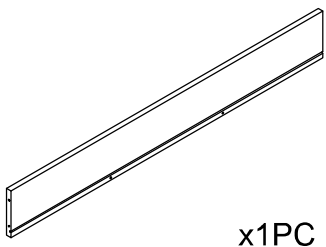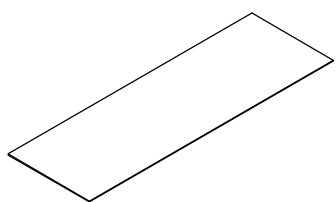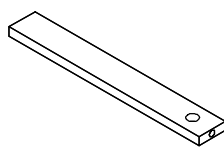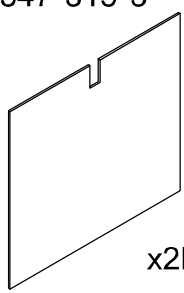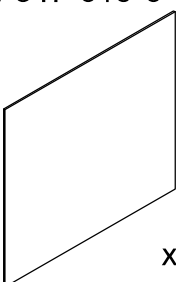
②① 927*162*3  x1PC	②② 950*263*3  x2PCS	②③ 370*55*12  x2PCS	
②④ 371*68*15  x1PC	②⑤ 920*78*15  x1PC	②⑥ 371*68*15  x1PC	②⑦ 664*262*18  x1PC
②⑧ 664*262*18  x1PC	③① 912*142*18  x1PC	③② 300*115*12  x1PC	③③ 300*115*12  x1PC
③④ 884*115*12  x1PC	③⑤ 891*295*3  x1PC	③⑥ 288*60*15  x2PCS	③⑦ 347*315*3  x2PCS
③⑧ 347*315*3  x2PCS	③⑨ 90*30*15  x2PCS	Hardware Package	

Components - Fittings

Please check you have all the panels listed below

There are 2 boxes of this product.









Box 2: N721P394508

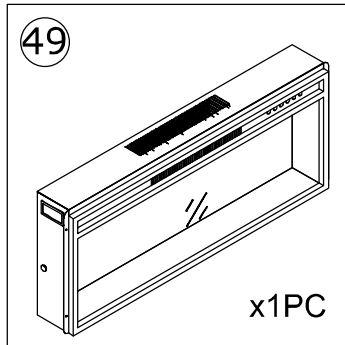



Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 A M6*35mm Cam Bolt x 53+3	 B M15*10mm Cam lock x 53+3	 C M6*30mm Dowel x 46+3	 D M4*25mm Screw x 24+2
 E M3*12mm Screw x 20+2	 F M4*40mm Screw x 3	 G Plastic Connector x 16+1	 H M3*16mm Screw x 16+1
 I M4*35mm Screw x 20+2	 J Anti-Inverted Iron x 2	 K M4*12mm Screw x 2	 L Magnet x 2
 M M3*14mm Screw x 4	 N M3*12mm Screw x 4	 O Hinge x 4	 P Handle x 2
 Q M4*20mm Screw x 4	 R M4*30mm Screw x 6+1	 S Handle x 2	 T M4*12mm Screw x 2
 U WALL ANCHOR x 2	 V SHELF PIN x 8	 W Metal Plate x 2	 X Slide Rail x 2
 Y M4*9mm Screw x 2	 Z M3*12mm Screw x 16+1	 a Metal Plate x 4	

Tools required



Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

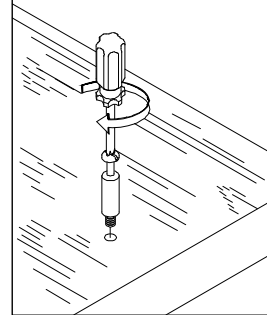

Step 2

Push the male camlock into the entry hole.

2

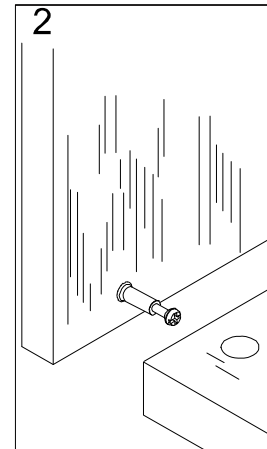


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

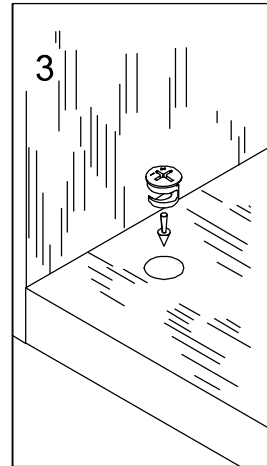


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

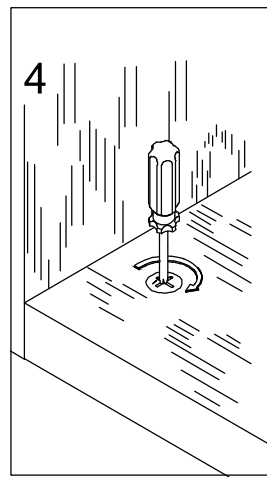


Assembly Instructions

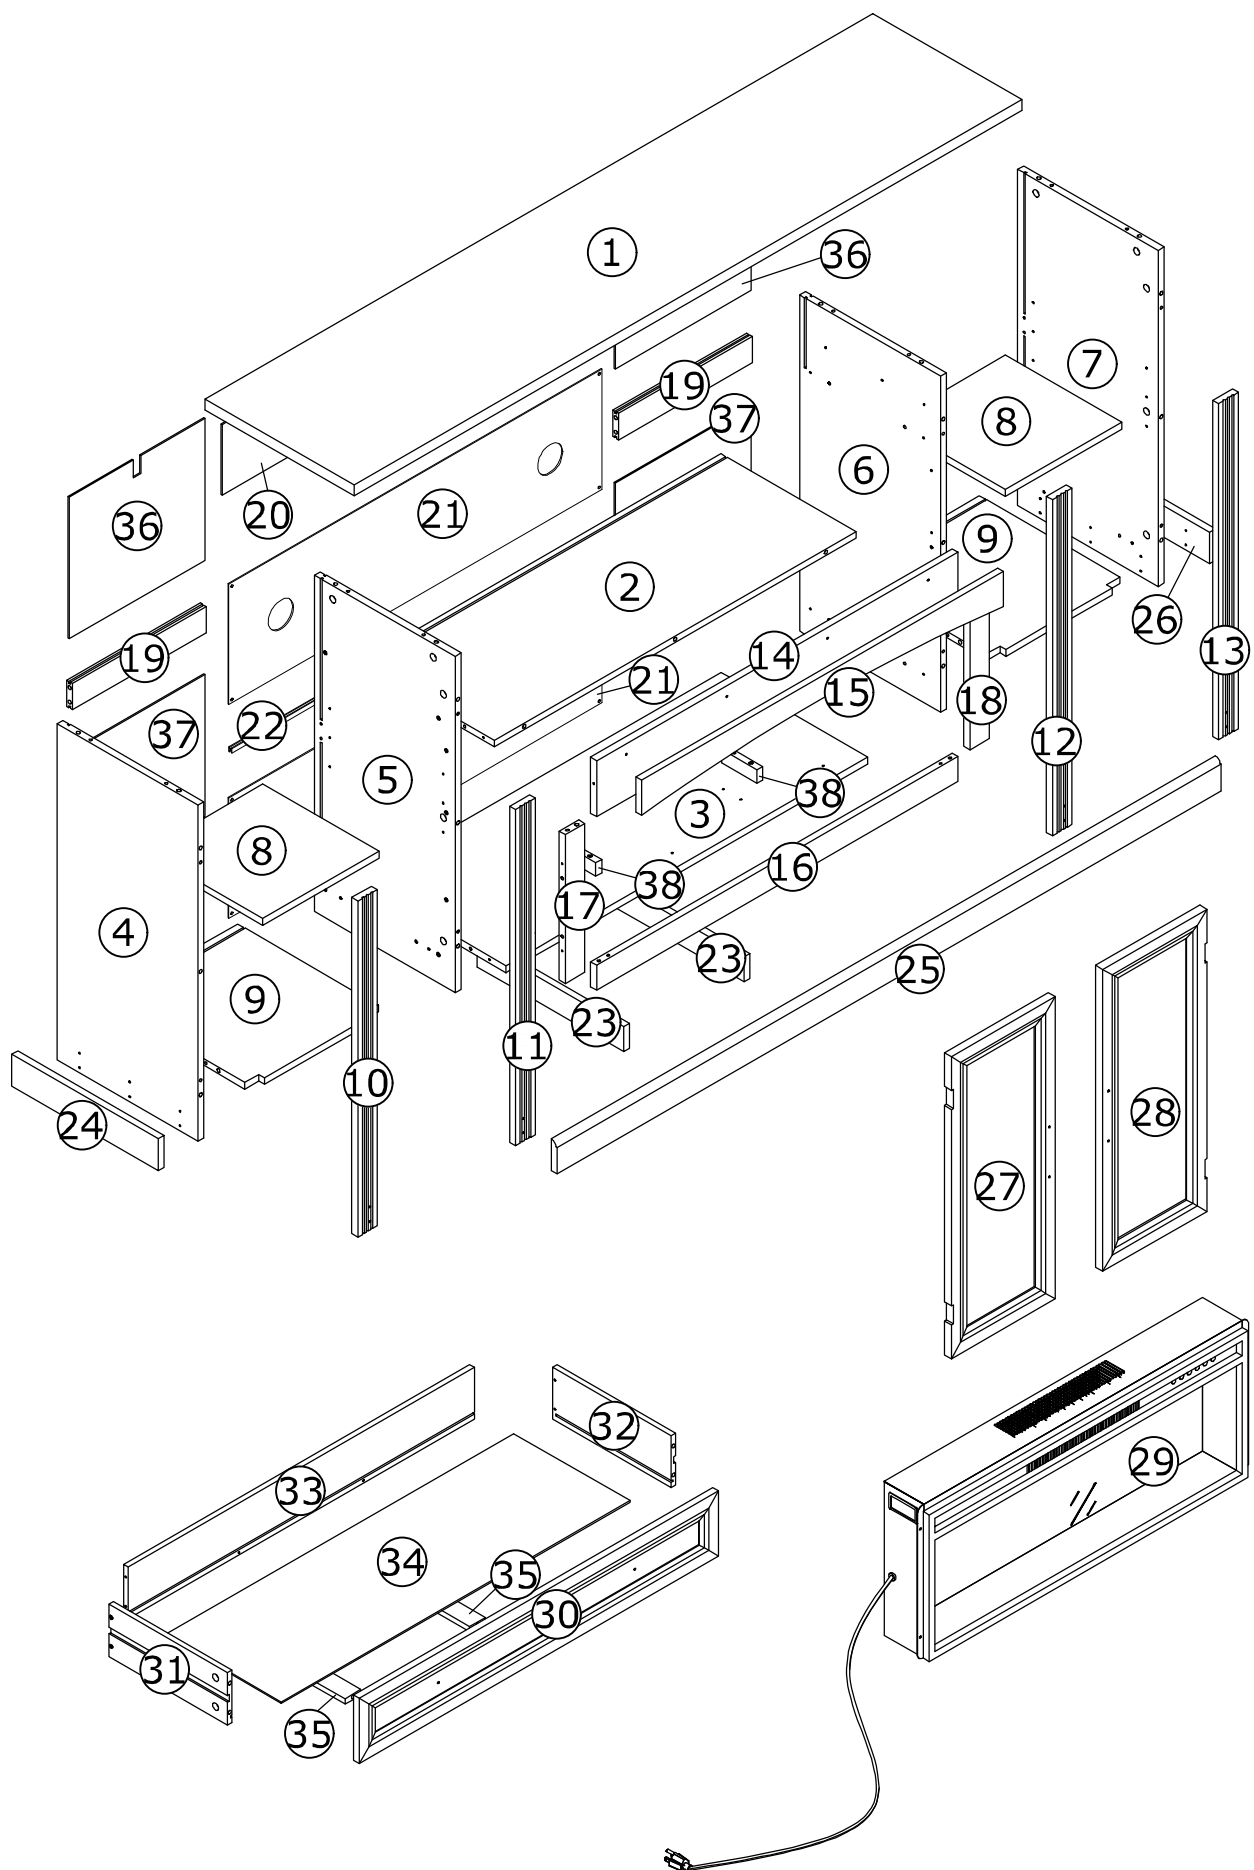

Assembly Instructions

Step 1

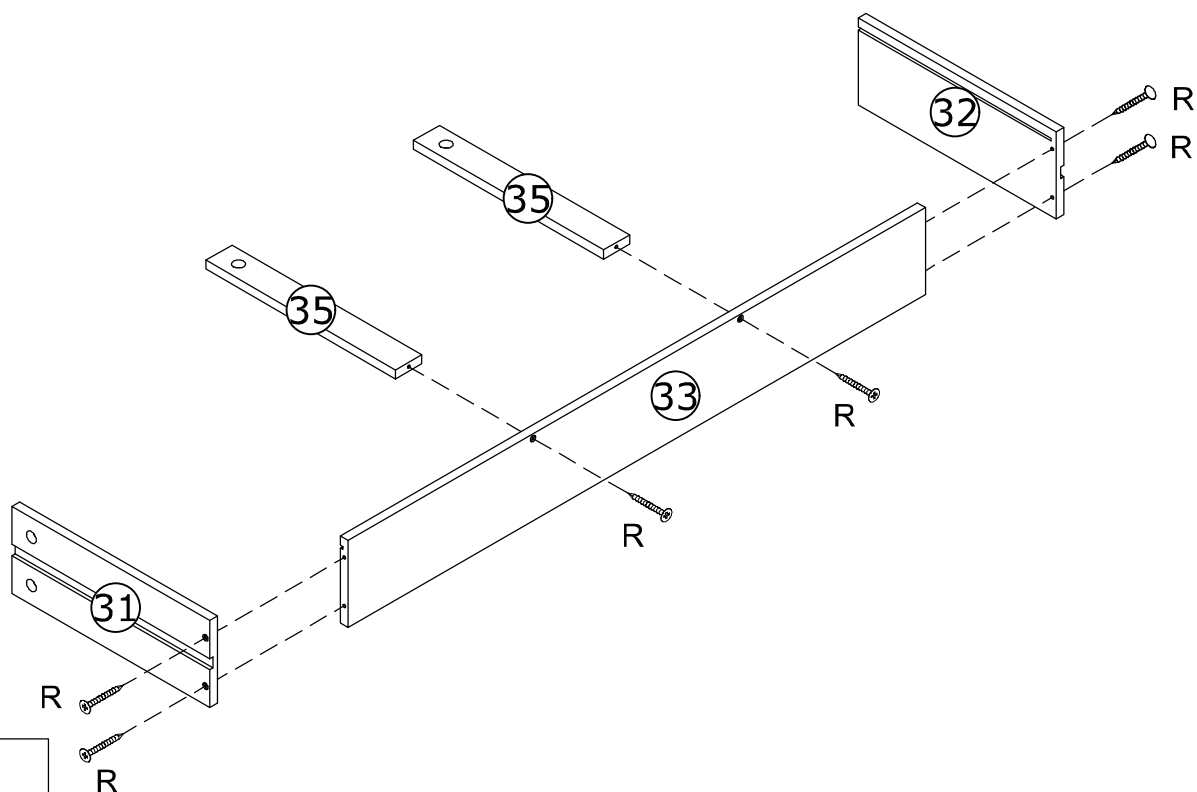


(R)




M4*30mm Screw x 6

Step 2

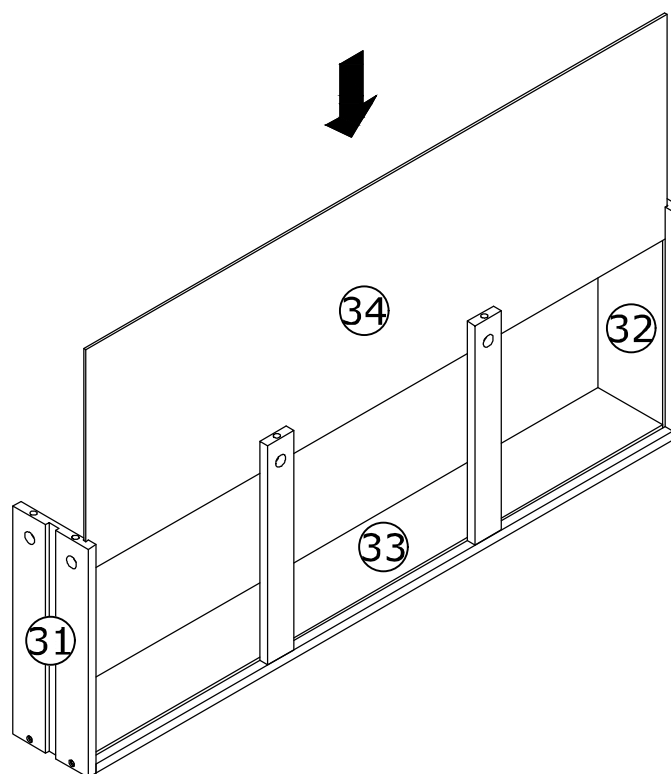

Assembly Instructions

Step 3

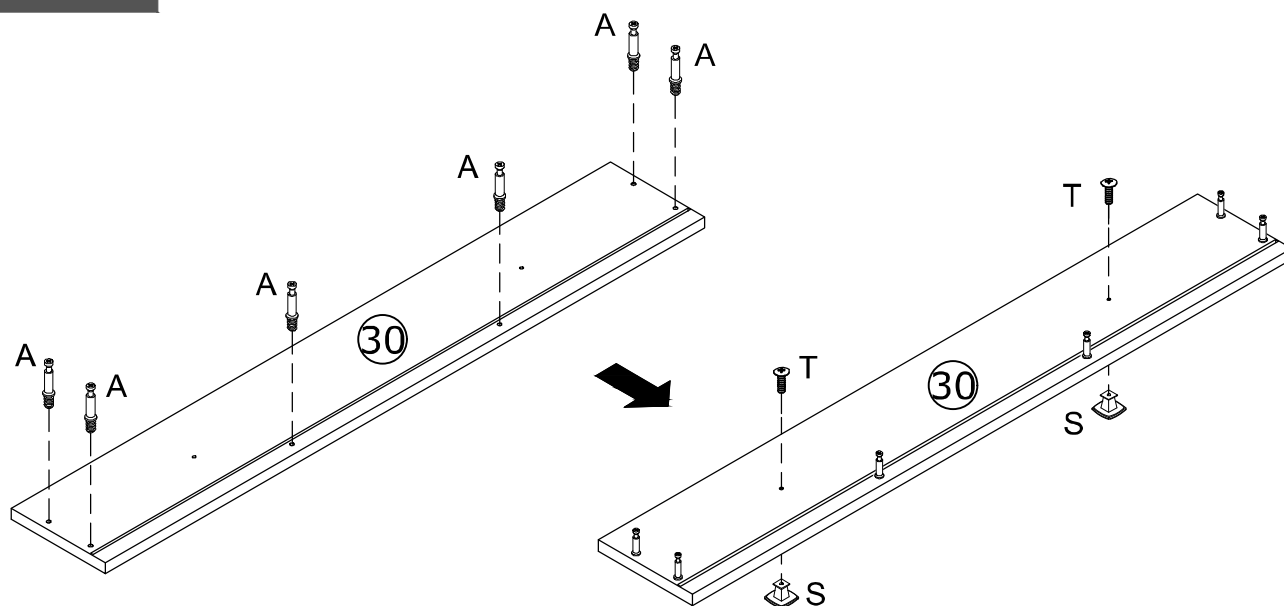

(A)



M6*35 Cam Bolt x 6

(S)




Handle x 2

(T)




M4*12mm Screw x 2


Step 4

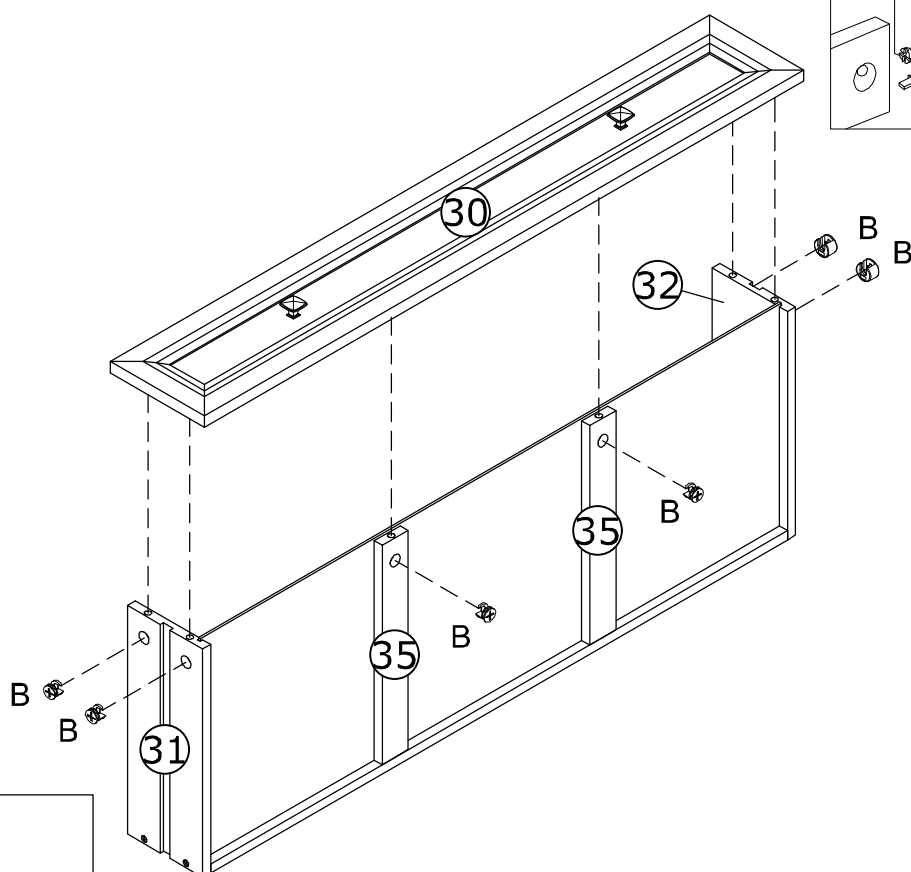


1

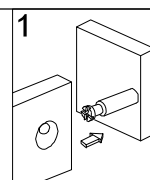

2



3

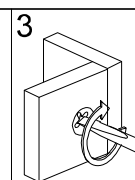


(B)






M15*10mm Cam lock x 6

Assembly Instructions

Step 5

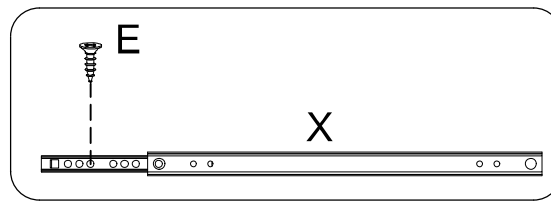


This slide rail cannot be separated.

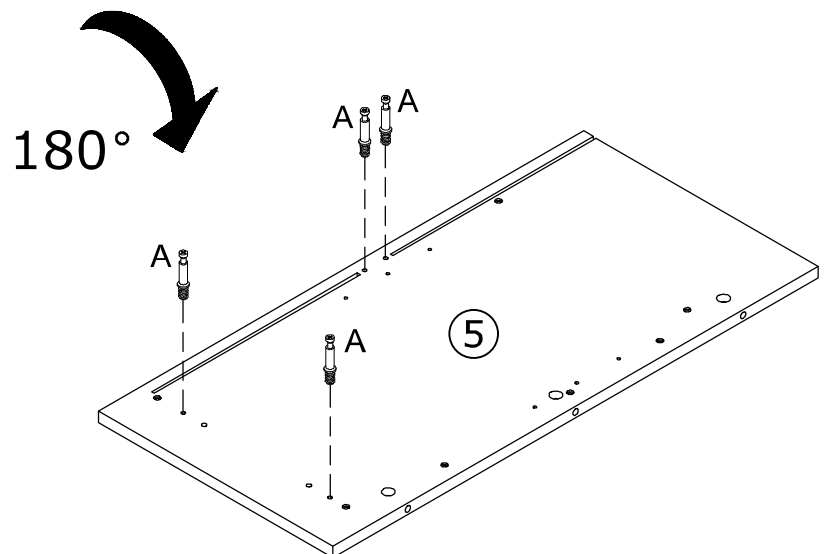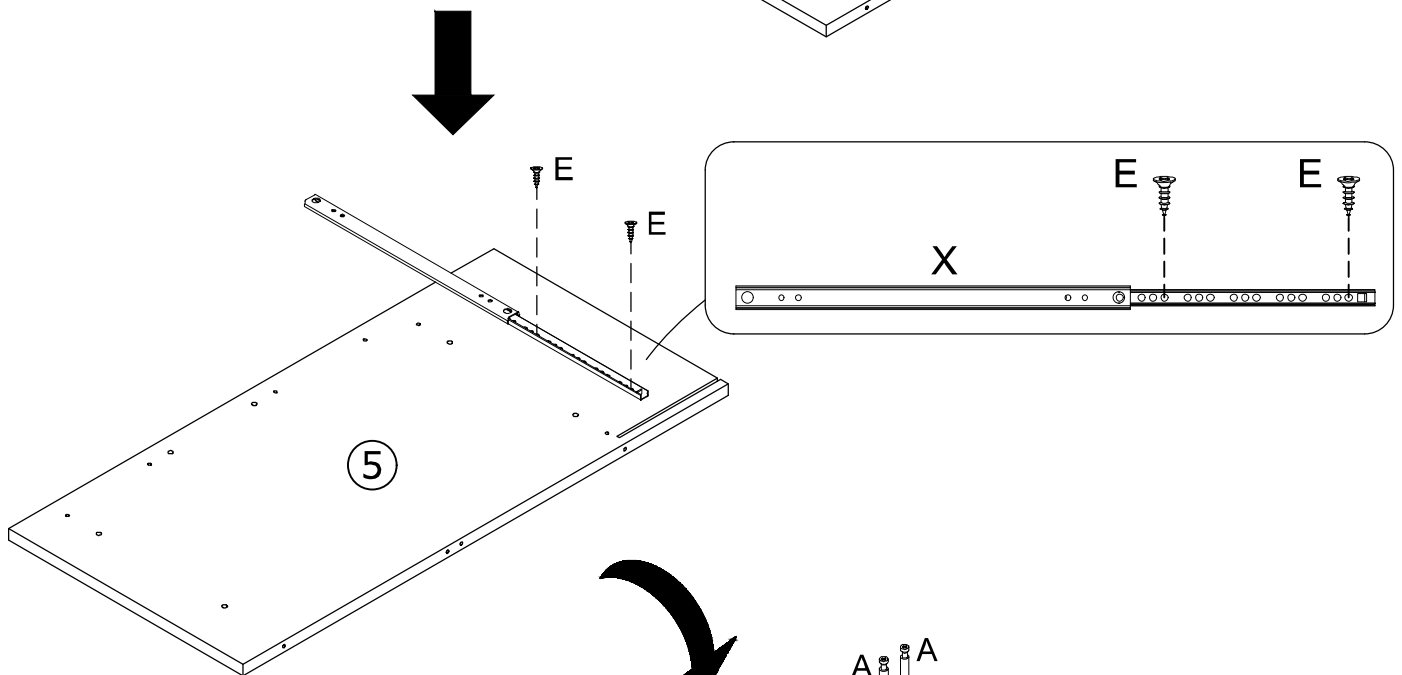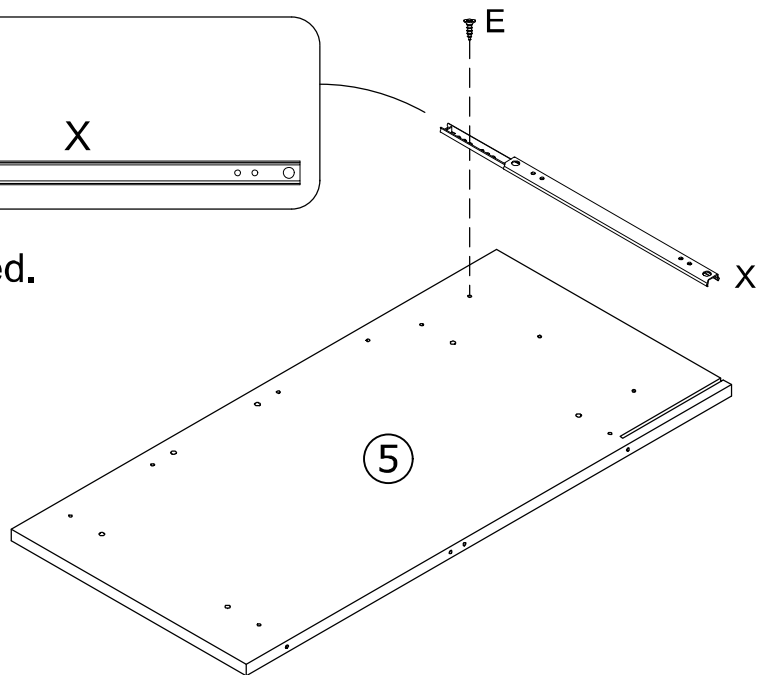


 M6*35 Cam Bolt x 4	 M3*12mm Screw x 3	 Slide Rail x 1
---	--	---

Assembly Instructions

Step 6

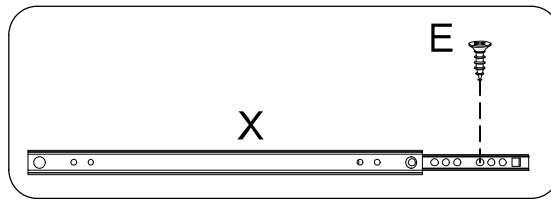


This slide rail cannot be separated.

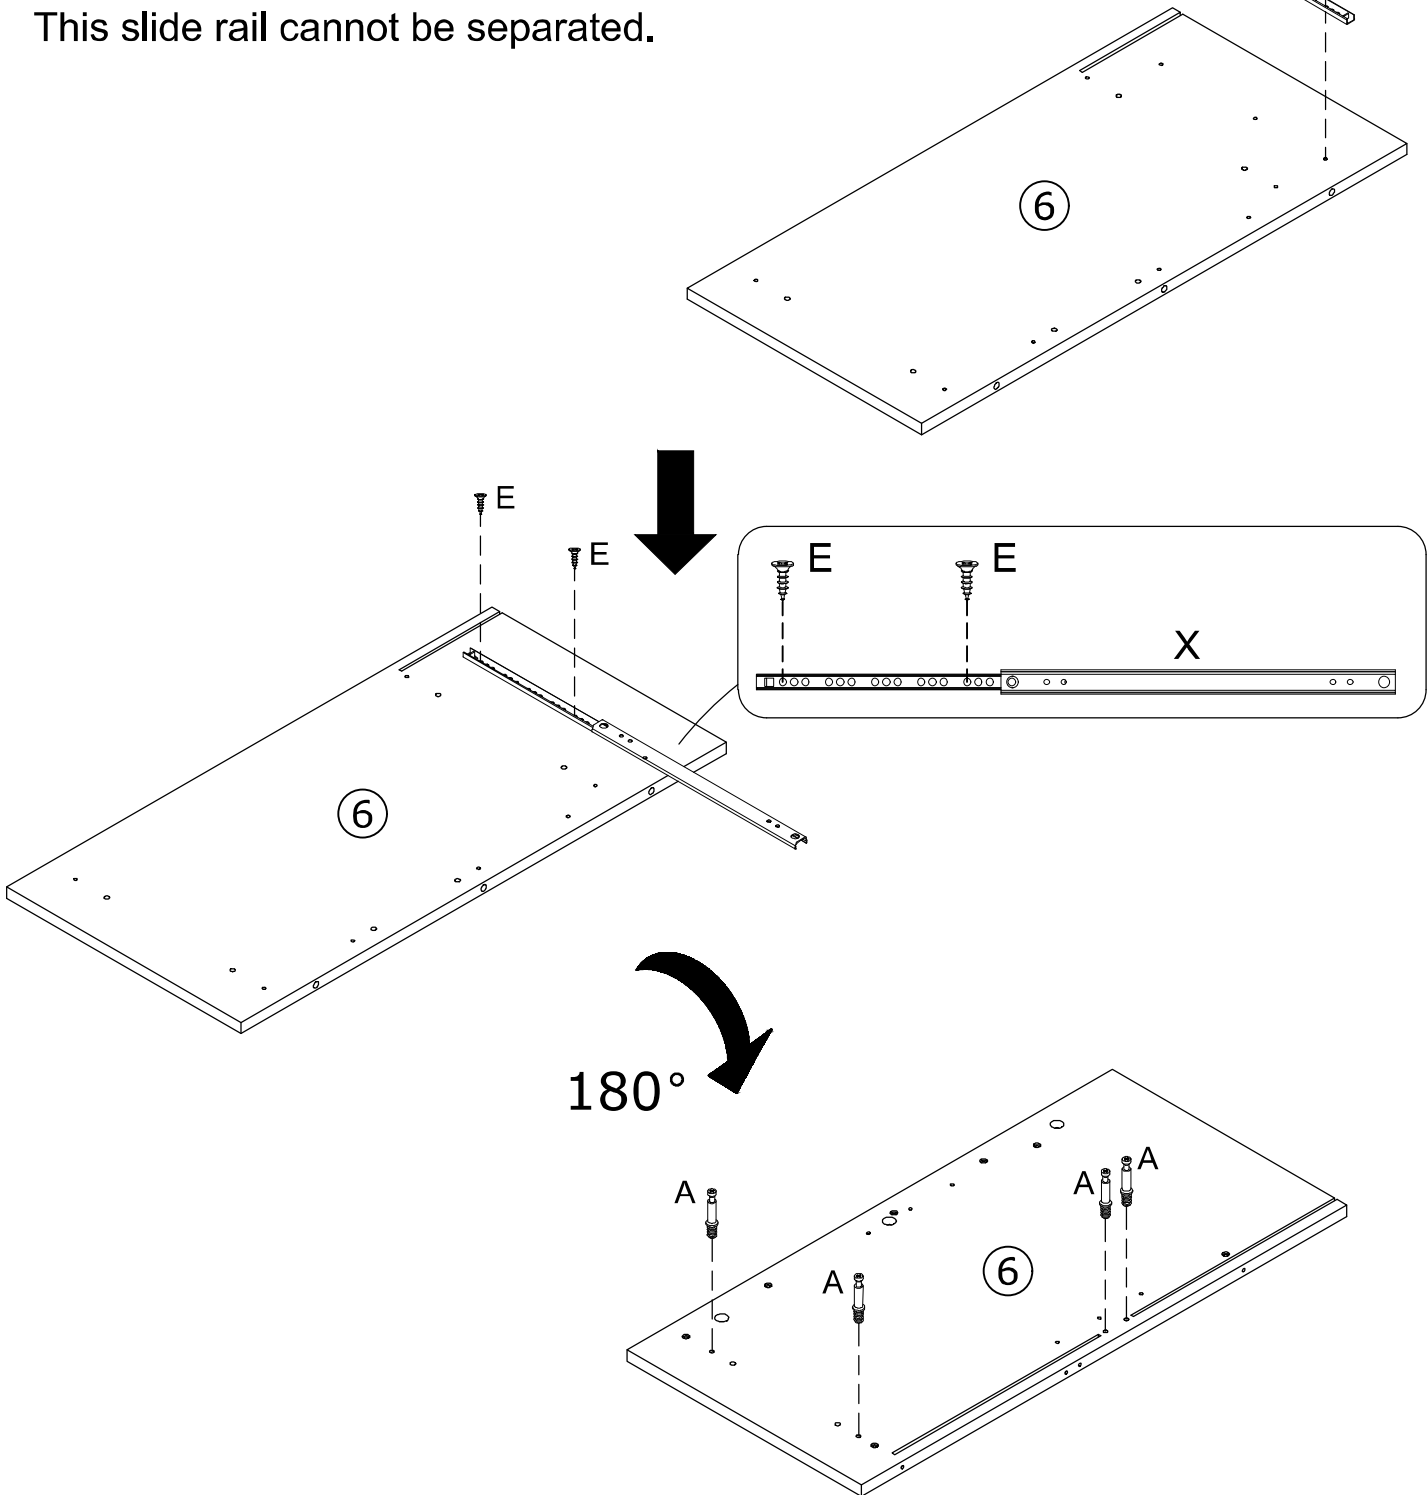

 M6*35 Cam Bolt x 4	 M3*12mm Screw x 3	 Slide Rail x 1
---	--	---

Assembly Instructions

Step 7

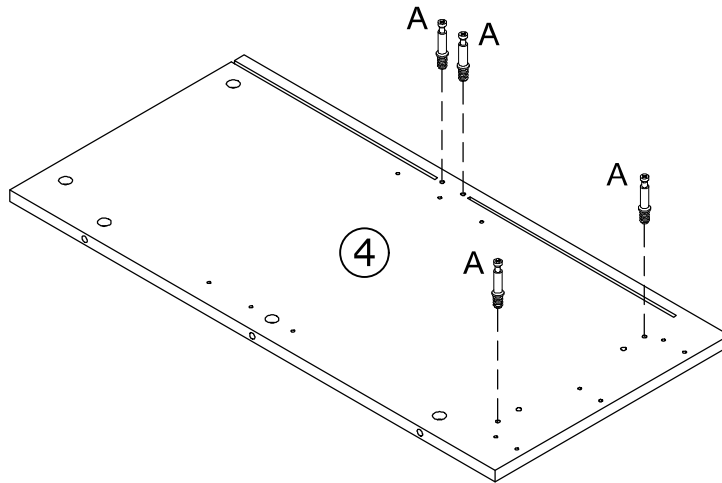


A



M6*35 Cam Bolt x 4

Step 8

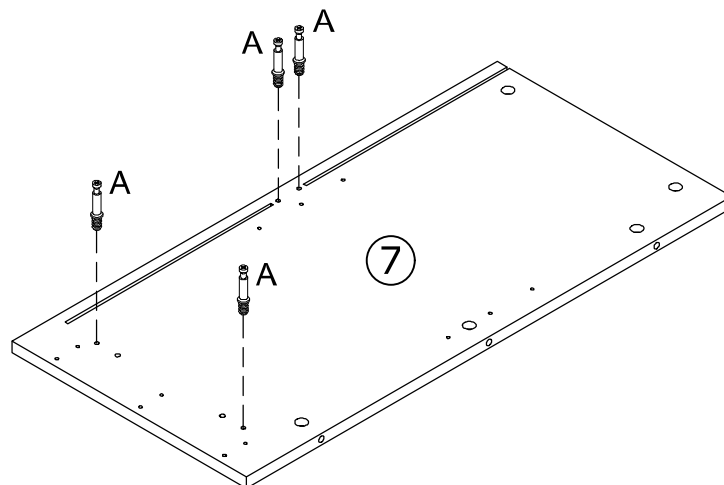


A



M6*35 Cam Bolt x 4

Assembly Instructions

Step 9

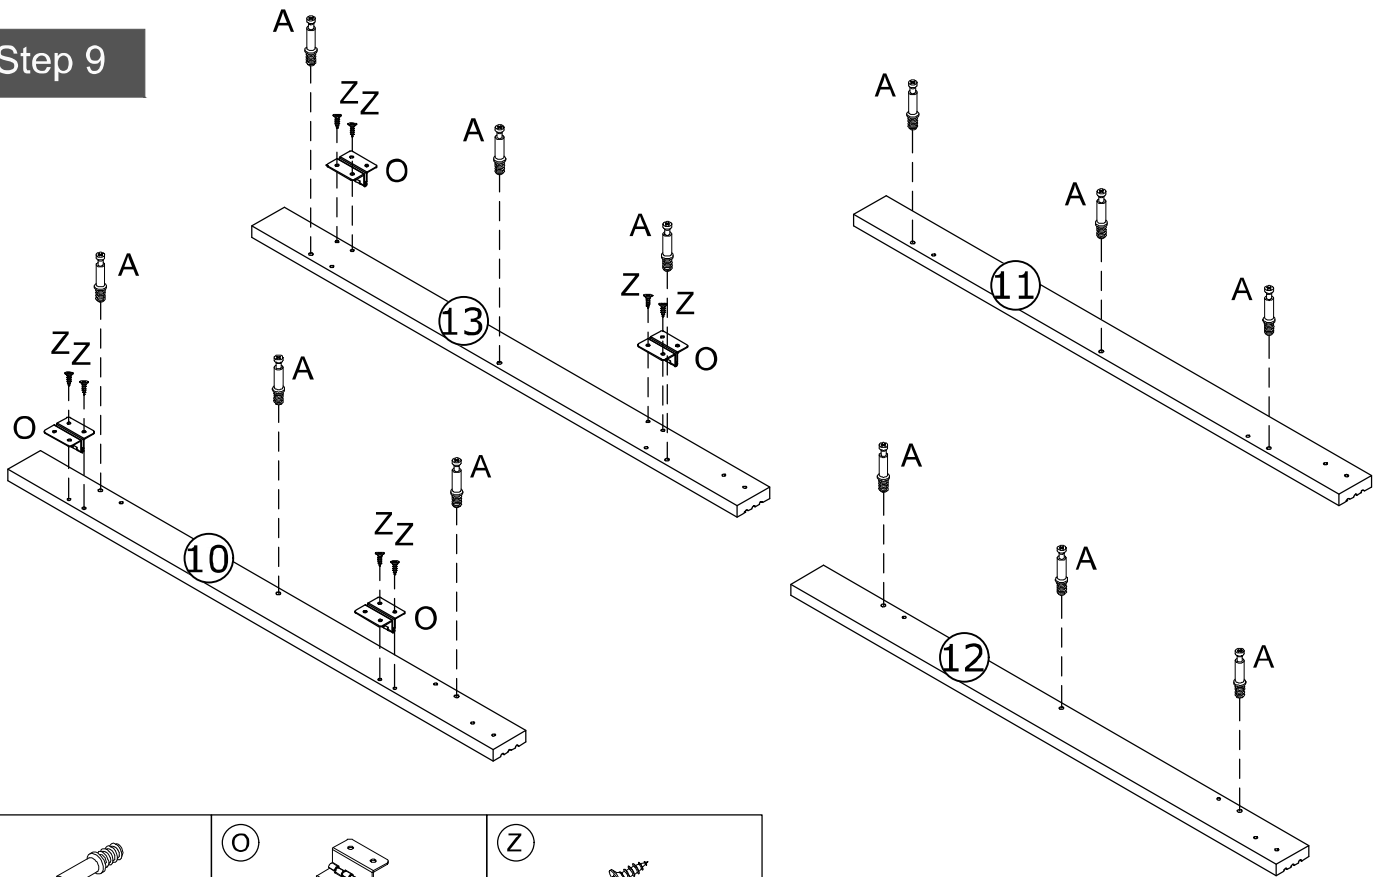

(A)



M6*35 Cam Bolt x 12

(O)





Hinge x 4

(Z)



M3*12mm Screw x 8

Step 10

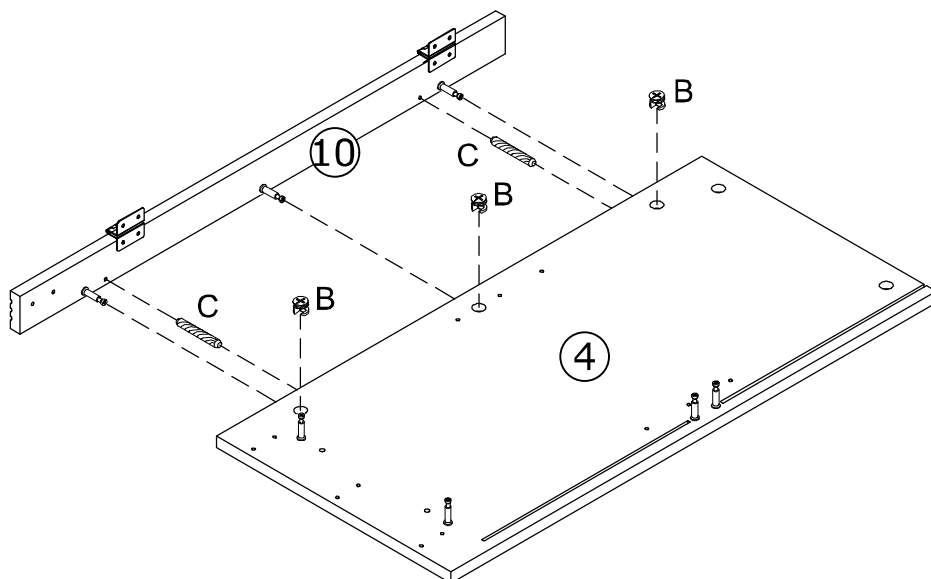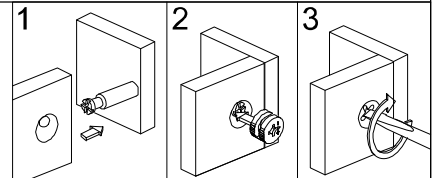

(B)



M15*10mm Cam lock x 3



(C)



M6*30mm Dowel x 2

Assembly Instructions

Step 11

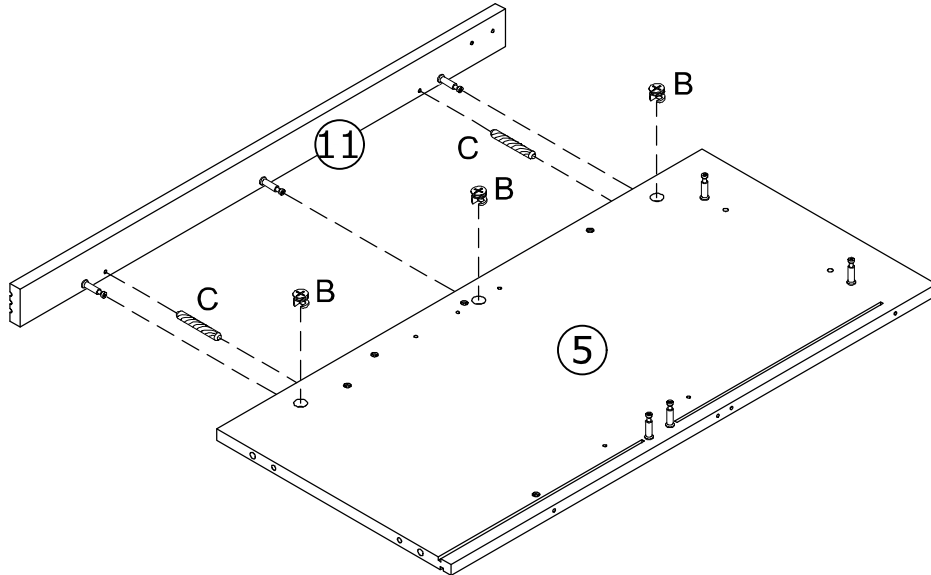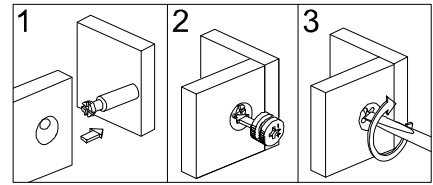

(B)





M15*10mm Cam lock x 3

(C)



M6*30mm Dowel x 2

Step 12

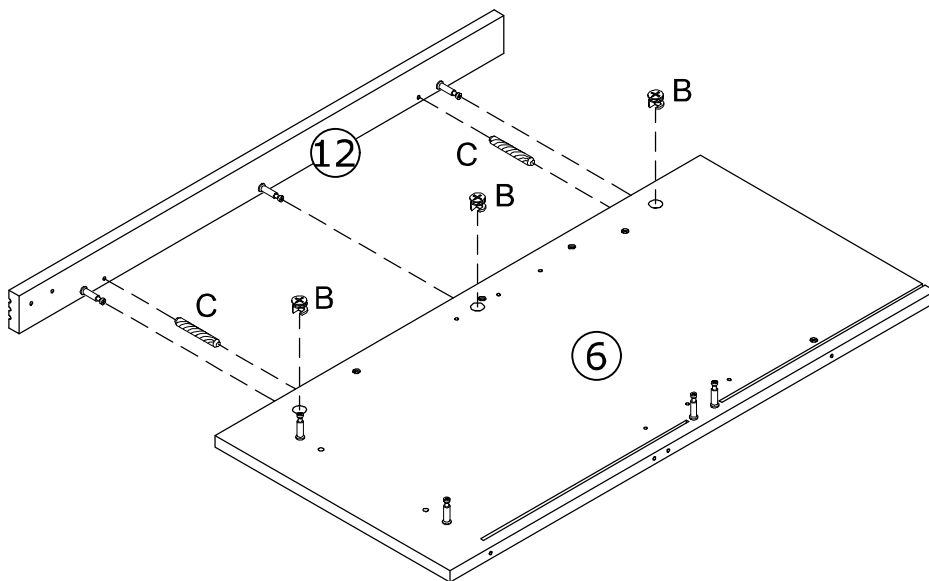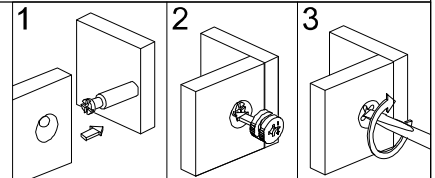

(B)



M15*10mm Cam lock x 3



(C)



M6*30mm Dowel x 2

Assembly Instructions

Step 13

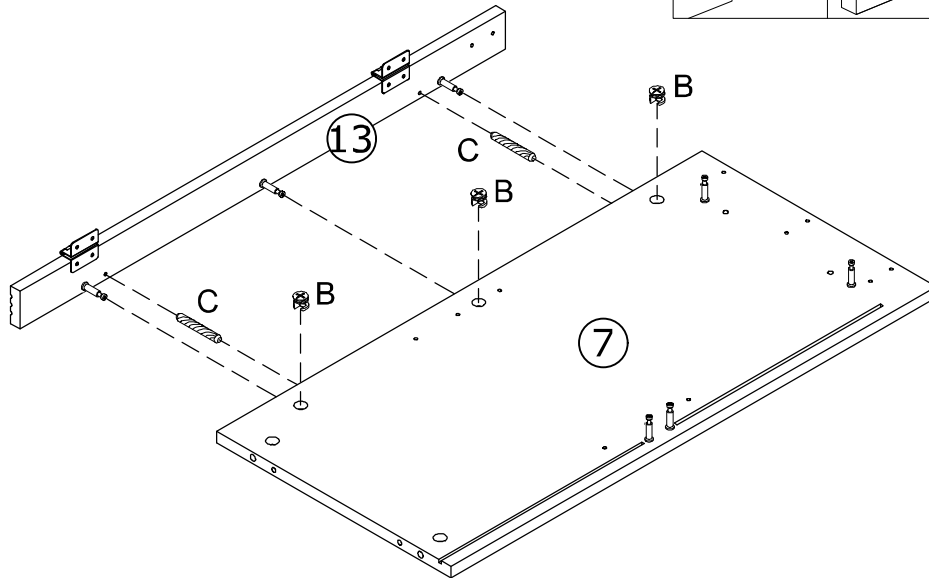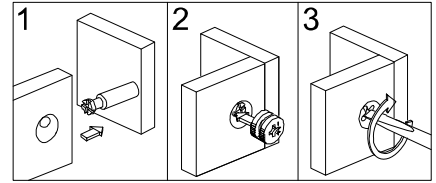

(B)




M15*10mm Cam lock x 3

(C)




M6*30mm Dowel x 2

Step 14

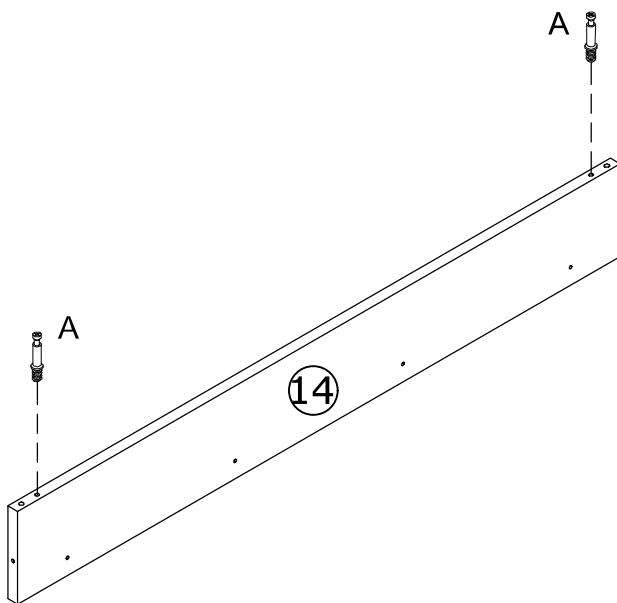

A

14

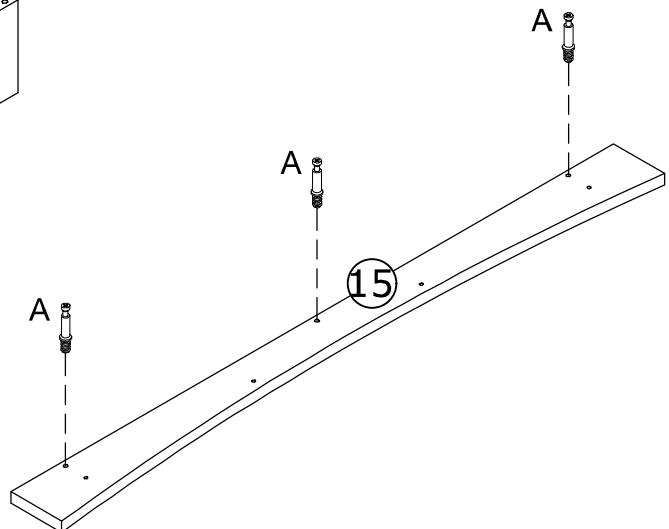

A

15


(A)



M6*35 Cam Bolt x 5

Assembly Instructions

Step 15


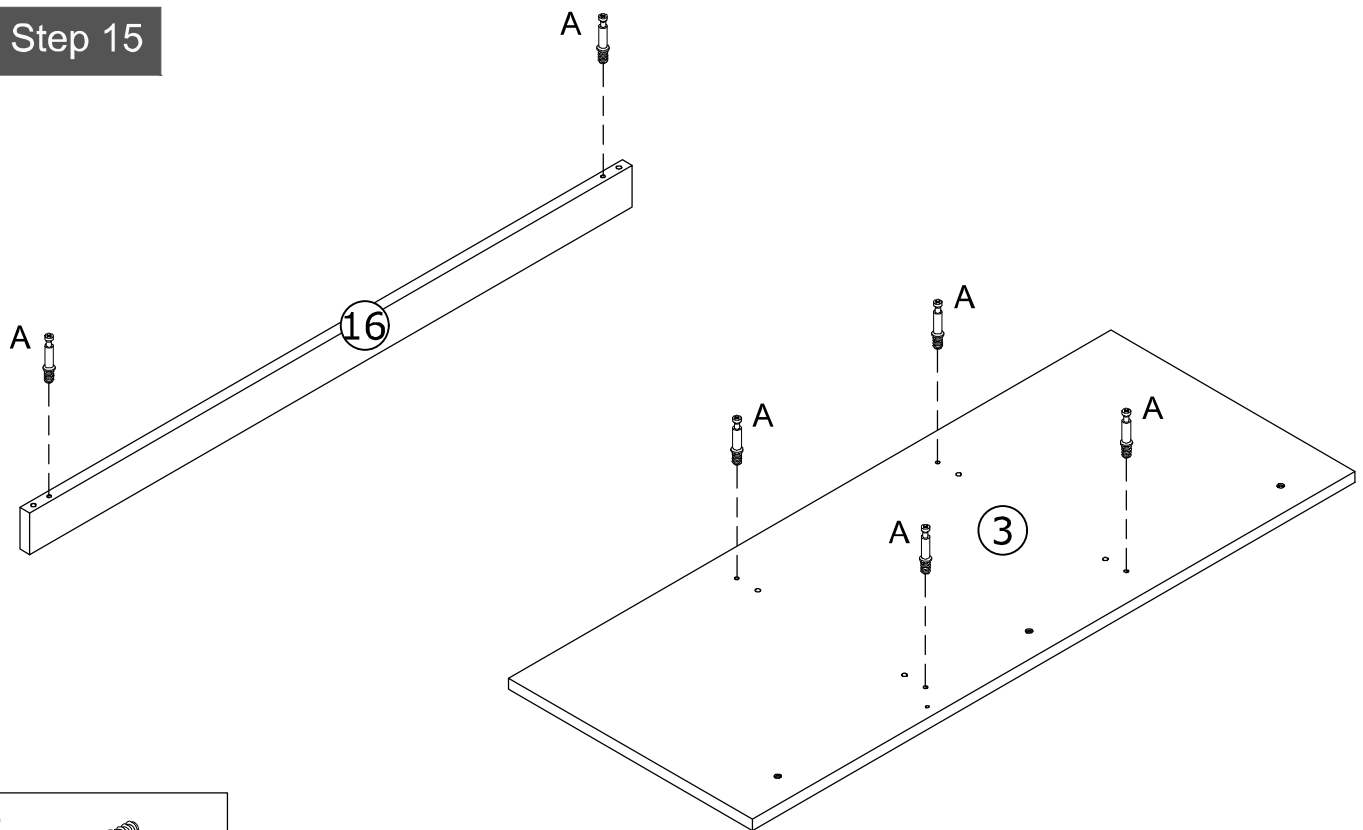


(A)



M6*35 Cam Bolt x 6

Step 16

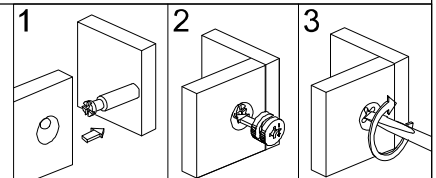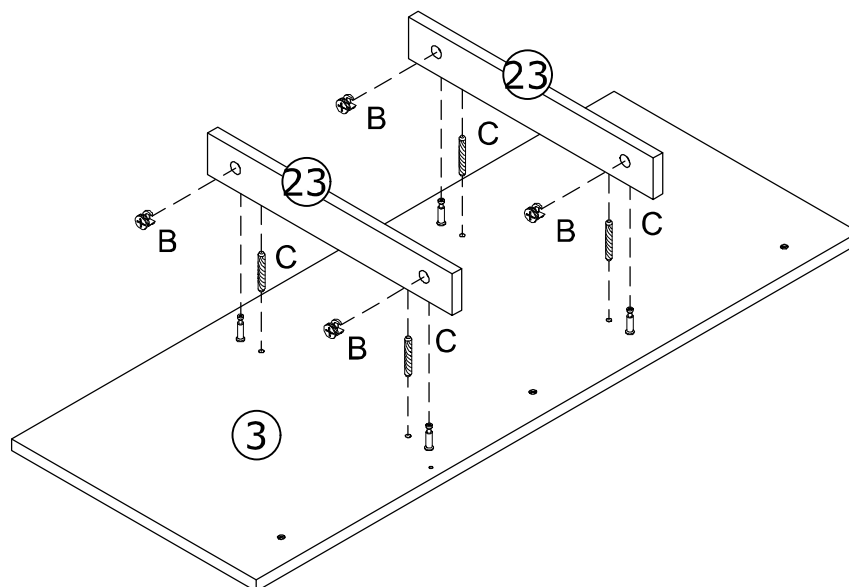

(B)



M15*10mm Cam lock x 4


(C)



M6*30mm Dowel x 4

Assembly Instructions

Step 17

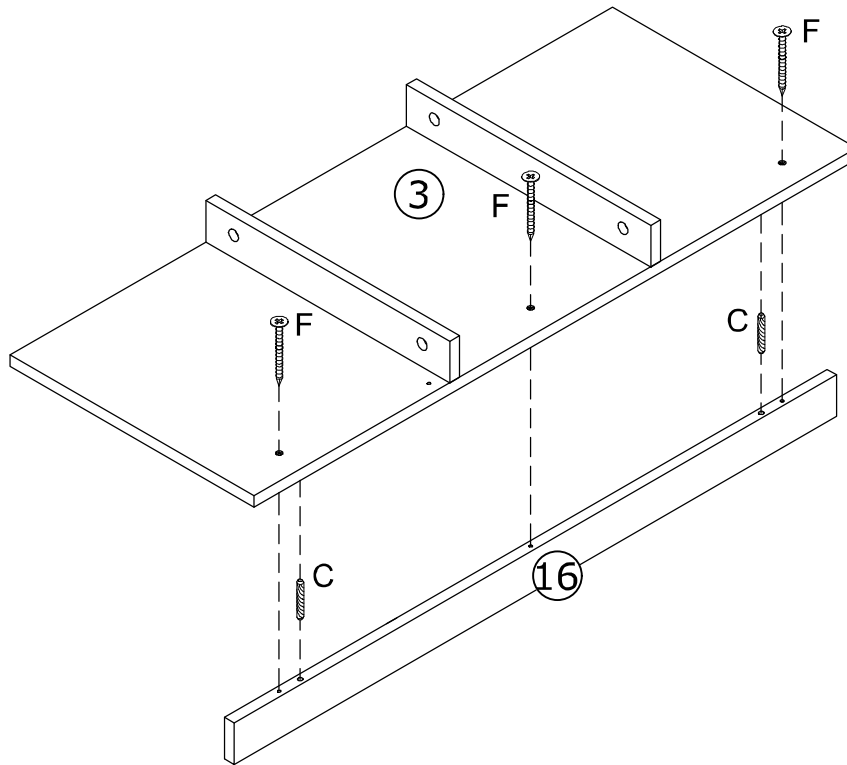

(C)





M6*30mm Dowel x 2

(F)



M4*40mm Screw x 3

Step 18

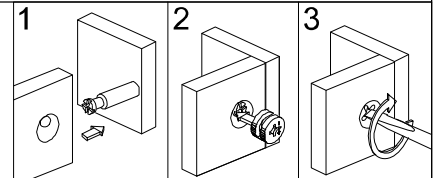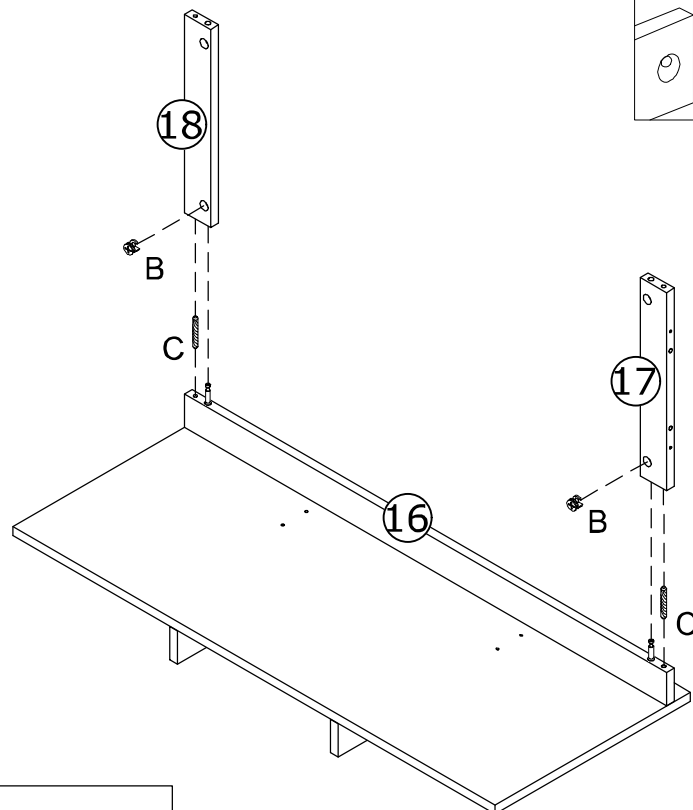

(B)



M15*10mm Cam lock x 2



(C)



M6*30mm Dowel x 2

Assembly Instructions

Step 19

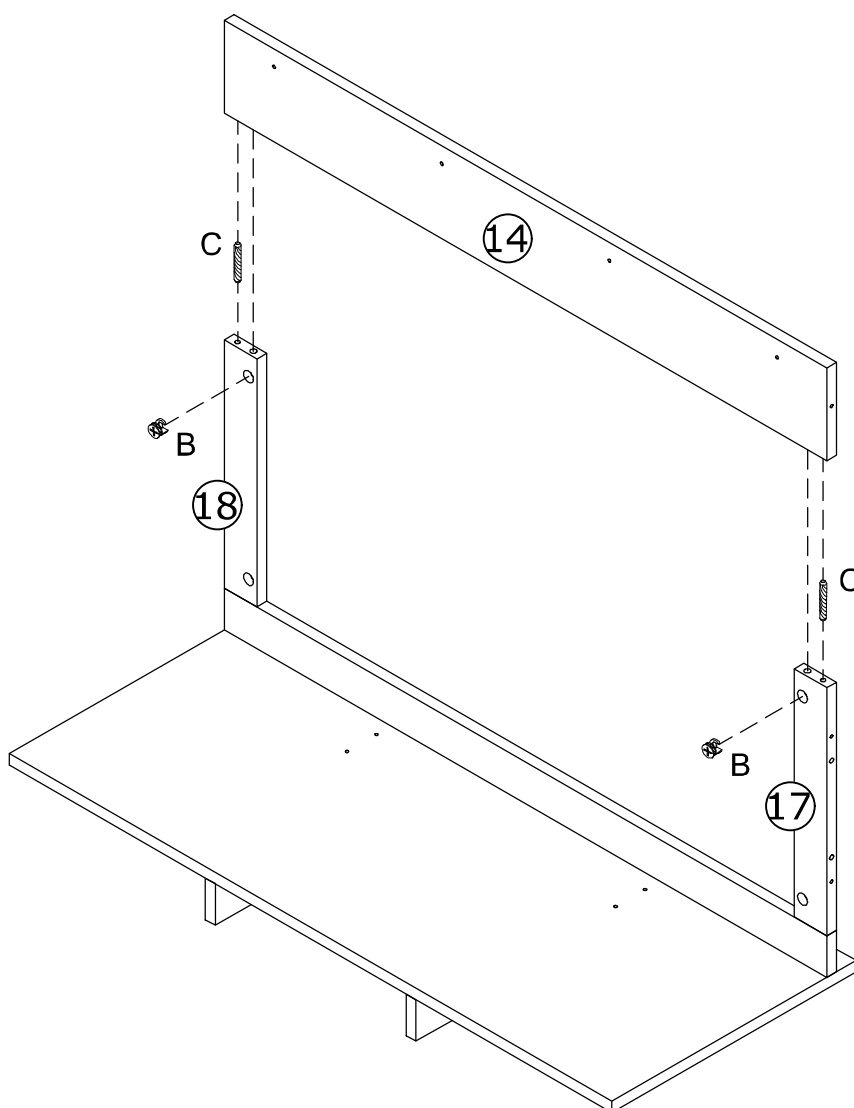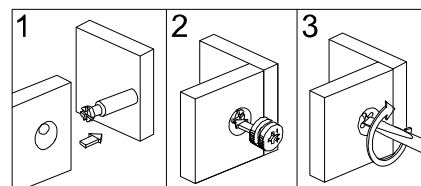

(B)



M15*10mm Cam lock x 2




(C)



M6*30mm Dowel x 2


Assembly Instructions

Step 20

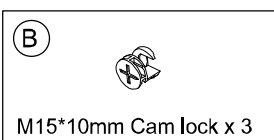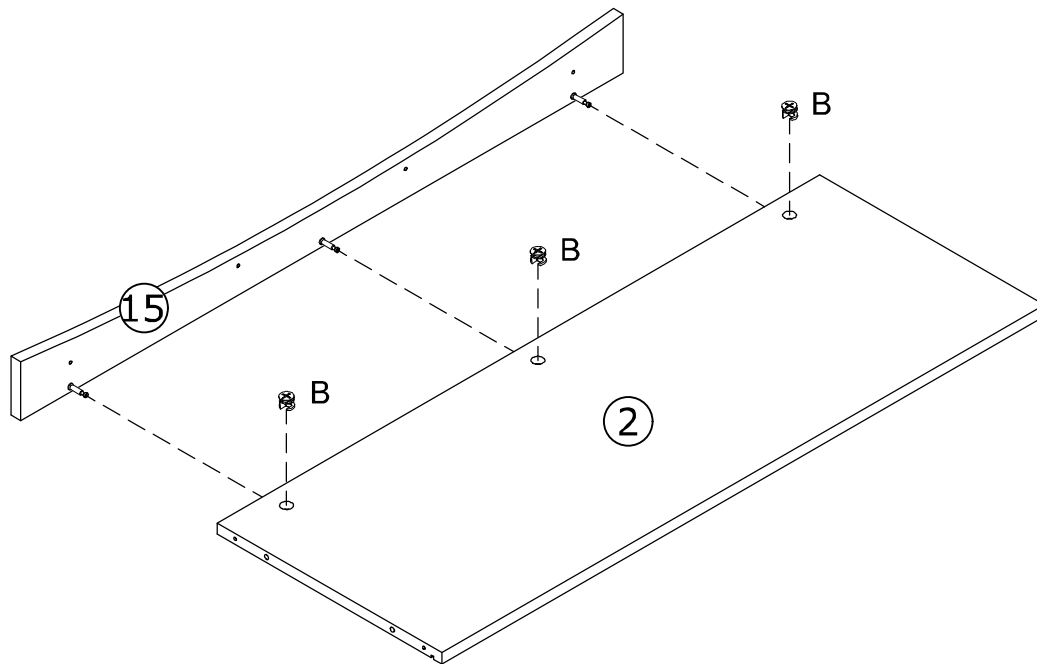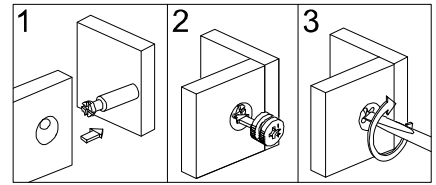

Assembly Instructions

Step 21

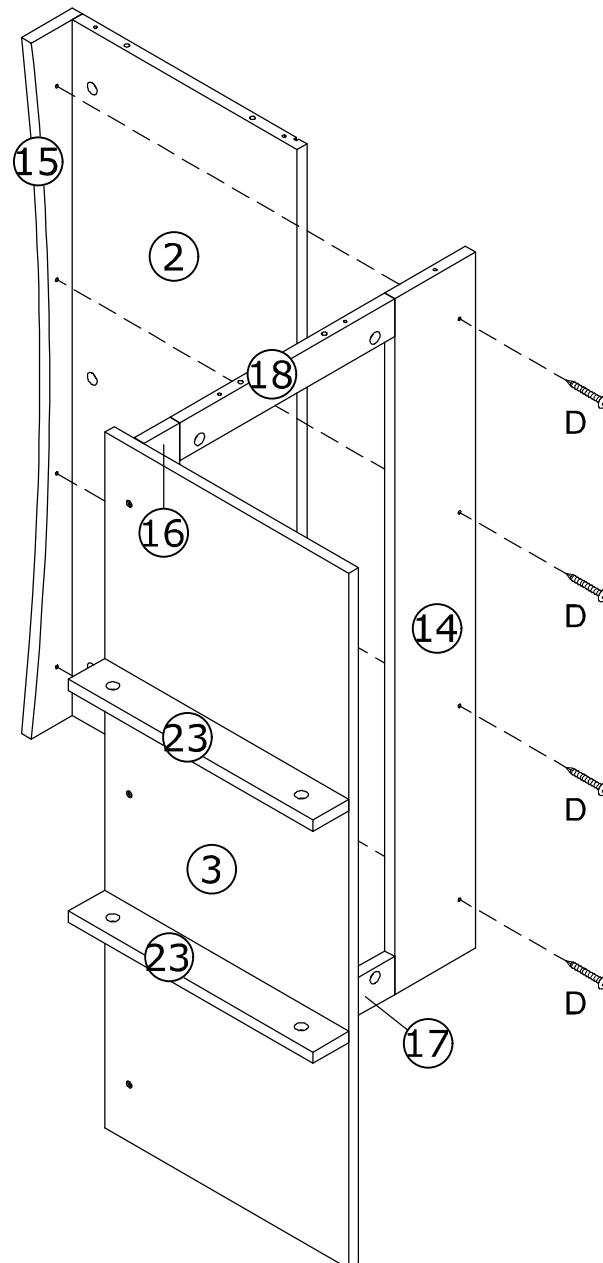


D



M3*25mm Screw x 4

Assembly Instructions

Step 22

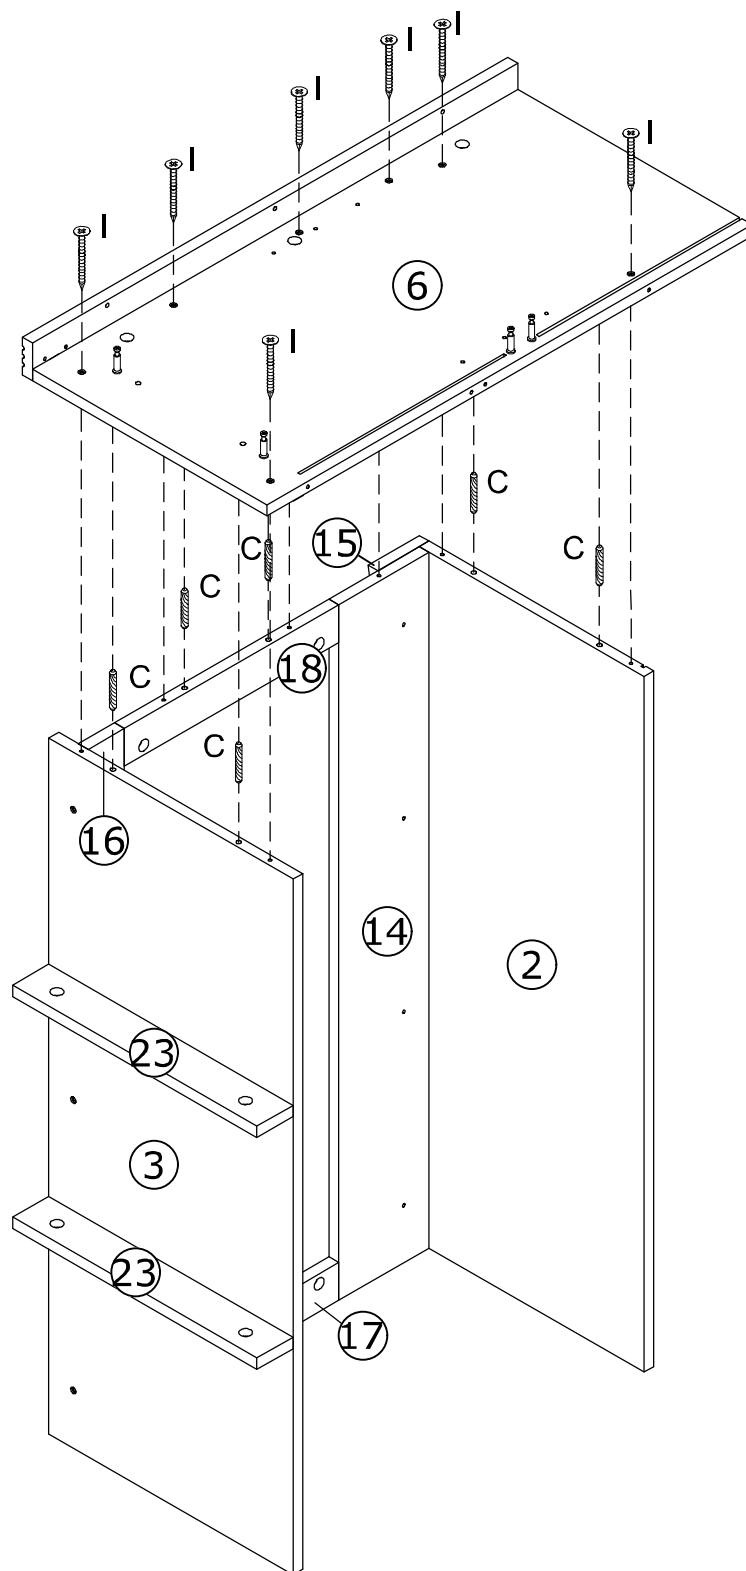

(C)



M6*30mm Dowel x 6

(I)




M4*35mm Screw x 7

Assembly Instructions

Step 23




Be careful! At least two people are required

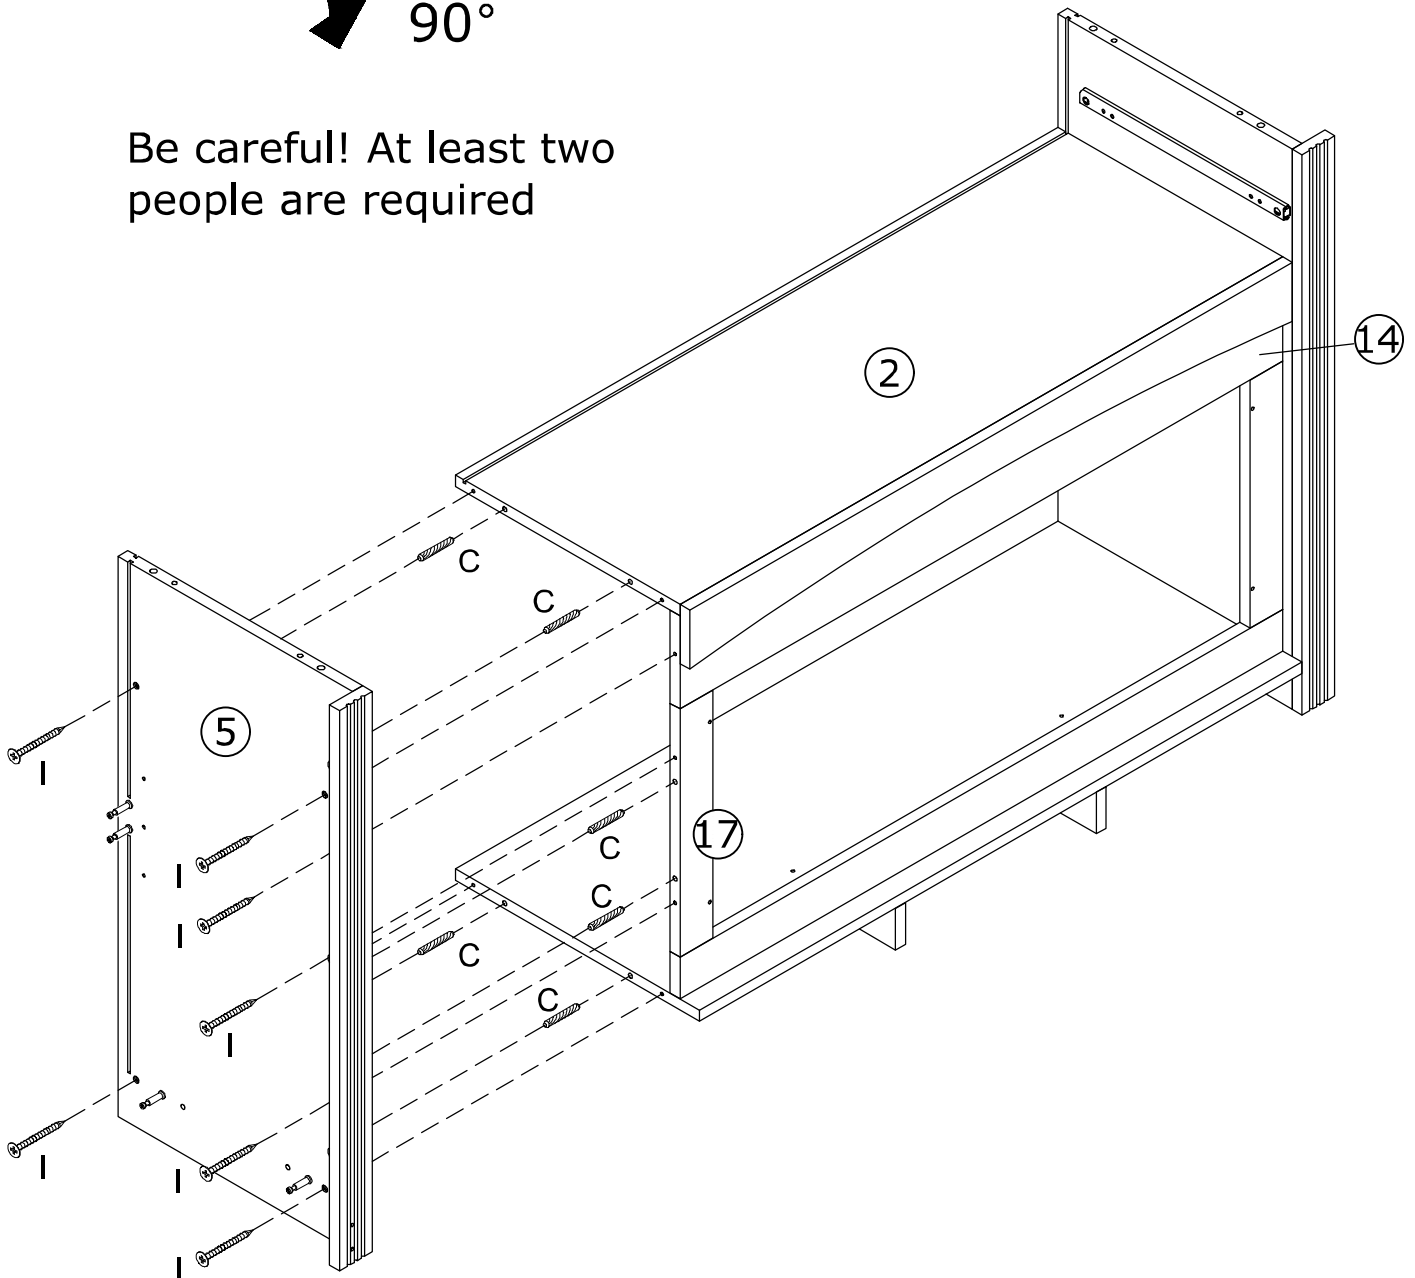


(C)  M6*30mm Dowel x 6	(I)  M4*35mm Screw x 7
---	---

Assembly Instructions

Step 24

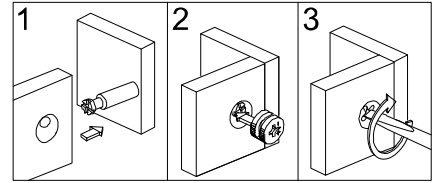


Be careful! At least two people are required

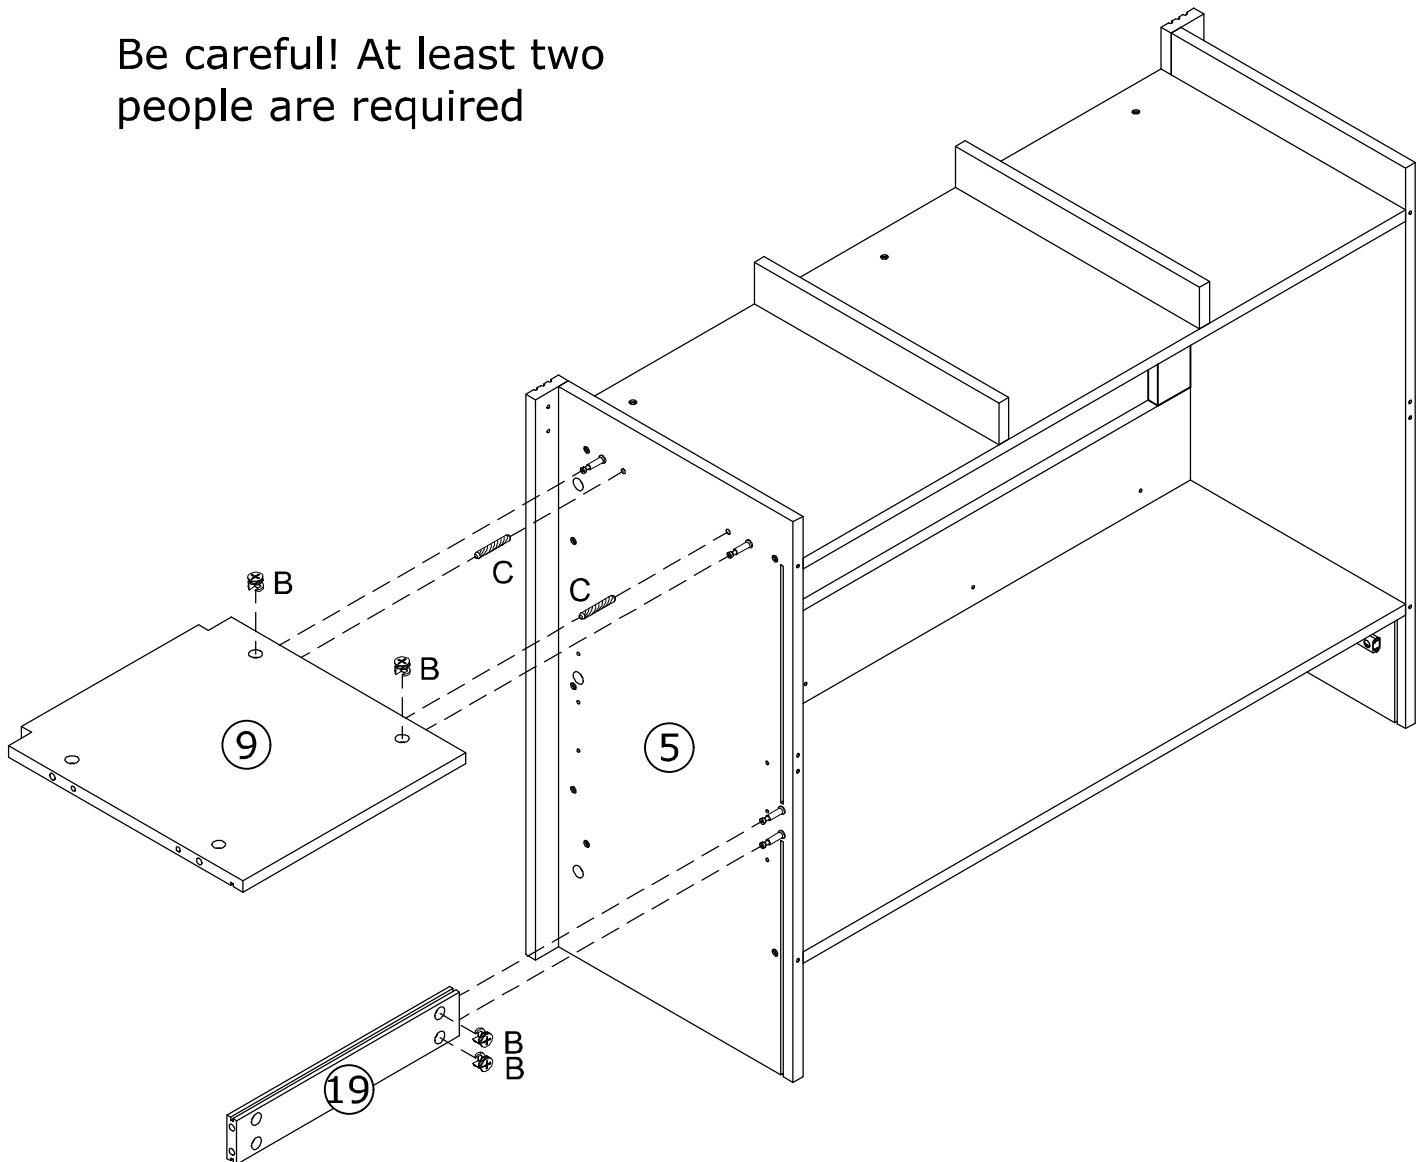

(B)  M15*10mm Cam lock x 4	(C)  M6*30mm Dowel x 2
---	---



Assembly Instructions

Step 25

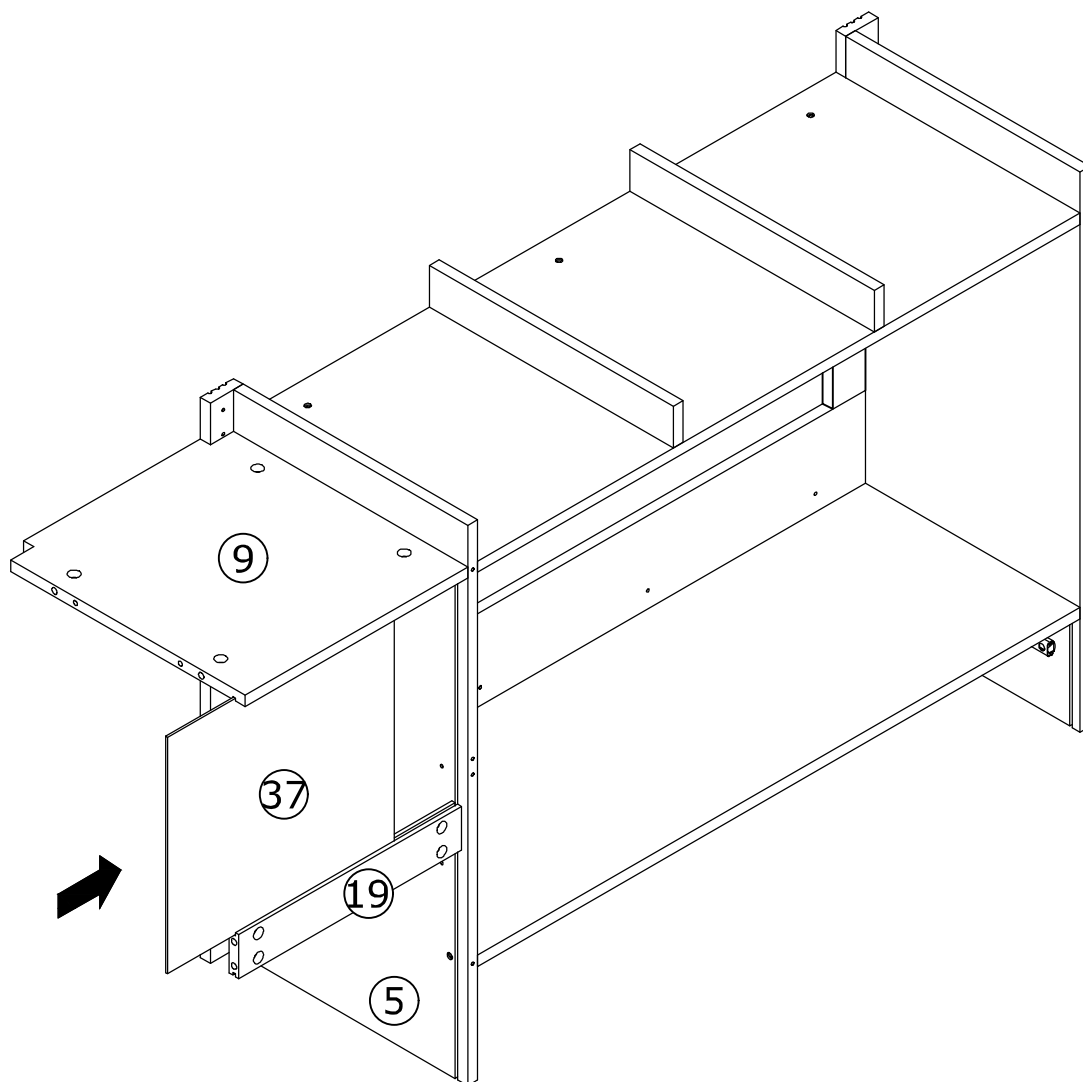

Assembly Instructions

Step 26

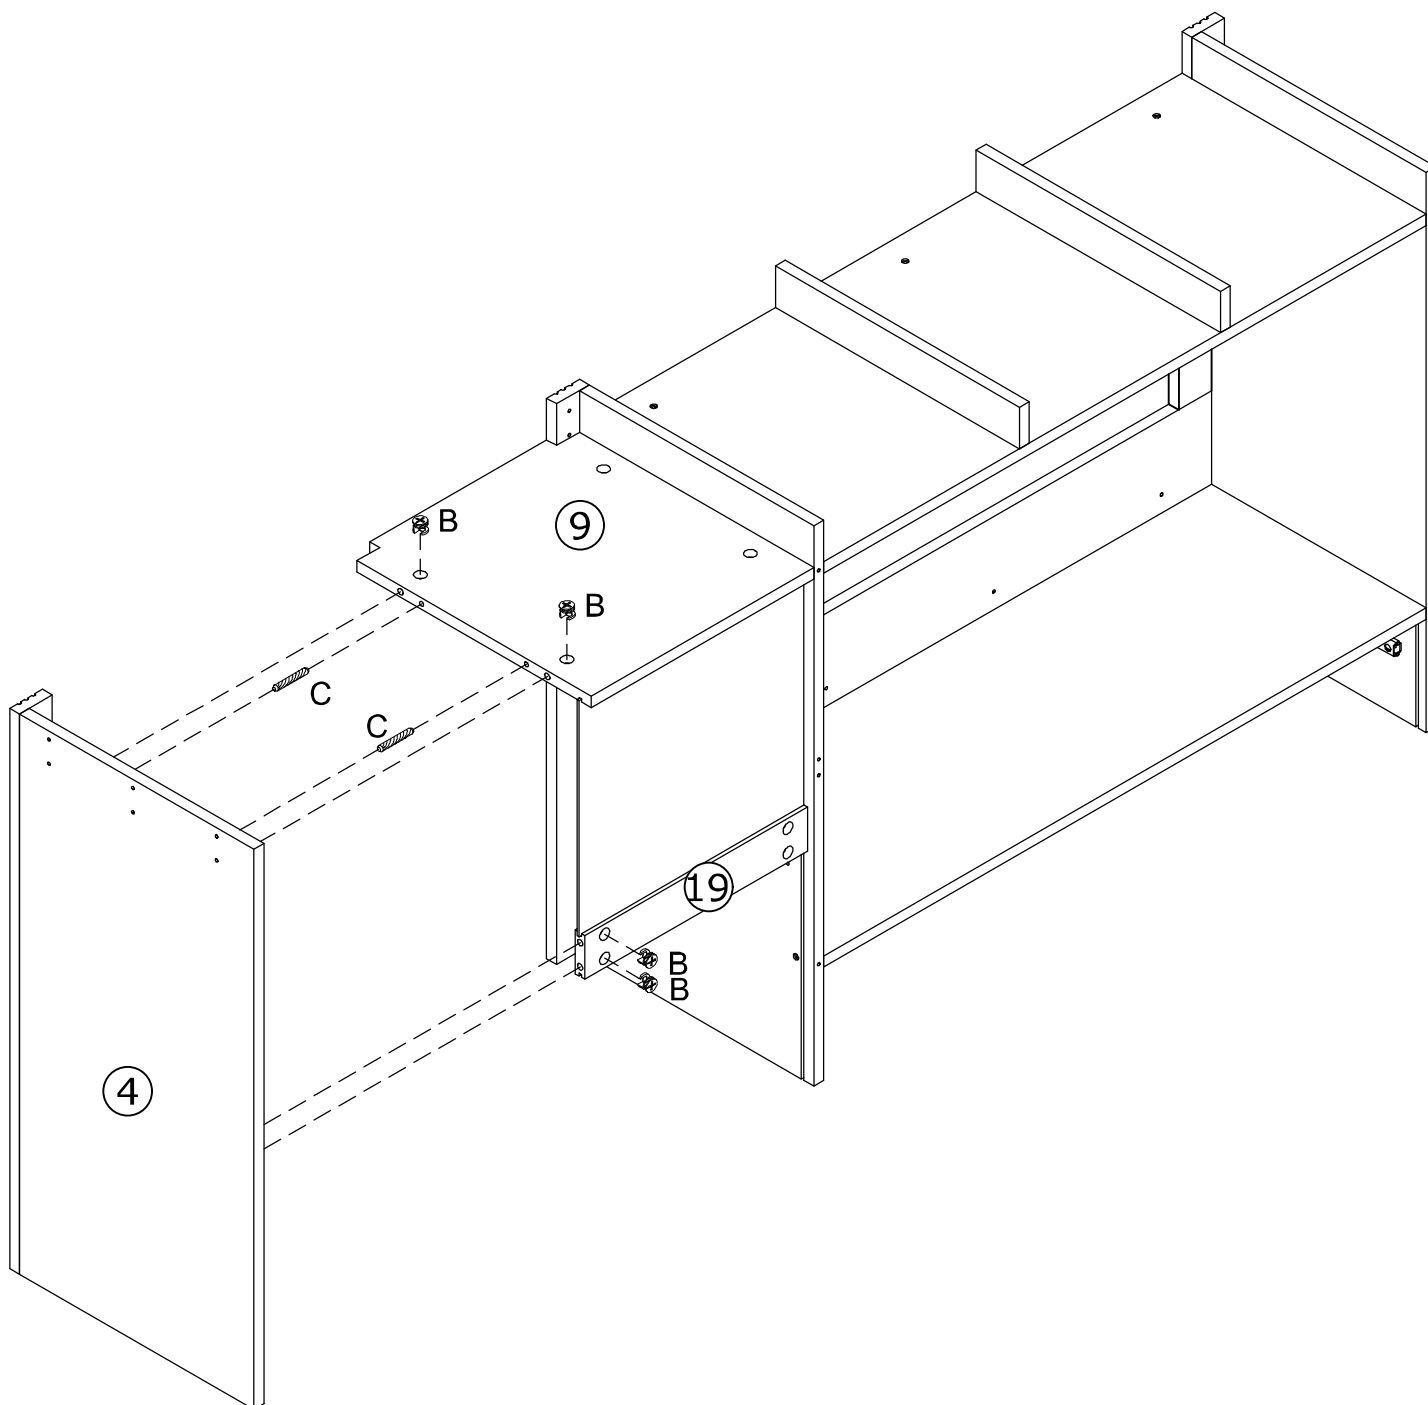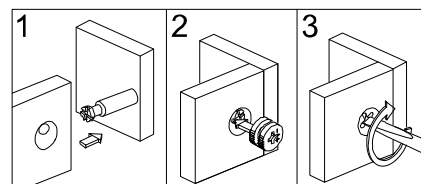

(B)



M15*10mm Cam lock x 4



(C)



M6*30mm Dowel x 2

Assembly Instructions


Step 27

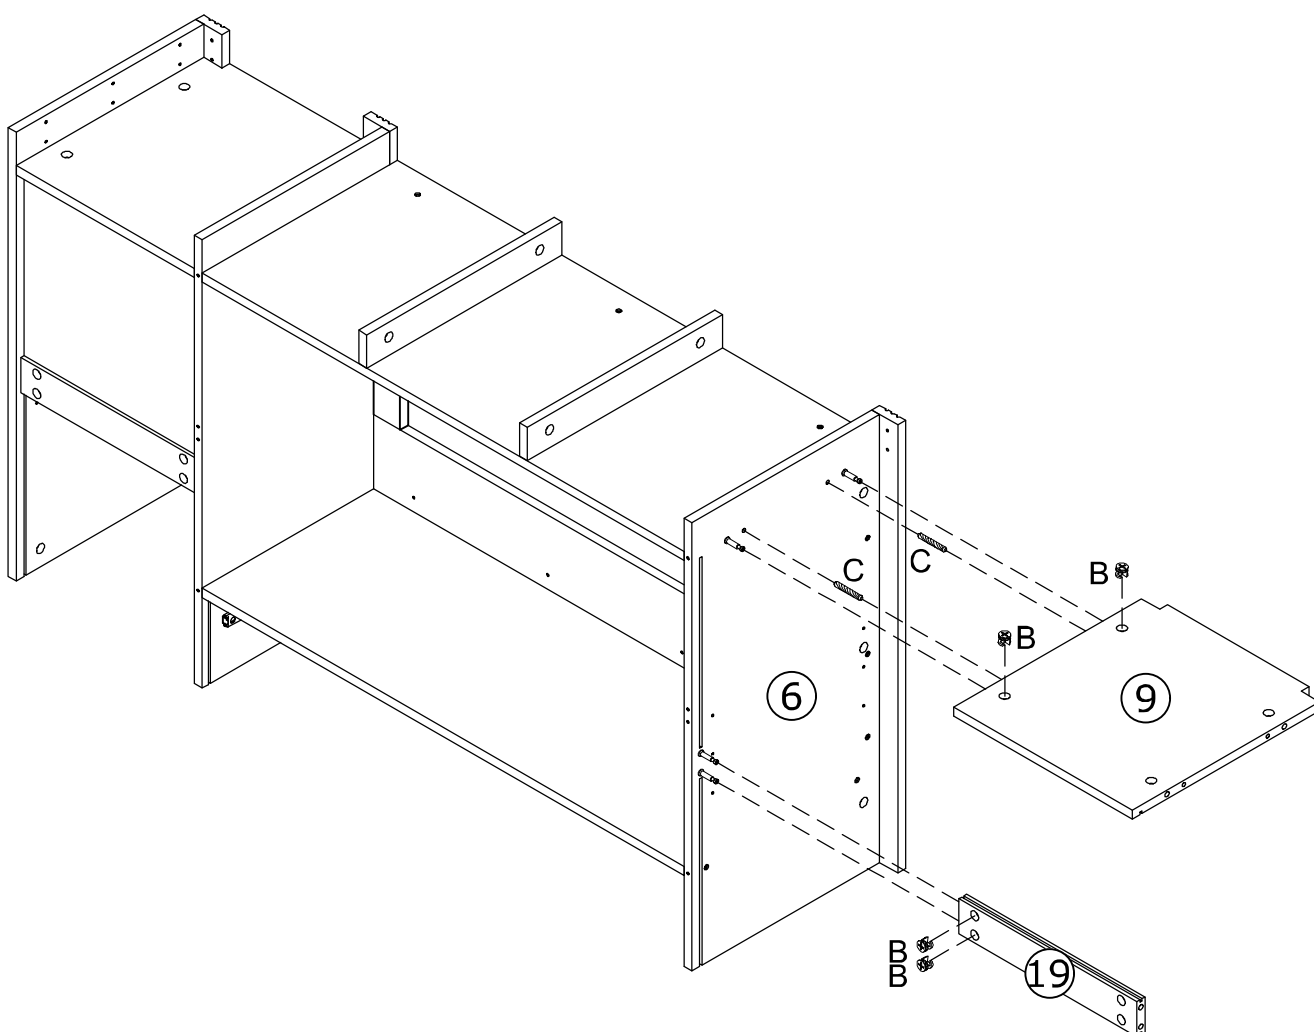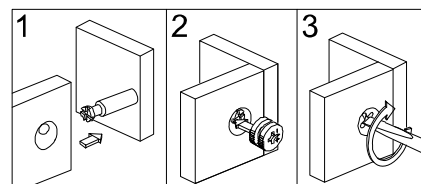

(B)  M15*10mm Cam lock x 4	(C)  M6*30mm Dowel x 2
---	---



Assembly Instructions

Step 28

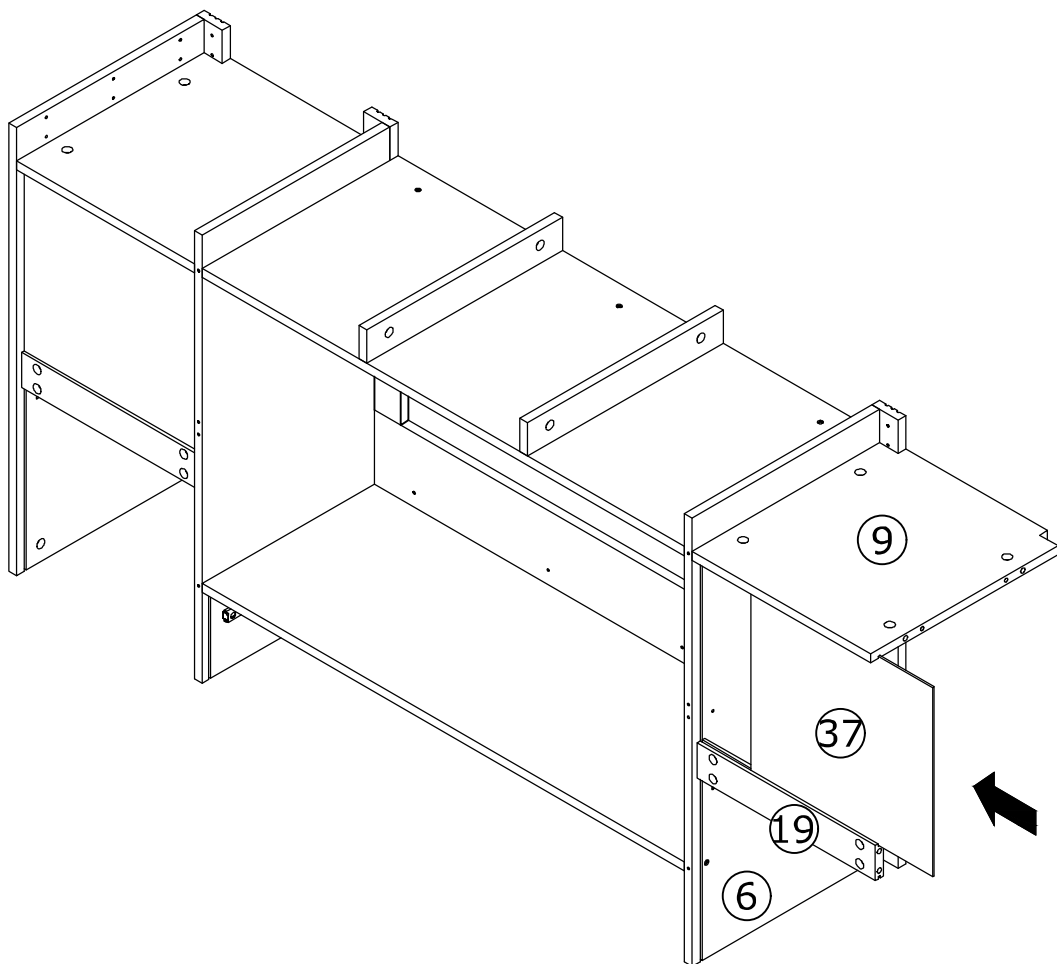

Assembly Instructions


Step 29

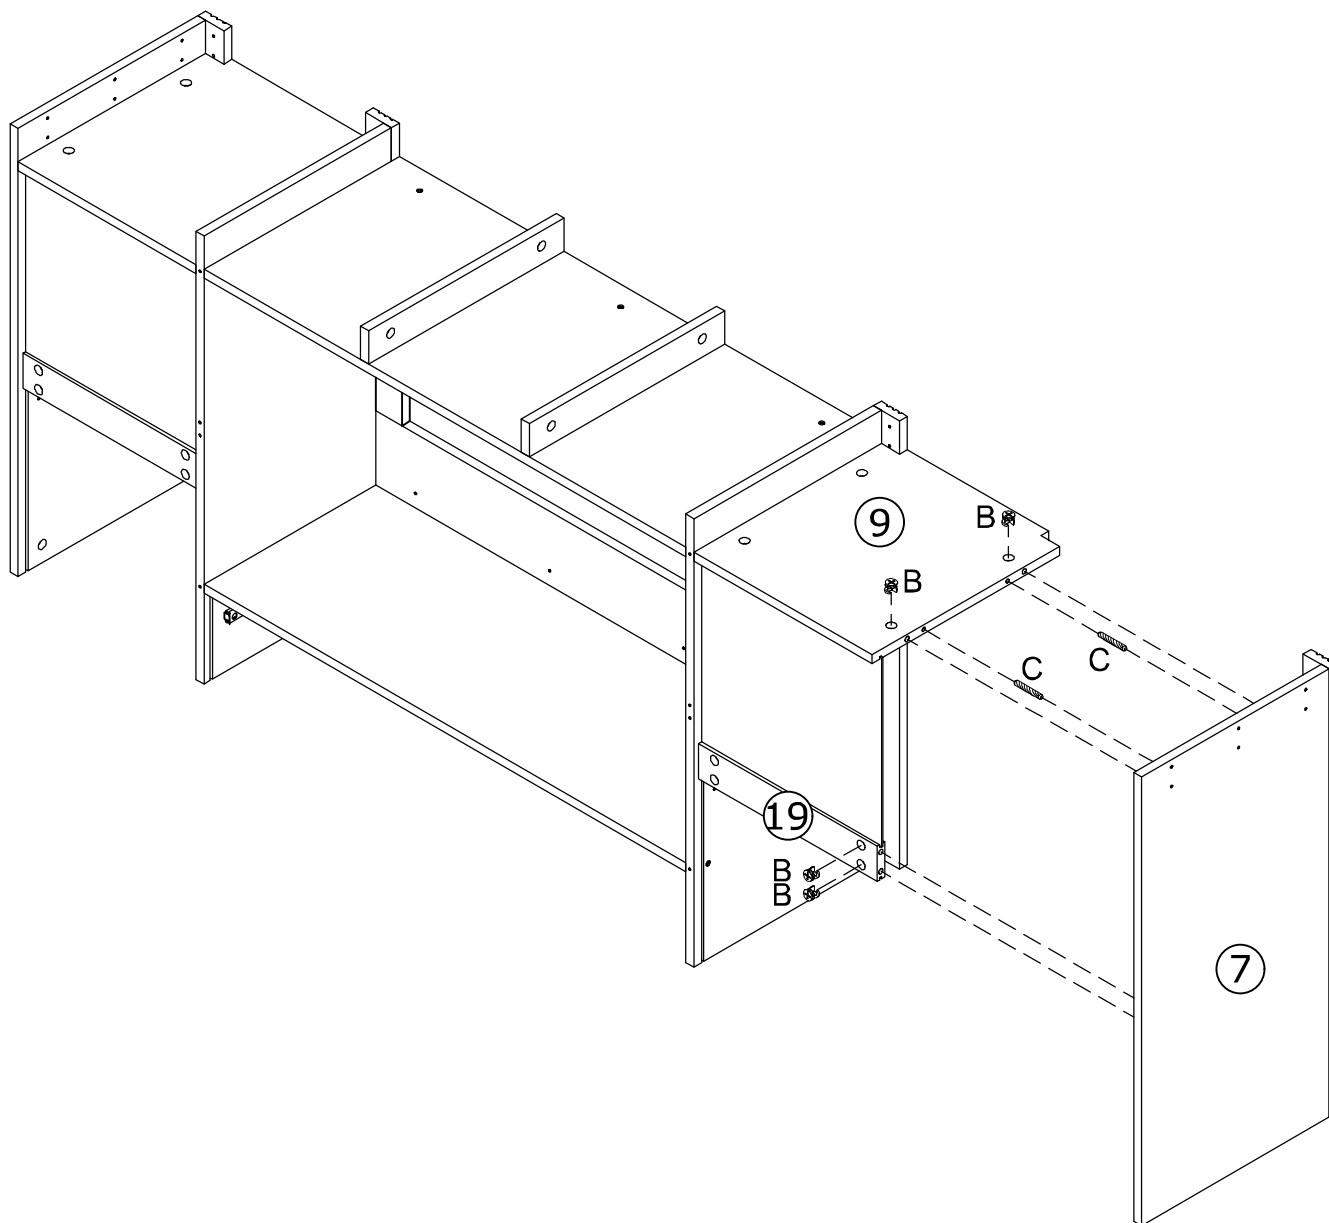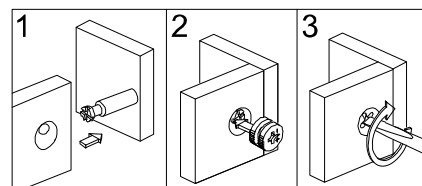

(B)  M15*10mm Cam lock x 4	(C)  M6*30mm Dowel x 2
---	---

Assembly Instructions

Step 30

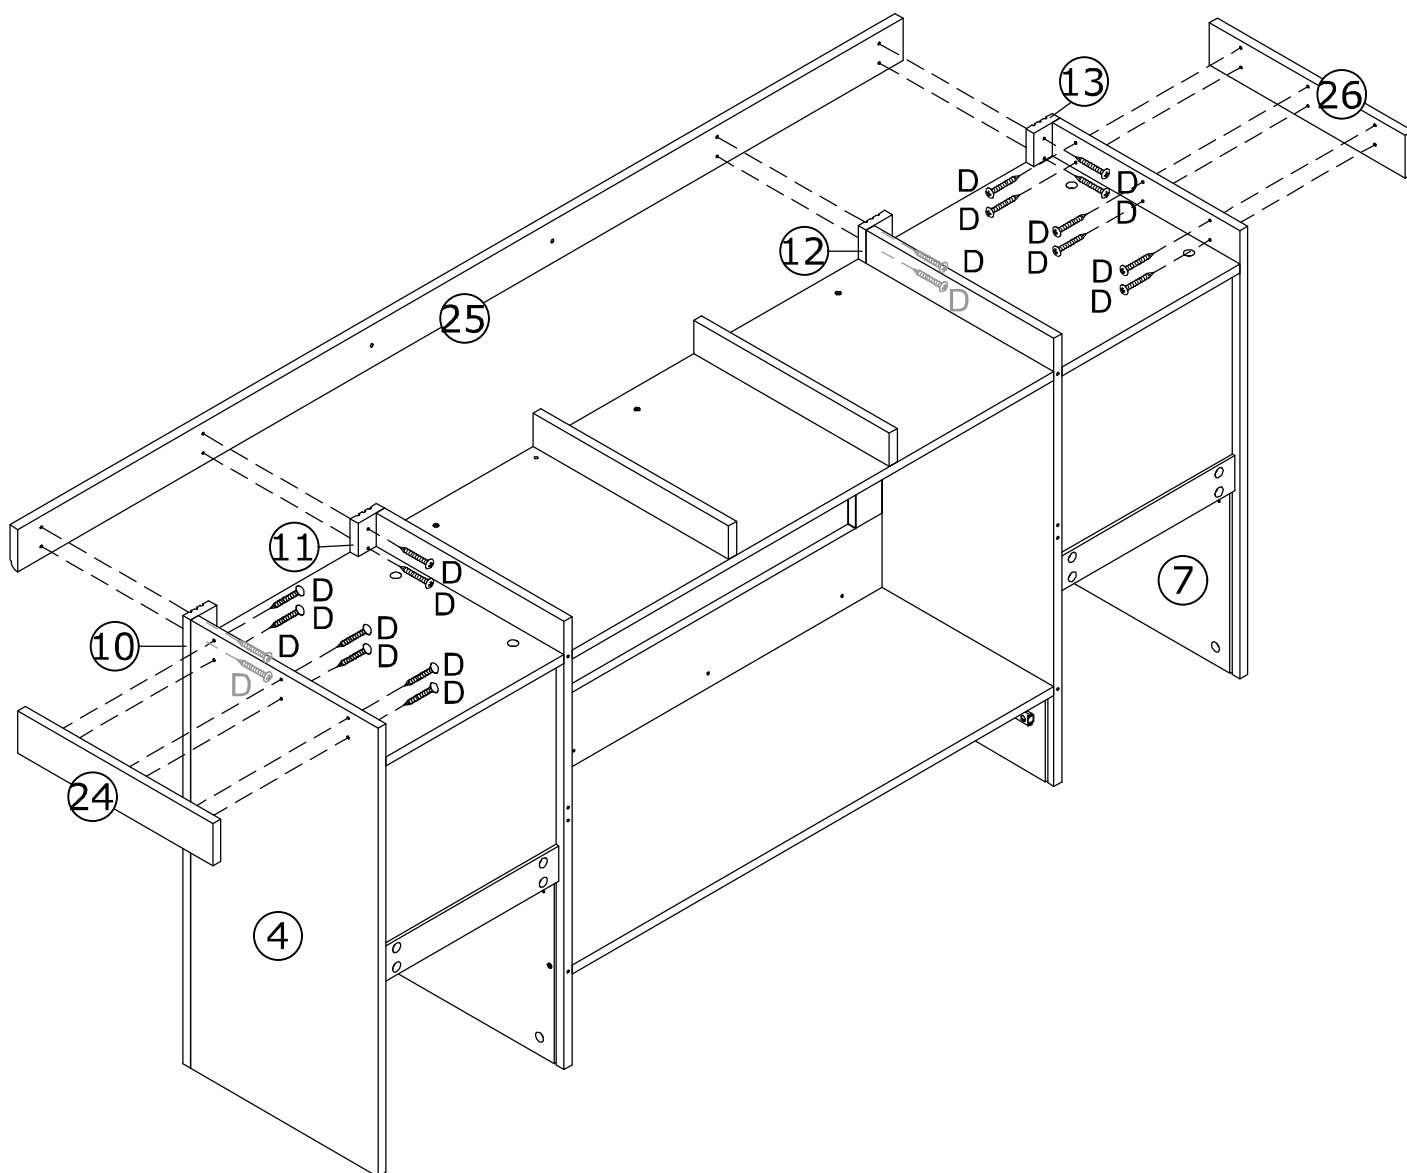


(D)



M4*25mm Screw x 20

Assembly Instructions

Step 31

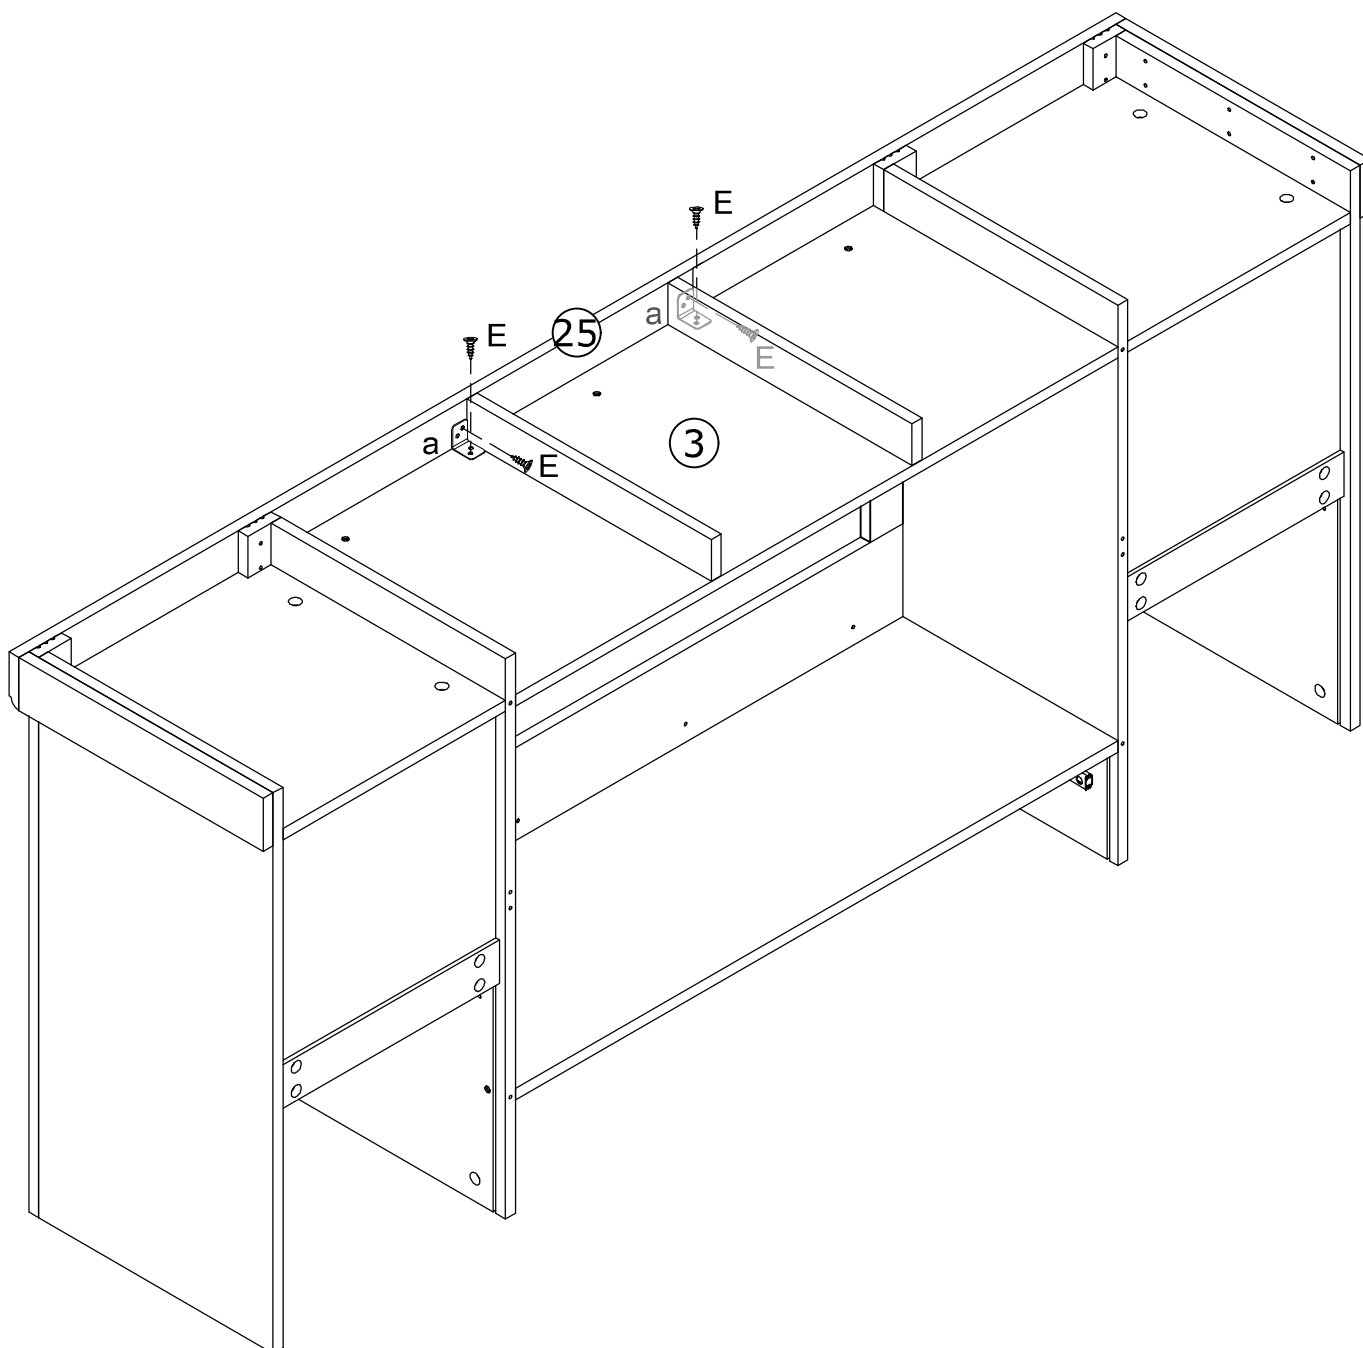

(E)



M3*12mm Screw x 4

(a)




Metal Plate x 4

Assembly Instructions

Step 32








Be careful! At least two people are required

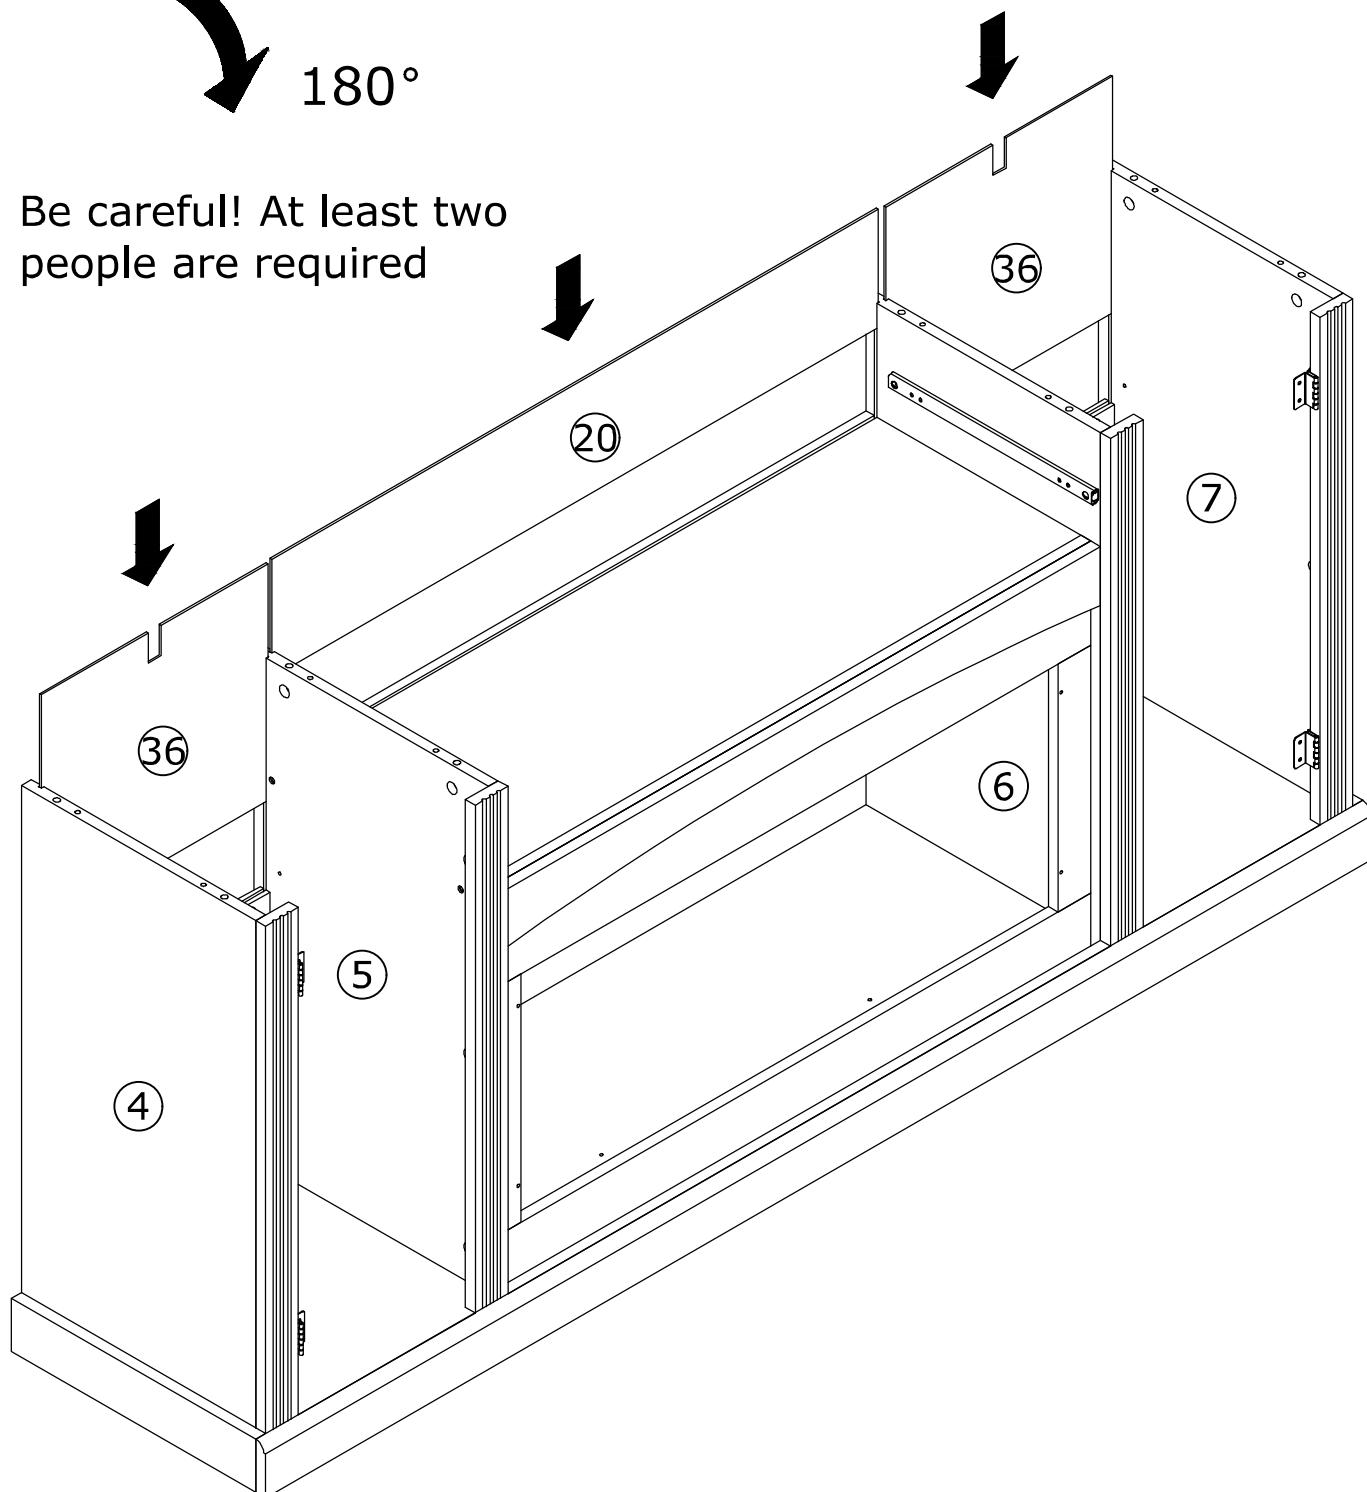



Assembly Instructions

Step 33

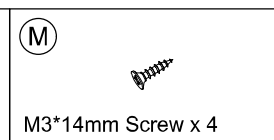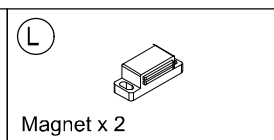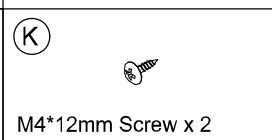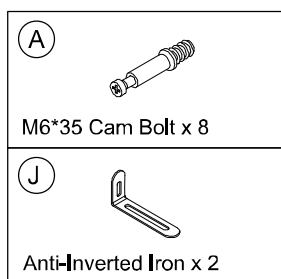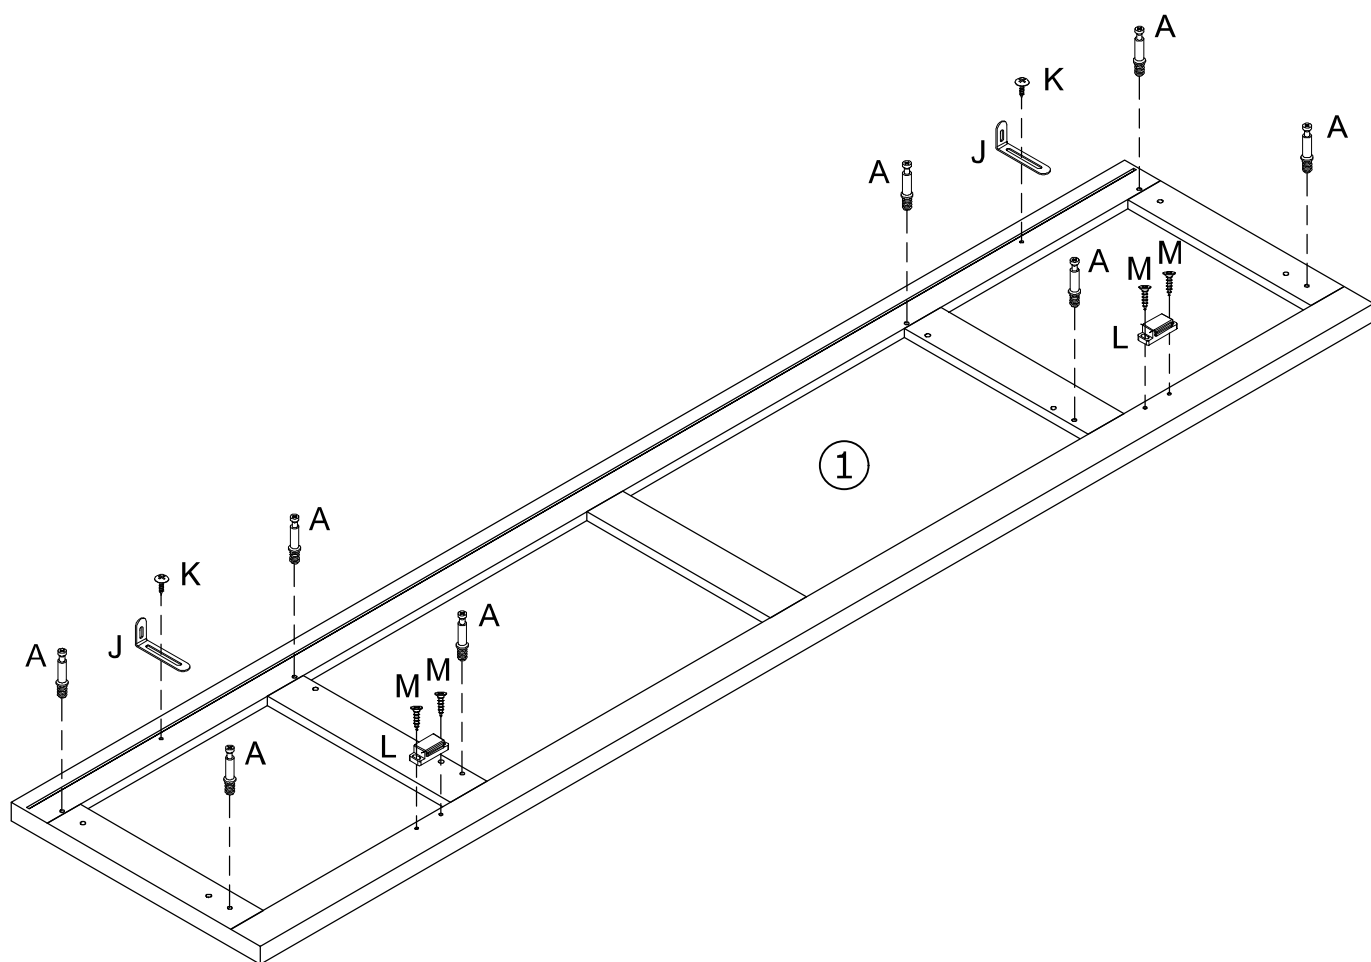

Assembly Instructions



Step 34

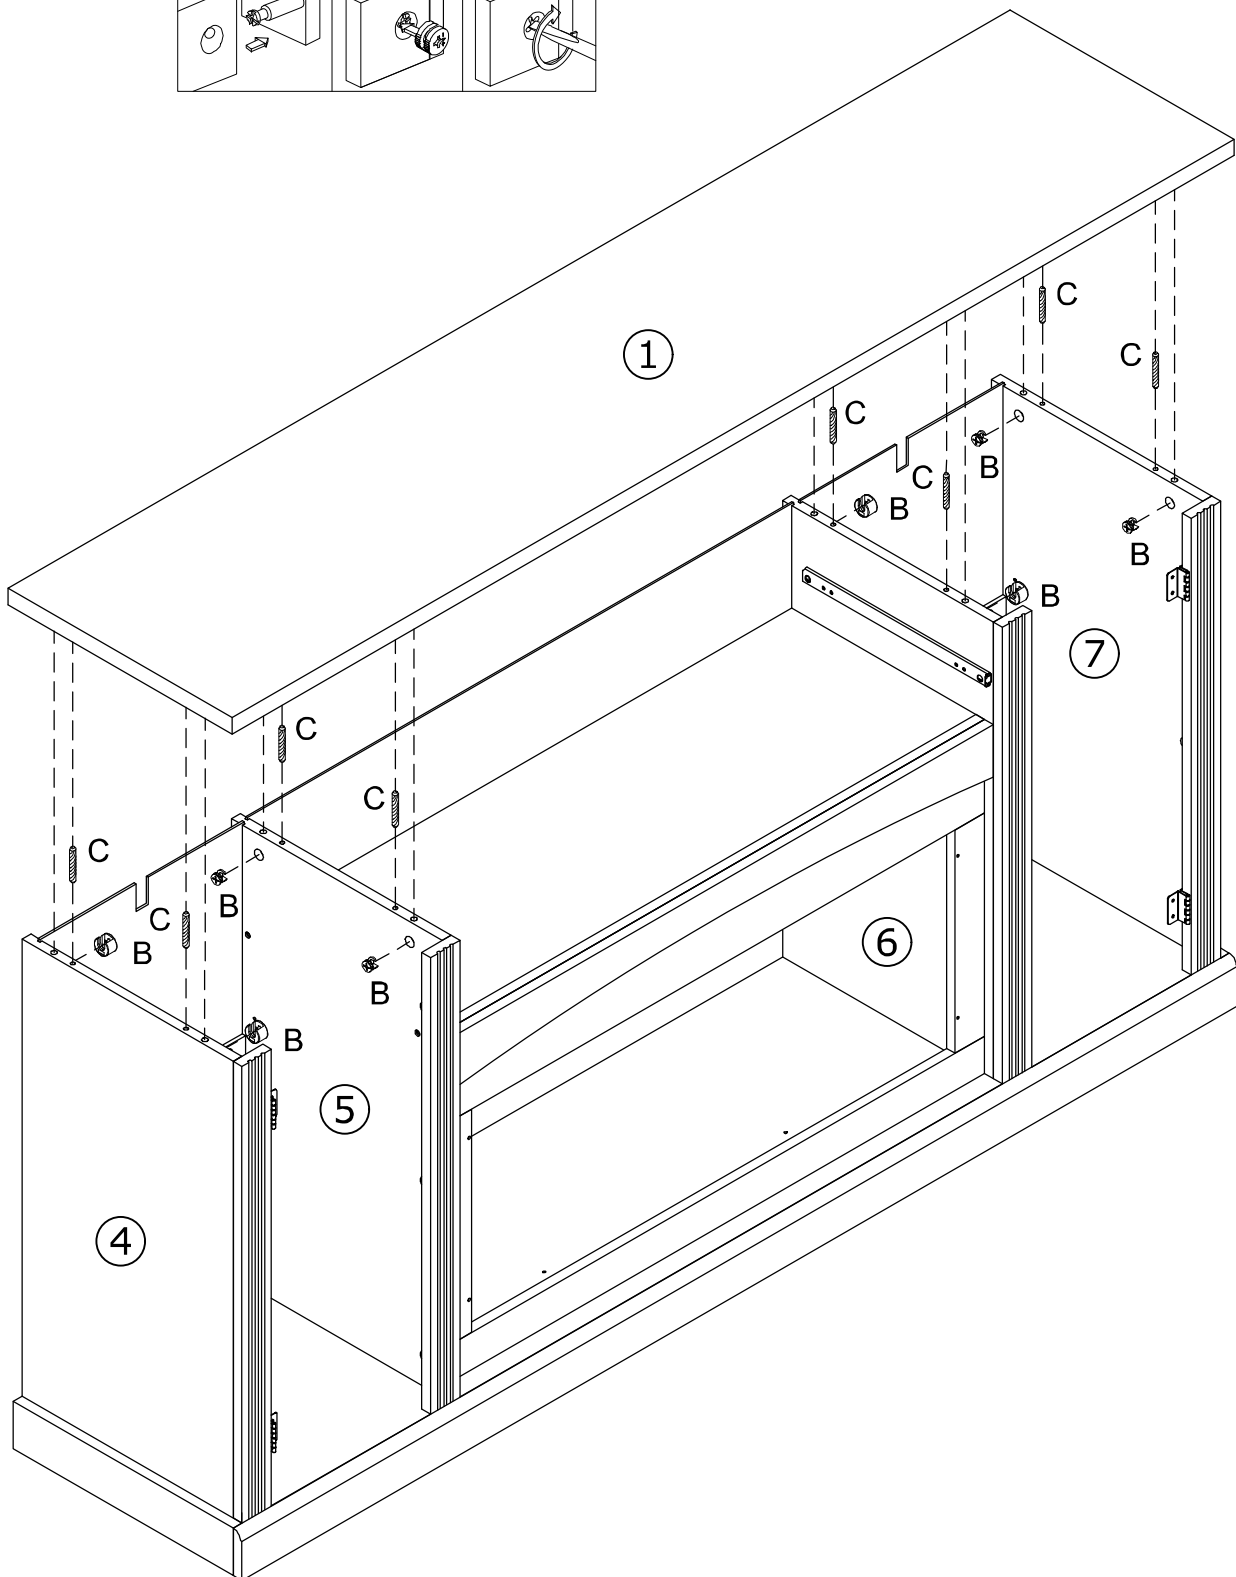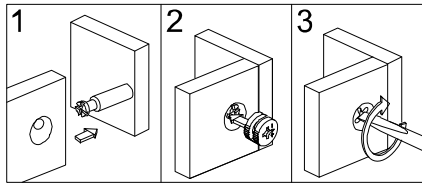

(B)  M15*10mm Cam lock x 8	(C)  M6*30mm Dowel x 8
---	---



Assembly Instructions

Step 35

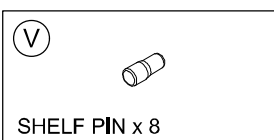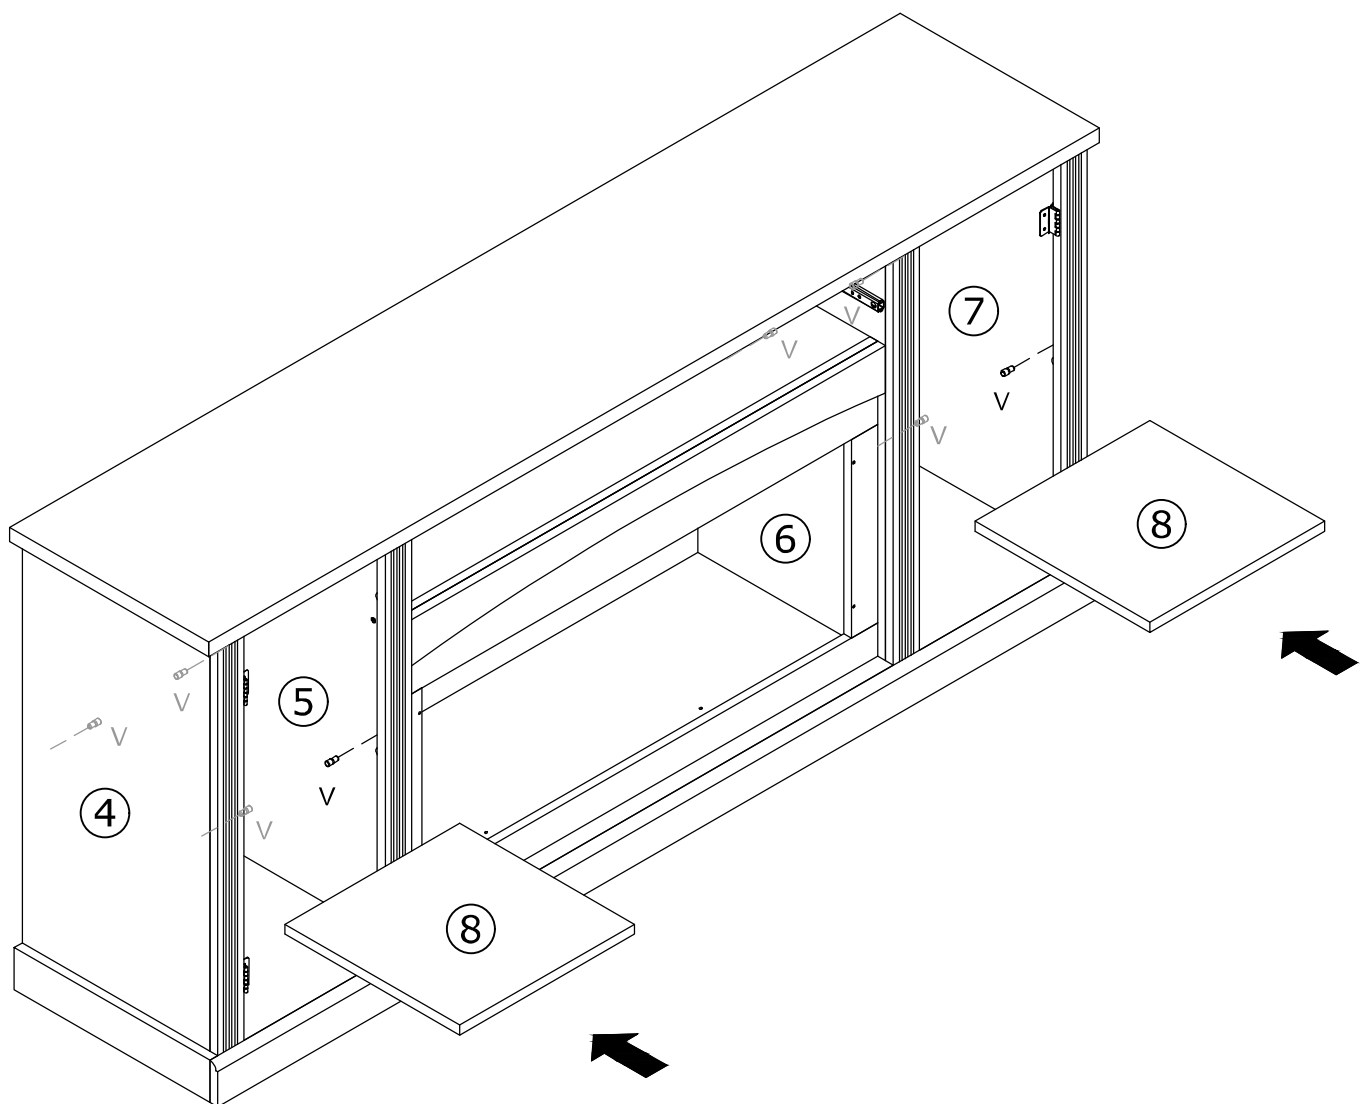

Assembly Instructions

Step 36

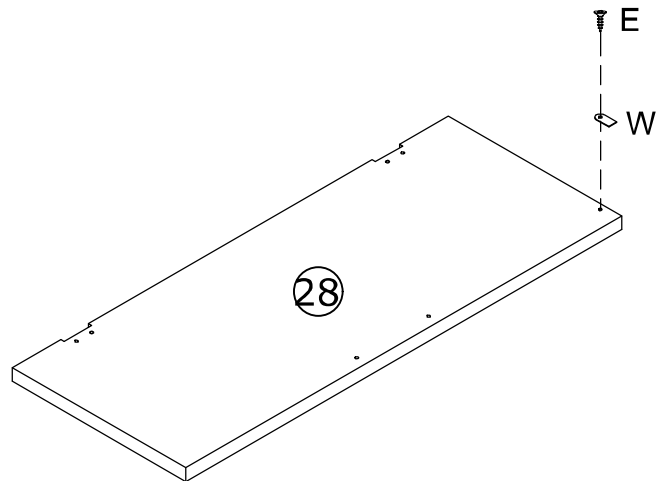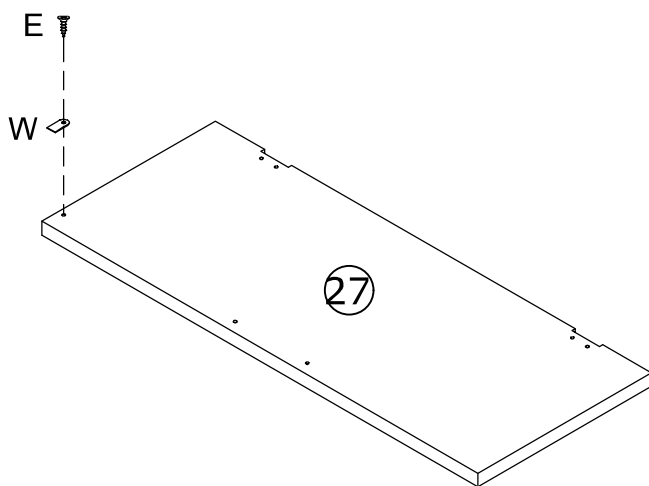

(E)





M3*12mm Screw x 2

(W)



Metal Plate x 2

Step 37

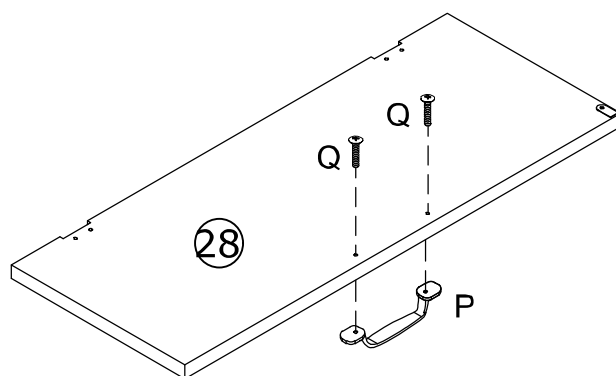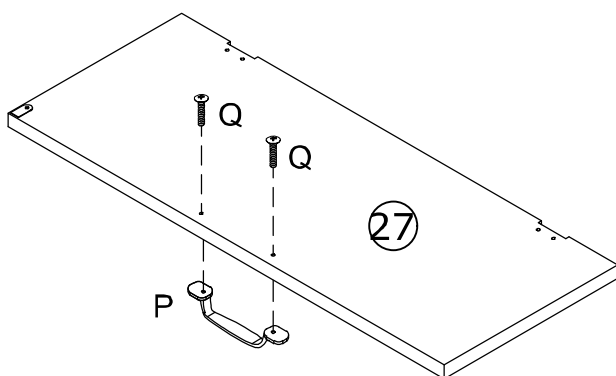

(P)



Handle x 2


(Q)



M4*20mm Screw x 4

Assembly Instructions

Step 38

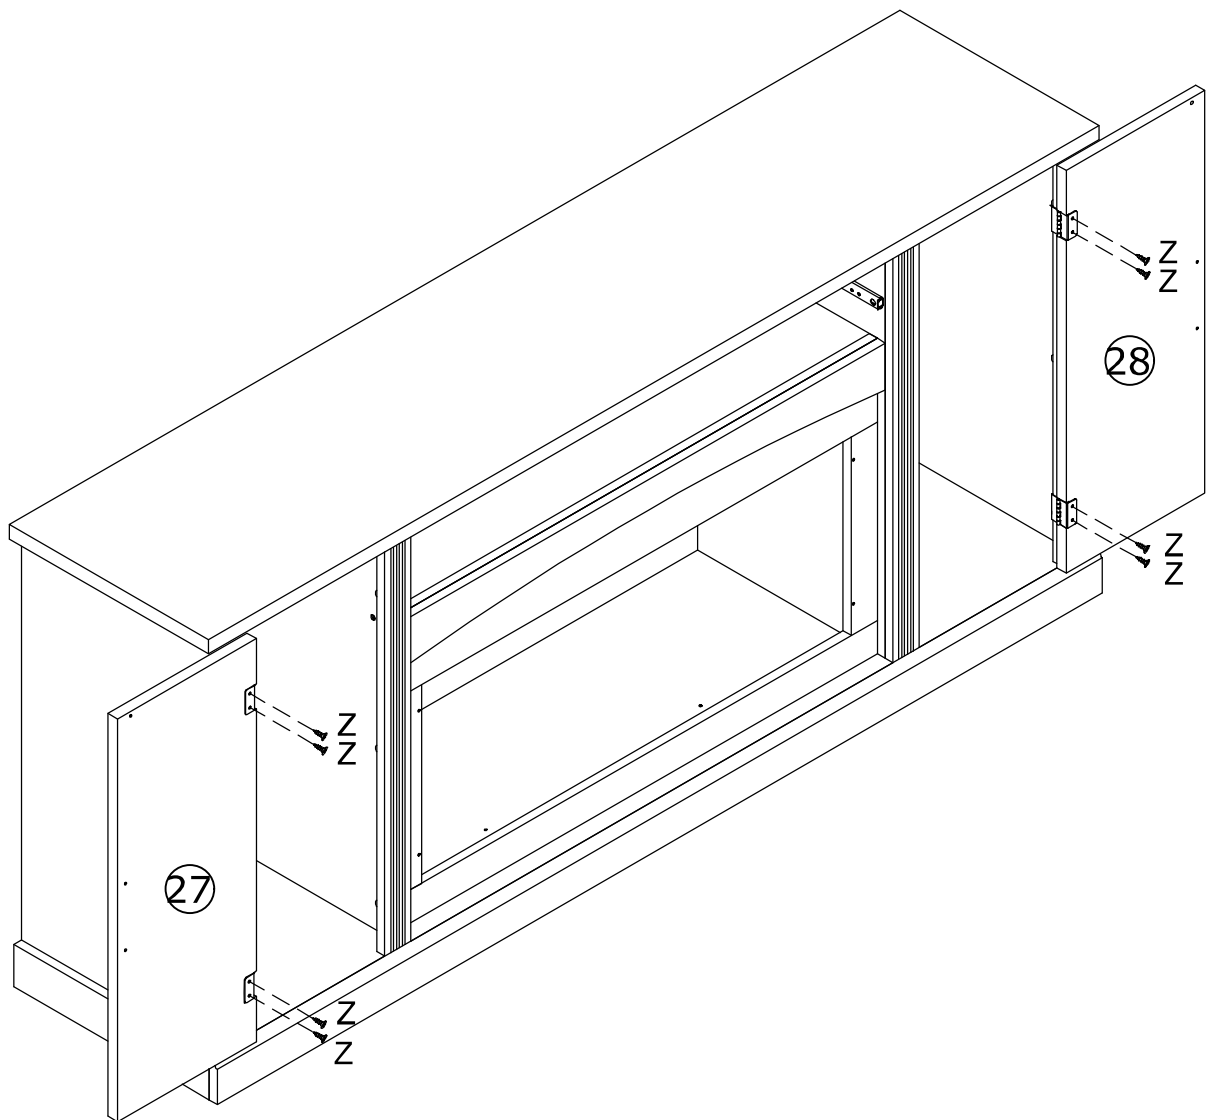


②



M3*12mm Screw x 8



Assembly Instructions

Step 39

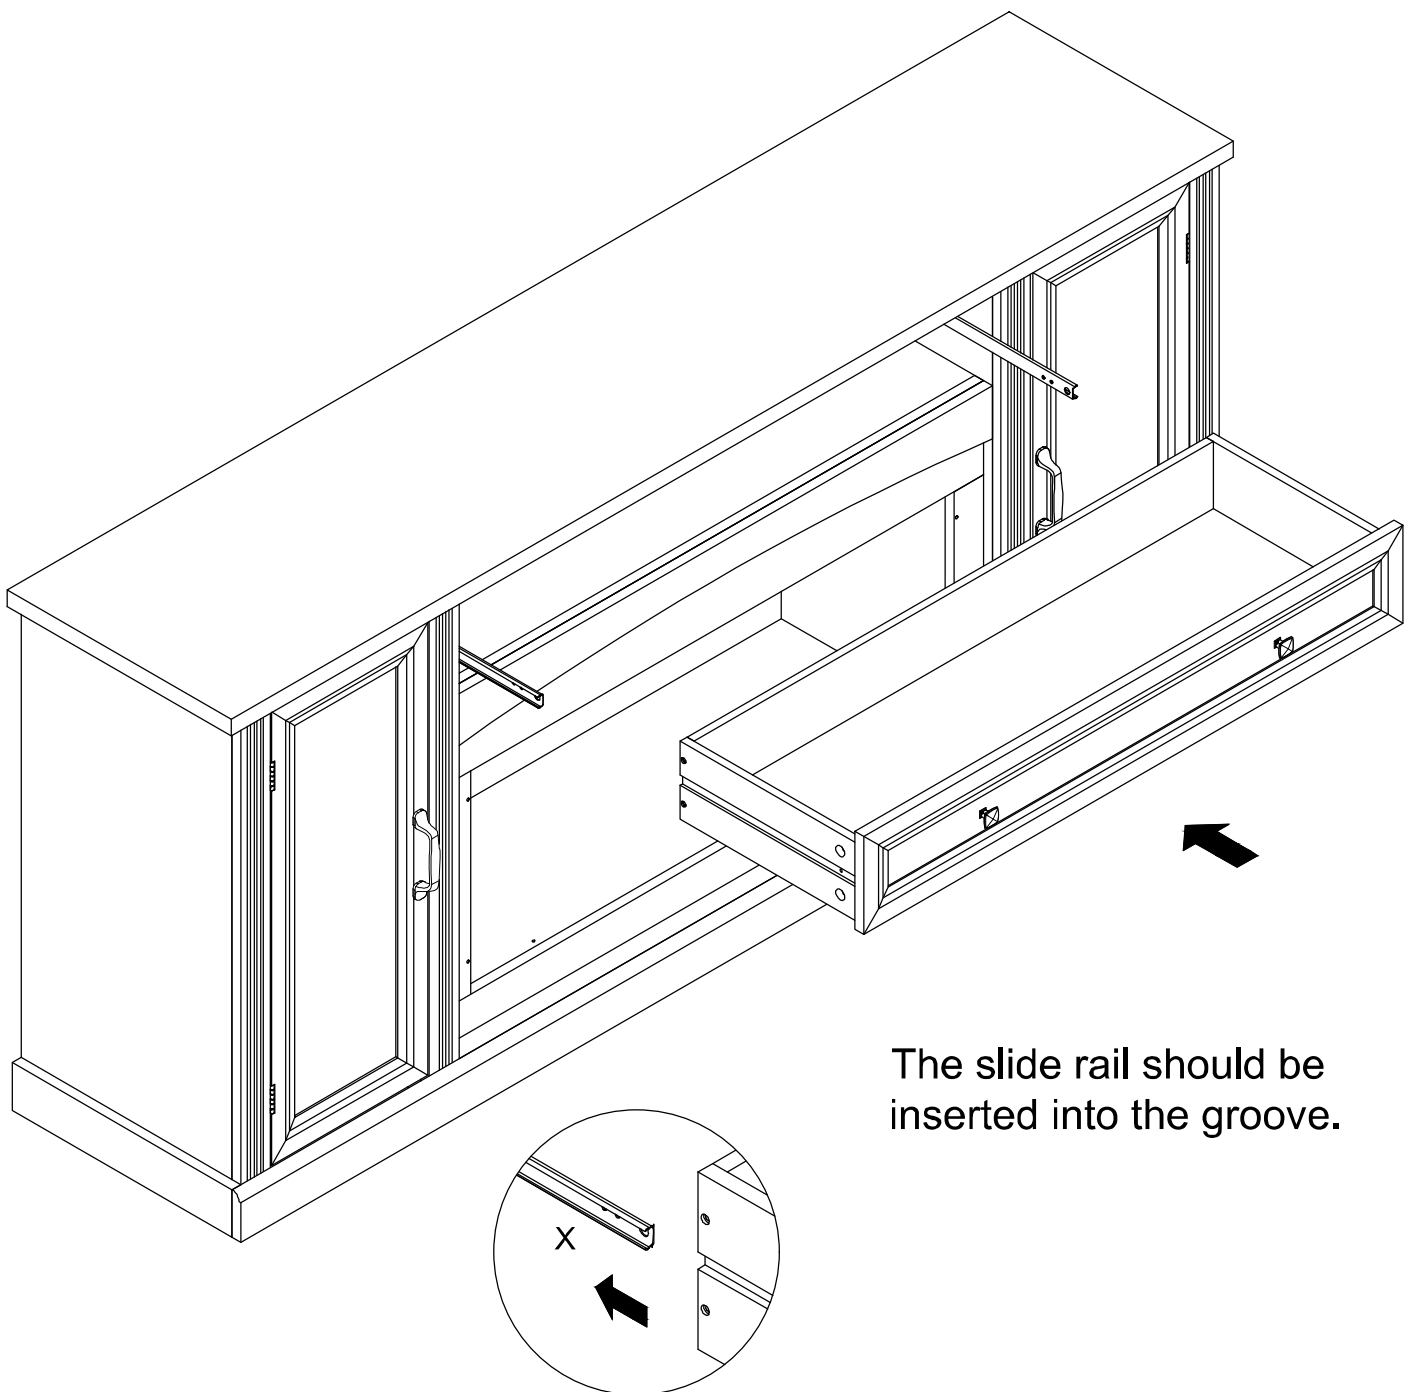

Assembly Instructions

Step 40

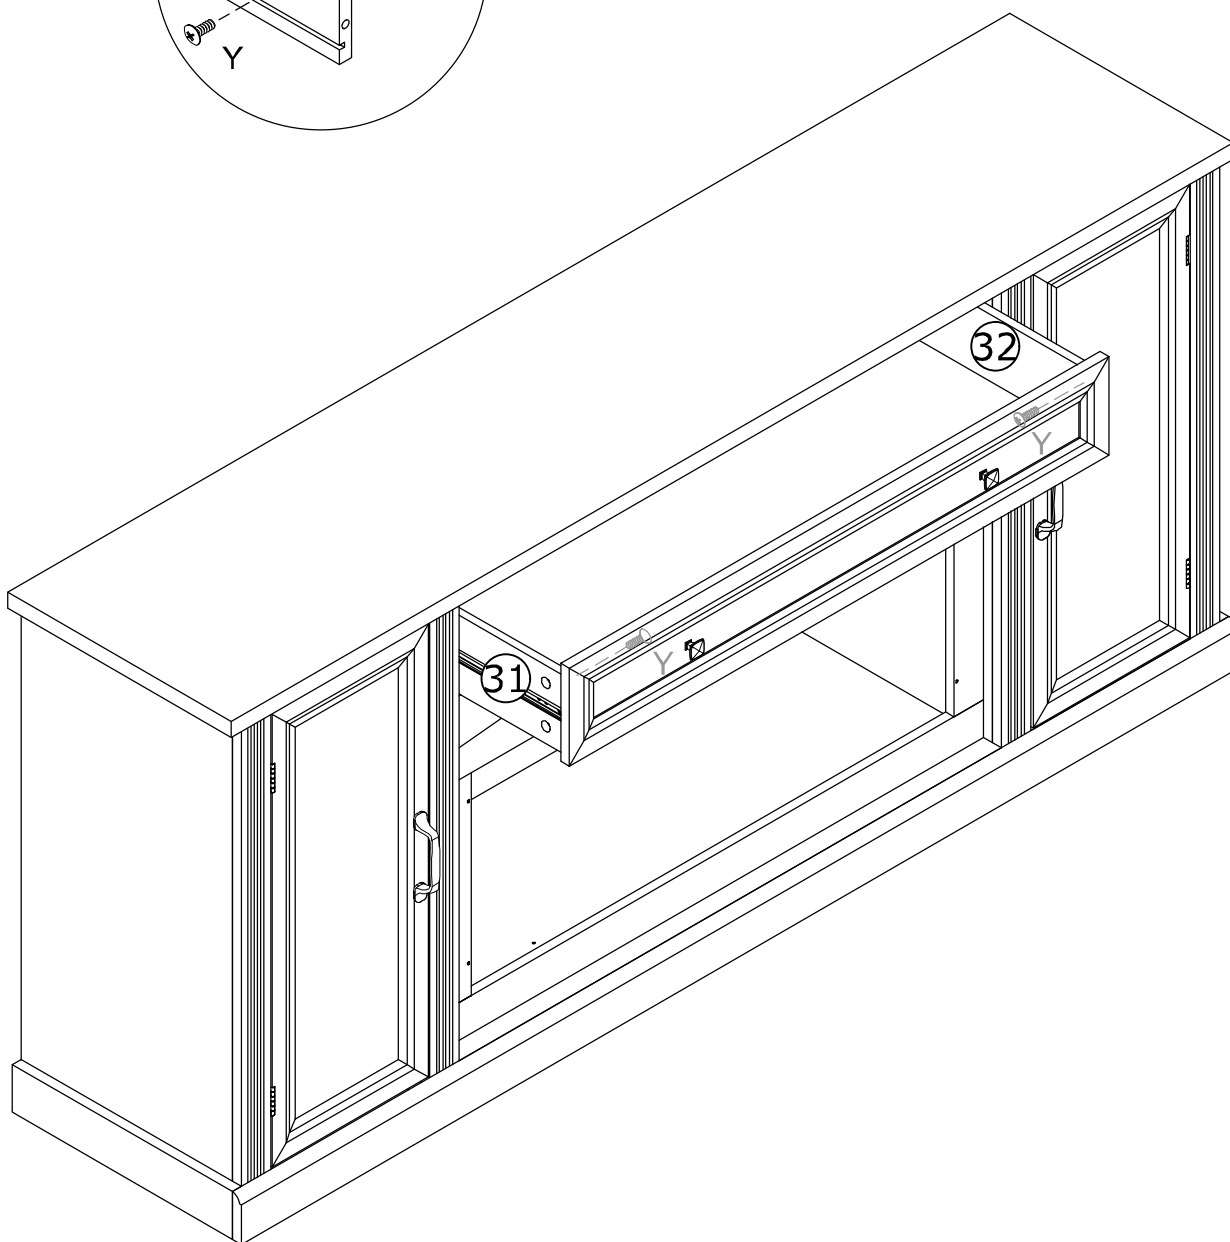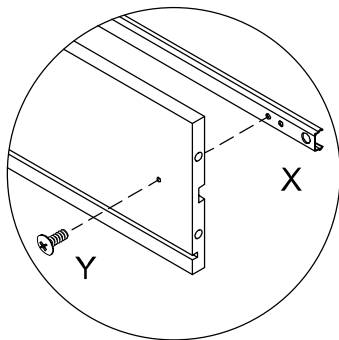


Y




M4*9mm Screw x 2

Assembly Instructions


You may need patience to get a perfect smooth slide of drawer experience, and we appreciate your patience.
Asking for a second person to assist you will simplify the process.

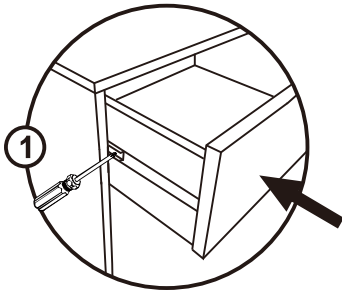


1.Align Components: Position the groove on the drawer side to match the rail profile. Insert a precision tool (e.g., screwdriver tip) into the outermost hole of the slide rail. Ensure both sides are aligned symmetrically.

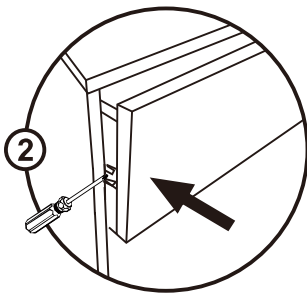

2.Slide Drawer Inward: Gently push the drawer into the cabinet until slide come up against drawer front. This step needs to be done simultaneously for both sides.

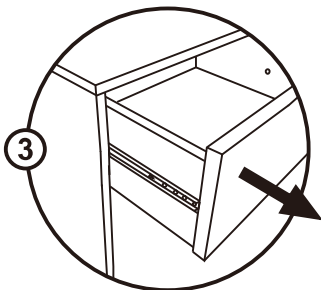


3.Secure & Adjust: While maintaining pressure on the tool, slowly pull the drawer outward until slide can not be moved.

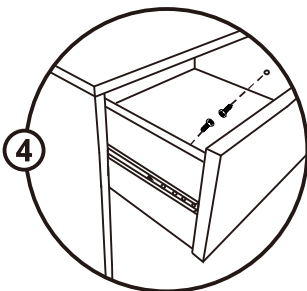

4.Finalize Installation: Locate the pre-drilled mounting holes where the rails meet the drawer sides. Securely tighten all screws on both sides.

Assembly Instructions

Step 41

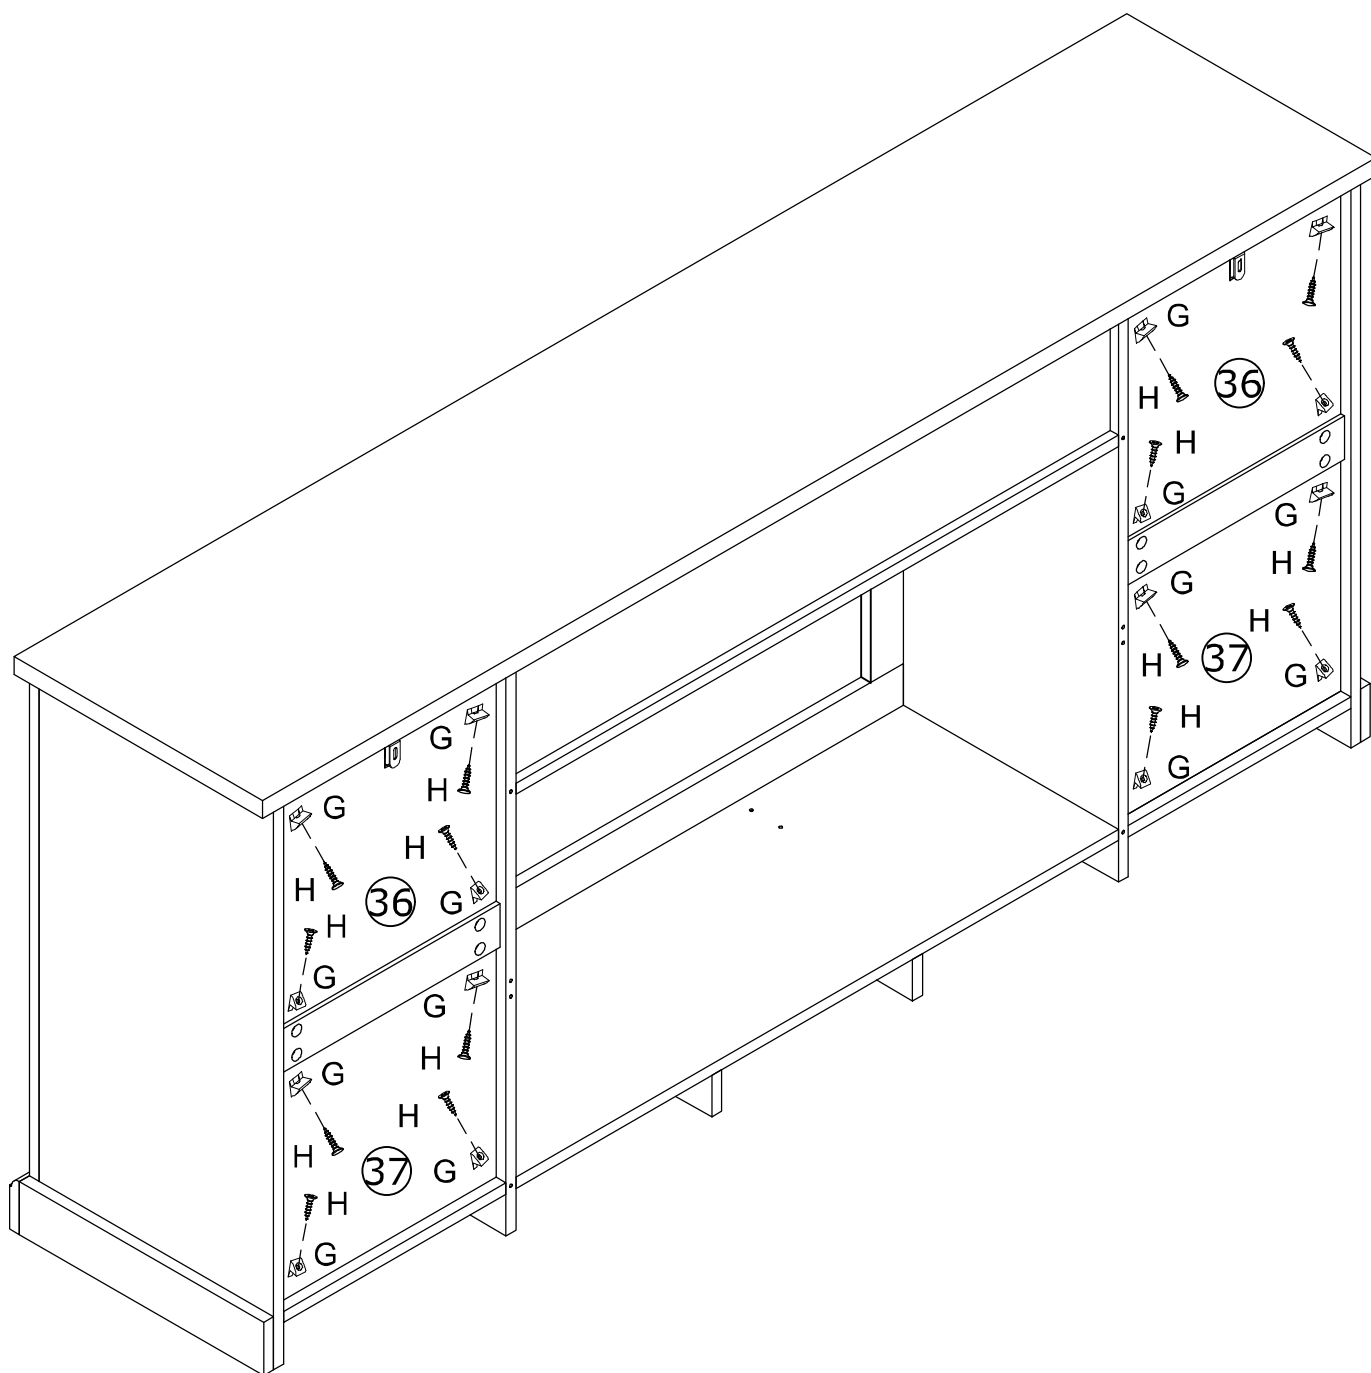

(G)



Plastic Connector x 16


(H)




M3*16mm Screw x 16

Assembly Instructions

If you purchased the version without an electric fireplace, please continue with this step.

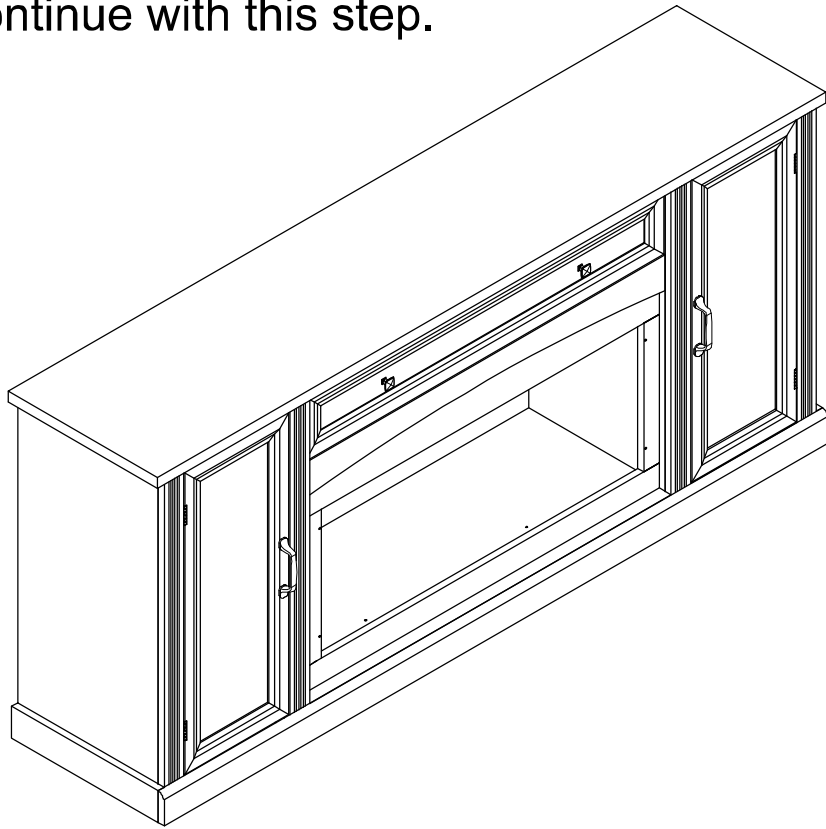


If you purchased the version with an electric fireplace, please skip to Step 44.

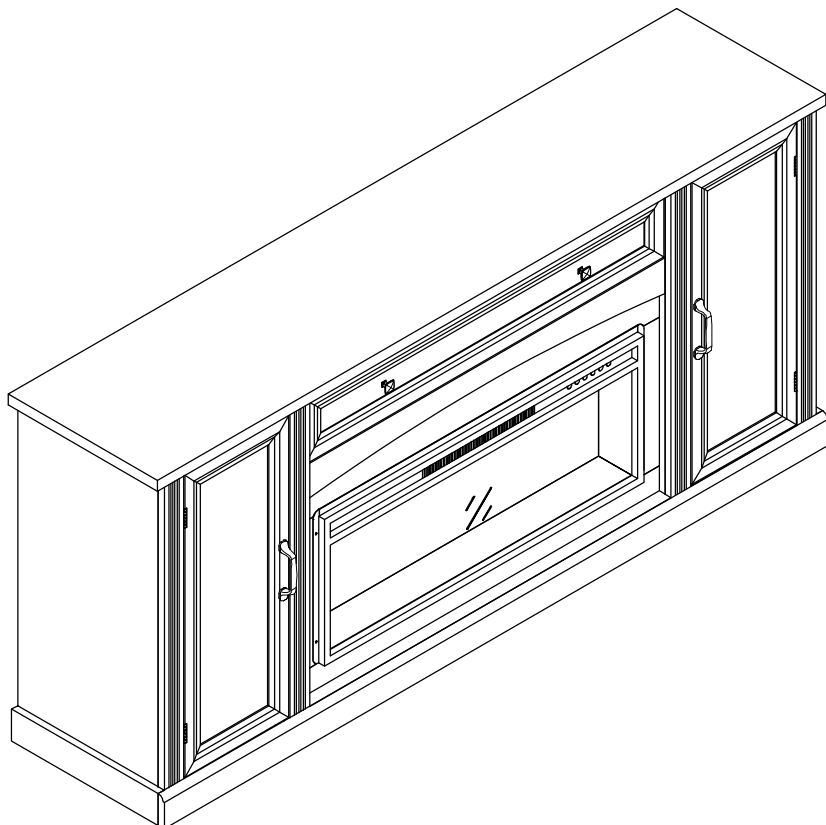



Assembly Instructions

Step 42

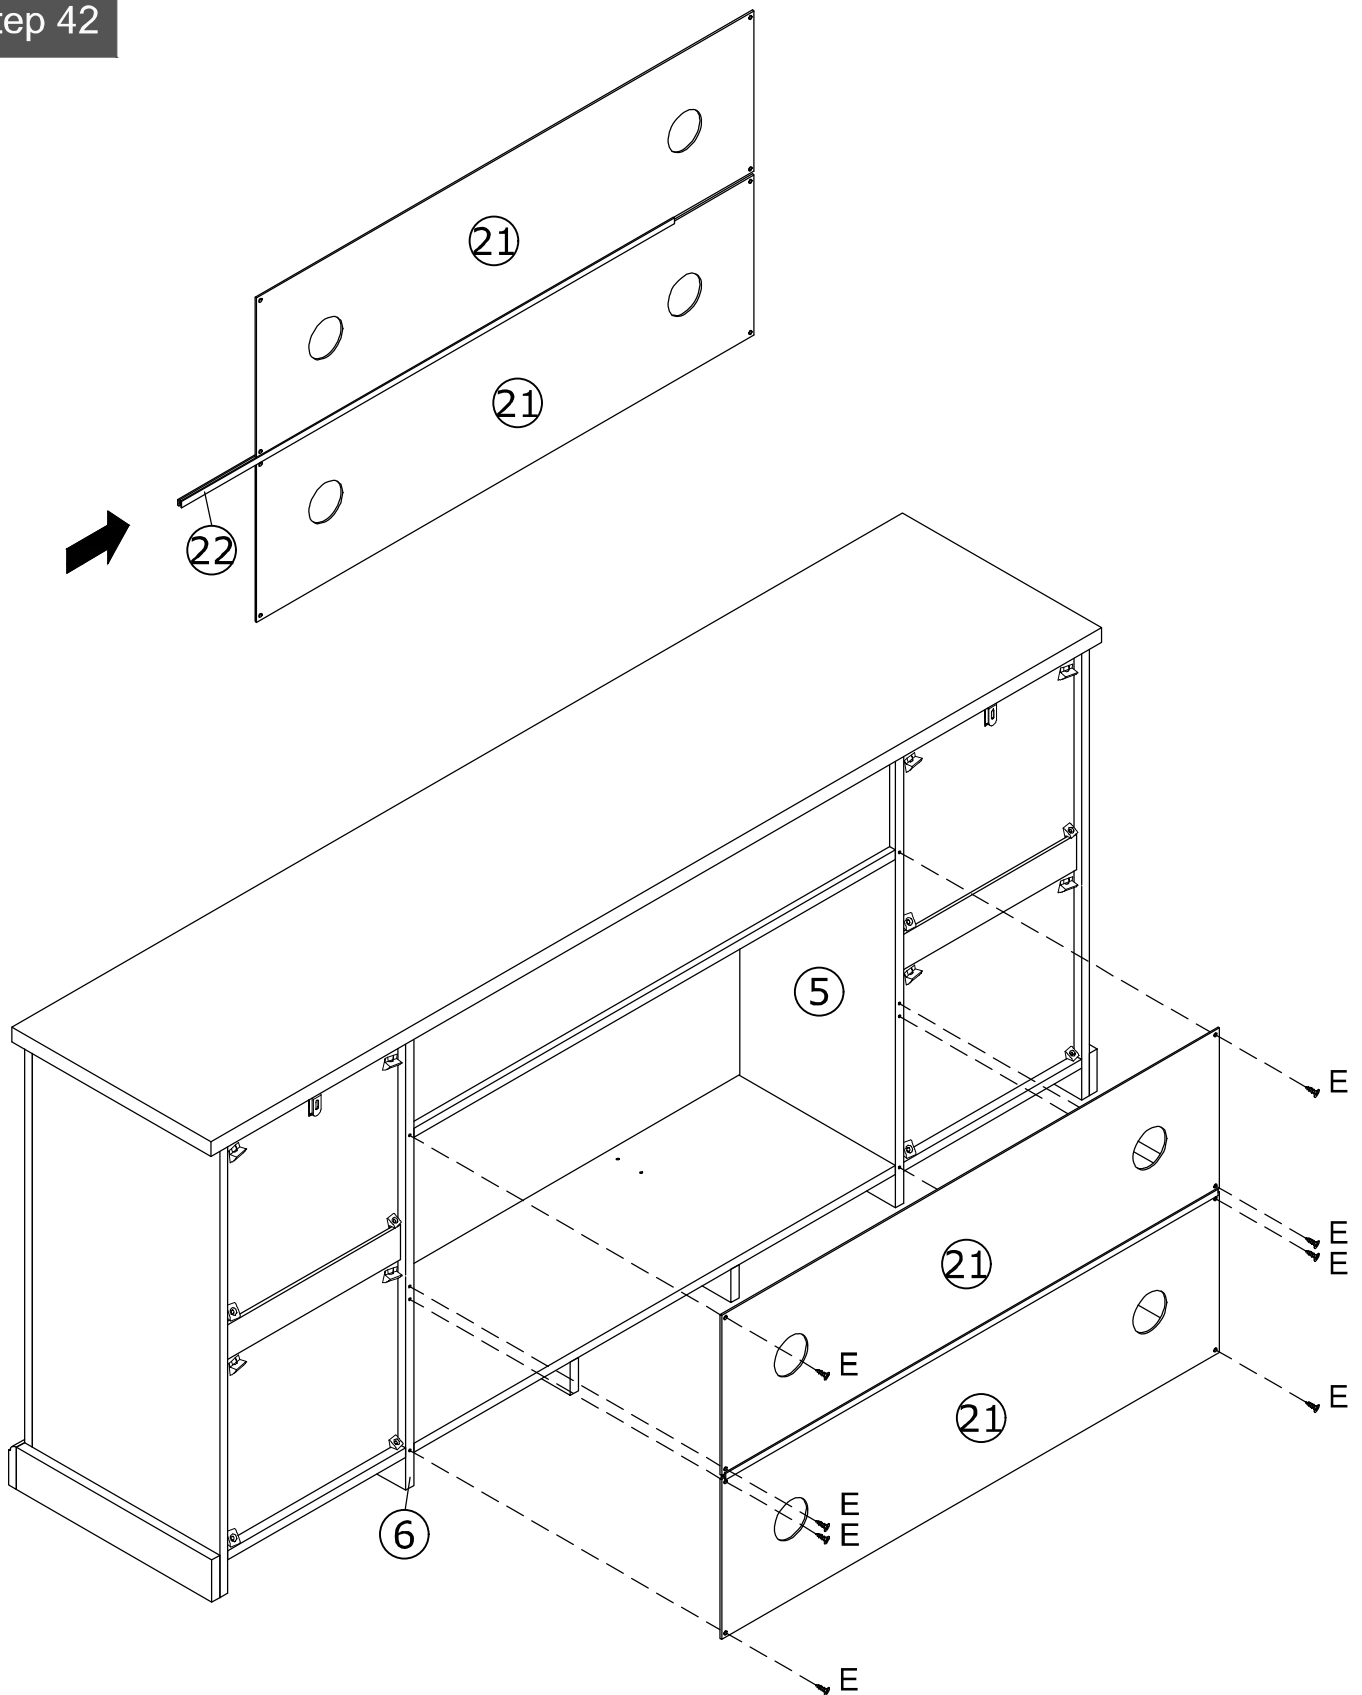

Assembly Instructions

Step 43

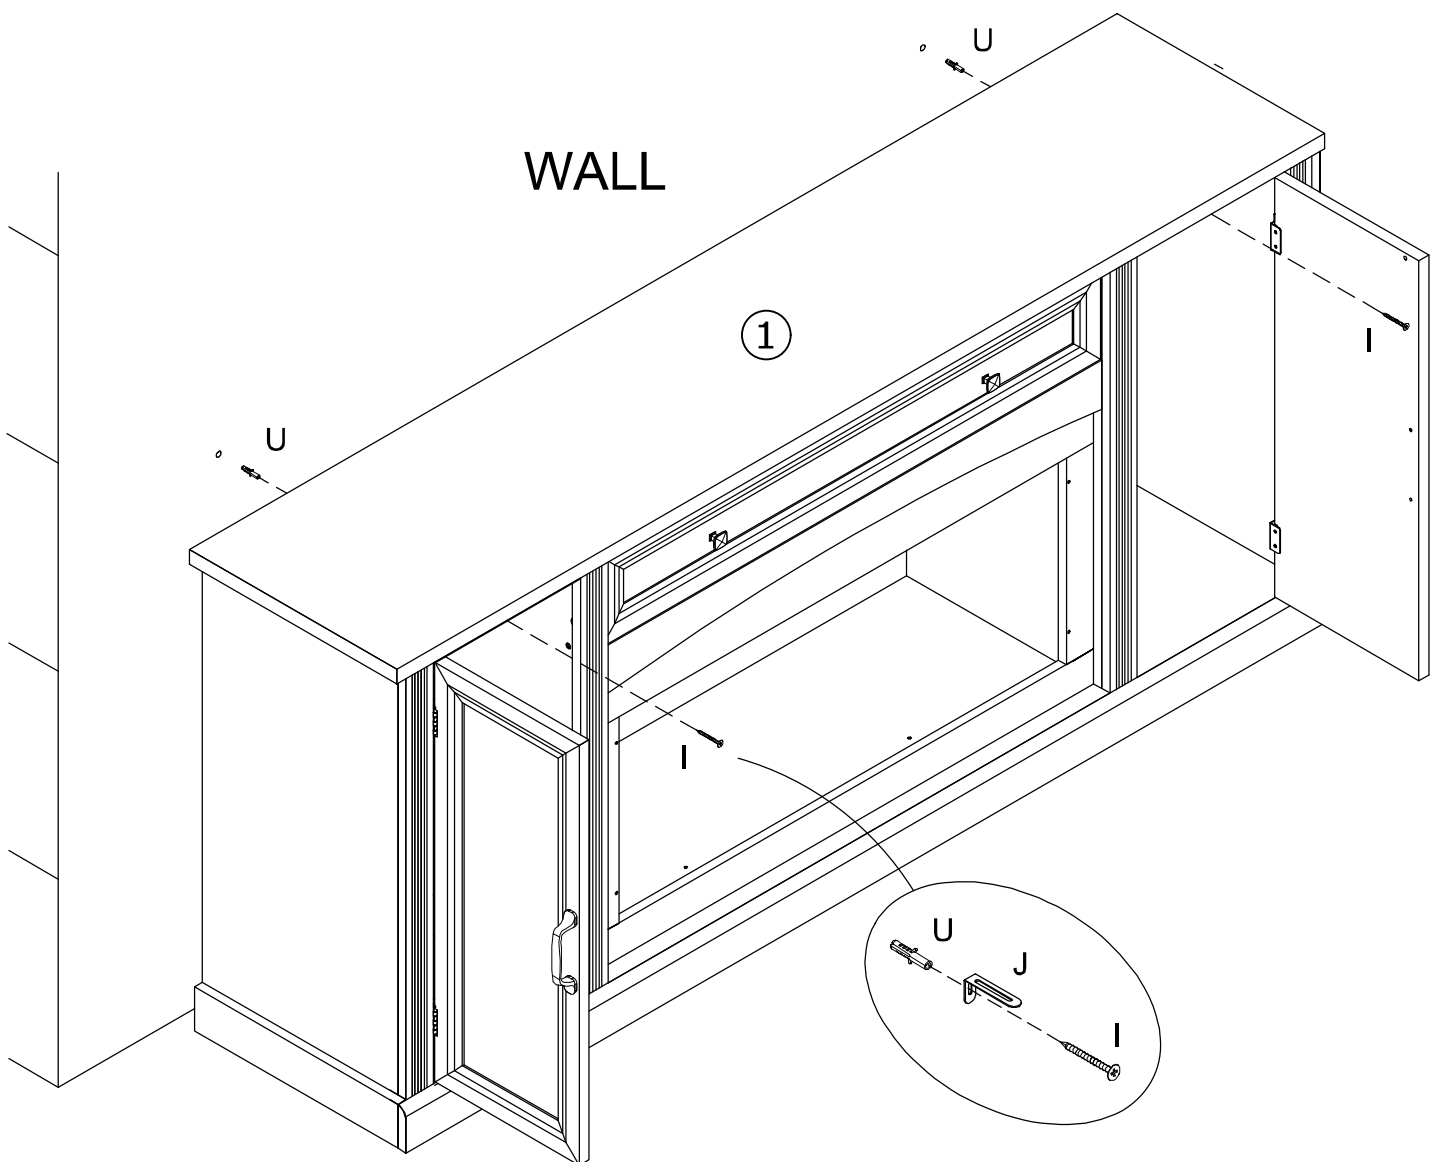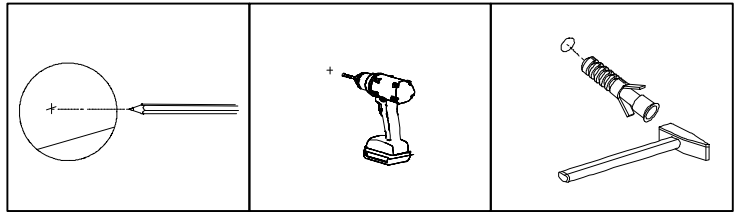


 M4*35mm Screw x 2	 WALL ANCHOR x 2
--	--

Assembly Instructions

Step 44

Version with electric fireplace

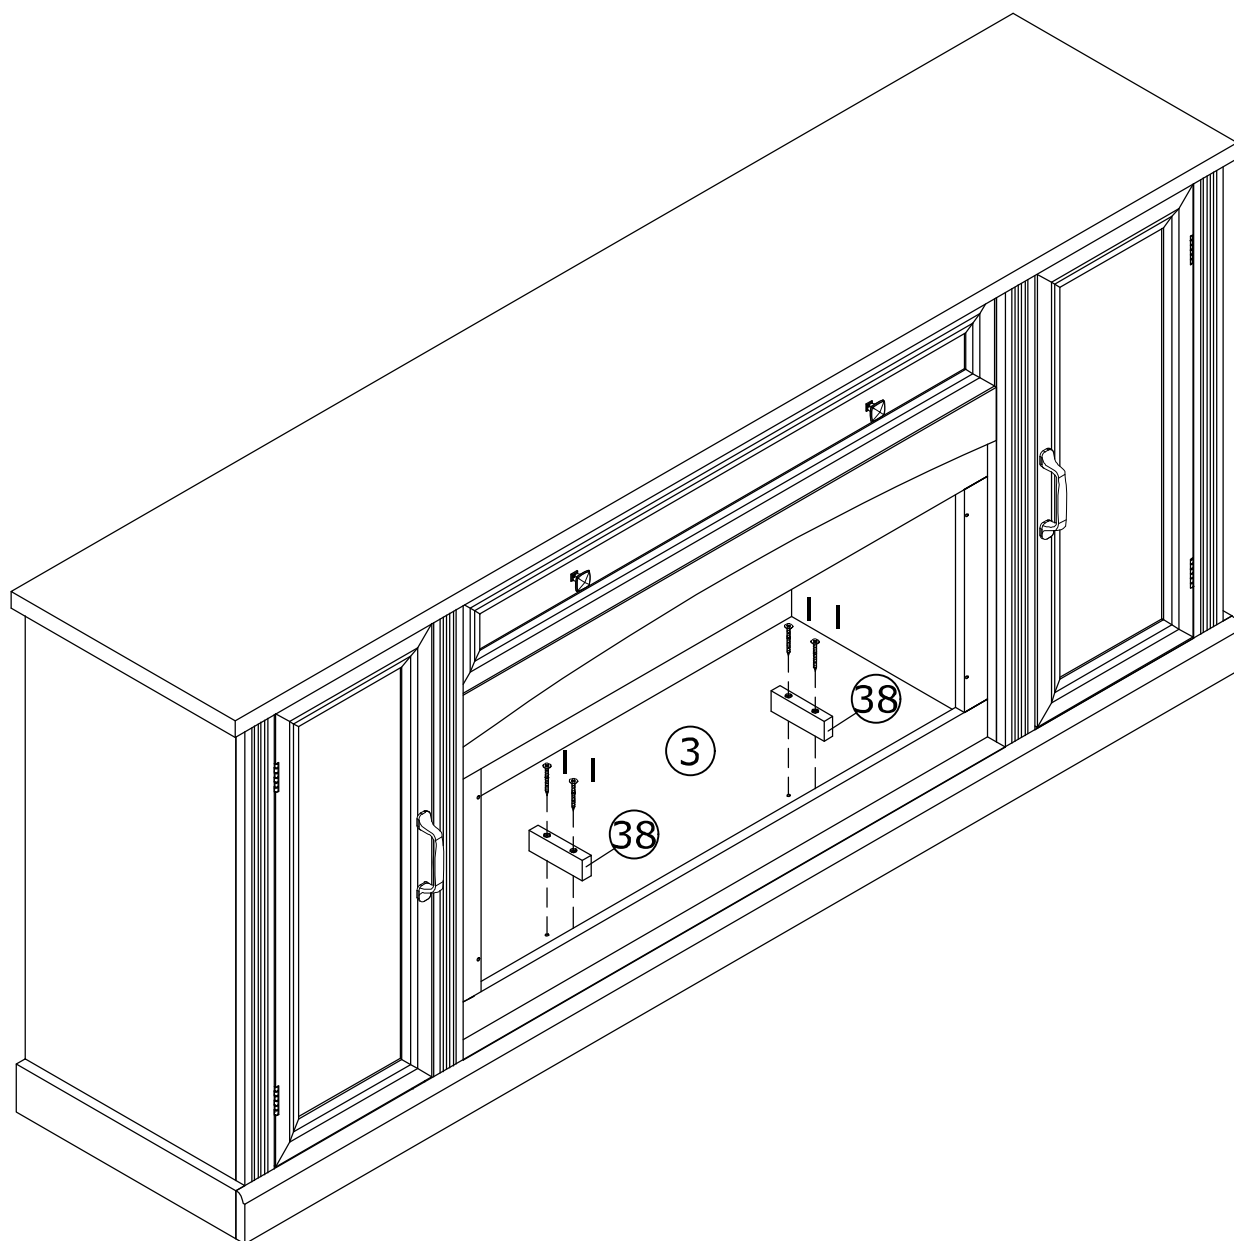




①



M4*35mm Screw x 4

Assembly Instructions

Step 45

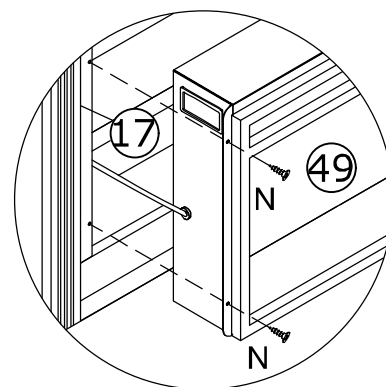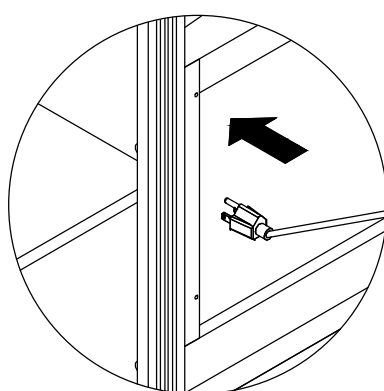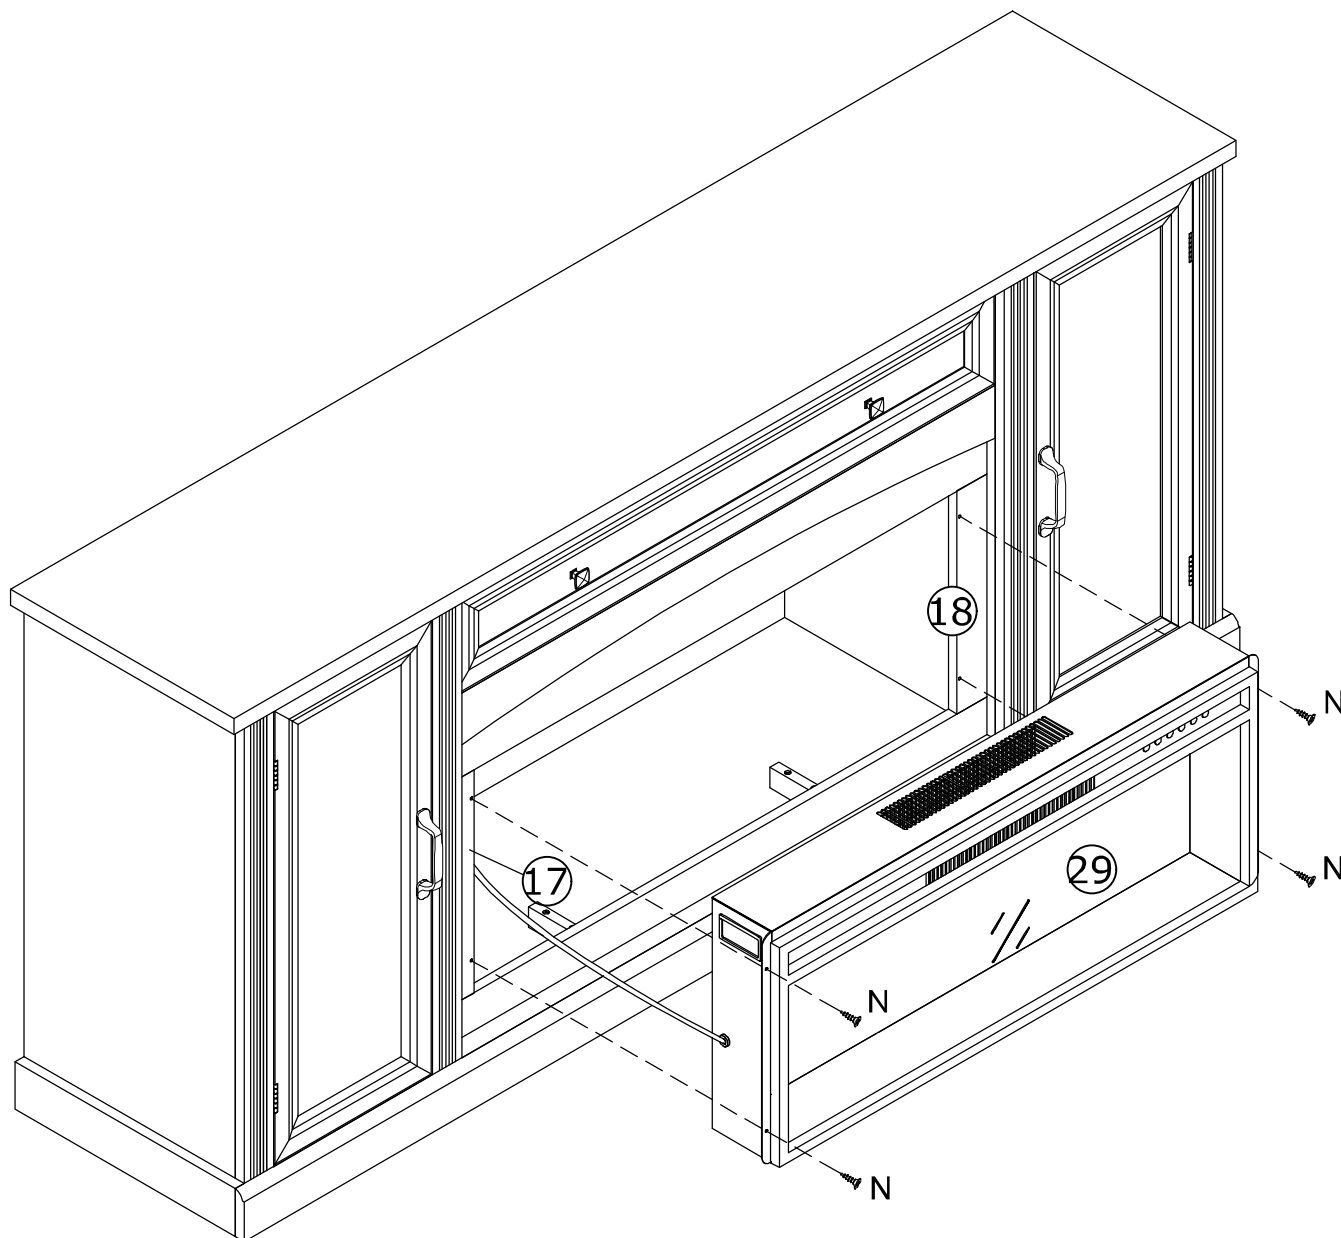



(N)



M3*12mm Screw x 4

Assembly Instructions

Step 46

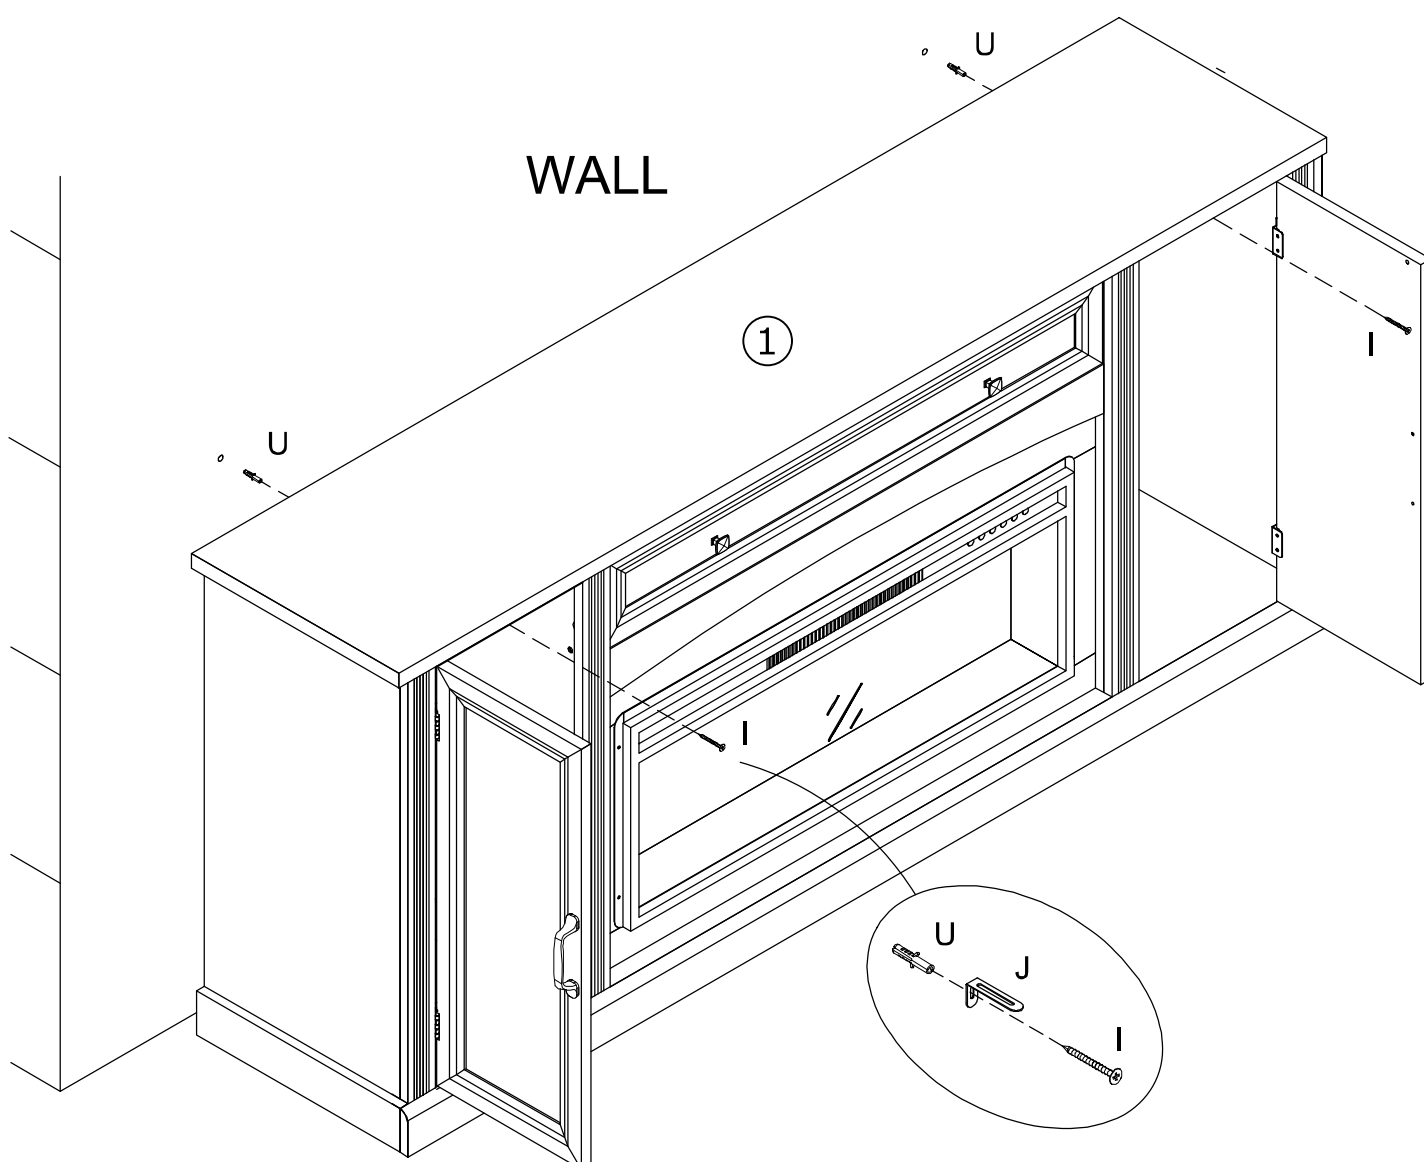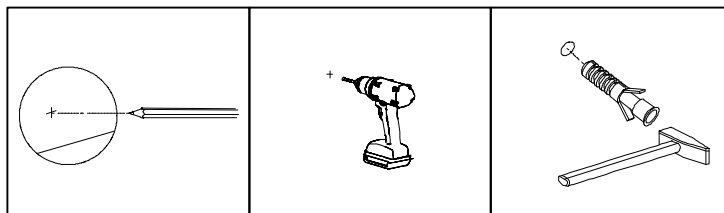

①



M4*35mm Screw x 2

②



WALL ANCHOR x 2