









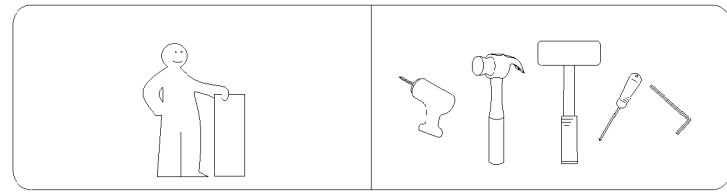
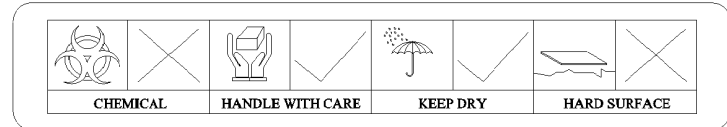



PANEL POSITION

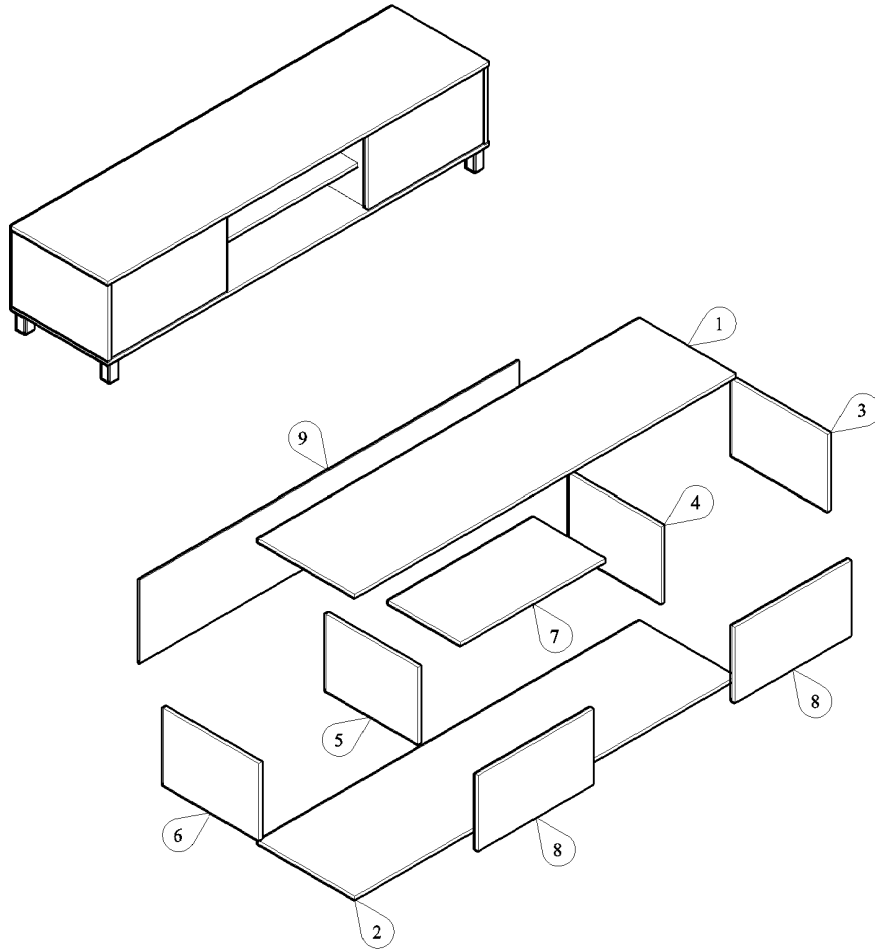


|   | ACCESSORIES  | QUANTITY        |
|---|--|-----------------|
| A |  (i) MINIFIX M5 x 24MM<br>(ii) MINIFIX CASING | 8 PCS<br>8 PCS  |
| B |  CPWOOD SCREW M6 x 50MM                       | 8 PCS           |
| C |  PVC LEG 3"<br>SCREW M3.5 x 16MM              | 6 PCS<br>24 PCS |
| D |  DOOR HOLDER<br>SCREW M3 x 12MM               | 4 PCS<br>8 PCS  |
| E |  POWER PIN                                    | 31 PCS          |
| F |  IRON SHELF SUPPORT                           | 4 PCS           |
| G |  DOOR MAGNET<br>SCREW M3 x 12MM               | 2 SETS<br>2 PCS |
| H |  ALLEN KEY                                   | 1 PC            |
| I |  SCREW M3.5 x 16MM                          | 4 PCS           |






# START ASSEMBLY


STEP 1

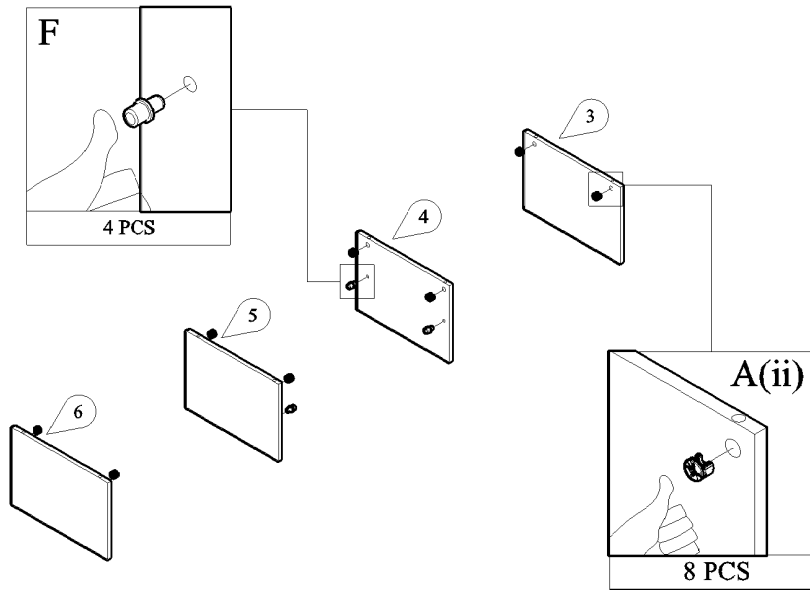


STEP 2

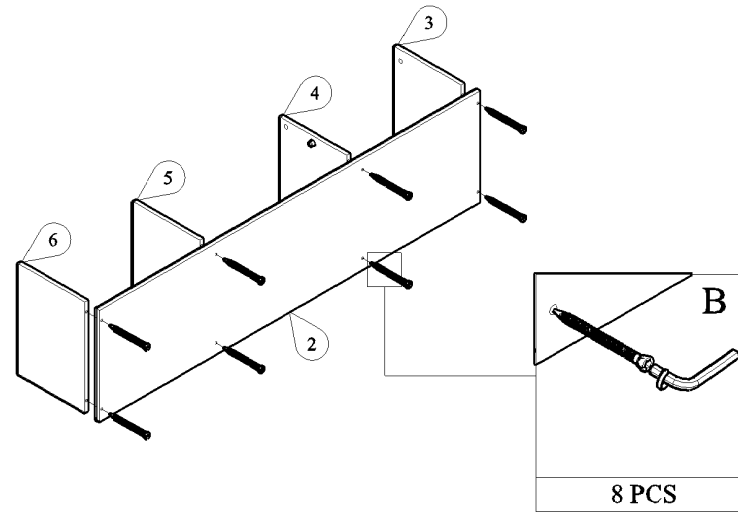


STEP 3

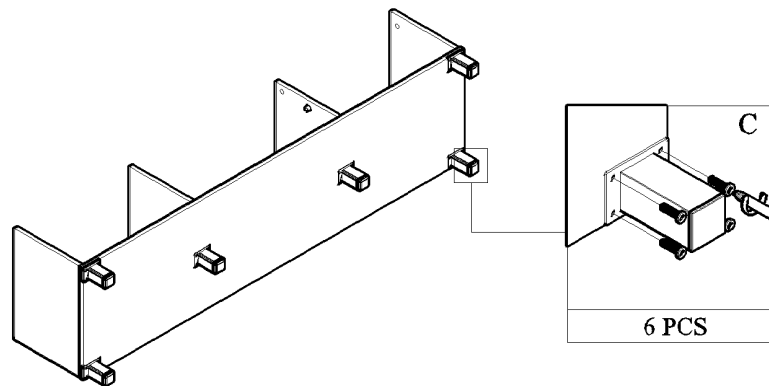


STEP 4

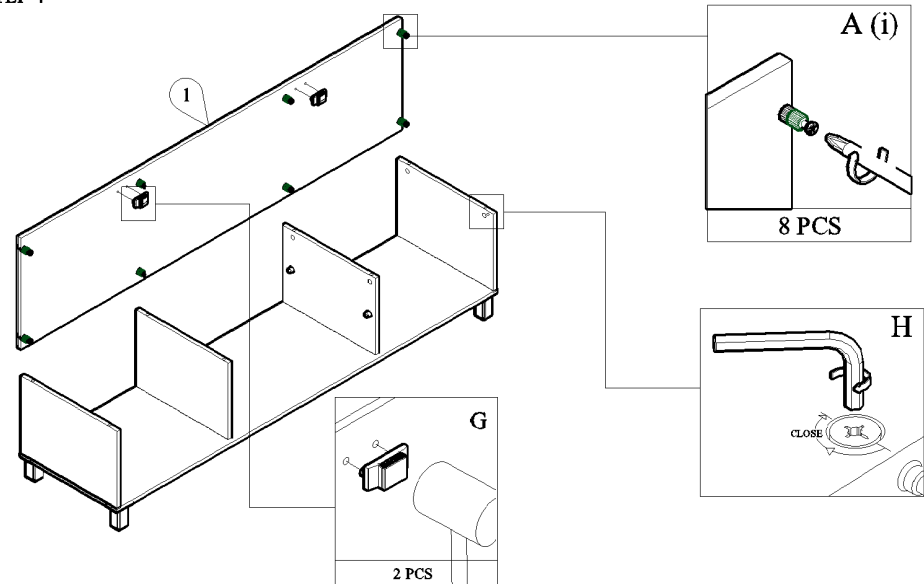


STEP 5

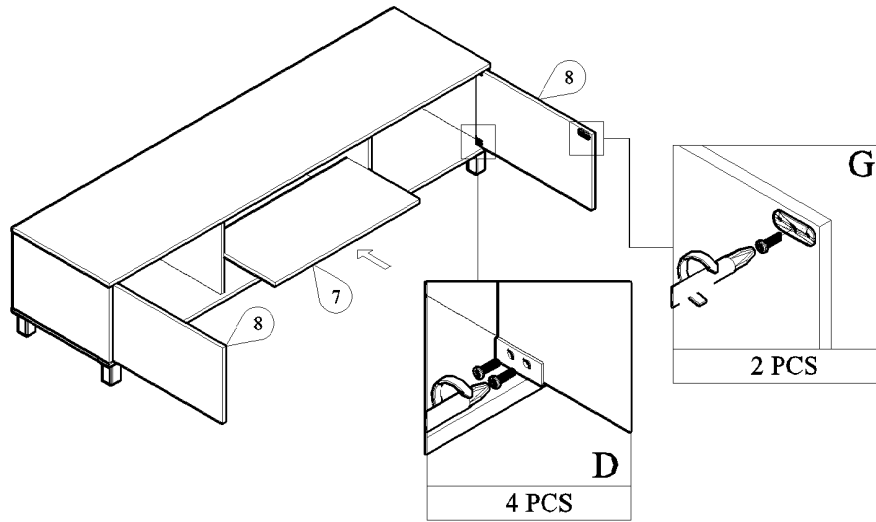

STEP 6

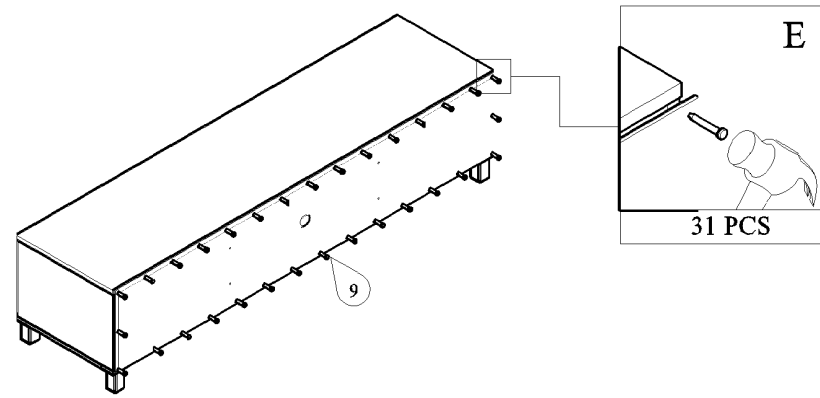

STEP 7

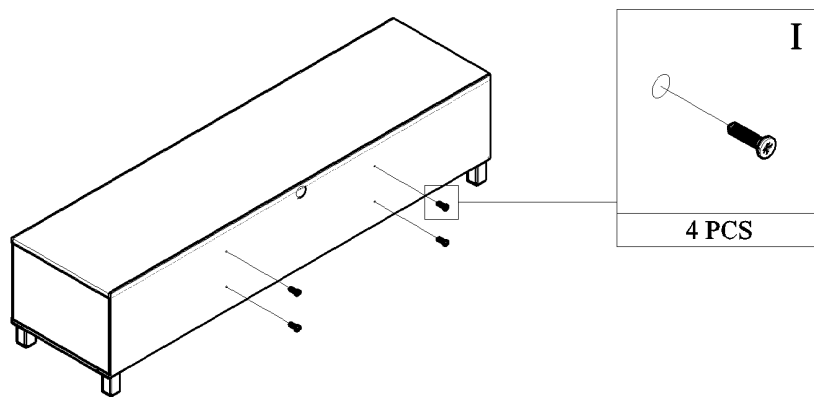

COMPLETED

