


WYNDHAM COLLECTION

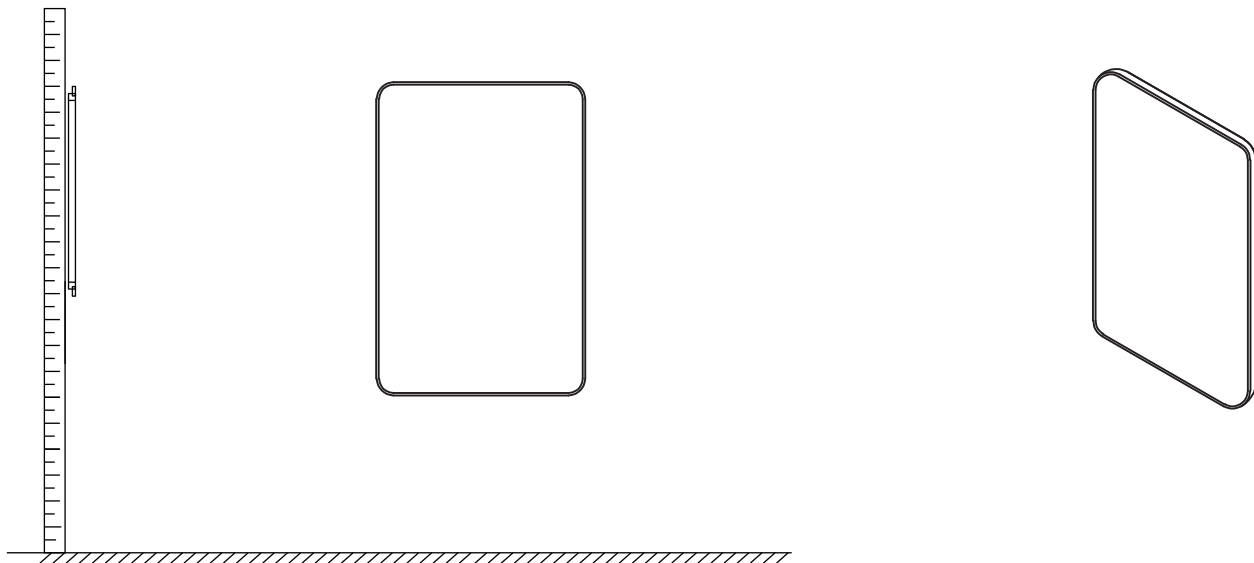

- Prior to installation please check received items against the “Packing List”. Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.


BEFORE YOU BEGIN INSTALLATION

Please review the instructions below carefully before starting the installation process. Keep this guide in a safe place for future reference.

- Inspect the package contents prior to installation and before discarding any packaging.
- Keep the plastic corner protectors in place until installation is fully complete.
- Do NOT strike the mirror glass with hard or pointed items.
- It is recommended to use a soft, dry, non-abrasive cloth to clean the mirror.
- Do NOT use cleaning agents or abrasive materials to clean the mirror.

WC-RC01-M4836-MB
WC-RC01-M4836-BG
WC-RC01-M4836-BN
Installation Guide

WYNDHAM COLLECTION

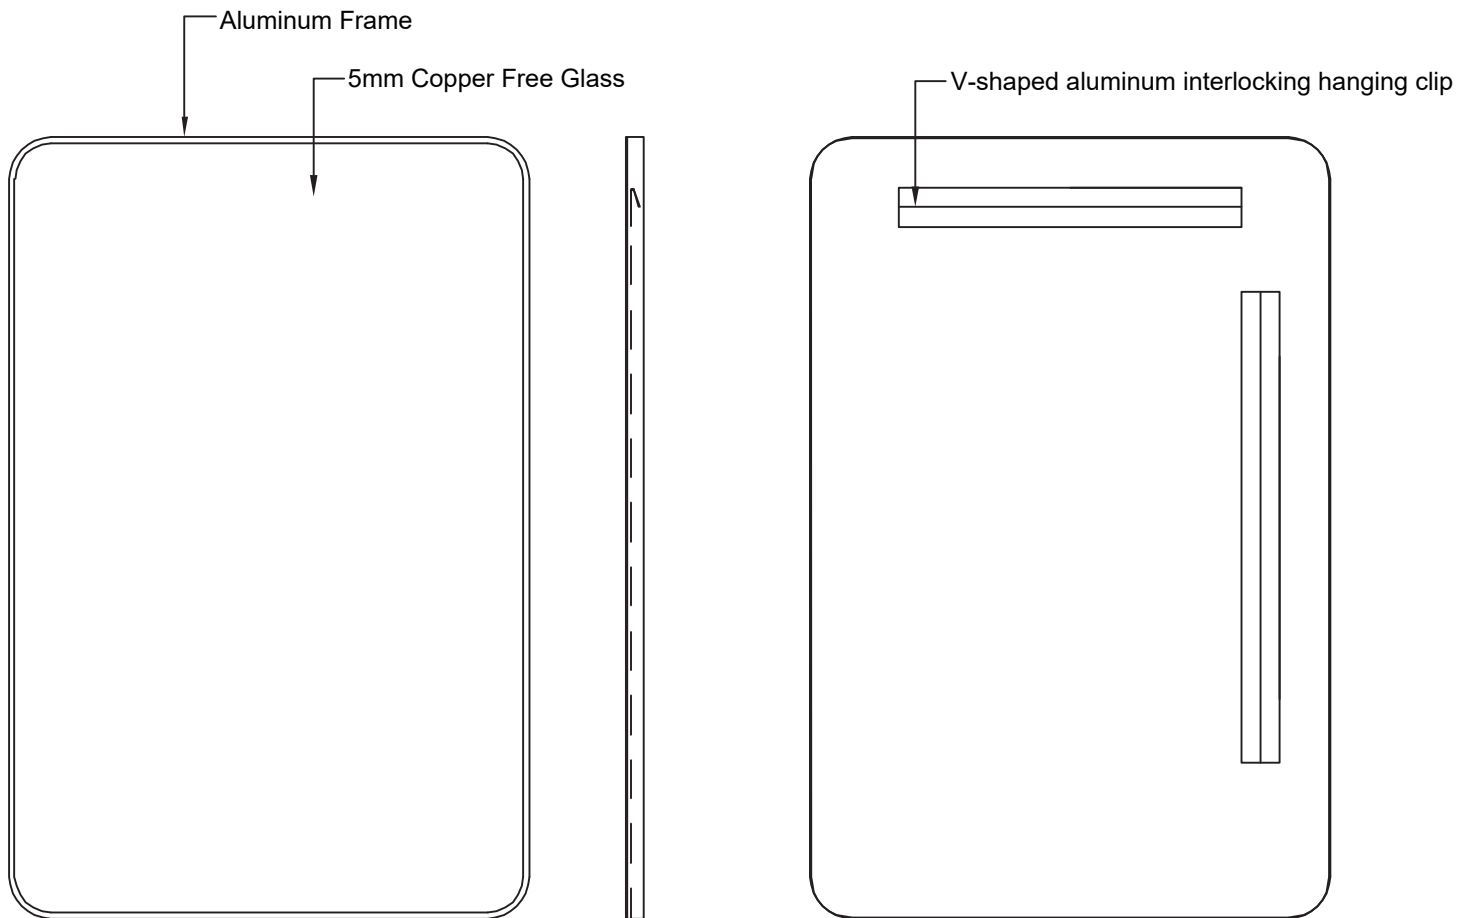

WC-RCOI-M4836-MB
WC-RCOI-M4836-BG
WC-RCOI-M4836-BN
Installation Guide


WYNDHAM COLLECTION

PACKING LIST


(Not all components may be included, depending on your purchase)



Mirror / 1

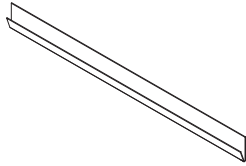


Aluminum hanging
bracket / 2




Screws / 4


REQUIRED TOOLS NOT IN BOX

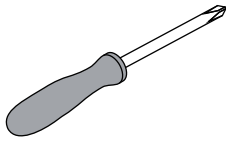

Phillips screwdriver

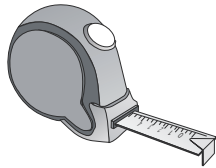

Tape measure

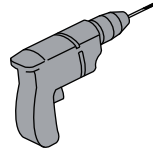

Electric drill




Hammer

WC-RC01-M4836-MB
WC-RC01-M4836-BG
WC-RC01-M4836-BN
Installation Guide

WYNDHAM COLLECTION

INSTALLATION INSTRUCTIONS

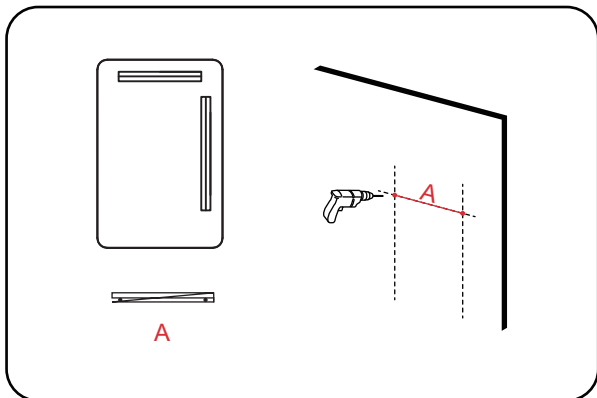


① Select Mounting Location

Choose a suitable location for the mirror.

The mounting bracket must be secured to a wall stud for proper support.

Measure distance "A" (as indicated in the diagram), and mark the positions for drilling.


Drill holes at the marked points using an appropriate tool.

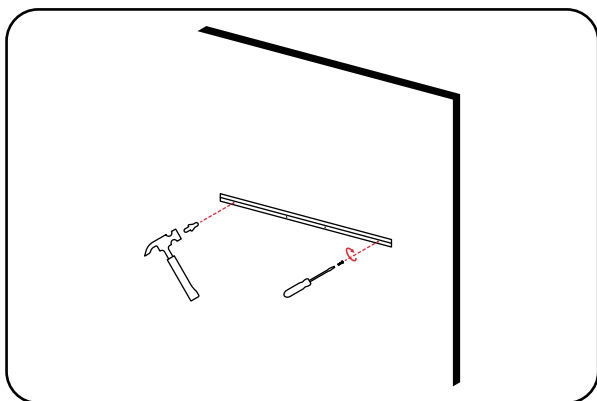

② Step 2: Install Wall Plugs & Mounting Bracket

Insert the supplied wall plugs into the drilled holes.

Fasten the mounting bracket securely to the wall using the provided screws.

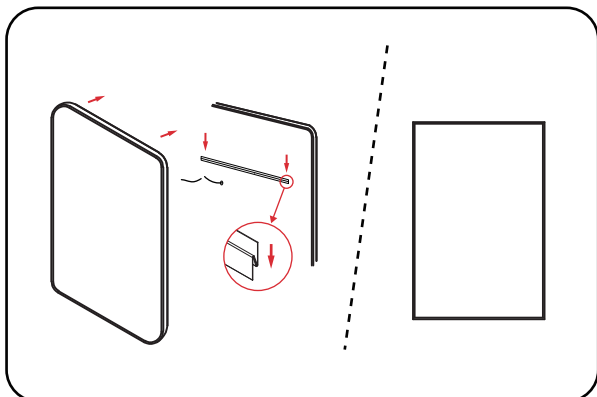

③ Step 4: Final Assembly

Carefully hang the mirror on the mounted bracket.

Peel off the protective film from the mirror surface.

Clean the mirror using a soft, dry, non-abrasive cloth.

WC-RC01-M4836-MB
WC-RC01-M4836-BG
WC-RC01-M4836-BN
Installation Guide