


Thank you for purchasing the **MODWAY Vanity!**


Before you start, here is some helpful advice:

1. We suggest you take **SHORT** time to read through this leaflet and then follow the simple step-by-step instructions.
2. Due to the size and weight of the Vanity Cabinet EEI-5083-NAT, we recommend to assembly the leg by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.

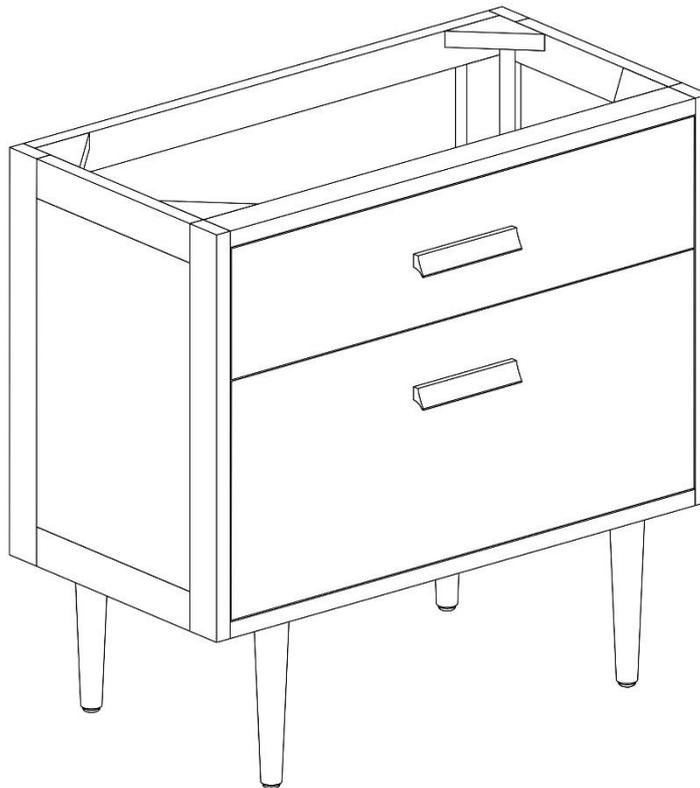


EEI-5083-NAT Vanity Cabinet

Hardware:

- | | | | |
|---|-------------------------------------------------------------------------------------|-----------------------------|-----|
| A |  | Bolt M4x30mm | x 4 |
| B |  | Screwdriver (Not Include) | x 1 |
| C |  | Brass Handle | x 2 |


STEP 1:

Please put the foot (2) into the hardware insert nut hole (1) then turn the leg in the right direction and glue it.

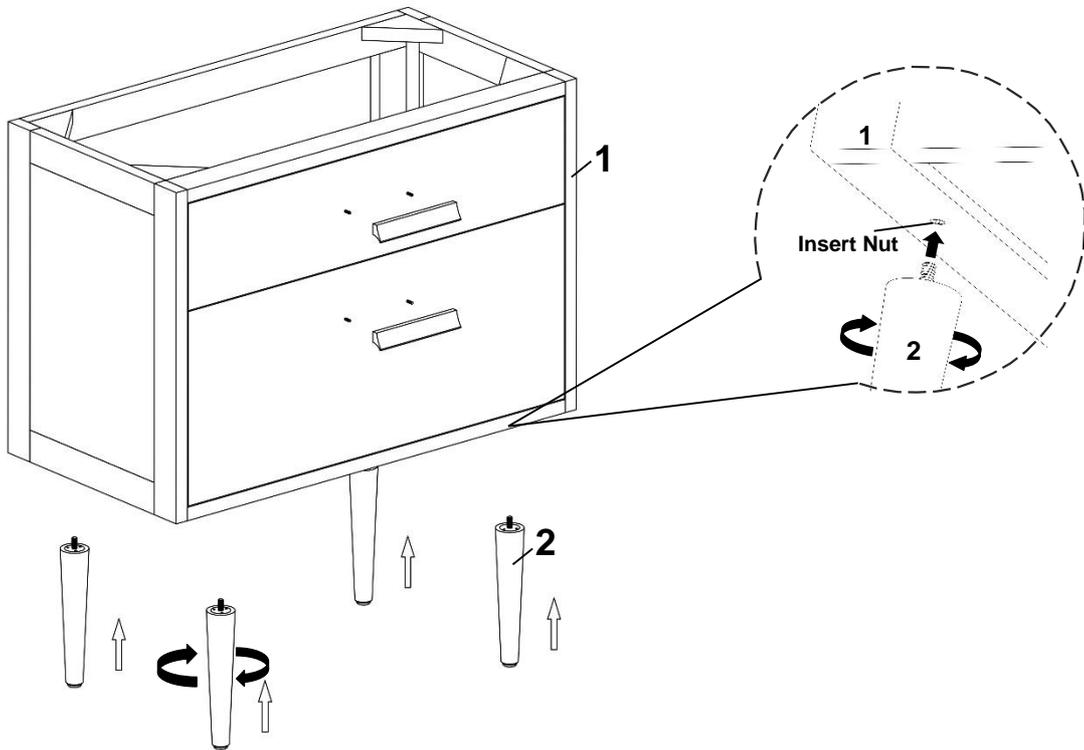

STEP 2:

Ensure that the bolt has been inserted into the hole previously drilled in part (1) and attach the brass handle (C) as shown in the picture and secure it using a screwdriver (B).

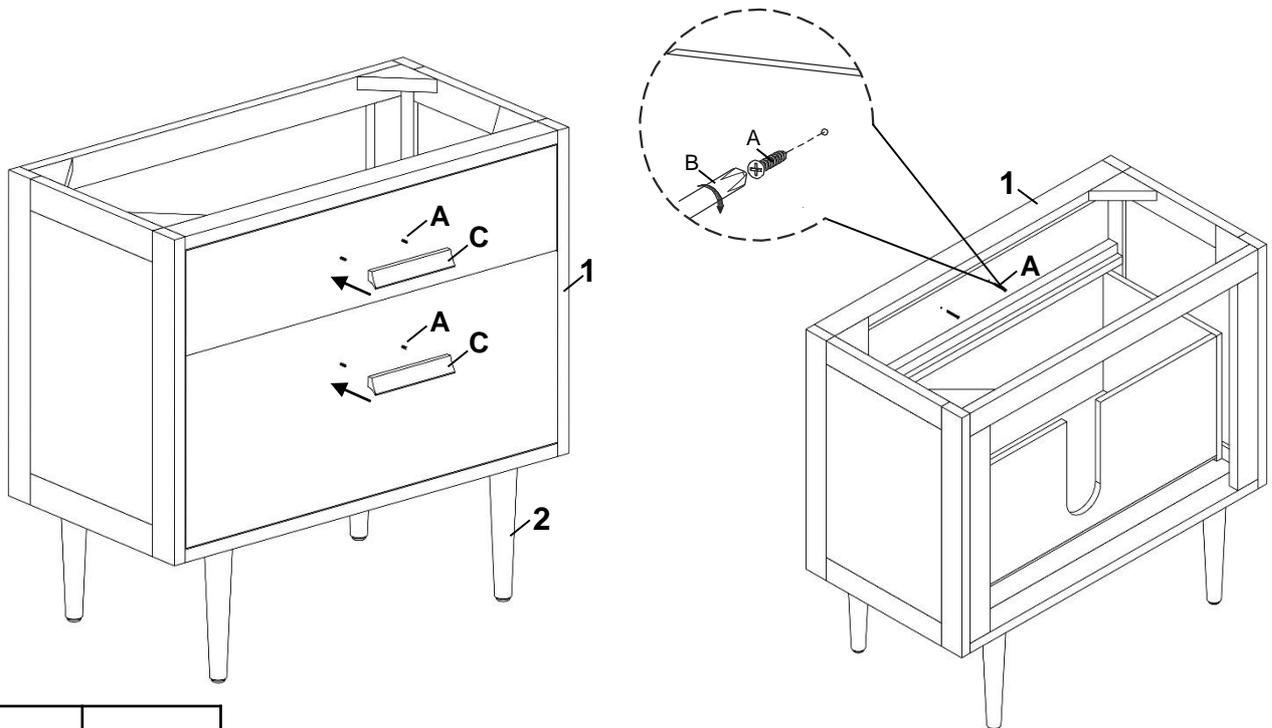

Ax4	Bx1

Hardware required. Screwdriver not included

STEP 3:
Assembly is complete

