




1.Installation of hardware feet for the dressing table.

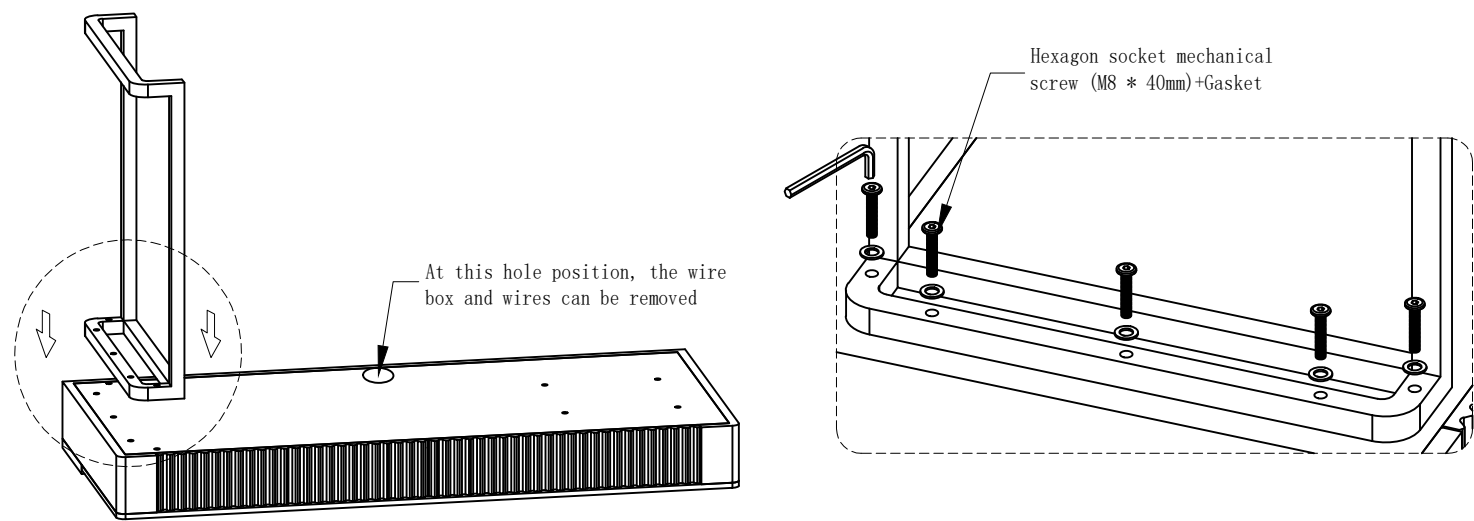

2. Installation of the upper and lower cabinets of the dressing table. (The drawer needs to be removed from the lower cabinet to align and screw in the screws)

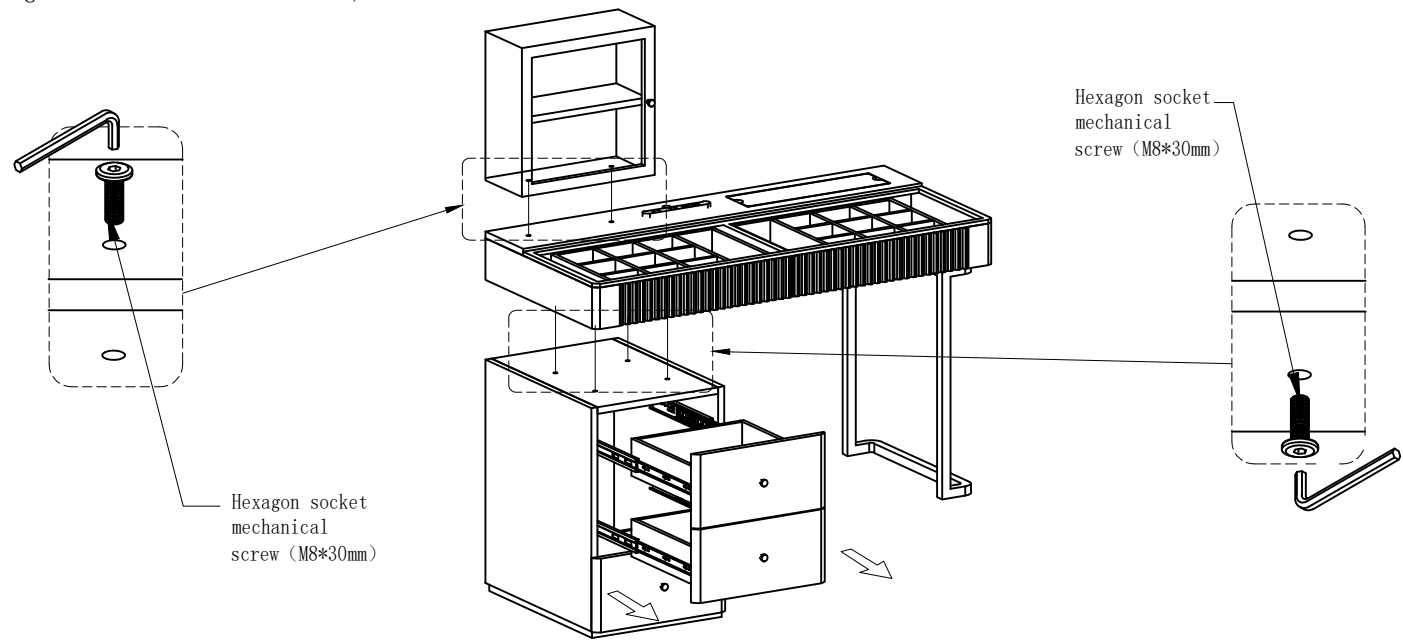

Installation instruction

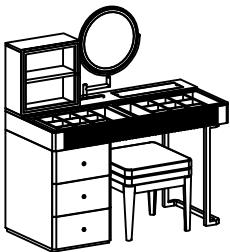

Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.



Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket mechanical screw (M8*40mm)	5	0
B		Gasket	5	0
C		Hexagon socket mechanical screw (M8*30mm)	6	0
D		Hexagon socket mechanical screw (M6*25mm)	2	0
E		wrench(1)	1	0
F		wrench(2)	1	0
G		Laminated support	4	1

3. Insert the mirror rod into the hole position on the desktop, align the hole position on the back panel, and tighten it with an internal hexagonal mechanical screw using a wrench.

(3.1)

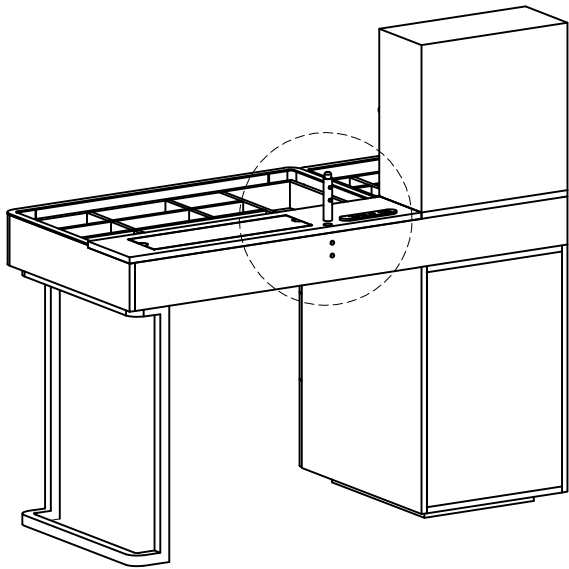


(3.2)

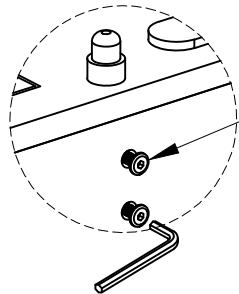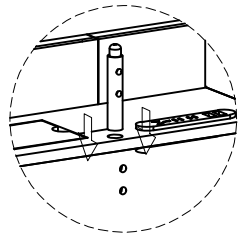


Hexagon socket
mechanical
screw (M6*25mm)

4. Installation of mirrors.

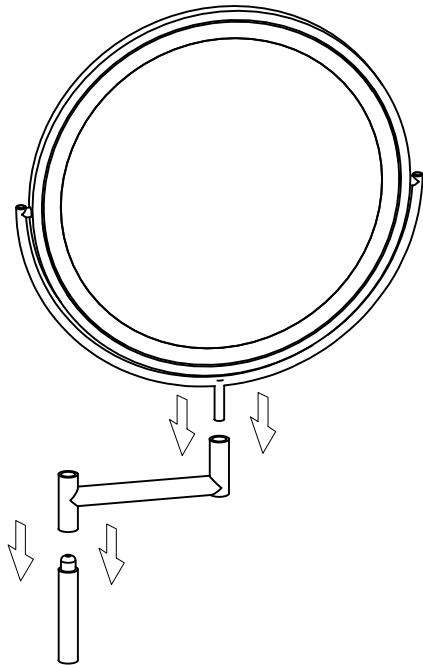


5.Reverse the handle to the outside of the drawer.

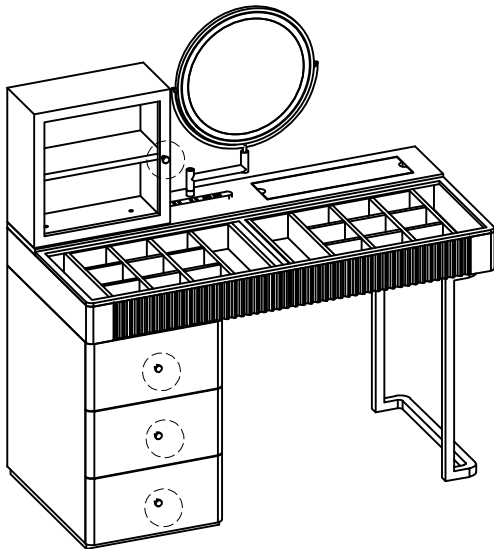

Cross wire
(M4*20mm)

Handle

Installation instruction

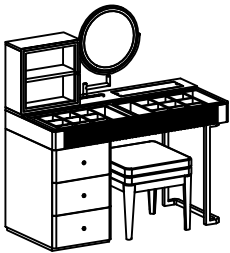


Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket mechanical screw (M8*40mm)	5	0
B		Gasket	5	0
C		Hexagon socket mechanical screw (M8*30mm)	6	0
D		Hexagon socket mechanical screw (M6*25mm)	2	0
E		wrench (1)	1	0
F		wrench (2)	1	0
G		Laminated support	4	1


6. Place two layer pallets on the same parallel line on the left and right at the hole positions inside the upper cabinet, and then place the layer pallets on top of the layer pallets.

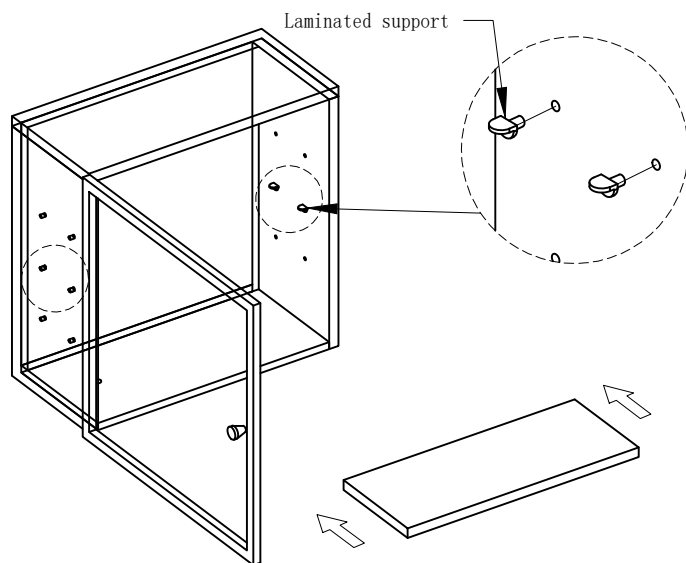


7. Installation of dressing stools.

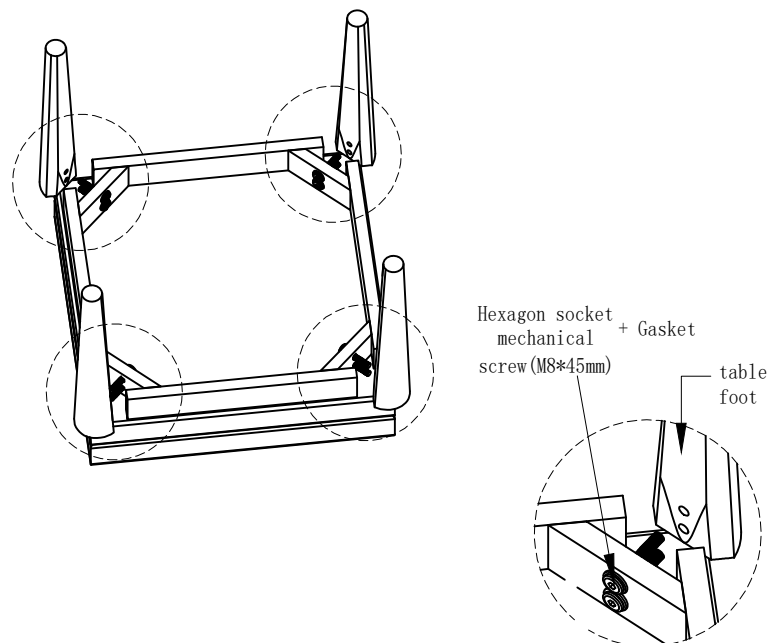

8. Installation completed.

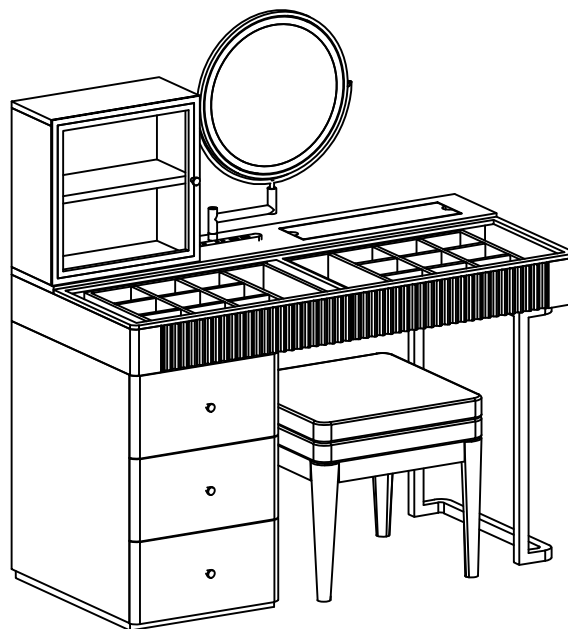

Installation instruction

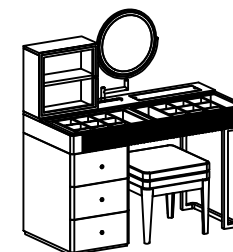

Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket mechanical screw (M8*40mm)	5	0
B		Gasket	5	0
C		Hexagon socket mechanical screw (M8*30mm)	6	0
D		Hexagon socket mechanical screw (M6*25mm)	2	0
E		wrench (1)	1	0
F		wrench (2)	1	0
G		Laminated support	4	1

Disassembly instruction for three-section side-mounted rail drawer


1. Three-section side-mounted rail drawer.



2. How to teardown drawer:

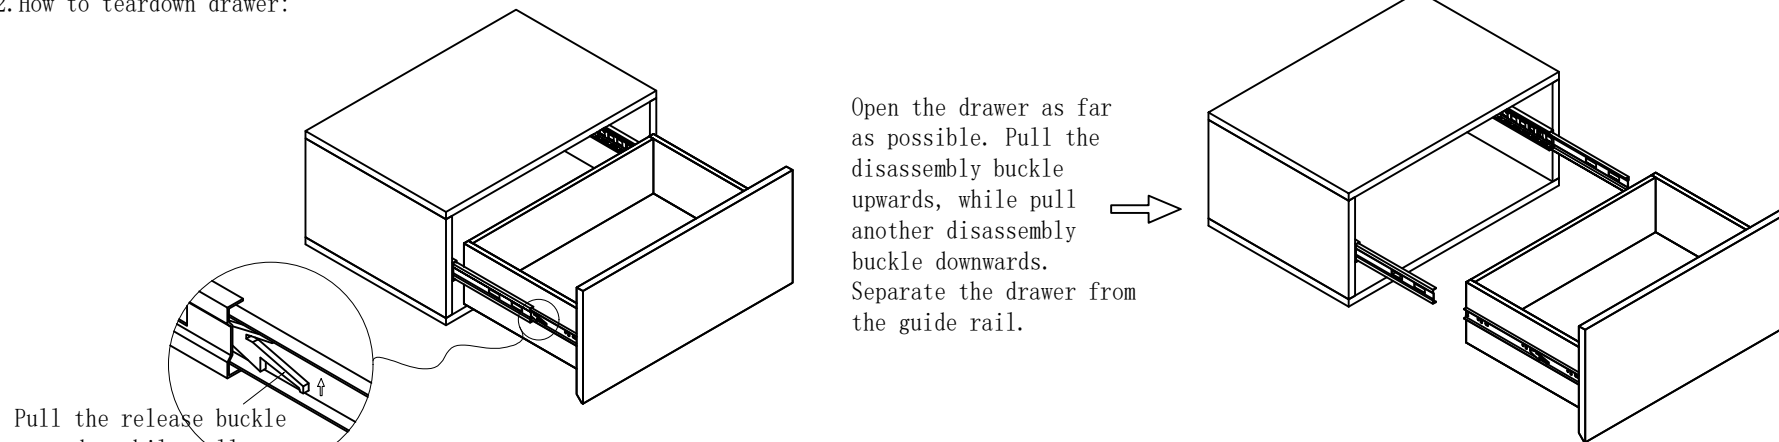


3. How to install drawer:

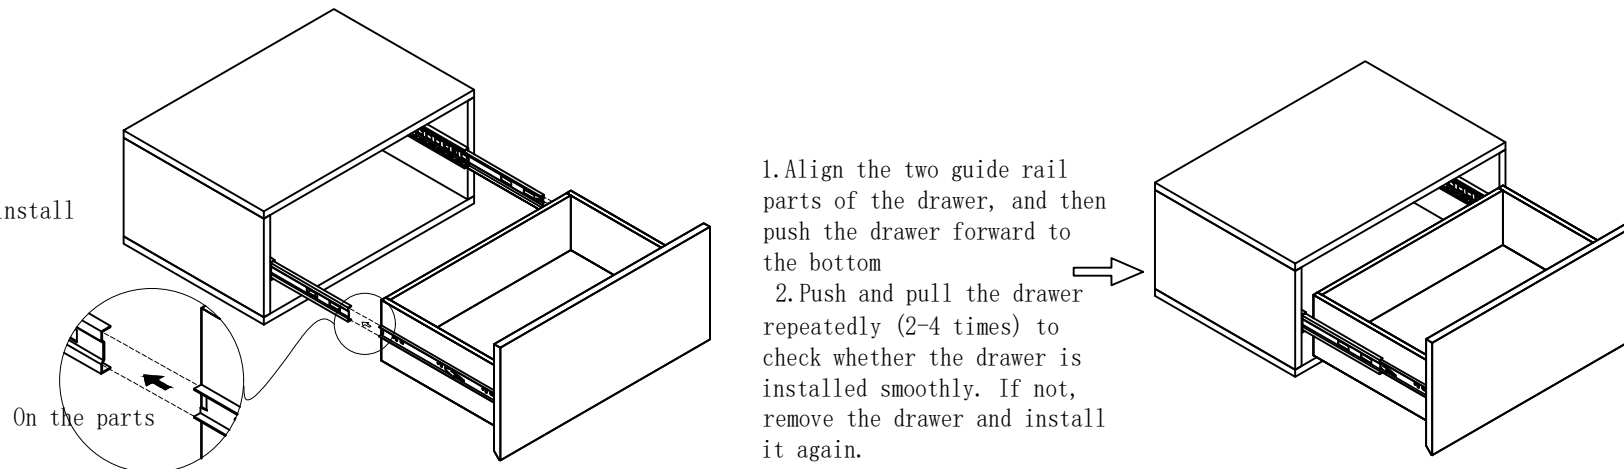


You can choose whether to install it according to your own needs (this accessory will damage the wall and affect the appearance of the product) (this accessory is to prevent the product from falling and cause personal safety)

1. Makeup Vanities - Anti tipping Device Installation (Method 1)

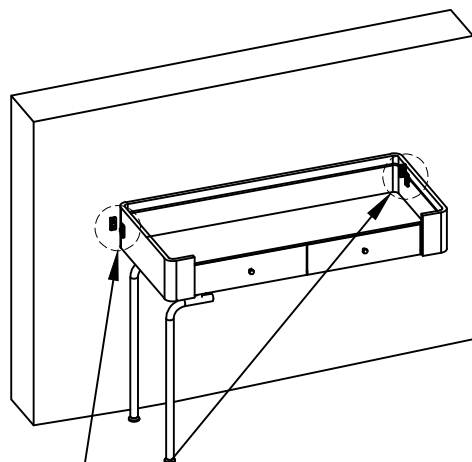


(1)The anti tipping device is installed on the cabinet side panel

(2)Place another anti tipping device horizontally or slightly upwards on the wall and mark its location with a marker pen


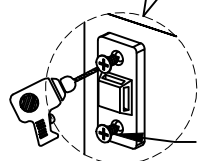


Self-tapping screw (short)

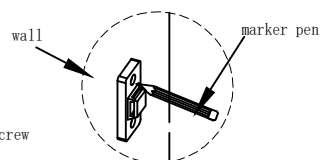


(3)Drill holes with electric drill according to the position marked by the marker on the wall

(4)Use a hammer to tap in the expansion screw rubber plug at the hole position on the wall

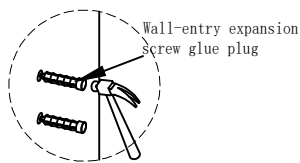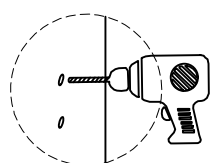


(5)Place anti tipping on the wall and use an electric drill to drive the self tapping screws into the wall

(6)Bundle the two anti tipping devices with straps

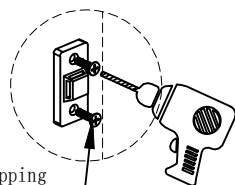



Self-tapping screw (long)

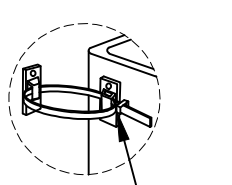

tape

2.Makeup Vanities - Anti tipping Installation (Method 2)

The back of the dressing table

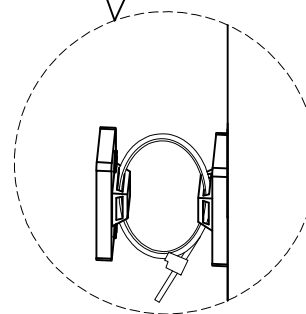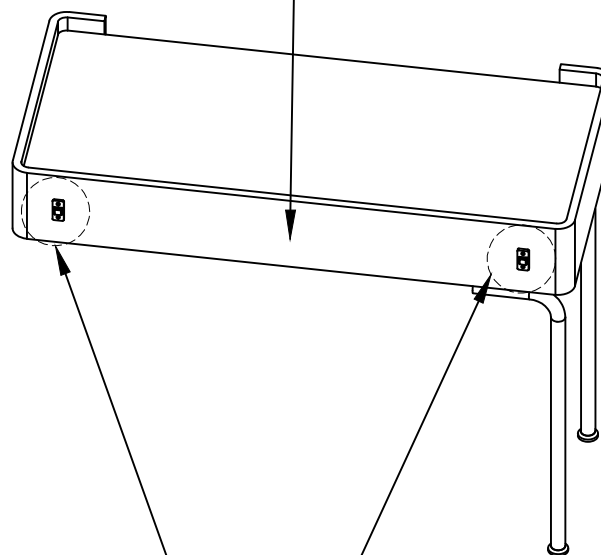

Installation instructions for anti-dumping accessories



- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Anti-dumping accessories	2	1
B		Self-tapping screw (long)	2	1
C		Self-tapping screw (short)	2	1
D		Wall-entry expansion screw glue plug	2	1
E		tape	2	1
F				
G				