




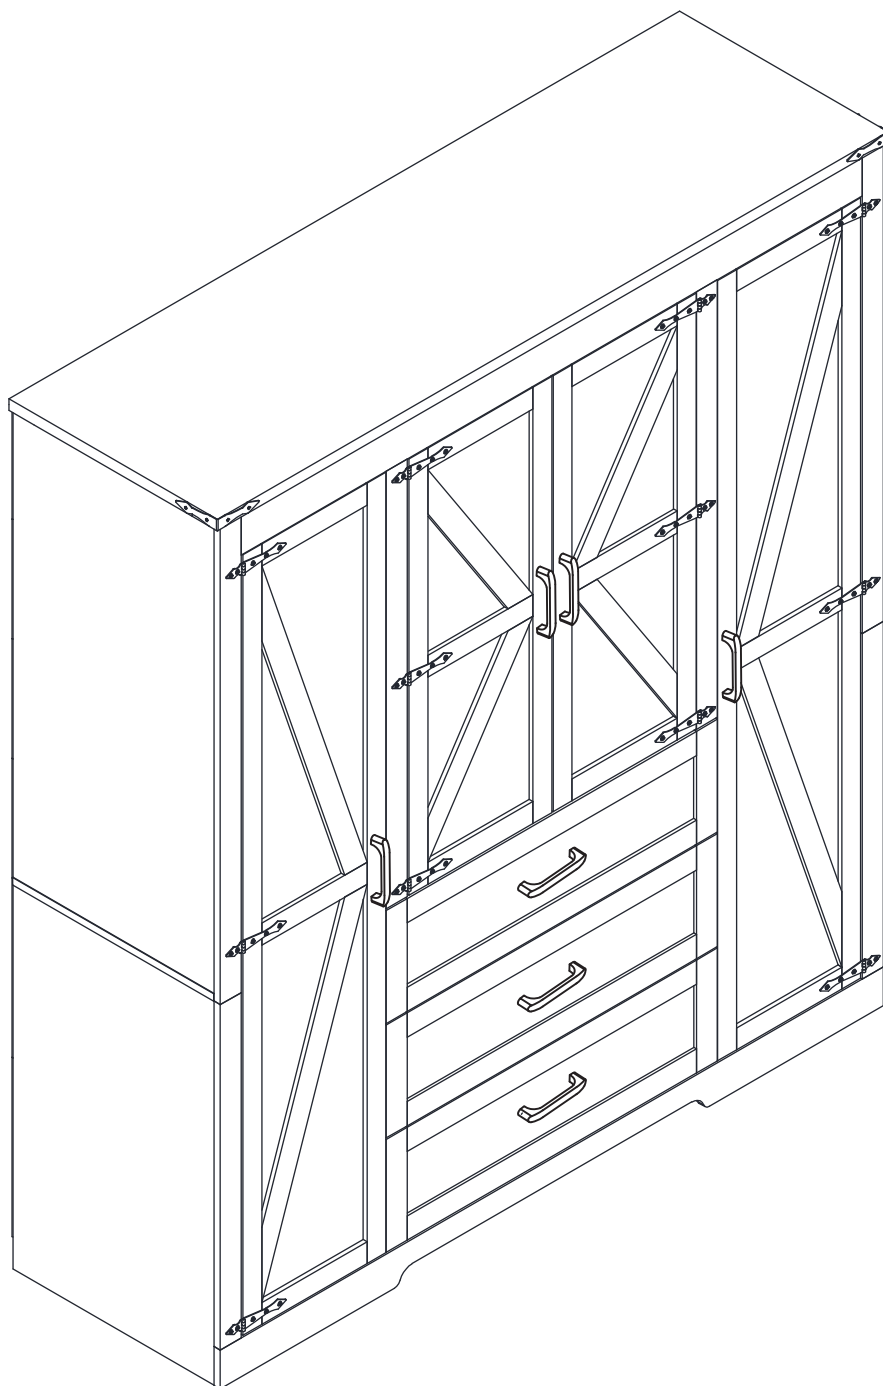

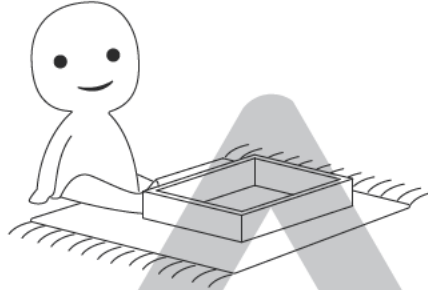


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

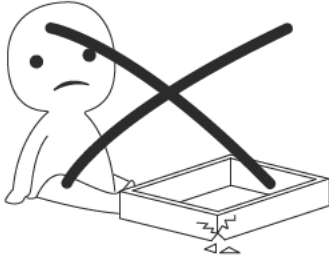



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

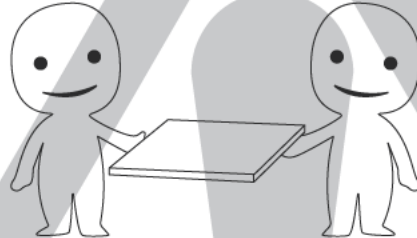

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

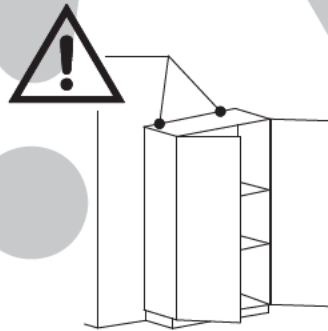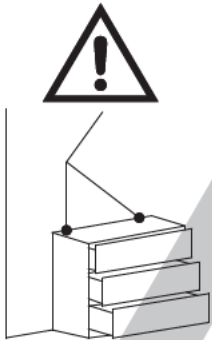

ANTI-TOPPLE WARNING !



Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !























It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability throughout the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.













Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

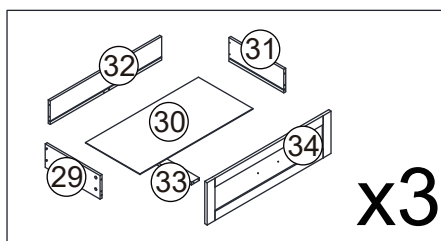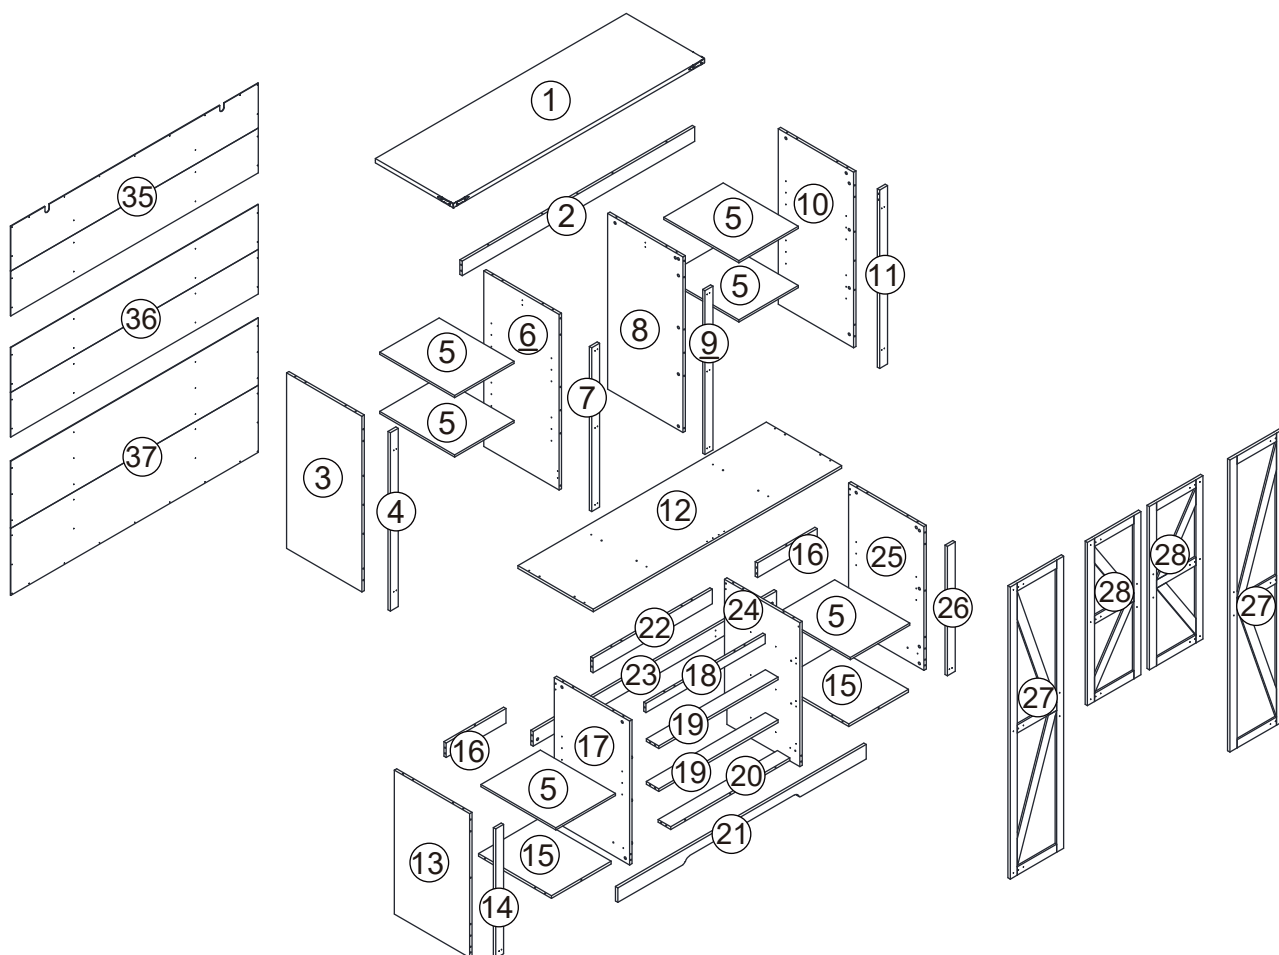





Parts and Operation Elements

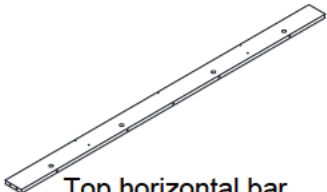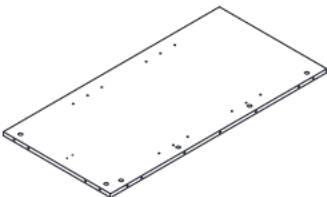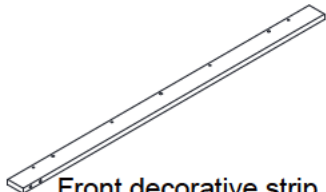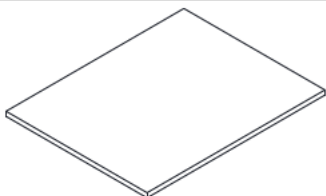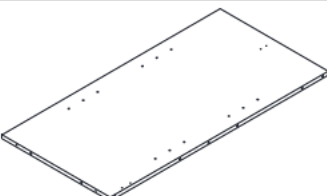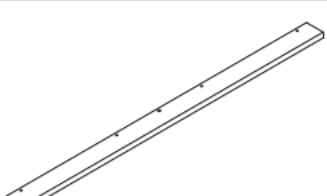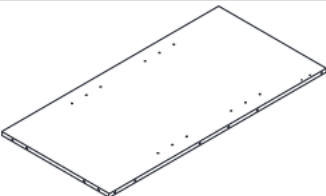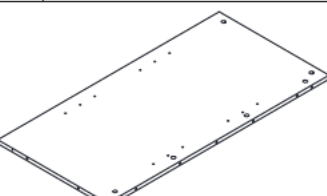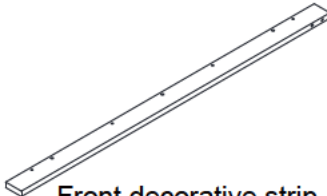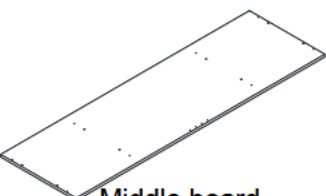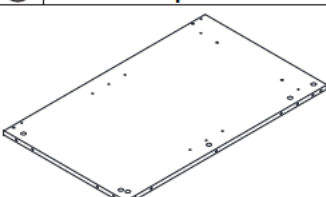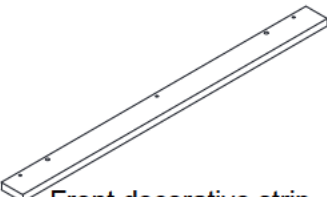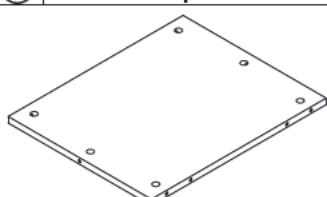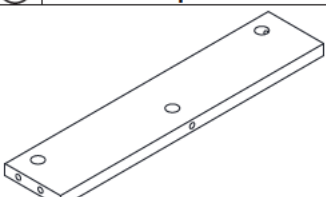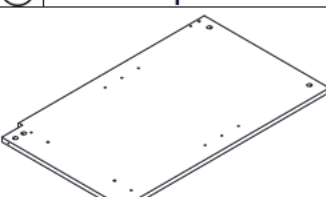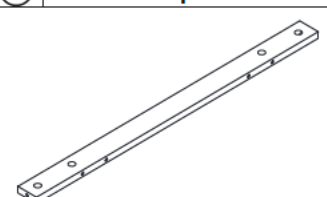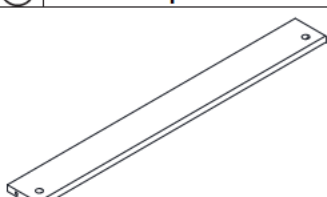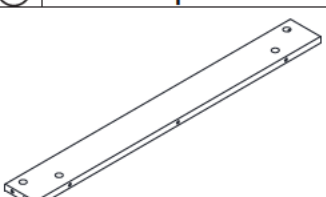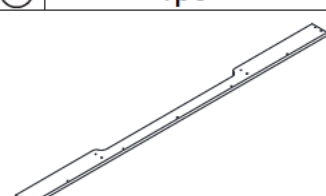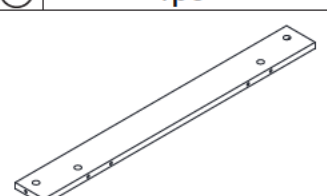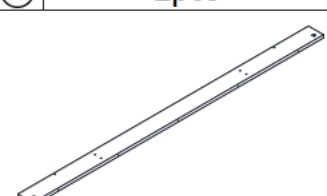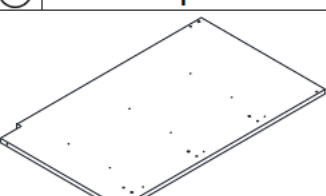			
① roof 1pc	② Top horizontal bar 1pc	③ Left side panel 1pc	④ Front decorative strip 1pc
			
⑤ Movable Shelf 6pcs	⑥ Left middle partition 1pc	⑦ Front decorative strip 1pc	⑧ Right middle partition 1pc
			
⑨ Front decorative strip 1pc	⑩ Right side panel 1pc	⑪ Front decorative strip 1pc	⑫ Middle board 1pc
			
⑬ Lower left panel 1pc	⑭ Front decorative strip 1pc	⑮ base 2pcs	⑯ Back brace 2pcs
			
⑰ Lower left middle partition 1pc	⑱ Front gear strip 1pc	⑲ Pull off the stopper 2pcs	⑳ Front dropdown menu 1pc
			
㉑ Front kick strip 1pc	㉒ Middle back pull strip 1pc	㉓ Rear kick bar 1pc	㉔ Lower right middle partition 1pc

Parts and Operation Elements

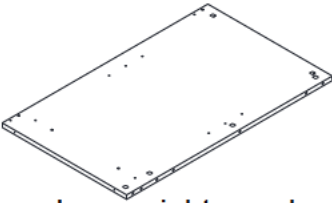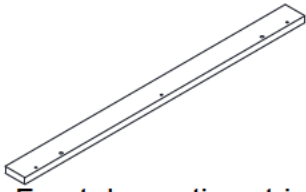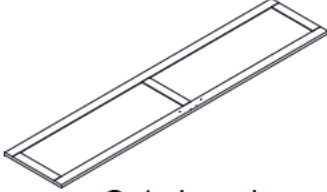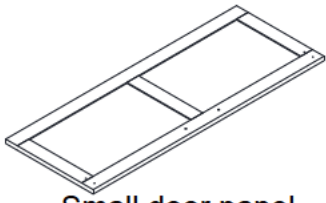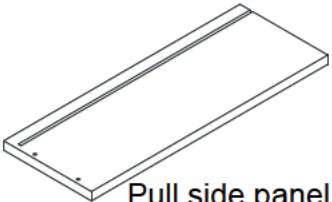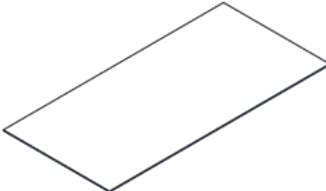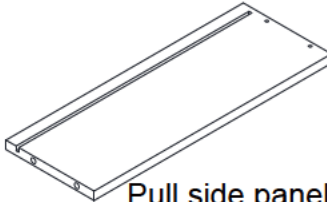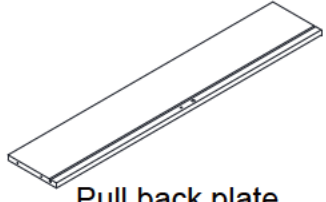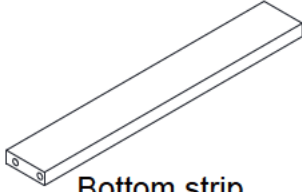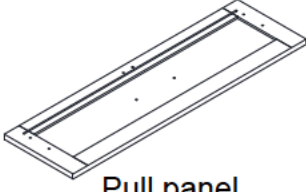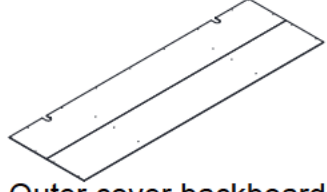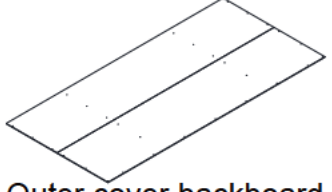			
②⑤ Lower right panel 1pc	②⑥ Front decorative strip 1pc	②⑦ Gate board 2pcs	②⑧ Small door panel 2pcs
			
②⑨ Pull side panel 3pcs	③⑩ Pull the bottom plate 3pcs	③① Pull side panel 3pcs	③② Pull back plate 3pcs
			
③③ Bottom strip 3pcs	③④ Pull panel 3pcs	③⑤ Outer cover backboard 1pc	③⑥ Outer cover backboard 1pc
			
③⑦ Outer cover backboard 1pc			





Hardware

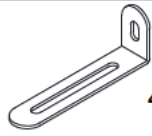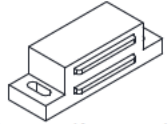 6x35mm Cam bolt Cam bolt		 15x9.5mm cam lock Cam Lock		 7x30mm Wooden dowel Wood dowel		 Dual-purpose screwdriver	
A	103+2pcs	B	103+2pcs	C	78+2pcs	D	1pc
 4x30mm screw		 M5x40mm Bolt		 3x16mm screw			
E	24+2pcs	F	15+2pcs	G	8+2pcs	H	68+3pcs
 4x14mm screw Unti-dumping device		 5x40mm screw		 4x16mm screw		 3.5x12mm screw	
I	2set	J	8+2pcs	K	36+2pcs		
 3x14mm screw		 M4x18mm bolt		 M4x6mm bolt		 Magnetic contact	
L	60+2pcs	M	8+2pcs	N	6pcs	P	4pcs
 Two-hole magnetic sheet		 One-hole magnetic sheet		 3x12mm screw		 3x16mm screw	
Q	4pcs	R	3pcs	S	11+2pcs	T	8+2pcs
 Clothes rack		 Handle					
U	1pc	V	1pc	W	4pcs	X	7pcs
 Arrow hinge		 CL					
Y	12pcs	Z	1pc	CL	3pcs		



SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.

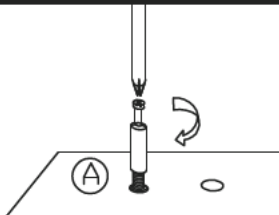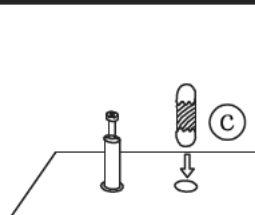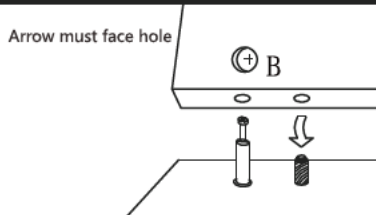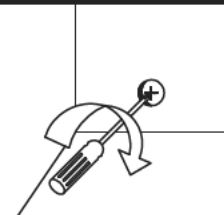			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.





Hardware

							
CR	3pcs	DL	3pcs	DR	3pcs	a	2pcs





SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.

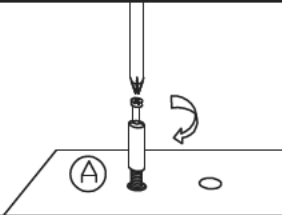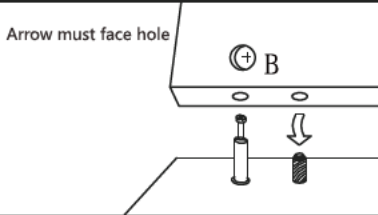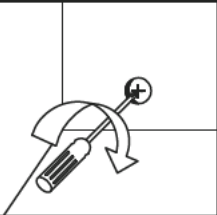							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.				Screw the camlock firmly into locked position.	



1

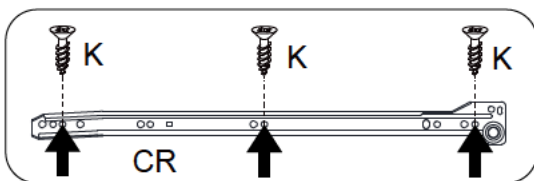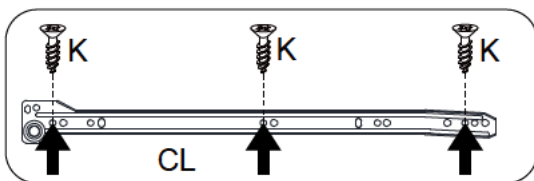



K x18

CR x3




CL x3

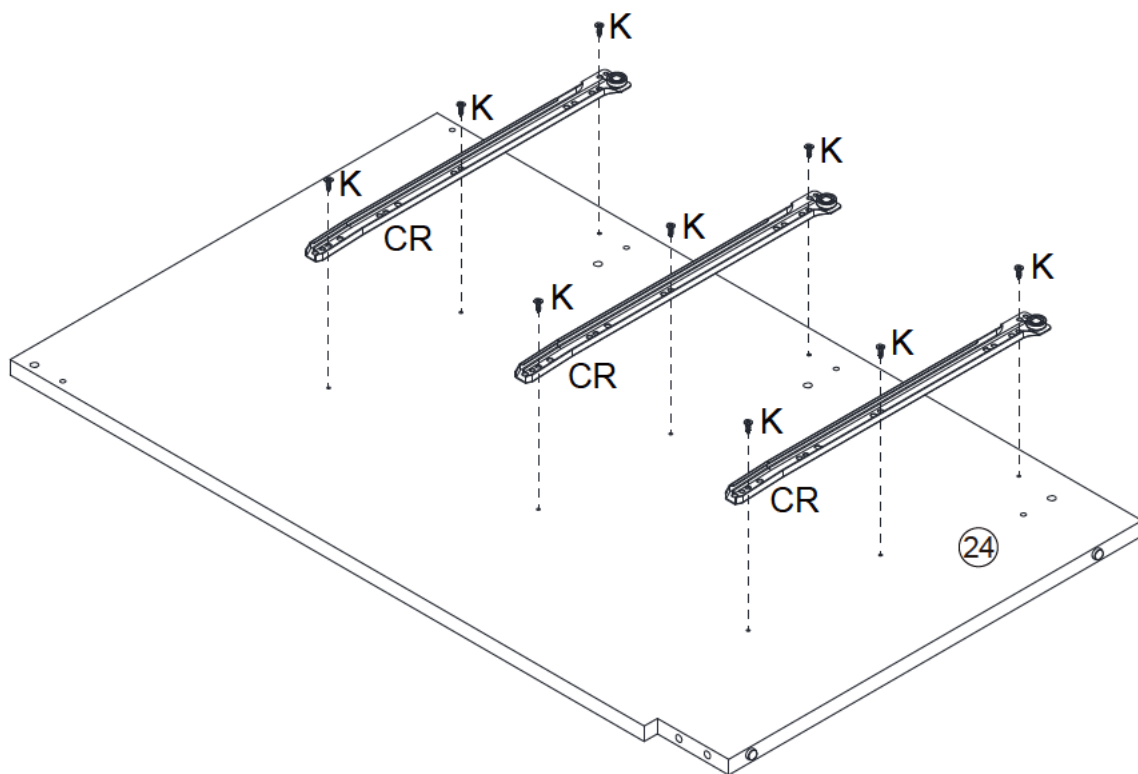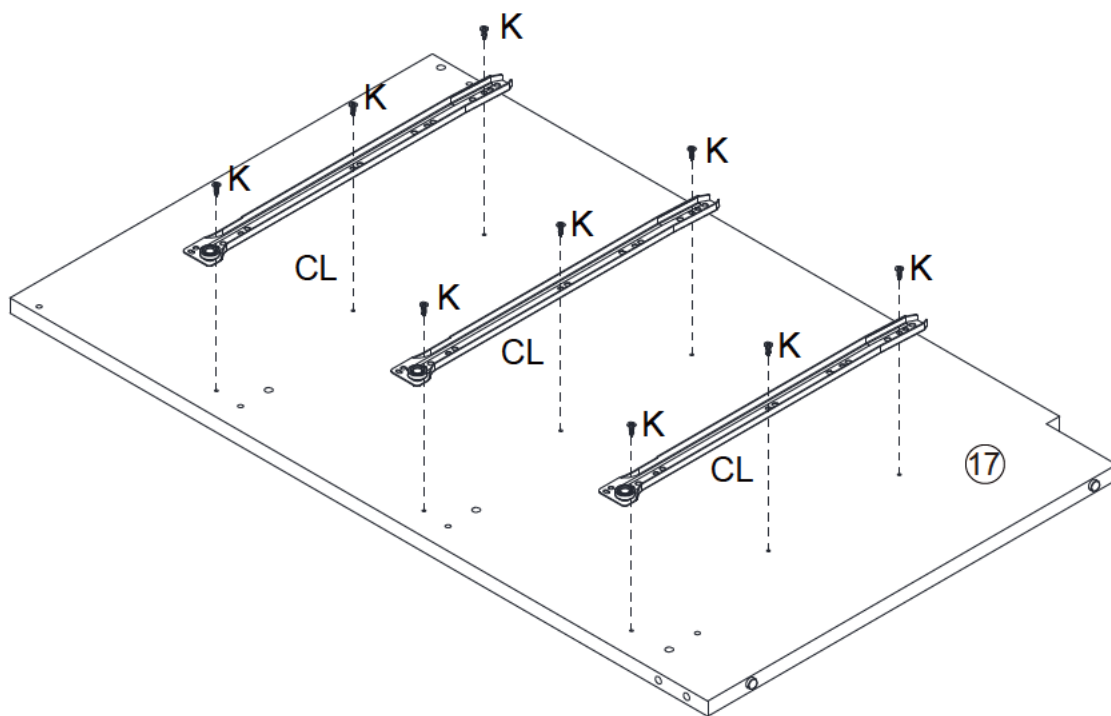


2

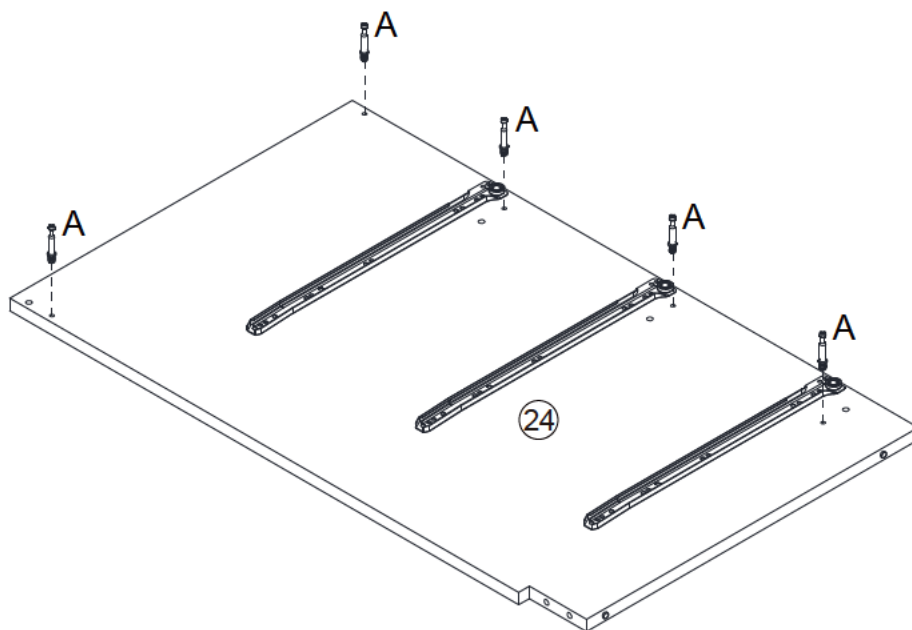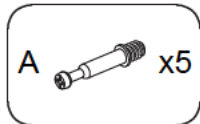

3

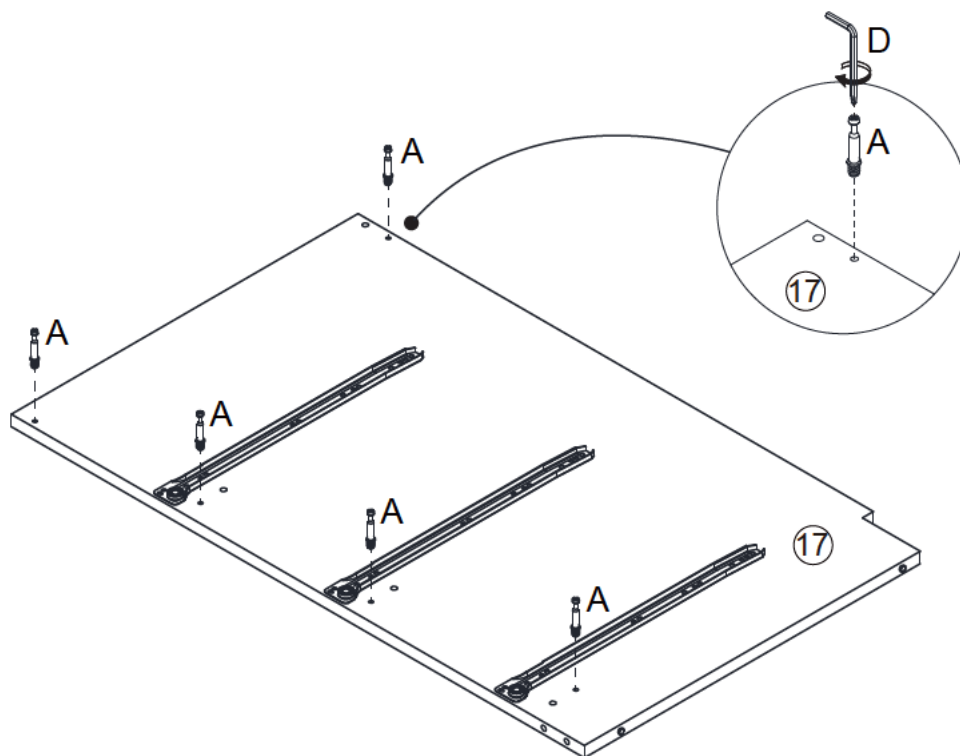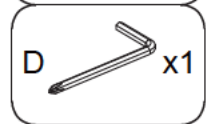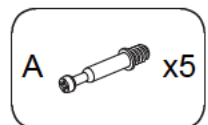


4

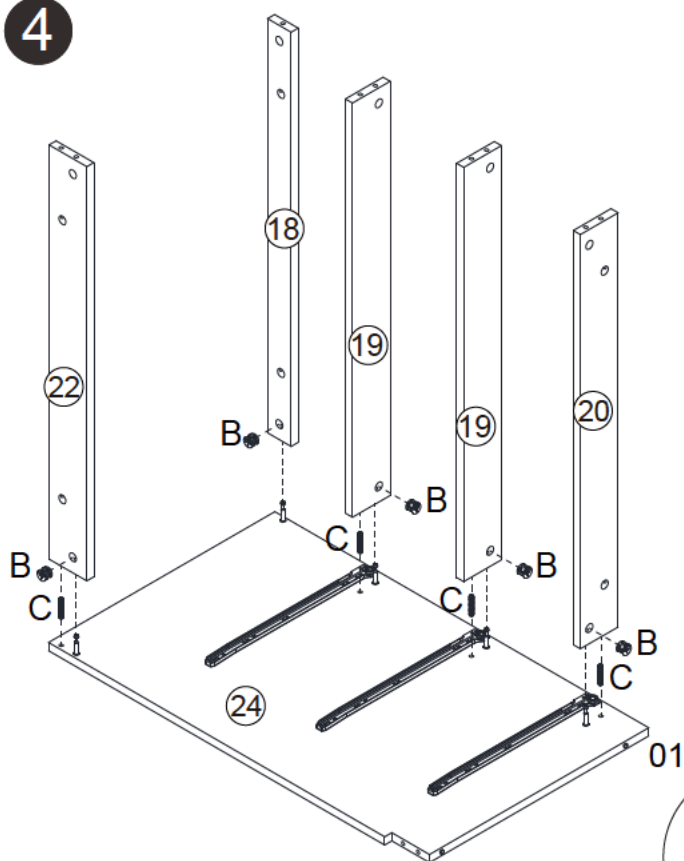


B  x5


C  x4

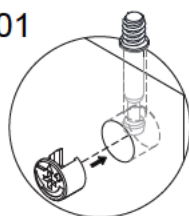


02

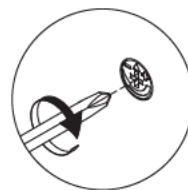

03

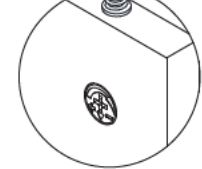

5

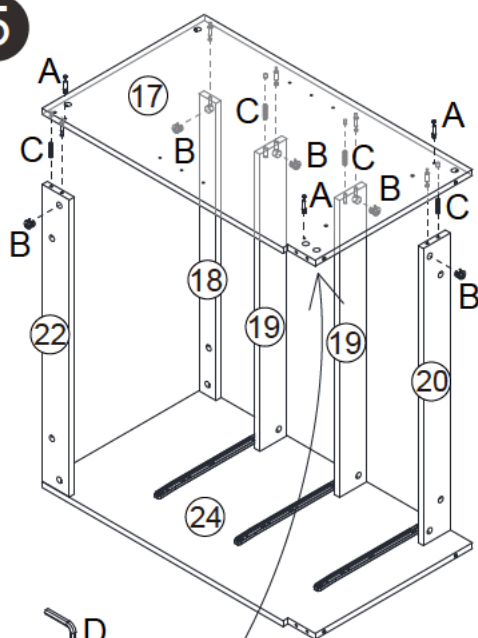


B  x5


C  x4

A  x6

D  x1

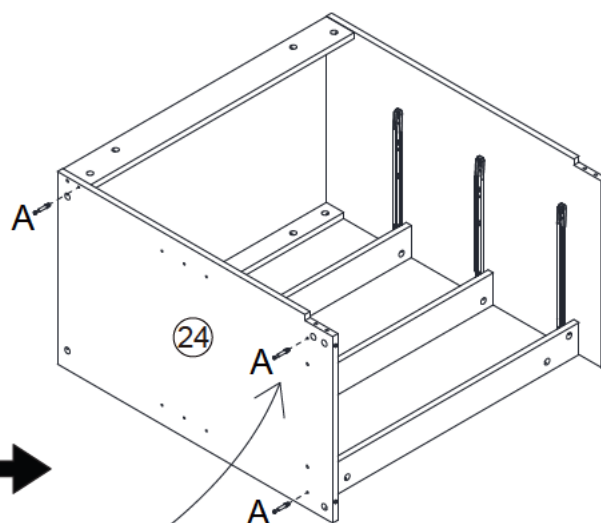

01

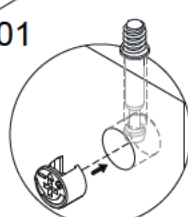


02



03




6

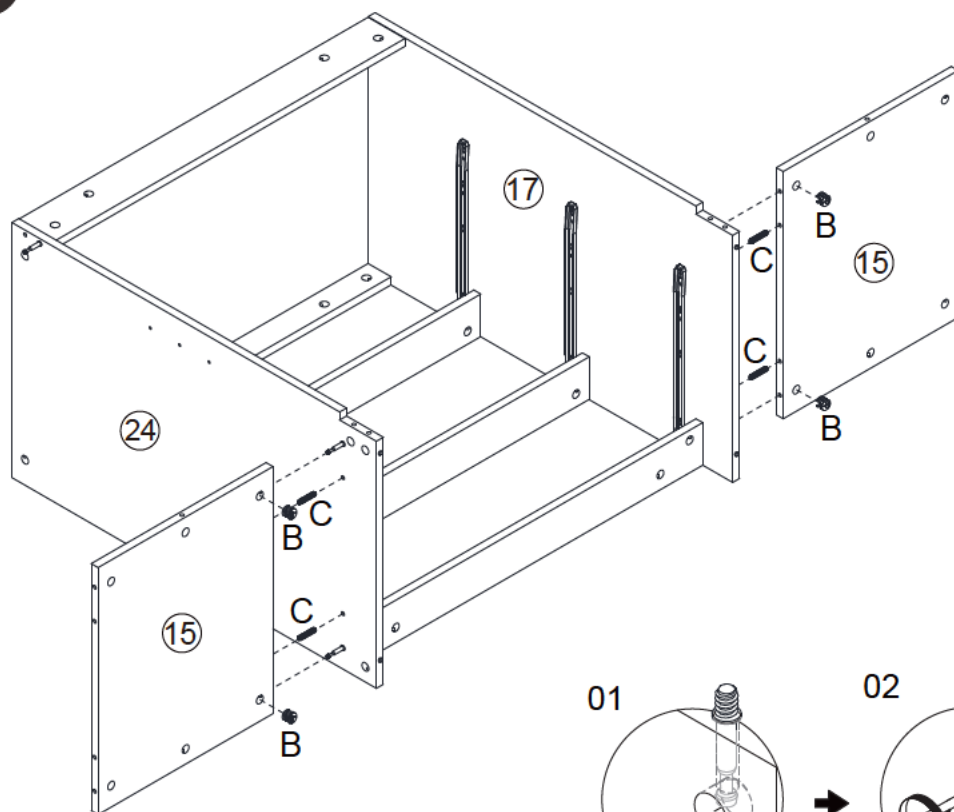


B x4

C x4


01

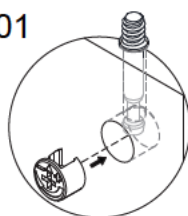


02

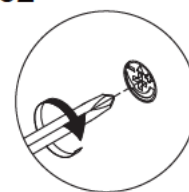

03

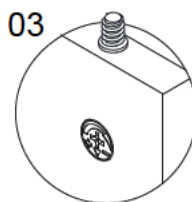

7


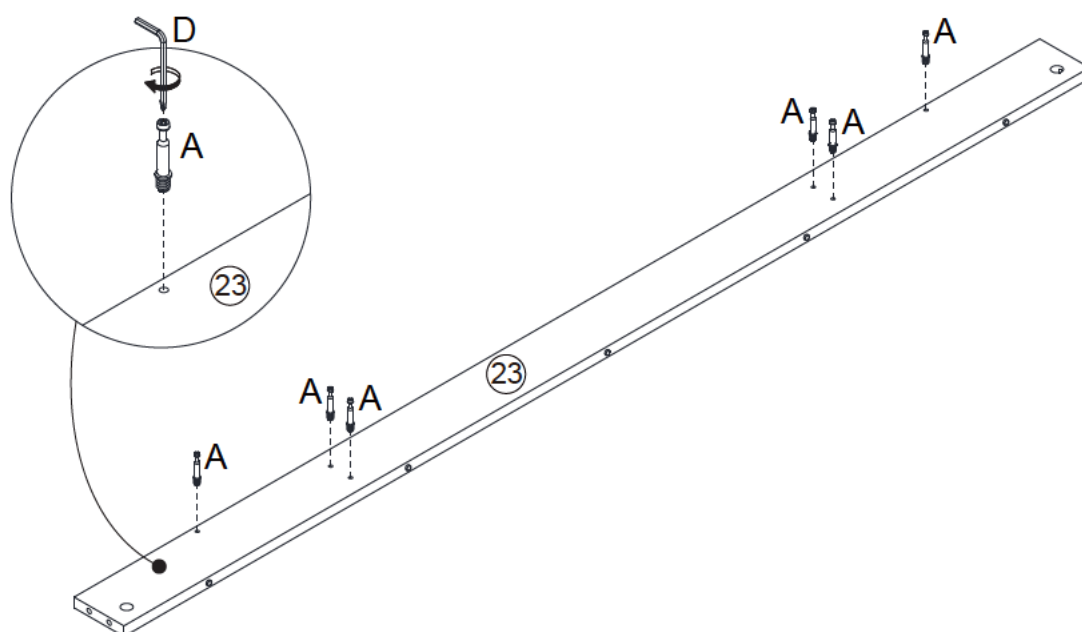


A x6

D x1

8


B  x6

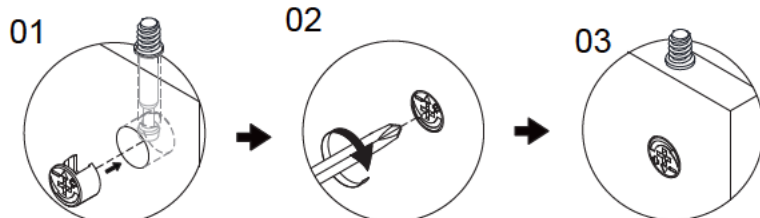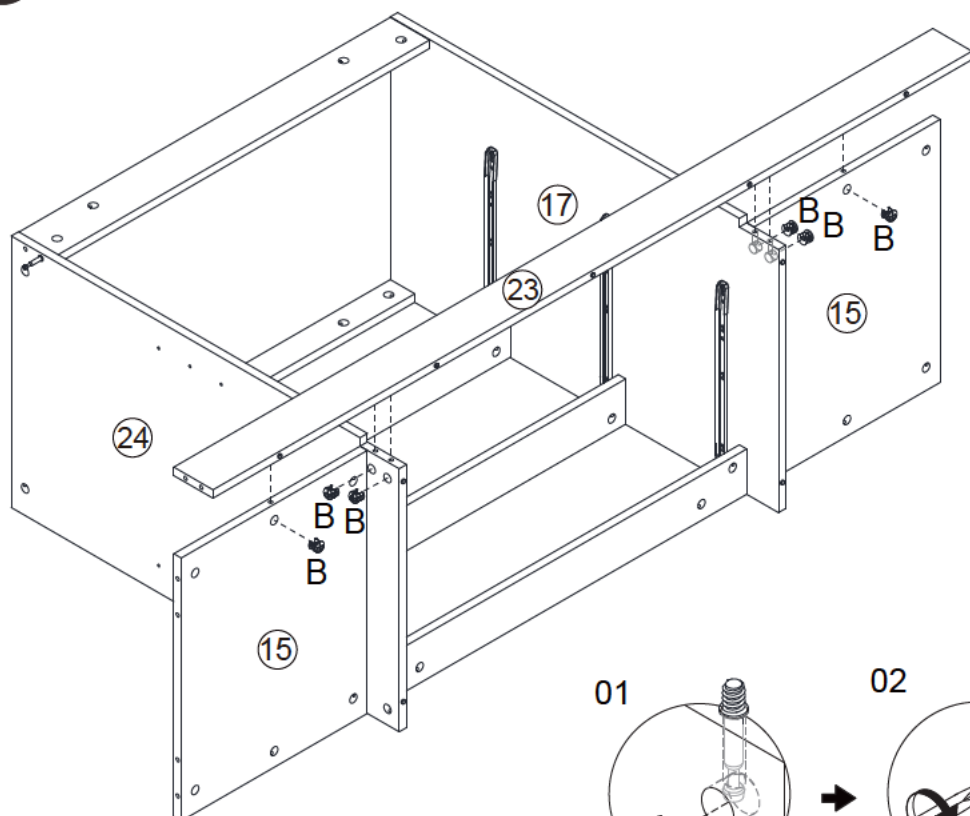

9

A  x8


D  x1

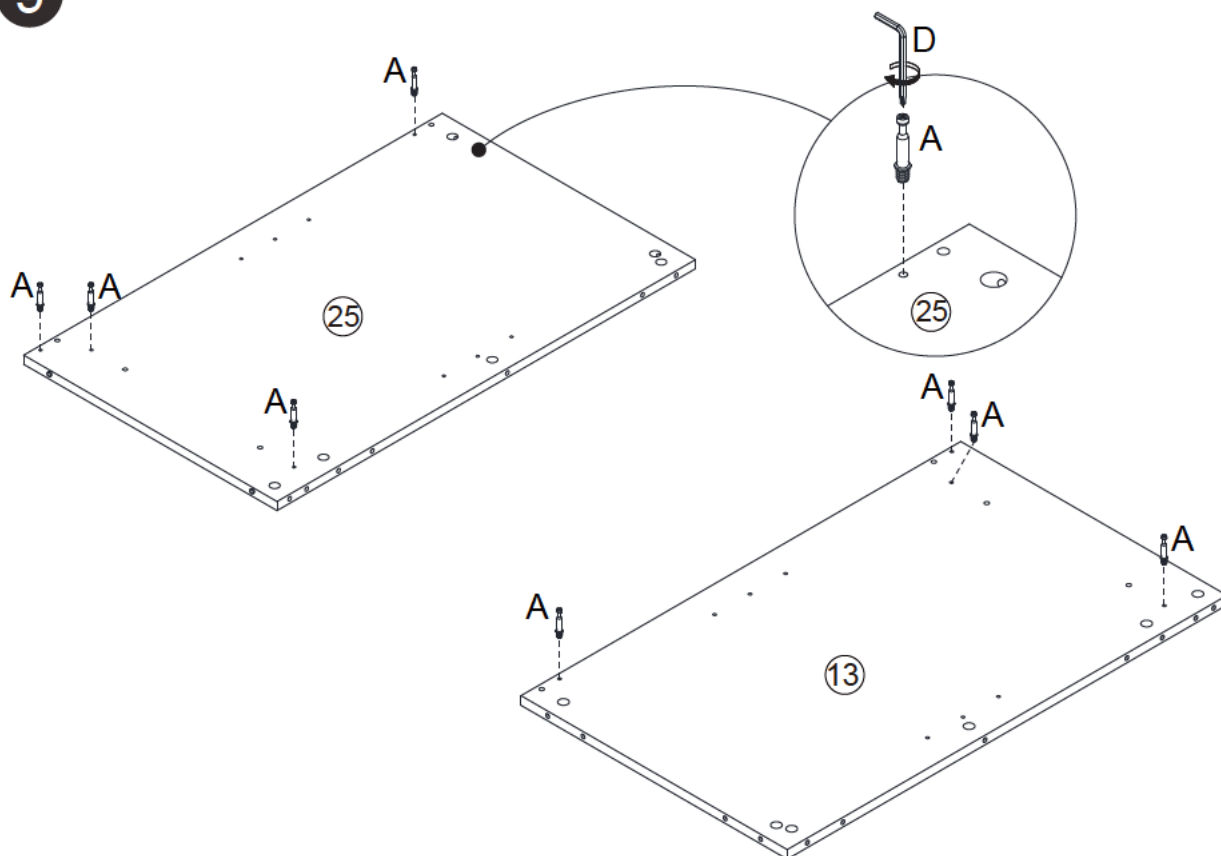

10

A  x6


D  x1

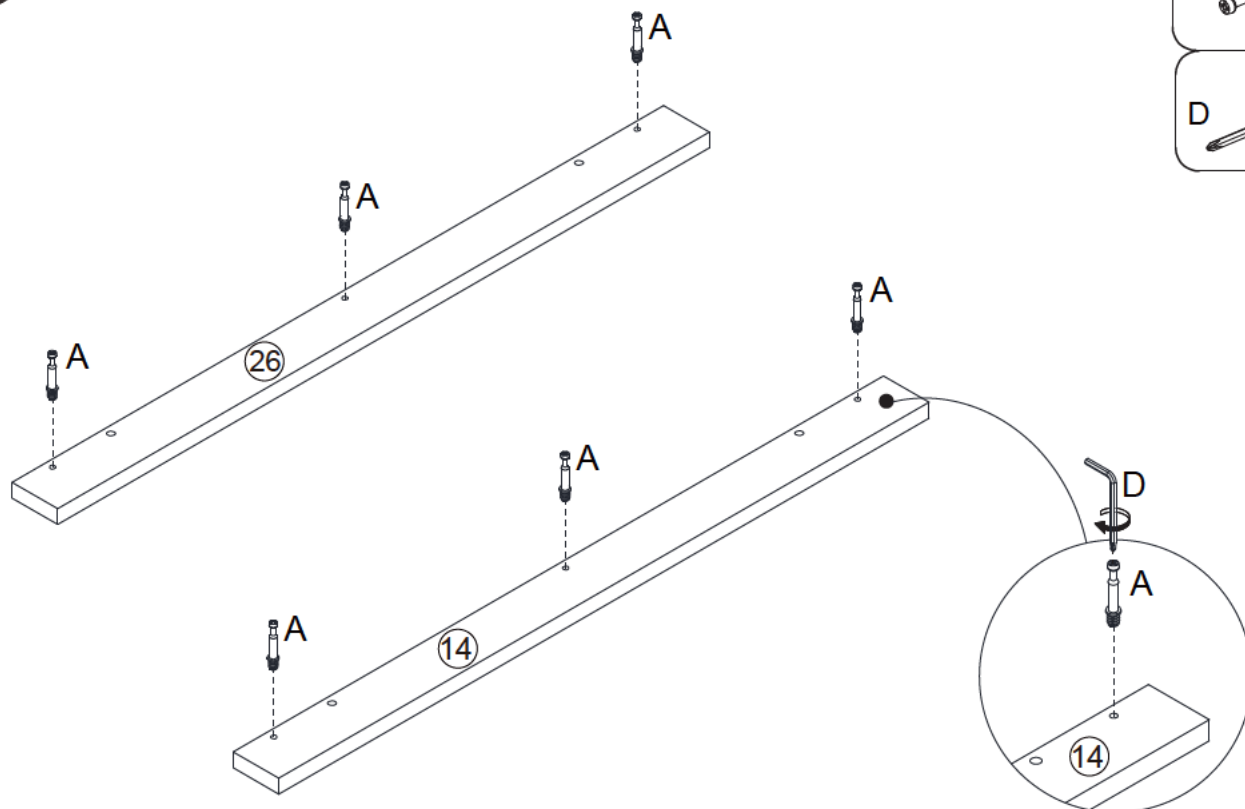


11

B  x6

C  x4

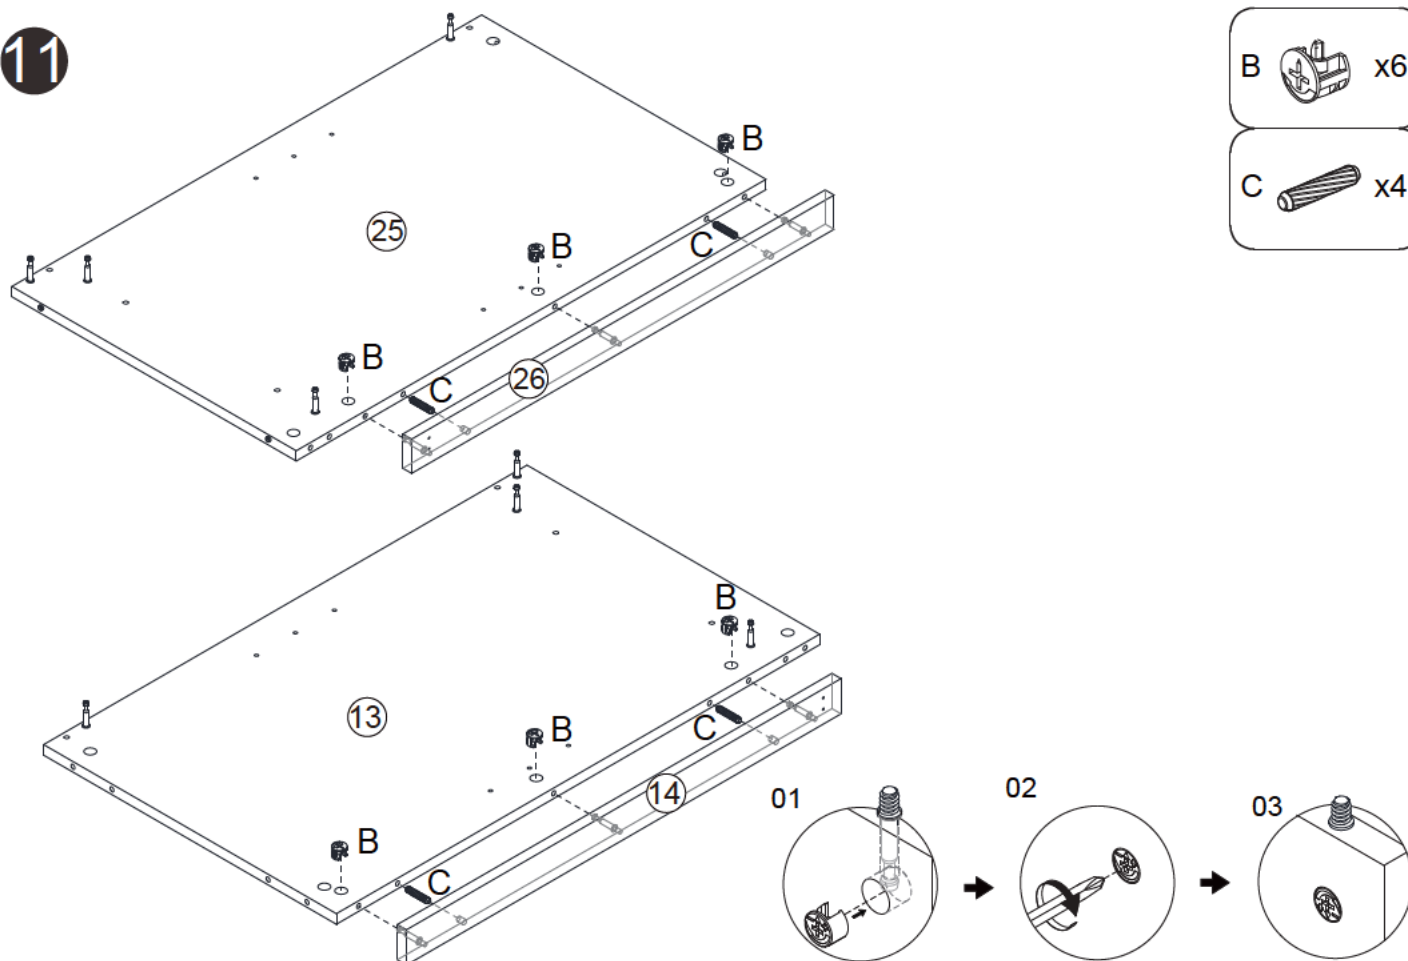


12

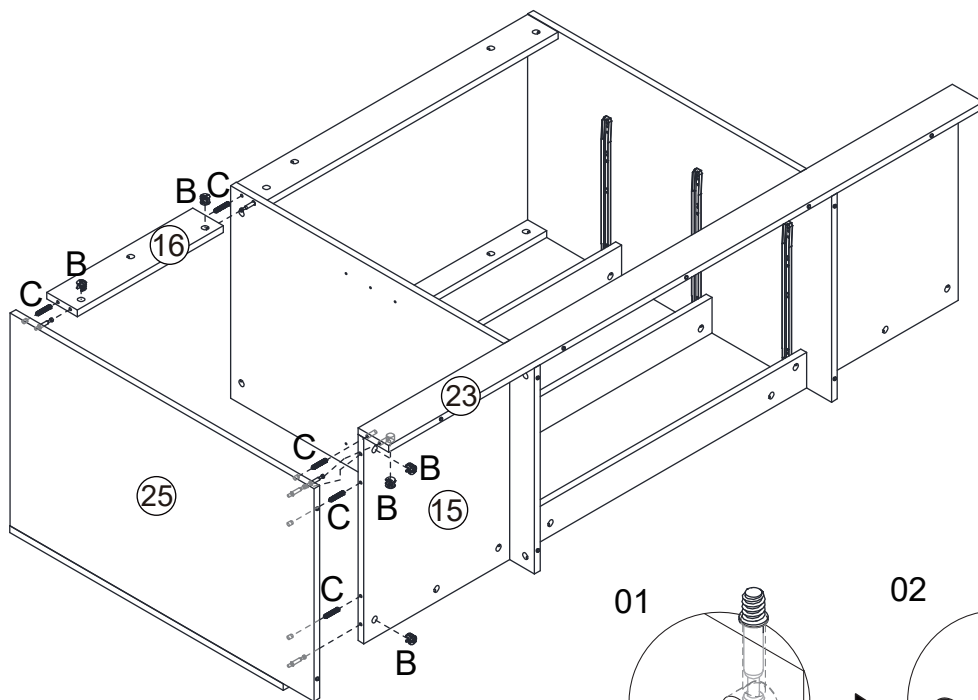


B  x5

C  x5


01

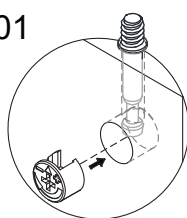


02

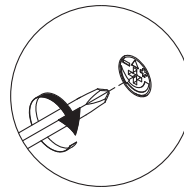

03

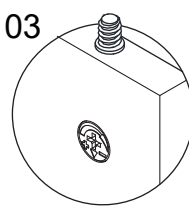


13

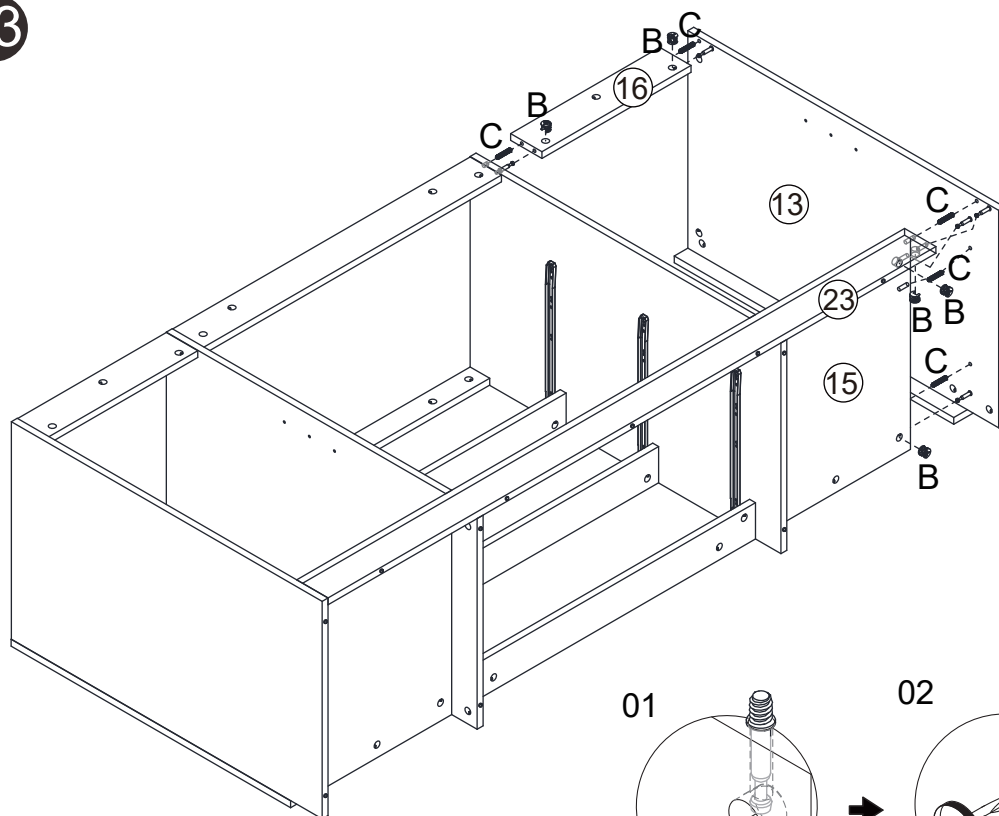


B  x5

C  x5


01

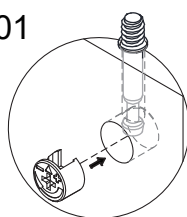




02

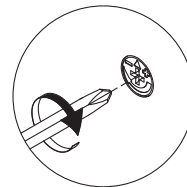



03

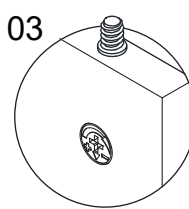


14

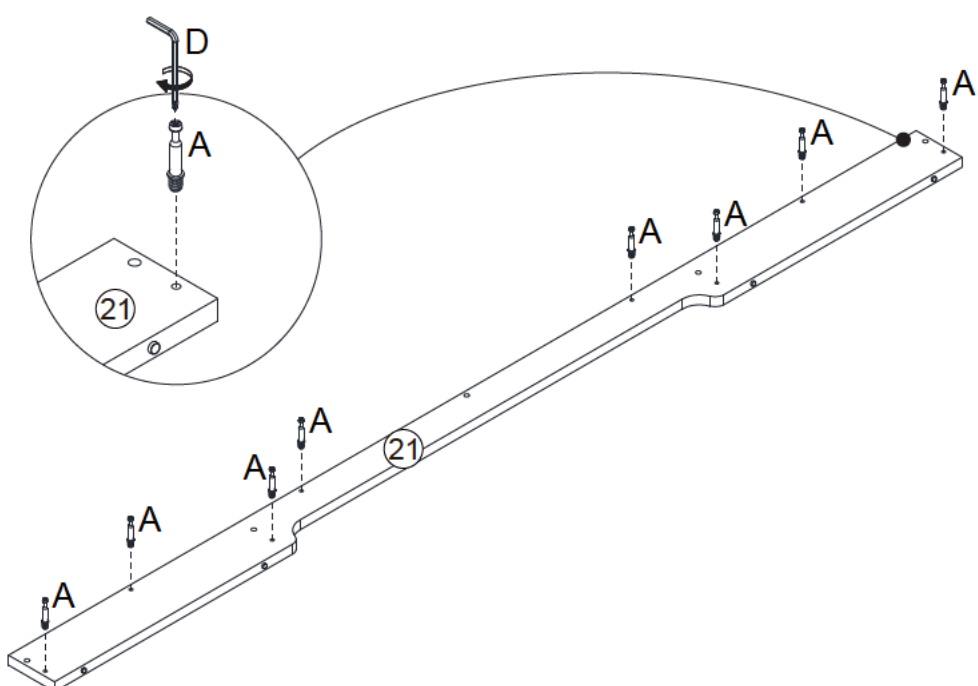

15

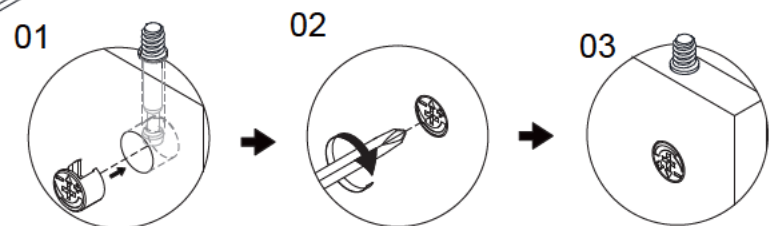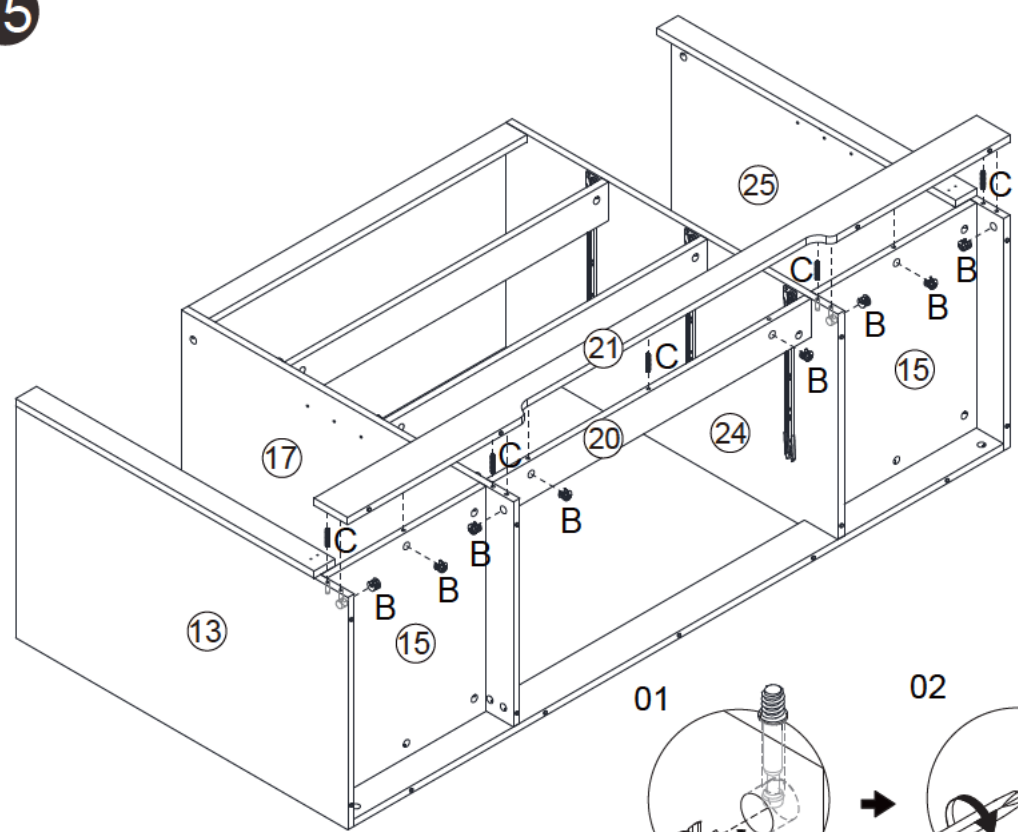

16

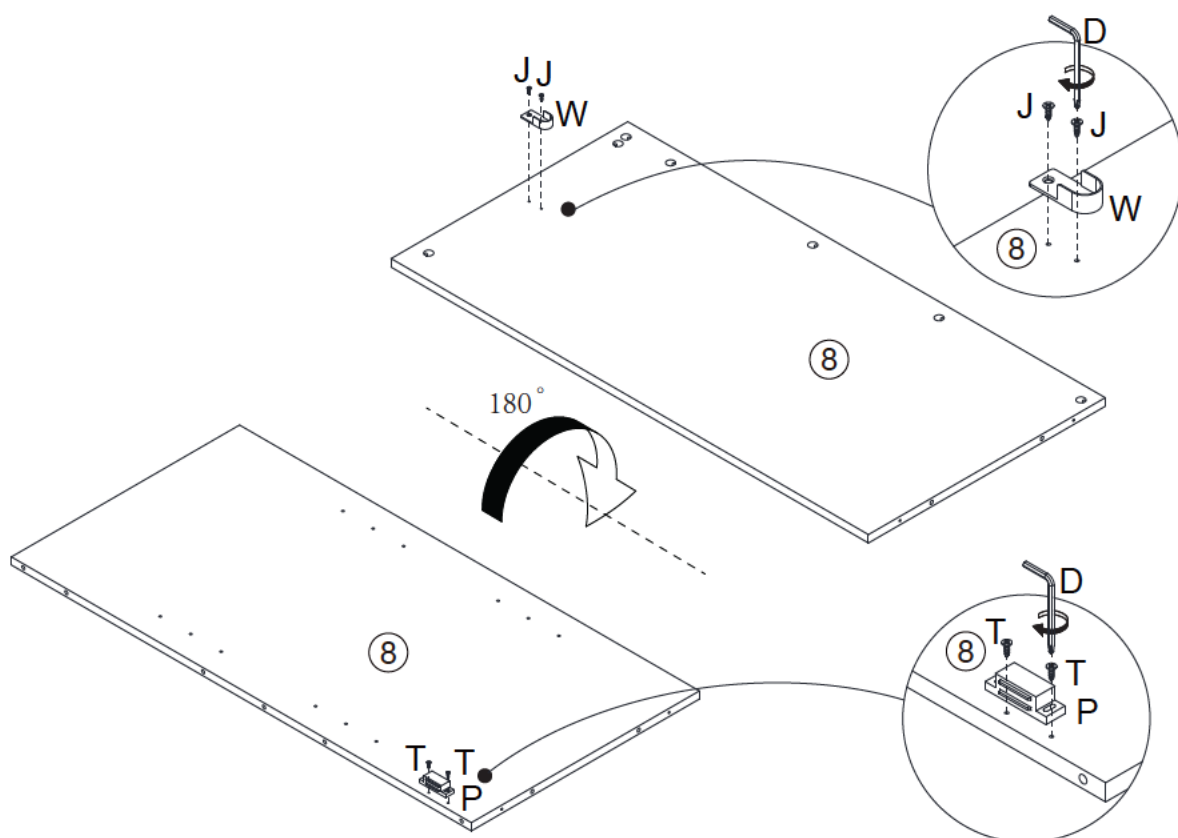

T  x2


P  x1

W  x1

J  x2

D  x1

17

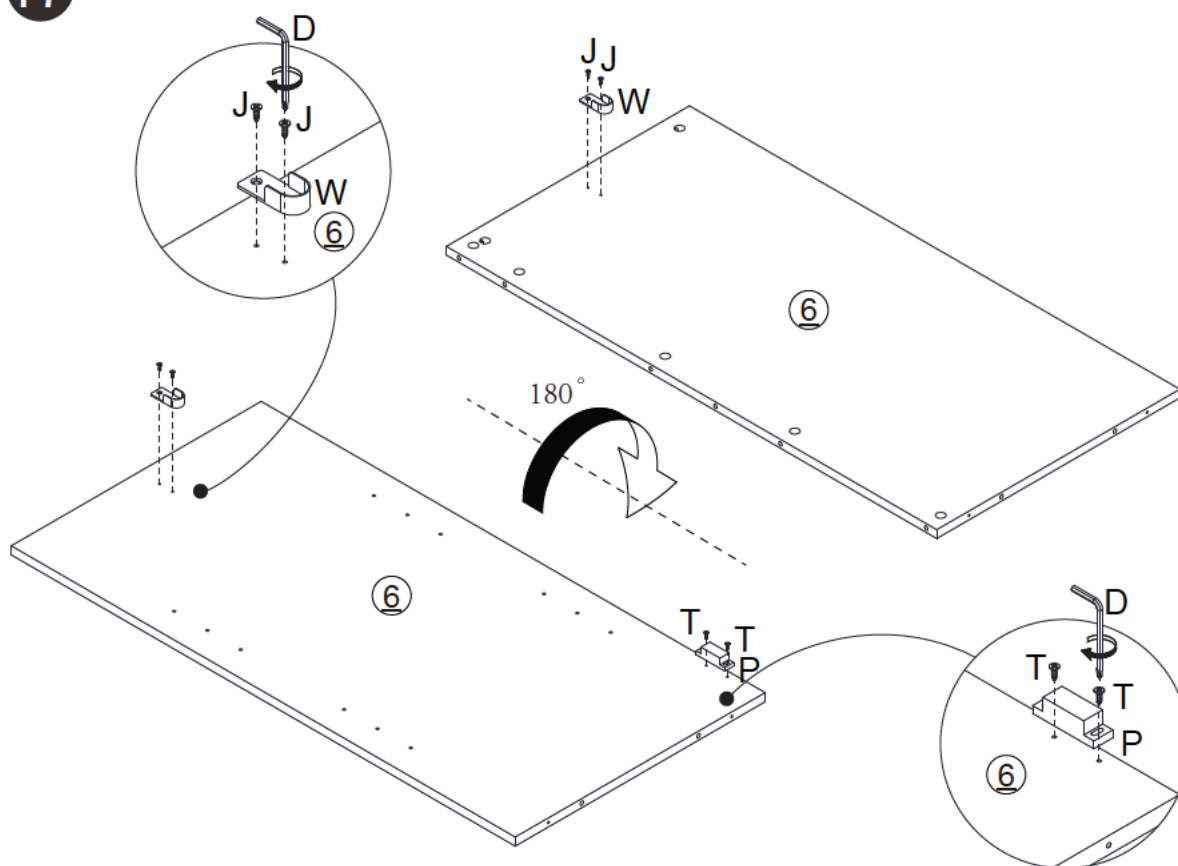

T  x2



P  x1

W  x2


J  x4

D  x1


18

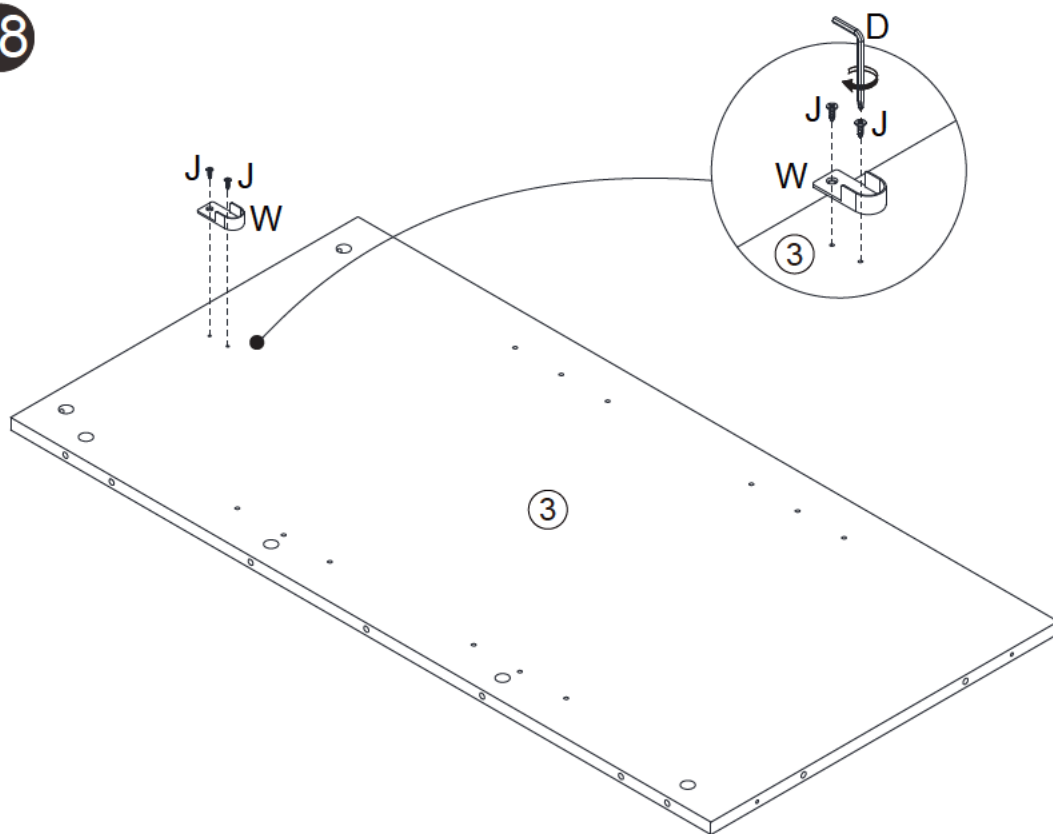

19

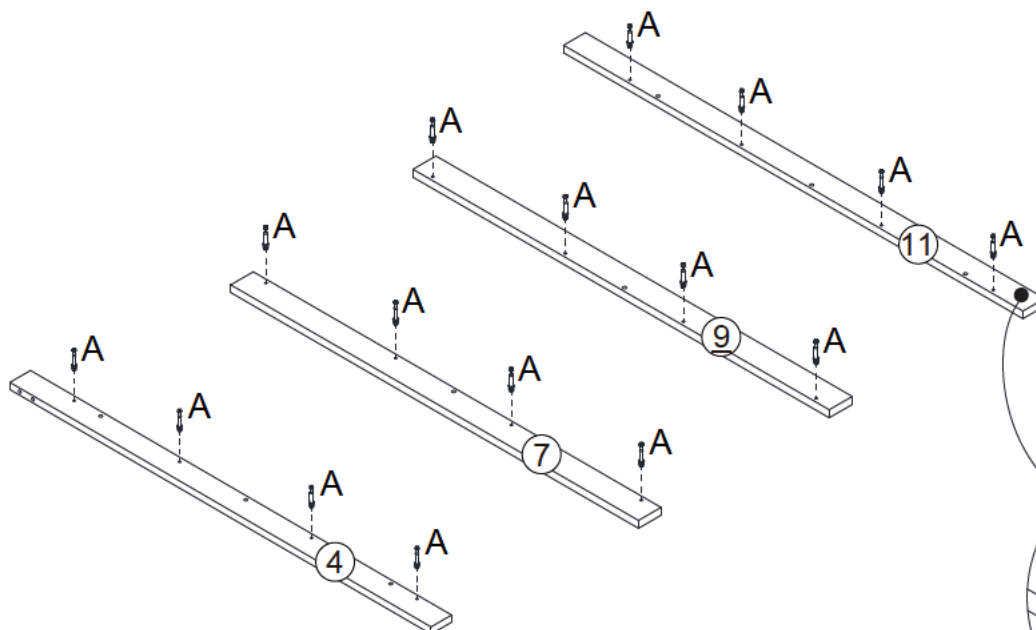


20

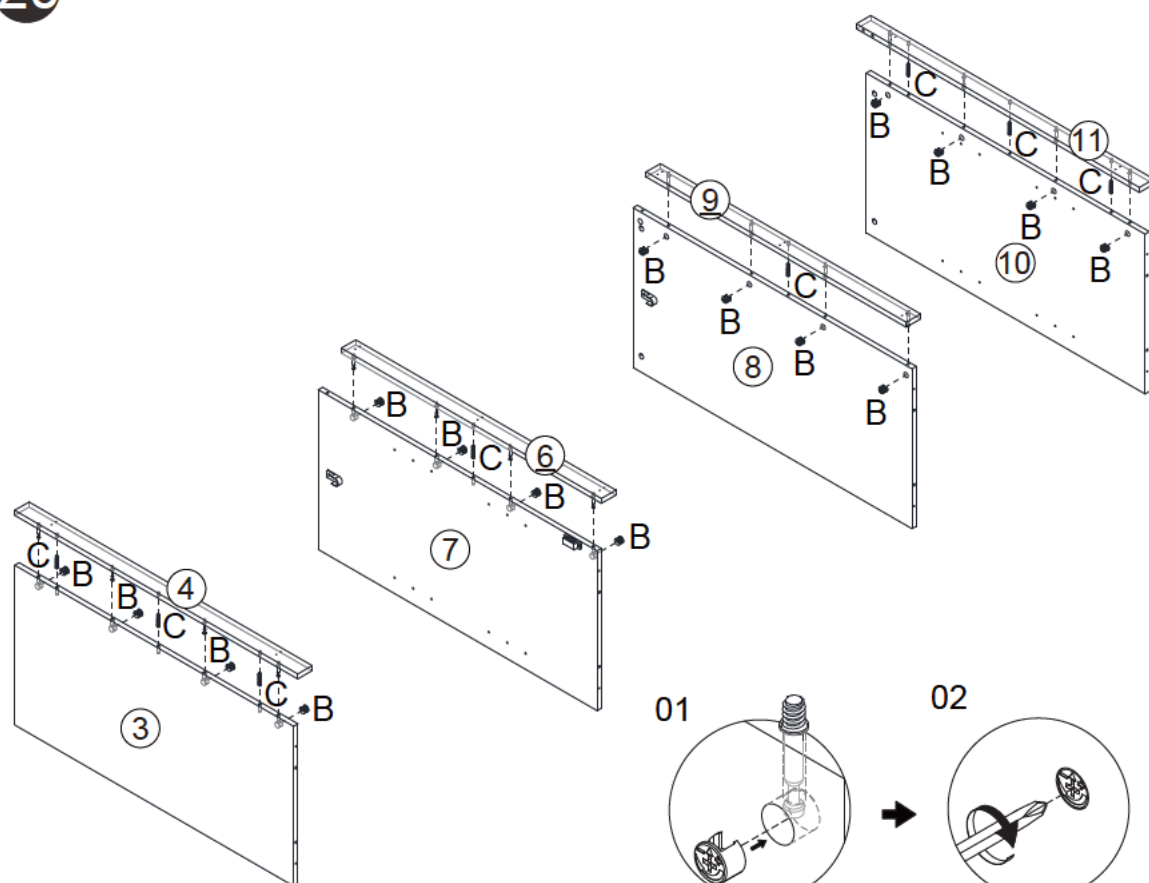

B x16

C x8

21

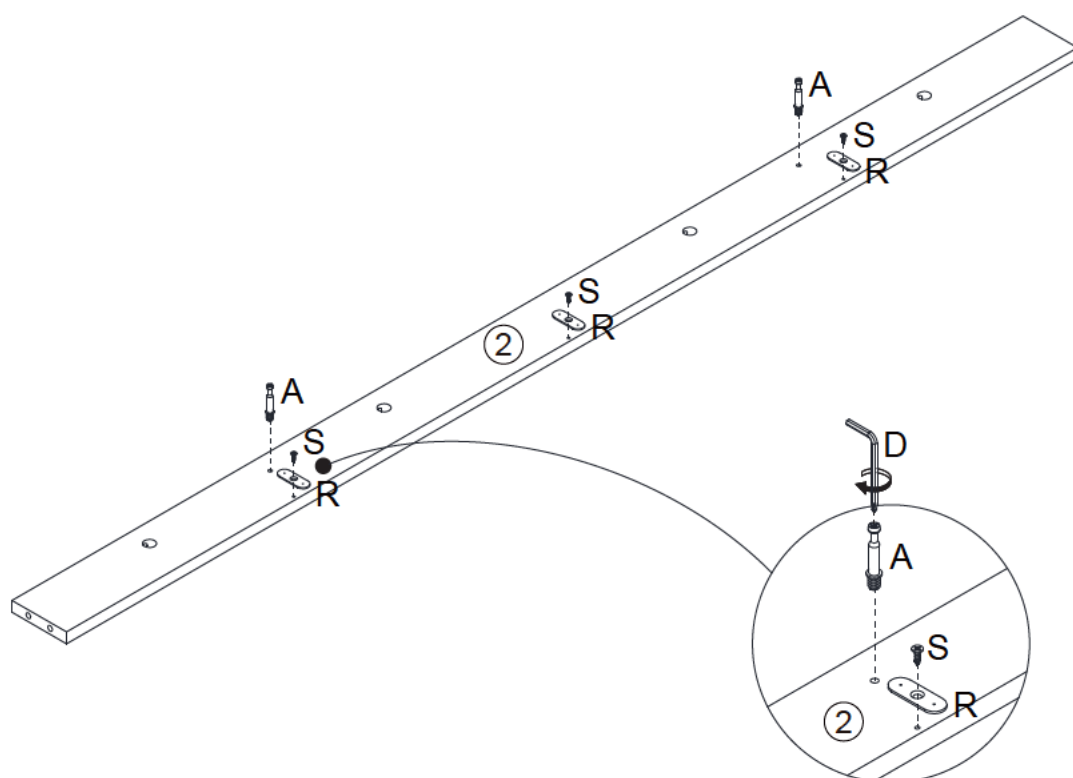

R x3


S x3

A x2


D x1

22


B  x2

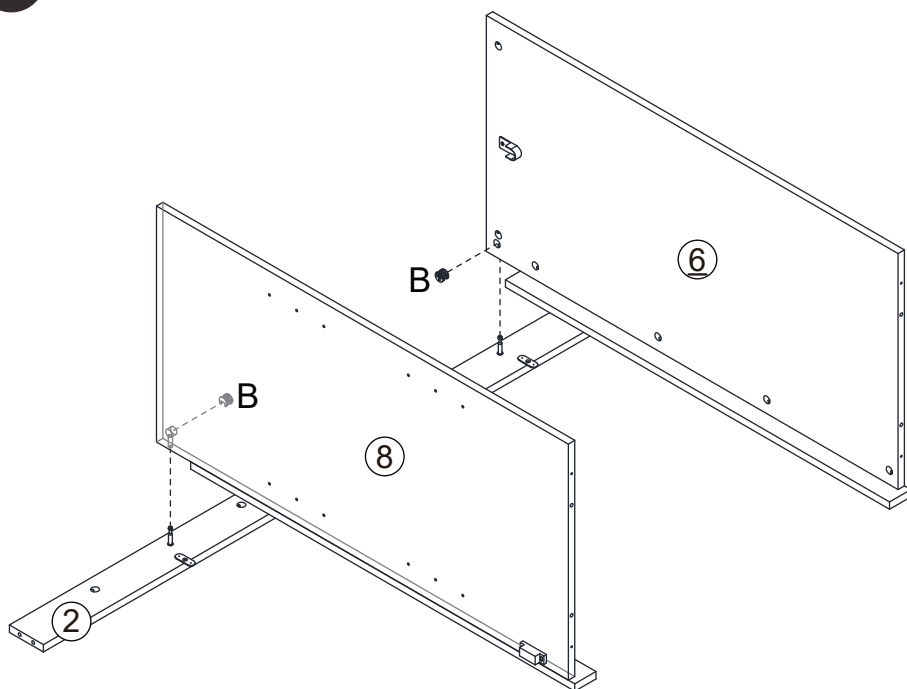


01

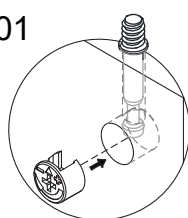

02

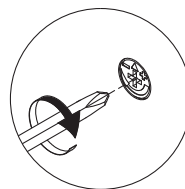


03


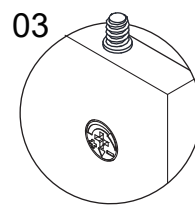


23



C  x4

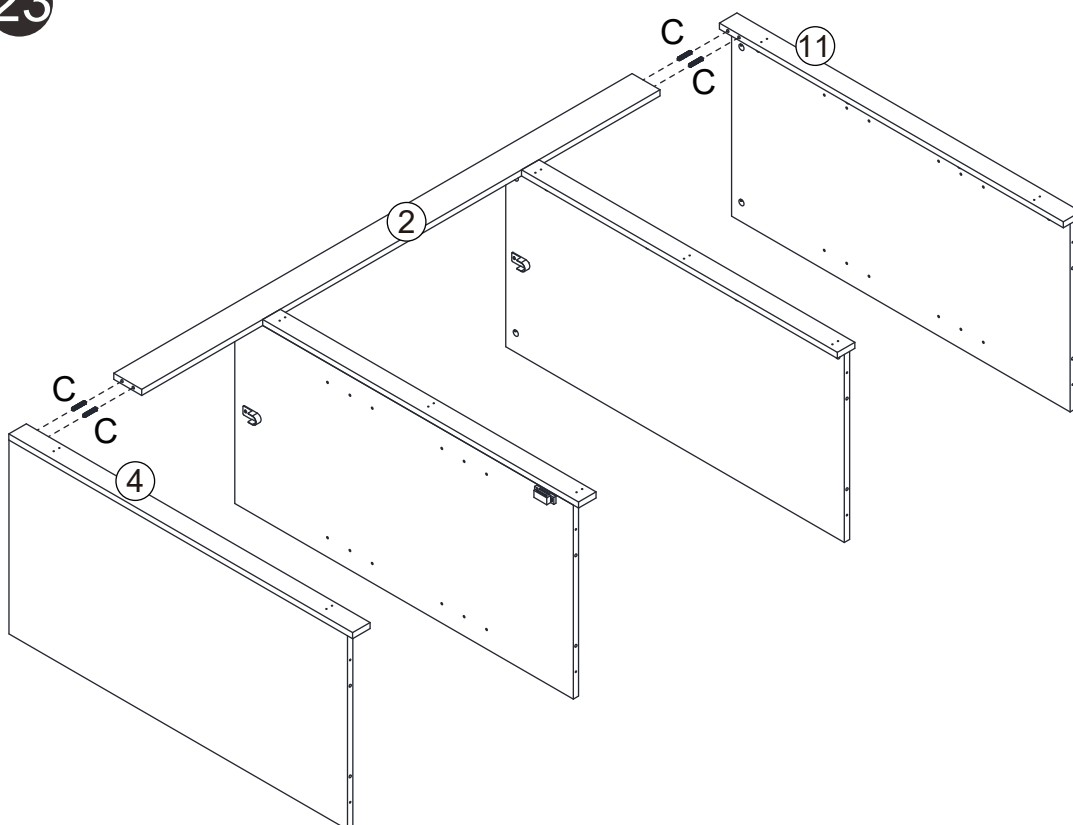


24

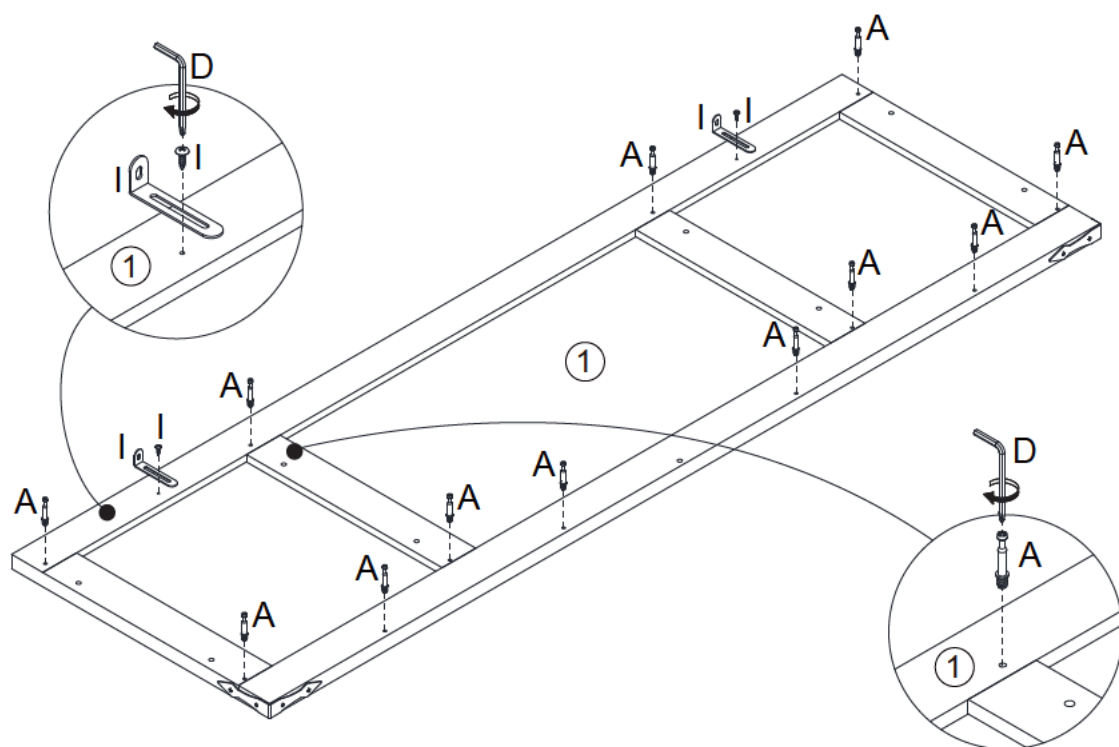

25

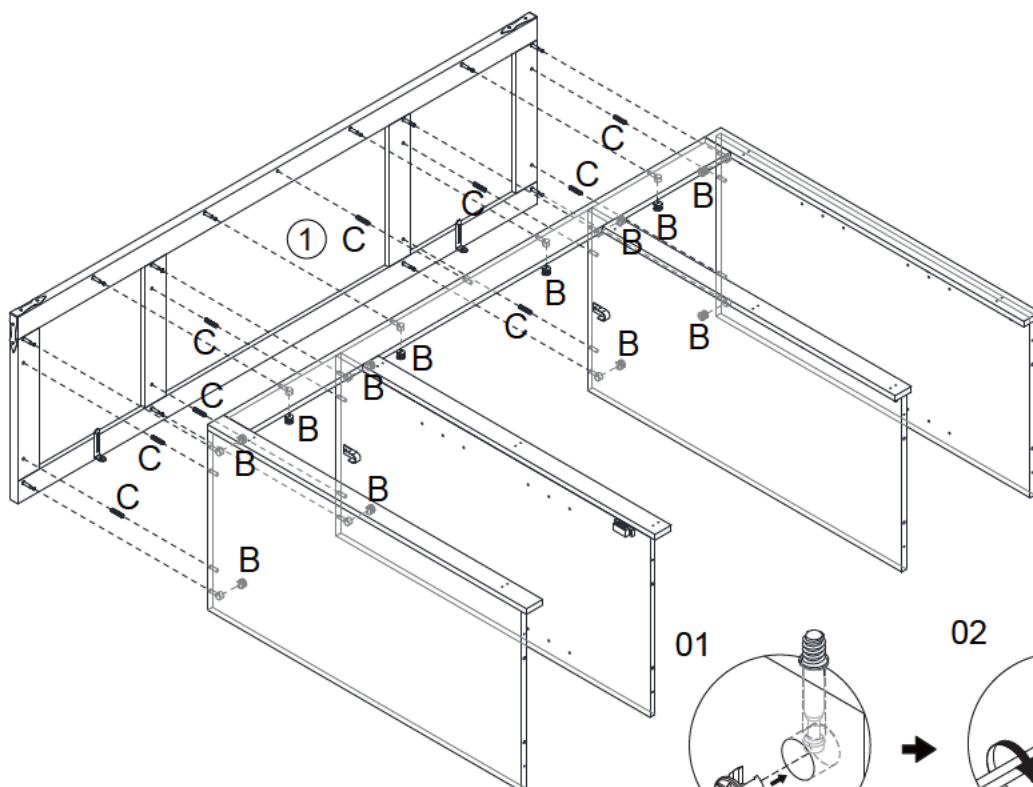


01

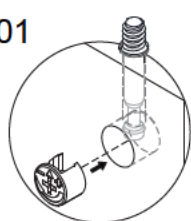


02




03

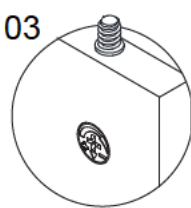


26

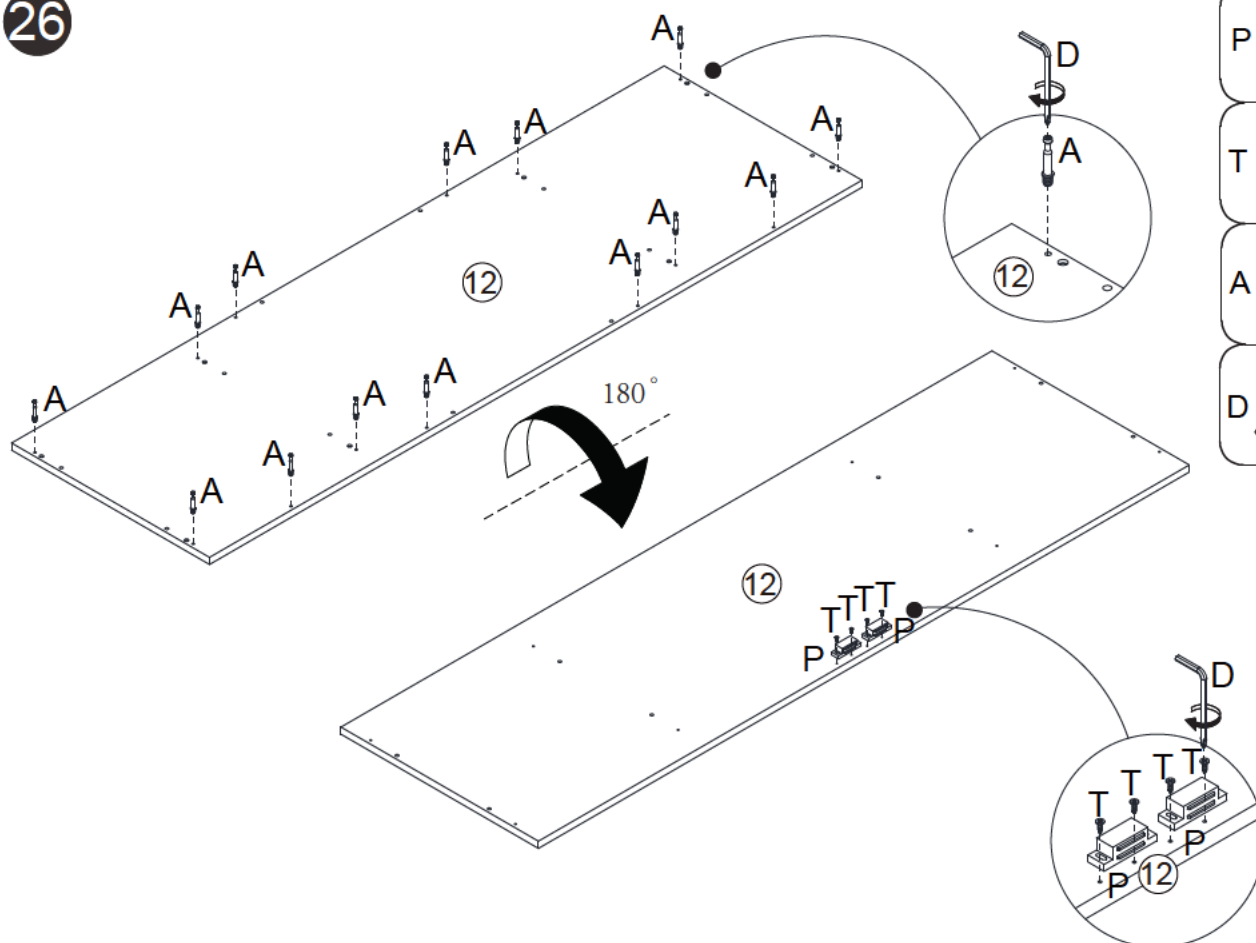

27

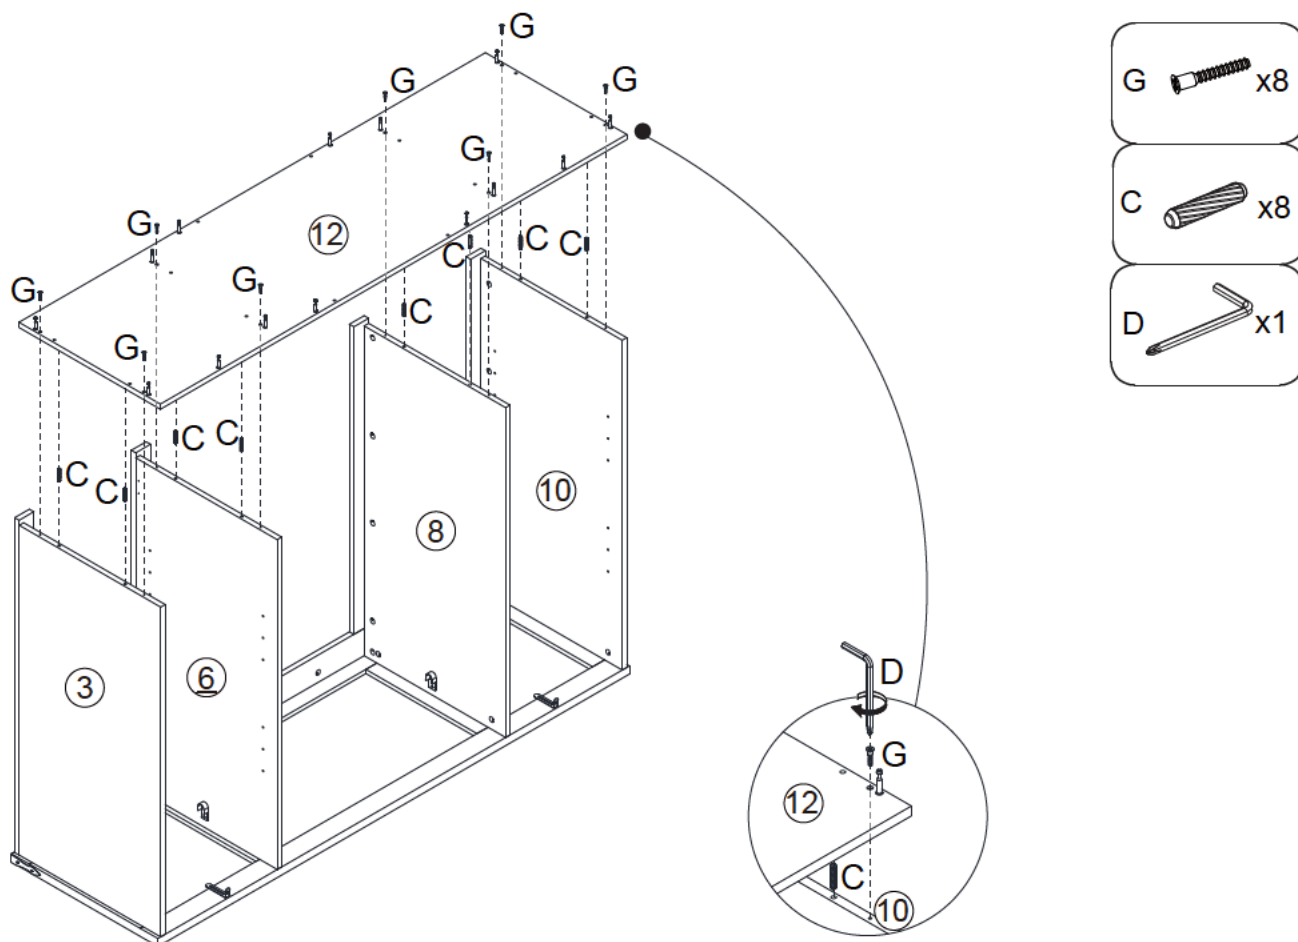


28

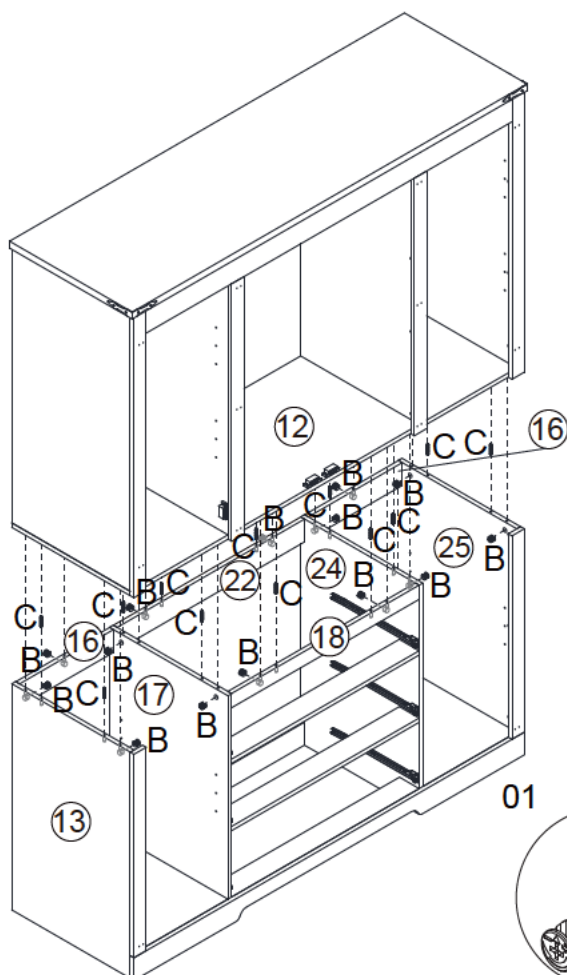

B  x14

C  x12


01

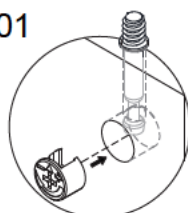


02




03

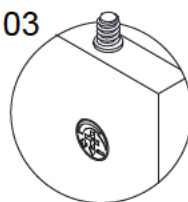

29

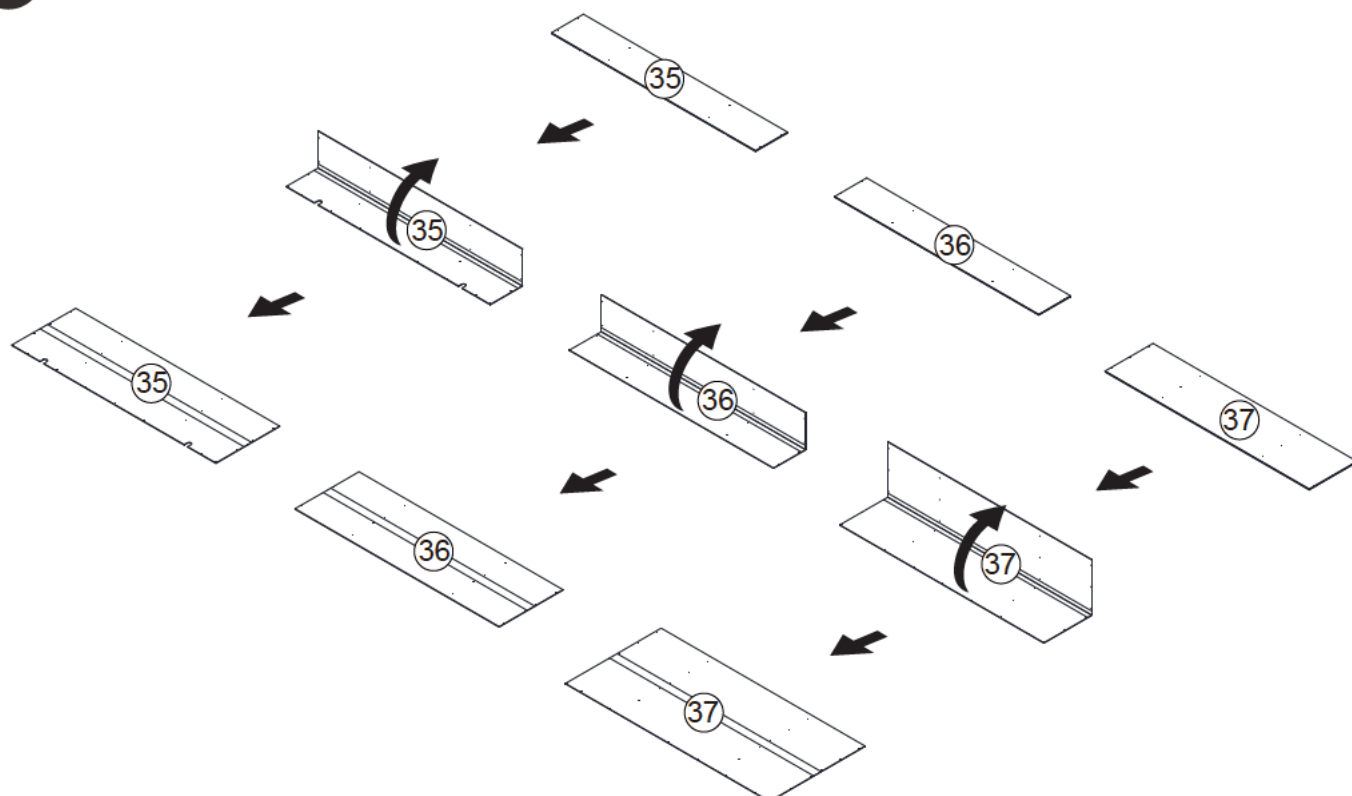


30

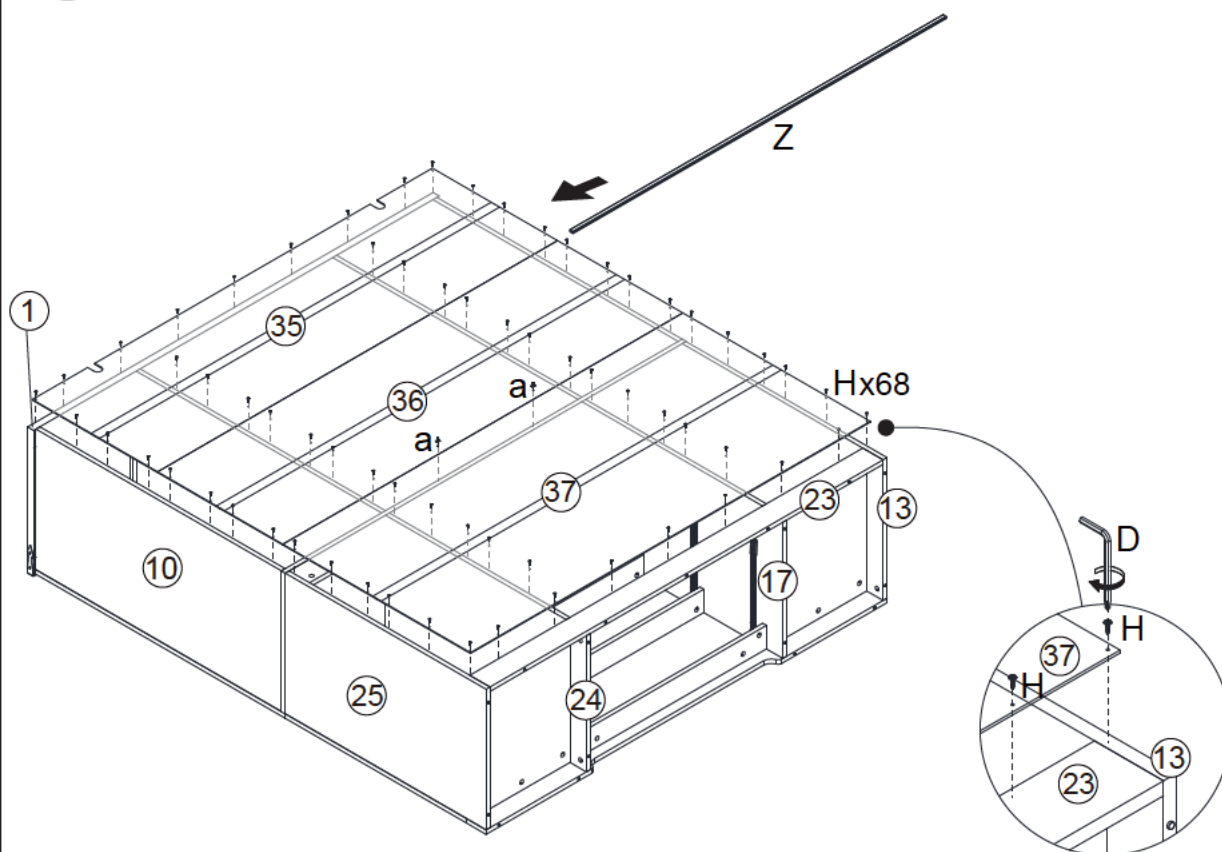


- H  x68
- Z  x1
- D  x1
- a  x2

31

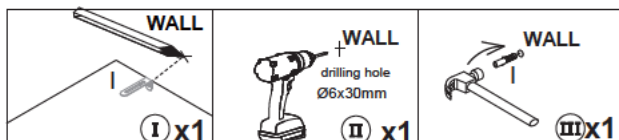


- I  x2


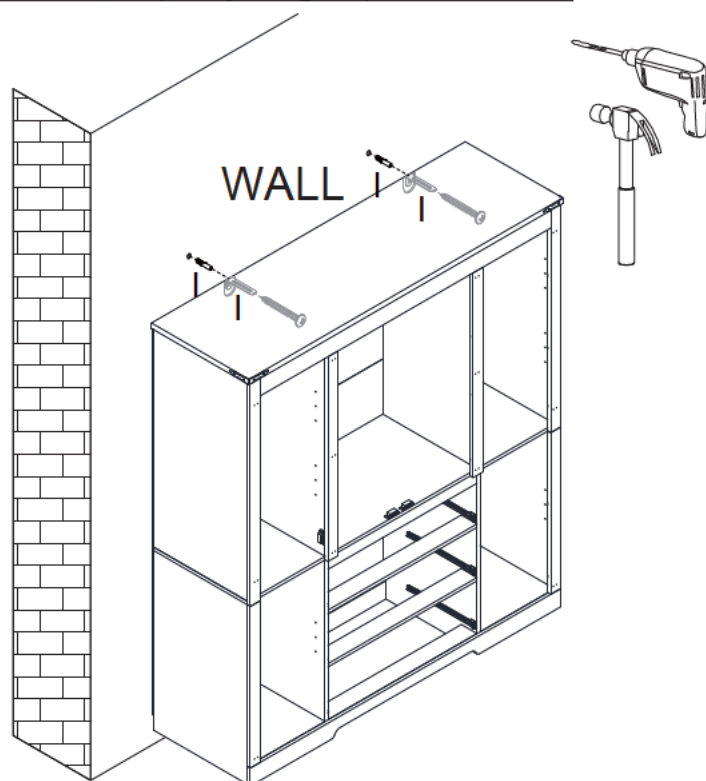


32

E  x24

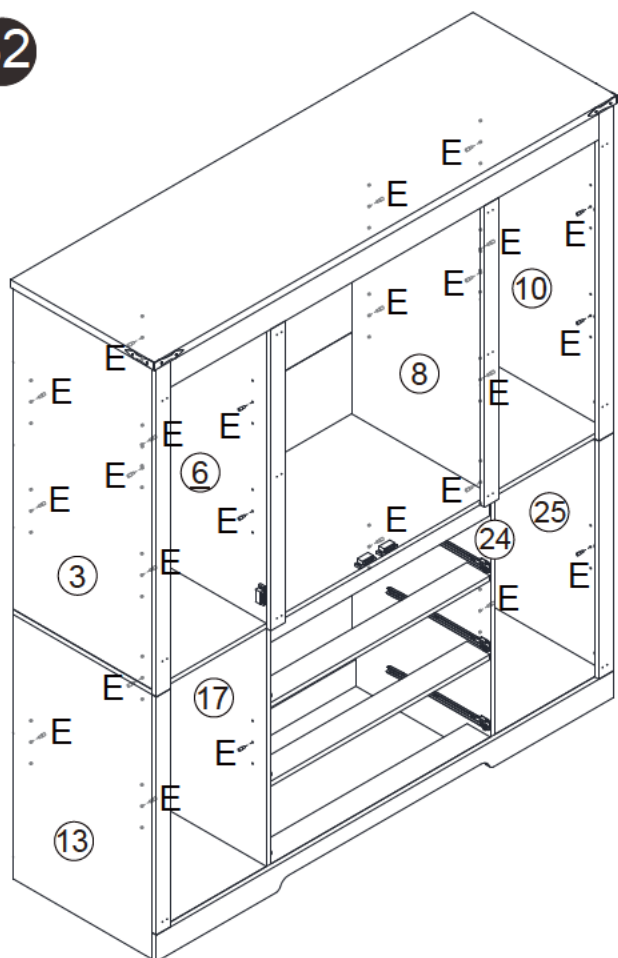


33

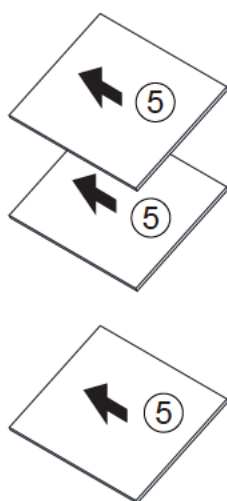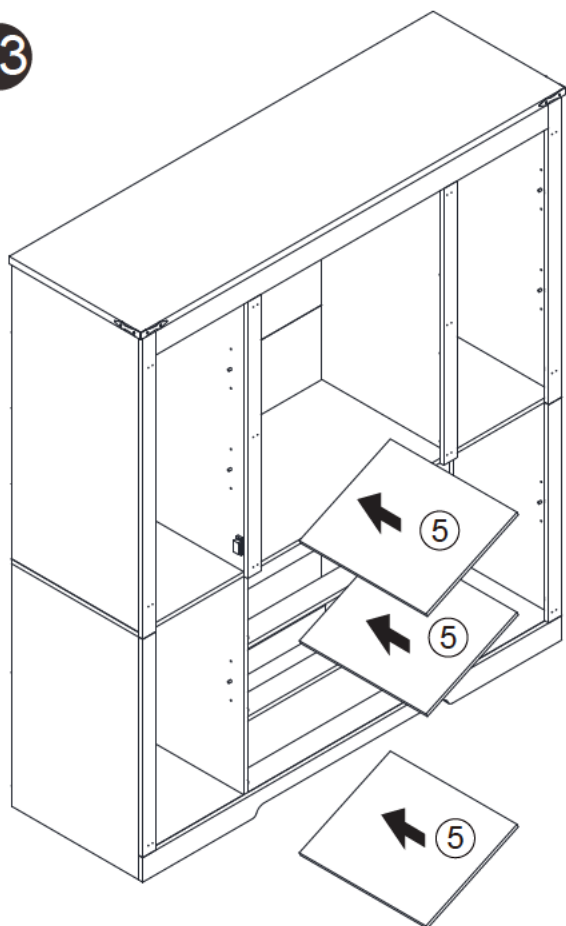

34

U  x1


V  x1

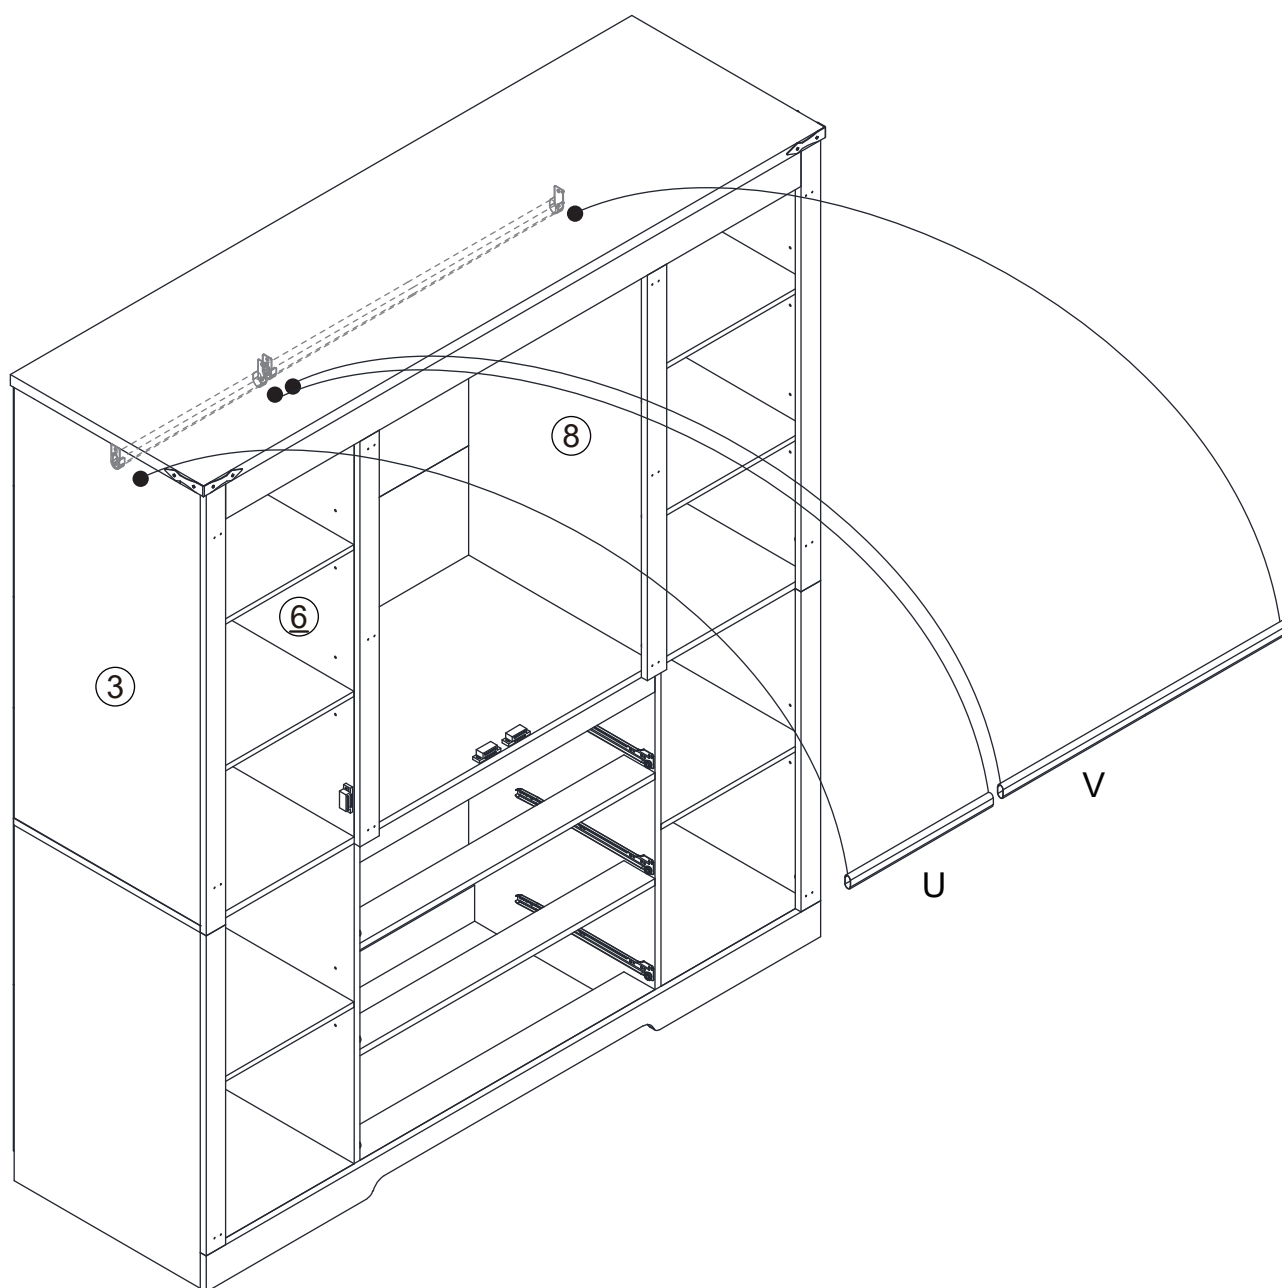


35

F  x15


C  x3

D  x1

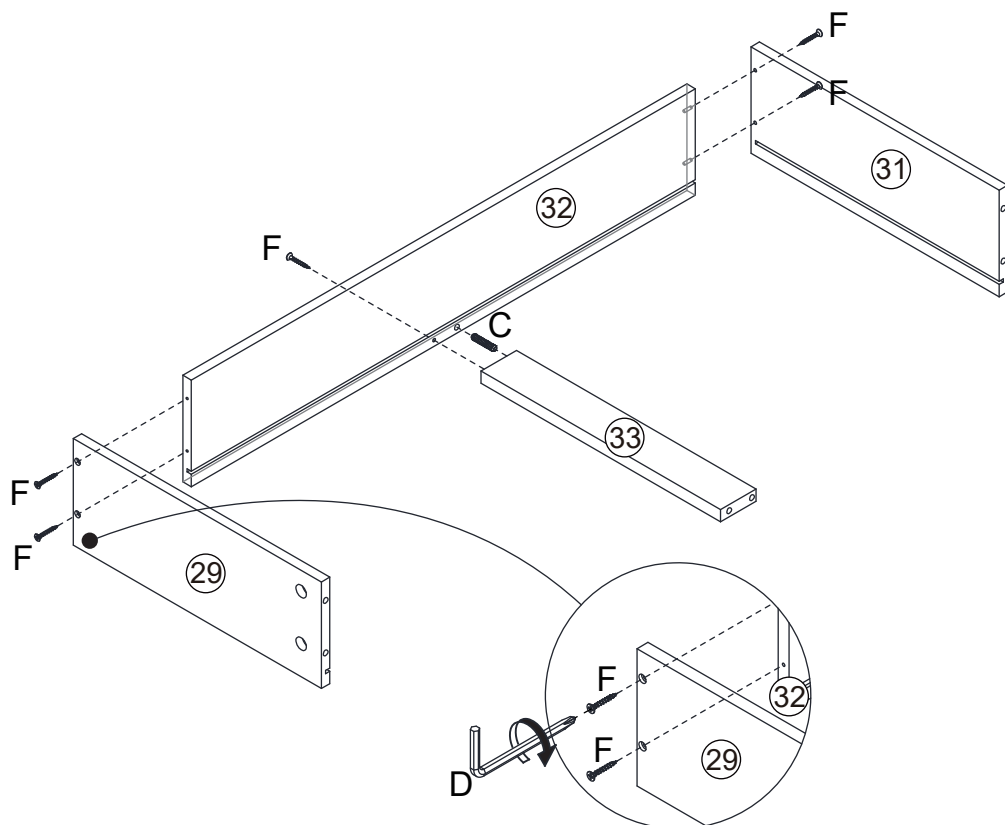



x3

36

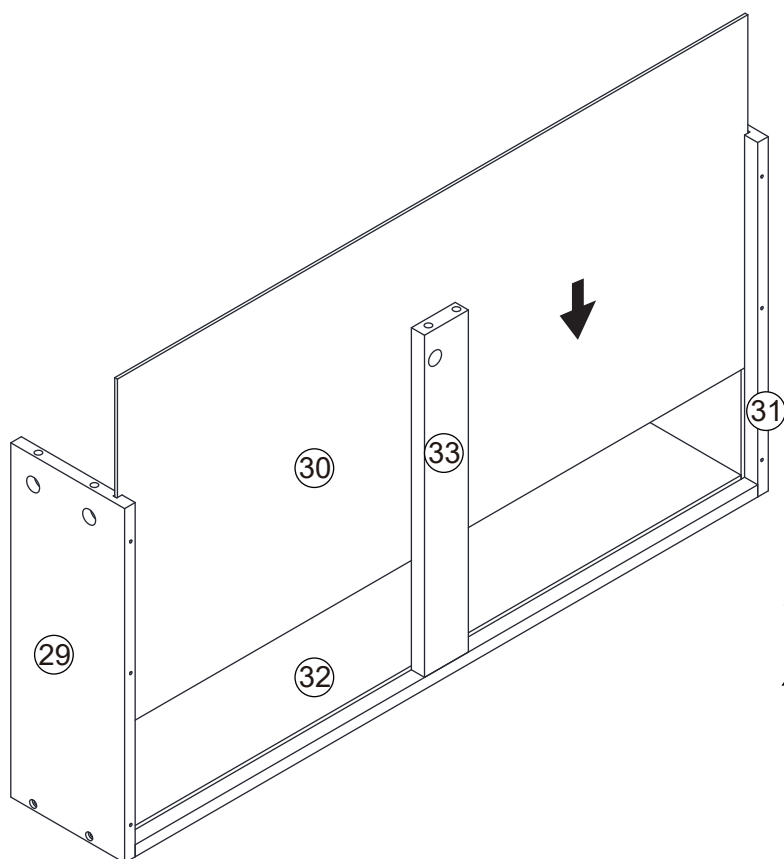


x3


37

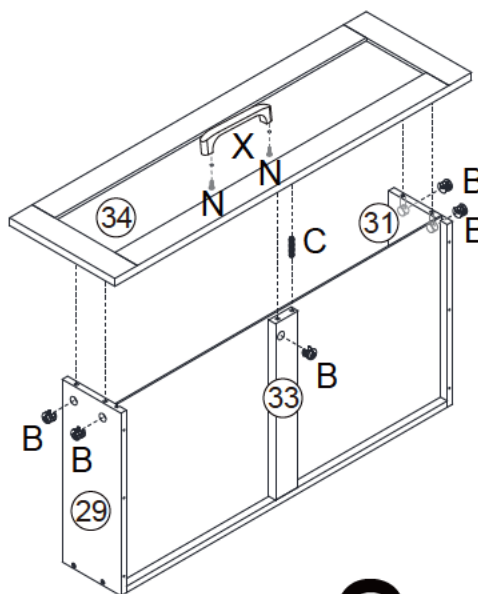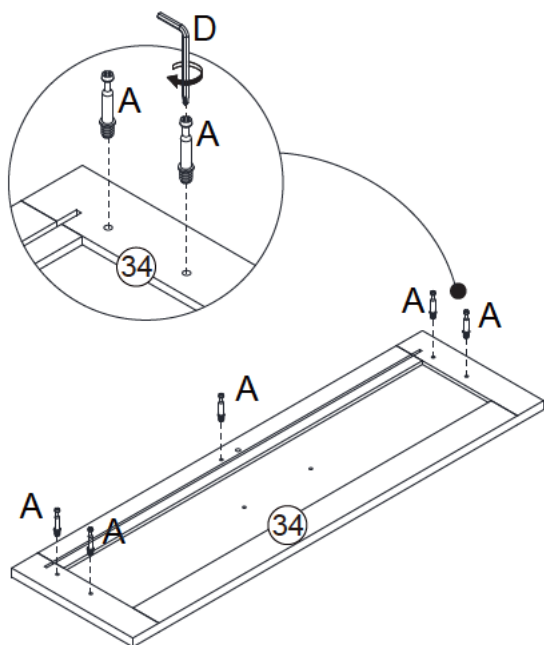


x3

- X  x3
- N  x6
- B  x15
- C  x3
- A  x15
- D  x1


01

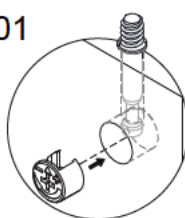



02

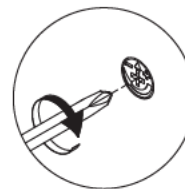


03

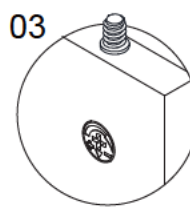

38

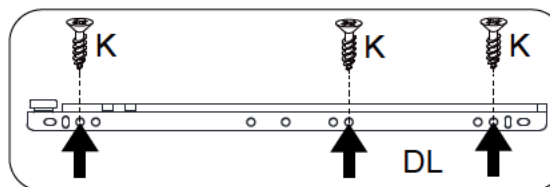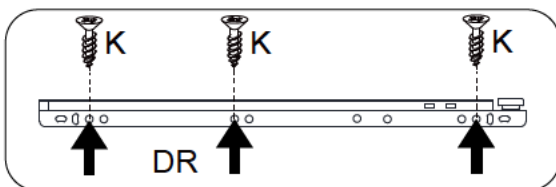


- K  x18
- DR  x3
- DL  x3

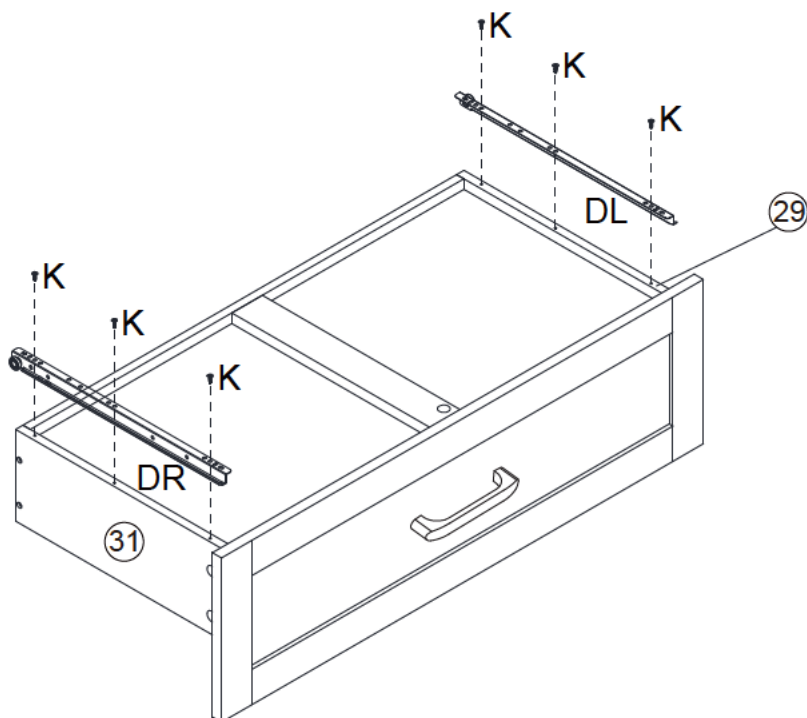


x3

39

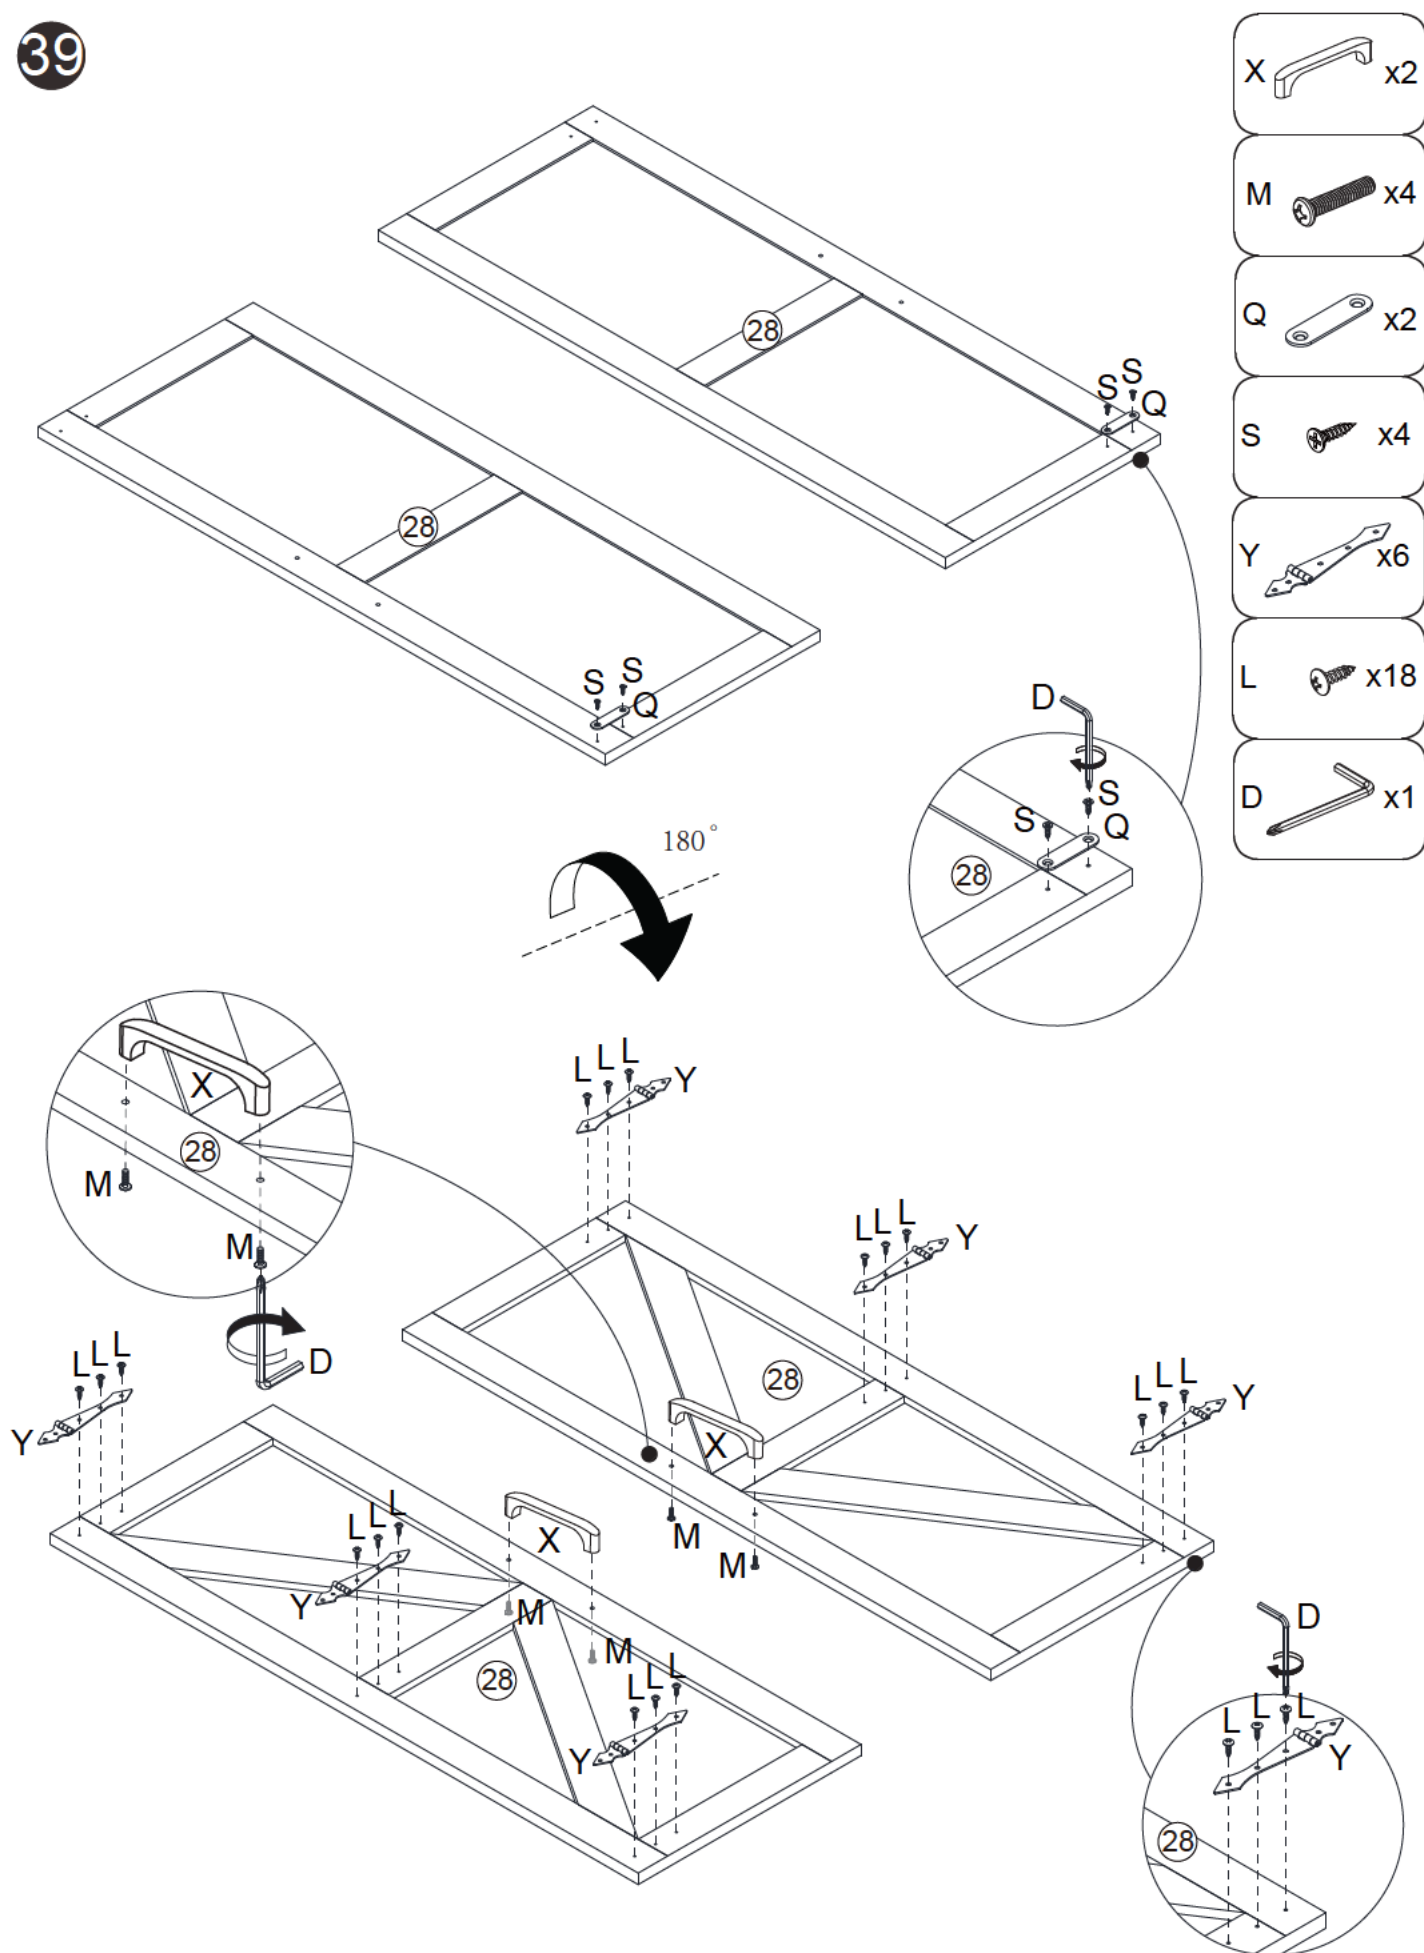

40

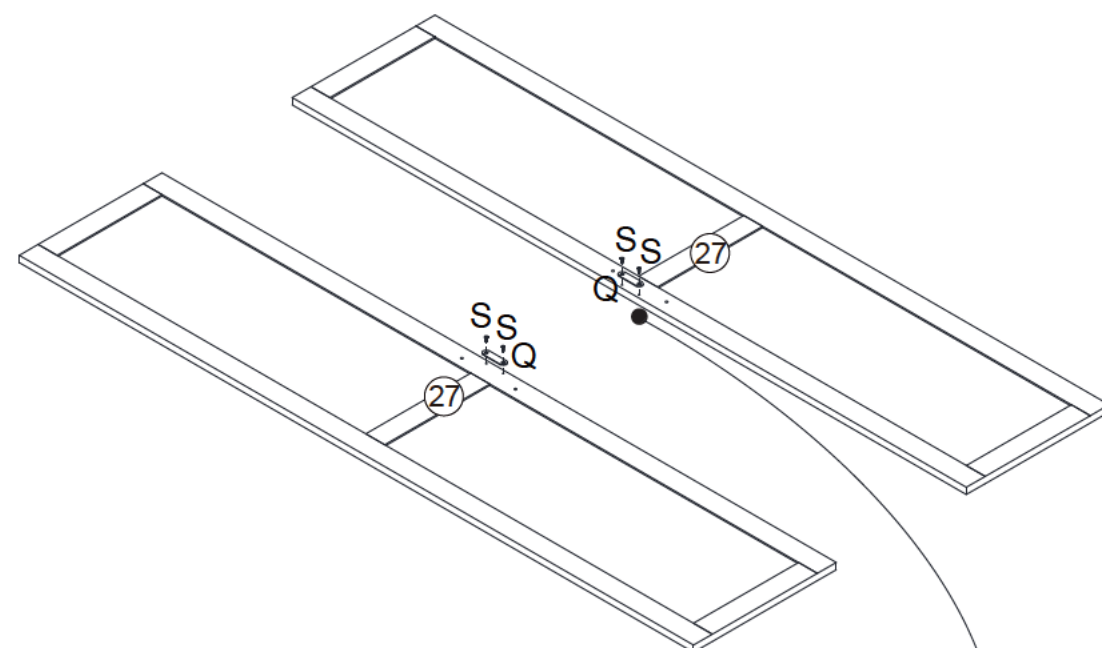

X  x2

M  x4






Q  x2

S  x4


Y  x6

L  x18

D  x1

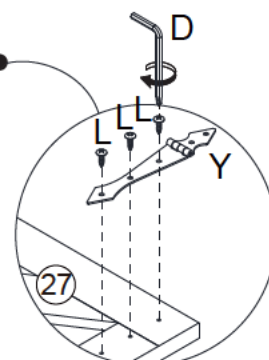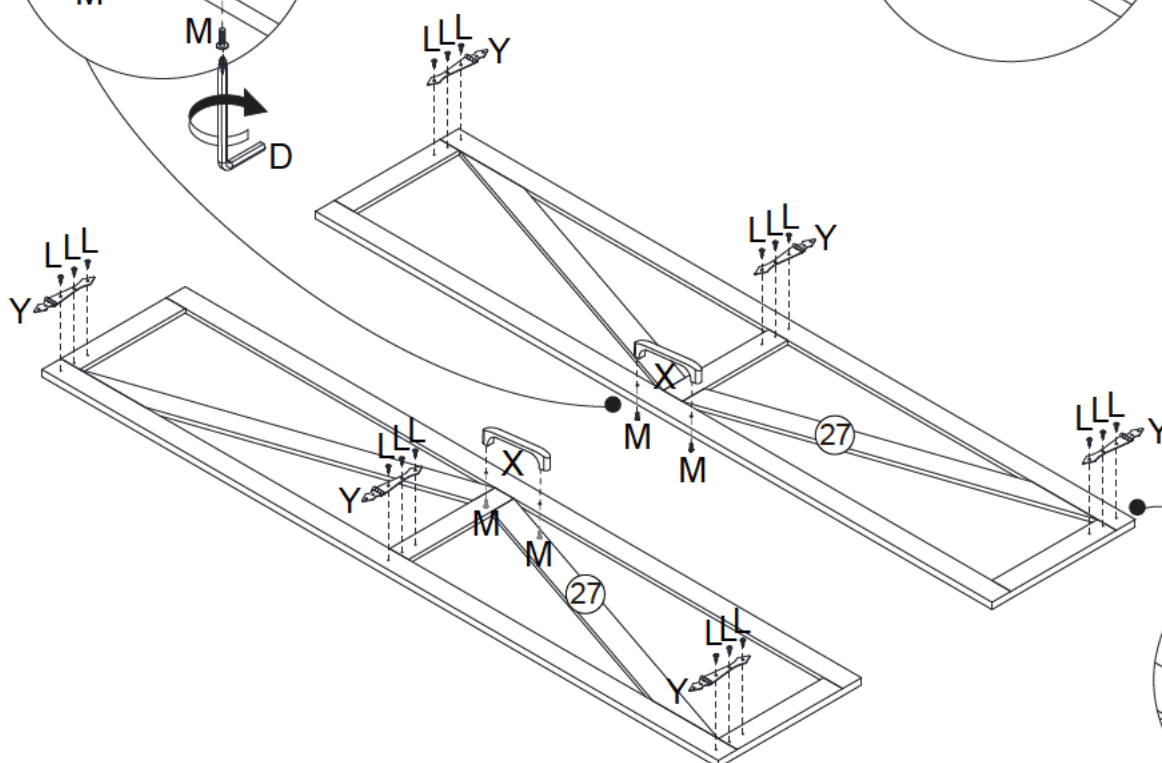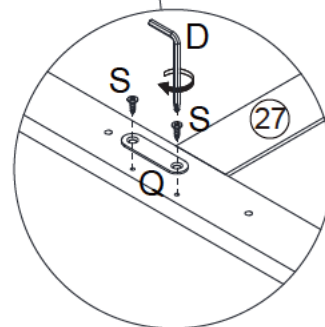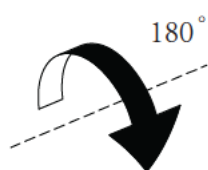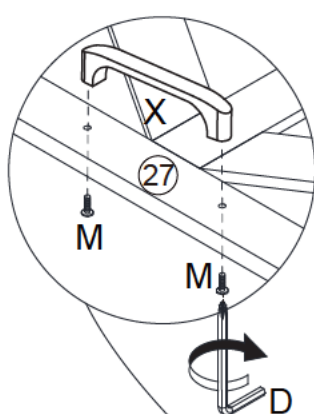


41

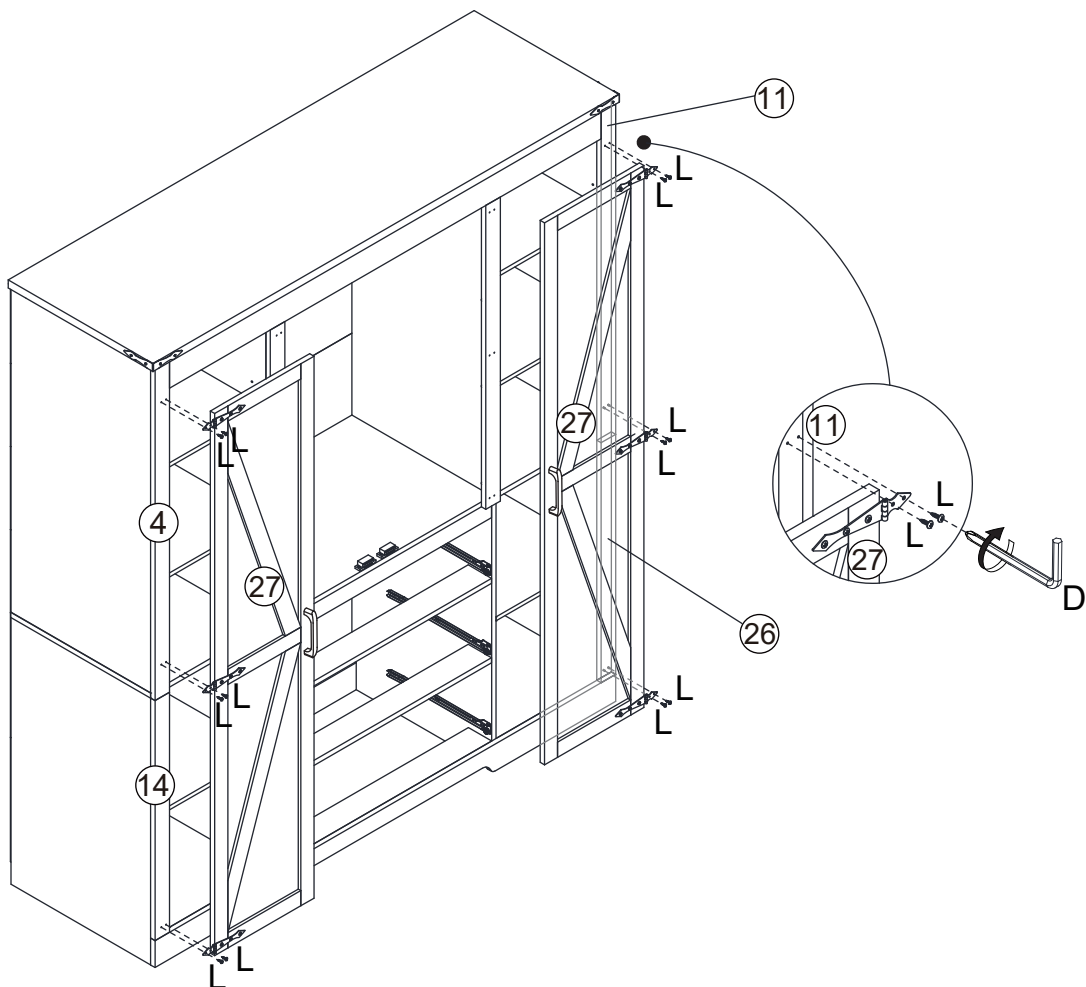

D x1

L x12

42

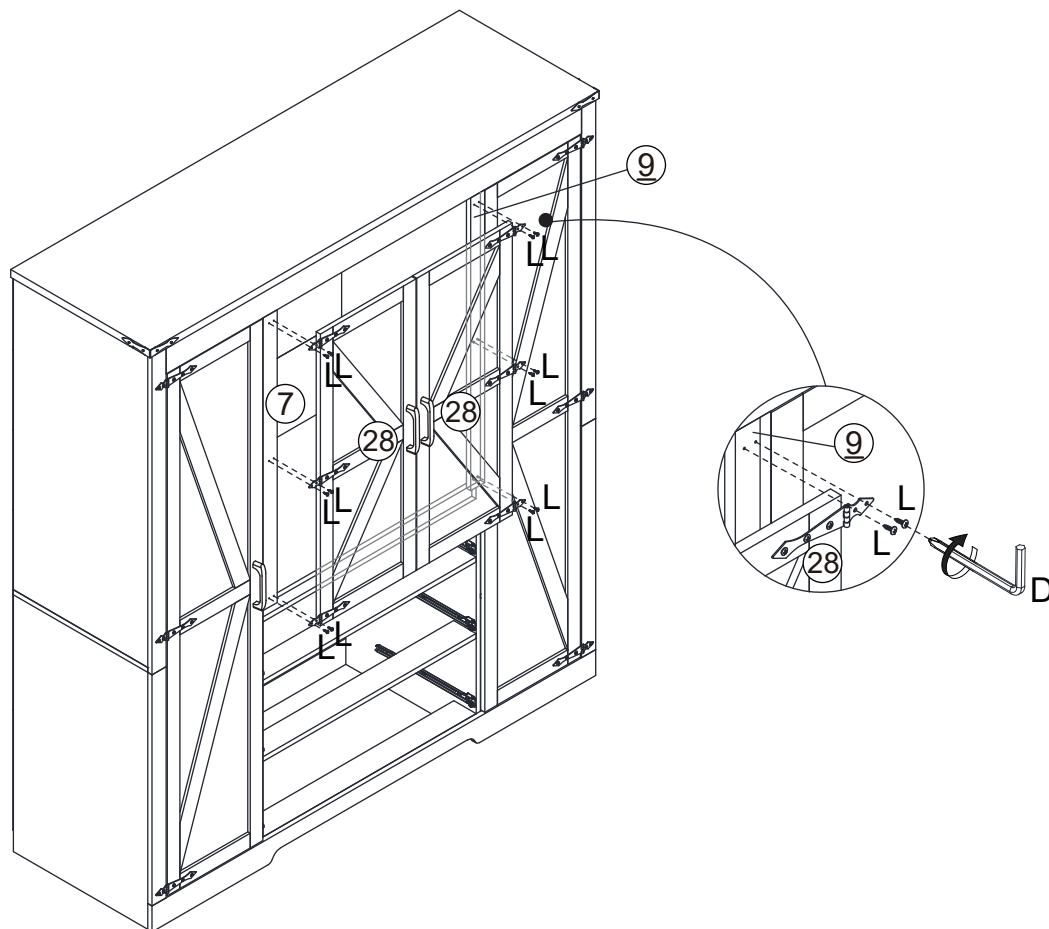

D x1

L x12

