



ASSEMBLY INSTRUCTIONS

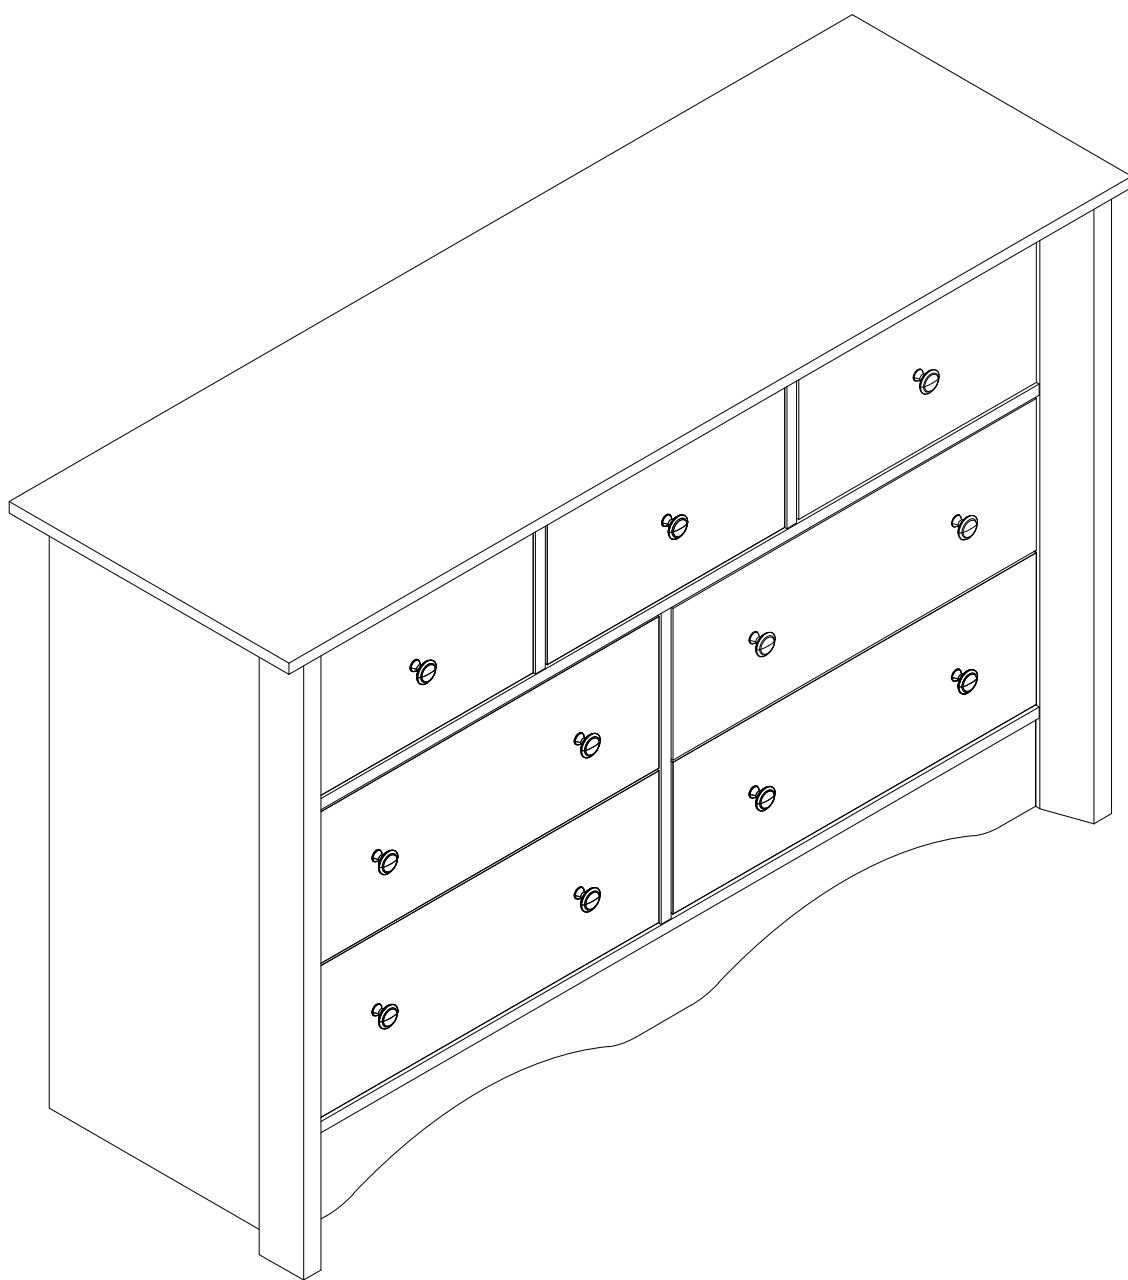


WARNING !

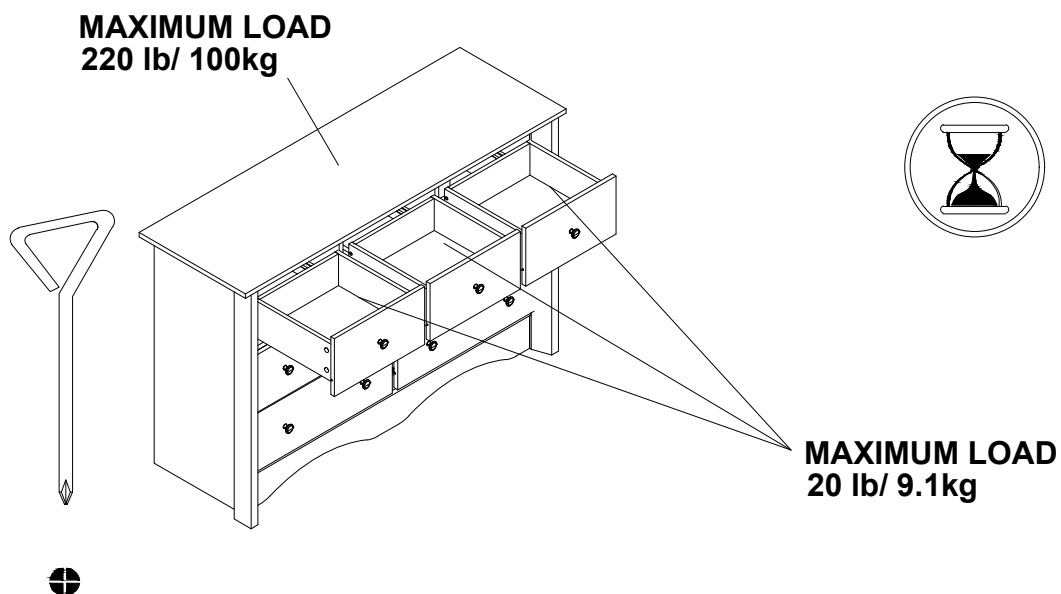


Estimated Time for Assembly

60 mins

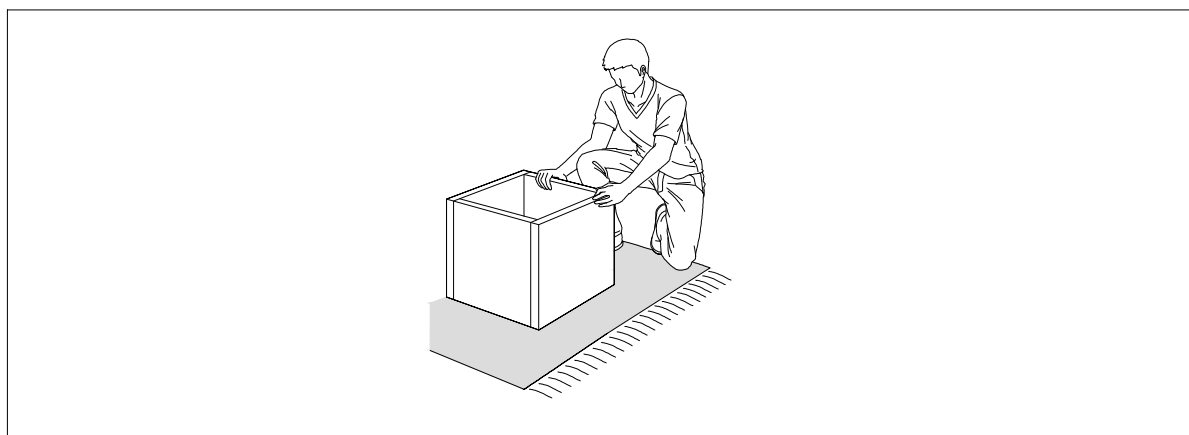

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

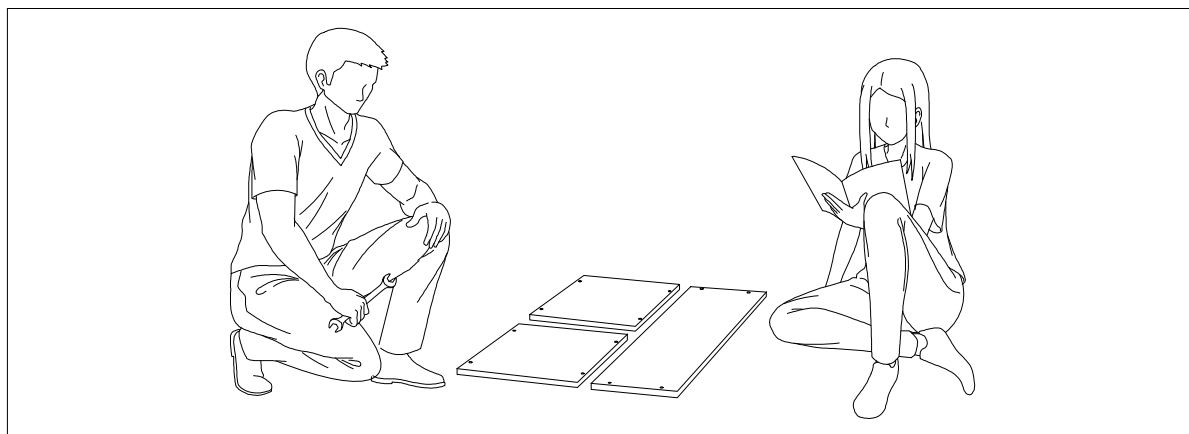


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

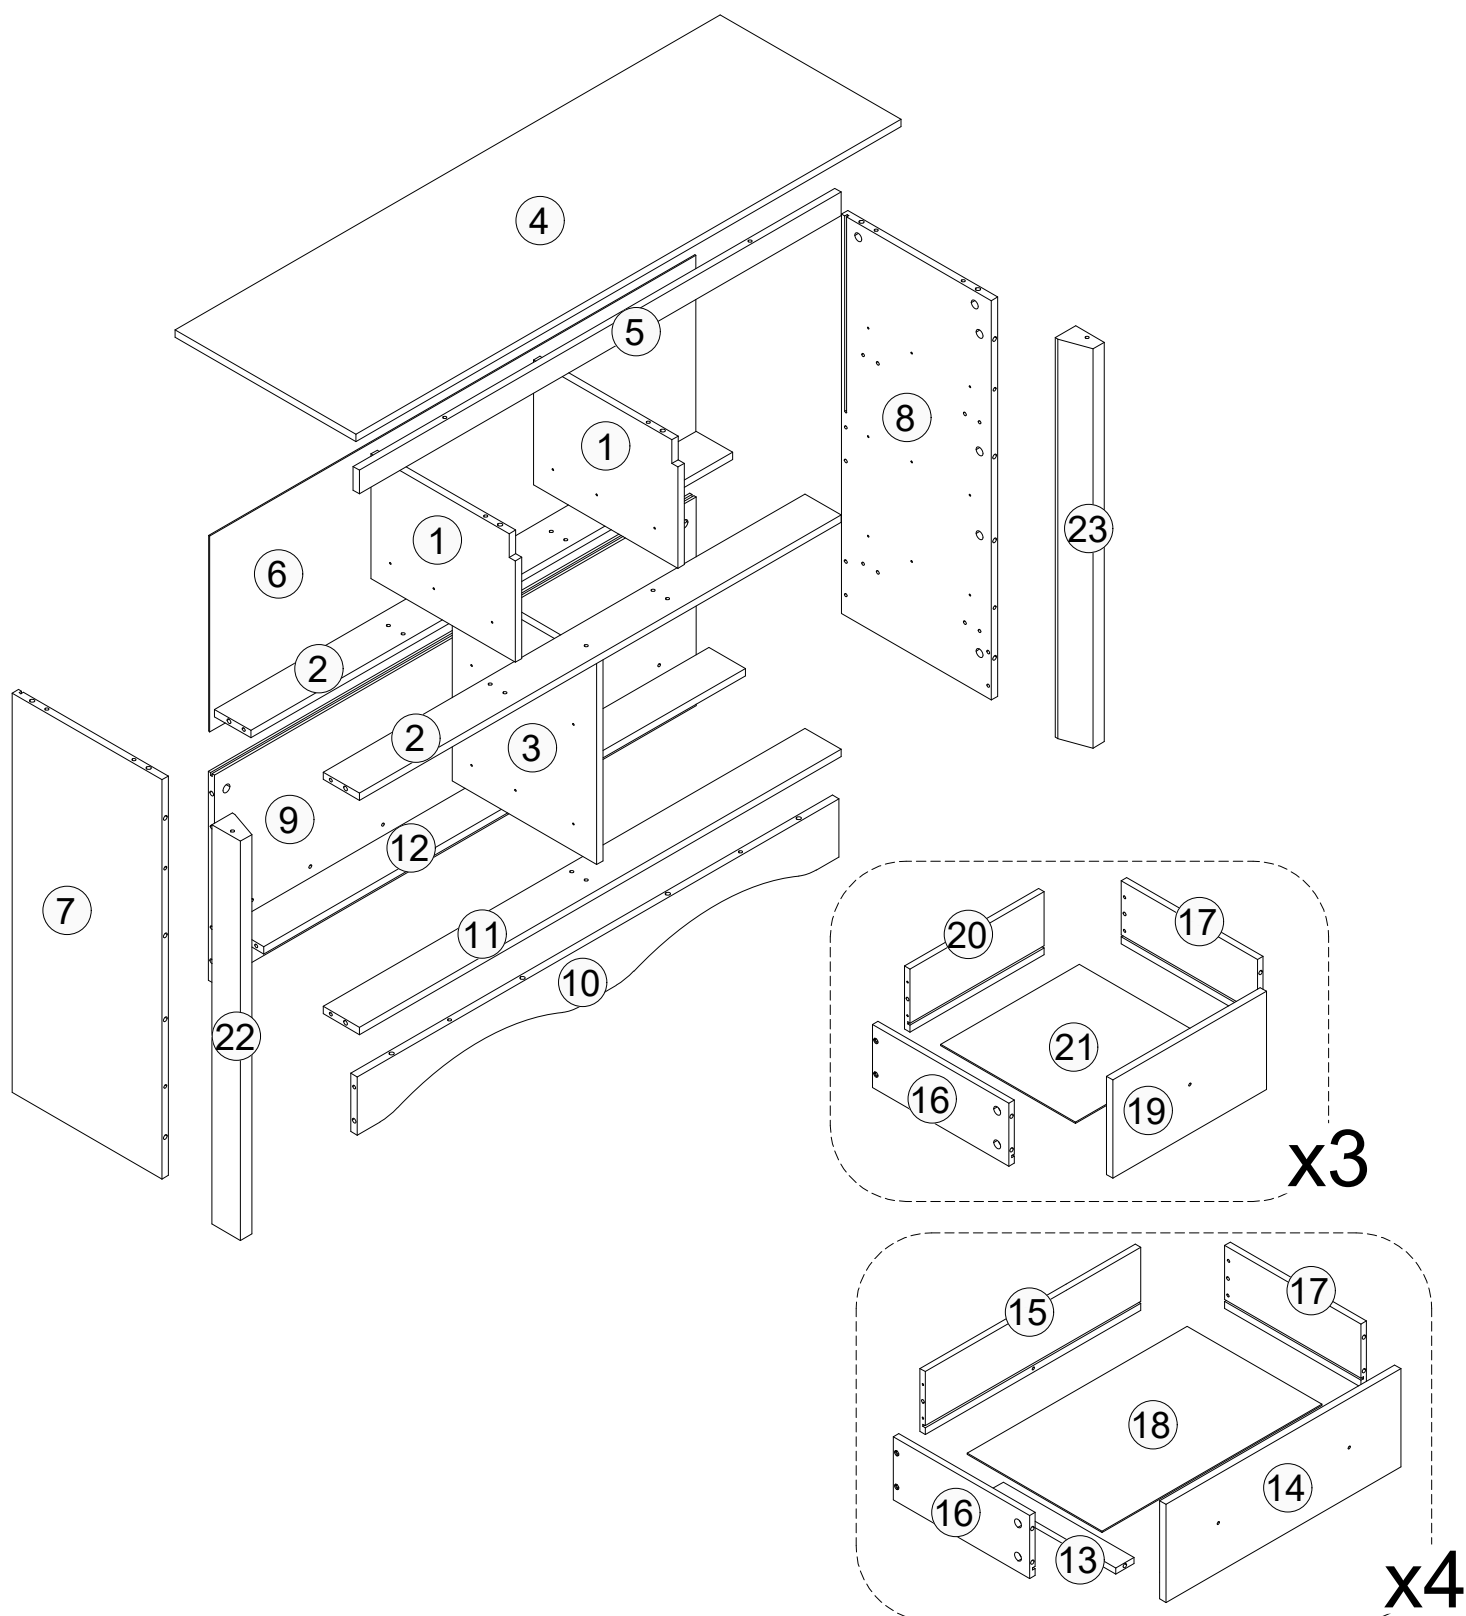


BOARD IDENTIFICATION


Not actual size

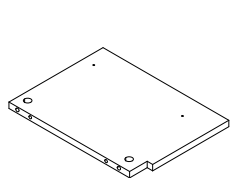


① x2

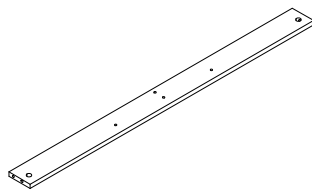


② x2

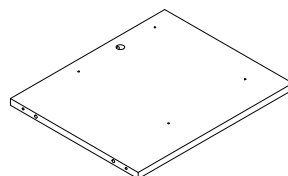


③ x1

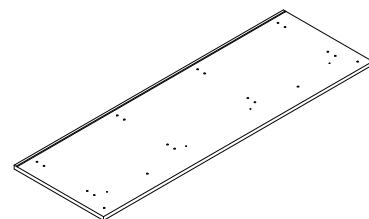


④ x1

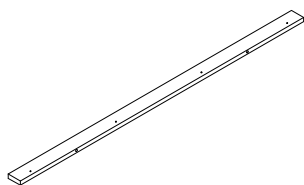


⑤ x1

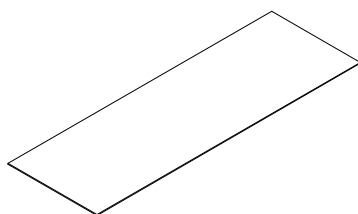


⑥ x1

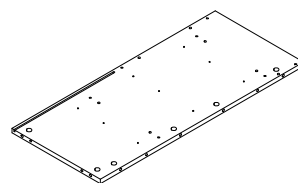


⑦ x1

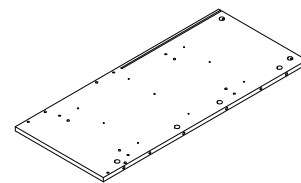


⑧ x1

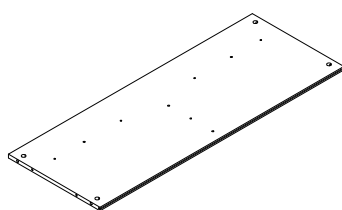


⑨ x1

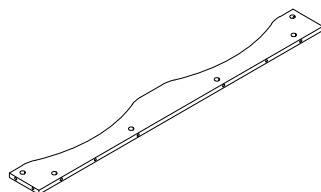


⑩ x1

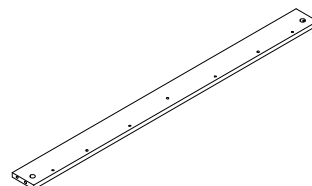


⑪ x1

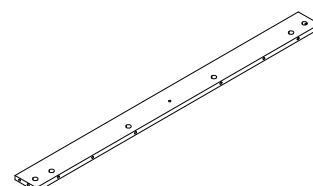


⑫ x1




⑬ x4

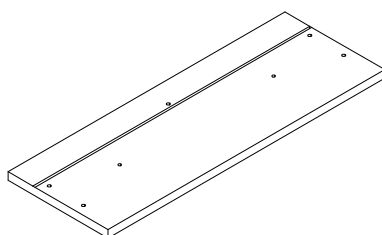


⑭ x4

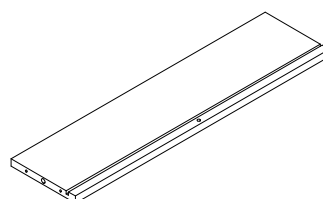


⑮ x4

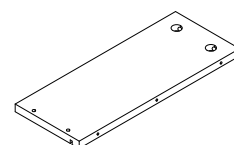


⑯ x7

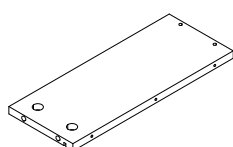


⑰ x7

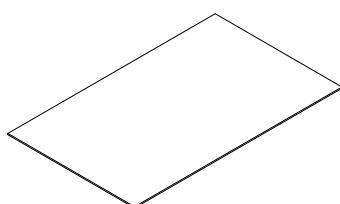

⑱ x4

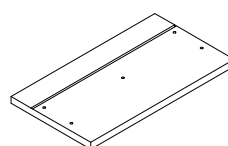


⑲ x3

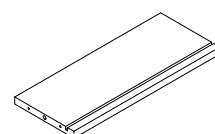


⑳ x3

BOARD IDENTIFICATION


Not actual size

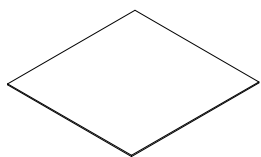

②1 x3









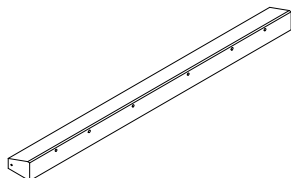


②2 x1

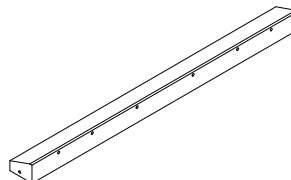


②3 x1

HARDWARE LIST

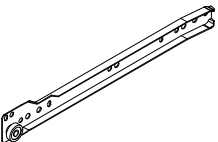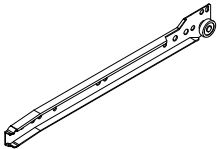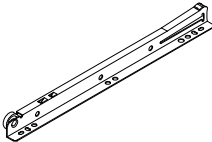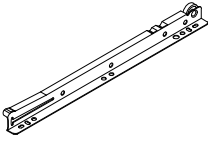
 $\text{Ø}6 \times 33.5\text{mm}$ A x71+7	 $\text{Ø}15 \times 9.5\text{mm}$ B x71+7	 $\text{Ø}6 \times 30\text{mm}$ C x58+5	 $\text{Ø}5 \times 38\text{mm}$ D x8+1
 $\text{Ø}3.5 \times 12\text{mm}$ E x88+8	 F x4	 G x11	 $\text{M}4 \times 20\text{mm}$ H x11
 $\text{Ø}4 \times 38\text{mm}$ I x32+3	 J x1	 $\text{Ø}3 \times 15\text{mm}$ K x6+1	
$\text{L}1 \times 2$ $140 \times 19\text{mm}$ 	$\text{L}2 \times 4$ $\text{Ø}16 \times \text{Ø}6.5 \times 1\text{mm}$ 	$\text{L}3 \times 2$ $\text{Ø}4 \times 16\text{mm}$ 	$\text{M}1 \times 2$ $\text{Ø}6 \times 30\text{mm}$ 
L			$\text{M}2 \times 2$ $\text{Ø}4 \times 35\text{mm}$ 
M		N x2+2	
 CL x7	 CR x7	 DR x7	 DL x7

Cam Lock Fastening System




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

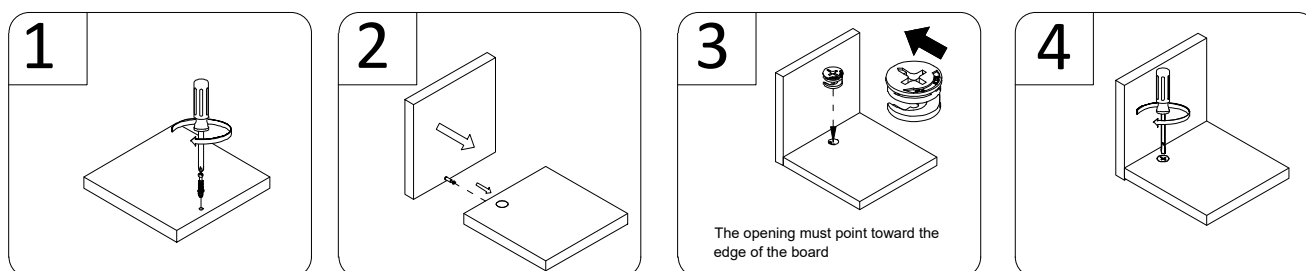





STEP 1

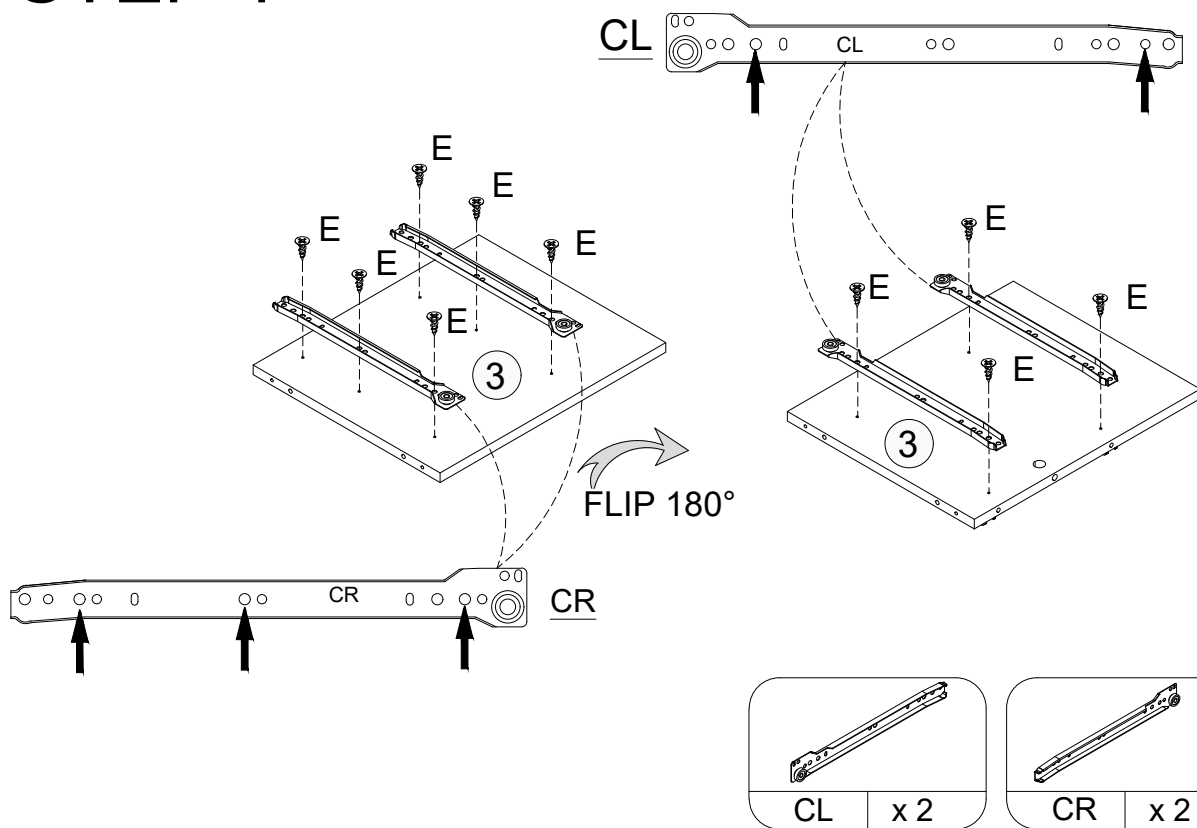




STEP 2

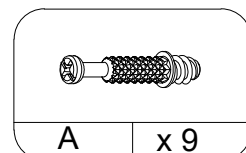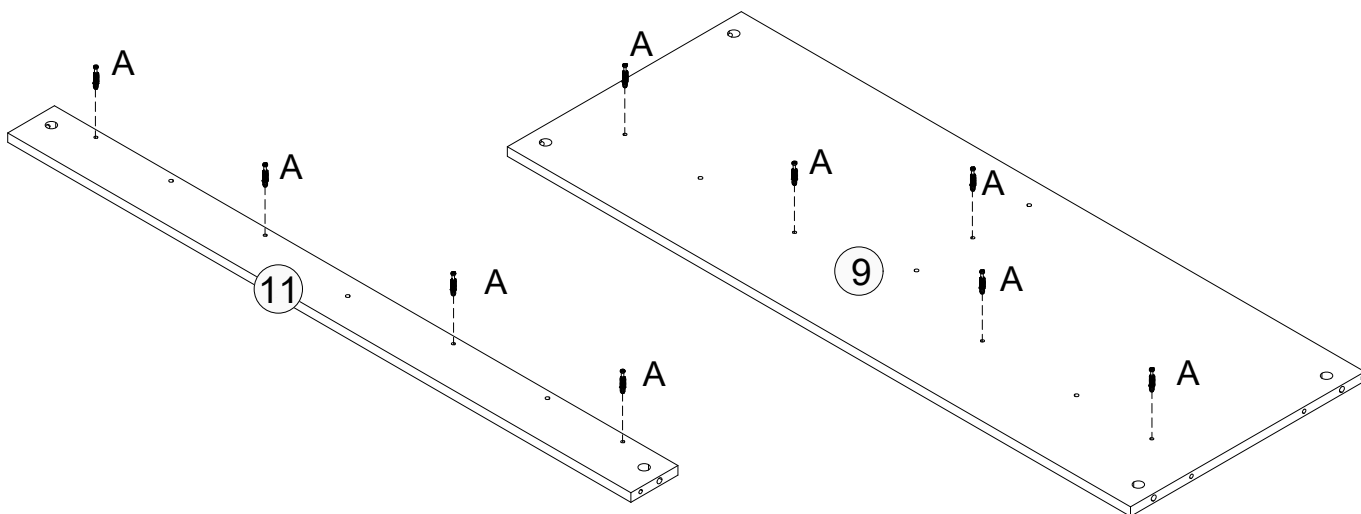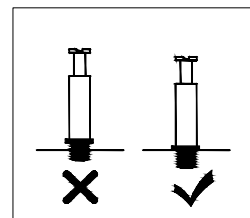




STEP 3

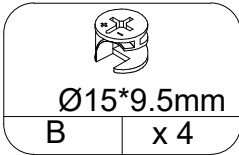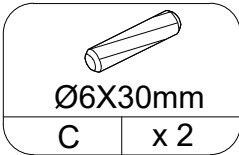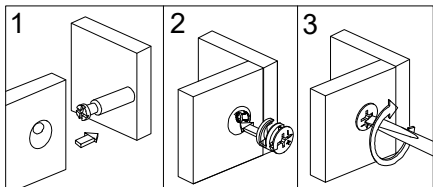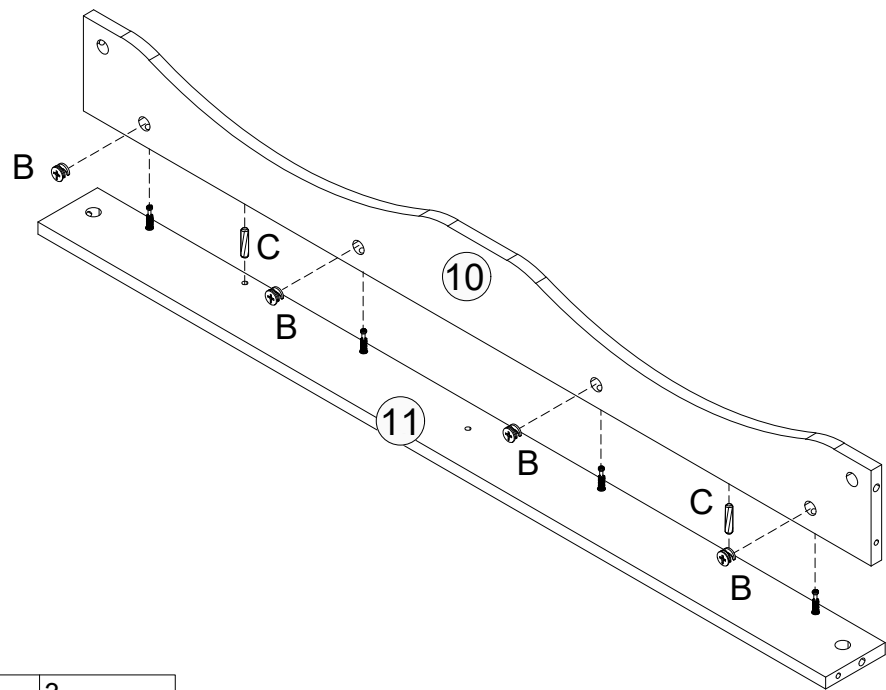




STEP 4

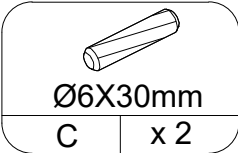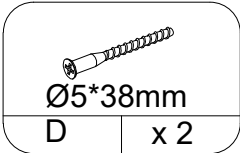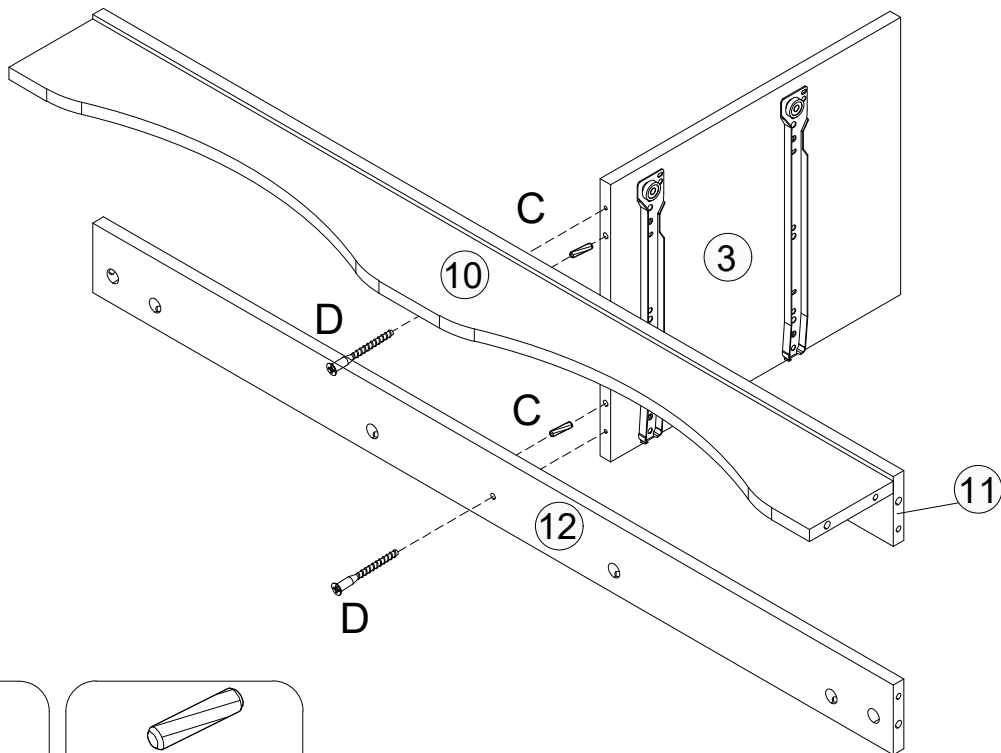




STEP 5

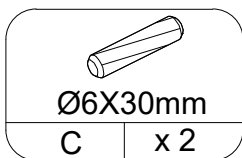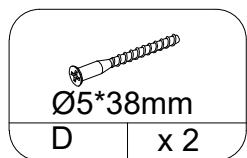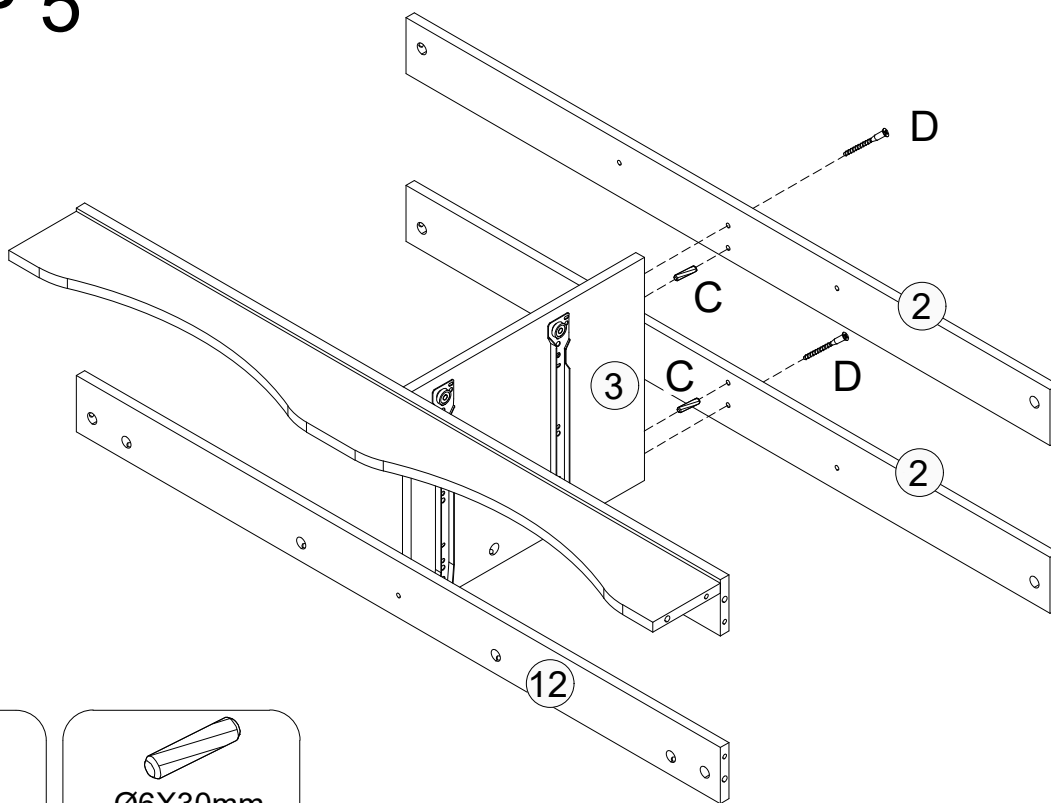


STEP 6

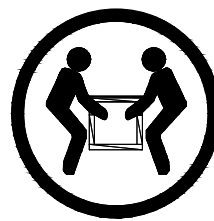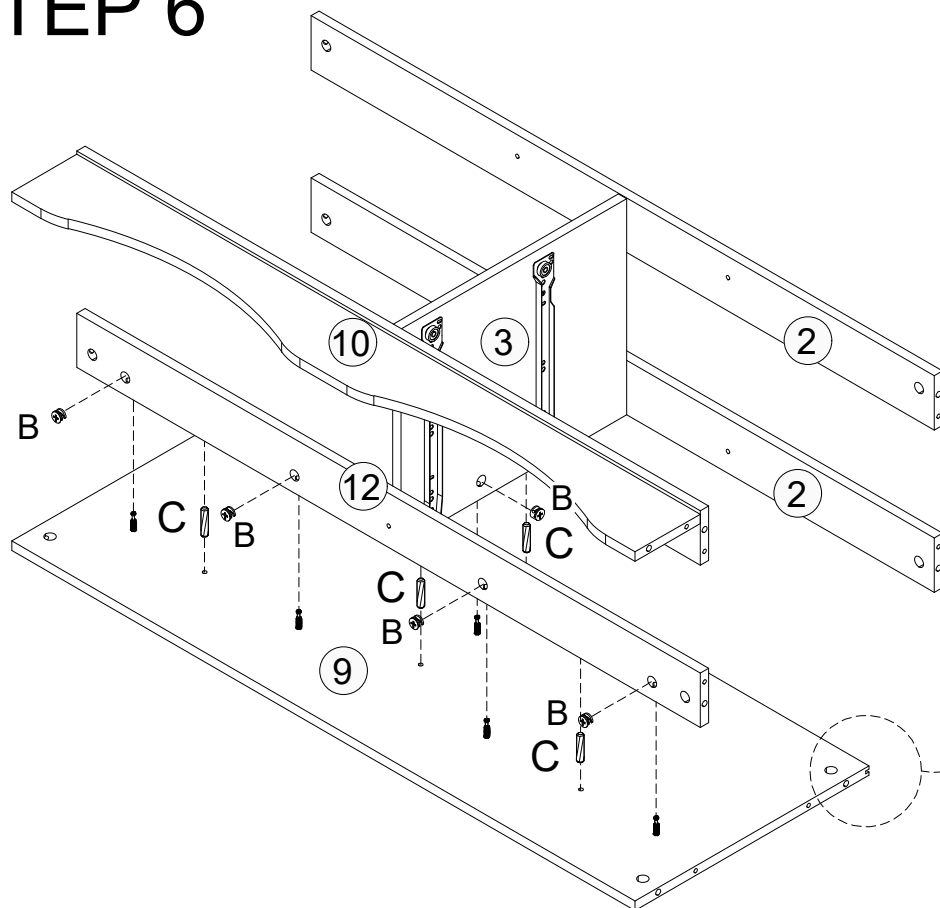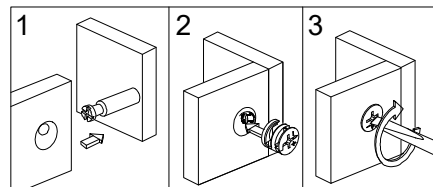


CAUTION: Heavy! You may need assistance with this step

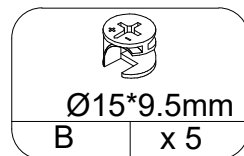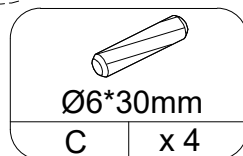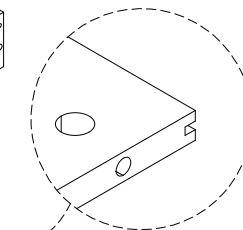



STEP 7

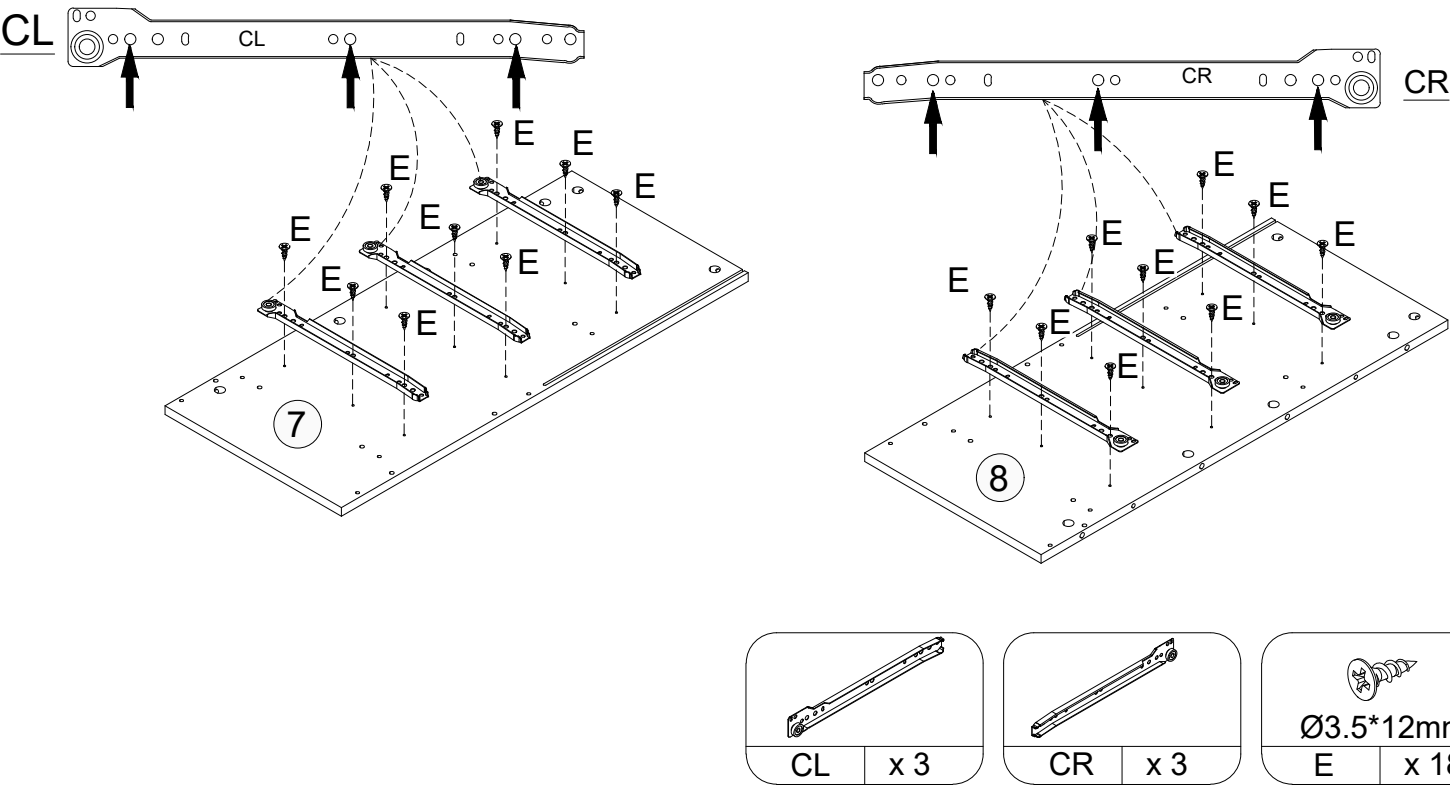

STEP 8

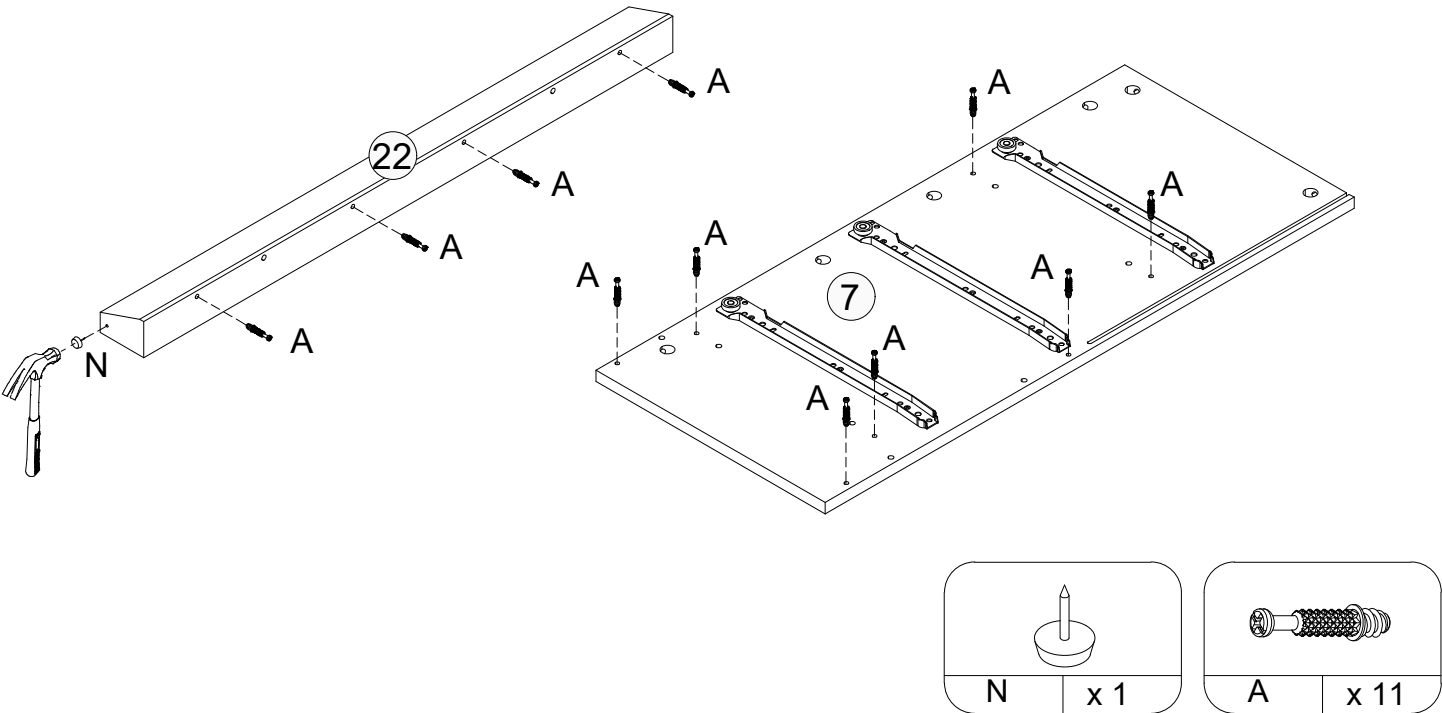


STEP 9

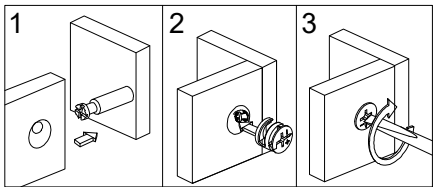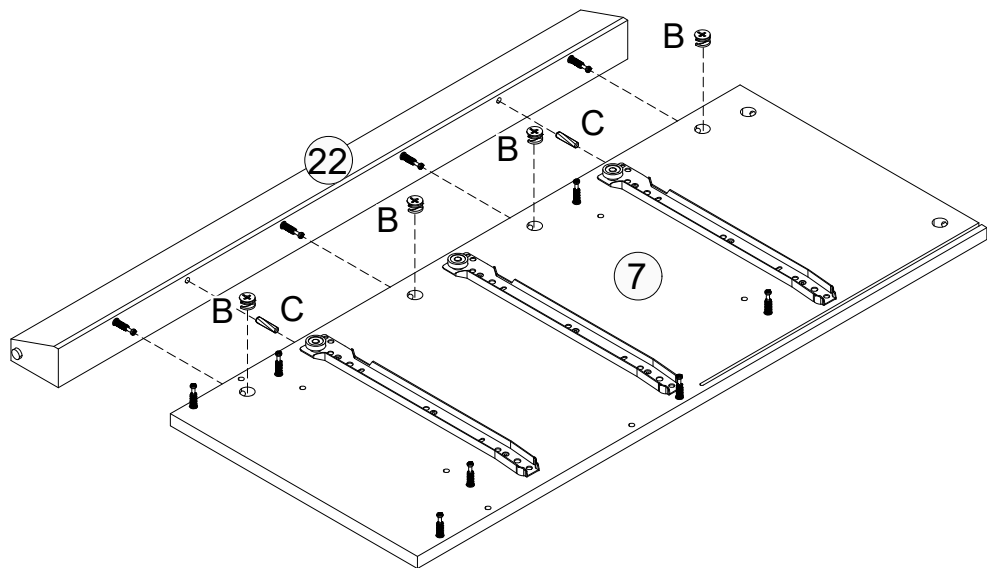


Ø6*30mm
C x 2


Ø15*9.5mm
B x 4





STEP 10

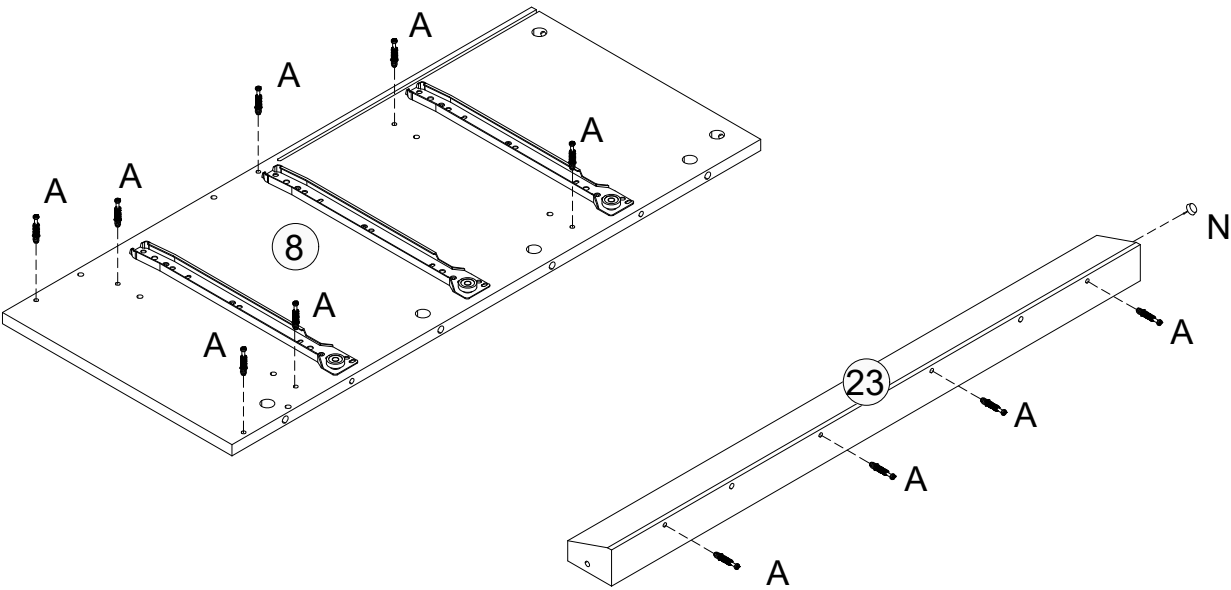






N x 1


A x 11

STEP 11

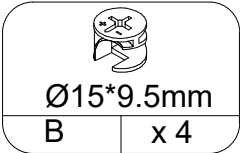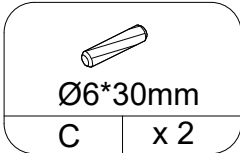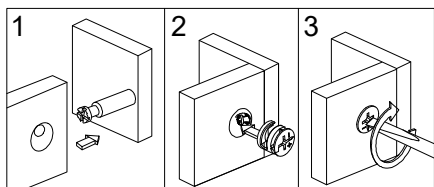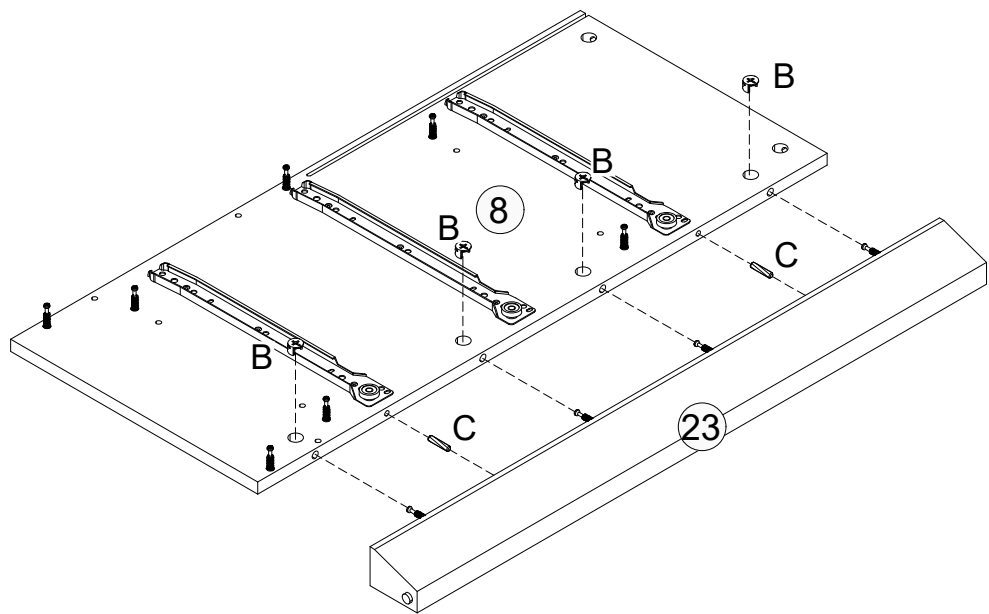


STEP 12

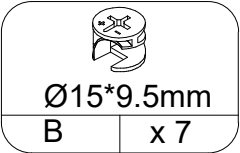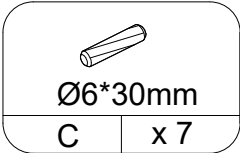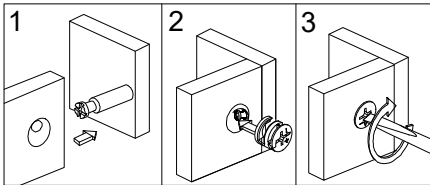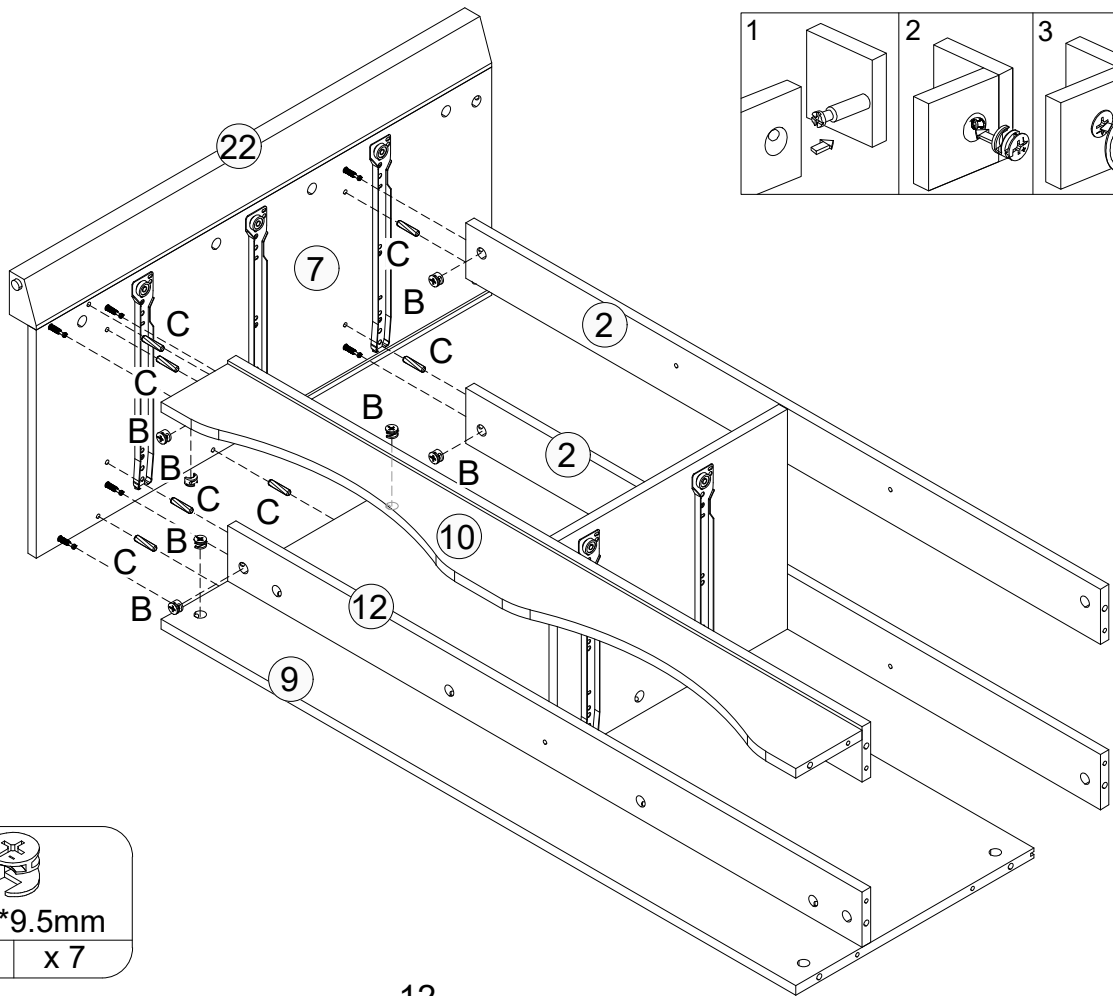

STEP 13



CAUTION: Heavy! You may need assistance with this step

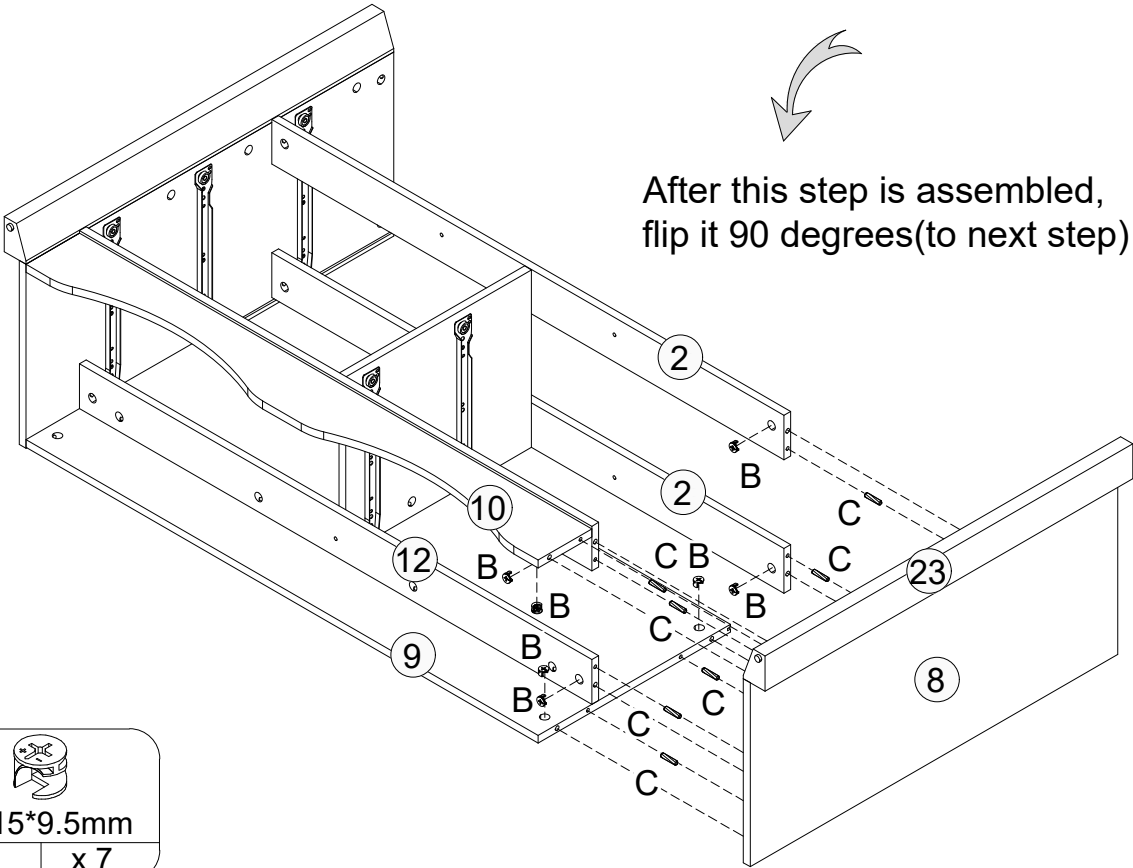



Ø6*30mm

C

x 7





Ø15*9.5mm

B

x 7


STEP14

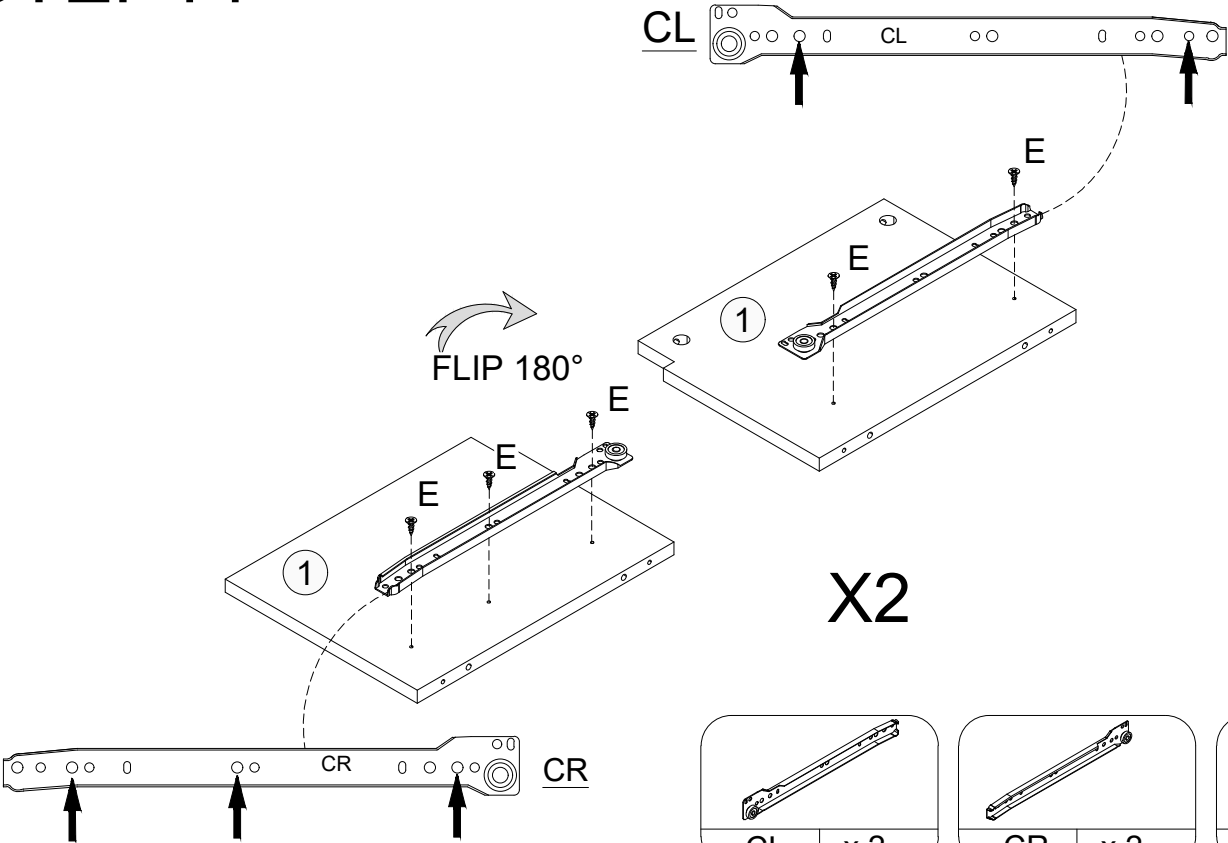



CL

x 2



CR

x 2




Ø3.5*12mm


E

x 10




STEP 15

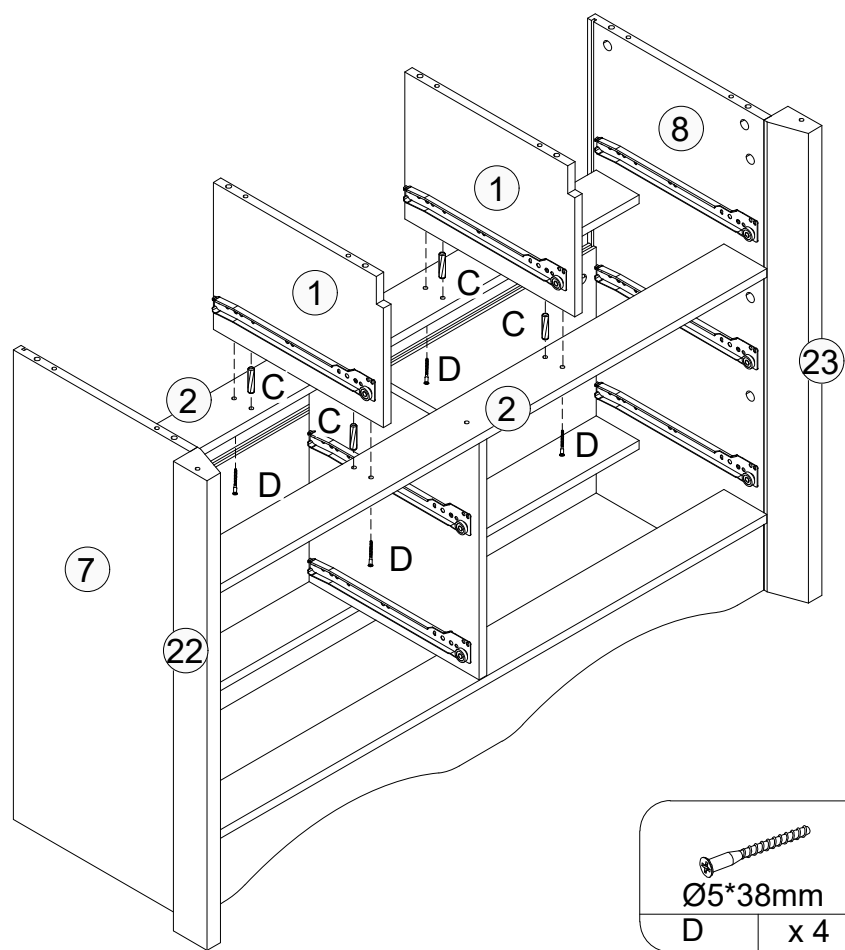





STEP 16

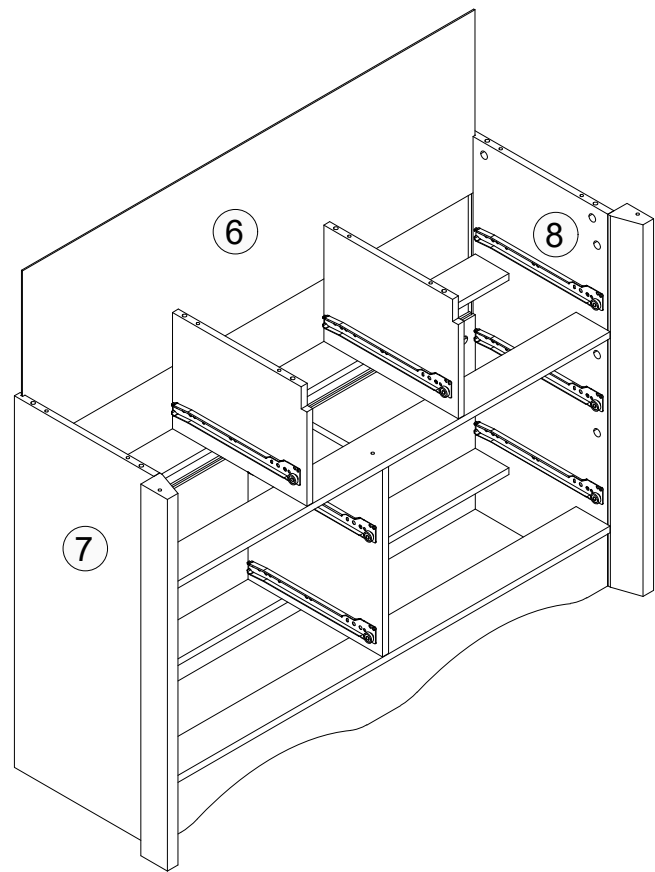




STEP 17

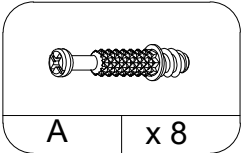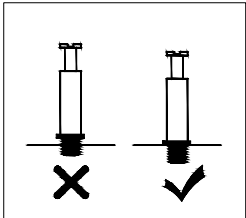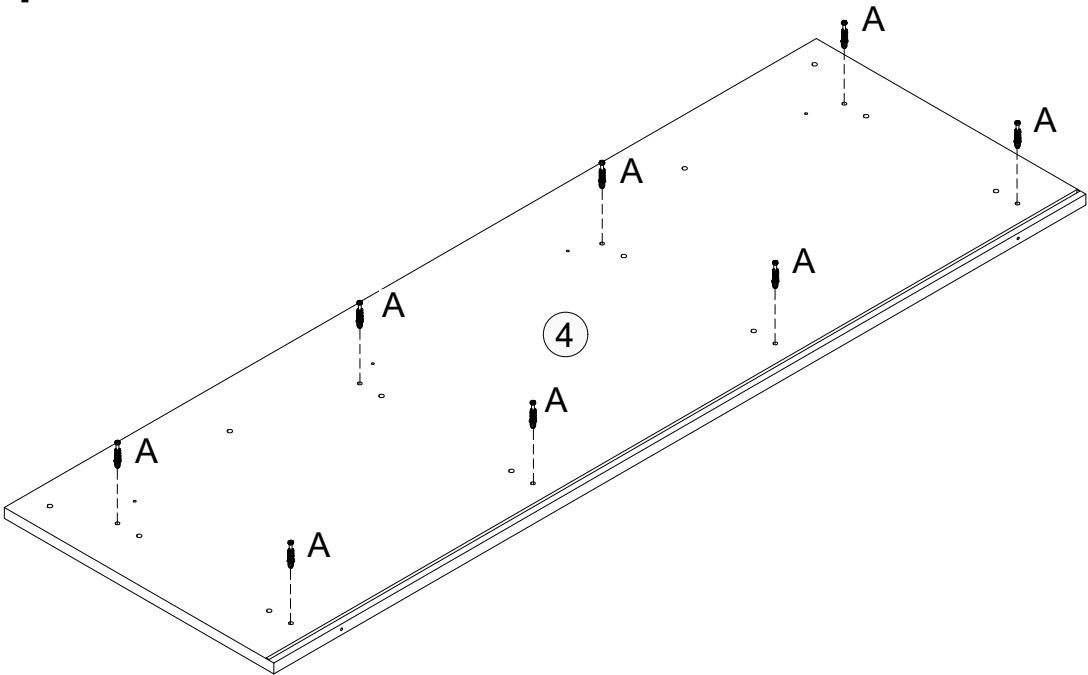






STEP 18

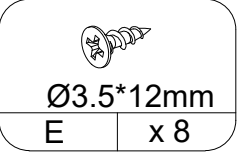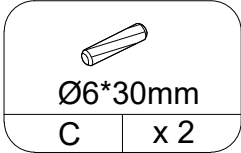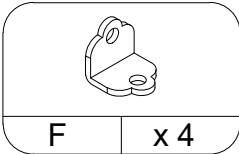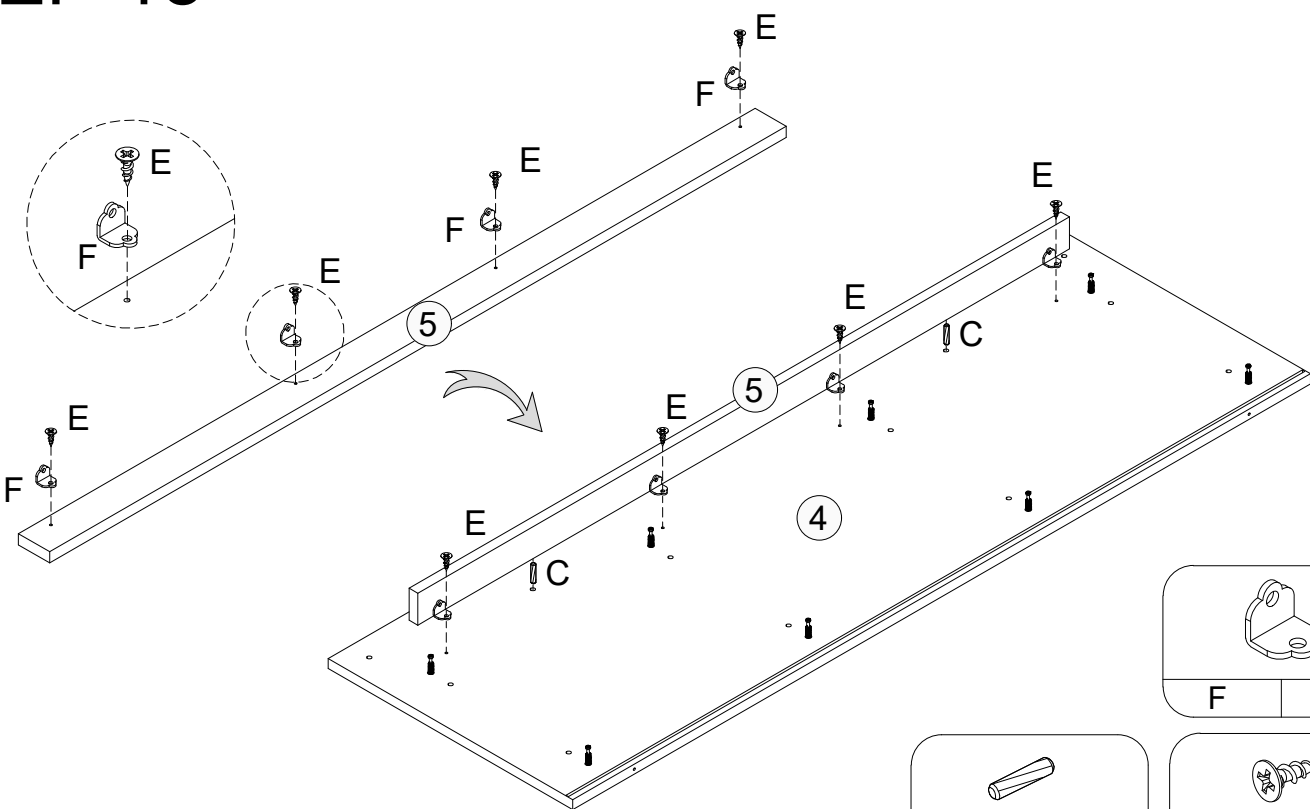




STEP 19

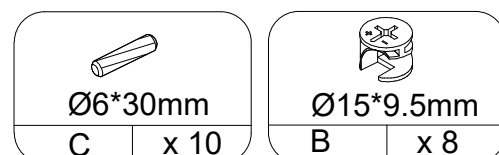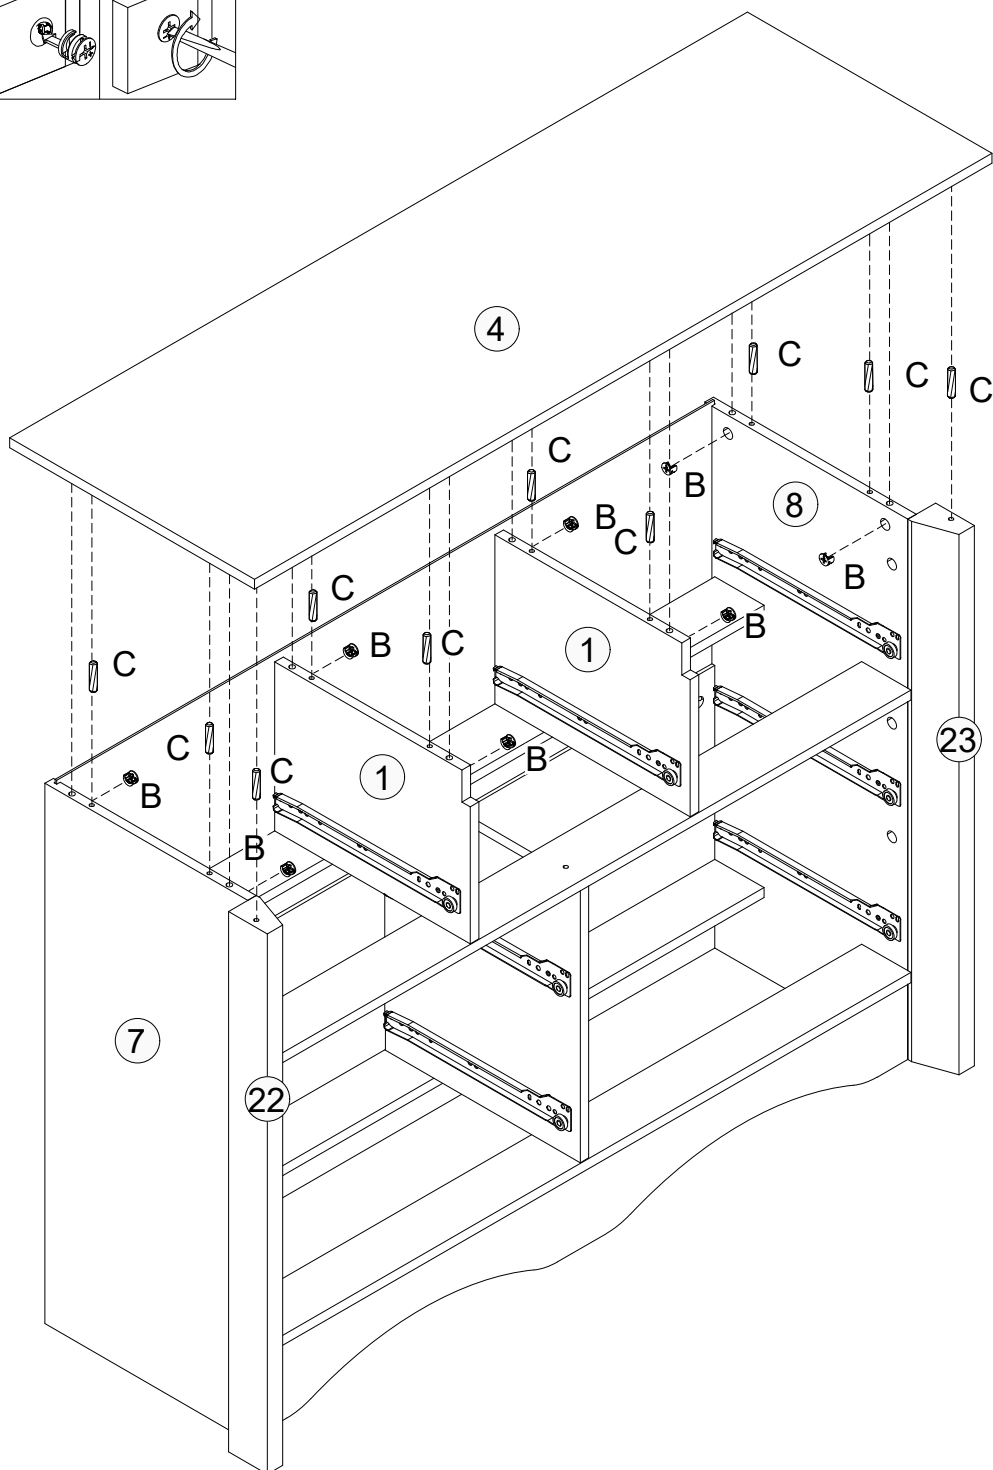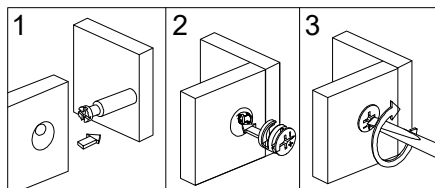


STEP 20

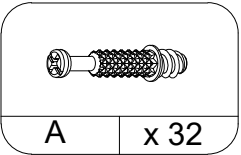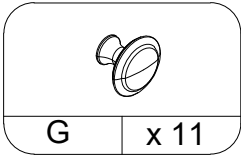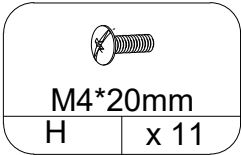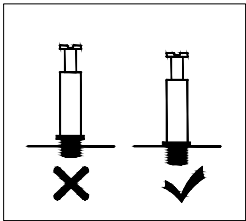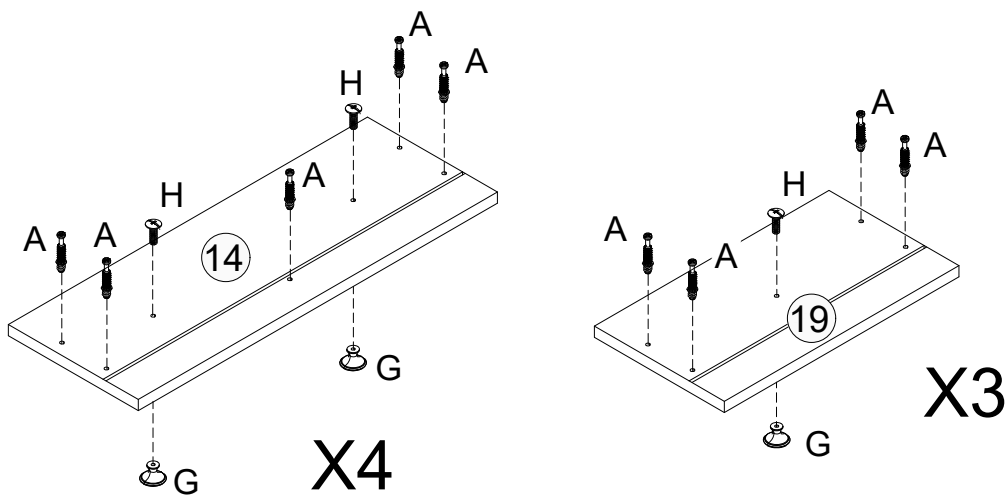



STEP 21

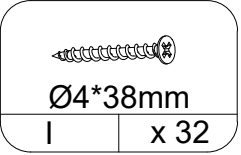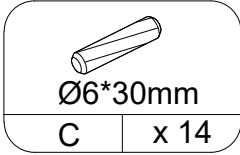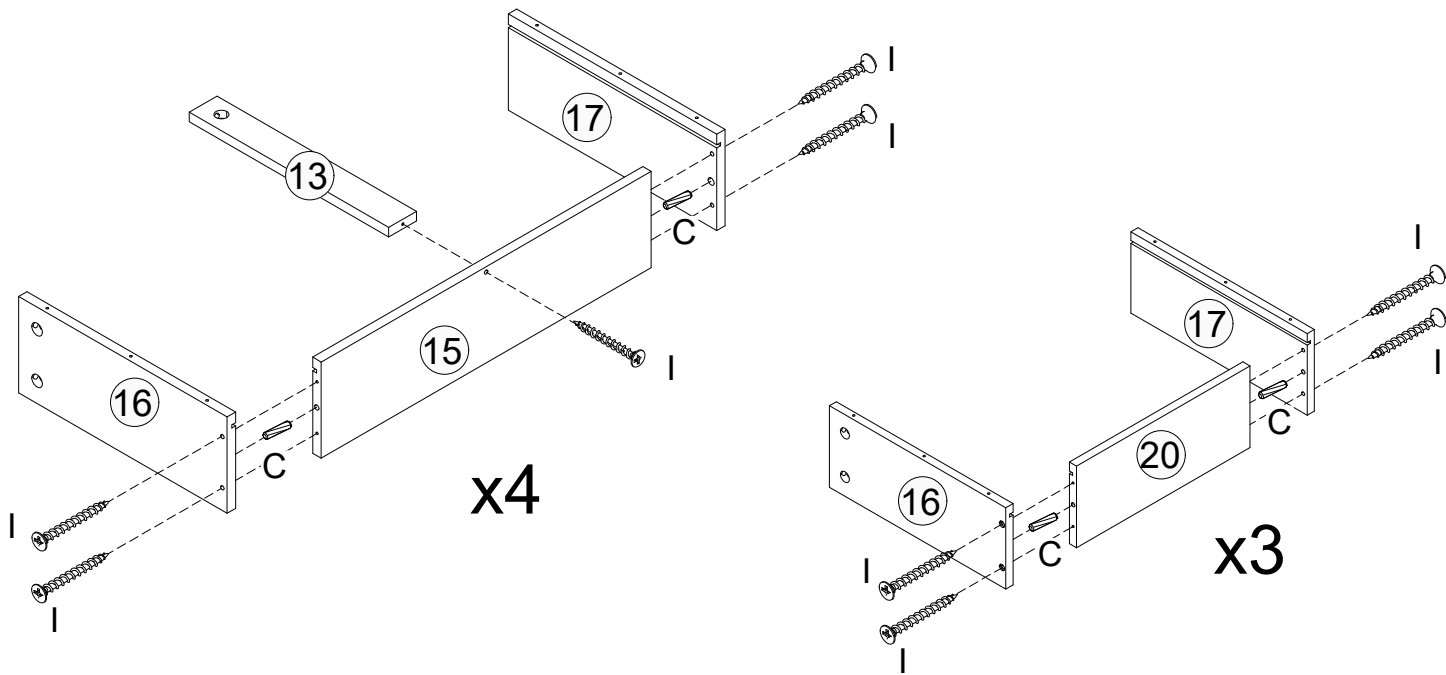





STEP 22

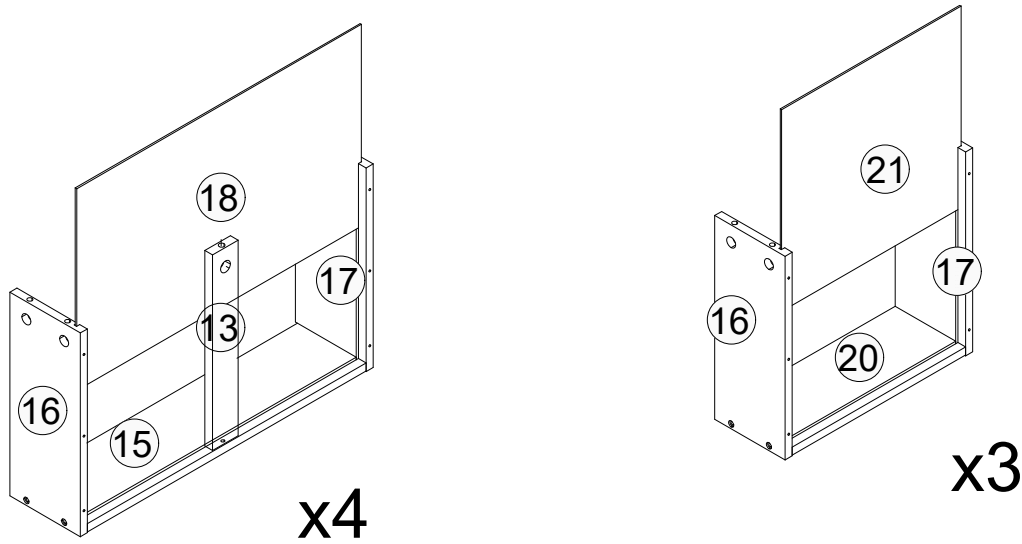


STEP 23

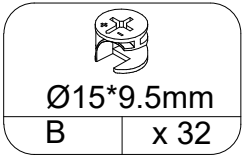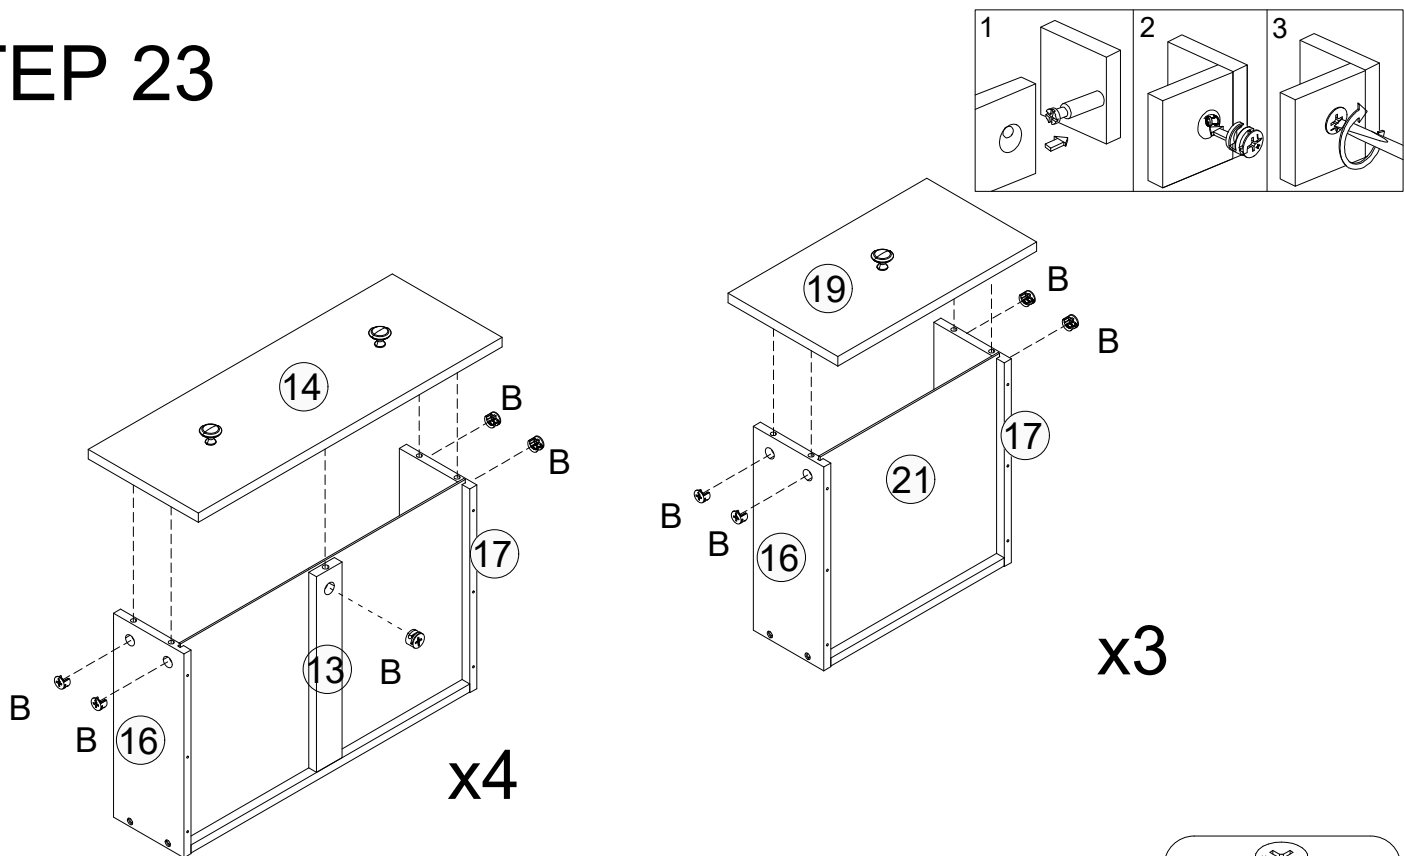


STEP 24

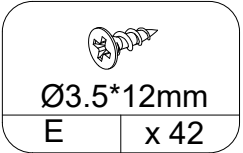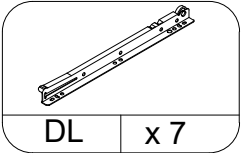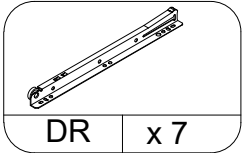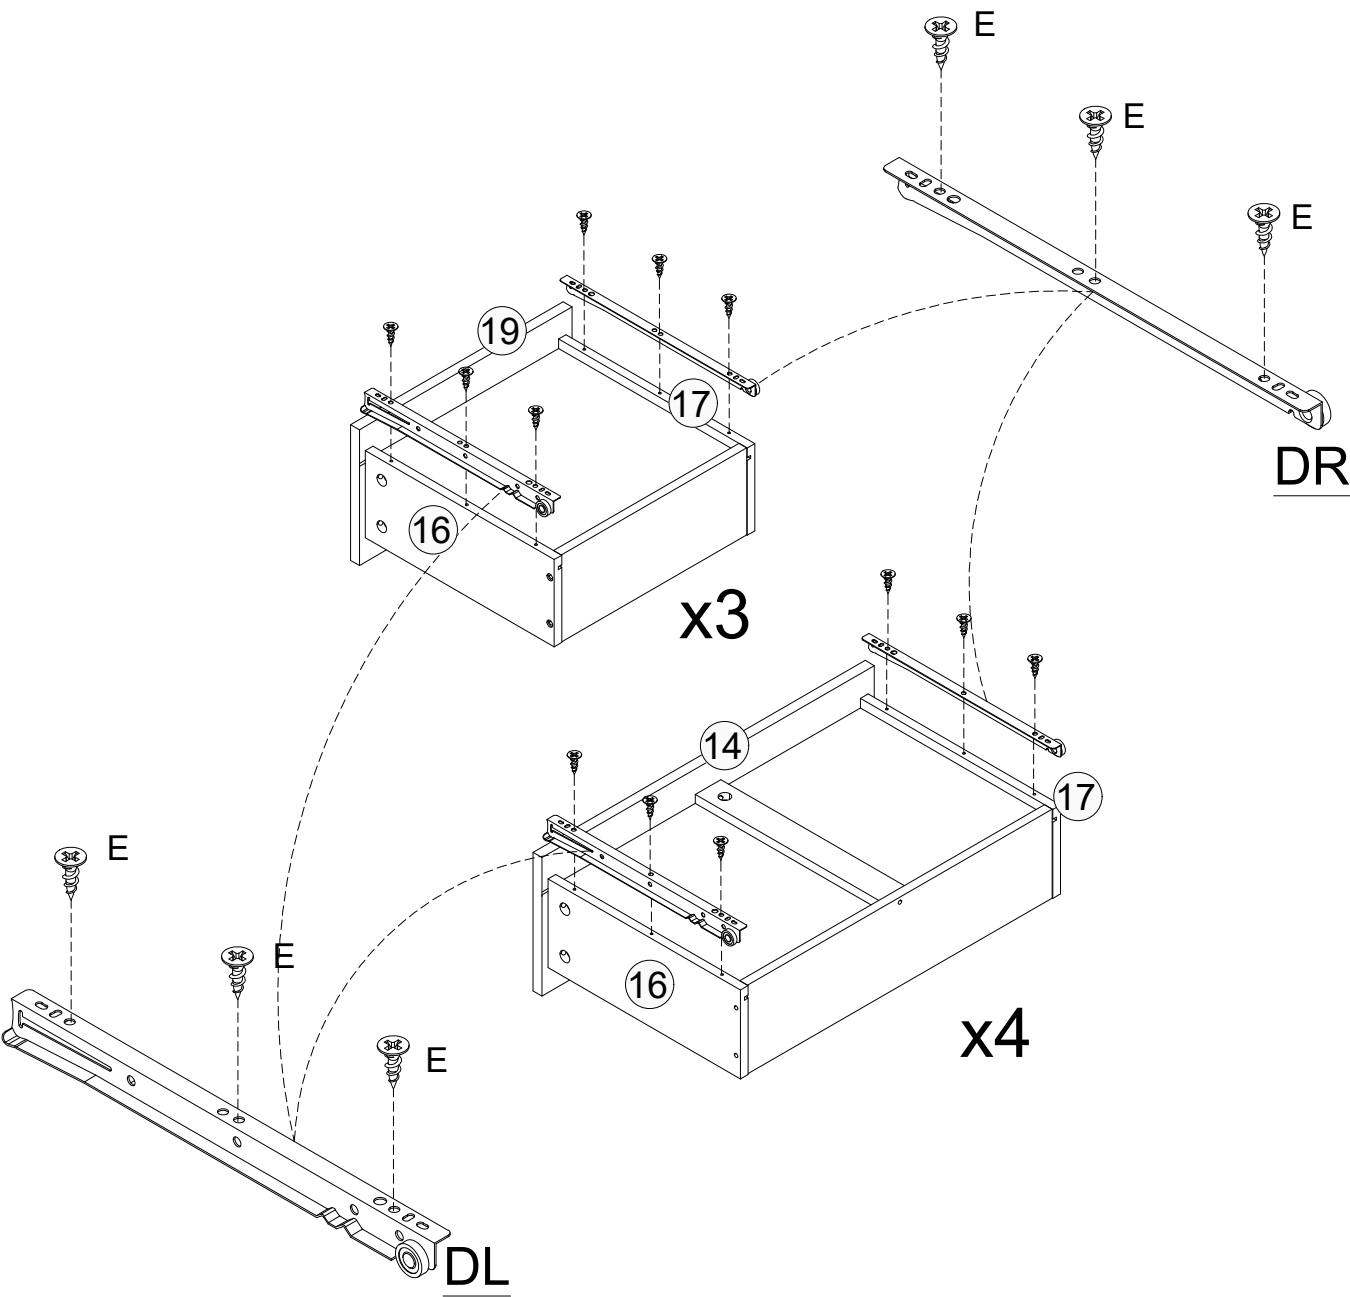


STEP 25

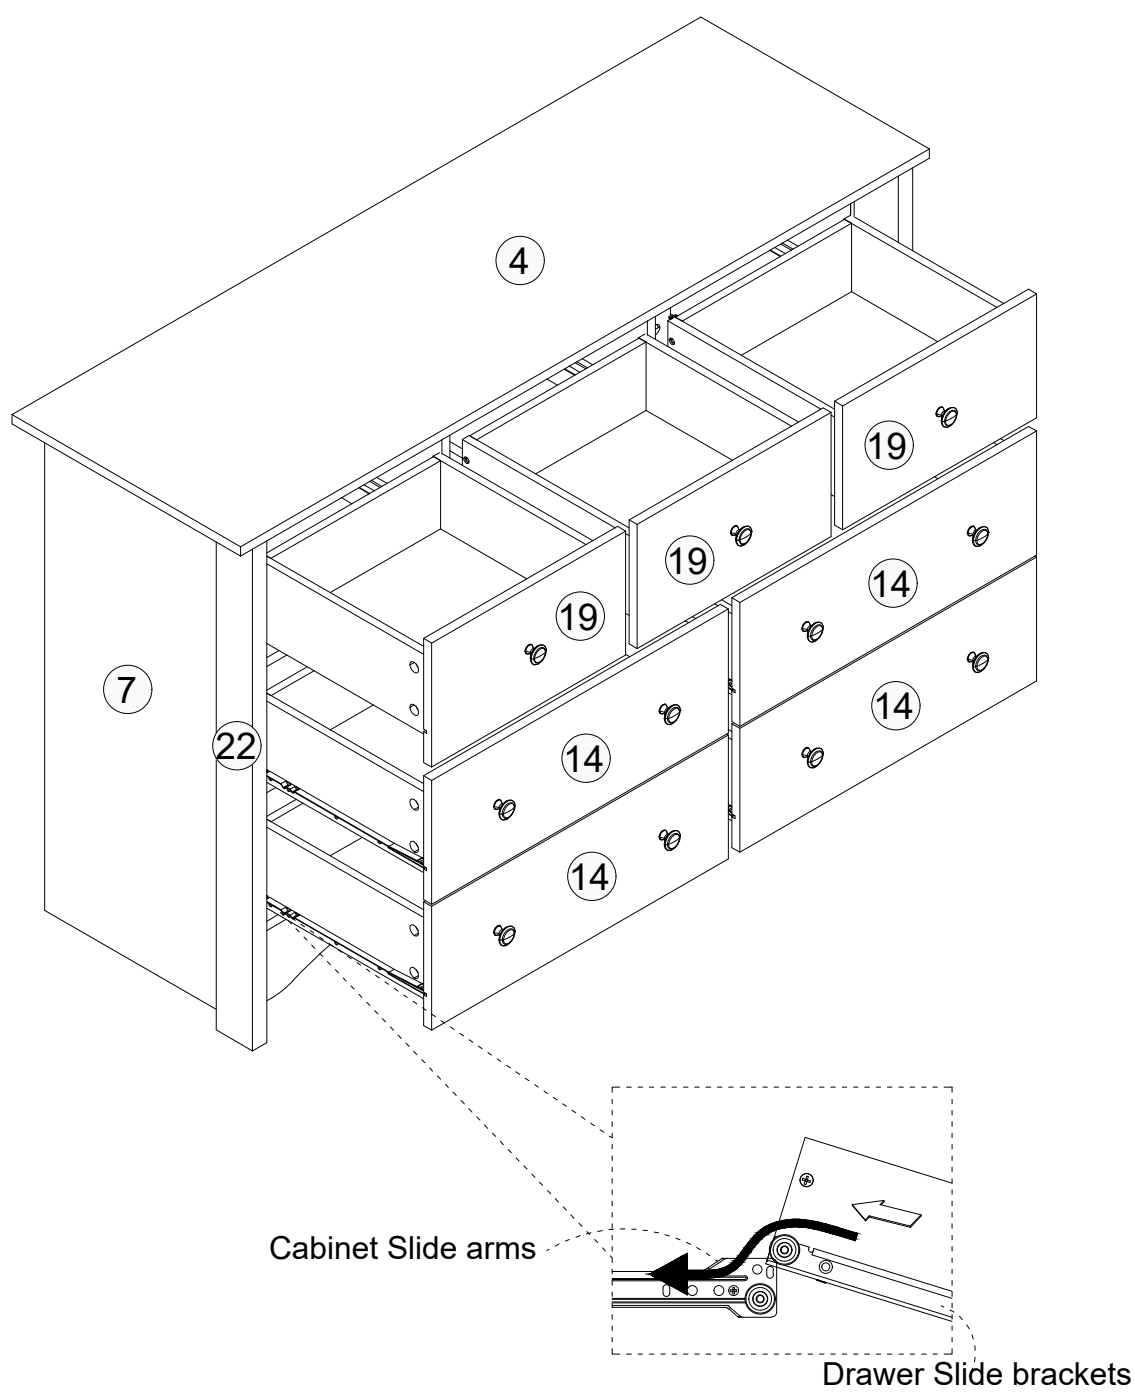

STEP 26


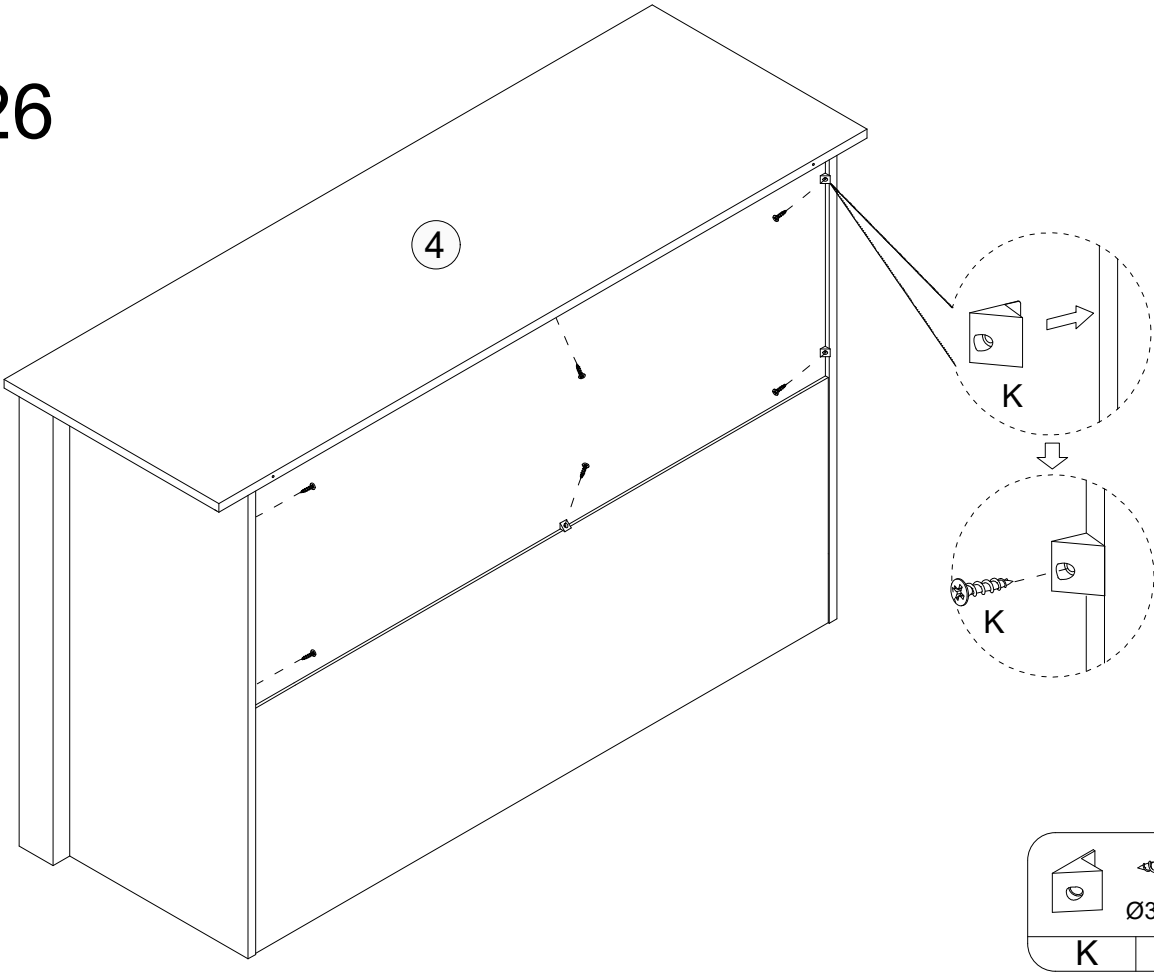


STEP 27

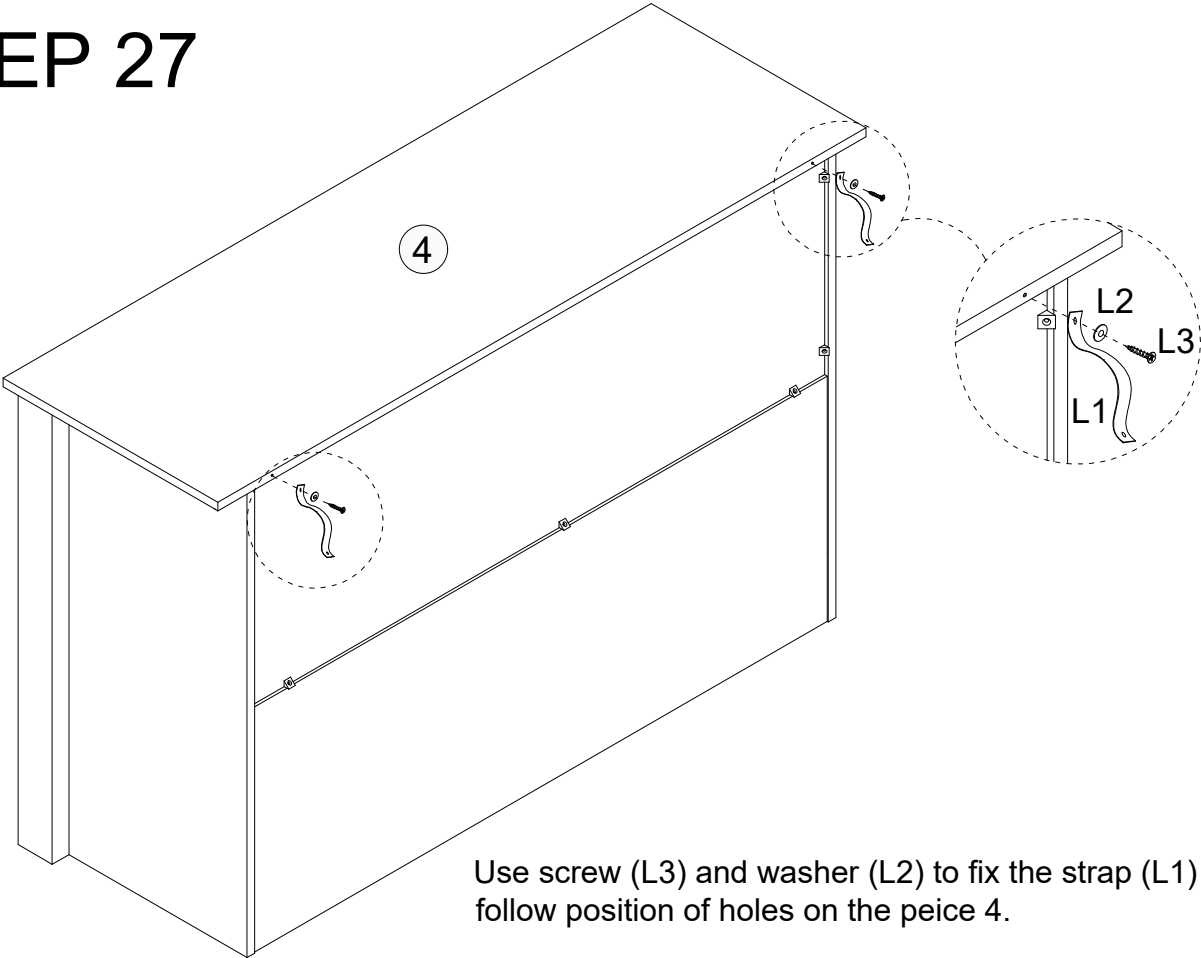

Use screw (L3) and washer (L2) to fix the strap (L1) follow position of holes on the peice 4.

STEP 28

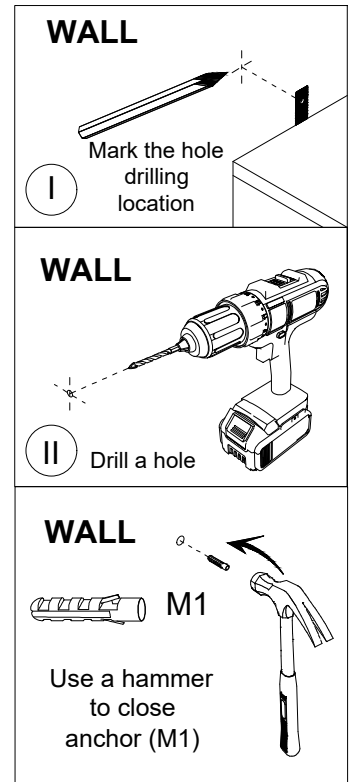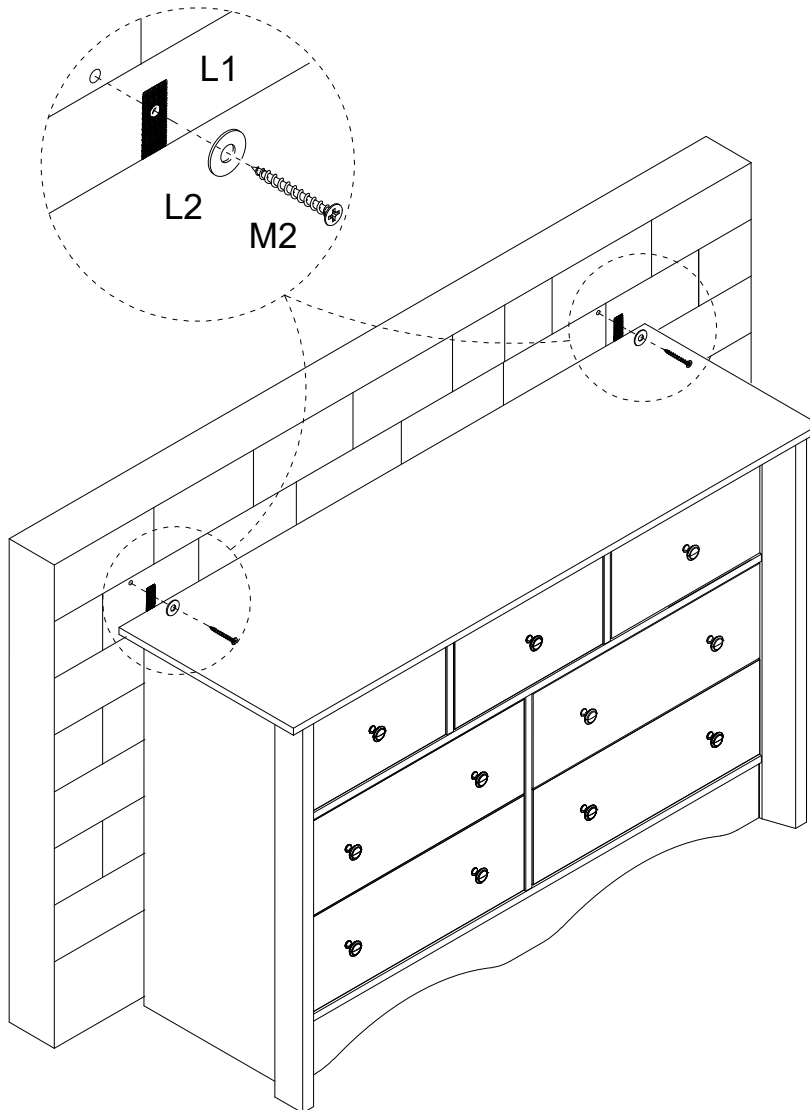

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (M1) on the wall.

Step 3: use screw (M2) to fix the strap (L1), (L2) on the wall .

M1 x2
M2 x2
L2 x2

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning