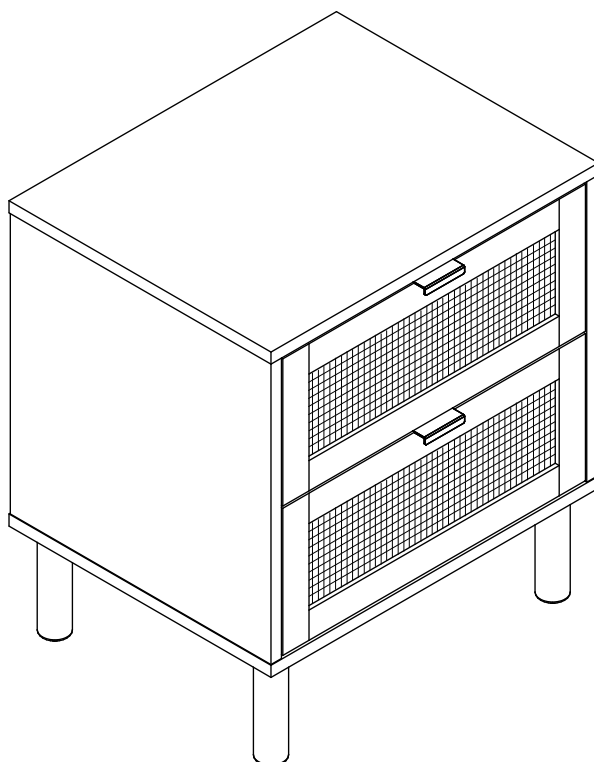


## ASSEMBLY INSTRUCTIONS

# Sango®

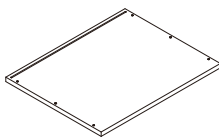
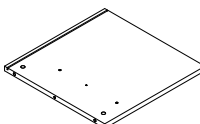
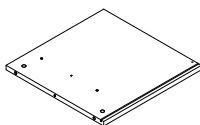
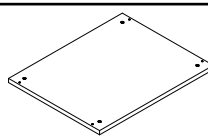

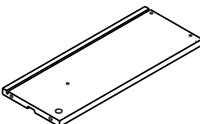
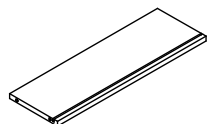
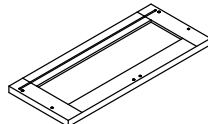
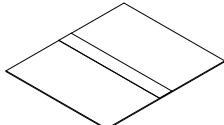
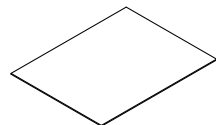
PRODUCT NAME : ORRE 2 DRAWER NIGHTSTAND - BROWN  
DIMENSIONS : 19.69"W x 15.75"D x 22.6"H  
ITEM NO. : 7238BR004ACL09







**Note:**

- Please make sure all parts and proper quantities are included.
- Do not use power tools. We recommend you hand-tighten screws.
- Use care not to overtighten.



1. Check for damaged or missing parts . Call 1-800-696-8446 to order missing supplies.
2. Use a soft surface or the carton as a working surface to prevent damage during assembly.
3. It is recommended to have 2 adults on hand for assembly.
4. Gather all tools prior to assembly.
5. **WARNING!** When included, anti-tipping hardware **MUST** be installed for your safety.


| PARTS LIST : |                   |                                                                                      | QTY  |
|--------------|-------------------|--------------------------------------------------------------------------------------|------|
| A            | Top panel         |    | 1pc  |
| B            | Left side panel   |    | 1pc  |
| C            | Right side panel  |    | 1pc  |
| D            | Bottom panel      |    | 1pc  |
| E            | Drawer left side  |    | 2pcs |
| F            | Drawer right side |   | 2pcs |
| G            | Drawer back side  |  | 2pcs |
| H            | Drawer front      |  | 2pcs |
| I            | Back panel        |  | 1pc  |
| J            | Drawer bottom     |  | 2pcs |

| HARDWARE : |                                 |                                                                                      | QTY   |
|------------|---------------------------------|--------------------------------------------------------------------------------------|-------|
| 1          | Cam Bolt                        |    | 8pcs  |
| 2          | Cam Lock                        |    | 8pcs  |
| 3          | Wooden Dowel Ø8x25mm            |    | 10pcs |
| 4          | Leg Ø38x140mm                   |    | 4pcs  |
| 5          | Leveler                         |    | 4pcs  |
| 6          | Slider                          |    | 4pcs  |
| 7          | Screw for Slider(outside)       |   | 4pcs  |
| 8          | Screw for Slider(inside)        |  | 4pcs  |
| 9          | Handle                          |  | 2pcs  |
| 10         | Screw for Handle                |  | 4pcs  |
| 11         | Screw for Bottom                |  | 4pcs  |
| 12         | Screw for Drawer Back           |  | 8pcs  |
| 13         | Plastic Wedge Bracket           |  | 4pcs  |
| 14         | Screw for Plastic Wedge Fixture |  | 4pcs  |
| 15         | Glue                            |  | 1pc   |
| 16         | Cover Sticker                   |  | 4pcs  |


## how to use cam lock system

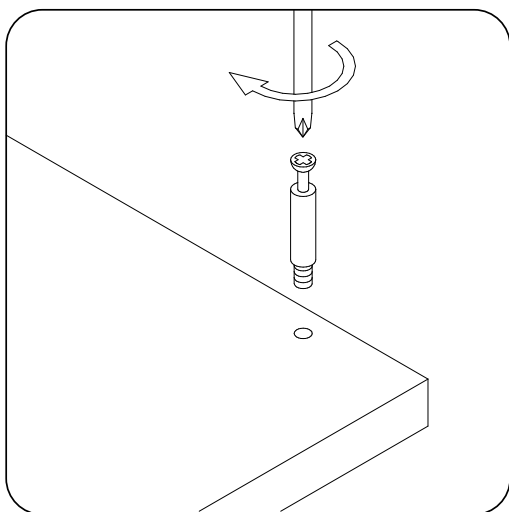.....


1.



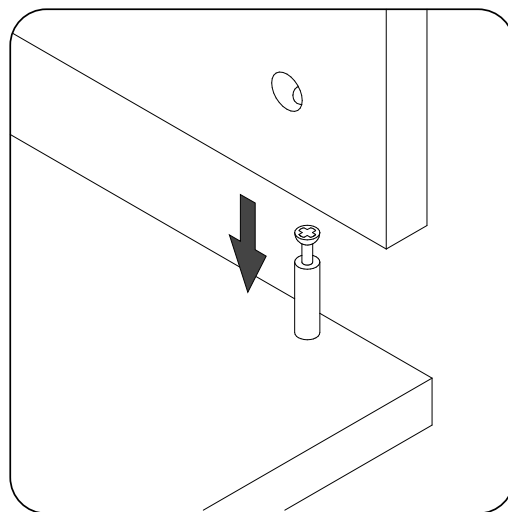
2.



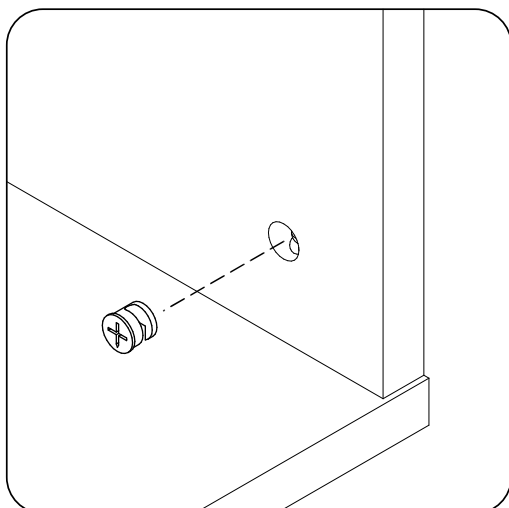
3.



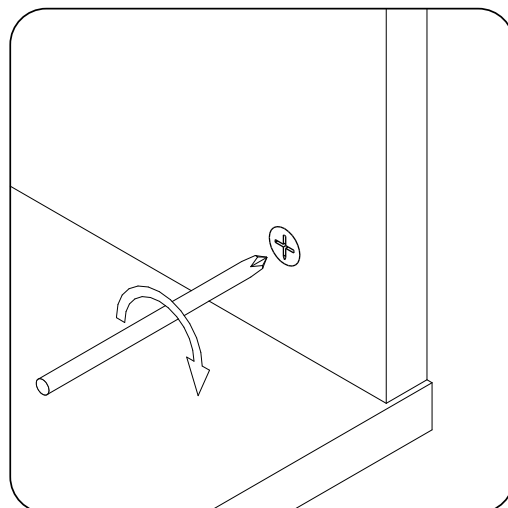4.




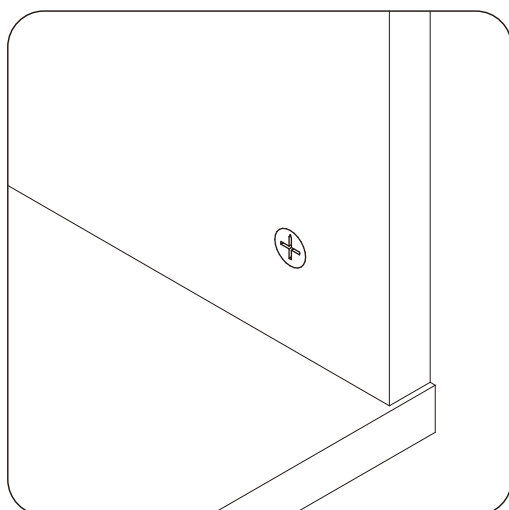5.



## STEP-1

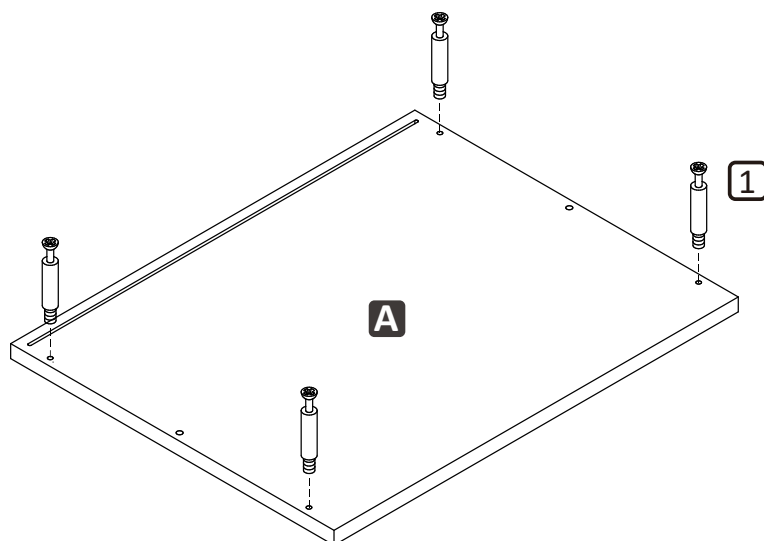**1** x4








## STEP-2

**3** x6

**6** x4

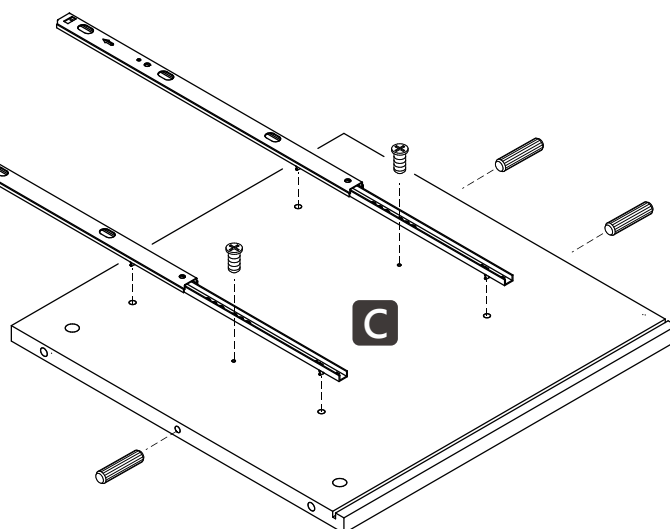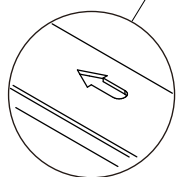
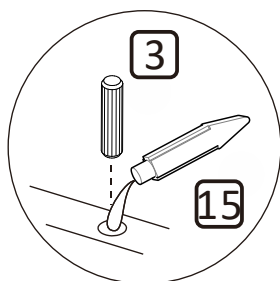
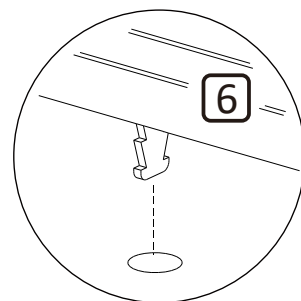
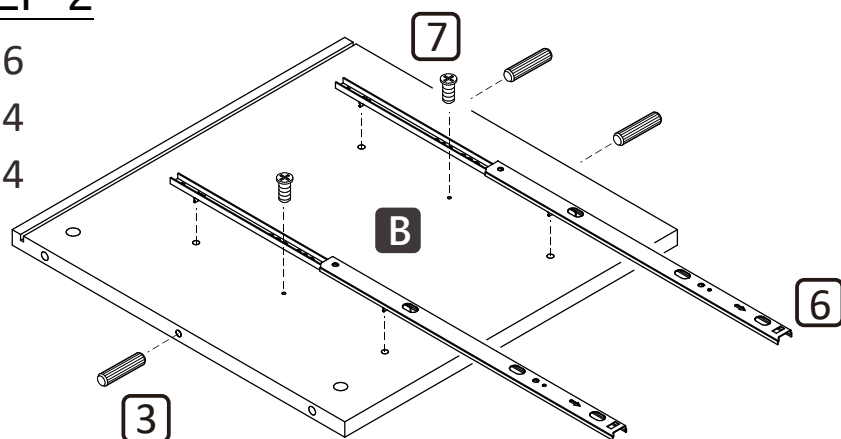
**7** x4



### STEP-3

1 x4

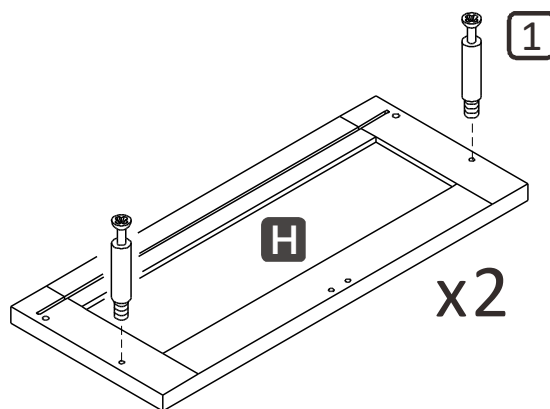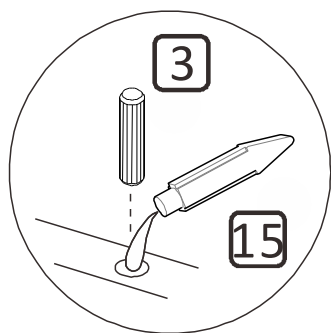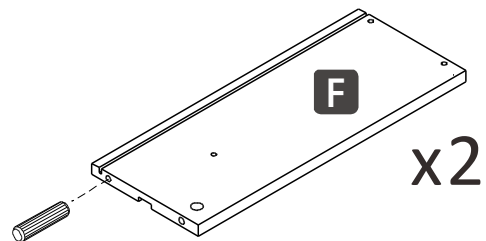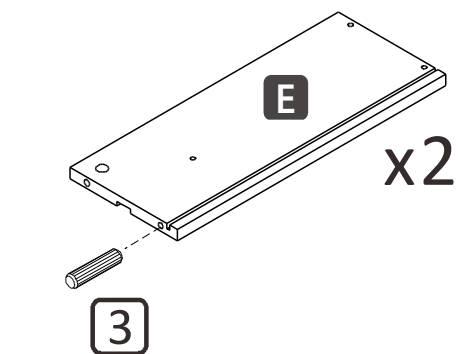3 x4






### STEP-4




2 x4




12 x8



9 x2

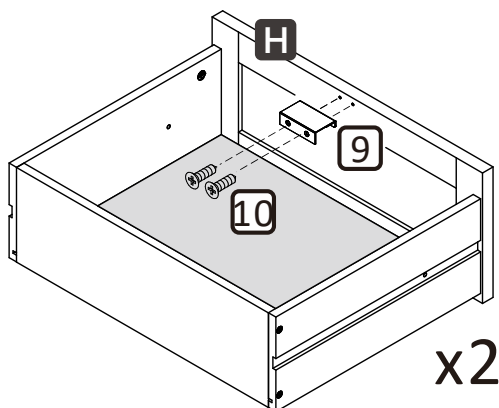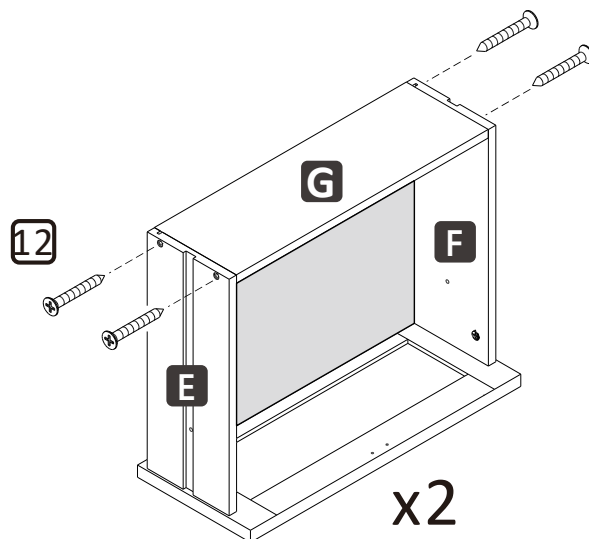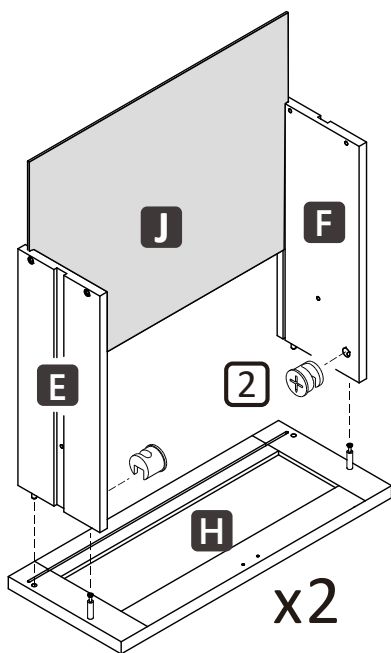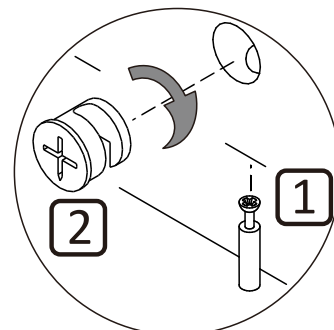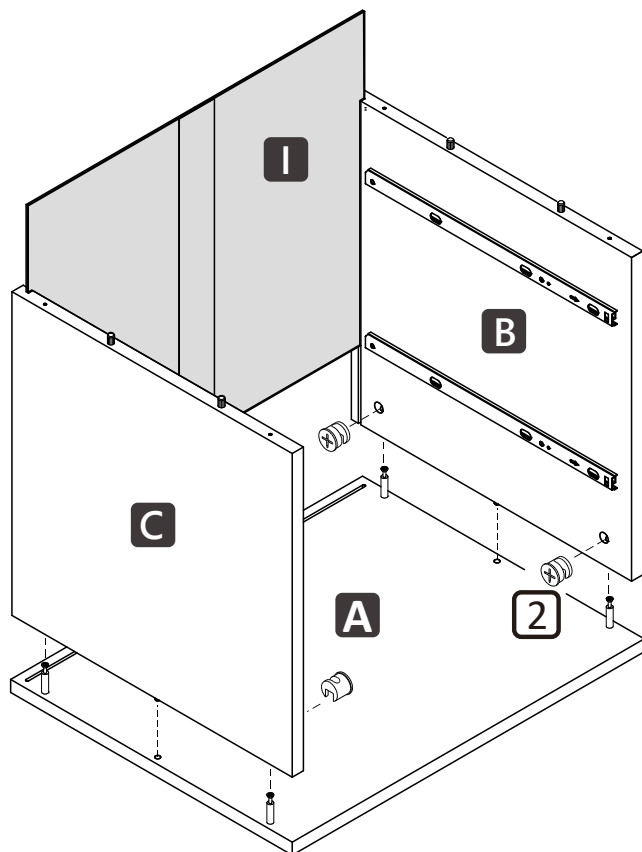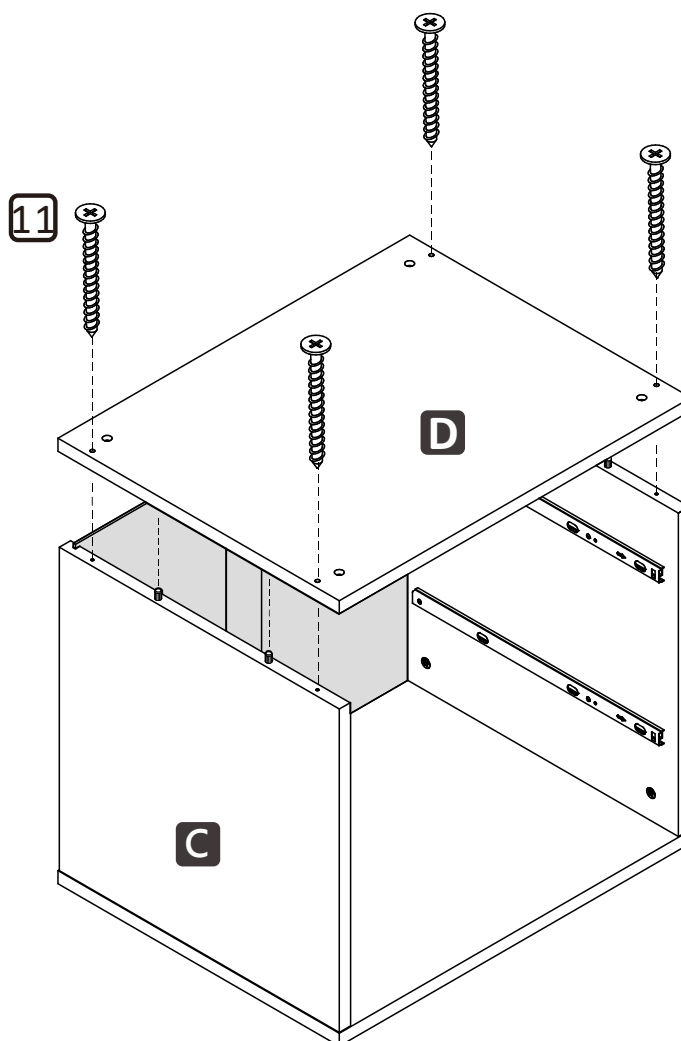10 x4





**STEP-5****2** x4**STEP-6****11** x4

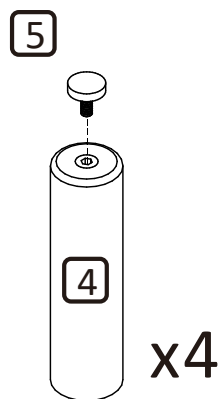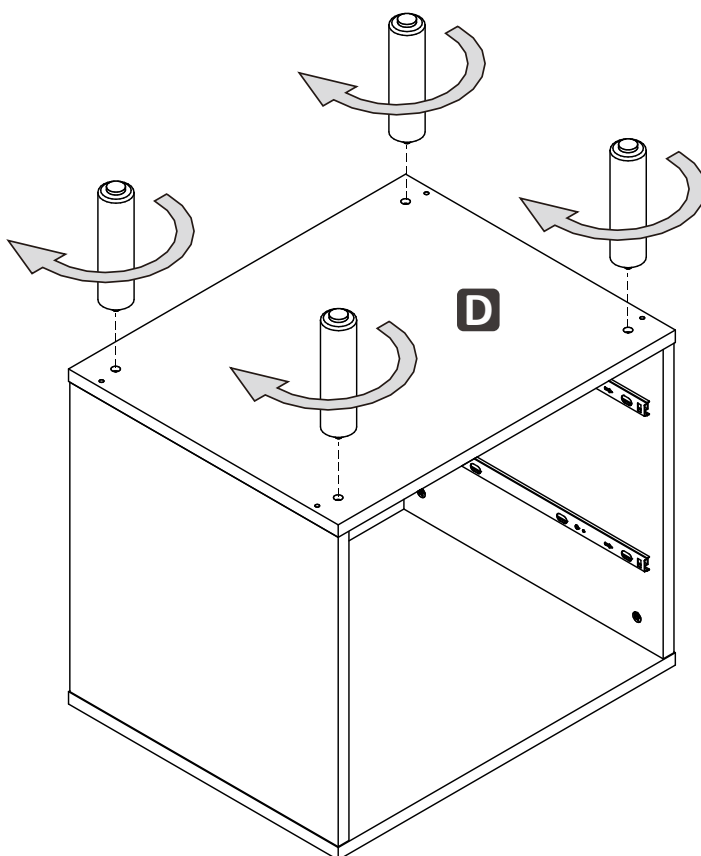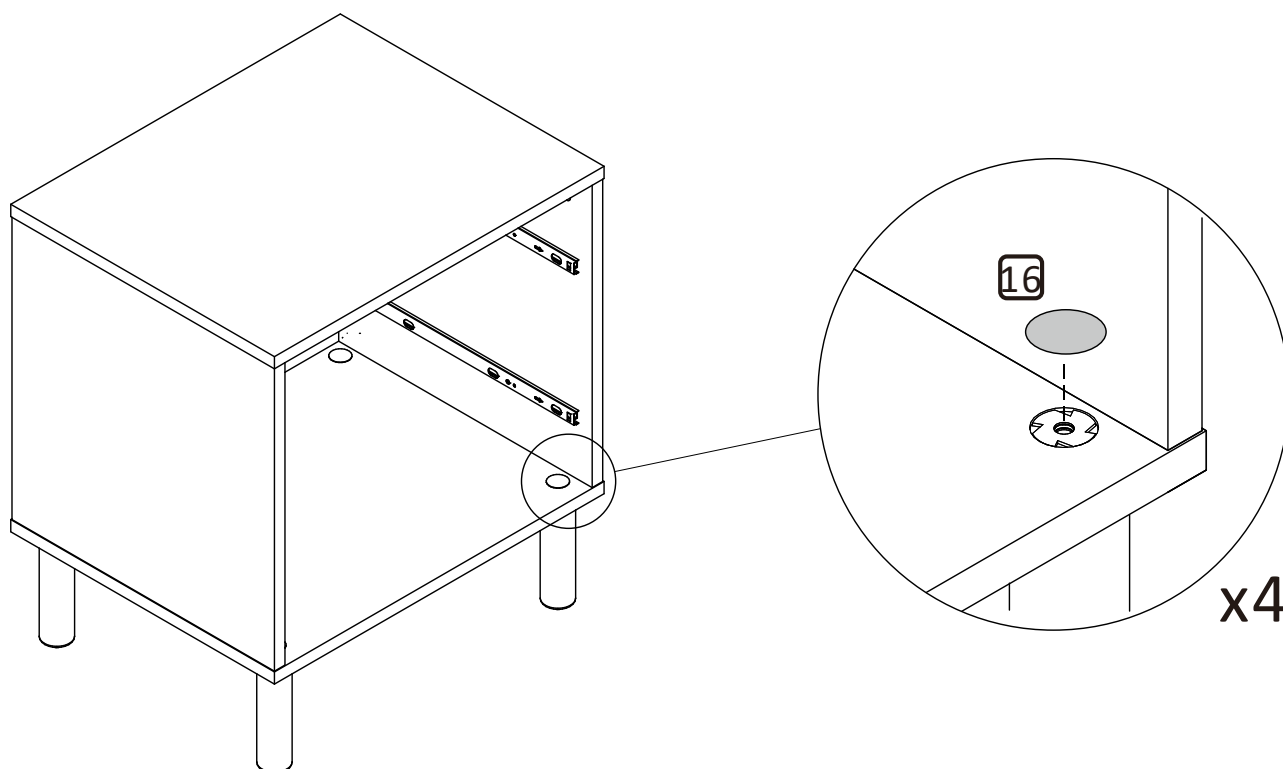**STEP-7****4** x4**5** x4**x4****STEP-8****16** x4**x4**

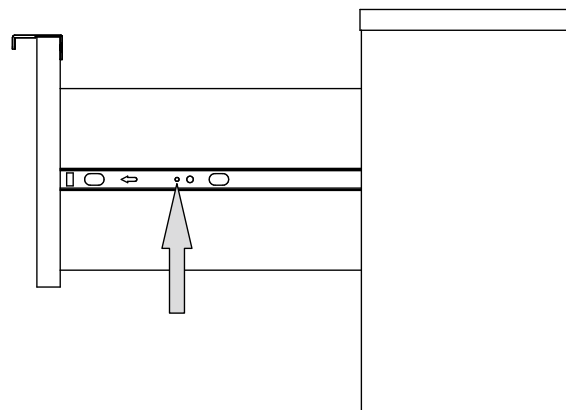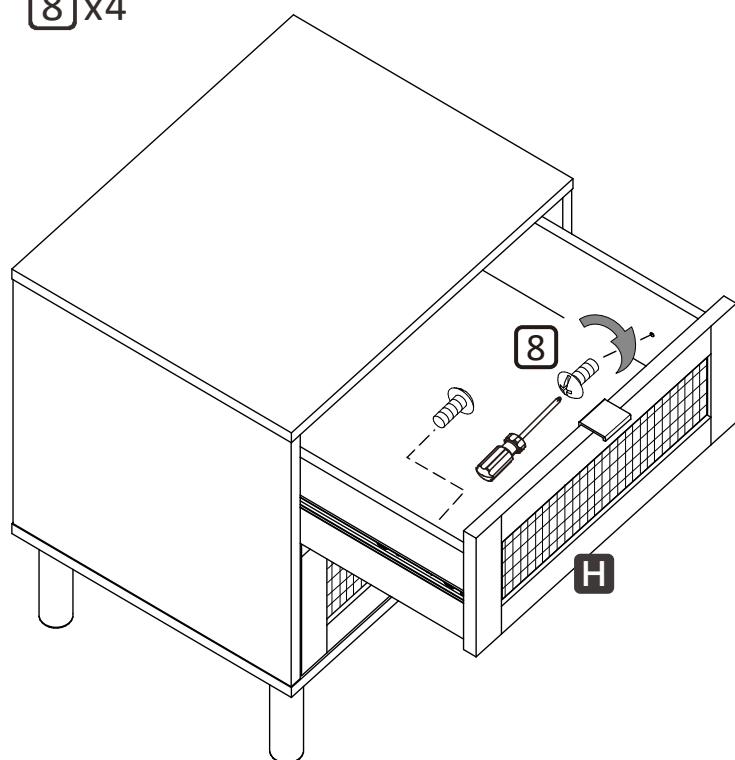**STEP-9****8** x4

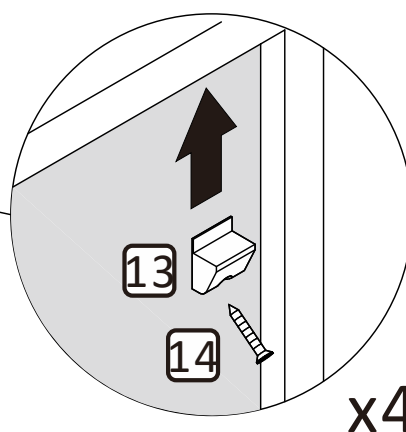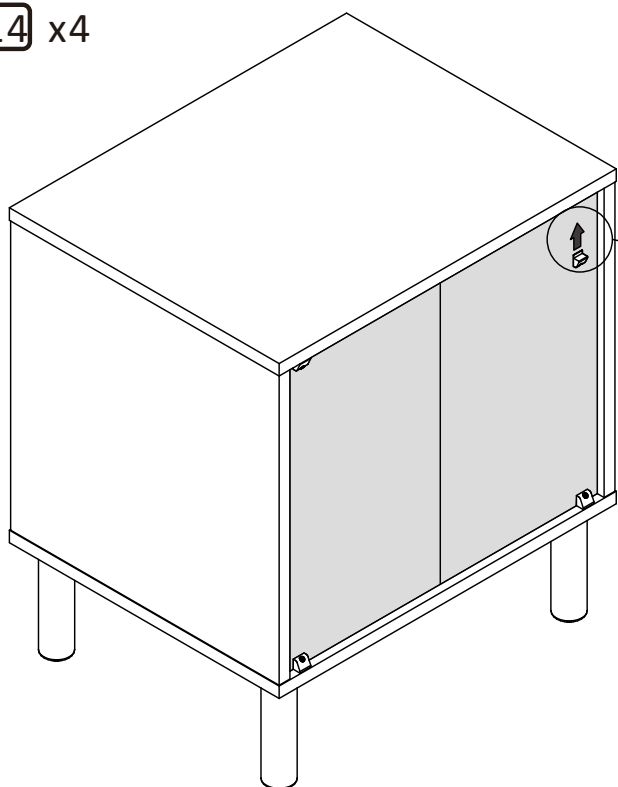Fully extend drawer rails then align the rail's smallest hole to the drawer slide panel's holes. Secure with bolts.

**STEP-10****13** x4**14** x4**x4**

Lock plastic wedge bracket on 4 corners of the back panel.