

Installation Instructions for Vanity Combo



TO ENSURE THAT YOUR INSTALLATION GOES SMOOTHLY, PLEASE READ THESE INSTRUCTIONS THOROUGHLY PRIOR TO STARTING.


WARNING & CAUTION: Failure to follow warnings and cautions could result in serious injury. Do not exceed the maximum load capacity. Do not stand on cabinet. Use cabinet on level ground.

WARNING: Base cabinet supports a maximum weight of 200lbs. Exceeding maximum weight limit will compromise the integrity of the cabinet structure and could cause the cabinet to fail.

CAUTION: Do not hang from the cabinet.



STEP 1 | Vanity Installation

1. Fasten the vanity cabinet to the wall with 2 screws (not included) into wall studs through the back top rail or use toggle bolts if necessary.
2. Pulls are attached to the inside of the vanity. Re-attach so the pulls are visible from the outside of the doors.



STEP 2 | Full Extension Drawer Glide Removal (If Applicable)

1. Open the drawer as far as possible.
2. Identify the plastic spring clips located in both slides.
3. At the same time, press the right slide spring clip downward and the left slide spring clip upward (Fig.#3 & Fig.#4).
4. Once both spring clips are held in the indicated position, pull the drawer straight out.

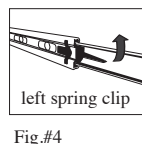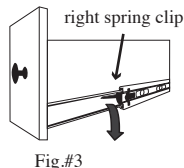


Epoxy Drawer Glide Removal (If Applicable)

1. Open the drawer as far as possible.
2. Lift the front part of the drawer to reach a 30° angle position.
3. Pull the drawer straight out.

STEP 3 | Vanity Top Installation

1. Set the vanity top on top of the vanity base, checking the location of the p-trap and drain.
2. Remove the top and install the faucet per manufacturer's installation instructions.
3. Hand tighten the pop-up drain with a wrench. Be careful not to over-tighten the pop-up drain. Over tightening may cause cracks on the marble top.
4. Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag.
5. Install the faucet, water lines and P-trap according to manufacturer's installation instructions.

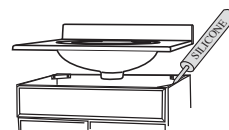

STEP 4 | Full Extension Drawer Glide Installation (If Applicable)


1. Close completely both slides attached to the vanity.
2. Move the component of the slides with ball bearings to the front of the slides, maintaining the slides completely closed.
3. Carefully line up the slides of the drawer box with the slides in the base cabinet and close the drawer all the way to the back.
4. Open the drawer completely to ensure it is properly installed.

Epoxy Drawer Glide Installation (If Applicable)

1. In a 30° angle position, introduce the drawer in the base cabinet making sure the drawer slide wheels are above the vanity slide wheels.
2. Close the drawer completely and to ensure it has been properly installed, open it as far as possible.



STEP 5 | Hinge/Door Adjustment (If Applicable)

The door alignment was set in the factory, but it could have shifted during transit. If adjustment is needed, follow the instructions provided in the adjacent chart.

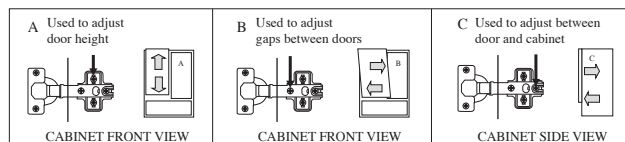

STEP 6 | Drawer Front Adjustment (If Applicable)

1. Remove decorative hardware from the drawer front.
2. Hold drawer front in place and slightly loosen both alignment screws.
3. Move the drawer front left, right, up or down to desired position for alignment.
4. While holding the drawer front in place, tighten the alignment screws securely.
5. Install the decorative hardware to the outside of the drawer front.

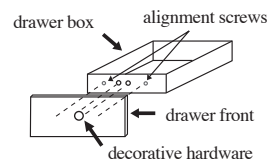

MIRROR INSTALLATION (If Included)

1. Determine the desired location of the mirror. Use appropriate screws or wall anchors (not included) to hang mirror.
2. Be sure the hanging hardware is rated to handle the weight of the mirror. The mirror weight is approximately 20 lbs.

CARE & MAINTENANCE

Vanity- To clean surface of doors or cabinet, use non-abrasive cleaners and or cleaning agents that do not contain solvents.

Vanity Top - Your vanity top will remain in its original state if you maintain and clean it properly. Clean the surface with a glass cleaner or other household cleansers that are non-abrasive. Using abrasive cleansers will damage the surface.

Mirror - Use non-abrasive cleansers only.

For California Customers Only



WARNING: This product can expose you to chemicals including wood dust which is known to State of California to cause cancer. For more information, go to www.P65Warnings.Ca.Gov



WARNING: Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood.

Important Health Notice For Minnesota Residents Only:

Some of the building materials used in this home (or these building materials) emit formaldehyde, eye, nose, and throat irritation, headache, nausea and a variety of asthma-like symptoms, including shortness of breath, have been reported as a result of formaldehyde exposure. Elderly persons and young children, as well as anyone with a history of asthma, allergies, or lung problems, may be at greater risk. Research is continuing on the possible long-term effects of exposure to formaldehyde.

Reduced ventilation may allow formaldehyde and other contaminants to accumulate in the indoor air high indoor temperatures and humidity raise formaldehyde levels. When a home is to be located in areas subject to extreme summer temperatures, an air-conditioning system can be used to control indoor temperature levels. Other means of controlled mechanical ventilation can be used to reduce levels of formaldehyde and other indoor air contaminants.

If you have any questions regarding the health effects of formaldehyde, consult your doctor or local health department.

Instrucciones de instalación para gabinete de baño



PARA ASEGURAR QUE LA INSTALACIÓN DE SUS GABINETES SE LLEVE A CABO CORRECTAMENTE, POR FAVOR LEA ESTAS INSTRUCCIONES MINUCIOSAMENTE ANTES DE COMENZAR.




ADVERTENCIA Y PRECAUCIÓN: No seguir las advertencias puede causar lesiones graves. No exceda la capacidad máxima del mueble. No es para subirse a él. Use un piso nivelado.

ADVERTENCIA: El gabinete soporta un máximo peso de 90.7 kg, exceder este peso comprometerá la integridad de la estructura del gabinete y puede causar que el gabinete se desplome.

PRECAUCIÓN: No se cuelgue del gabinete.

PASO 1 | Instalación del gabinete

1. Utilice el soporte superior trasero del gabinete para fijarlo a la pared con 2 pijas. Atornille sobre los barrotes y si fuera necesario haga uso de taquetes apropiados.
2. Las jaladeras están colocadas en la parte interior del gabinete de baño para evitar que se maltraten durante el transporte. Es necesario que las desatornille y se coloquen por la parte exterior.



PASO 2 | Remover los cajones con correderas de extensión total

1. Abrir el cajón en su totalidad.
2. Localizar las pestañas de plástico ubicadas en ambos rieles del cajón.
3. Al mismo tiempo, empujar la pestaña del riel derecho hacia abajo y la pestaña del riel izquierdo hacia arriba (Fig.#3 & Fig.#4).
4. Una vez teniendo ambas pestañas en la posición indicada, tirar el cajón hacia afuera.

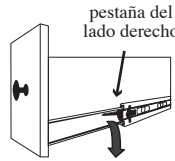


Fig.#3




Fig.#4

Instalar correderas epóxicas (Si aplica)

1. En una posición con ángulo de 30°, introducir el cajón en el gabinete asegurándose que las ruedas de los rieles del cajón pasen sobre las ruedas de los rieles del gabinete.
2. Cierre el cajón completamente y para asegurar que ha sido instalado correctamente, abra el cajón en su totalidad.

PASO 3 | Instalación del lavabo

1. Coloque el lavabo sobre la base del gabinete verificando la ubicación correcta de la trampa y el drenaje.
2. Remueva el lavabo e instale las llaves de acuerdo con las instrucciones de instalación del fabricante.
3. Ajuste manualmente el tubo del drenaje con una llave apropiada. Tenga cuidado de no sobre apretar el tubo del drenaje pues ello puede ocasionar quebraduras en el lavabo.
4. Aplique una capa delgada de silicona alrededor de la base del gabinete y coloque cuidadosamente el lavabo. Remueva cualquier exceso del compuesto sellador con un trapo húmedo.
5. Instale la llave, las líneas de agua y la trampa en P de acuerdo con las instrucciones de instalación de los fabricantes.

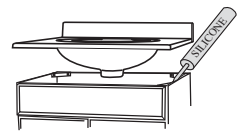

PASO 4 | Instalar los cajones con correderas de extensión total (Si aplica)


1. Cerrar completamente ambos rieles sujetos al gabinete.
2. Mover la placa interior con balines hacia el frente de ambos rieles manteniendo el riel completamente cerrado.
3. Cuidadosamente alinear los rieles sujetos al cajón con los rieles sujetos al gabinete e introducir el cajón hasta cerrarlo por completo.
4. Abrir el cajón completamente para asegurarse que el cajón ha sido instalado correctamente.

Instalar correderas epóxicas (Si aplica)

1. En una posición con ángulo de 30°, introducir el cajón en el gabinete asegurándose que las ruedas de los rieles del cajón pasen sobre las ruedas de los rieles del gabinete.
2. Cierre el cajón completamente y para asegurar que ha sido instalado correctamente, abra el cajón en su totalidad.


PASO 5 | Ajuste de puerta/Bisagra (Si aplica)

Las puertas están alineadas de fábrica, pero pudieron haberse desalineado en el envío. Si es necesario alinearlas, recomendamos ajustar las puertas según se muestra en el siguiente diagrama.

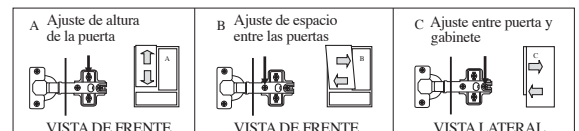

PASO 6 | Ajuste de frentes de cajón (Si aplica)

1. Remueva el herraje decorativo del frente del cajón.
2. Sostenga el frente del cajón en su lugar y afloje un poco los tornillos.
3. Mueva el frente hacia la izquierda, derecha, hacia arriba o abajo hasta lograr la posición deseada.
4. Sosteniendo el frente del cajón en su lugar, apriete los tornillos.
5. Instale el herraje decorativo por el frente del cajón.

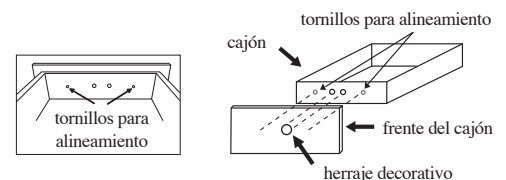

INSTALACIÓN DEL ESPEJO (Si está incluido)

1. Determine donde desea colocar el espejo. Fijelo usando dos clavos o tornillos y taquetes apropiados (no incluidos) para colgar el espejo.
2. Asegúrese que el herraje que use para colgar sea recomendado para el peso del espejo. Aproximadamente 9 kilos.

CUIDADO Y LIMPIEZA

Gabinete - Para limpiar la superficie del gabinete o las puertas, use un trapo limpio y seco y limpie toda la superficie. No usar limpiadores abrasivos.

Lavabo - Su lavabo permanecerá en su estado original si lo mantiene y limpia correctamente. Limpie la superficie con limpiador de vidrios o cualquier otro limpiador que no sea abrasivo. Usar limpiadores abrasivos pueden dañar la superficie del lavabo.

Espejo - No usar limpiadores abrasivos.

Para Clientes de California Únicamente



ADVERTENCIA: Taladrar, serruchar, lijar o procesar a máquina artículos de madera puede exponerte al aserrín, que el estado de California reconoce como causante de cáncer. Evita inhalar aserrín o usa una mascarilla antipolvo u otros medios de protección personal. Para más información, visita www.P65warnings.ca.gov/wood



ADVERTENCIA: Este producto puede exponerlo a sustancias químicas, incluyendo aserrín, que el estado de California reconoce como causante de cáncer. Para más información, visita www.P65warnings.Ca.Gov