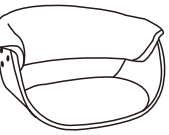
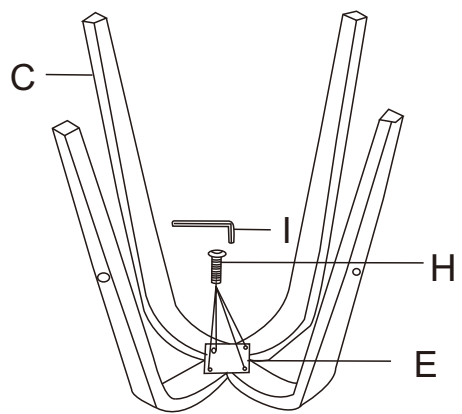
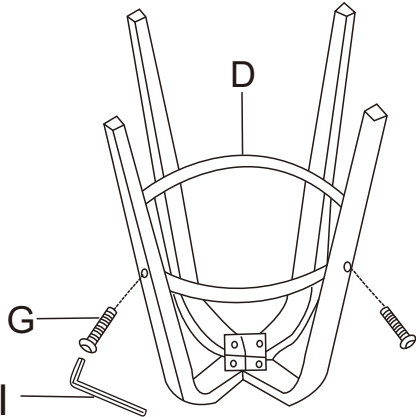
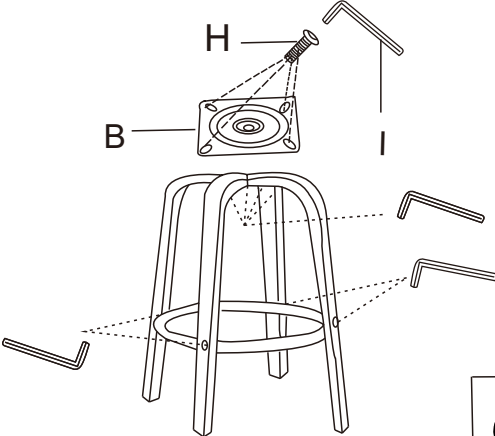
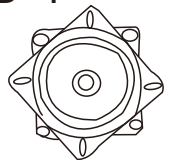

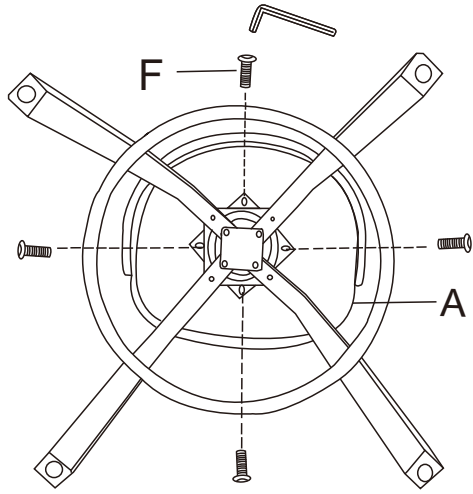
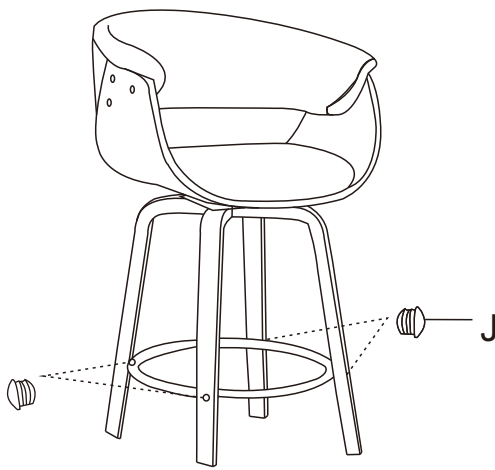
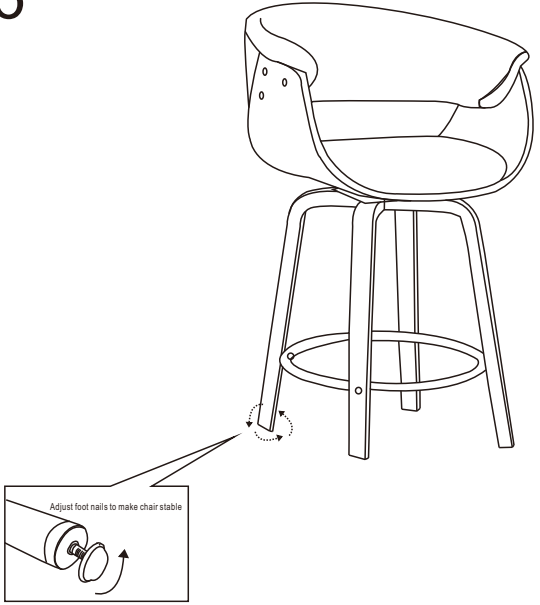
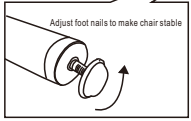



Please check that all fittings are available and in good condition before assembly

If you have any questions, please contact us, we will solve your problem in the

EMAIL: longebe@163.com

A*1 	G*4  M6*30MM	1 Tighten the screws to 50%  	2 Tighten the screws to 50%  	3 Tighten the screws to 100%  
B*1 	H*8  M6*25MM			
C*4 	I*1 			
D*1 	J*4 	4 	5 	6  
E*1 				
F*4  M6*20MM				