


ASSEMBLY INSTRUCTION
ITEM:N715P196579
CONSOLE TABLE

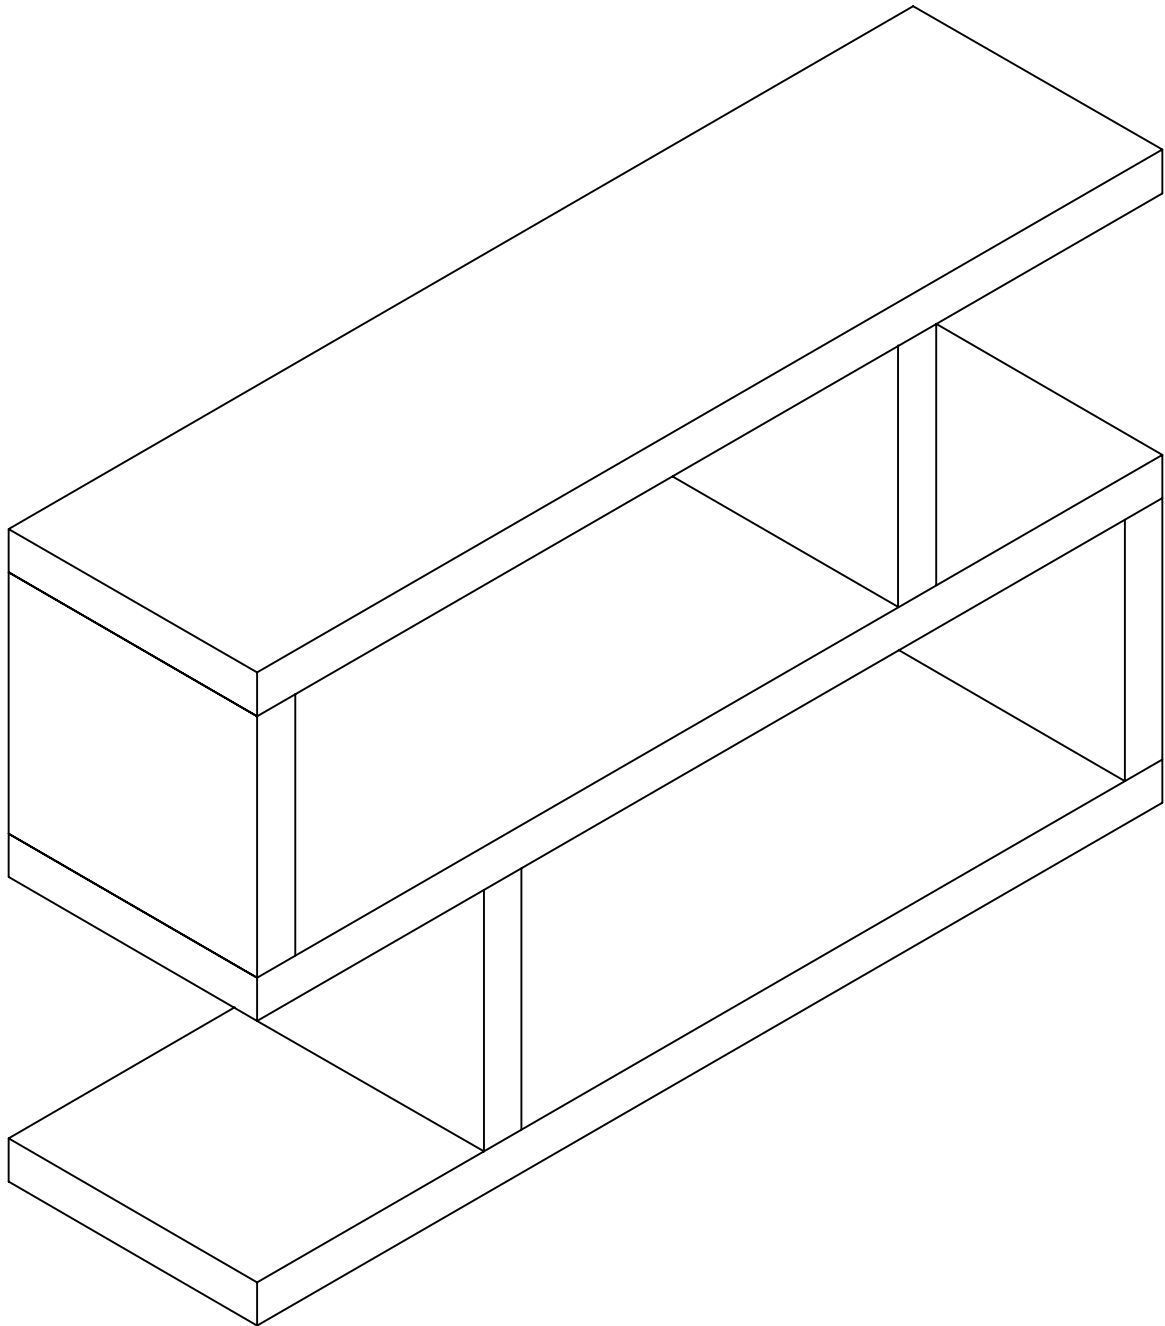

ASSEMBLY INSTRUCTION

ITEM:N715P196579

Please read these instructions fully before starting assembly :

Tools required: Phillips screwdriver(medium & large)


- 1.Check you have all the components and tools listed on the following pages.
- 2.Remove all fittings from the plastic bags and separate them into their groups.
- 3.Keep children and animals away from the work area, small parts could choke if swallowed.
- 4.Make sure you have enough space to layout the parts before starting.
- 5.During assembly do not stand or put weight on the product, this could cause damage.
- 6.Assemble the item as close to its final position (in the same room) as possible.
- 7.Assemble on a soft level surface to avoid damaging the unit or your floor.
- 8.Parts of the assembly will be easier with 2 people.
- 9.To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
- 10.Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- 11.Regularly check and ensure That all bolts and fittings are tightend properly.
- 12.Please do not place items that exceed the load capacity.

Care and maintenance

Only clean using a damp cloth and mild detergent,
do no use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM:N715P196579






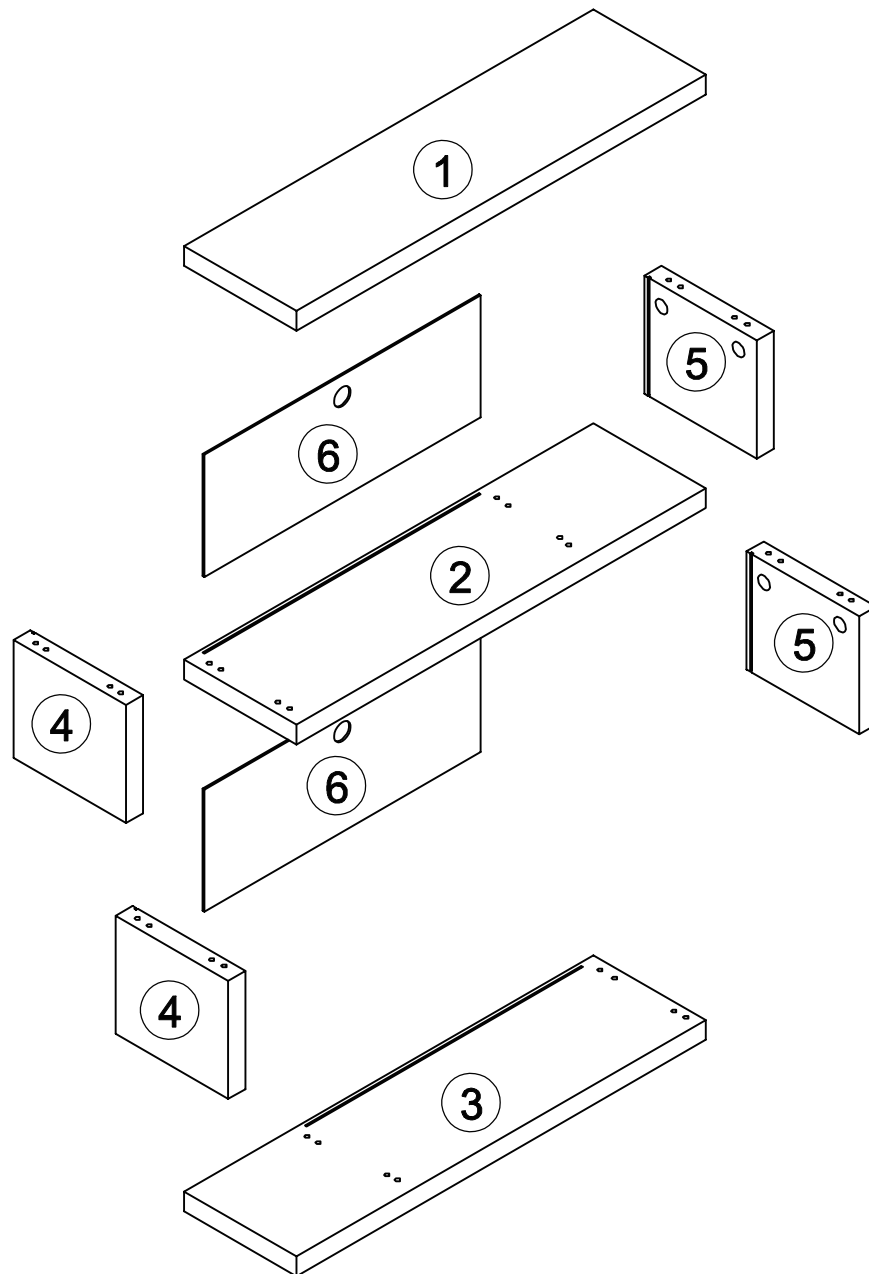


Part List

ITEM:N715P196579

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

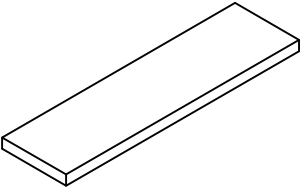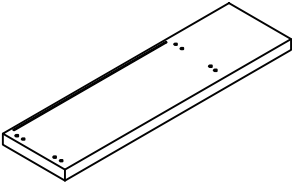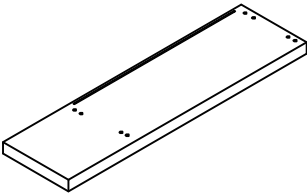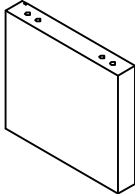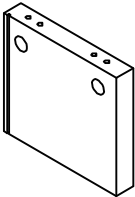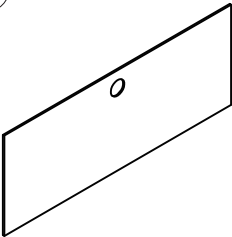







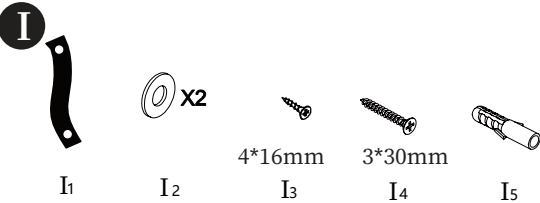
<div>①</div> <div></div> <div>Top Panel1 PC</div>	<div>②</div> <div></div> <div>Medial Panel1 PC</div>	<div>③</div> <div></div> <div>Bottom Panel1 PC</div>	<div>④</div> <div></div> <div>Left Panel2 PCS</div>
<div>⑤</div> <div></div> <div>Right Panel2 PCS</div>	<div>⑥</div> <div></div> <div>Rear pane2 PCS</div>		

Hardware list

ITEM:N715P196579

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>A</p>  <p>6*35mm Male Camlock x 8</p>	<p>B</p>  <p>Female Camlock x 8</p>	<p>C</p>  <p>Dowel x 16</p>	<p>D</p>  <p>4*80mm Screw x 8</p>
<p>E</p>  <p>E x 1</p>	<p>F</p>  <p>Foot Peg x 4</p>	<p>G</p>  <p>Backplane Buckle x 8</p>	<p>H</p>  <p>3*14mm Screw x 8</p>
<p>I</p>  <p>I₁ I₂ I₃ I₄ I₅</p> <p>Wall Fixing Pack x 2</p>			


ASSEMBLY INSTRUCTION

ITEM:N715P196579

Step 1

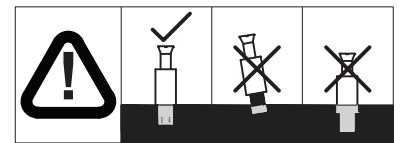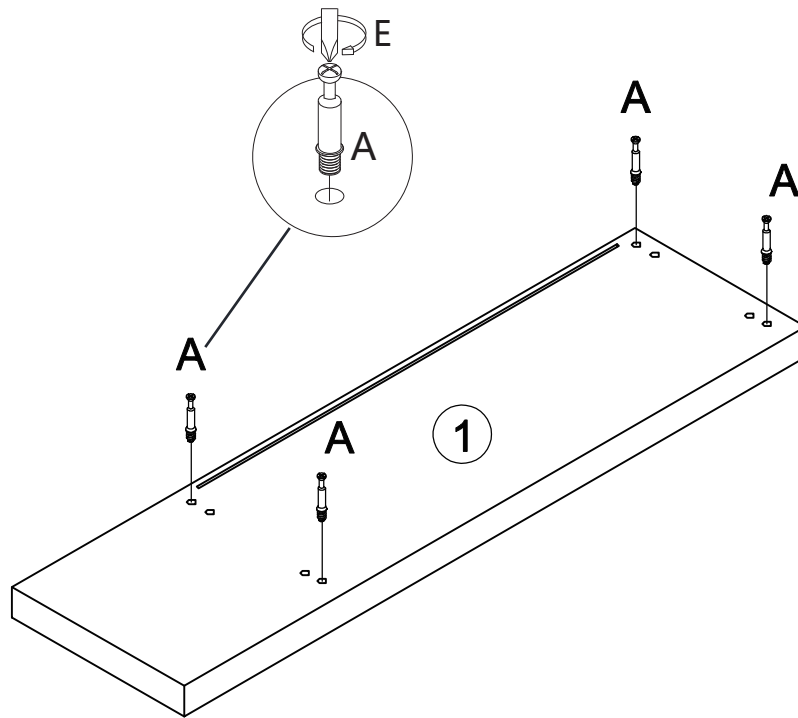

Step 2


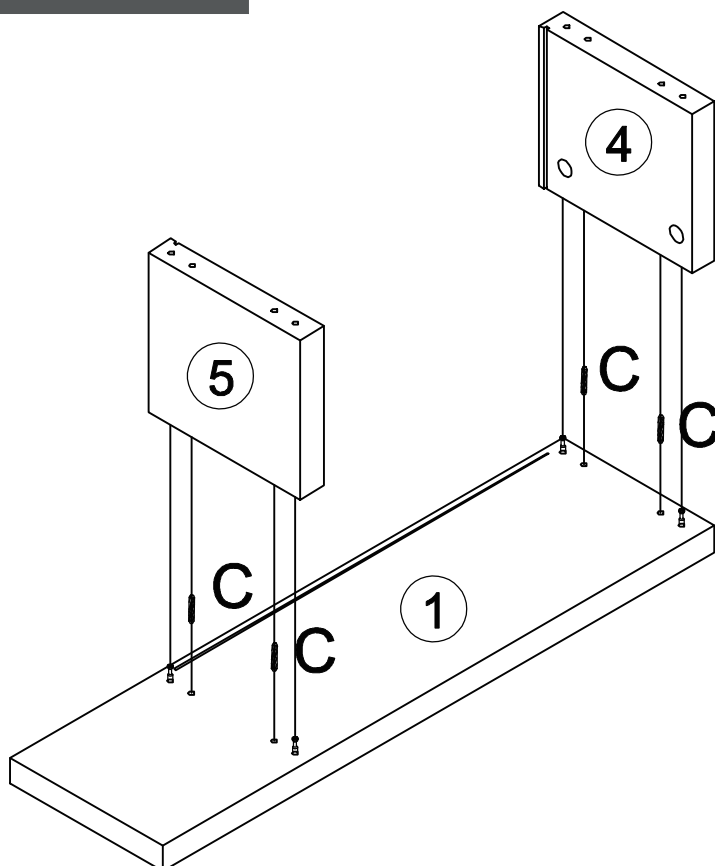


ASSEMBLY INSTRUCTION

ITEM:N715P196579


Step 3

B 
B x 4

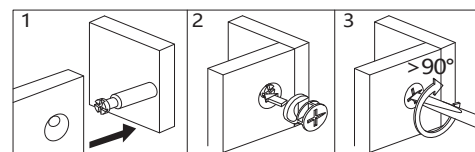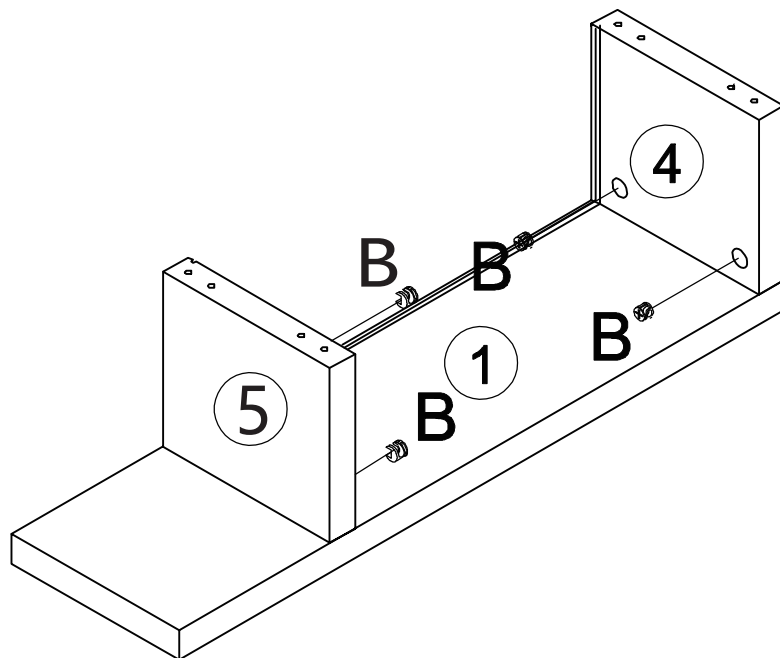

Step 4


C 
C x 4

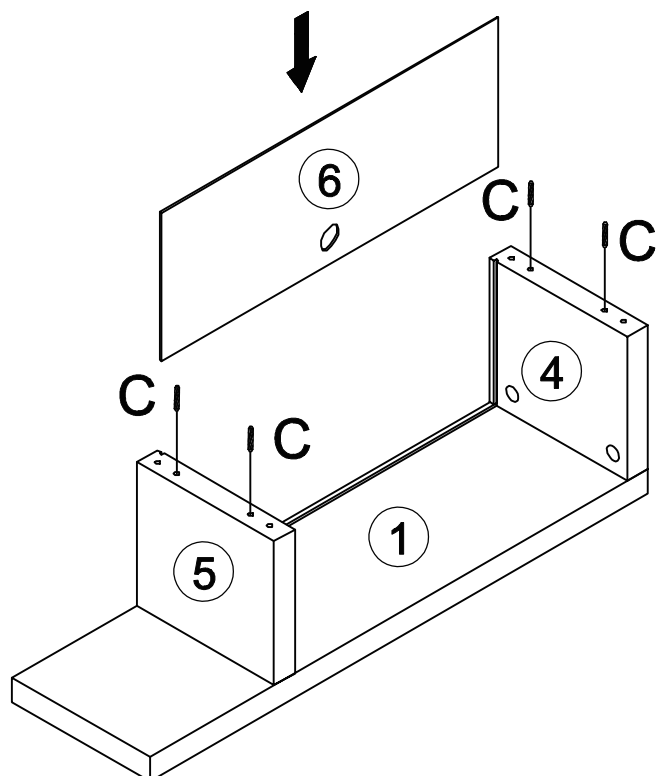

ASSEMBLY INSTRUCTION


ITEM:N715P196579

Step 5

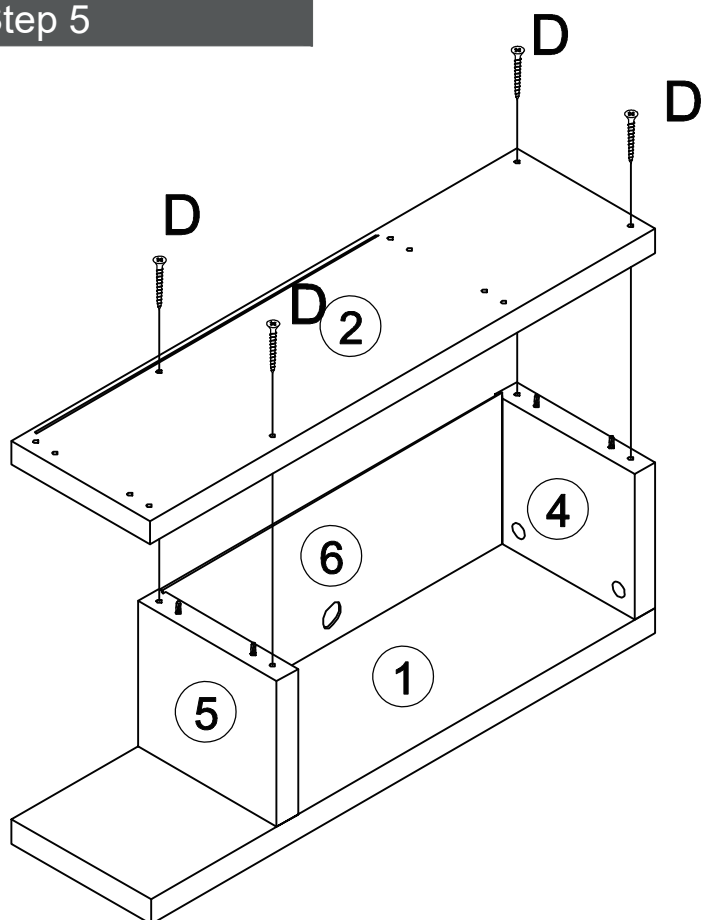

D x 4

Step 6

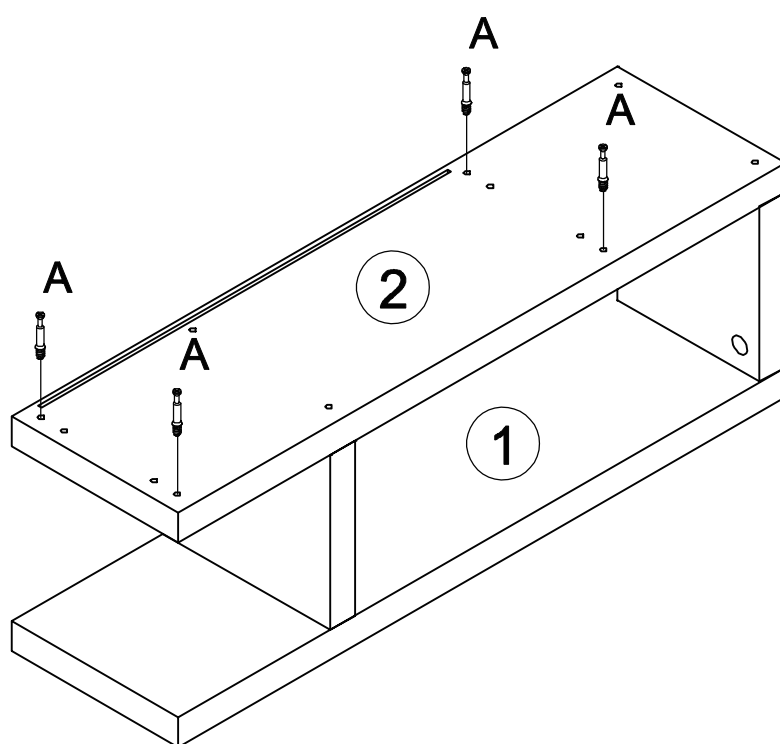


A x 4

ASSEMBLY INSTRUCTION


ITEM:N715P196579

Step 7

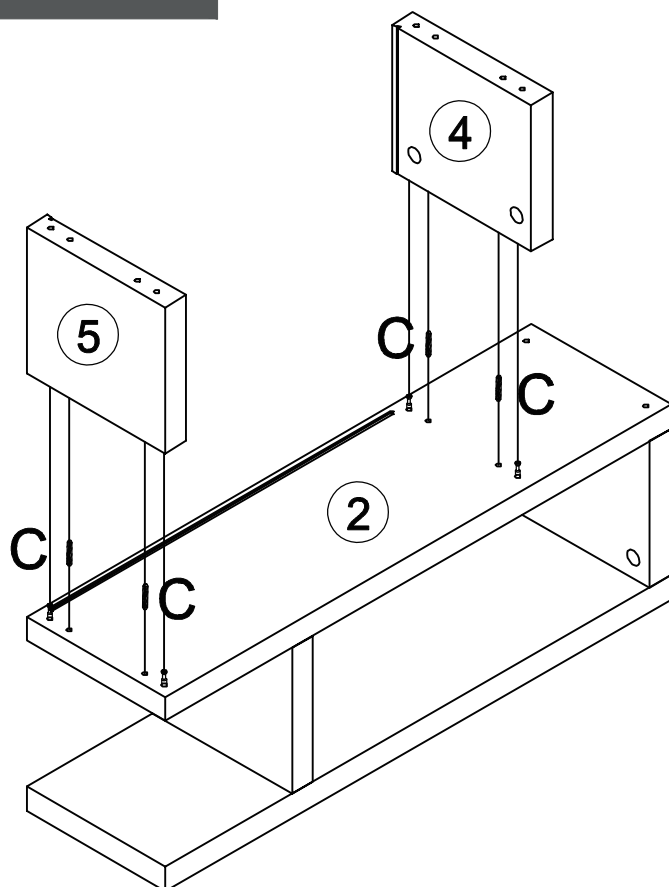

C 
C x 4

Step 8

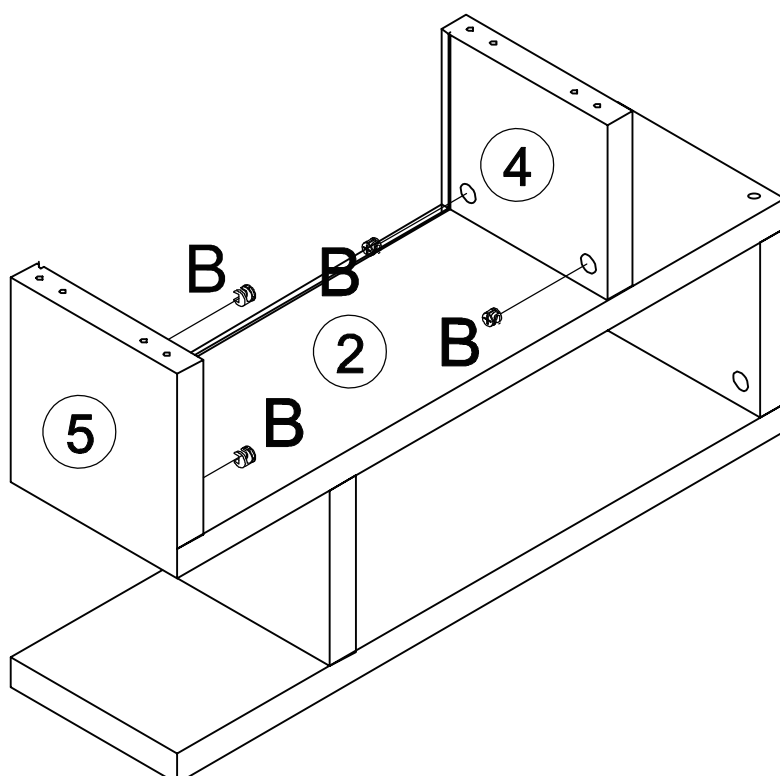


B 
B x 4


ASSEMBLY INSTRUCTION

ITEM:N715P196579

Step 9

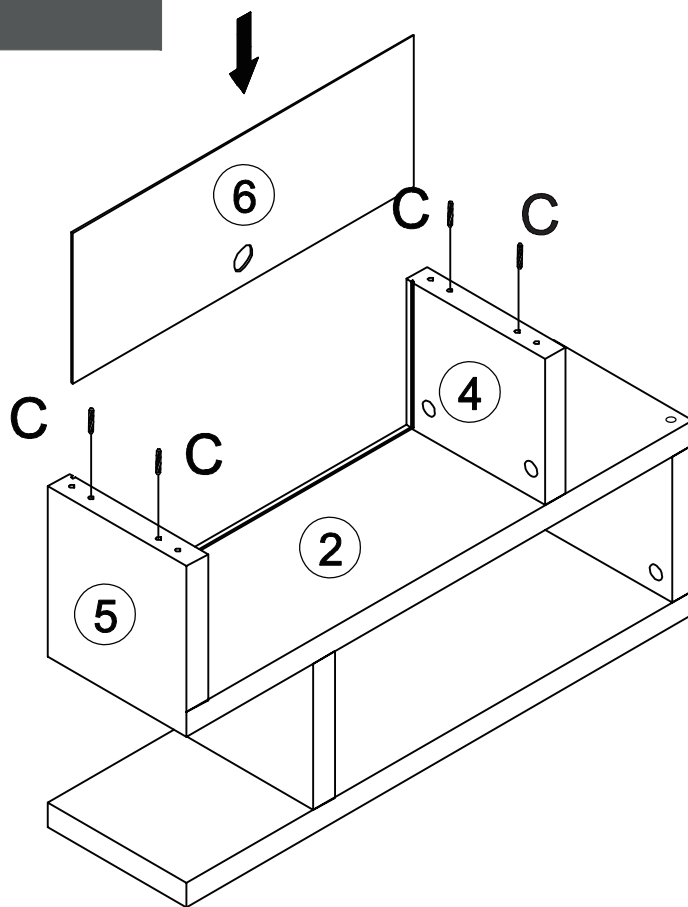




Step 10

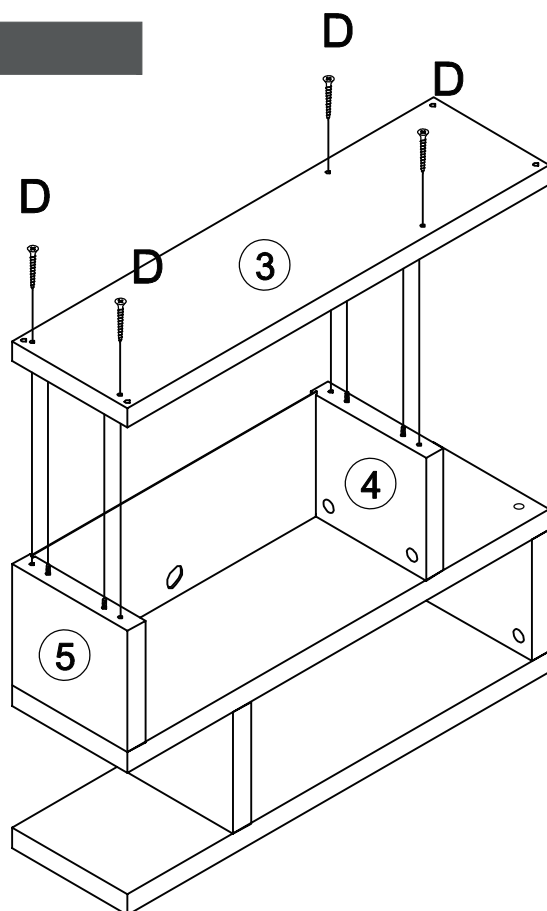



ASSEMBLY INSTRUCTION

ITEM:N715P196579

Step 11

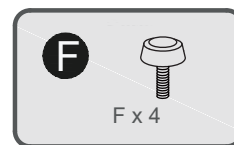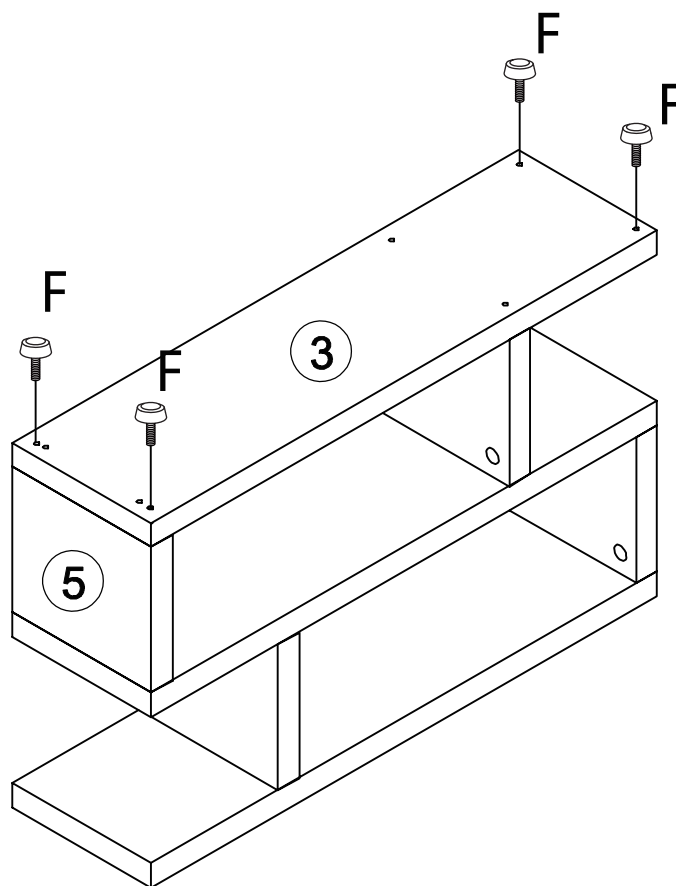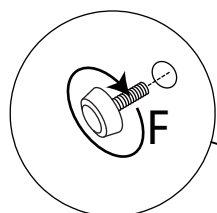

Step 12

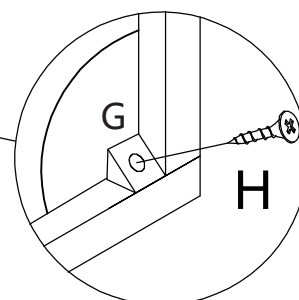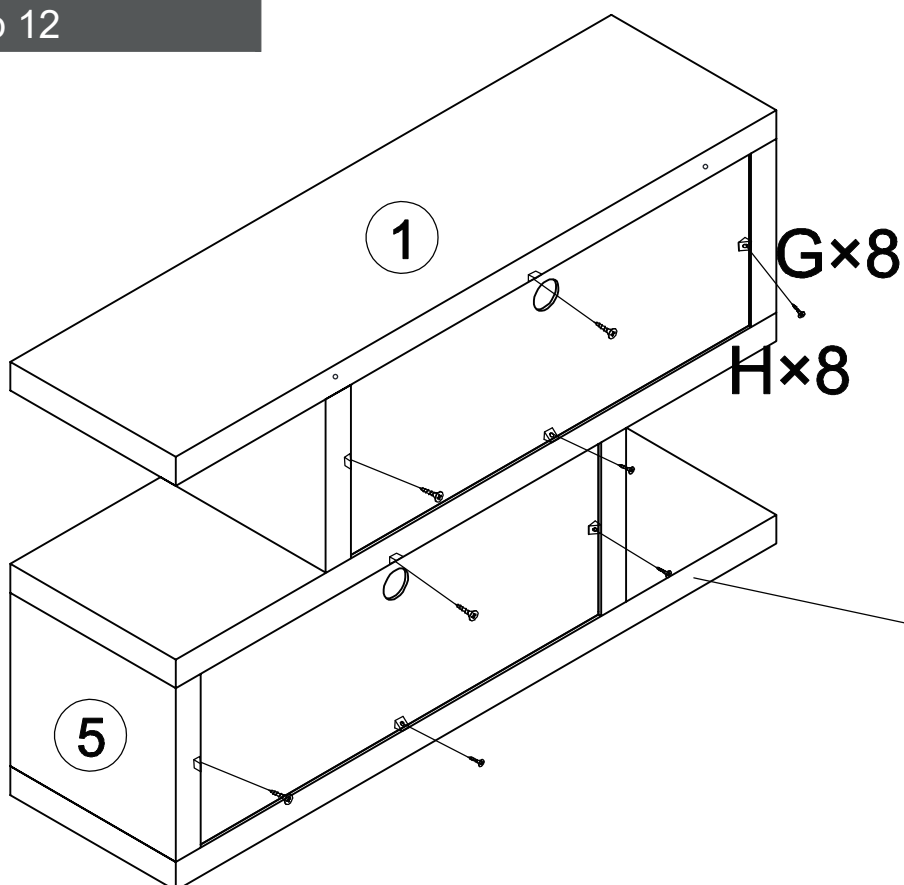

ASSEMBLY INSTRUCTION

ITEM:N715P196579

Step 13

