


ASSEMBLY INSTRUCTIONS

ELLEN CORNER DEK

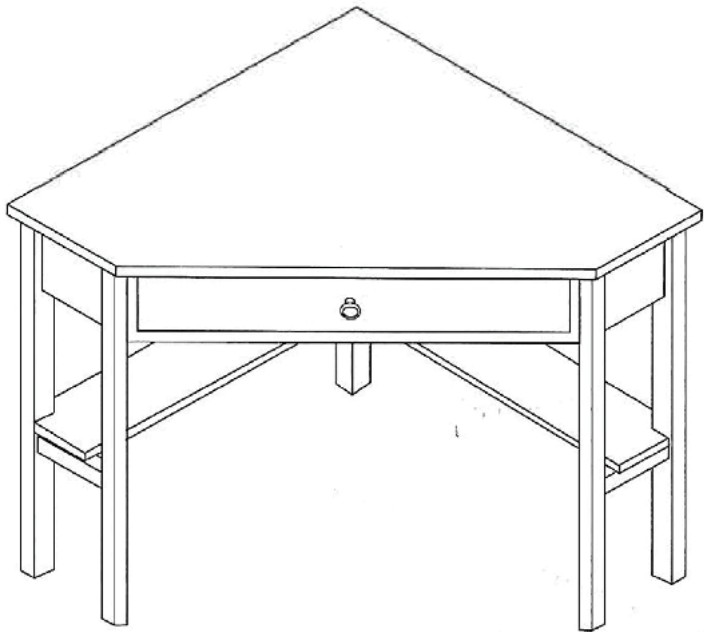

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

90 Minutes



Assembly Time
(Approximate)



2-Person
Assembly

ASSEMBLY REQUIREMENTS

Tools Required:
(Not Provided)



ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

This product is for indoor and household use only - not for commercial or industrial use.

ASSEMBLY INSTRUCTIONS

ELLEN CORNER DESK













TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat, stable surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.
9. This product is made of reinforced hollow board. Excessive pressure can cause irreparable damage. Avoid standing or kneeling on any parts of the product during assembly.

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and pull your furniture.

HARDWARE LIST



ITEM	DESCRIPTION	PART	QTY
A	Wooden Dowel (ϕ 8*30mm)		14PC
B	Screw (ϕ 4*25mm)		12PC
C	Flat washer (ϕ 12*1mm)		22PC
D	Cam lock (ϕ 15*12mm)		2PC
E	Camlock Bolt (ϕ 6*65mm)		1PC
F	Bolt (ϕ 7*30mm)		22PC
G	Handle (ϕ 25*20mm)		1PC
H	Handle bolt (ϕ 4*22mm)		1PC
I	Plastic drawer glide		1PC
J	Screw (ϕ 3*12mm)		4PC
K	Allen Key 65*25mm		1PC
L	Glue		1PC

ASSEMBLY INSTRUCTIONS











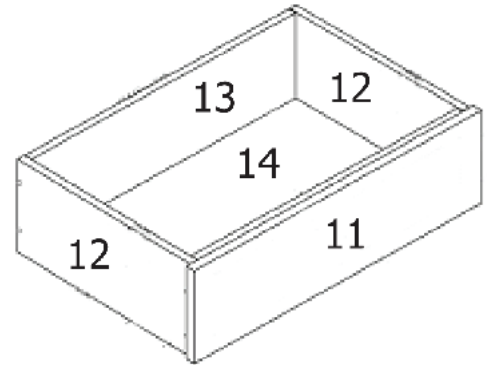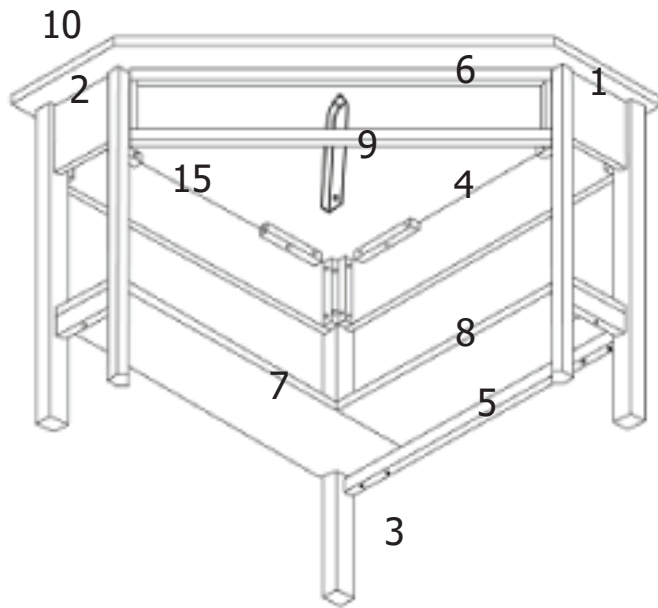




ELLEN CORNER DESK

Parts List

Assembly Overview




PARTS LIST

ITEM	DESCRIPTION	PART	QTY
1	Right side frame (747*260*49mm)		1PC
2	Left side frame (747*260*49mm)		1PC
3	Leg (747*40*40mm)		1PC
4	Right Apron (656*149*33mm)		1PC
5	Cross bar (656*30*20mm)		1PC
6	Front frame (642*149*28mm)		1PC
7	Long shelf (732*160*15mm)		1PC
8	Short shelf (572*160*15mm)		1PC
9	Wooden drawer glide (300*30*27mm)		1PC
10	Top panel (754*754*15mm)		1PC
11	Drawer frontpanel (612*119*24mm)		1PC
12	Drawer side wall (310*95*12mm)		2PCS
13	Drawer back panel (574*95*12mm)		1PC
14	Drawer bottom panel (297*585*3mm)		1PC
15	Left Apron (656*149*33mm)		1PC

ASSEMBLY INSTRUCTIONS


ELLEN CORNER DESK

STEP 1

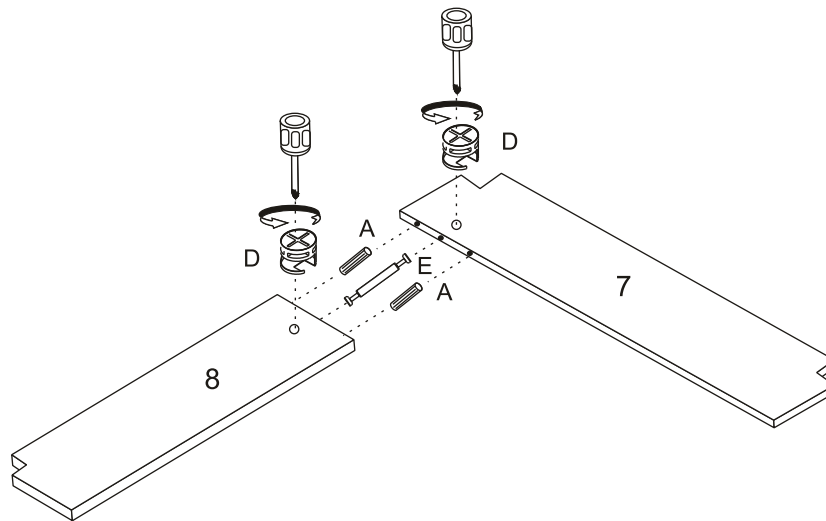


- Position Long Shelf (7) and Short Shelf (8) as shown.
- Apply a small amount of glue into the designated holes for Wood Dowel (A) on (7) and insert Wood Dowel (A).
- Insert double-headed Cam-bolt (E) into the designated hole between the Wood Dowels. Insert (E) until the bolt head is in the center of the hole (see Diagram A)
- Insert Cam-lock with the "arrow" in-line with the Cam-bolt. (See Diagram B. Next, use a Flat-head Screwdriver to turn Cam-lock clockwise for a quarter turn (90 degree) to hold the Cam-bolt head in place. Do not tighten Cam-lock completely at this time
- Attach (8) to (7) via the Wood Dowels and Cam-bolt installed on (7).
- Check for Cam-bolt head to be in center of hole on Panel 8. Install Cam-lock as in step d) above.
- Tighten Cam-lock by turning clockwise another quarter to a half-turn (until Cam-lock is snug.) Do not over-tighten. Over-tightening could damage Cam-lock or/and Cam-bolt

Diagram A

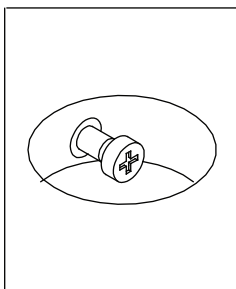

Cam-bolt head needs to be in center

Diagram B

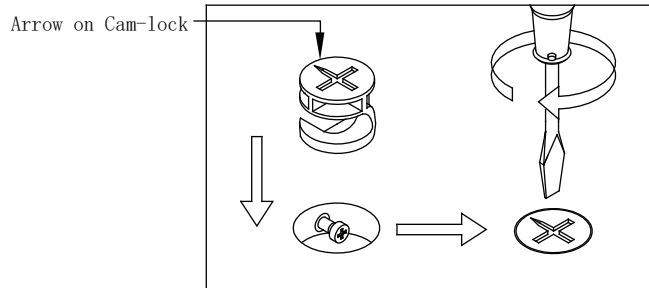


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock.

Use a Flat-head Screwdriver to turn the Cam-lock clockwise one half a turn so it locks onto the head of the Cam-lock. Turn only until it is snug. Over-tightening could damage Cam-lock or/and Cam-bolt

ASSEMBLY INSTRUCTIONS


ELLEN CORNER DESK

STEP 2

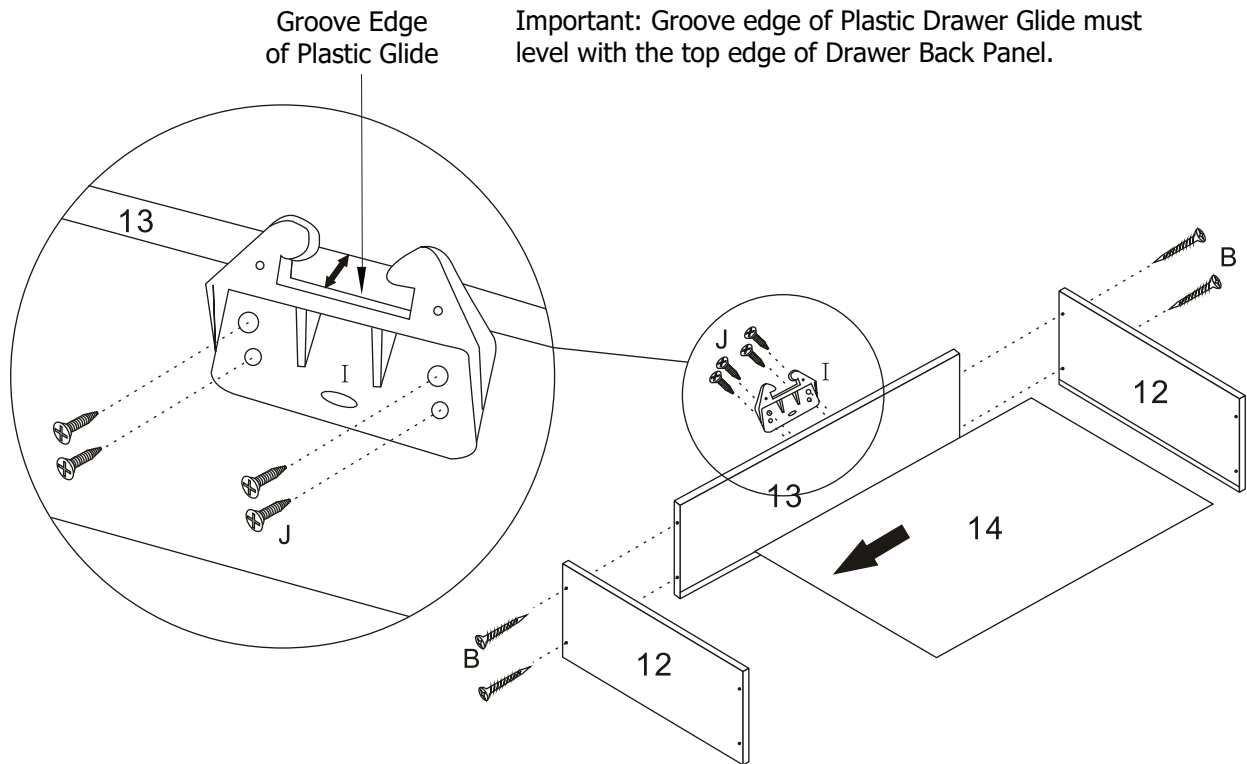

- Fasten Drawer Plastic Glide (I) to Drawer Back Panel (13) with Screw (J).
(Important: Fasten TOP two screws first, and then BOTTOM two screws.)
- Assemble Drawer Side Walls (12), Drawer Back Panel (13) and Drawer Bottom Panel (14) by using screw (B).
Tighten all screws completely.

STEP 3

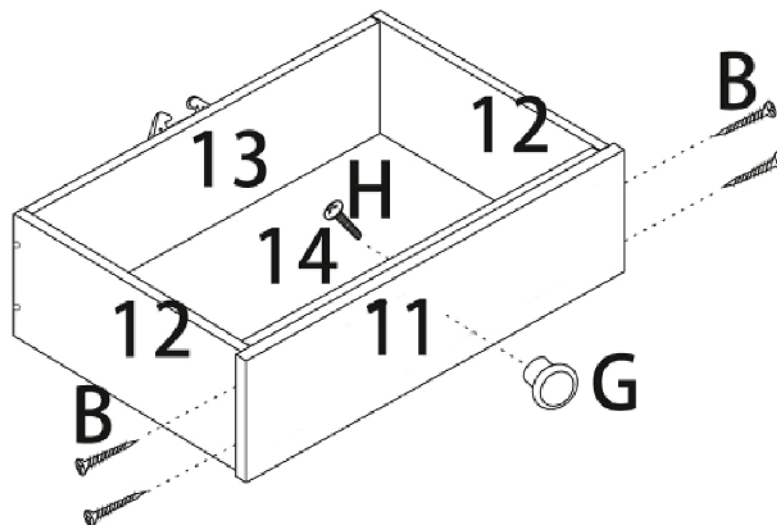


Assemble Drawer Front Panel (11) to drawer by using Screw (B). Attach Handle (G) to (11) by using Handle Bolt (H). Tighten all of the bolts and screws completely.

ASSEMBLY INSTRUCTIONS


ELLEN CORNER DESK

STEP 4 DO NOT TIGHTEN SCREWS & BOLTS COMPLETELY UNTIL STEP 11

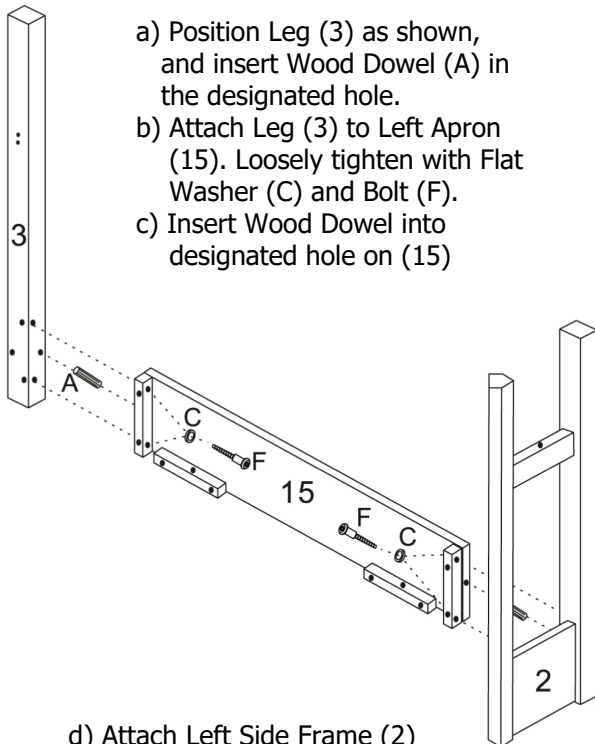

d) Attach Left Side Frame (2) to (15). Loosely tighten with Flat Washer (C) and Bolt (F)


STEP 5 DO NOT TIGHTEN SCREWS & BOLTS COMPLETELY UNTIL STEP 11

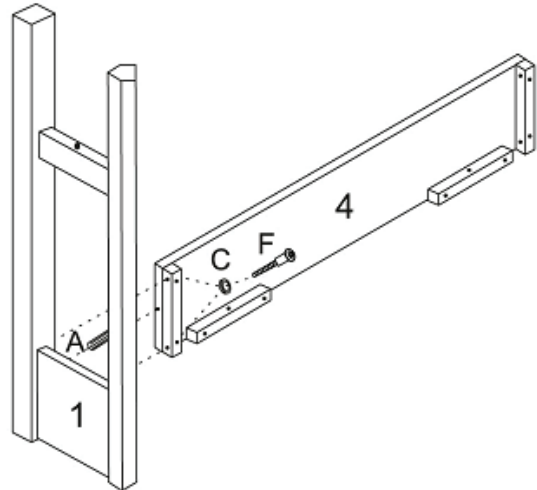

Connect Right Side Frame (1) to Right Apron (4) by using Bolt (F) and Washer (C)


STEP 6 DO NOT TIGHTEN SCREWS & BOLTS COMPLETELY UNTIL STEP 11

- 6b) Insert Wood Dowel to Right Side Frame (1)
- 6c) Attach Cross Bar (5) to (1) and fasten with Screw (B)

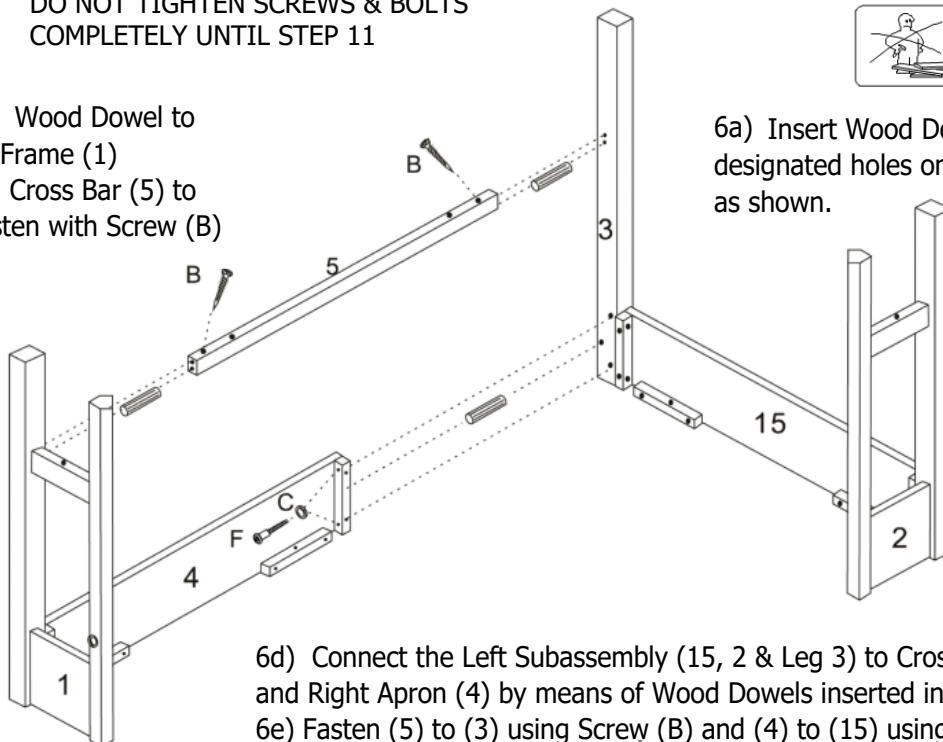

6a) Insert Wood Dowel (A) to designated holes on Leg (3) as shown.

6d) Connect the Left Subassembly (15, 2 & Leg 3) to Cross Bar (5) and Right Apron (4) by means of Wood Dowels inserted in Step 6a.
6e) Fasten (5) to (3) using Screw (B) and (4) to (15) using Bolt (F) and Washer (C).




ASSEMBLY INSTRUCTIONS

ELLEN CORNER DESK

STEP 7



DO NOT TIGHTEN SCREWS & BOLTS COMPLETELY UNTIL STEP 11

Install Front Frame (6) between Right Side Frame and Left Side Frame using Bolt (F) and Washer (C).

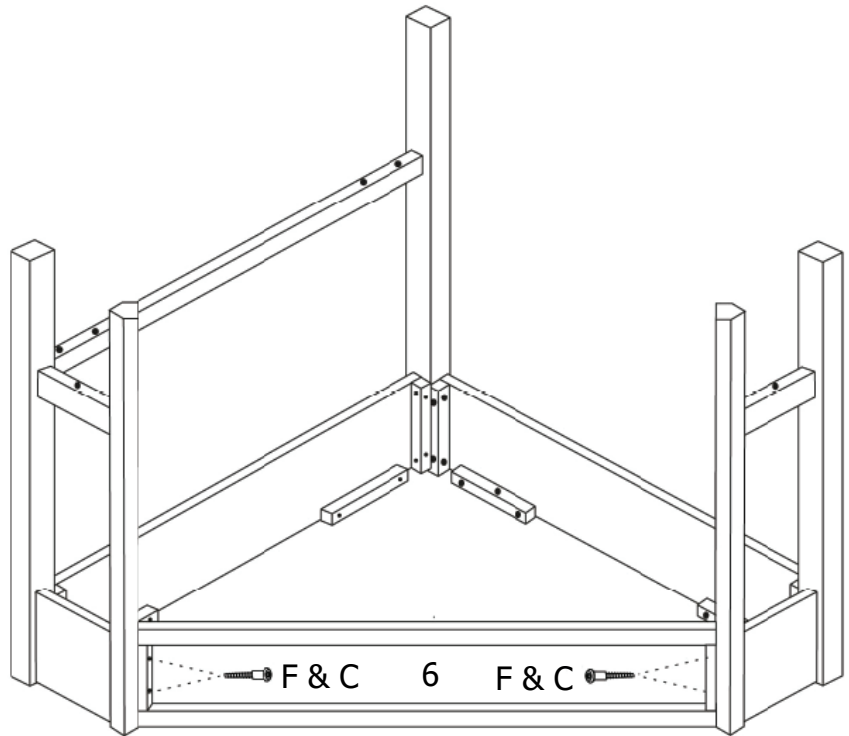

STEP 8

DO NOT TIGHTEN SCREWS & BOLTS COMPLETELY UNTIL STEP 11

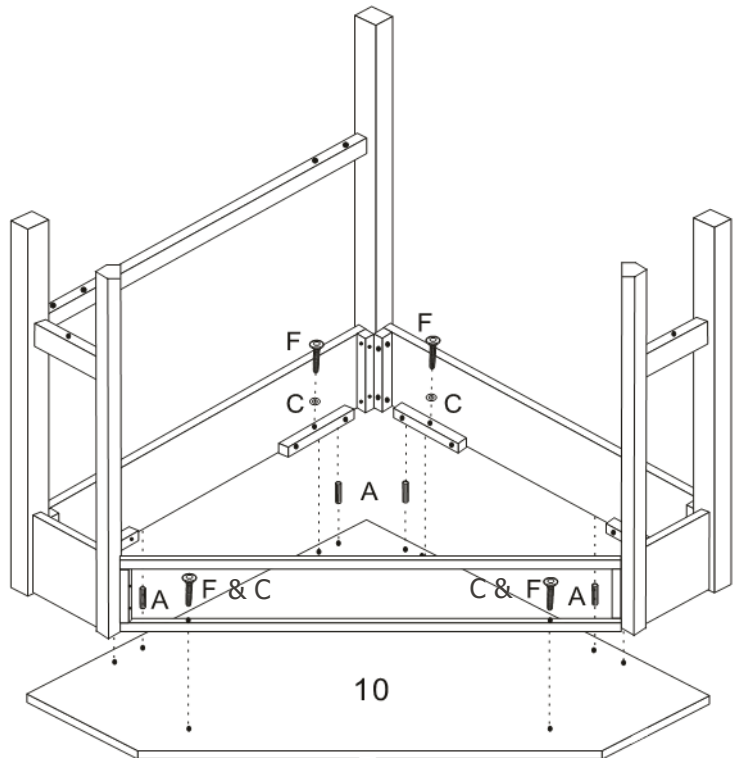


- Place Top Panel (10) bottom-side up on a surface dose not damage the exterior finish of (10).
- Insert Wood Dowel (A) into the designated holes as shown.
- With the help of another person, position and align table frame assembly from Step 7 to fit into the Wood Dowels on (10).
- Identify the 6 pre-drilled bolt hole locations and use Bolt (F) and Washer (C) to fasten Table Top (10) to table frame assembly.

ASSEMBLY INSTRUCTIONS

ELLEN CORNER DESK


STEP 9

- a) Identify pre-drilled holes for Wooden Drawer Glide (9) on bottom of (10)
- b) Position screw holes on (9) over pre-drilled holes on (10)
- c) Use Screw (B) to loosely attach (9) to (10). Fully tighten Screw (B) only when both screws are in place.

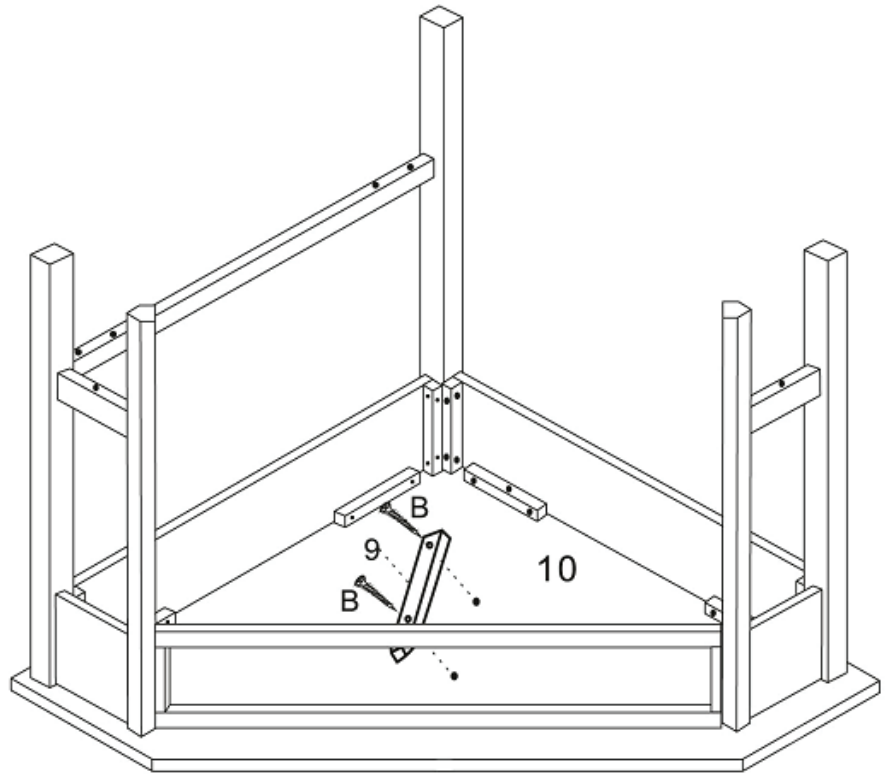


STEP 10

DO NOT TIGHTEN SCREWS & BOLTS COMPLETELY UNTIL STEP 11




- a) With the help of another person, position Shelves (7) & (8) (completed in Step 1) under and against Cross Bar (5) and rails of Left Side Frame (1) and Right Side Frame (2) as shown.
- b) Use Bolt (F) and Washer (C) to loosely fasten Shelves (7) & (8) to Cross Bar (5), and to the rails of Left Side Frame (1) and Right Side Frame (2).

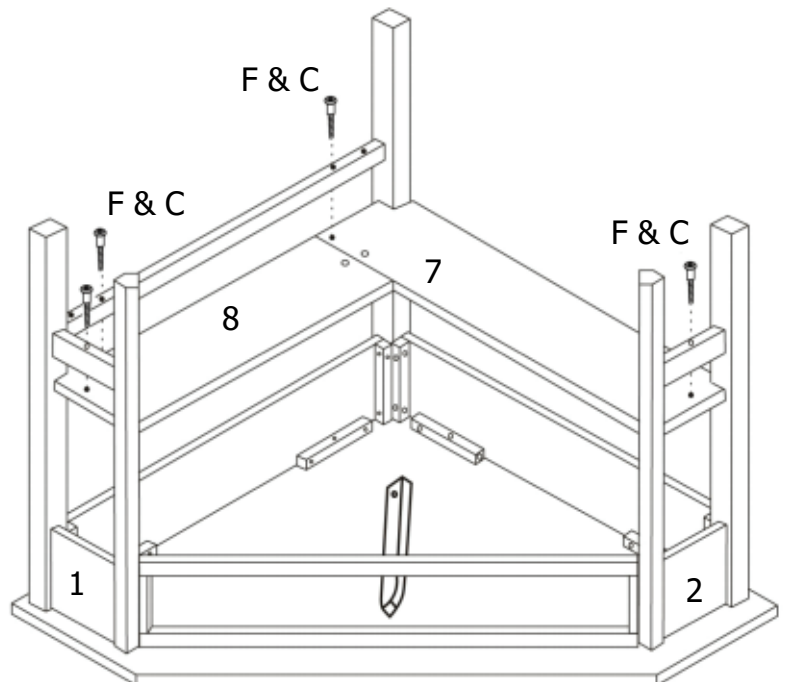

ASSEMBLY INSTRUCTIONS

ELLEN CORNER DESK

STEP 11

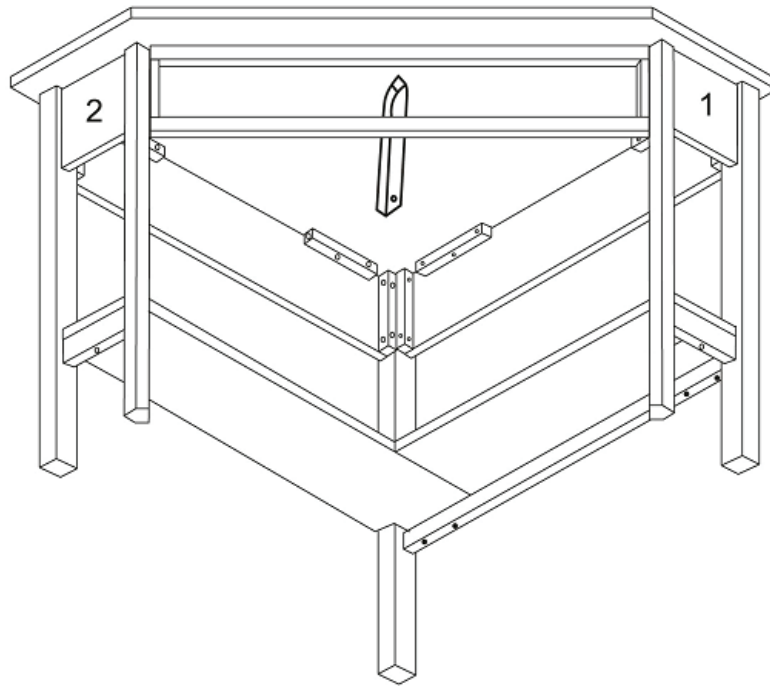


- a) Position the Corner Table upright on a flat, stable surface. Ensure Leg and Side Frames are vertical, and table is balanced.
 - b) Tighten all of the screws and bolts fully.
 - c) DO NOT USE POWER TOOLS.
 - d) DO NOT OVER-TIGHTEN. OVER-TIGHTENING CAN DAMAGE THE FURNITURE.
-

STEP 12

To insert Drawer:

- a) Position drawer directly in front of Front Frame opening.
- b) Tilt the drawer upward slightly and slide in the drawer at an angle to allow the Plastic Drawer Glide to connect into the groove of the Wooden Drawer Glide on the underside of Top Panel.
- c) Gently slide in the drawer horizontally.

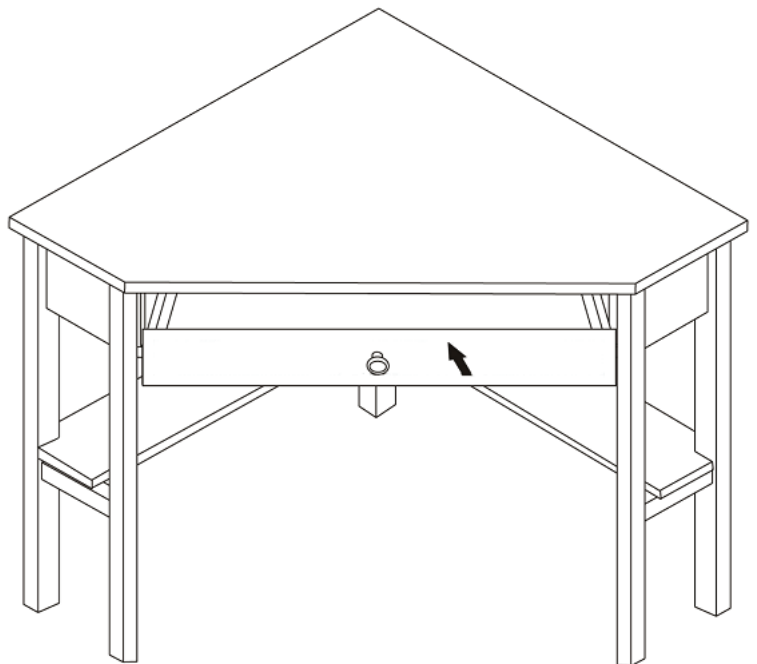

ASSEMBLY OF THE CORNER DESK IS COMPLETED