


Storage Cabinet 4.7x2.5FT

Instructions for Assembly

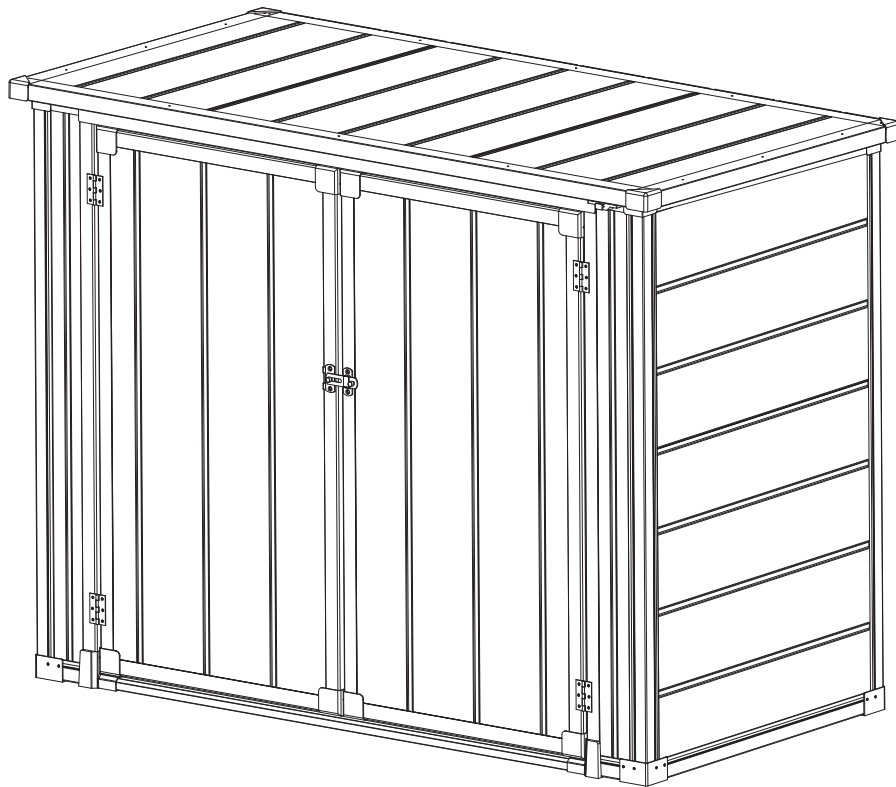

WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | PREPARACIÓN DEL LUGAR | VORBEREITUNG DES AUFSTELLUNGORTES | VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | PREPARAÇÃO DO LOCAL


Level the ground surface | Nivelez la surface du sol | Nivele la superficie del suelo | Ebenen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivele a superfície do solo



Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação


Option | Opción | optie | opzione | opção

A

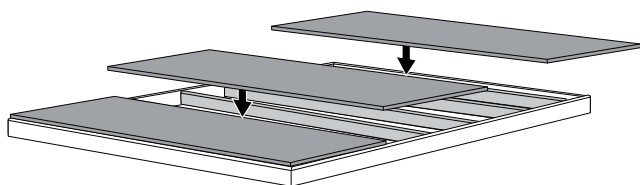


Option | Opción | optie | opzione | opção

B

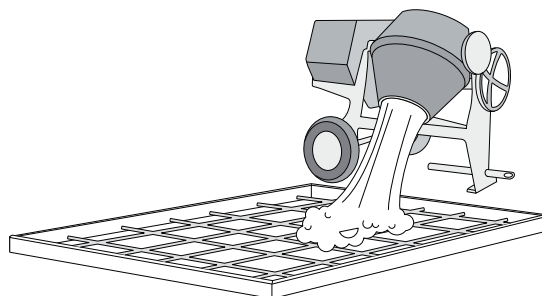

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:

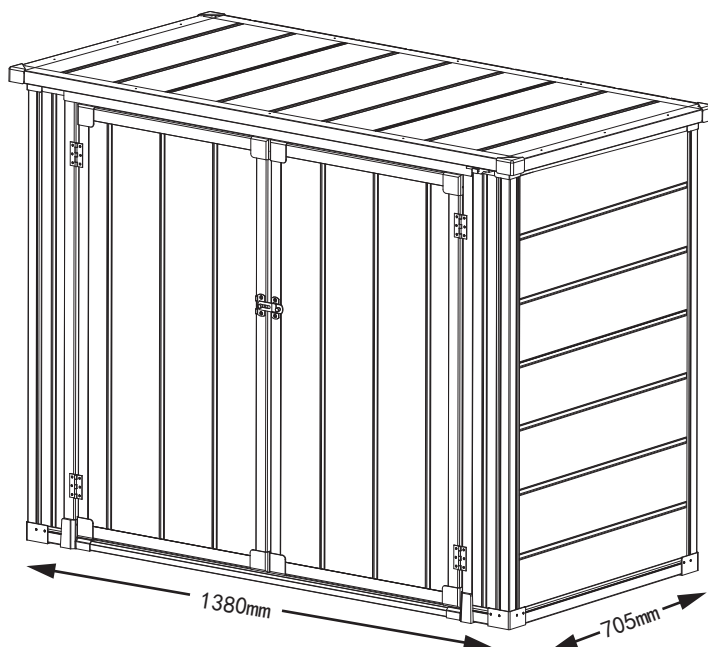

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | ANTES DE EMPEZAR EL ARMADO | VOR MONTAGEBEGINN | VOORDAT U BEGINT TE MONTEREN | PRIMA DI INIZIARE L'ASSEMBLAGGIO | ANTES DE INICIAR A MONTAGEM

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no Parts are missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.


Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | HERRAMIENTAS NECESARIAS | BENÖTIGTE WERKZEUGE | BENODIGD GEREEDSCHAP | ATTREZZATURA OCCORRENTE | FERRAMENTAS NECESSÁRIAS



SPATULA | SPATULE | ESPÁTULA | SPACHTEL | SPATEL | SPATOLA | ESPÁTULA

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.



SG8 x2





ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | SE NECESITAN DOS PERSONAS PARA ARMARLO | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | MONTAGE VEREIST TWEE PERSONEN | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | A MONTAGEM EXIGE DUAS PESSOAS

PARTS LIST



NO.	PART.	Qty.
R1		1
R2		1
R14		1
R15		2
R16		1
R17		2
SG6		4
SG7-1		1
SG7-2		1
R3		2
R4		1
R5		1
R6		1
R7		1
R8		1
R9		1
R18		2
R19		2
R20		1
R21		1
R22		1
R23		1
R24		1
R25		1
R36		1
R37		1
R38		2
SG21		4
SG22		4
CZ415		2
TOA		2

NO.	PART.	Qty.
R31		1
R32		1
R33		1
R34		1
R35		1
R39		1
R40		1
R41		1
SG26		4
FP1		6
R12		1
R13		1
R26		1
R27		1
R28		1
R29		1
R30		4
SG5-1		4
SG5-2		4
DC		2
LOCK-1		1
LOCK-2		1
LOCK-3		1
SG8		1
Drill		1
Z1		129
Z2		58
Z3		21
RF6		4


FLOOR ASSEMBLY

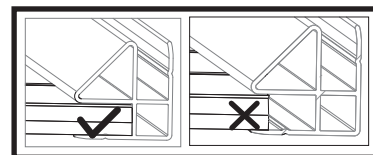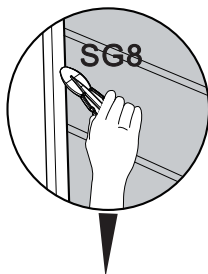


● Fully fit the panel inside the profile

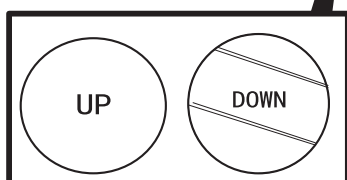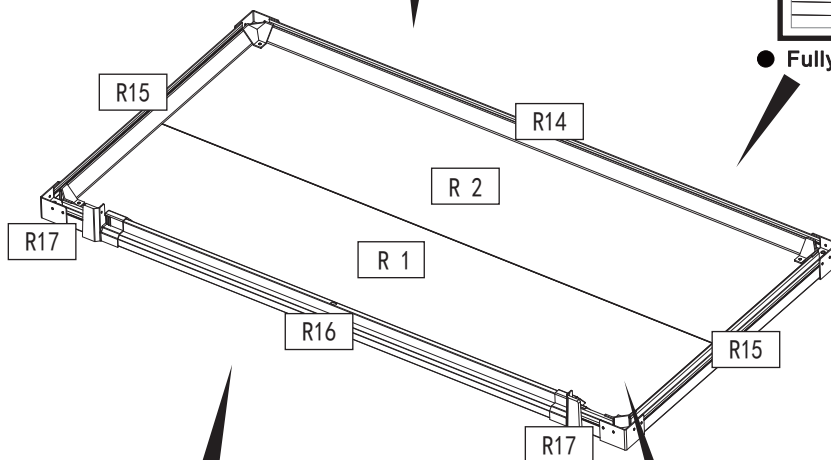





The crease line of the floor must be underneath

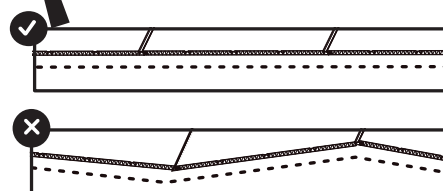


Step 1

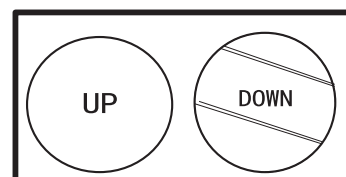



The crease line of the floor must be underneath

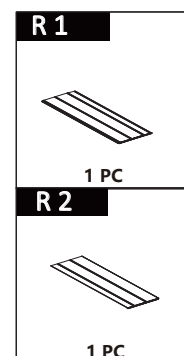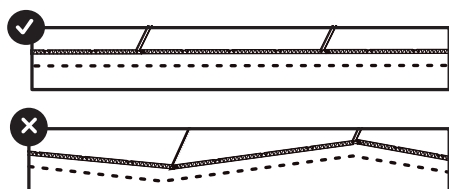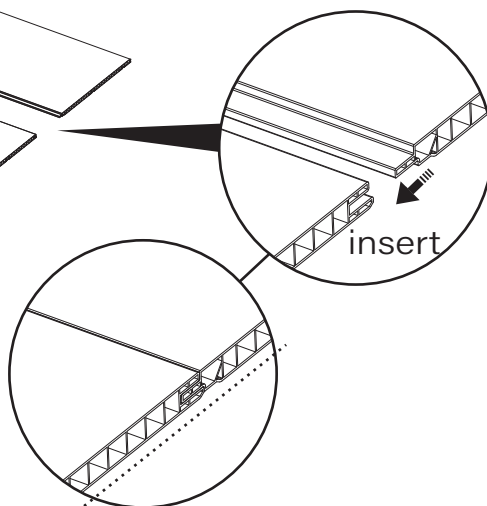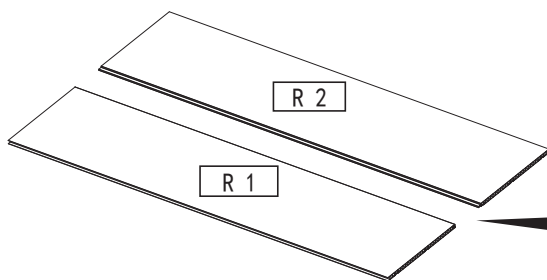


Step 2

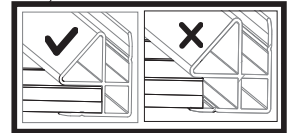


● Fully fit the panel inside the profile

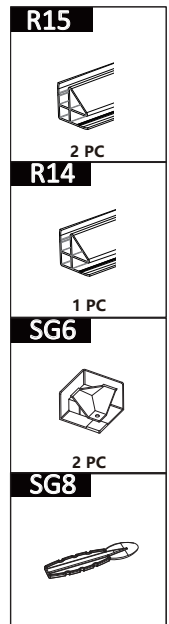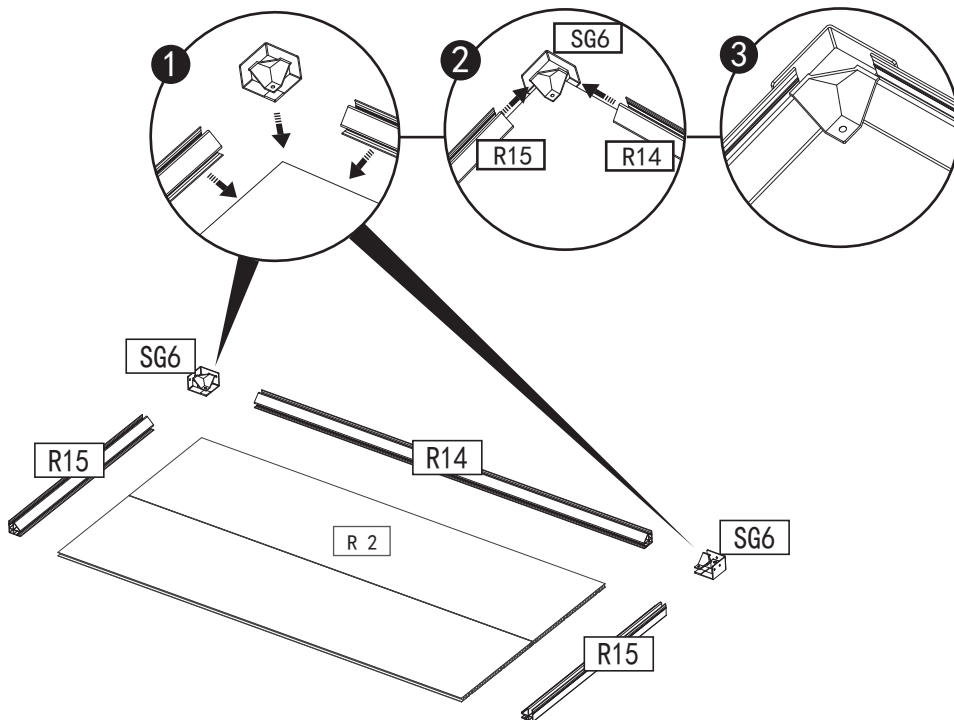


Step 3

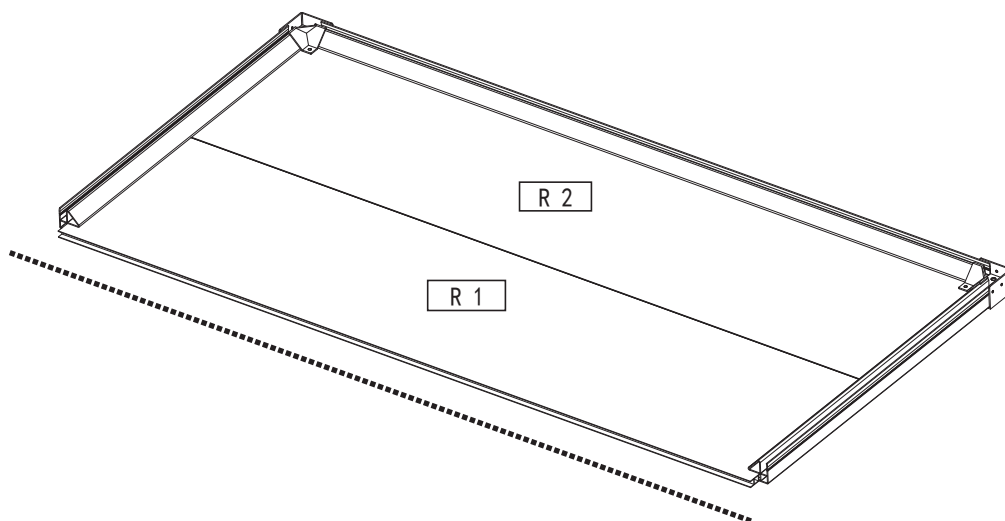




The floor boards must be straight

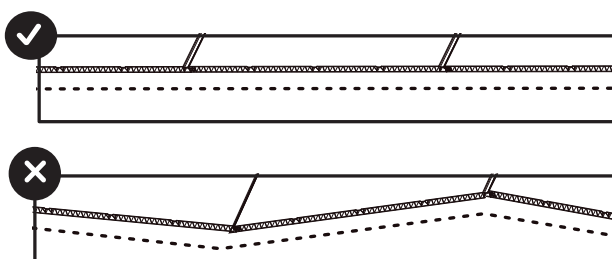

Step 4

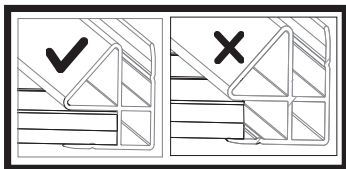

● Fully fit the panel inside the profile

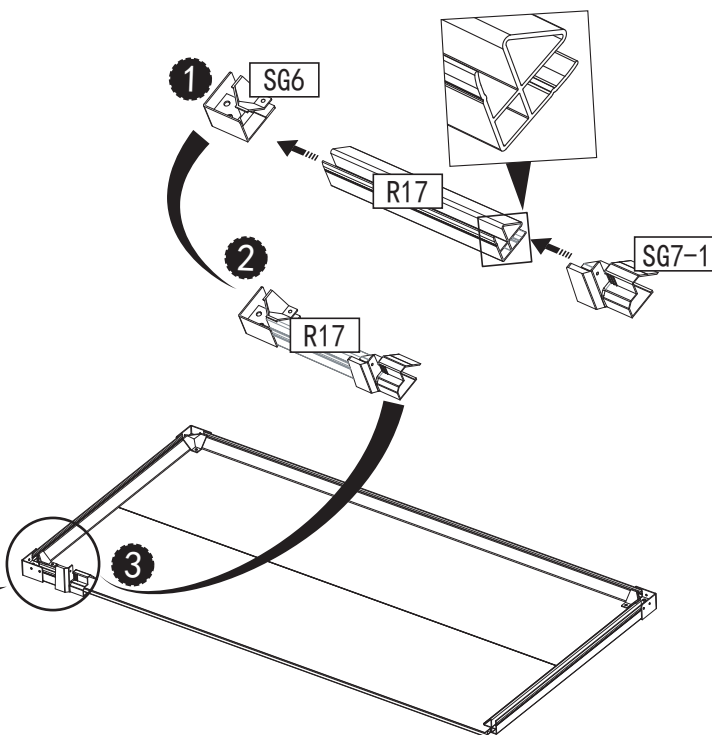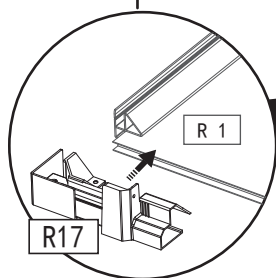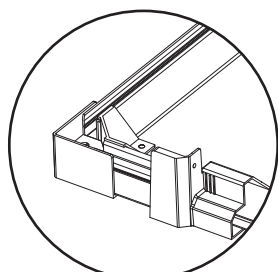

SG6



1 PC

R17



1 PC

SG7-1





1 PC

SG8



Step 5

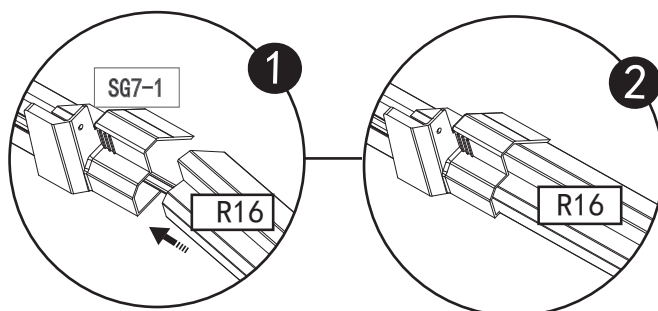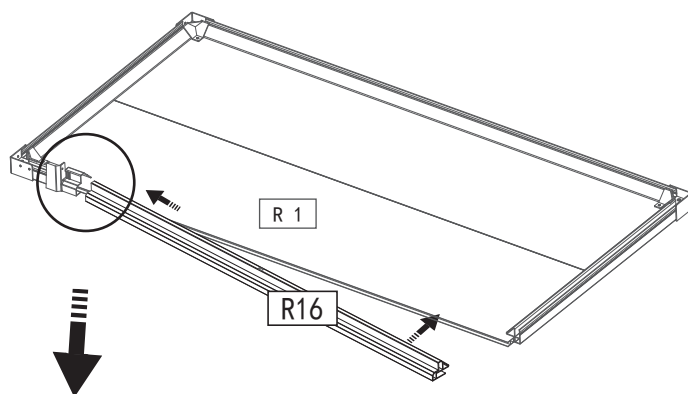

R16




1 PC

SG8




2 PC

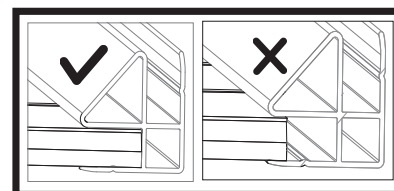


● Fully fit the panel inside the profile

Step 6

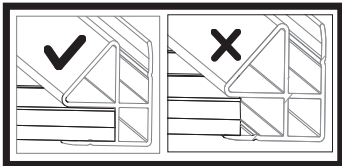

● Fully fit the panel inside the profile

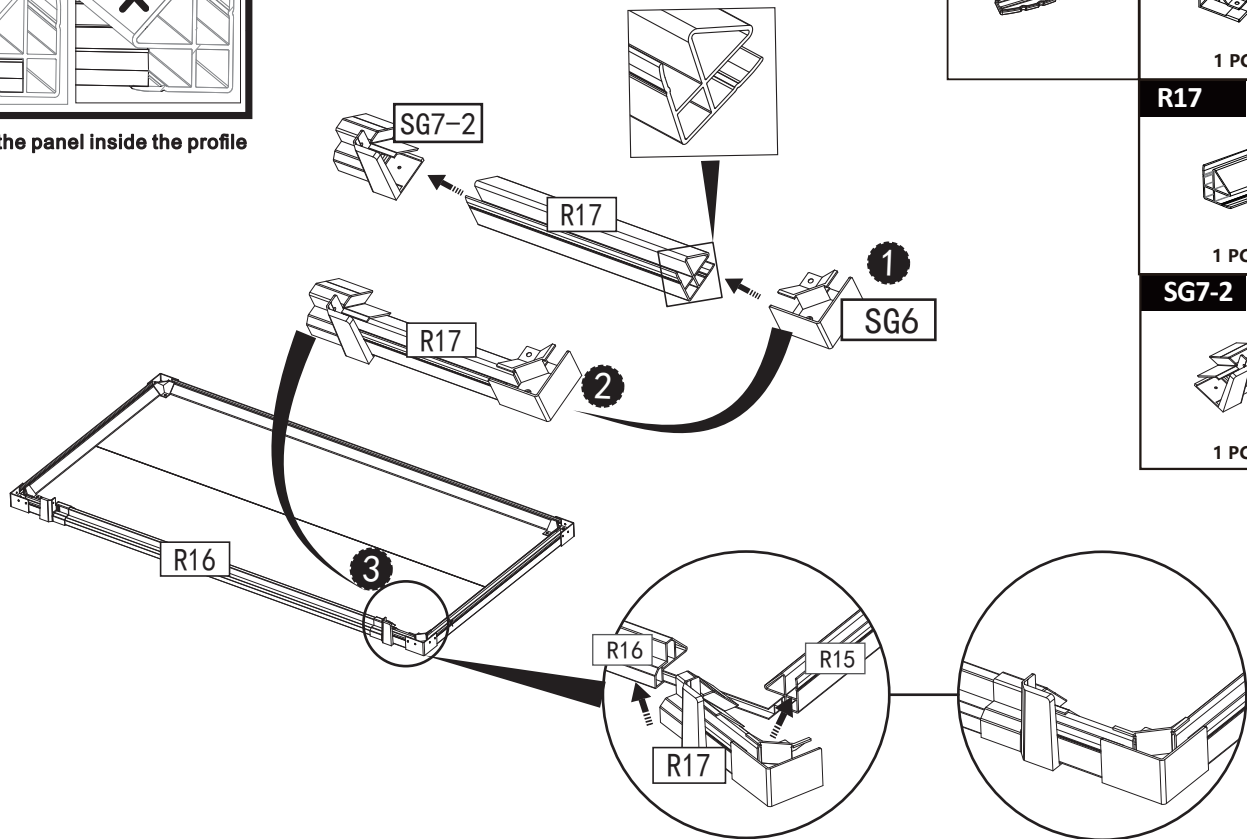

SG8



SG6



1 PC

R17



1 PC

SG7-2




1 PC

Step 7


Z1




4 PC

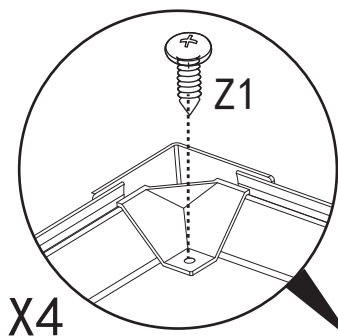


X4

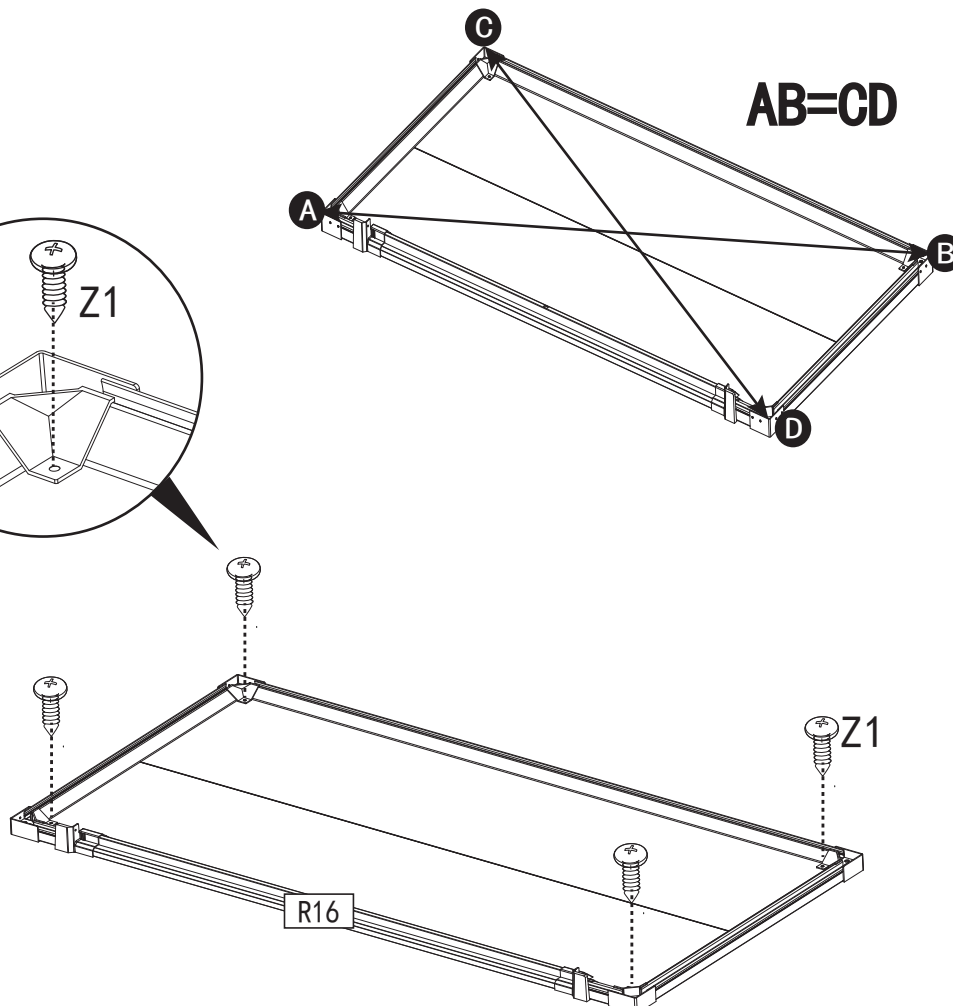


Step 8

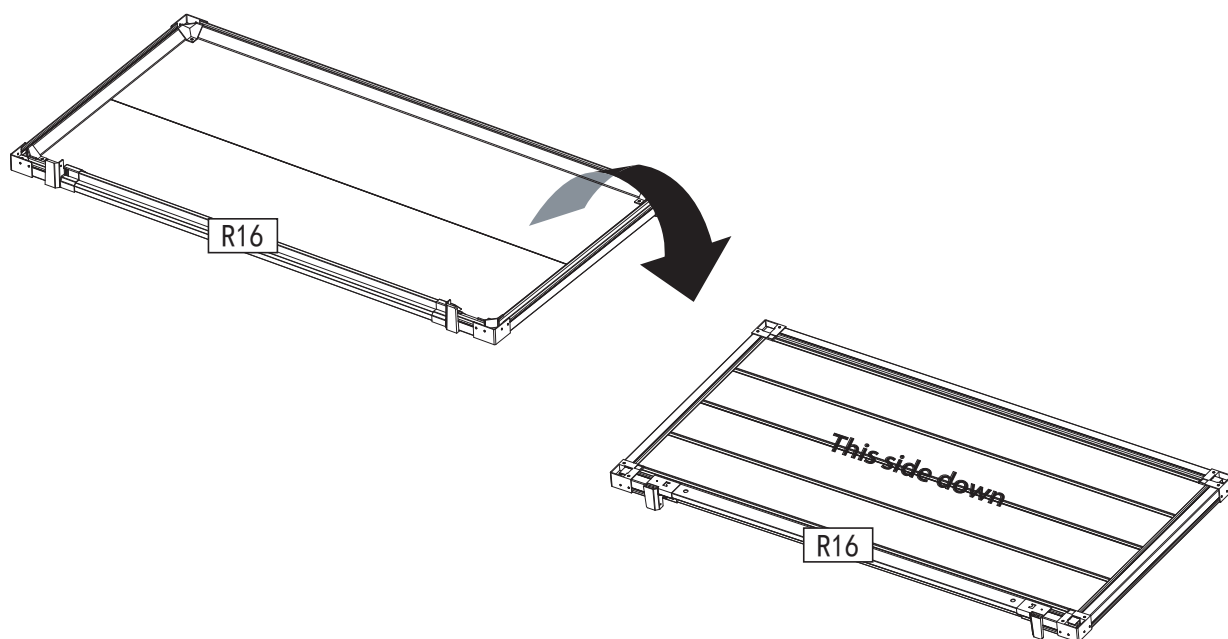


Step 9

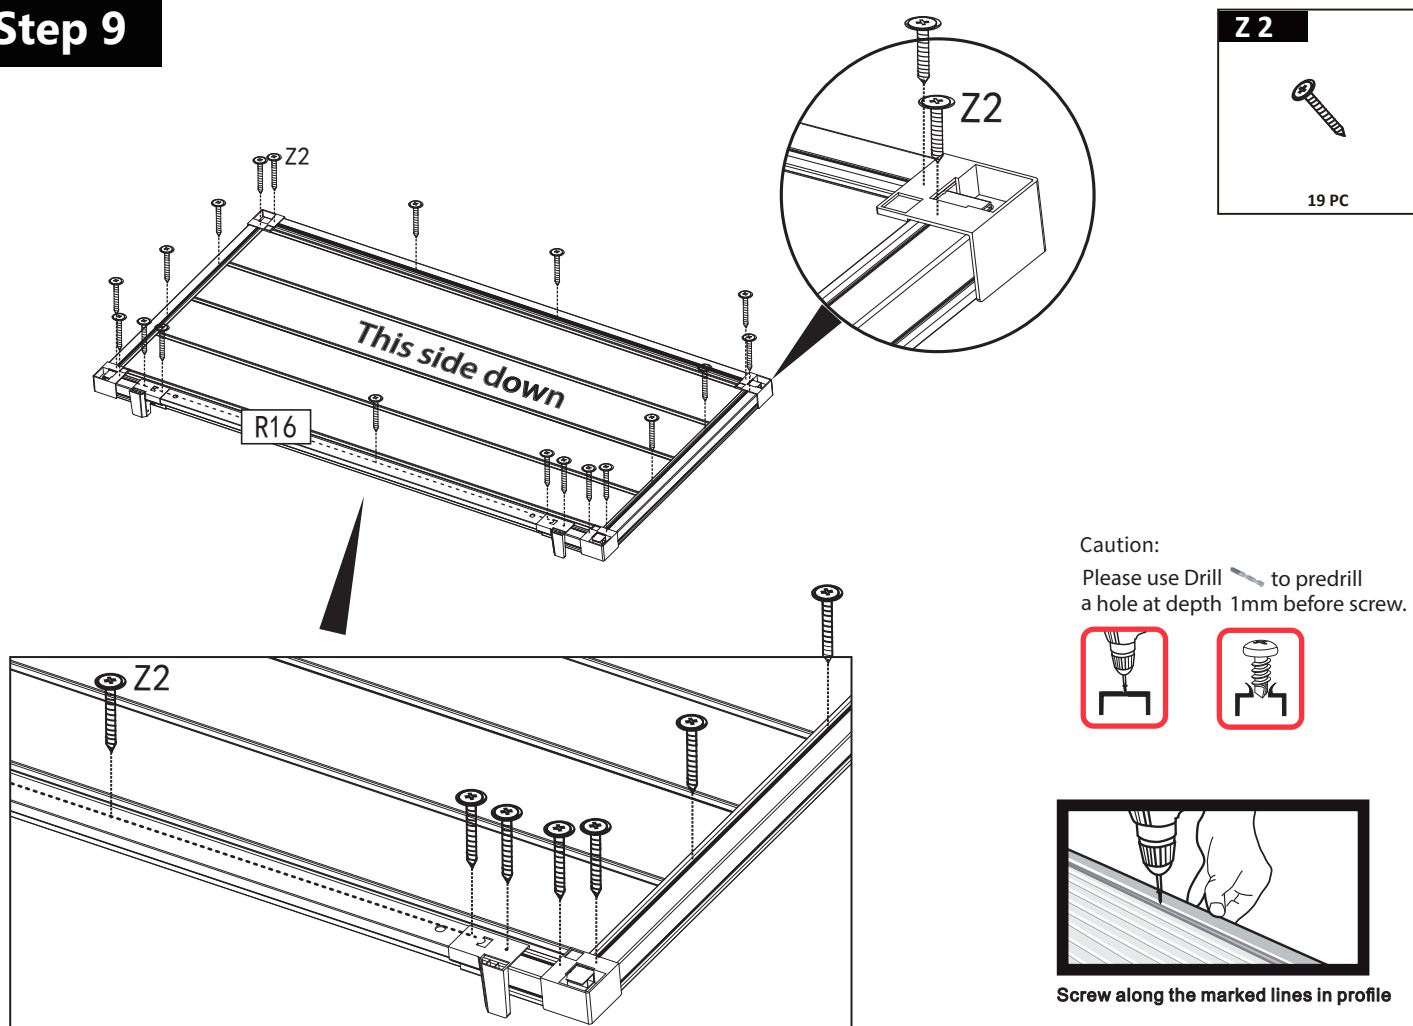

Step 10

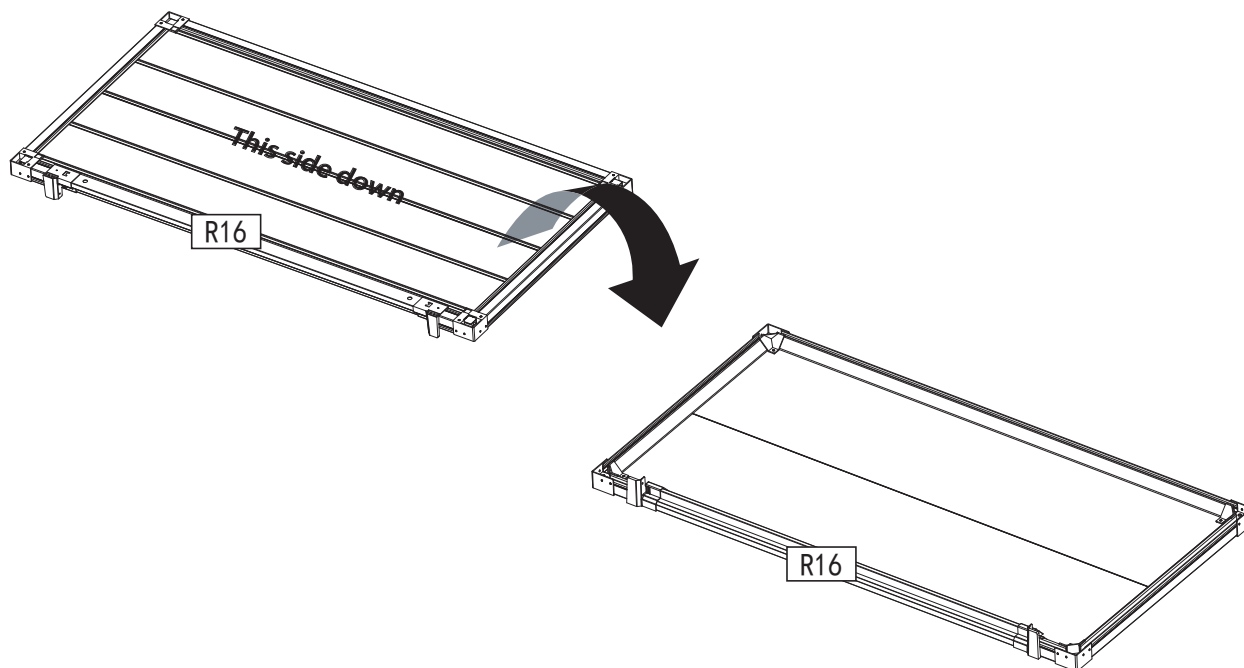


Wall Assembly

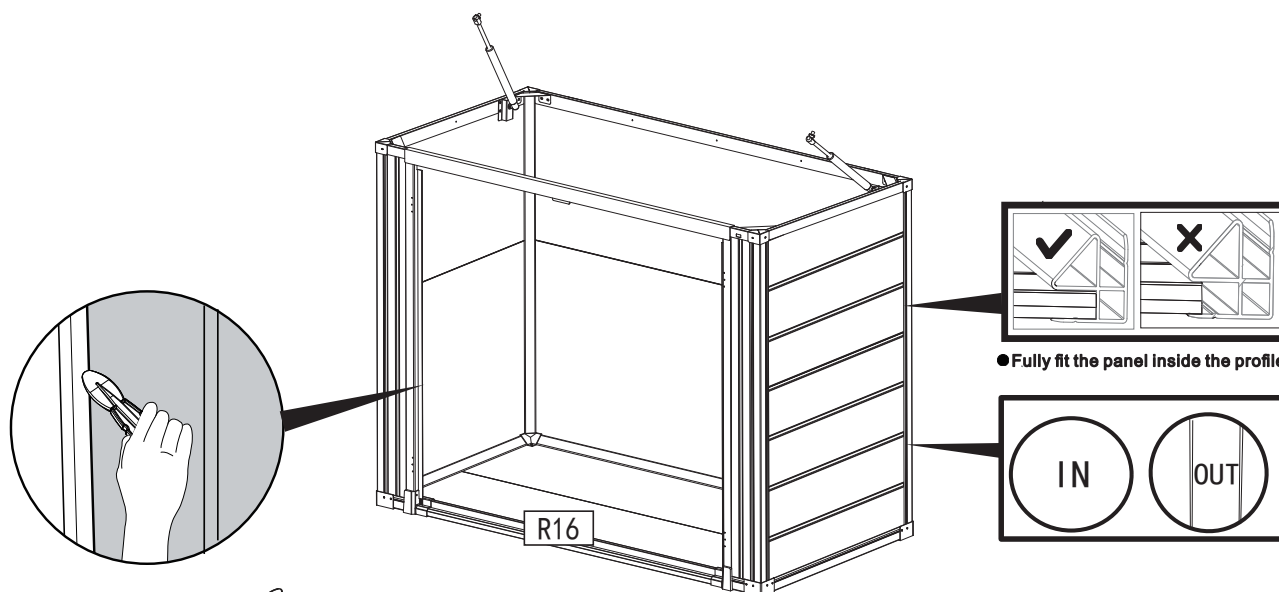


- Use spatula  (part "SG8") for easier insertion of panel into profile

Step 11


R18



1 PC

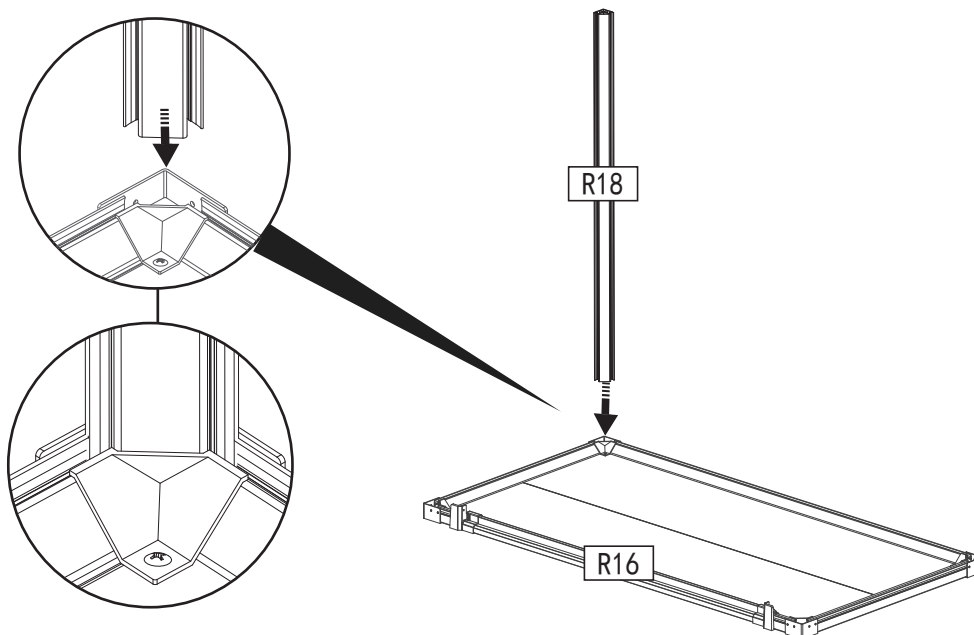

Step 12

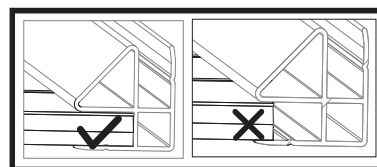

● Fully fit the panel inside the profile

R 3






1 PC

R 6





1 PC




SG8

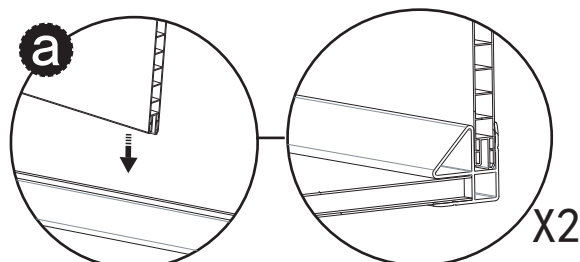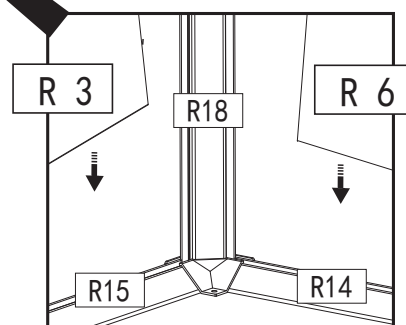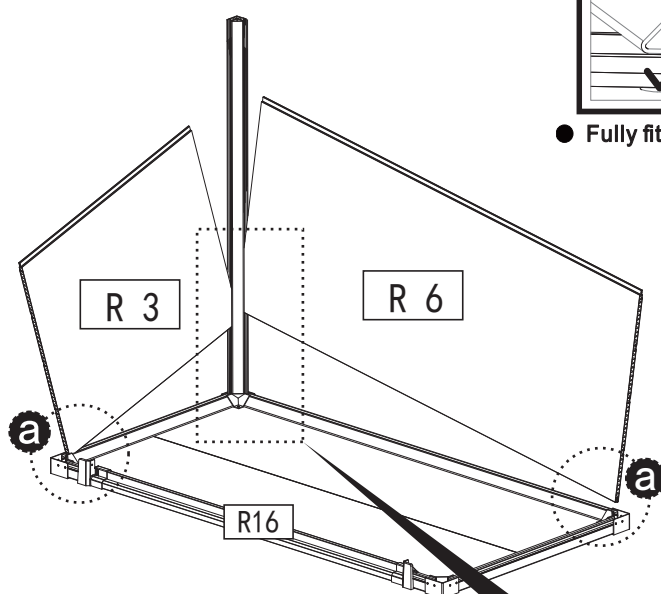

Step 13

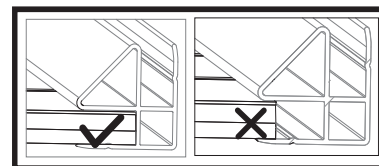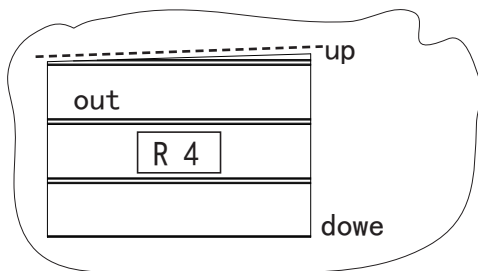

● Fully fit the panel inside the profile

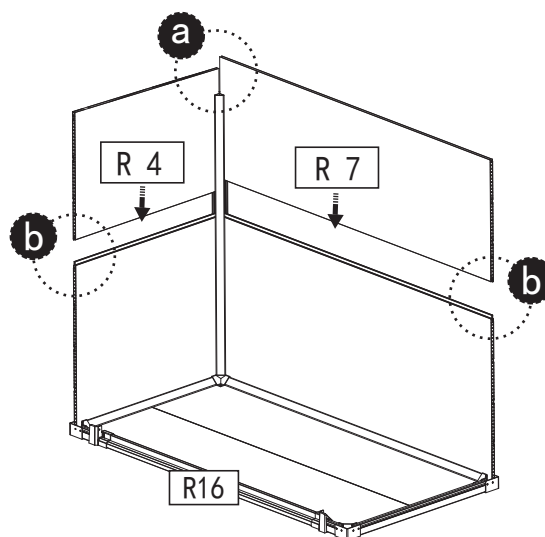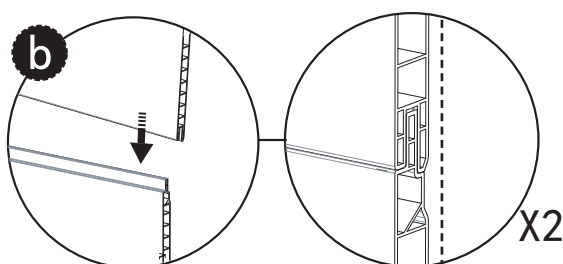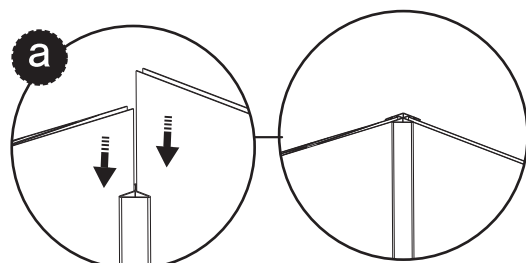

R 4



1 PC

R 7




1 PC

SG8




Step 14

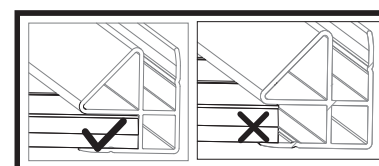


● Fully fit the panel inside the profile

R 18






1 PC



R 3



1 PC

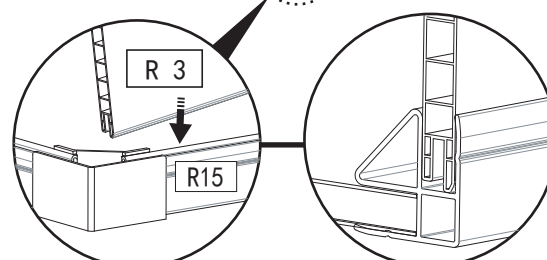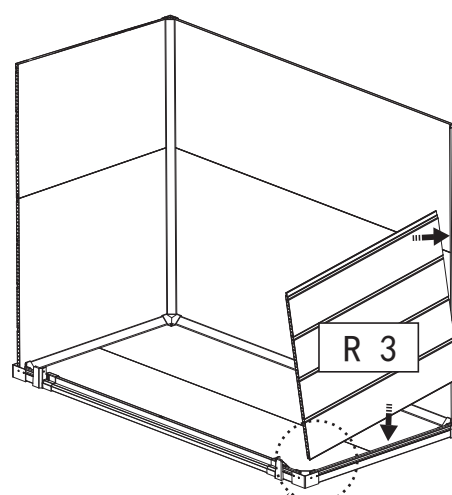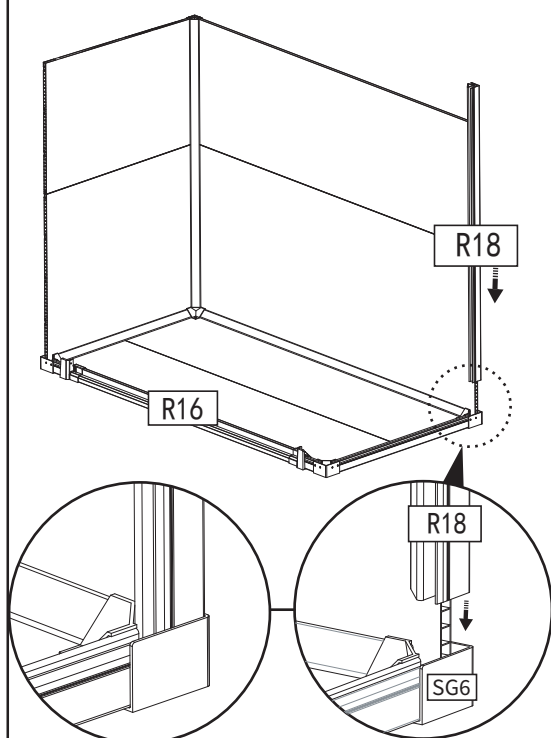

Step 15

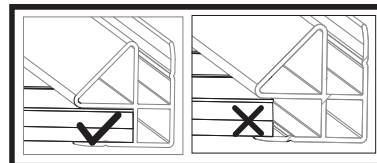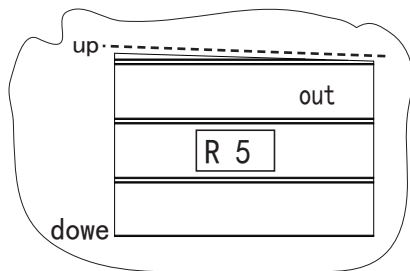


- Fully fit the panel inside the profile

R 5





1 PC

SG8

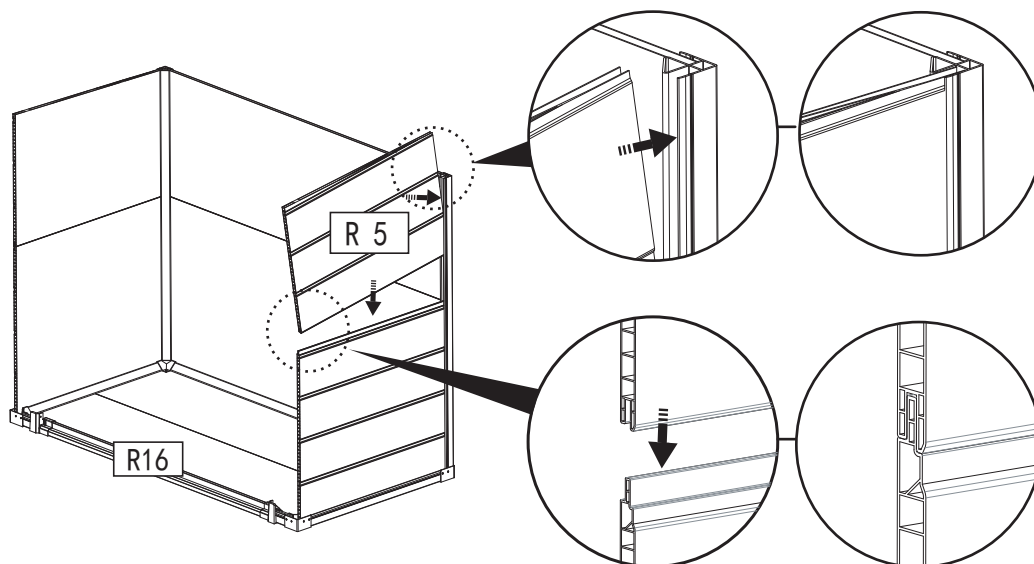


Step 16

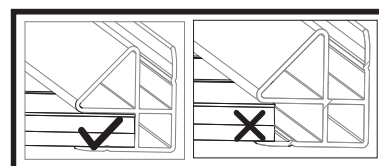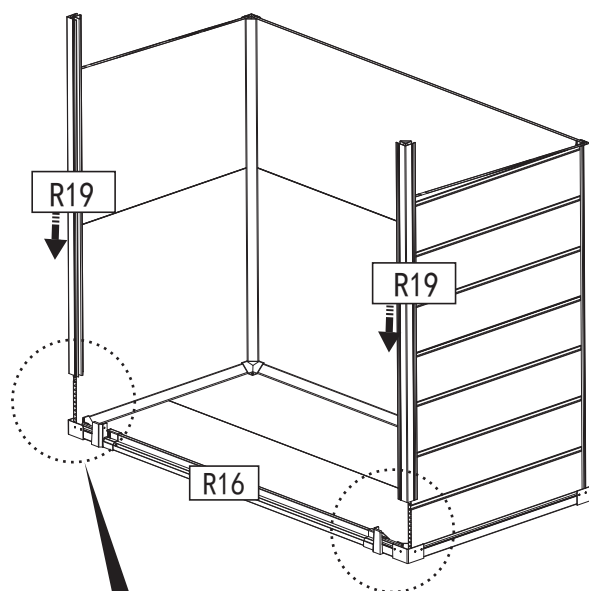


- Fully fit the panel inside the profile


R19



2 PC

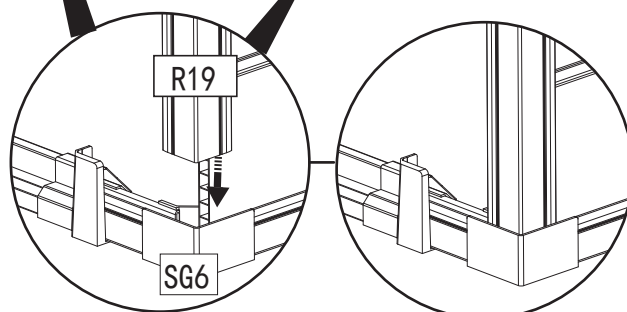

Step 17

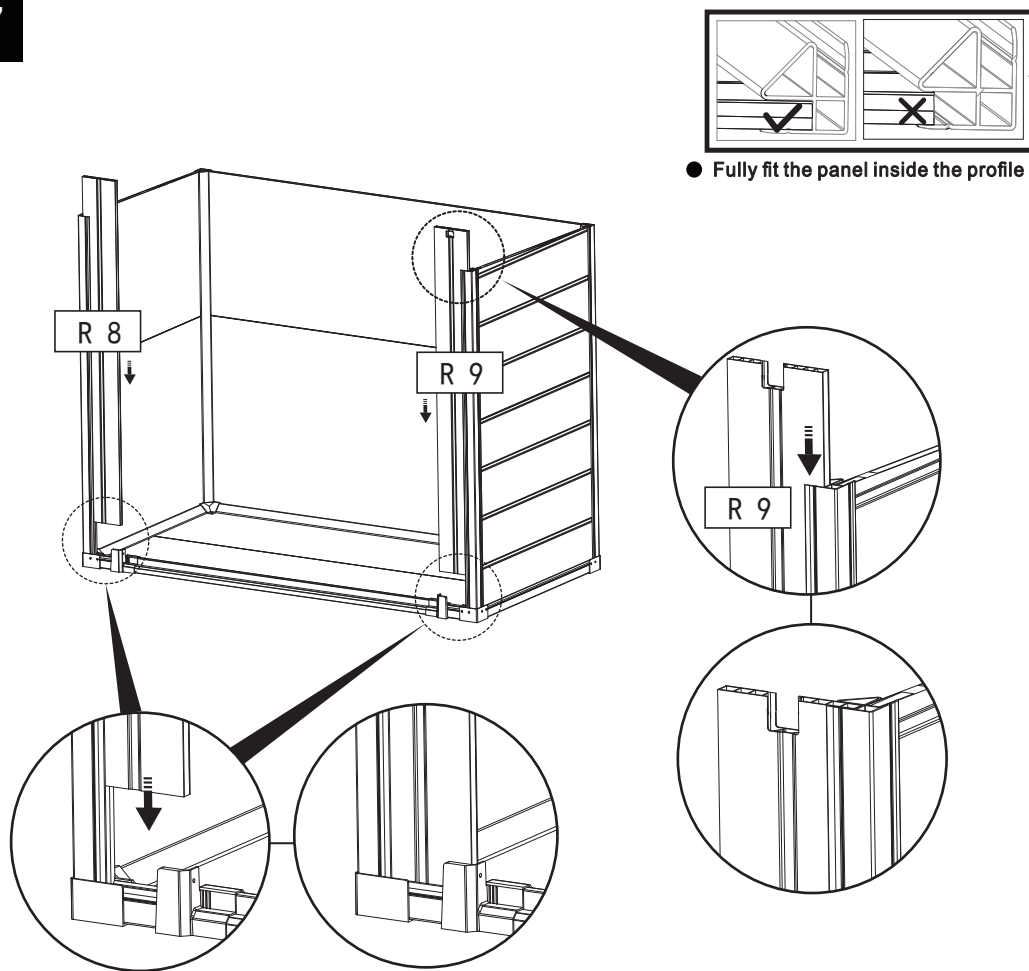

R 8



1 PC

R 9




1 PC


SG8



Step 18

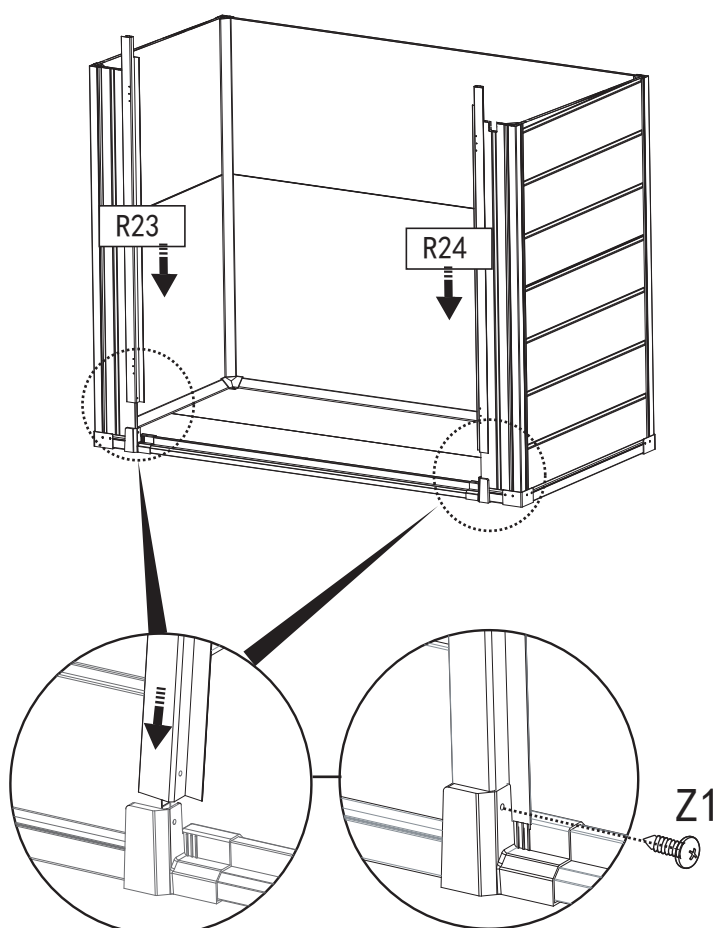


R23



1 PC

R24




1 PC

Z 1




2 PC

Step 19

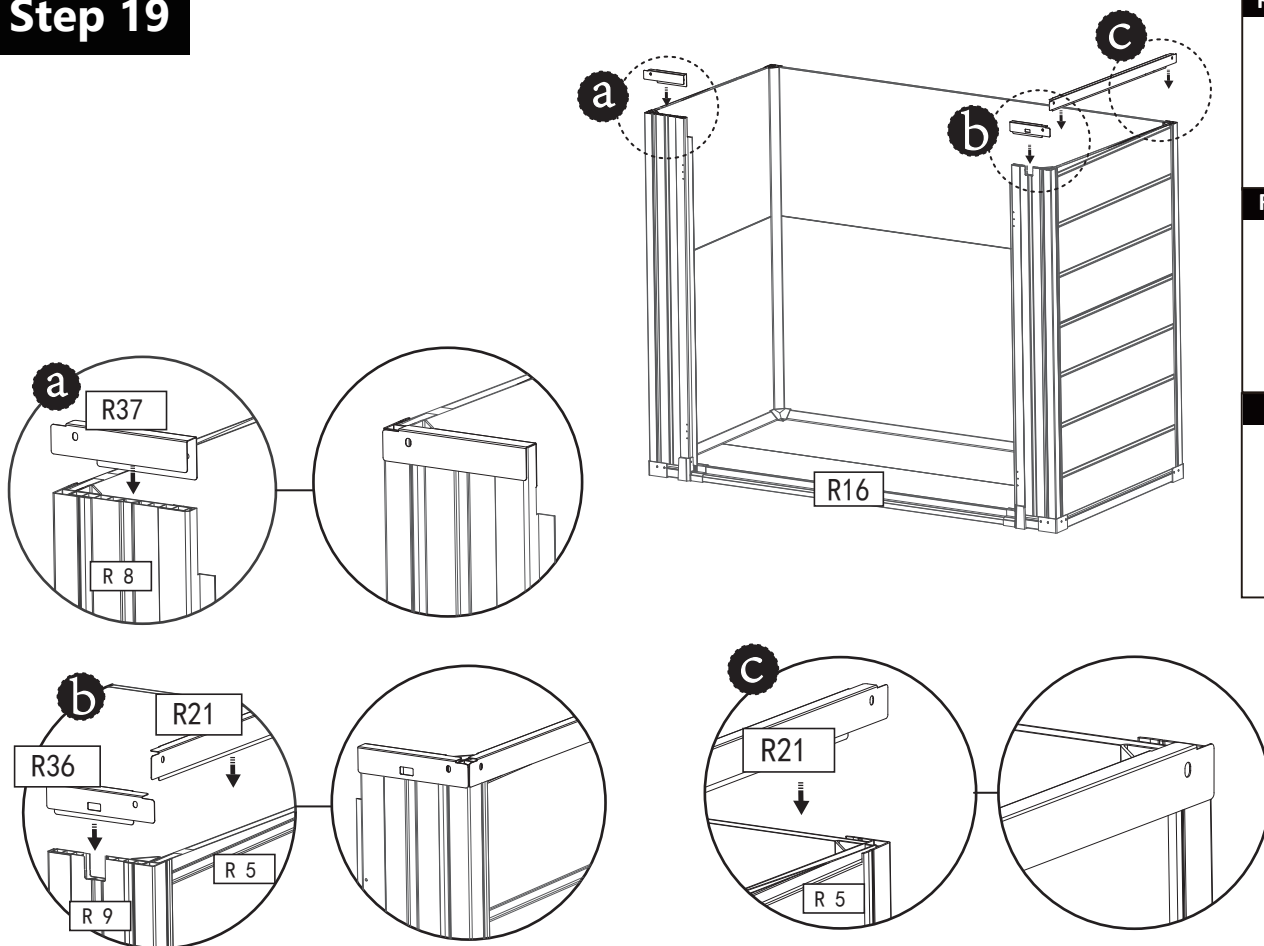


R37




1 PC

R36




1 PC

R21




1 PC

Step 20

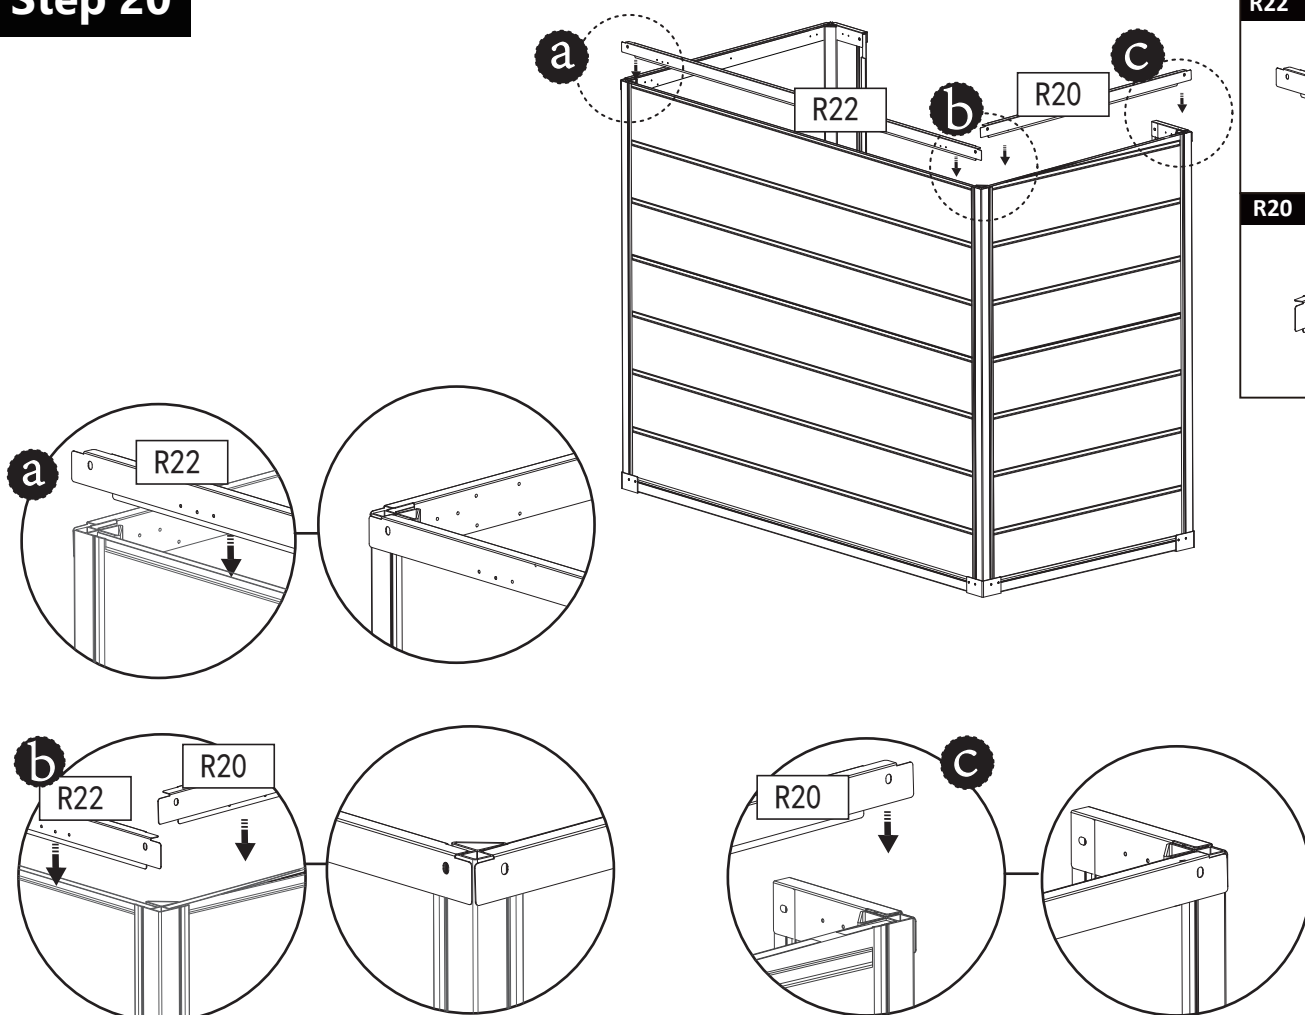

R22






1 PC

R20



1 PC

Step 21

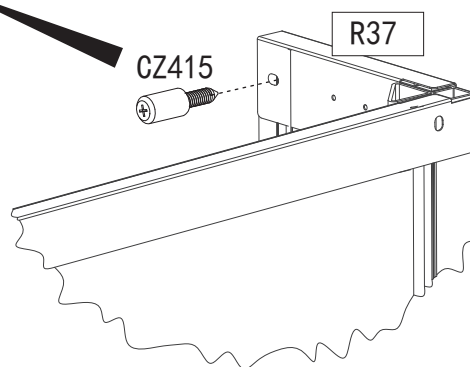
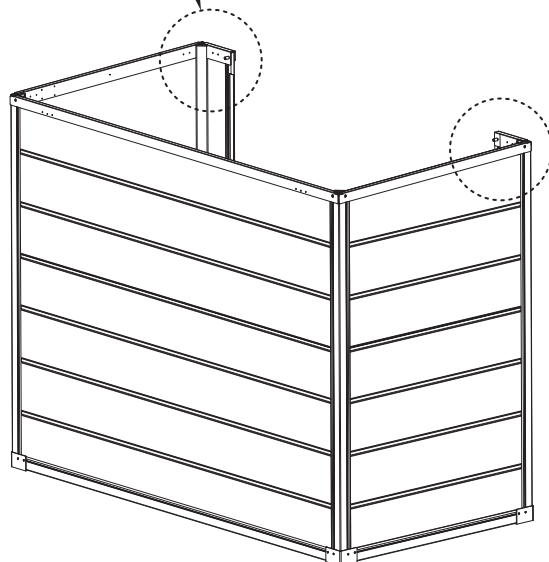
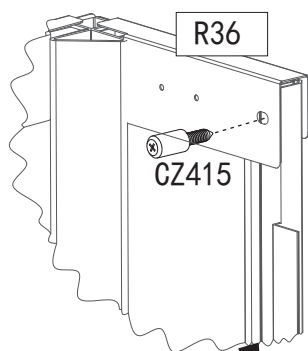


CZ415




2 PC

Step 22

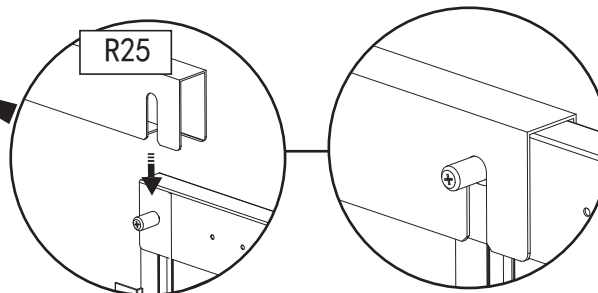
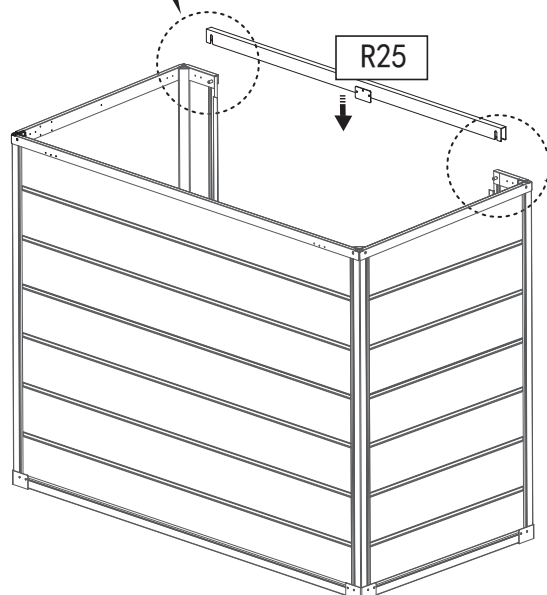
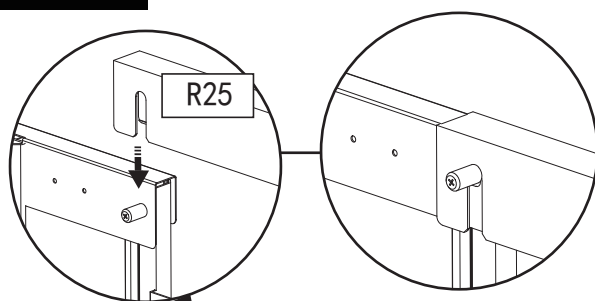


R25




1 PC

Step 23

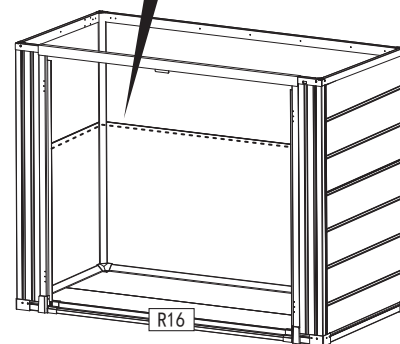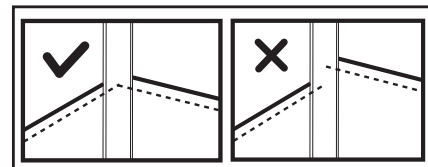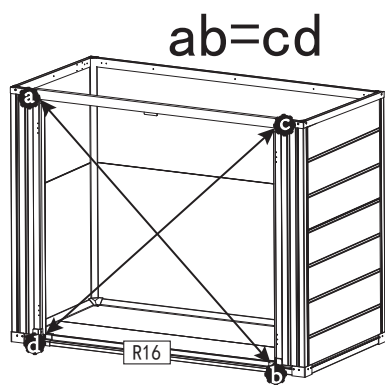

$AB=CD$

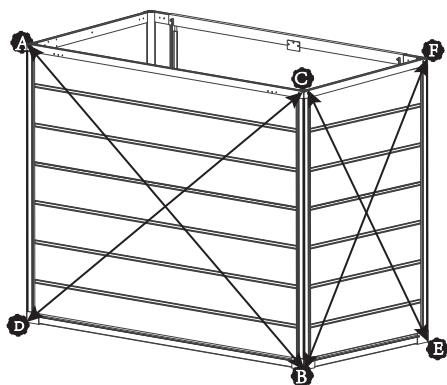

$CE=FB$

Step 24

Make sure everything is in place and turn the screws.





Z 2




27 PC

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.

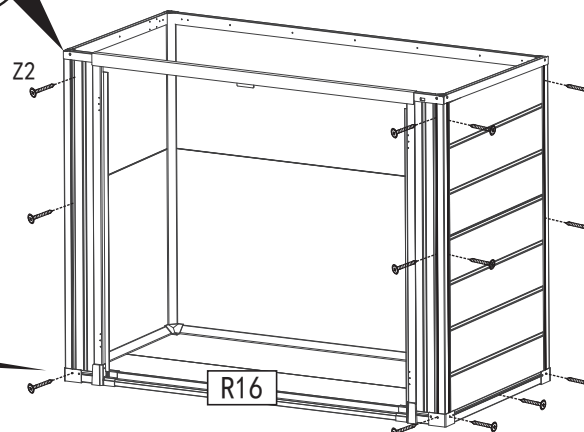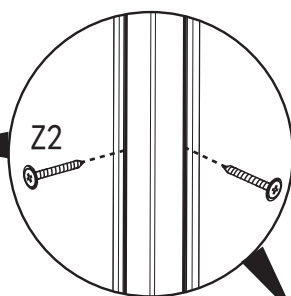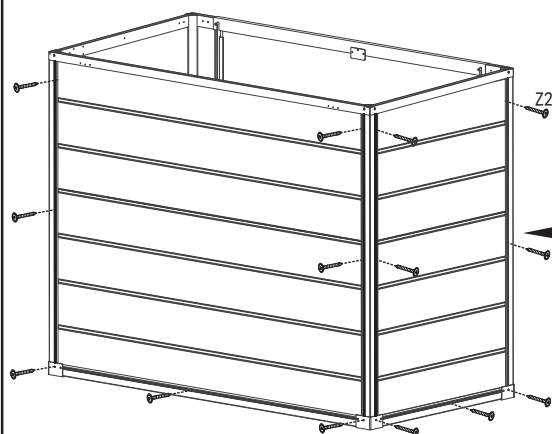

Step 25

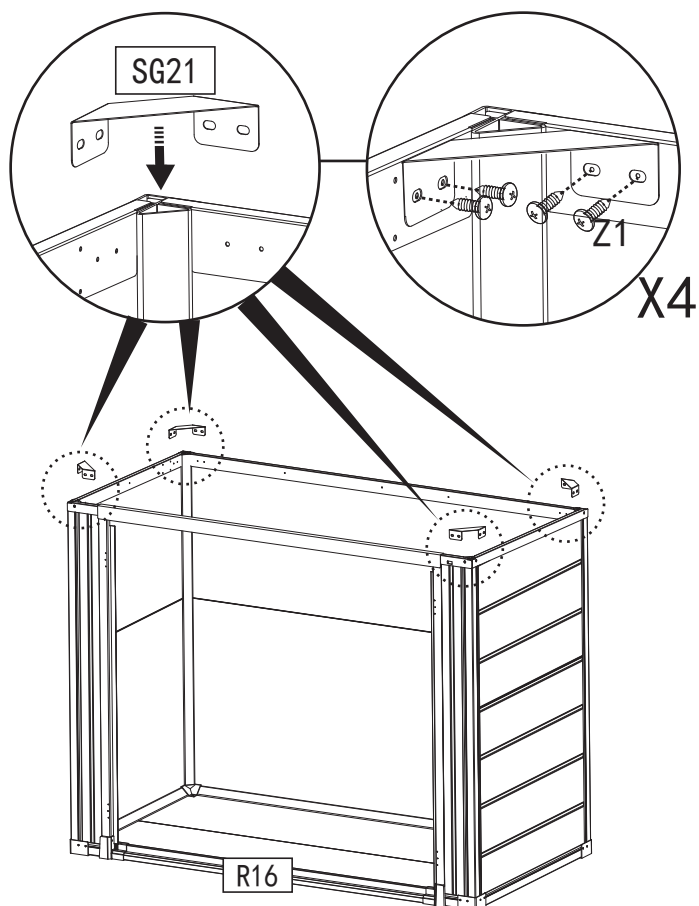

SG21




4 PC

Z 1



8 PC

Step 26

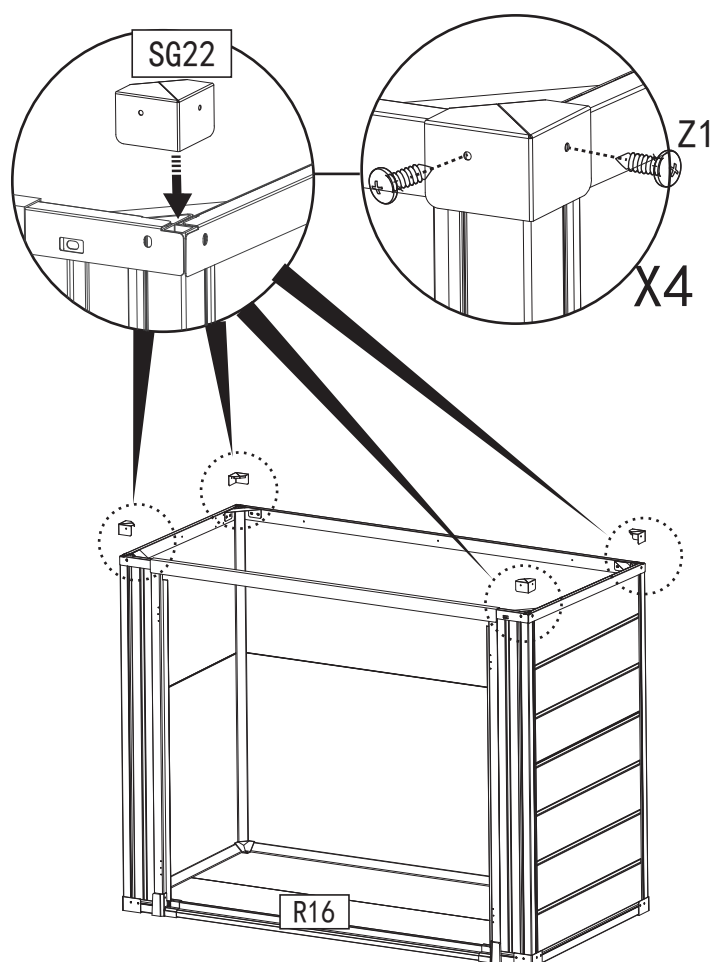

SG22




4 PC

Z 1




16 PC


Step 27

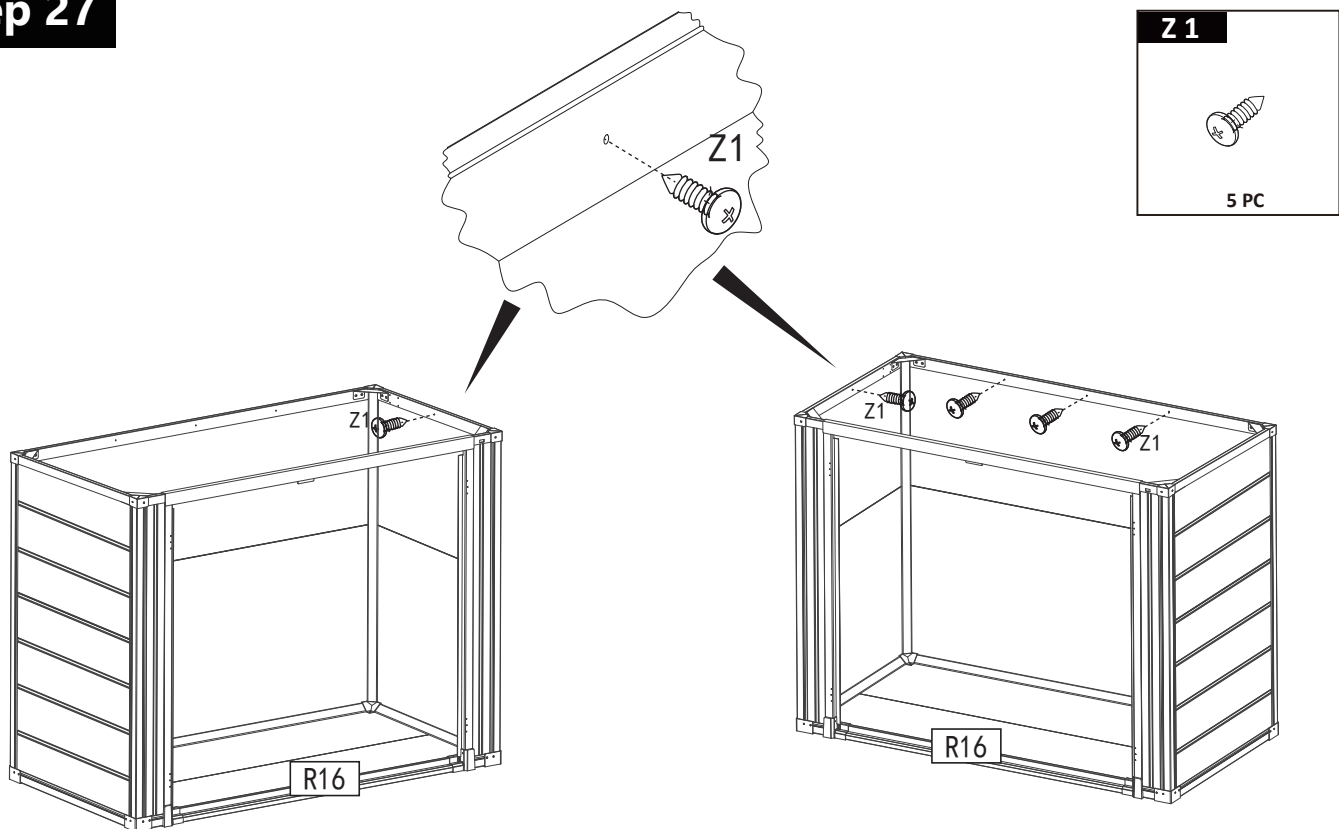



Step 28

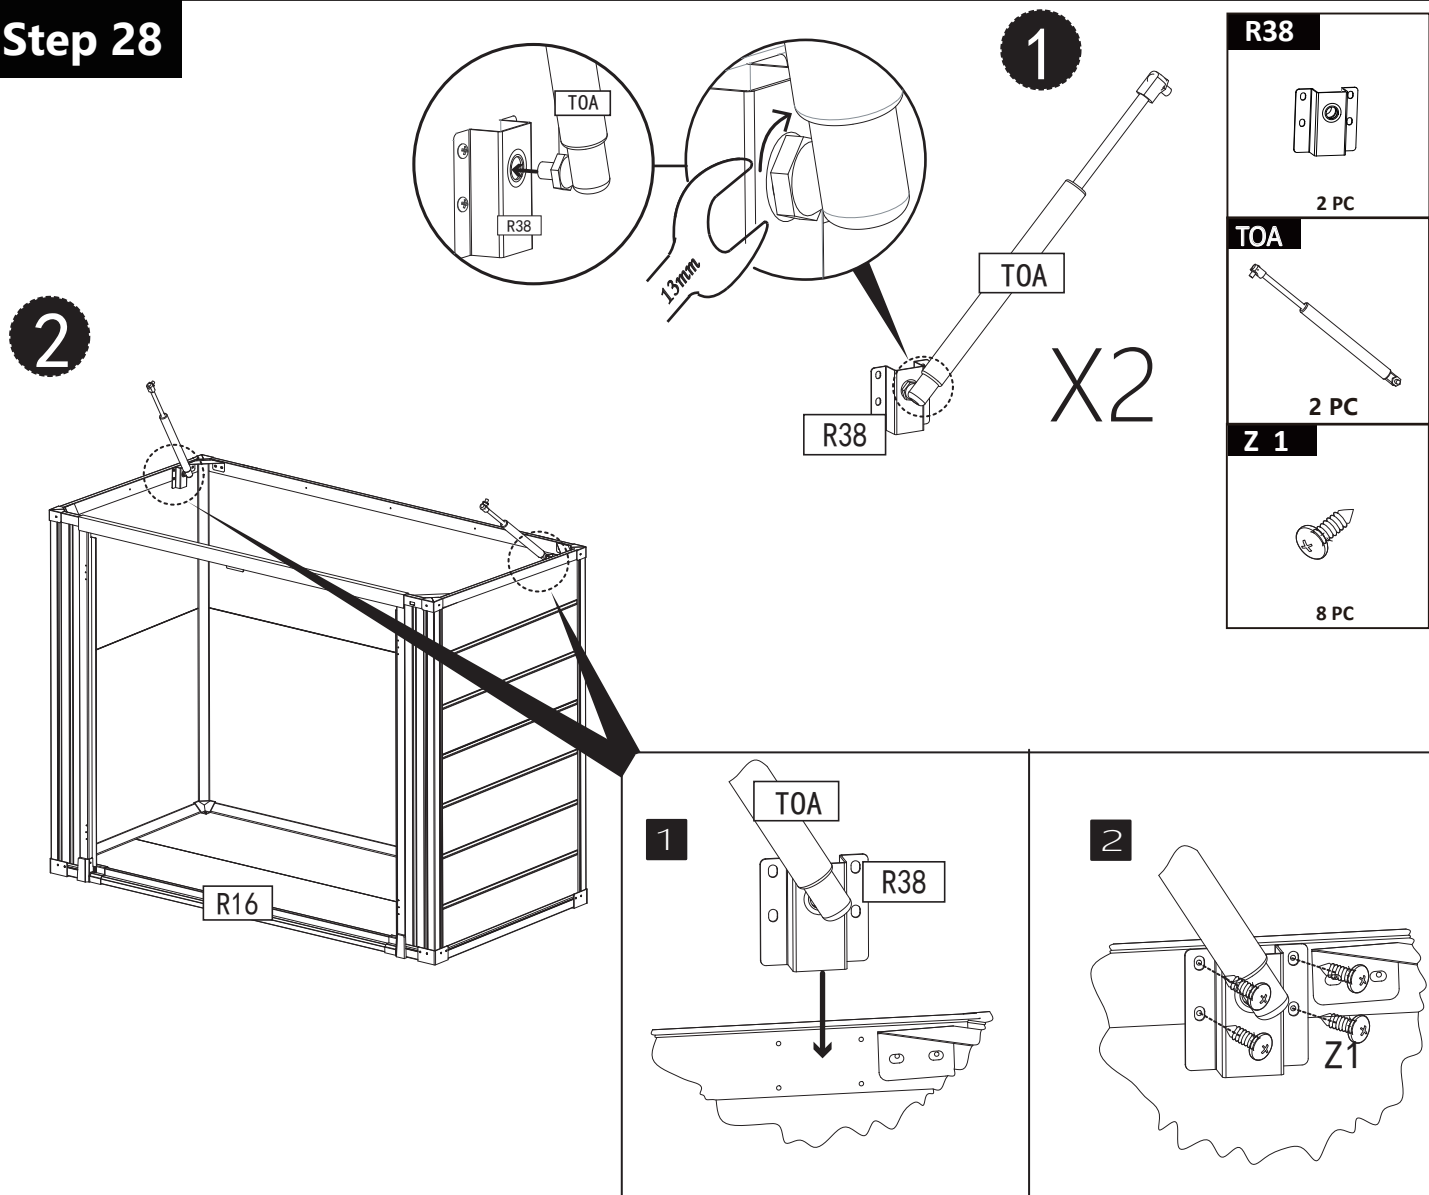

ROOF PARTS


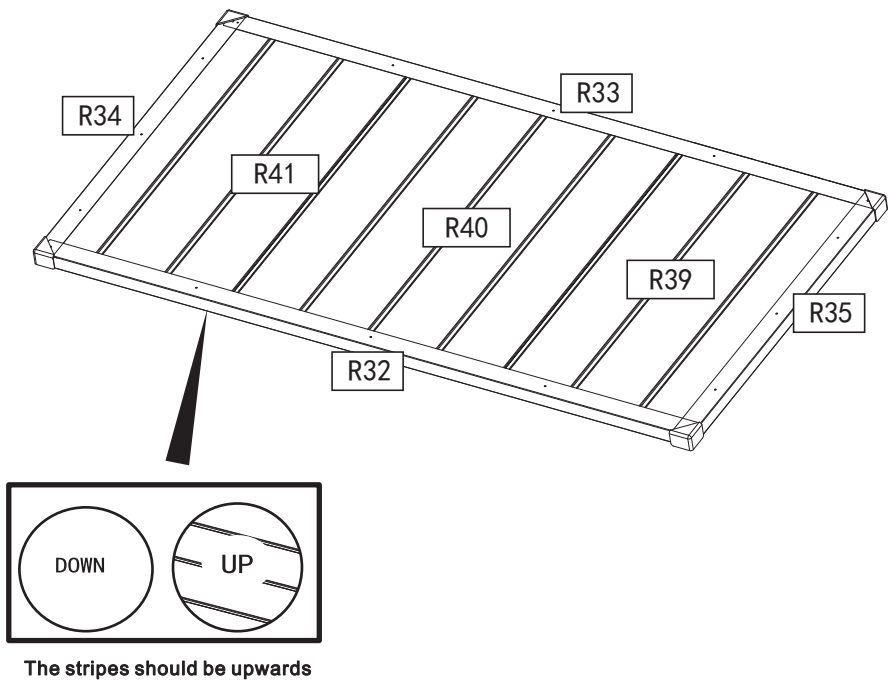


Step 29

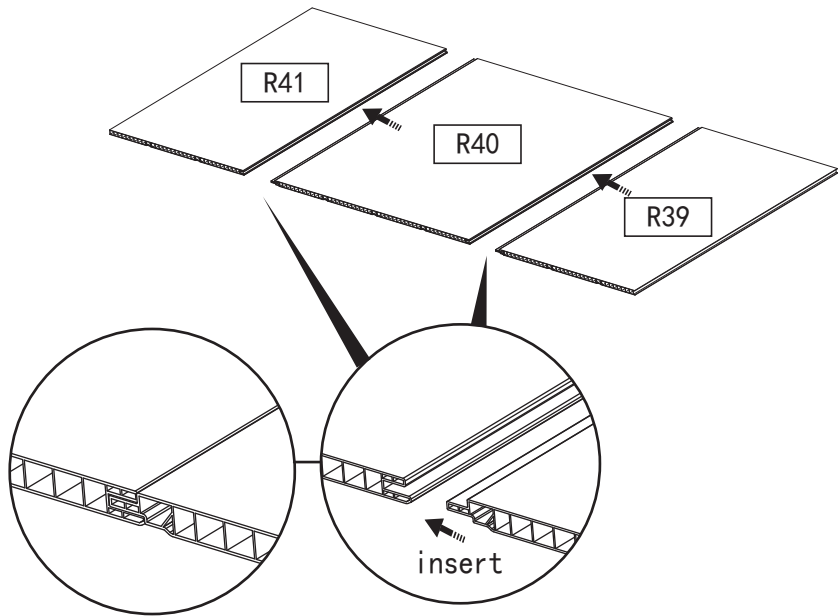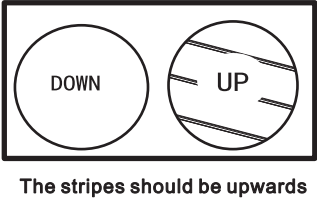


R40		1 PC
R41		1 PC
R39		
SG8		

Step 30

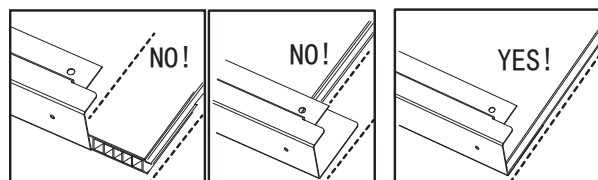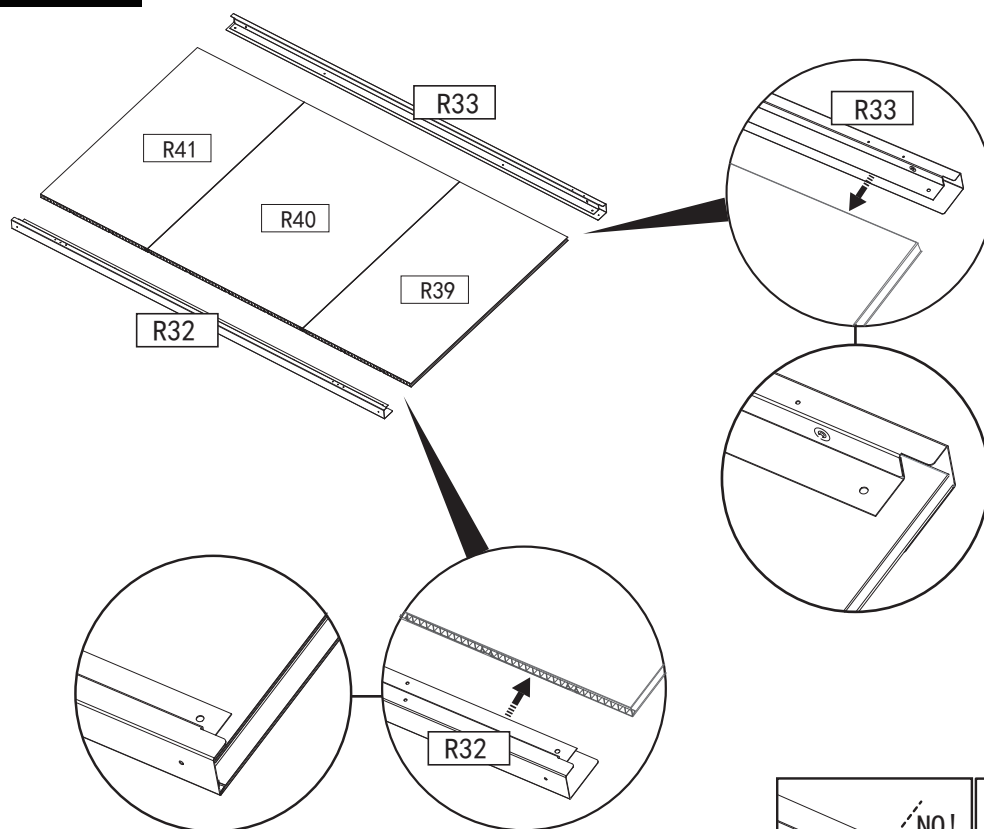

R33



1 PC

R32




1 PC


SG8



Step 31

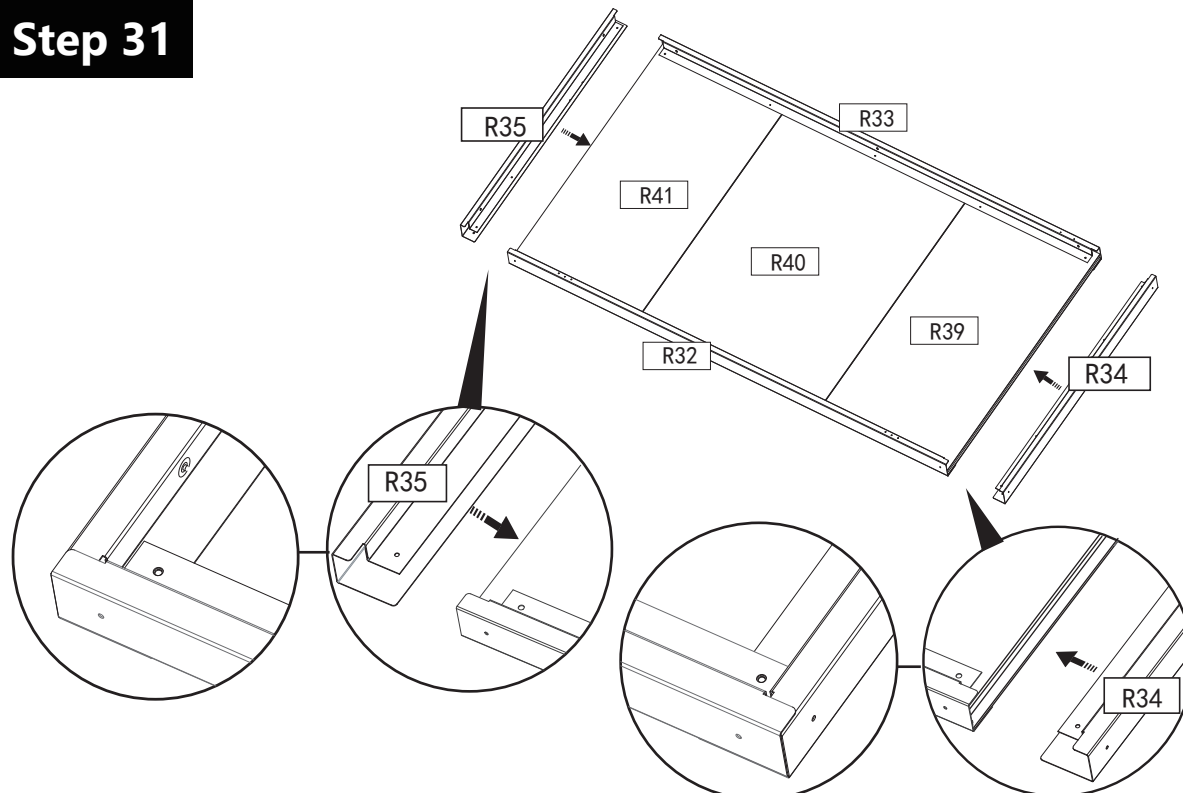

R35



1 PC

R34




1 PC

SG8




R32 or R33


R34 or R35

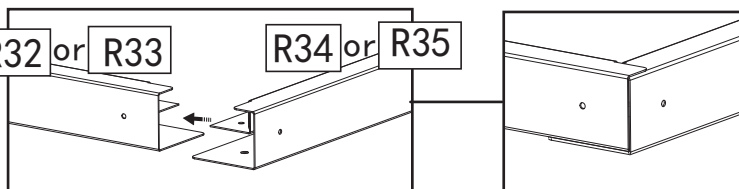


Step 32

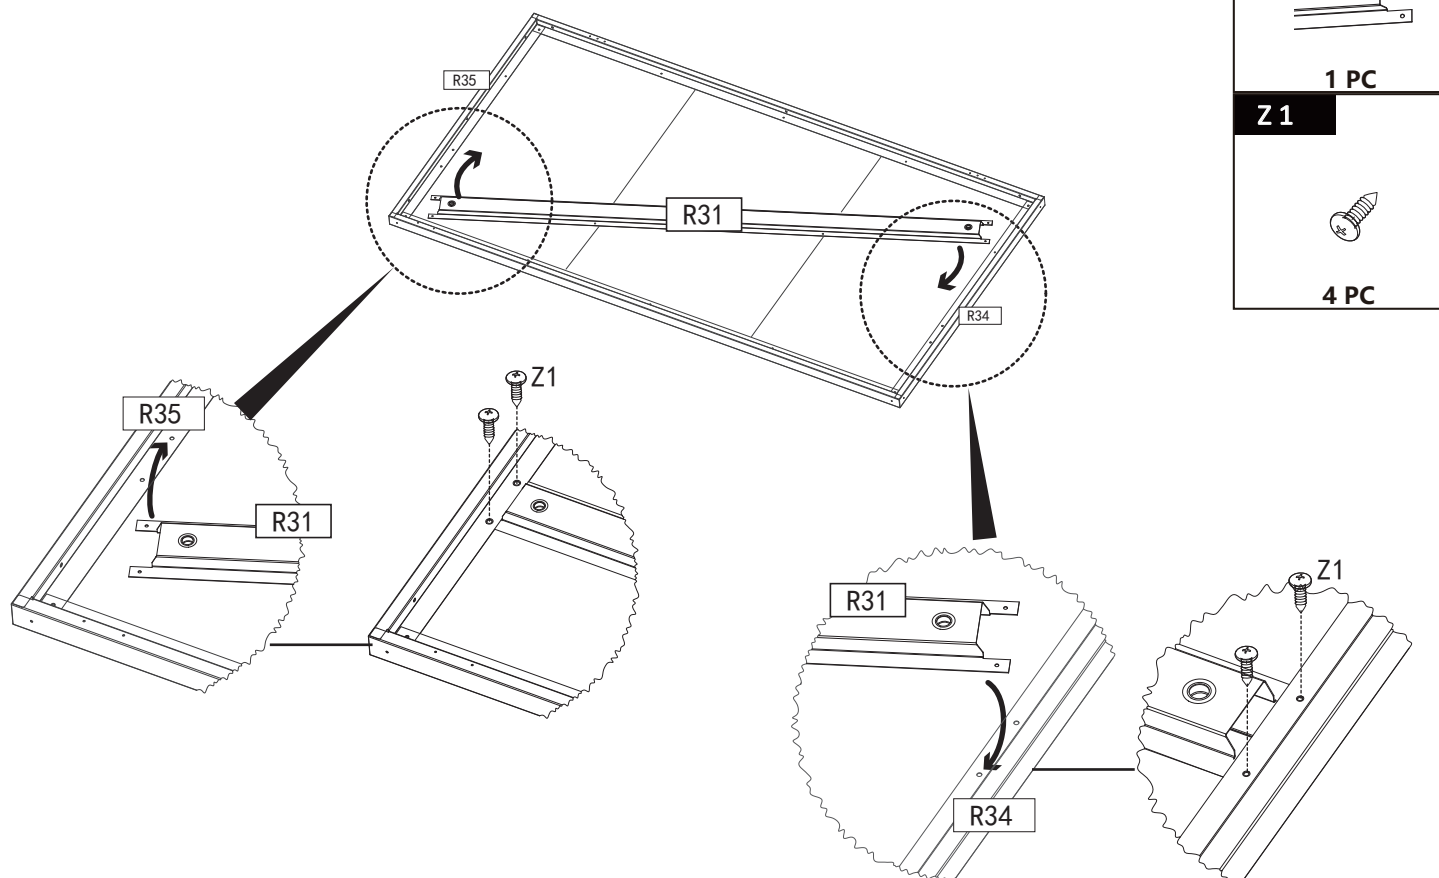

Step 33

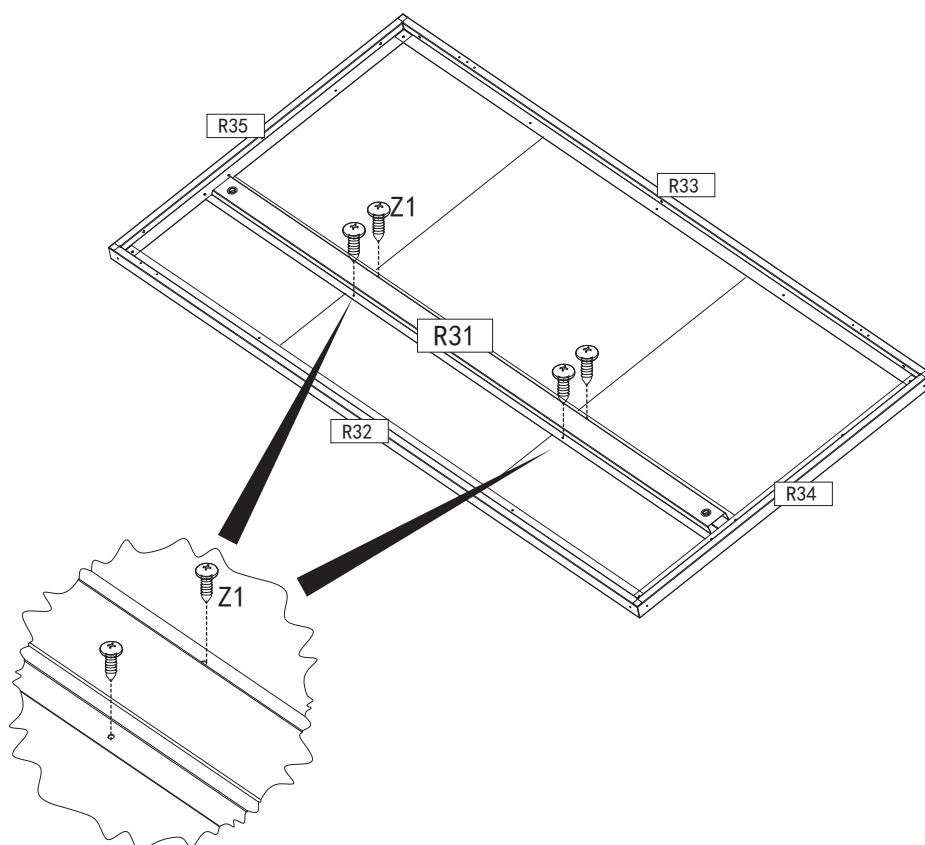

Step 34

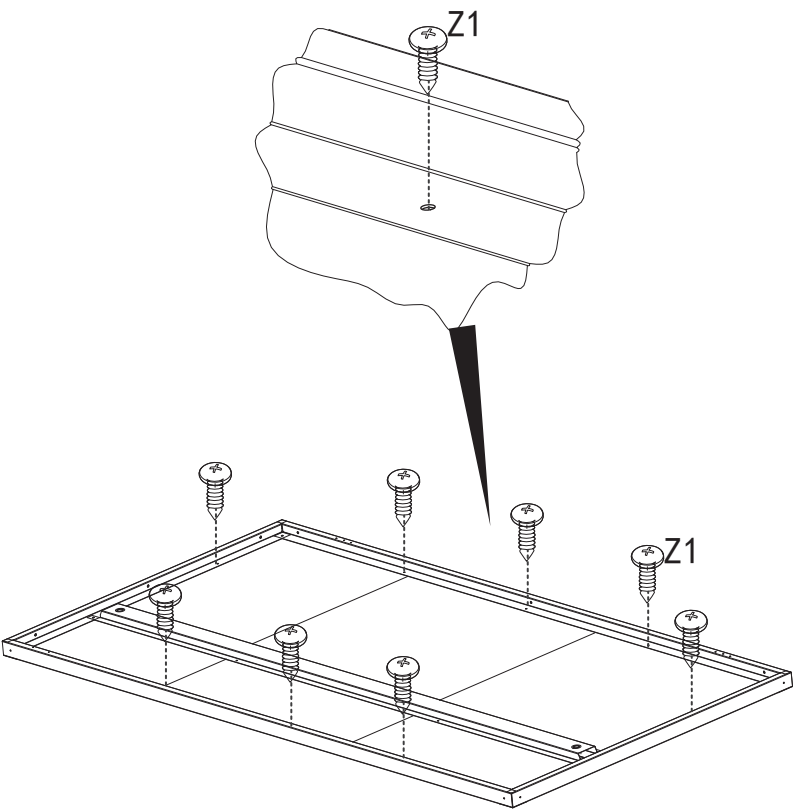


Z 1




8 PC

Step 35

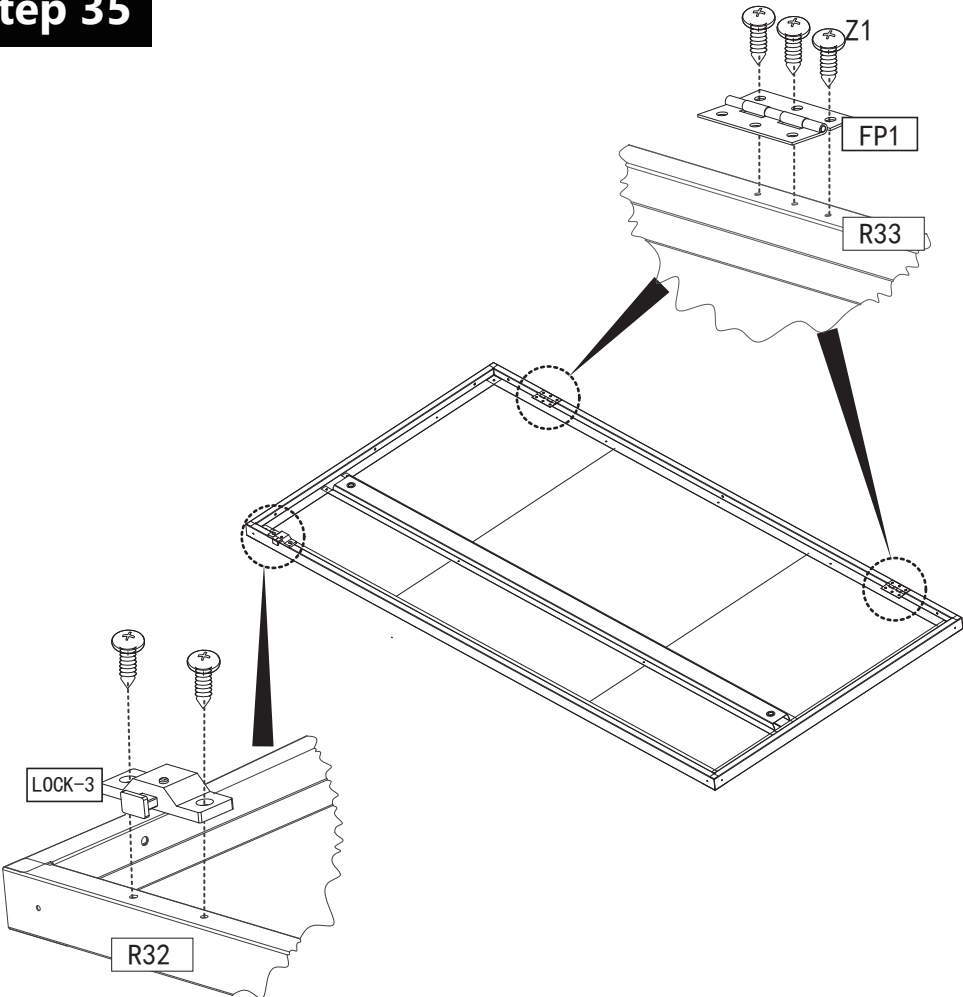


FP1



2 PC

LOCK-3




1 PC

Z 1




6 PC

Step 36

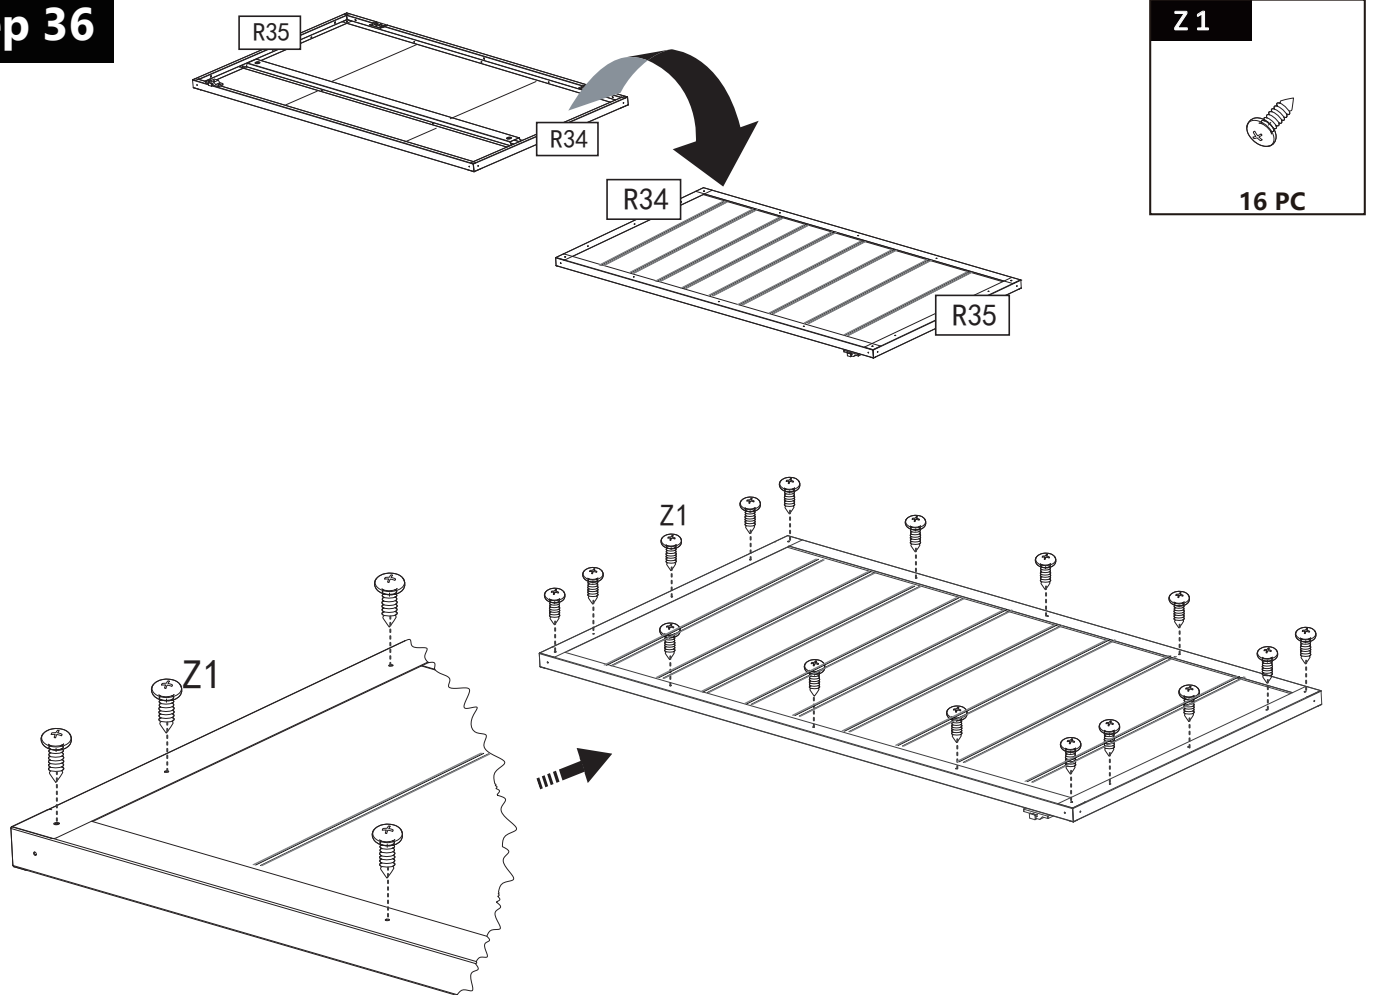

Step 37

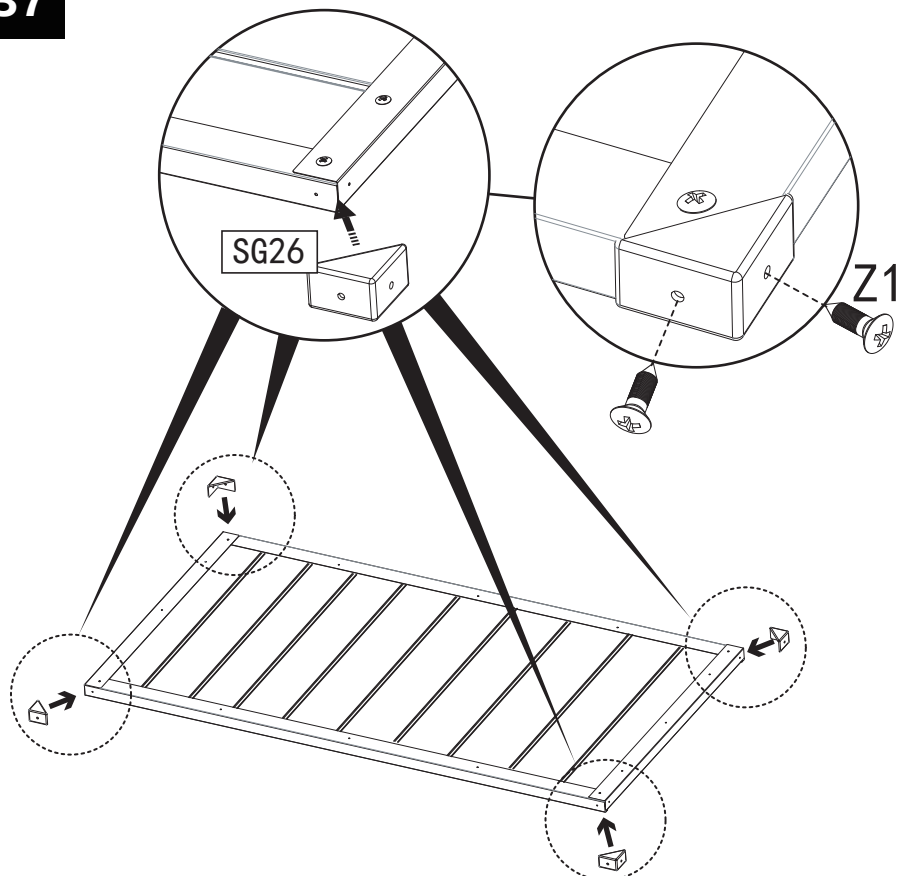

SG26




4 PC

Z 1



8 PC


Step 38

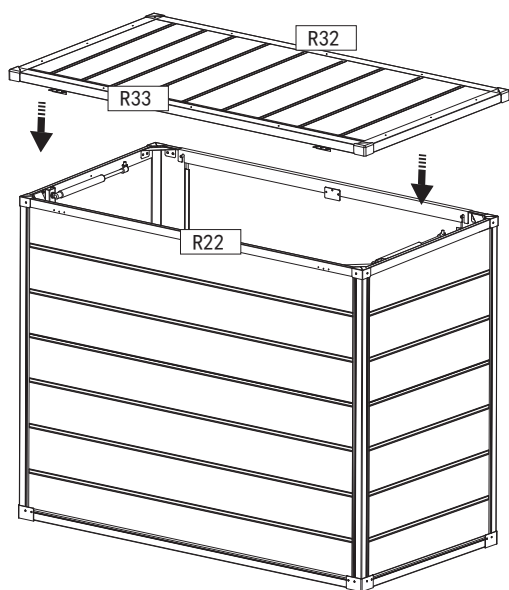



Z 1



6 PC

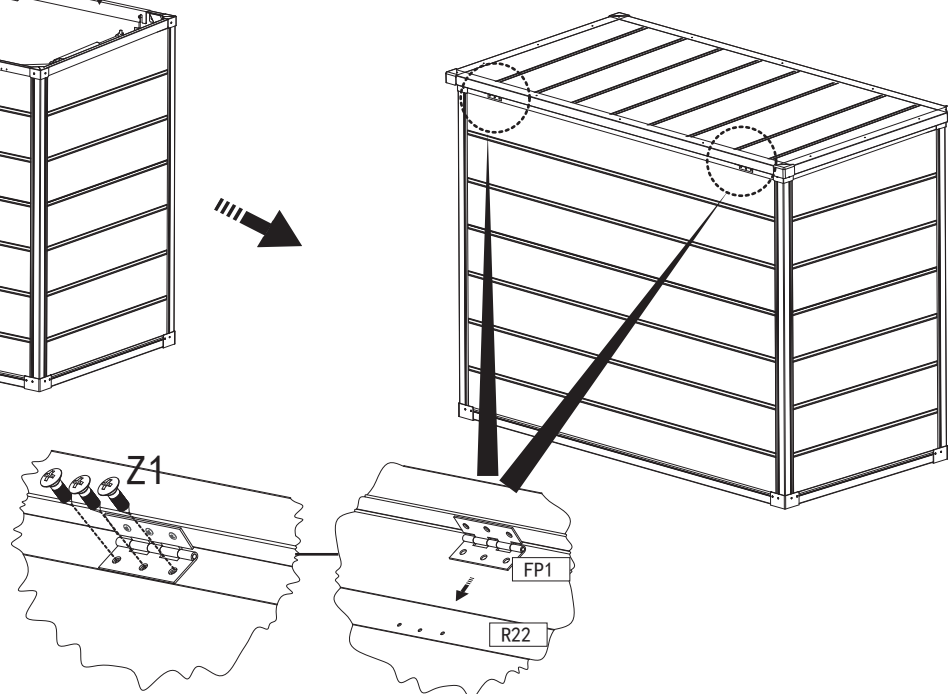


Step 39

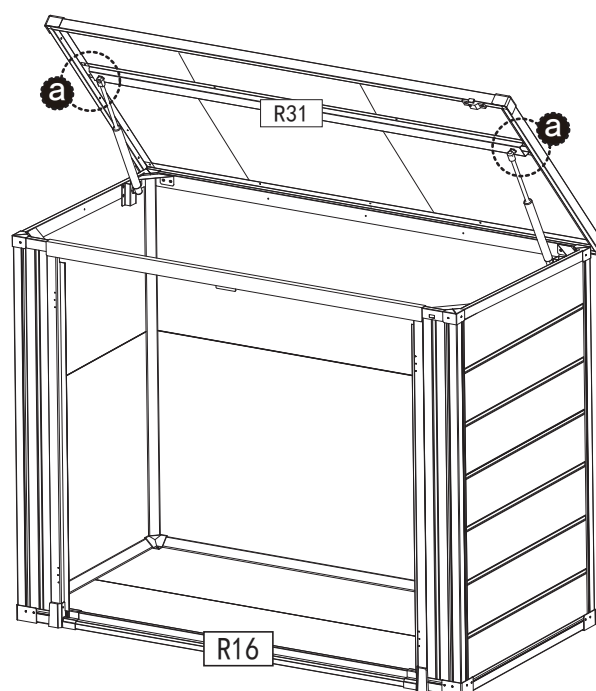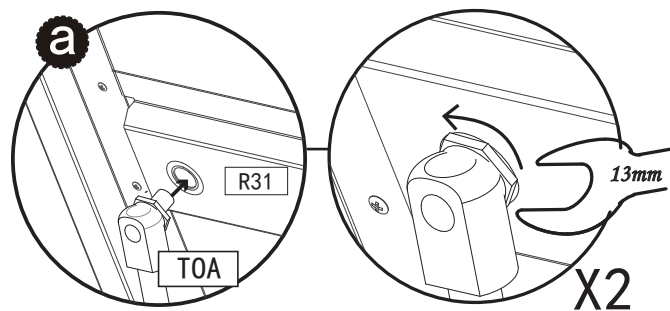

DOOR SECTION




Door mount this is above

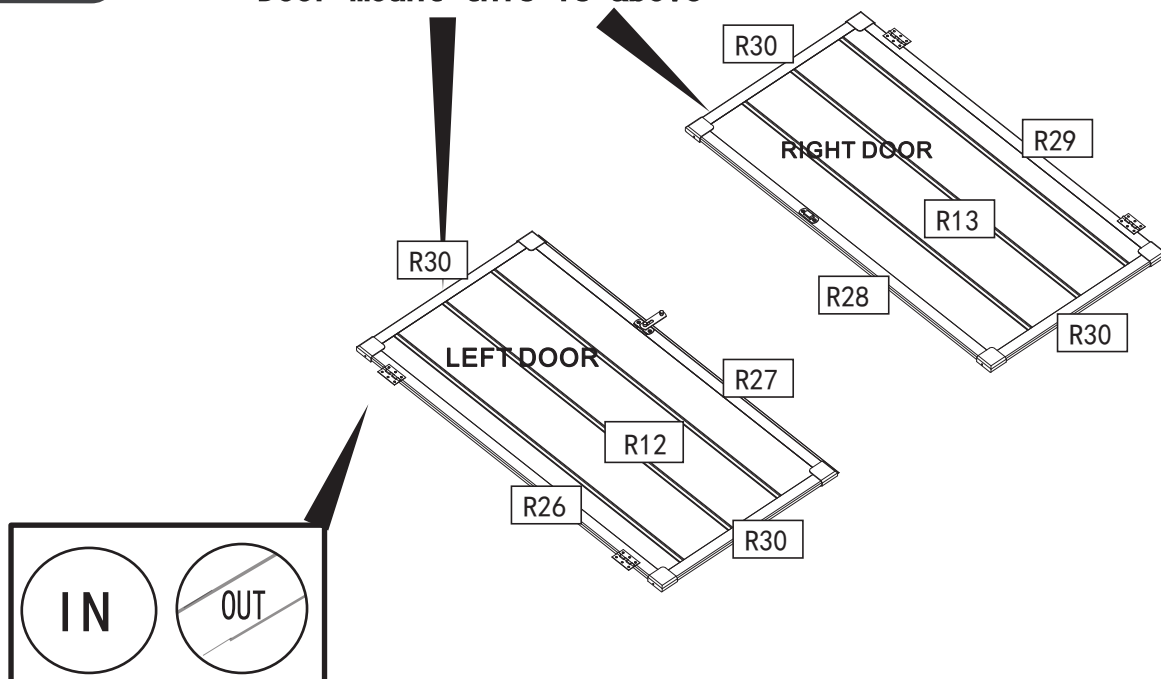


The stripes should be outside

Step 40

LEFT DOOR

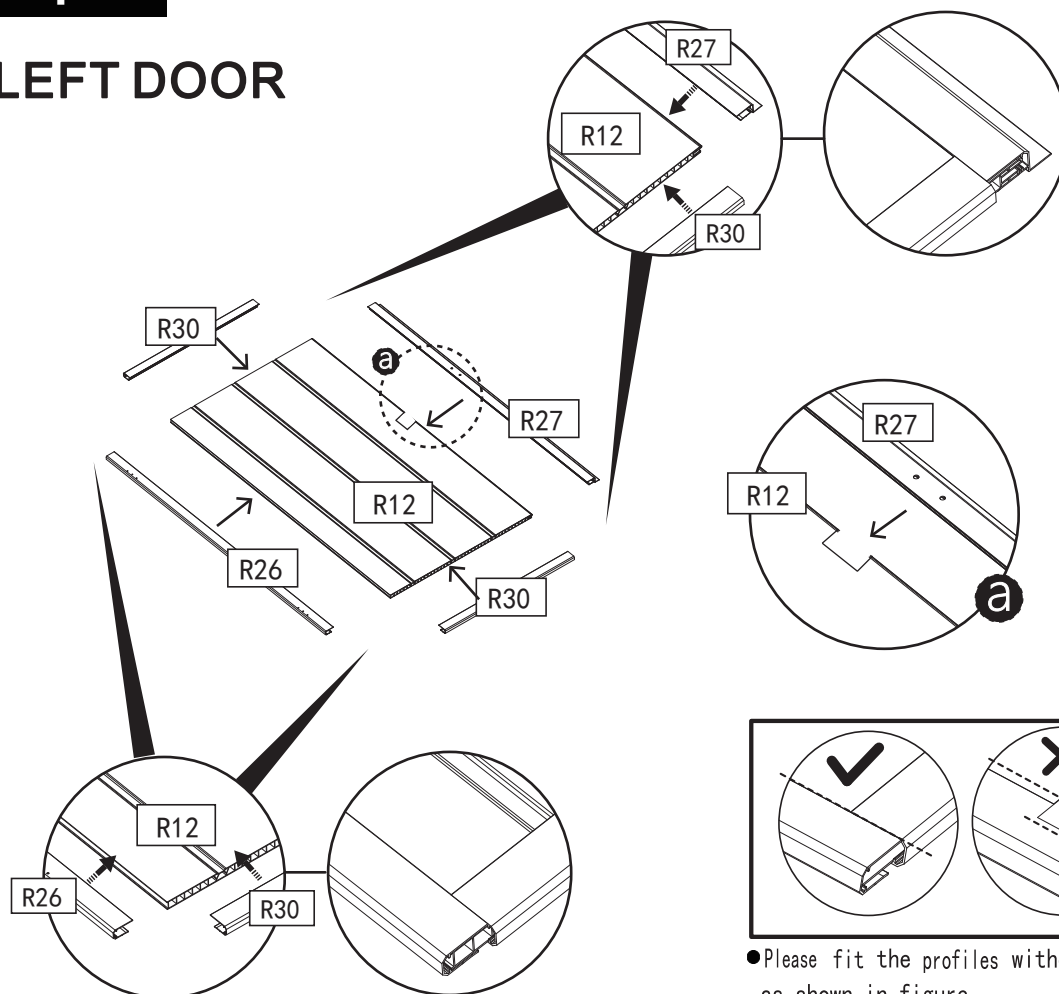


R12




1 PC

R27




1 PC

R26




1 PC

R30




2 PC

SG8

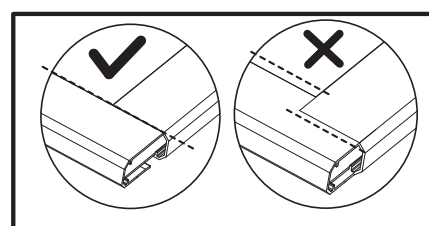


● Please fit the profiles without overlap as shown in figure

Step 41 RIGHT DOOR

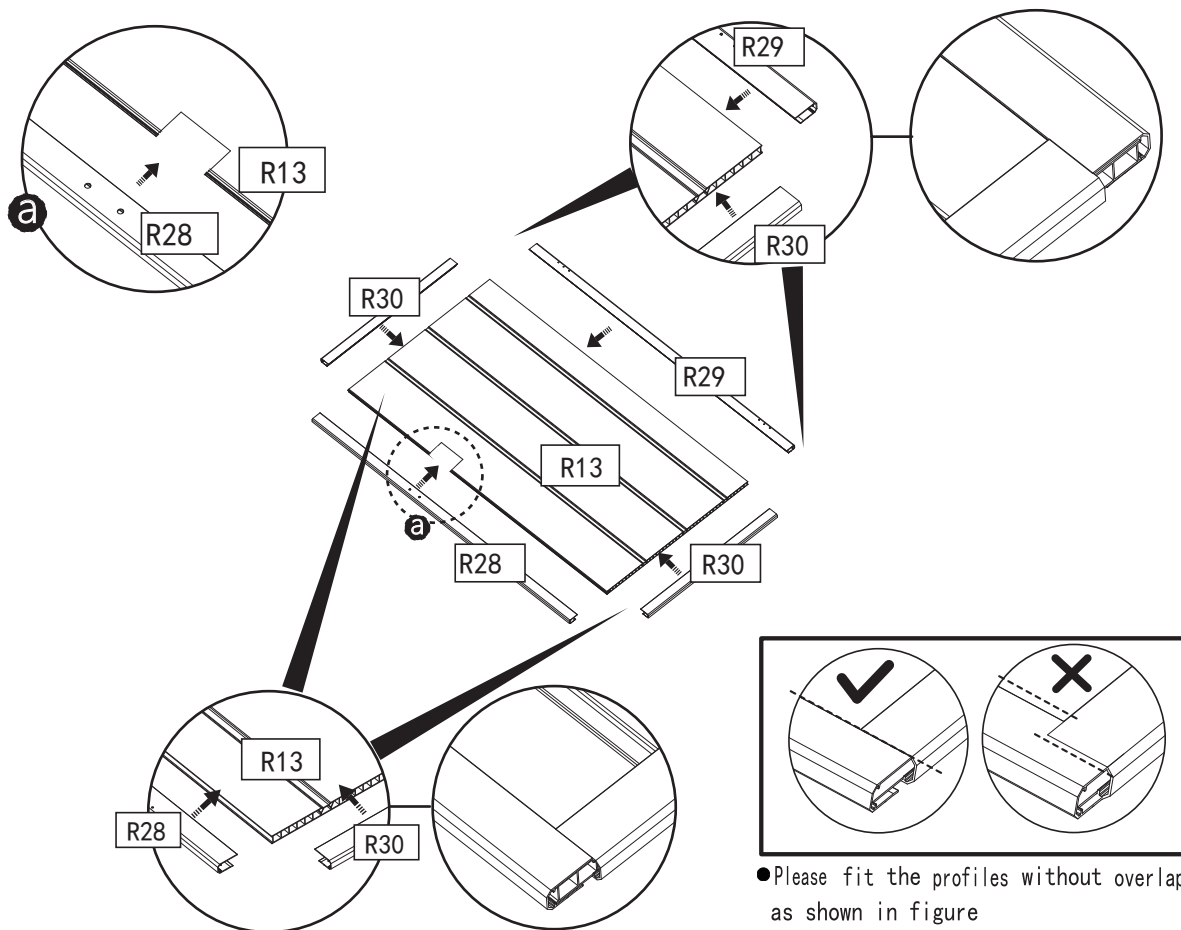


R13



1 PC

R28



1 PC

R29



1 PC

R30




2 PC

SG8



Step 42

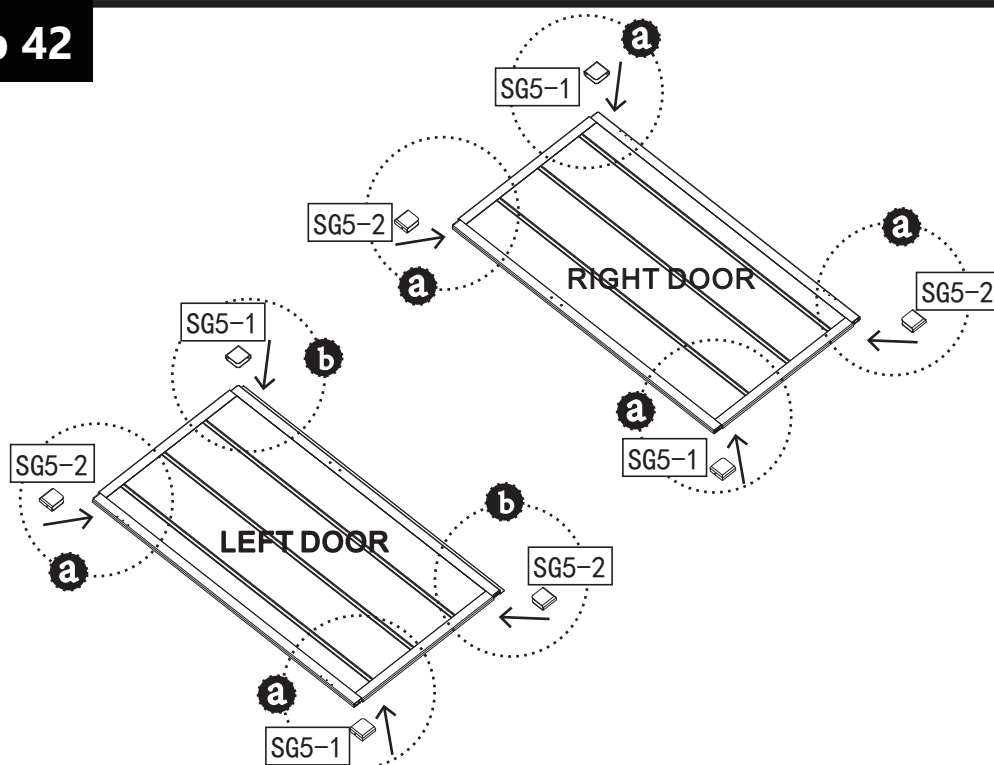

SG5-1





4 PC


SG5-2




4 PC

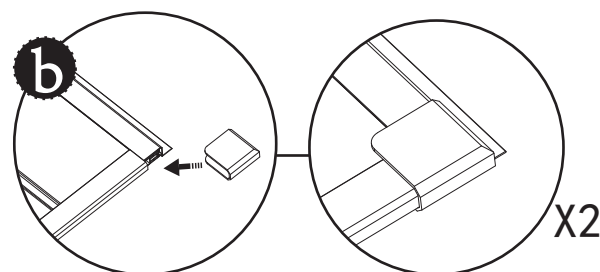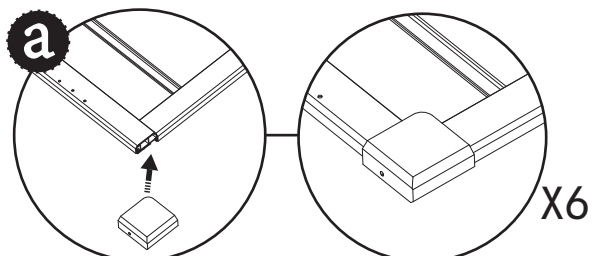

Step 43

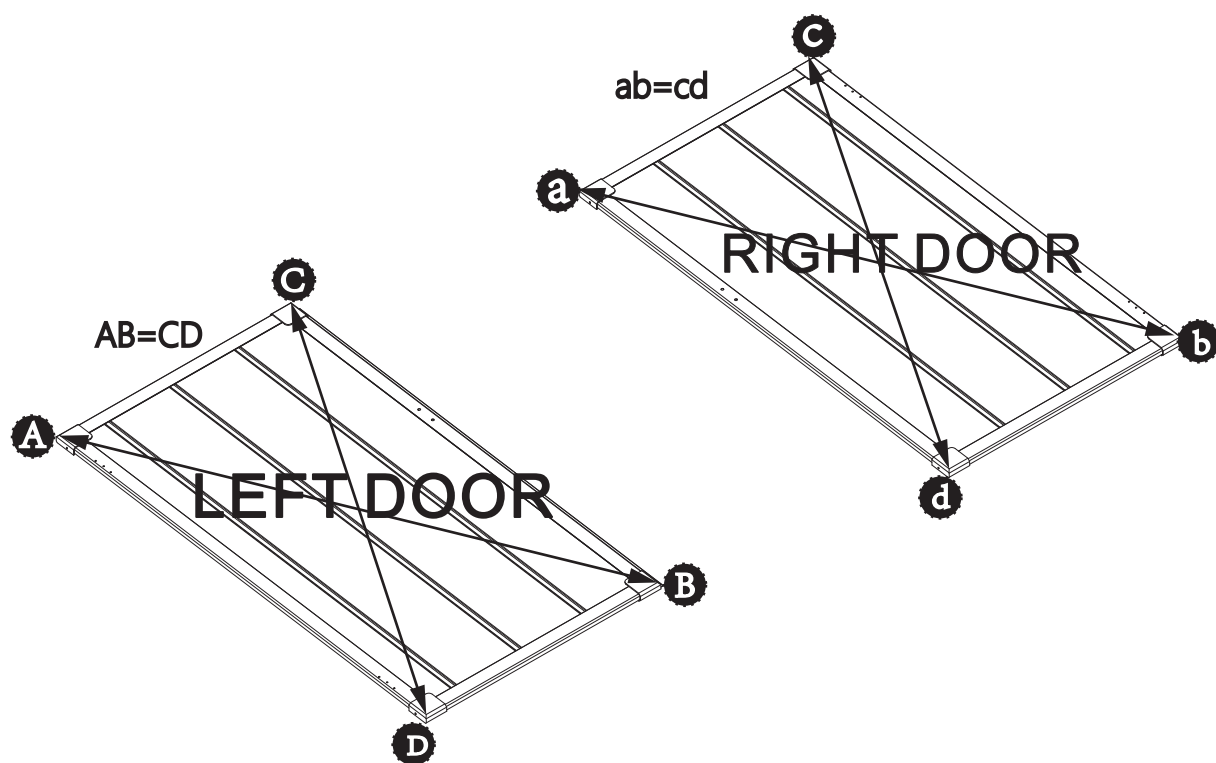

Step 44

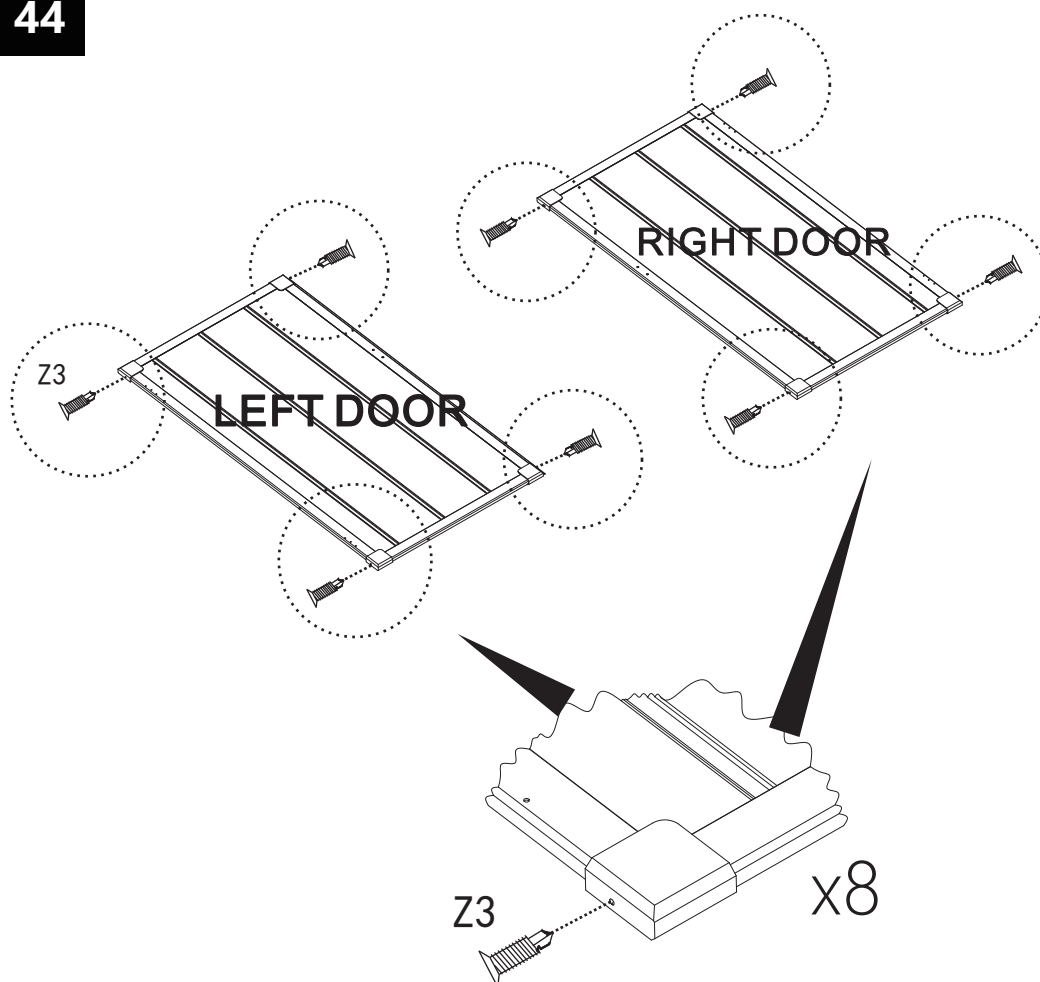


Z3




8 PC

Step 45

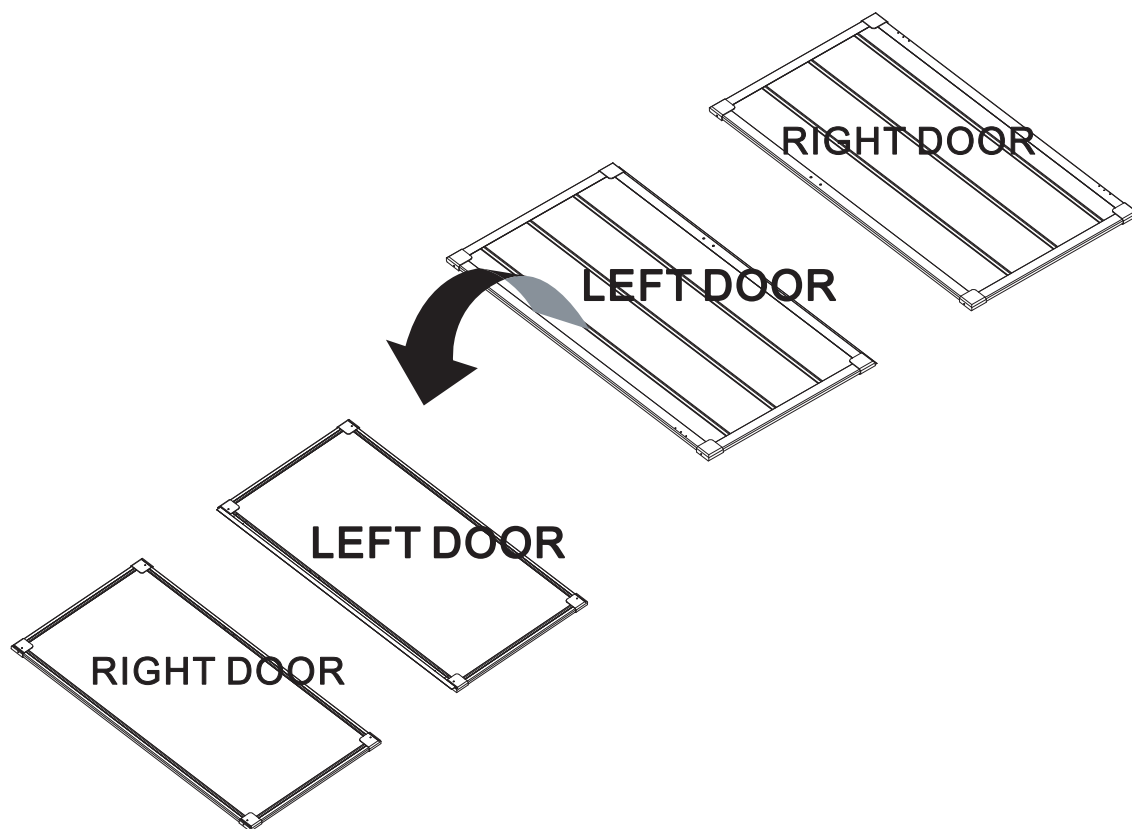

Step 46

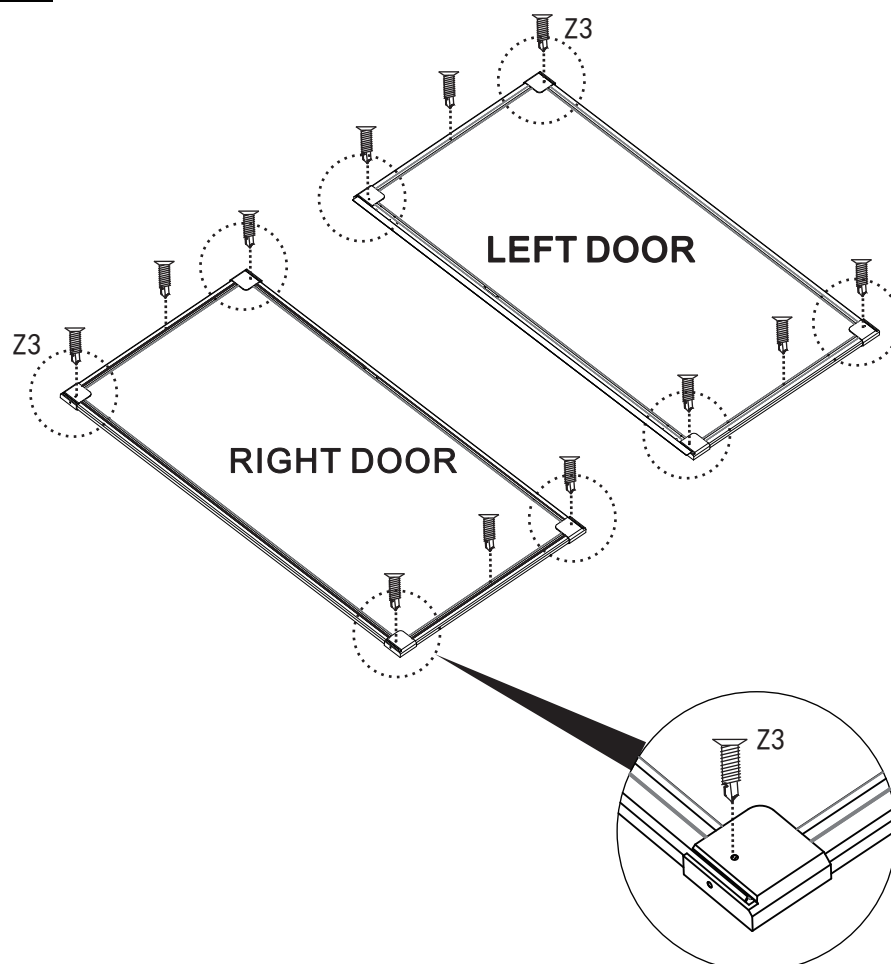


Z3



12 PC

Step 47

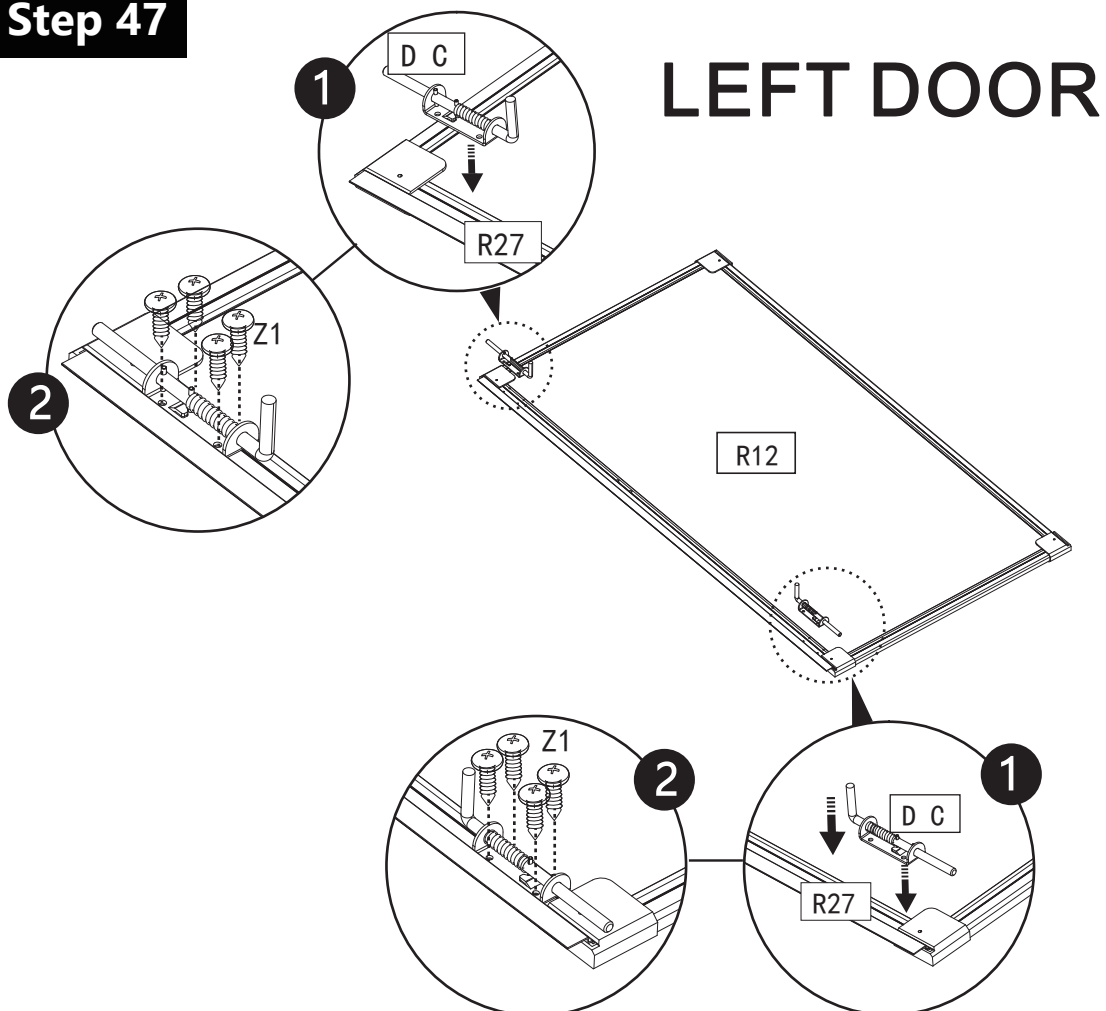

D C




2 PC

Z 1




8 PC


Step 48

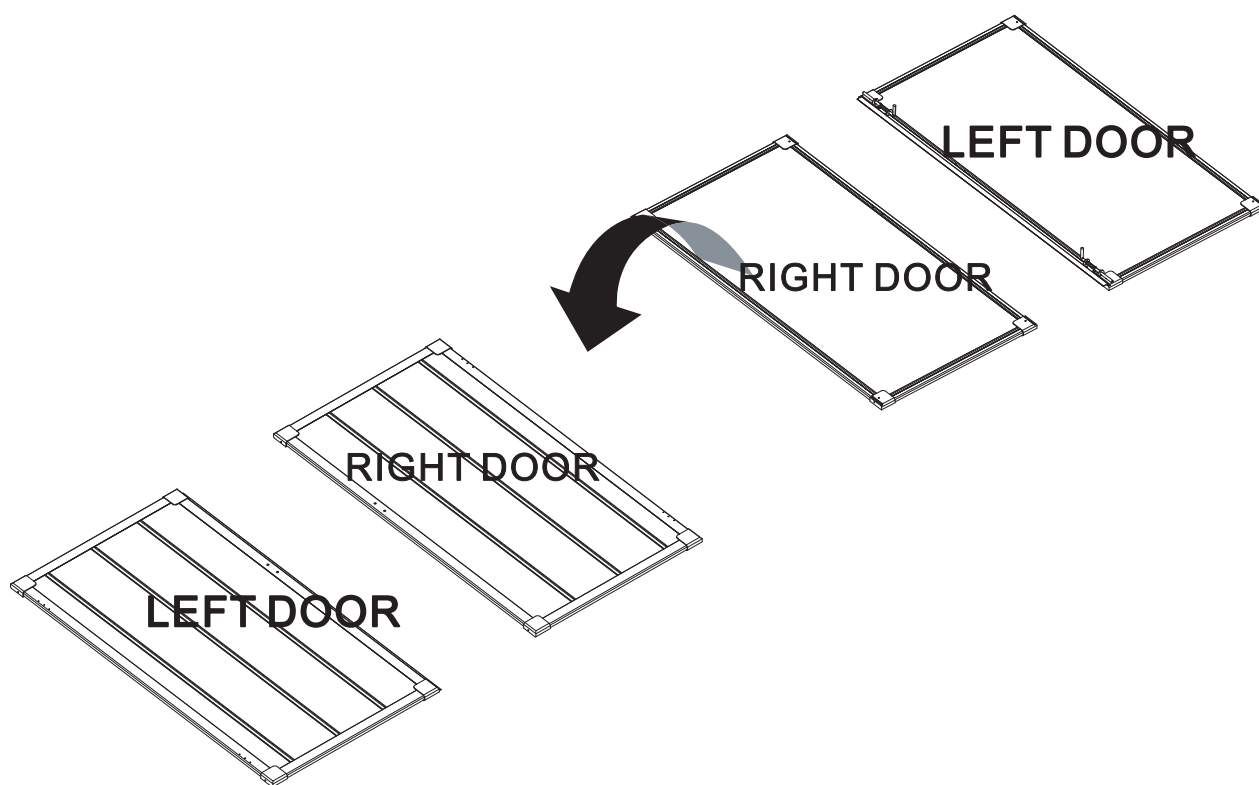

Step 49

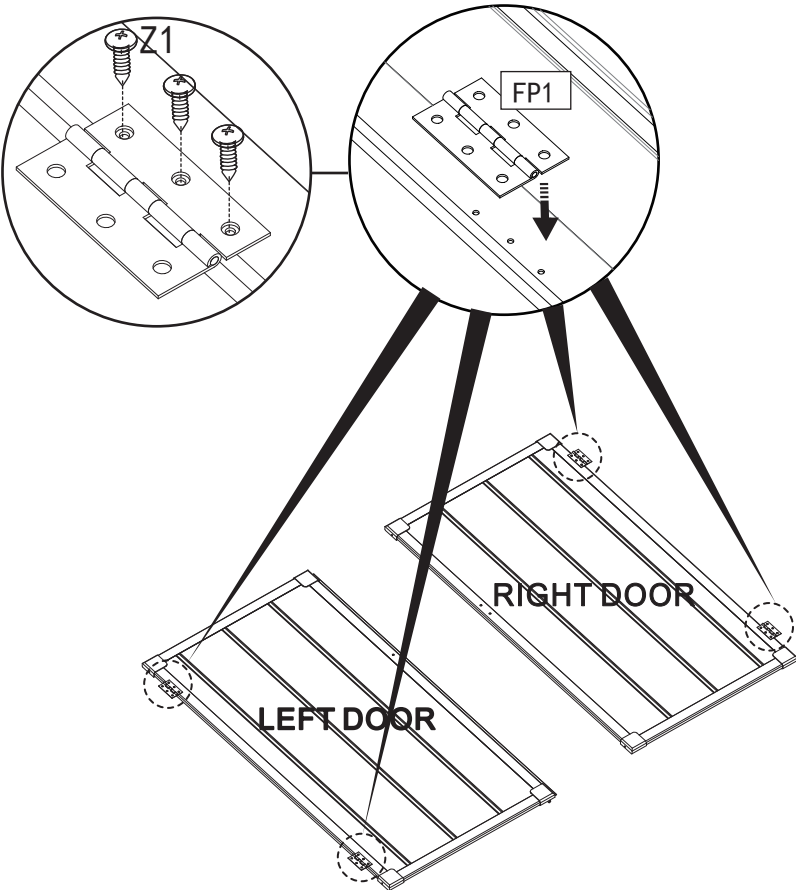

FP1



2 PC

Z 1



12 PC


Step 50



Z 1



12 PC

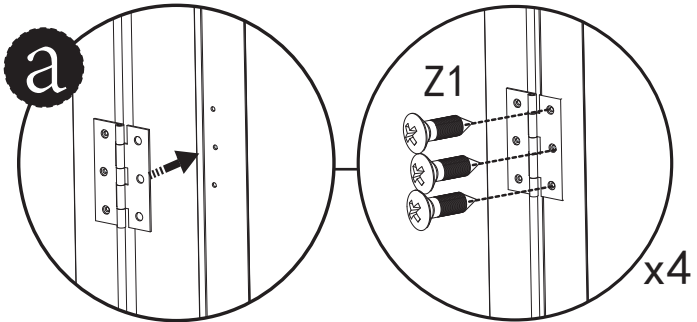

Step 51

LOCK-1




1 PC

LOCK-2










1 PC


RF6





4 PC

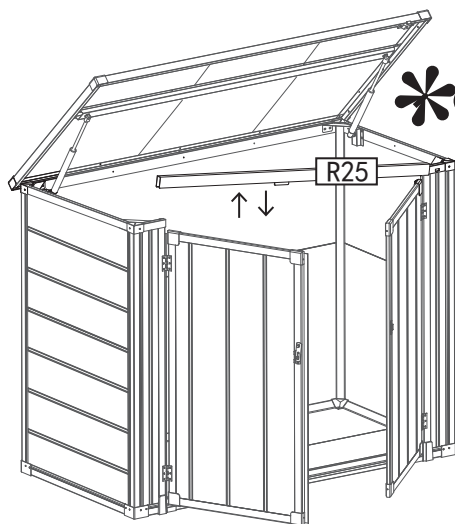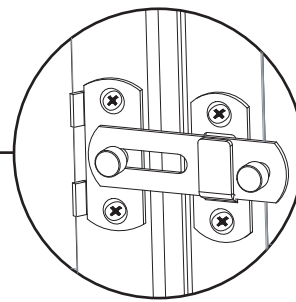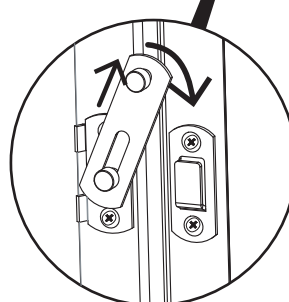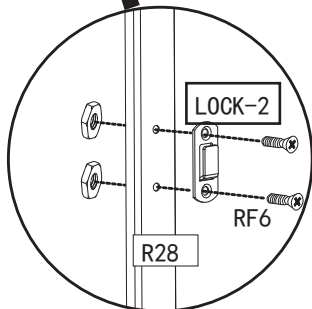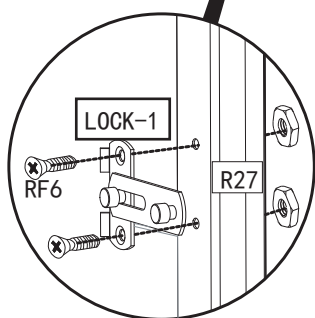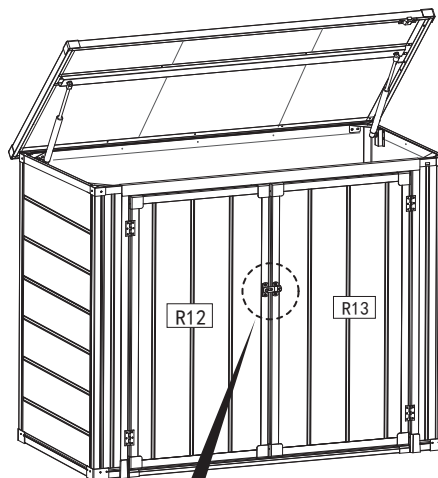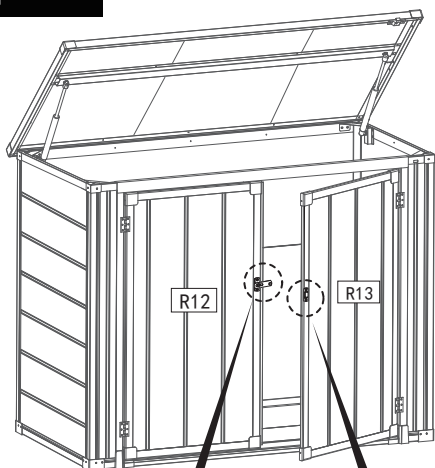

R25 can be removed when needed.

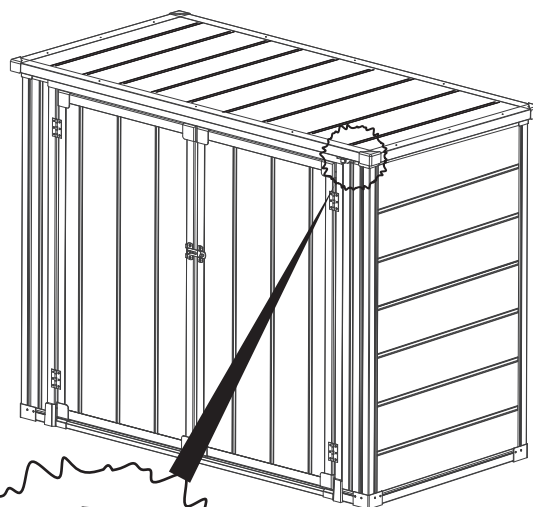

Press the button to lock after putting down the cover.

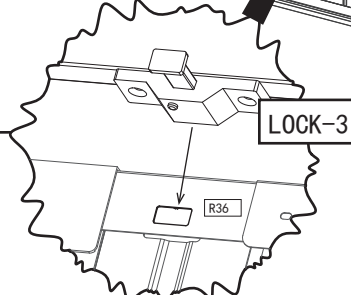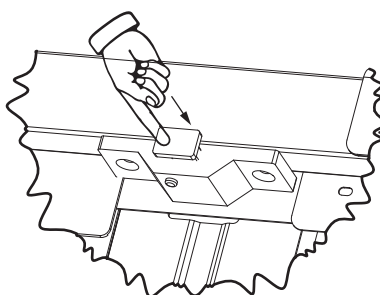

PARTS SCHEMATIC

