


⚠ **Please note: Items cannot be returned once assembled.**

Installation & Assembly

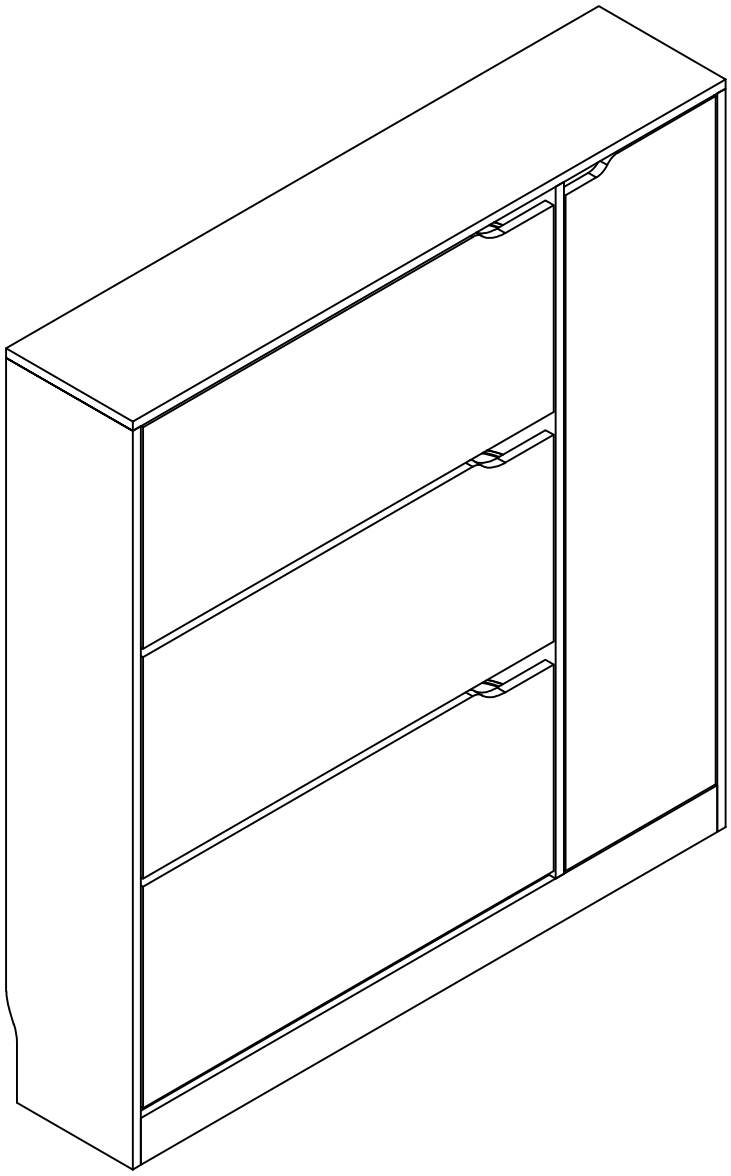


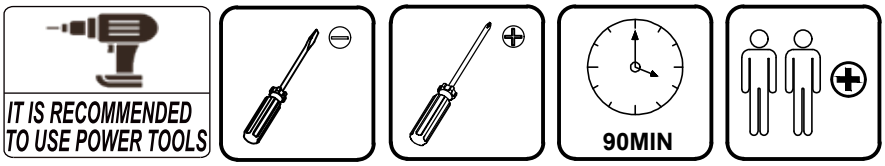


***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

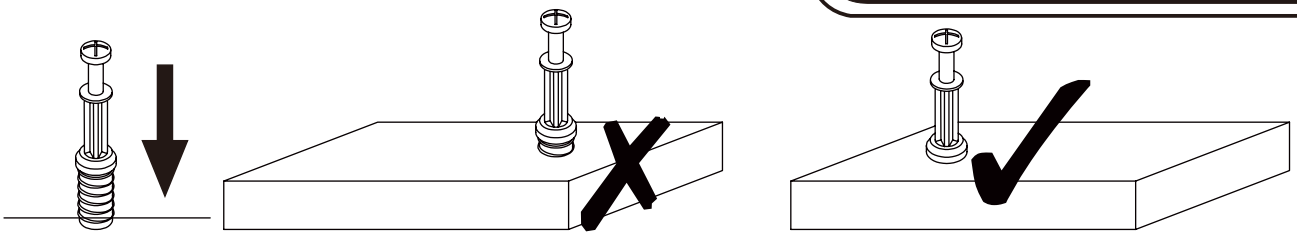


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.

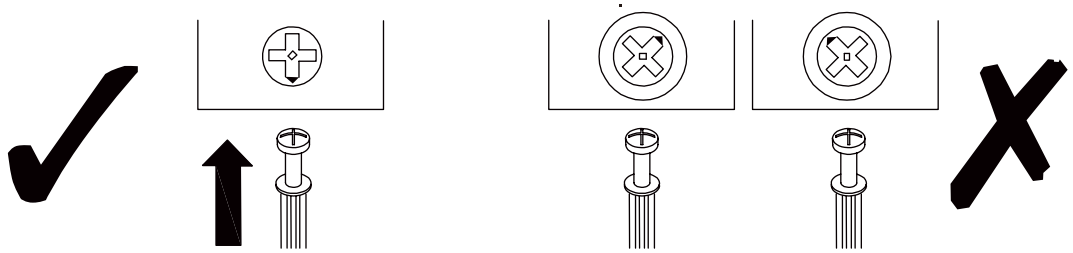











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




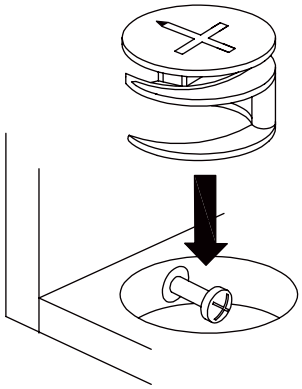



EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

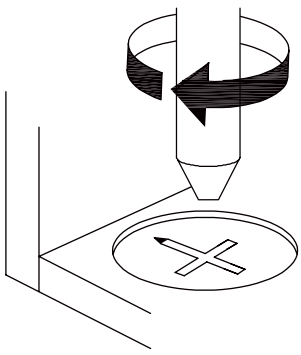


EN_ Turn cam lock clockwise to tighten.

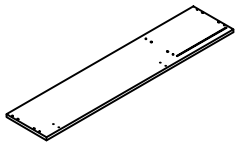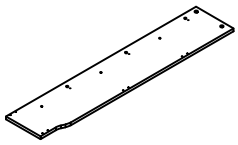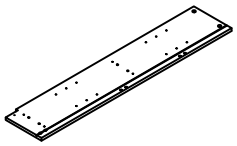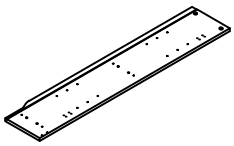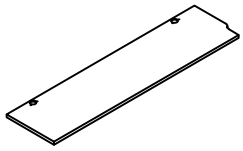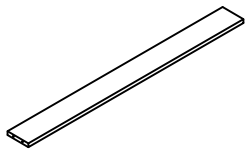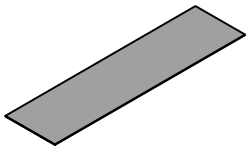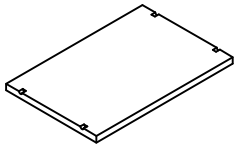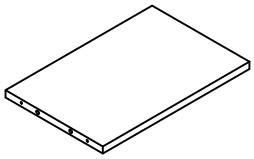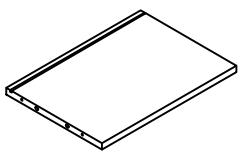NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x3	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	

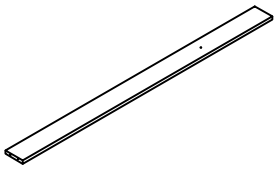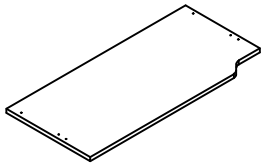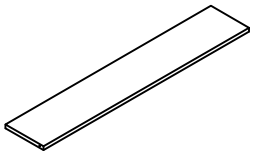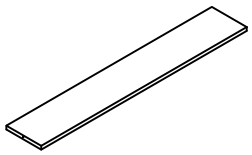
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x3	
⑬		x6	
⑭		x3	
	 Hardware Kit	x1	

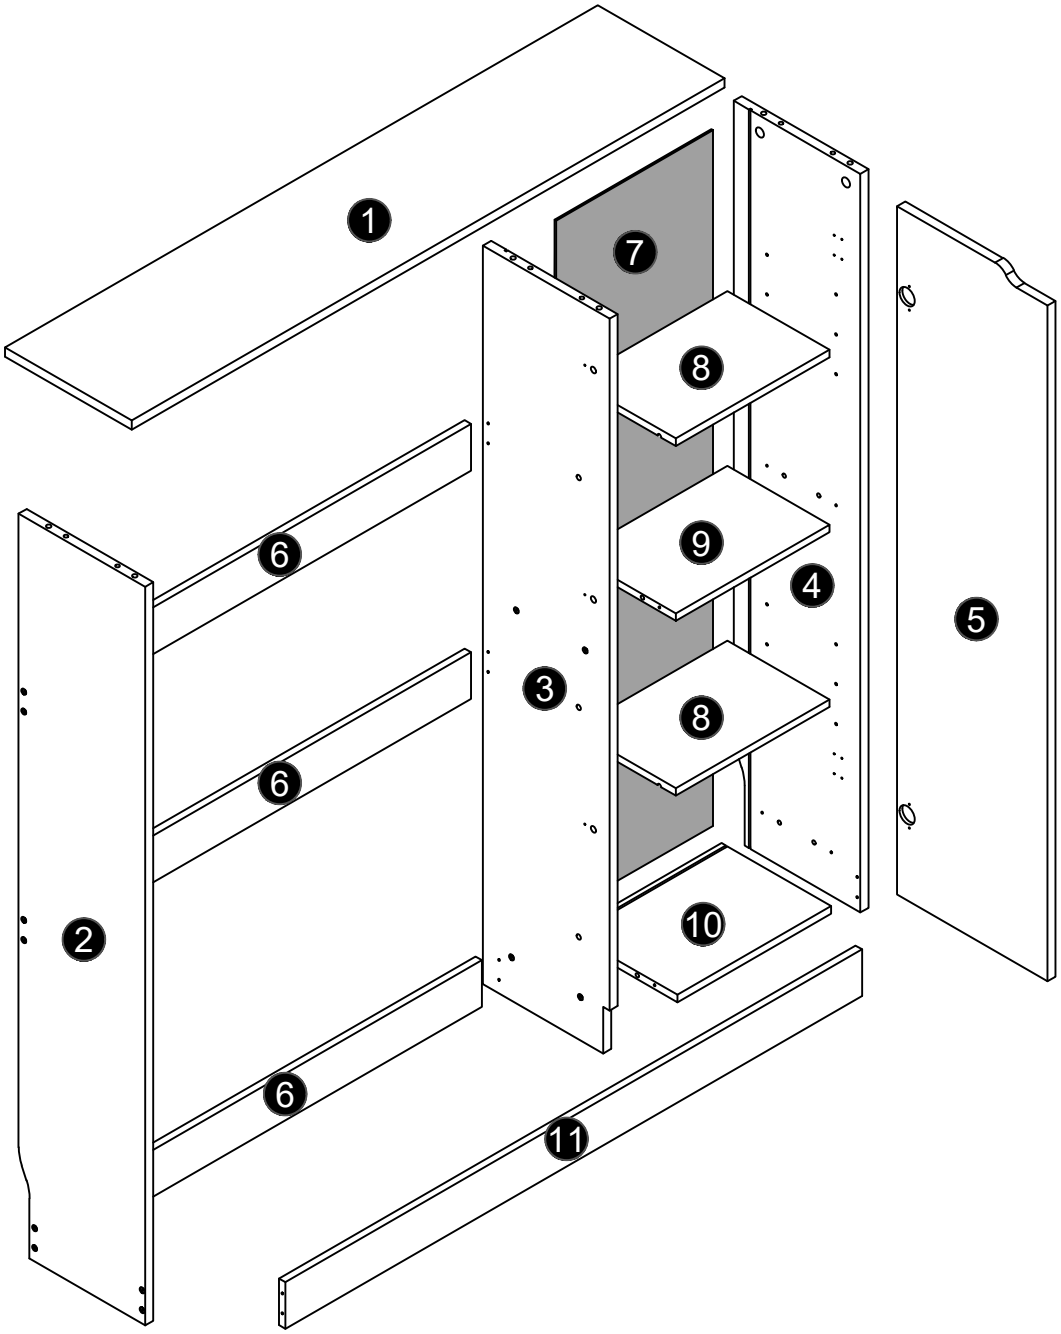
1
7
8
9
4
5
6
3
8
6
2
10
6
11

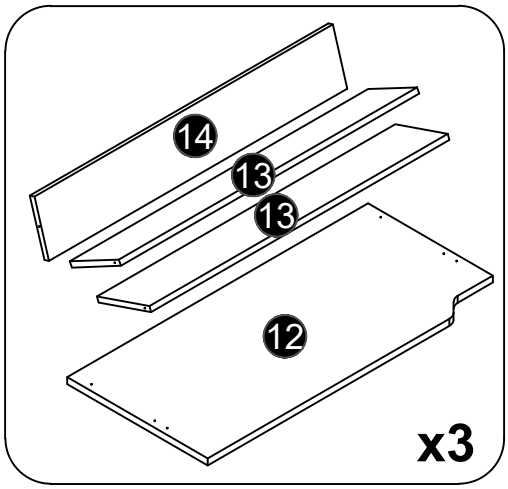
14
13
13
12
x3

A x6 Ø6x35mm +1(spare)	B x6 Ø15x10mm +1(spare)	C x14 Ø6x30mm +1(spare)	D x26 Ø4x35mm +2(spare)	E x56 Ø3.5x12mm +4(spare)	F x6 +1(spare)
G x6 +1(spare)	H x6 +1(spare)	I x1	J x2 J-1 J-2	K x2	L x3
M x18 +2(spare)	N x6 Ø3x16mm +2(spare) N-1 N-2	O x8	P x1	Q x2	R x3

E x3	F x3

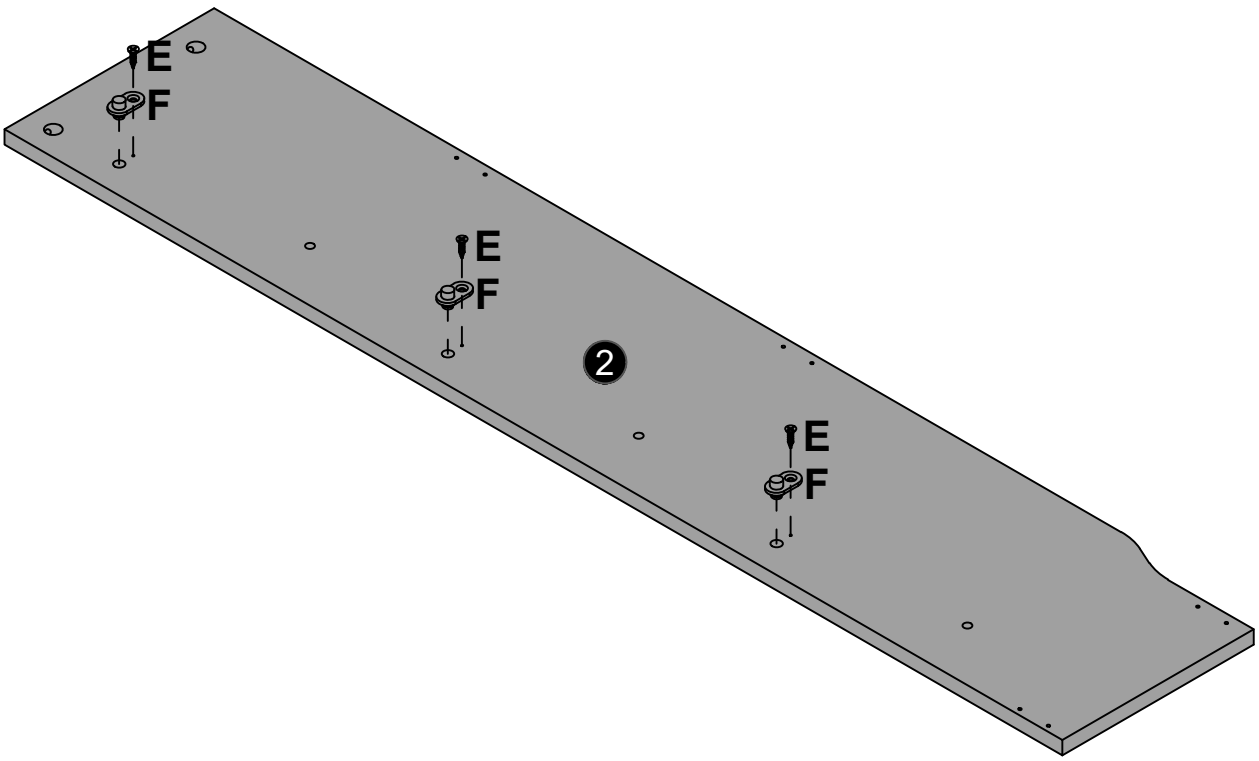


02

E x3



F x3



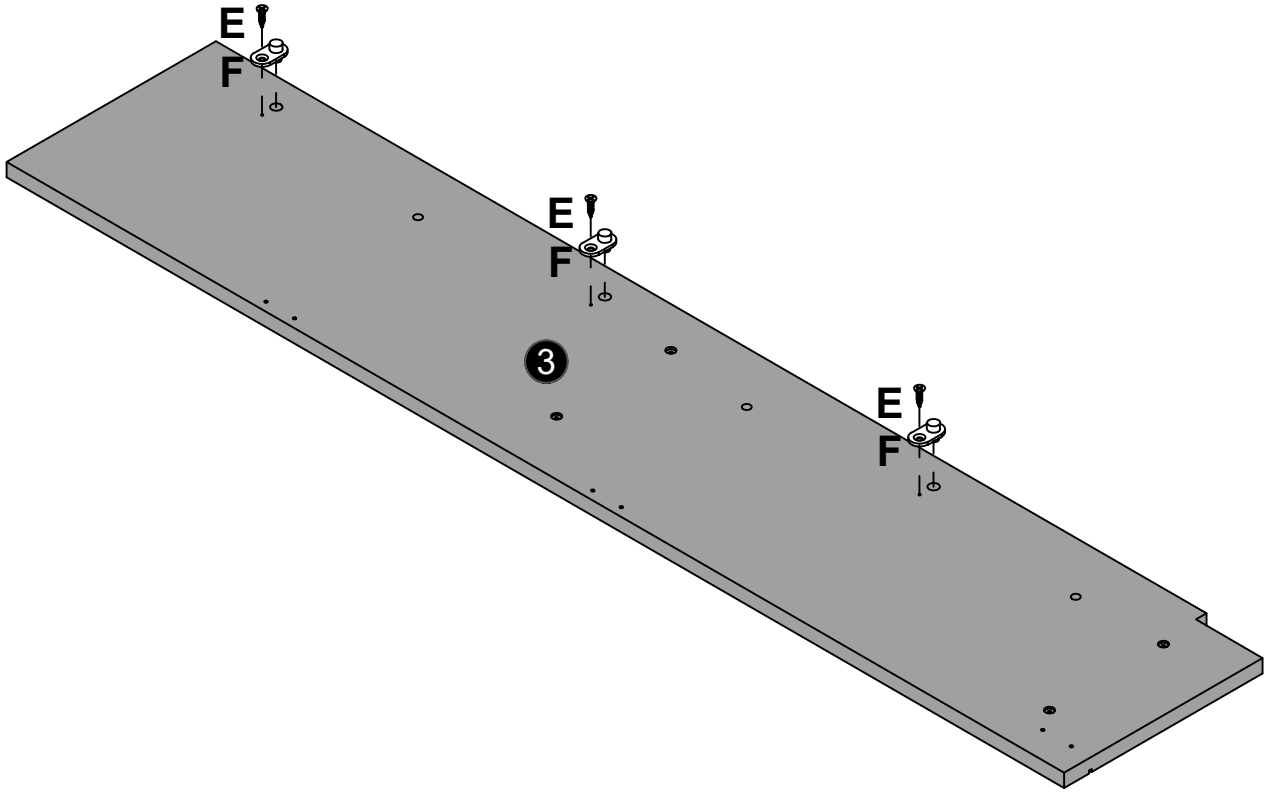


03

E x1




P x1




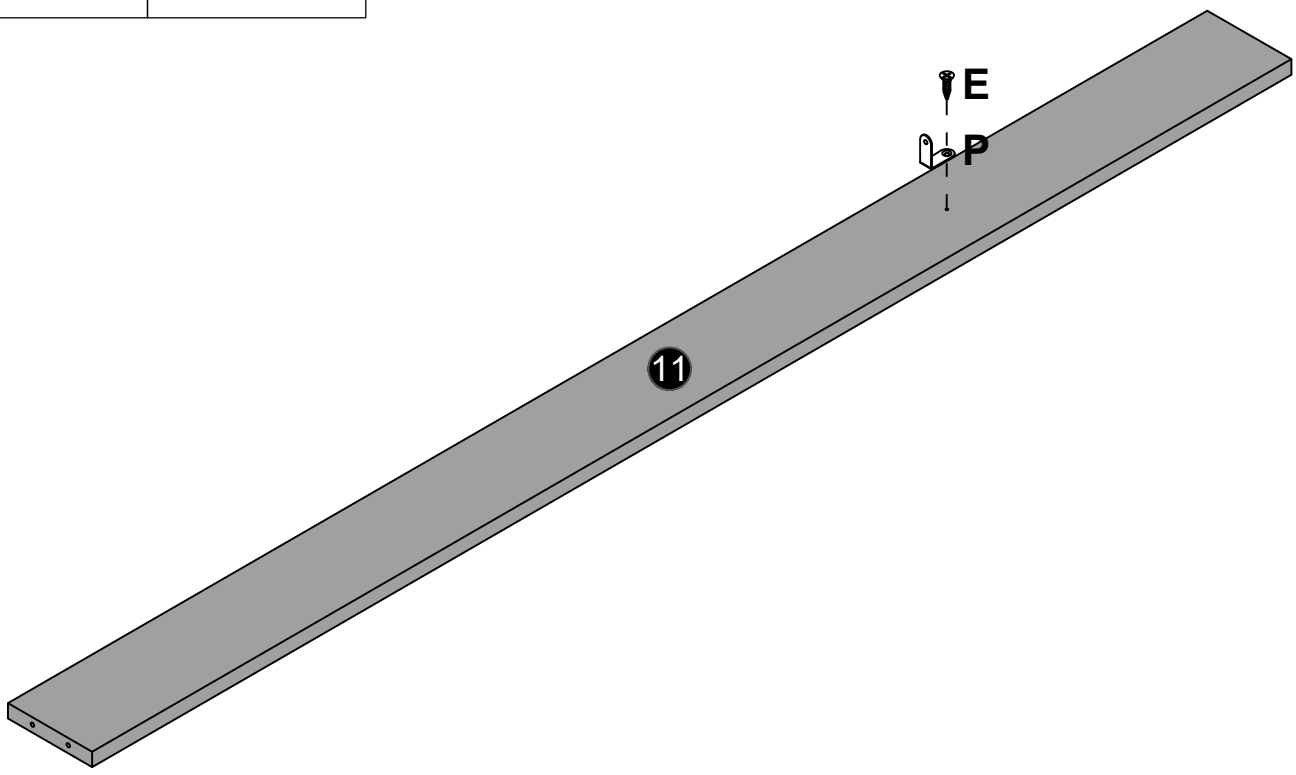


D x6




04

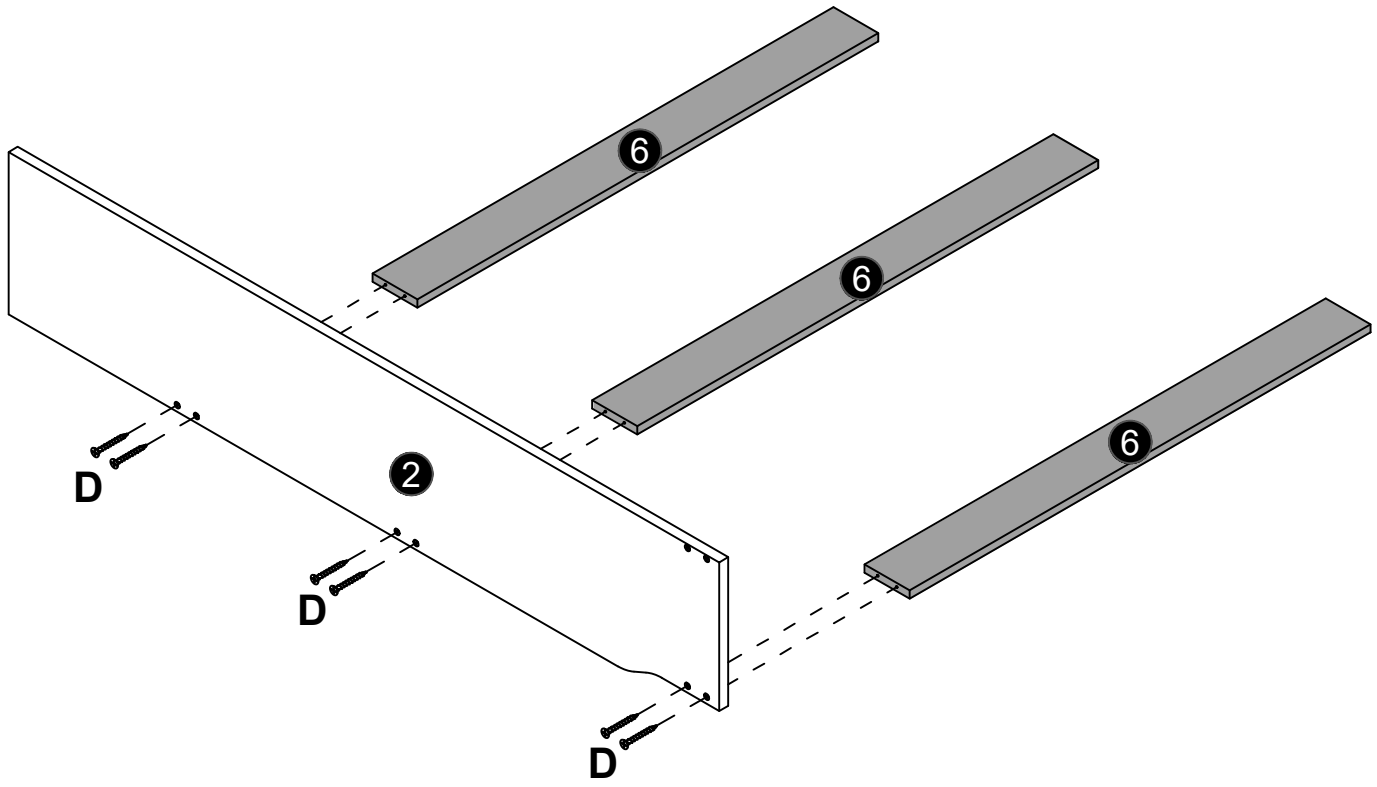

D x6




05

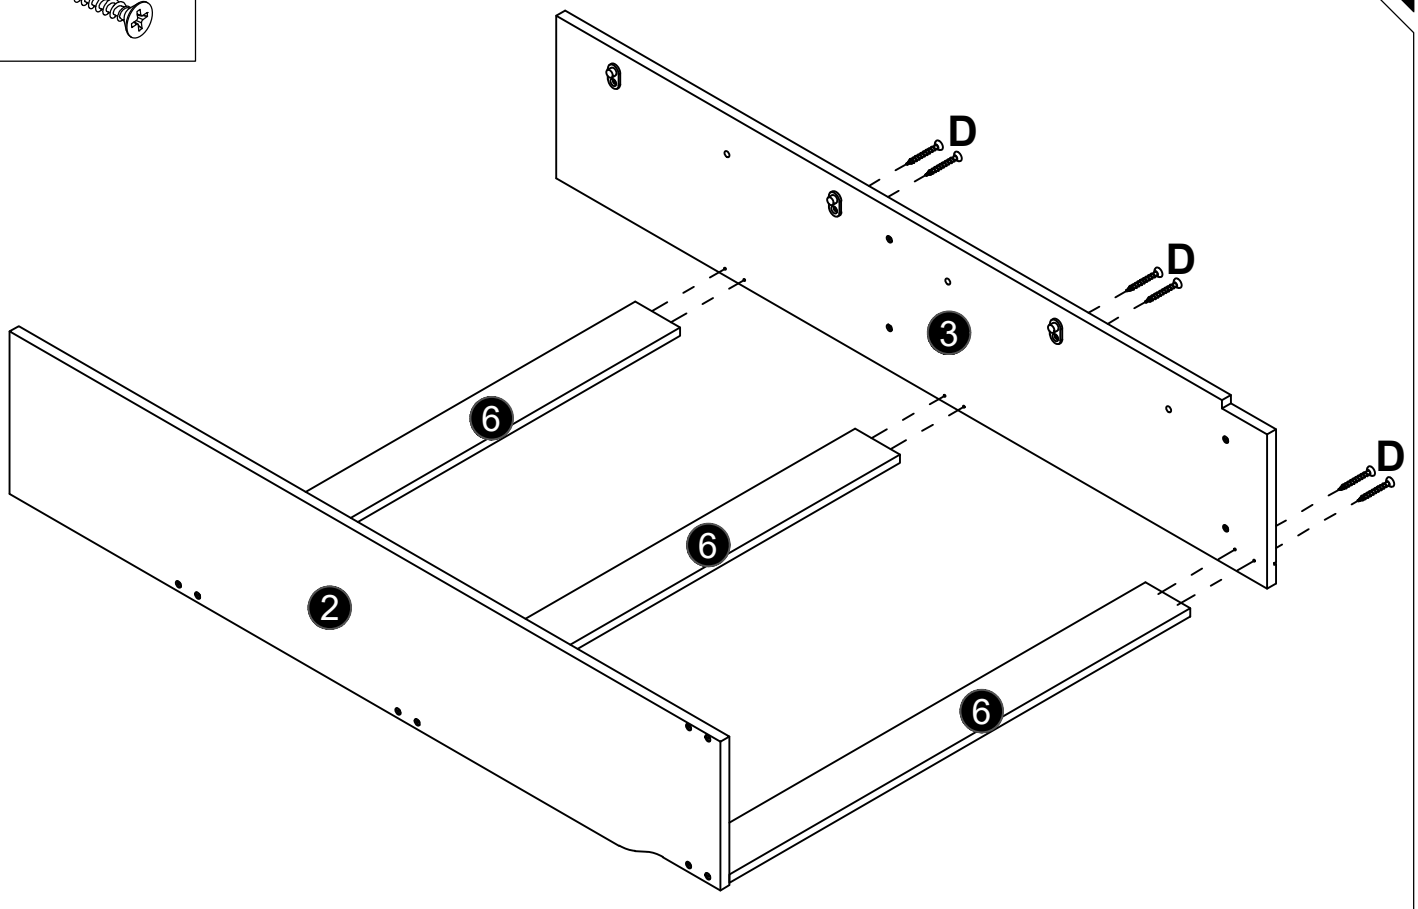


06

D x2




E x1



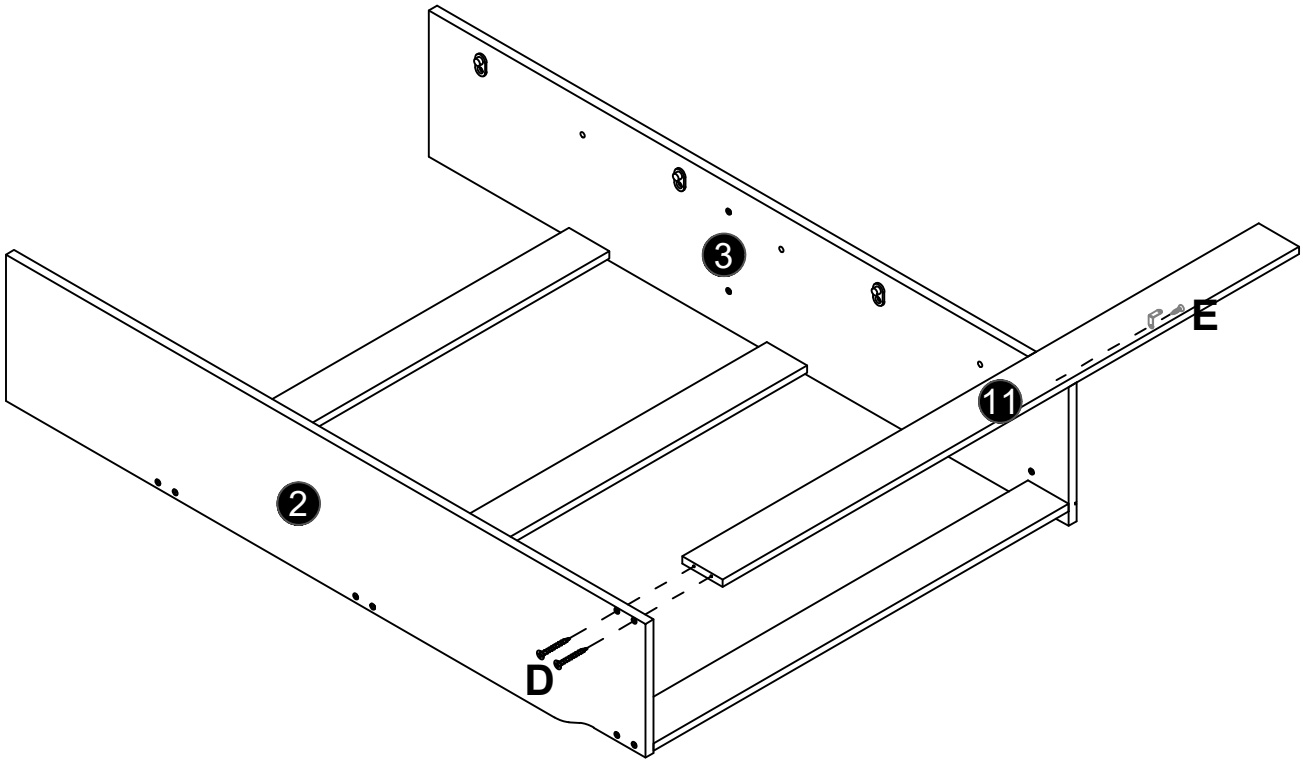



07


C x4




D x4



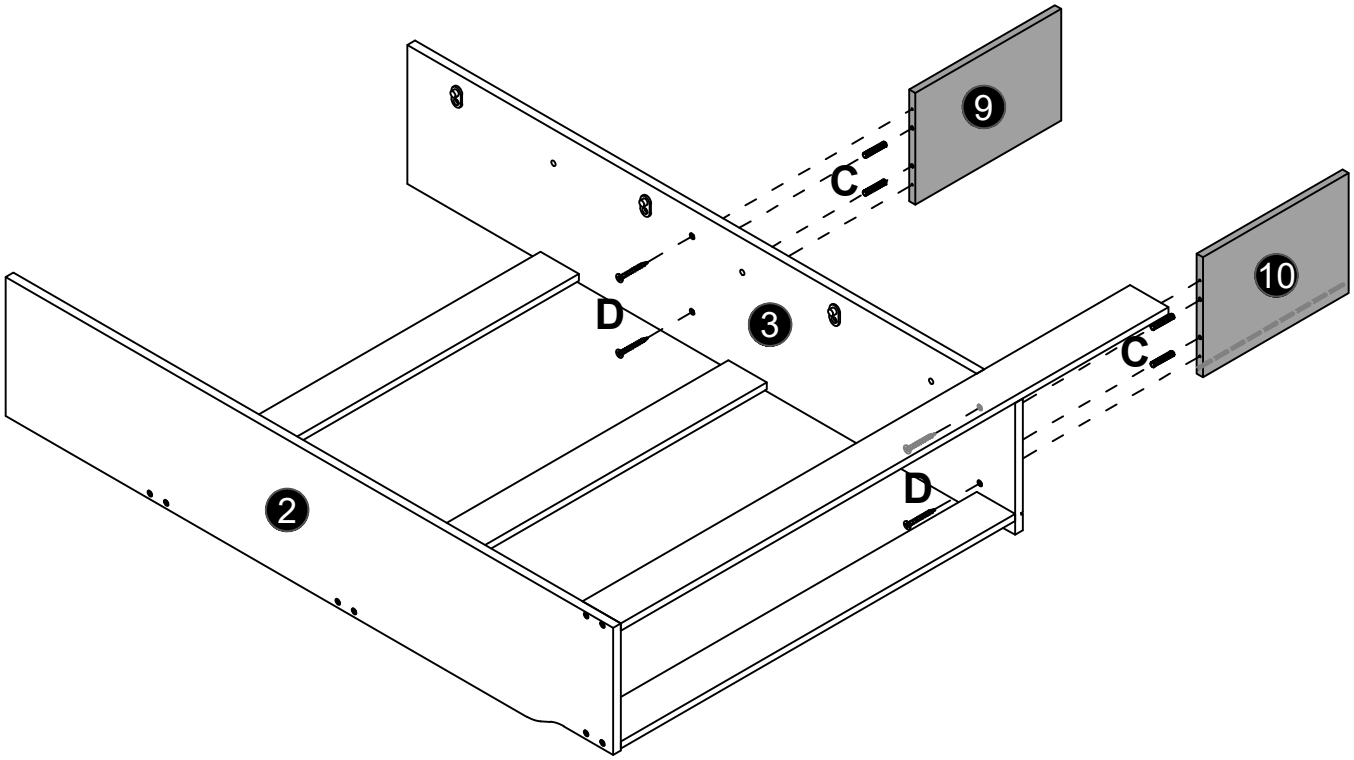


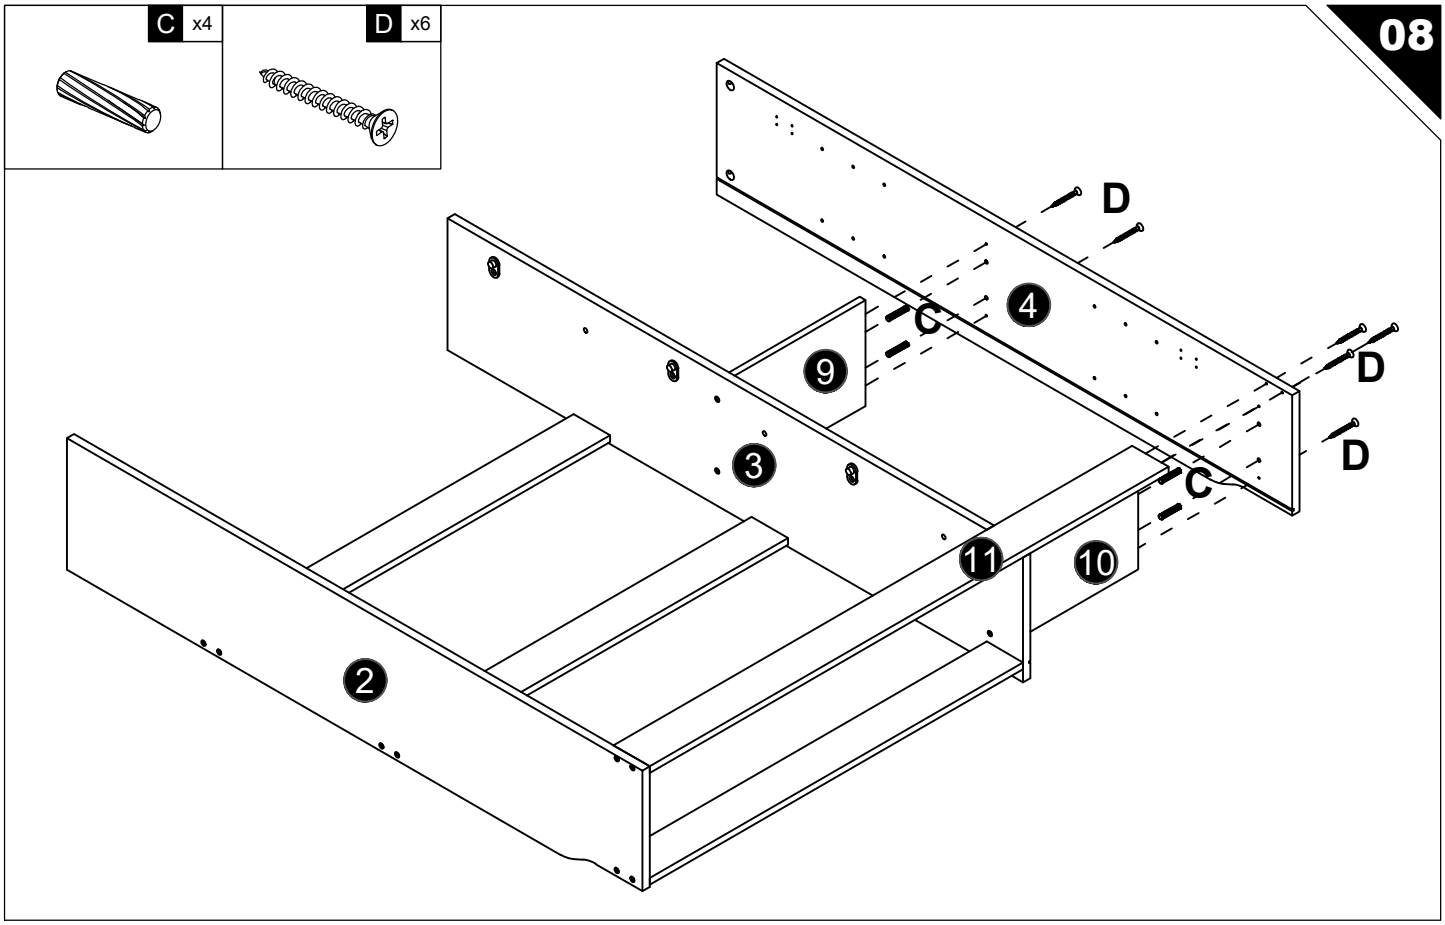
C x4
D x6
08
D
C
D
D
C
4
9
3
11
10
2

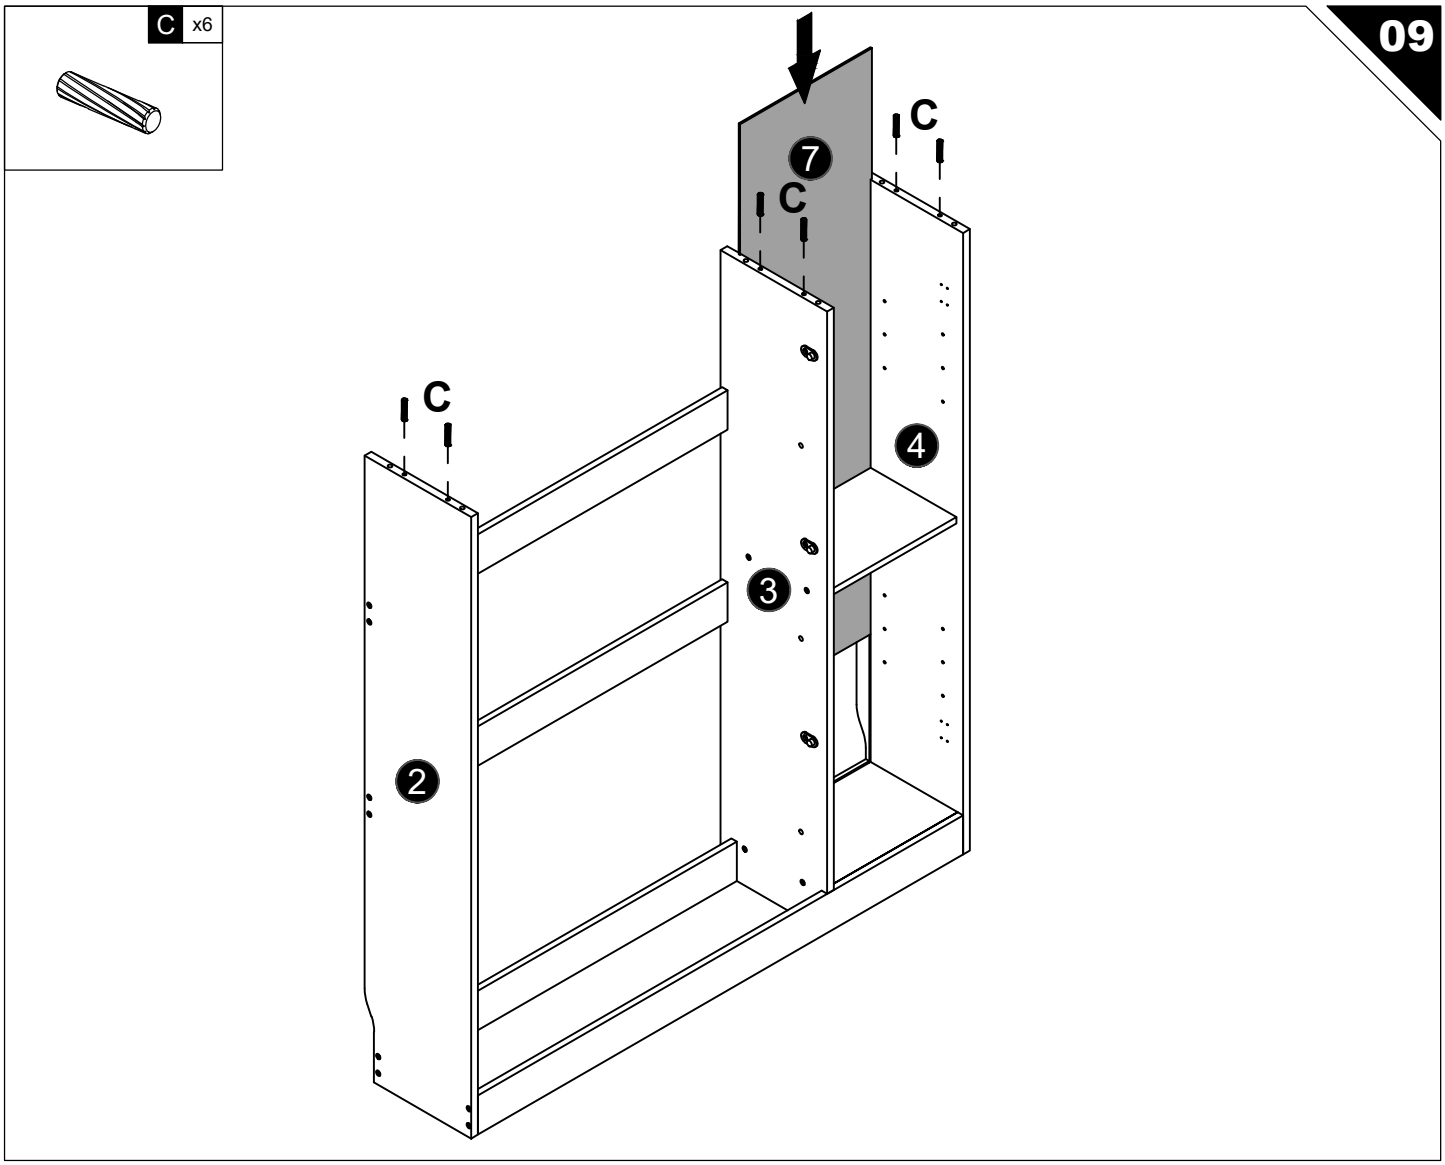
C x6
09
C
7
C
C
4
3
2

10

A x6



J x2



J-1




J-2


11


B x6



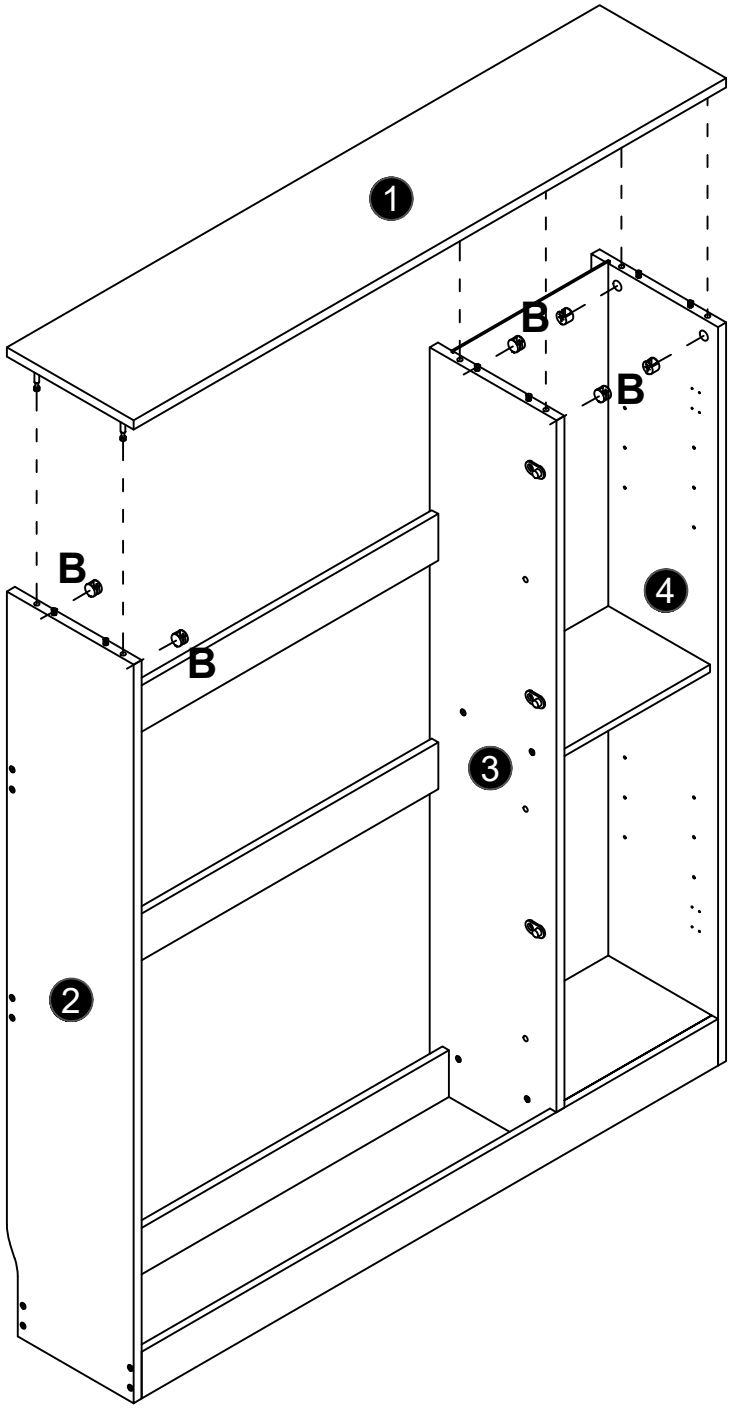

O x8



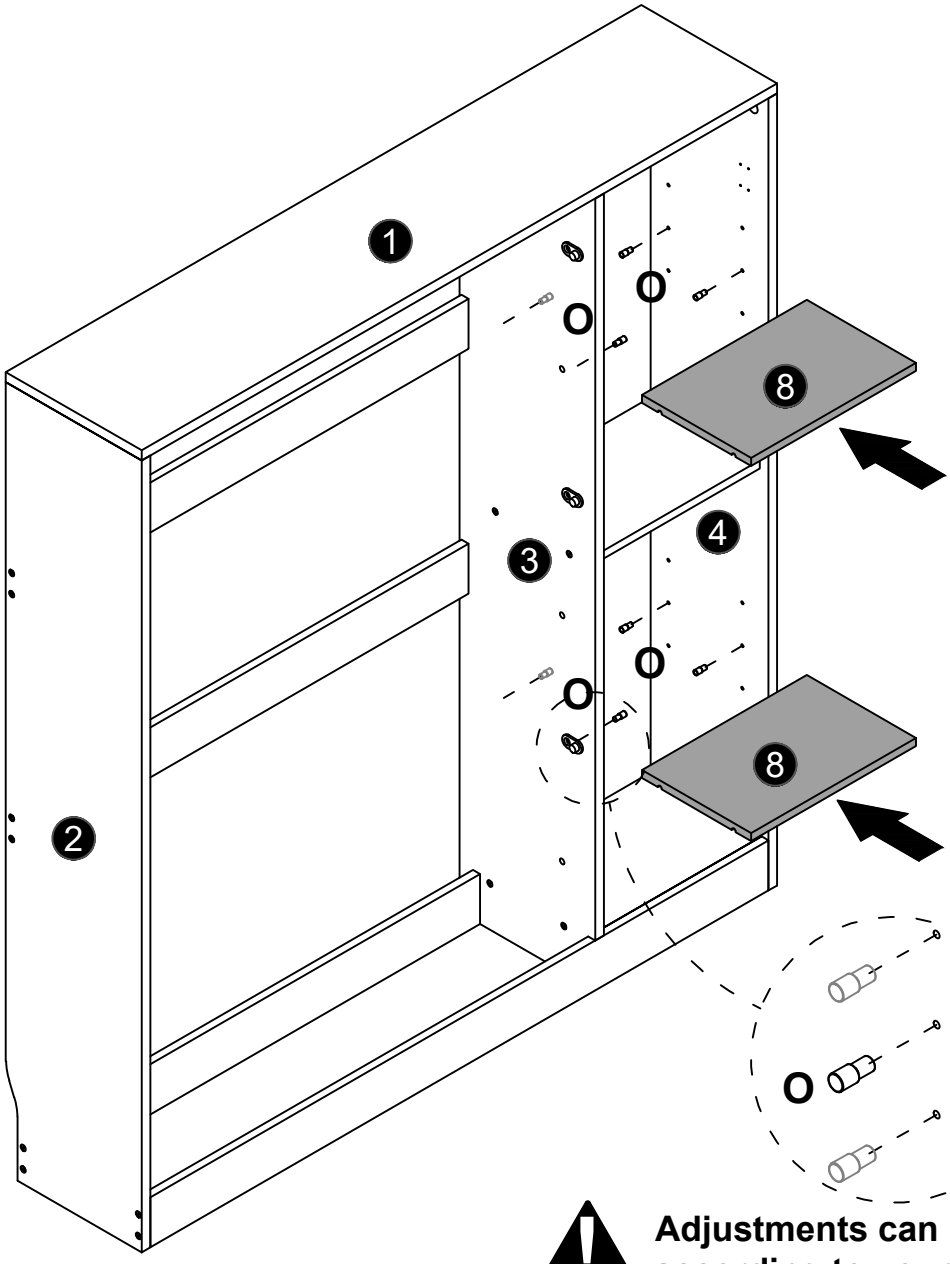



Adjustments can be made according to your own needs.


E x4





Q x2



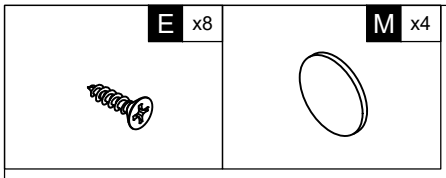

E x8
M x4

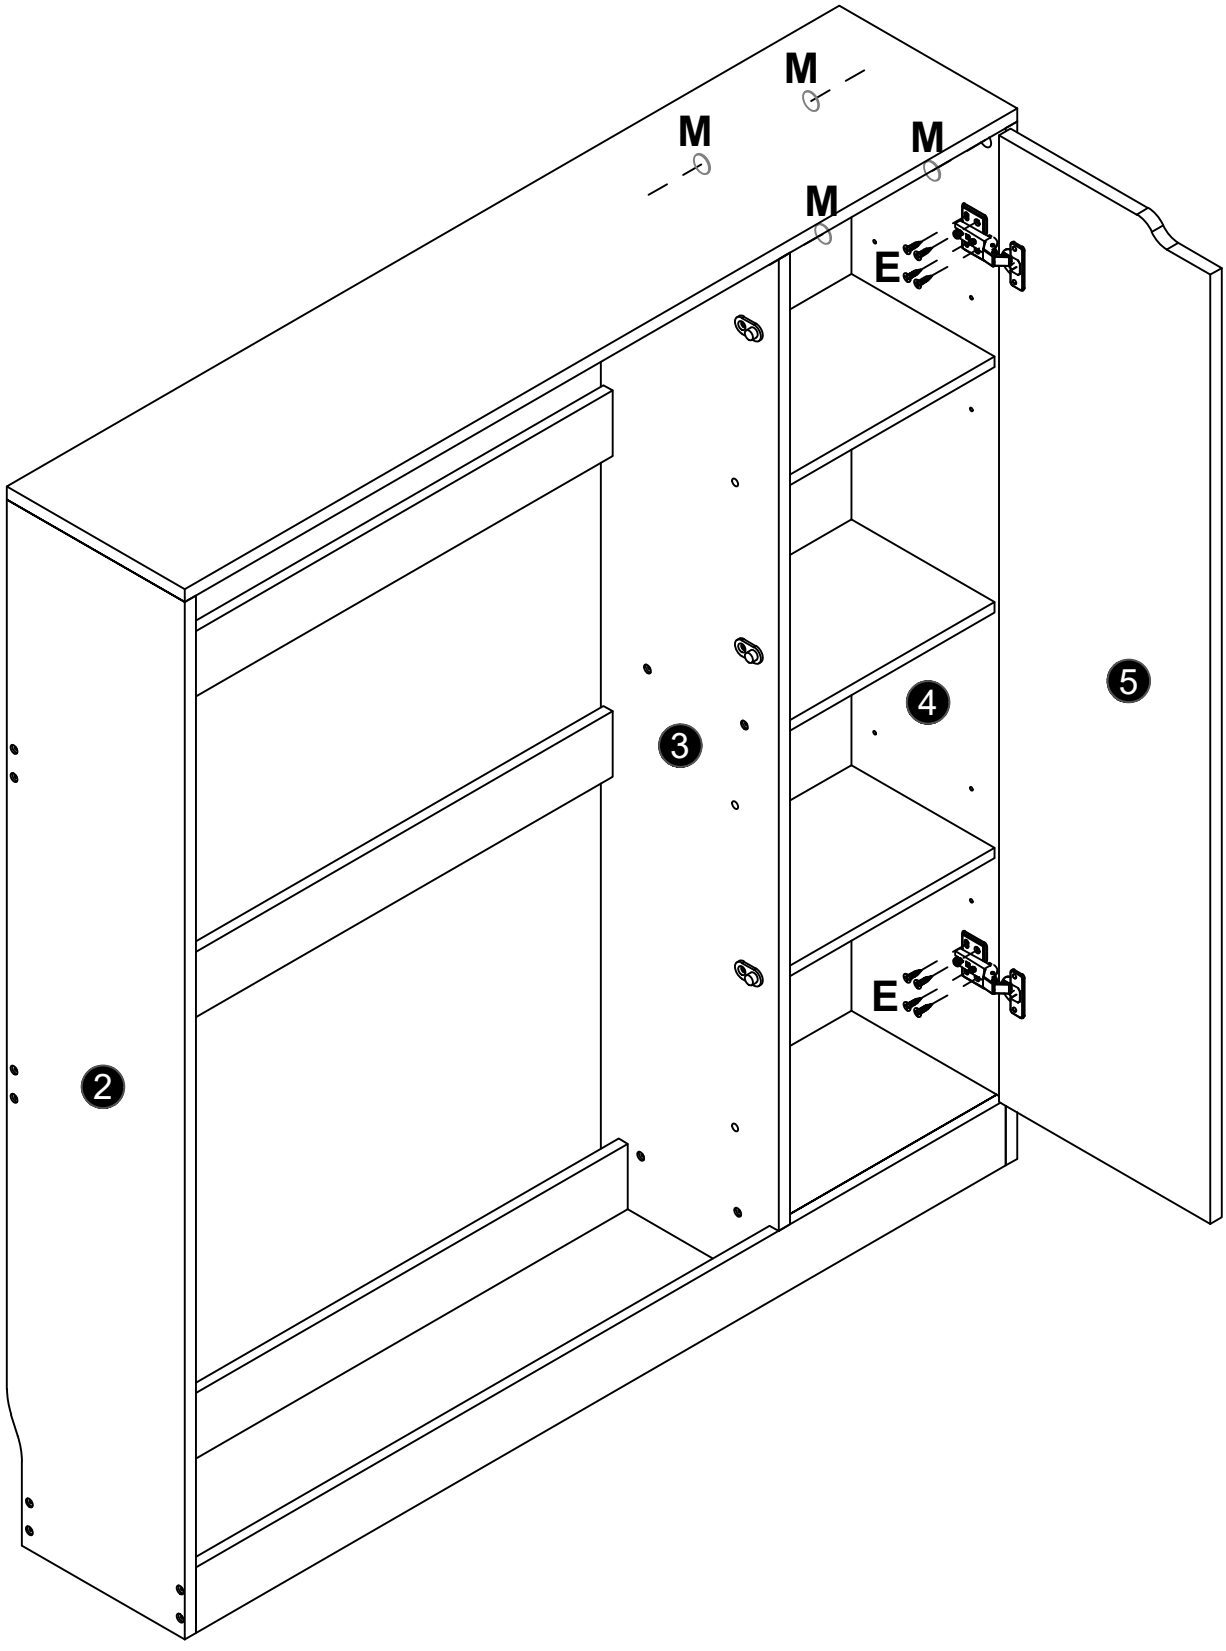
M
M
M
M
E
E
2
3
4
5

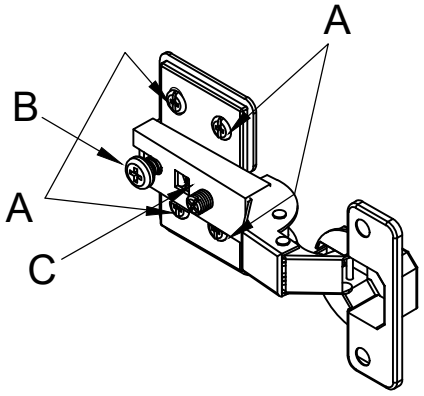


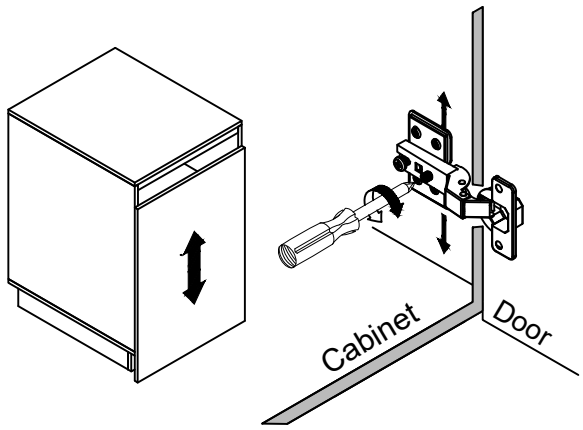


To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

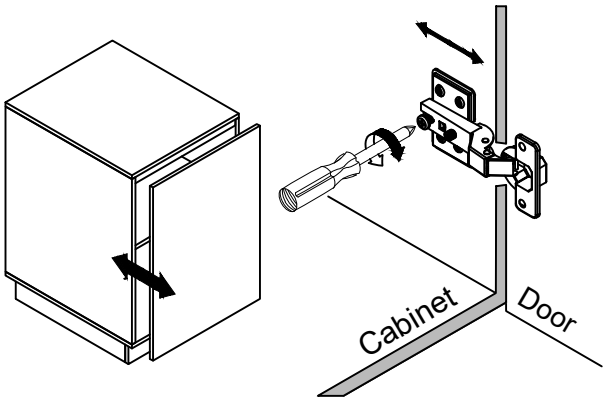


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

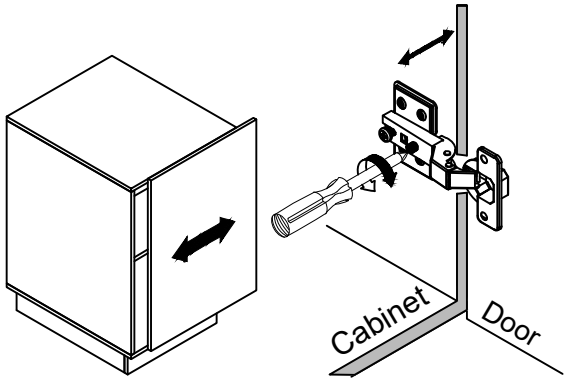


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

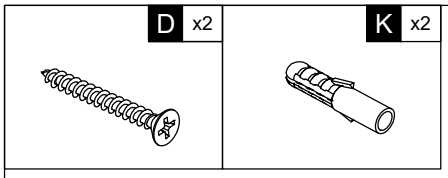


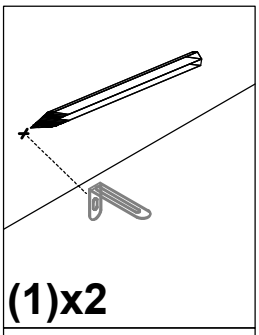


First fix the anti-rewind screw in the reserved hole of the product.

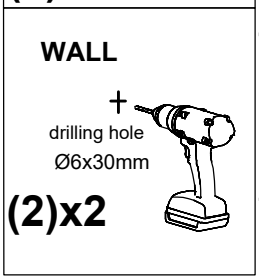


Then use a tape drill to make holes in the wall that are suitable for the product screws.

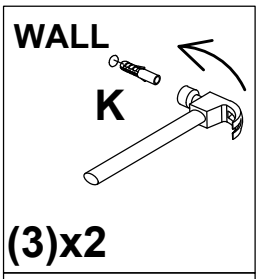



Then,put the expansion bolt into the hole

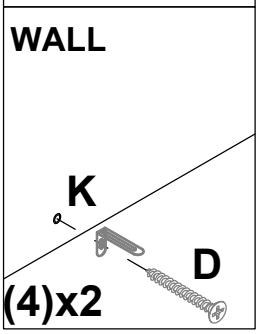


Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

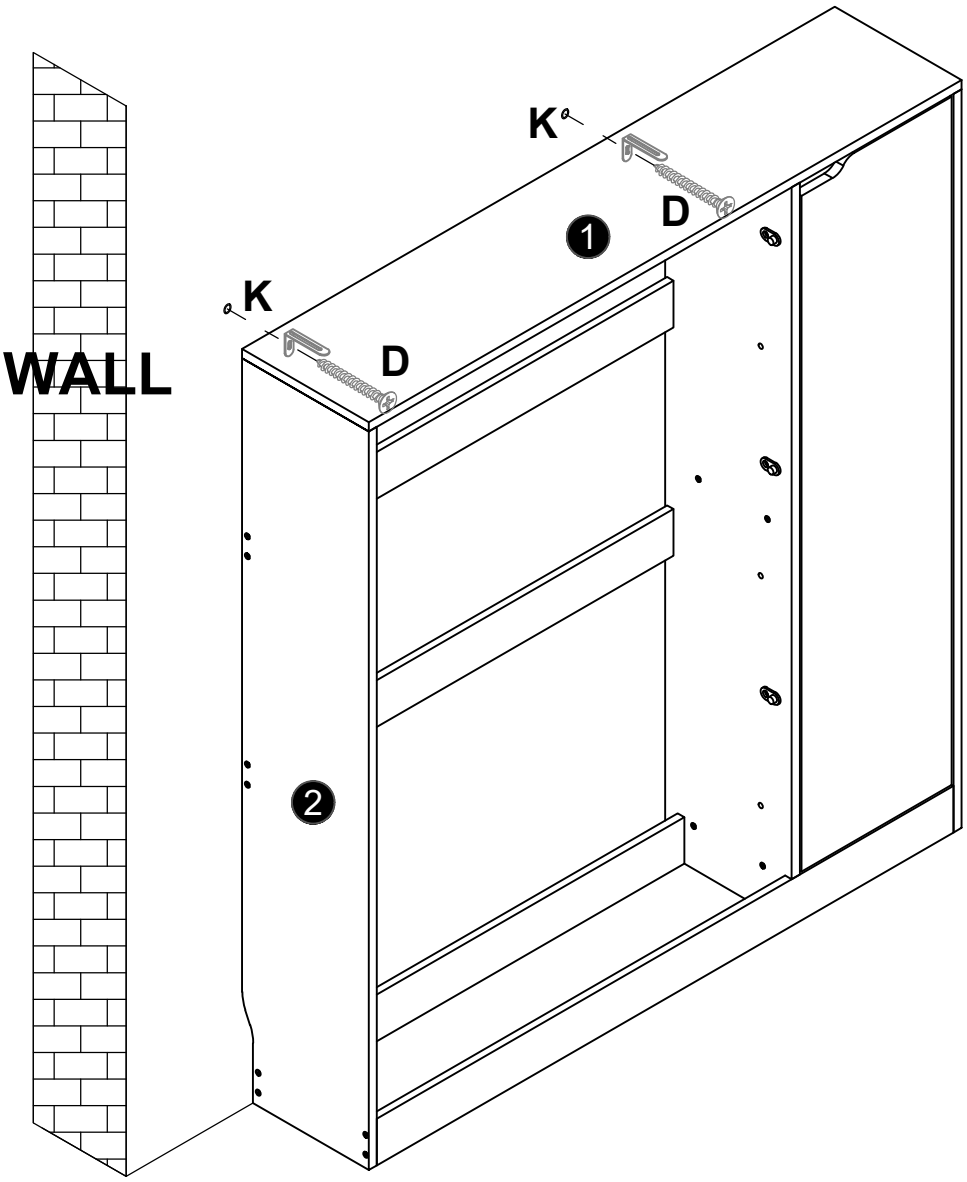

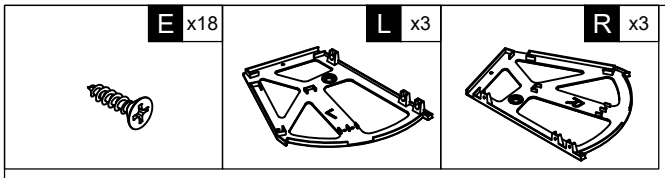


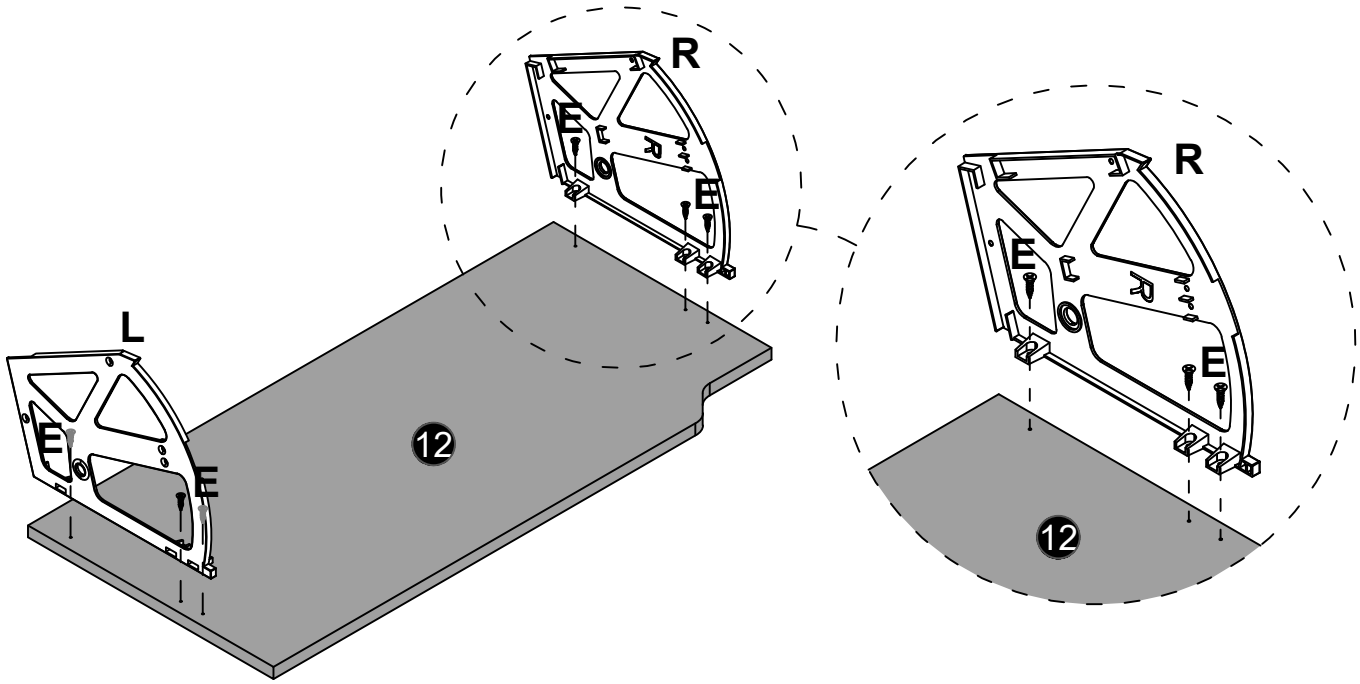

x3

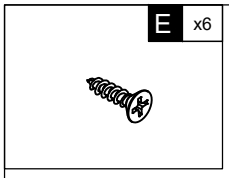

Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 9th back panel into the back panel slot As shown in the figure.

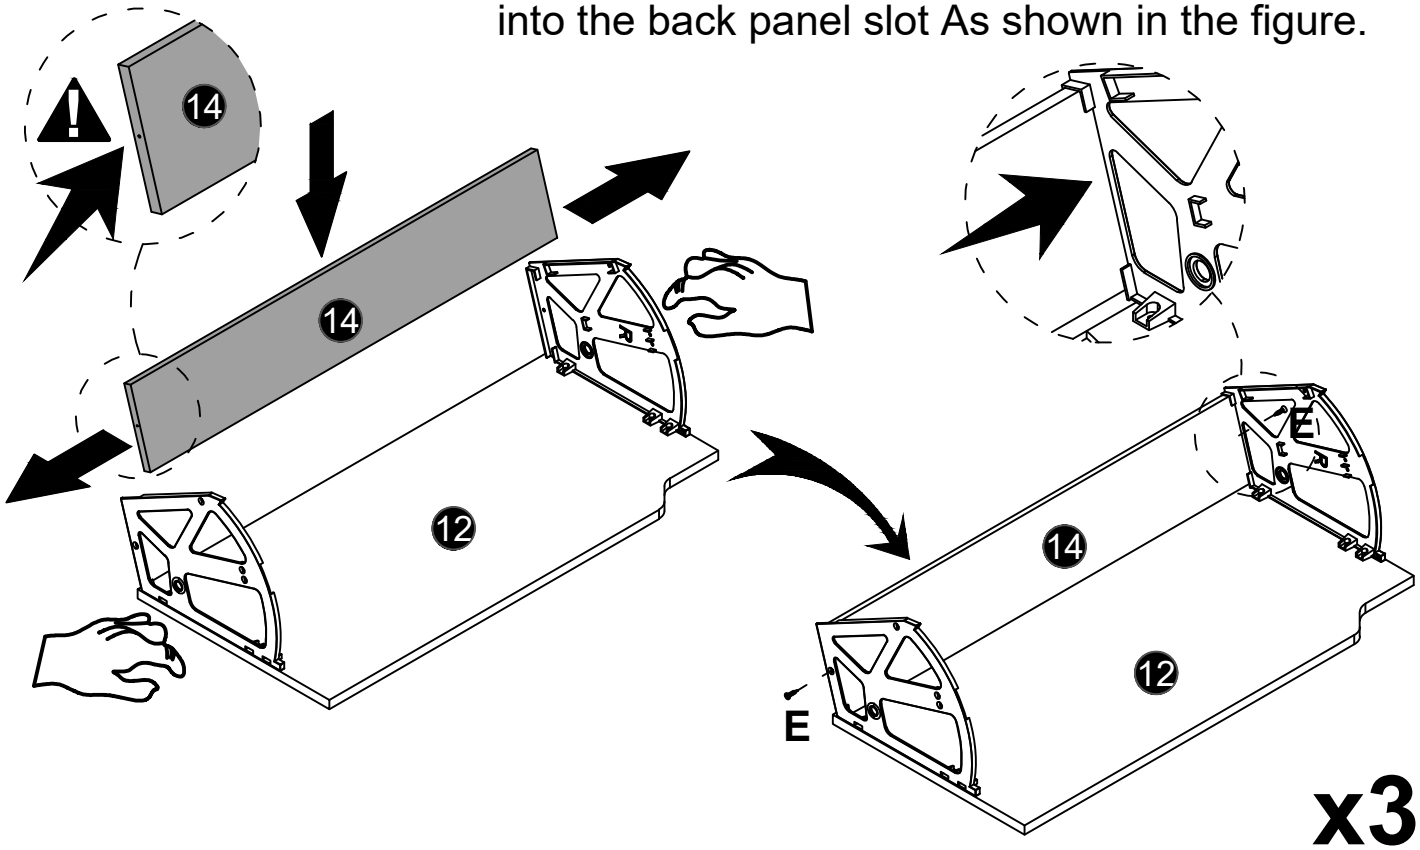


x3

E x6



Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 9th back panel into the back panel slot As shown in the figure.

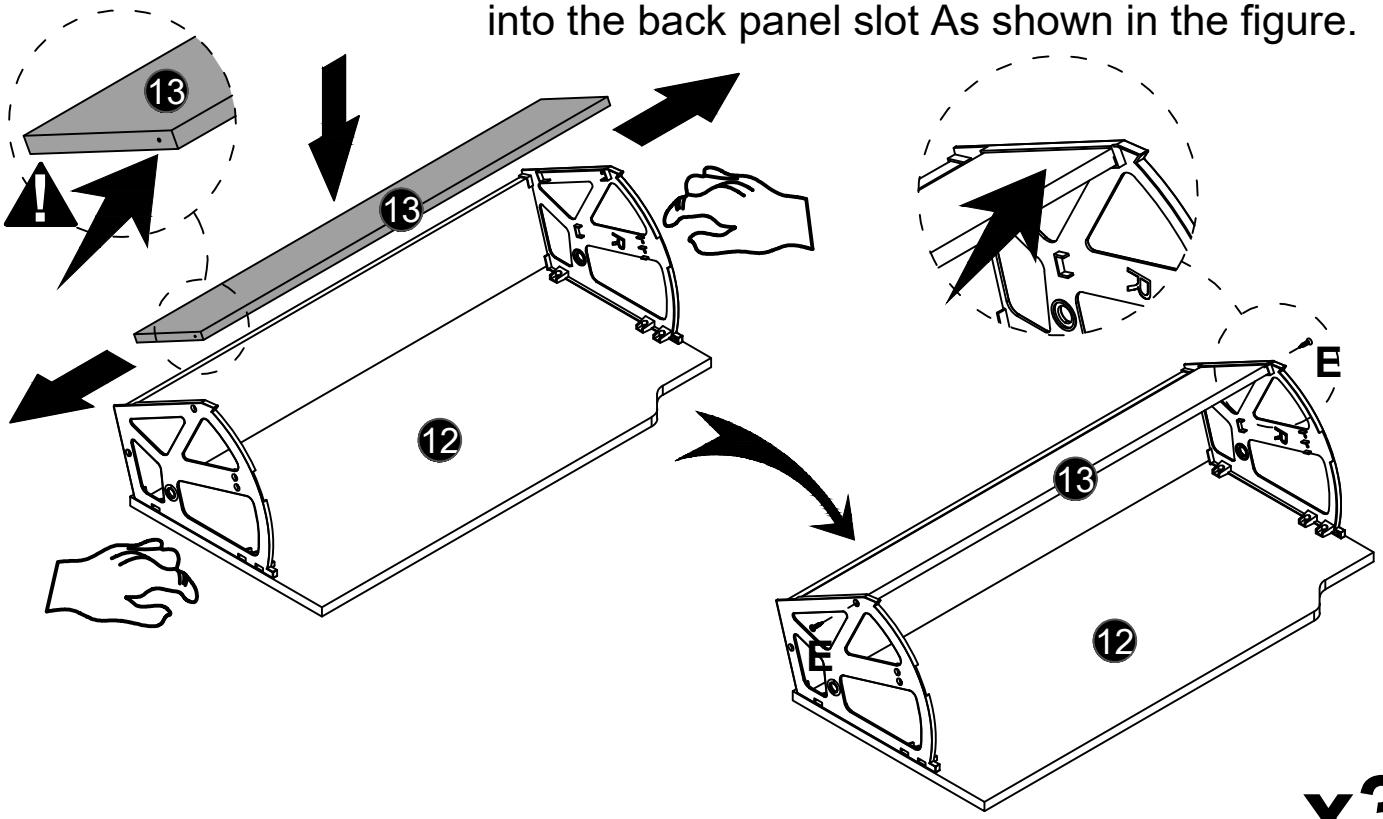


x3


G x6





H x6




I x1



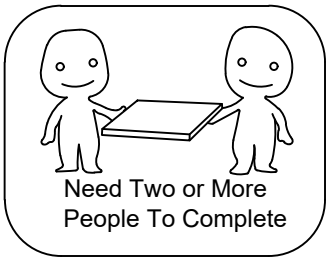


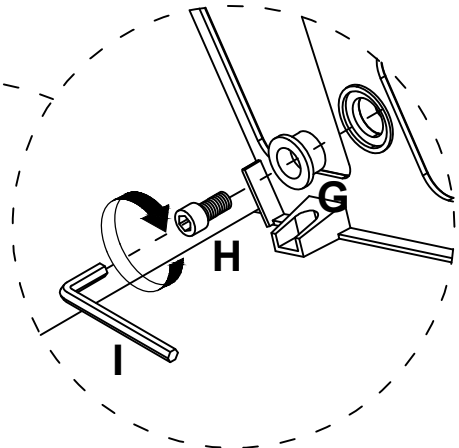


Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

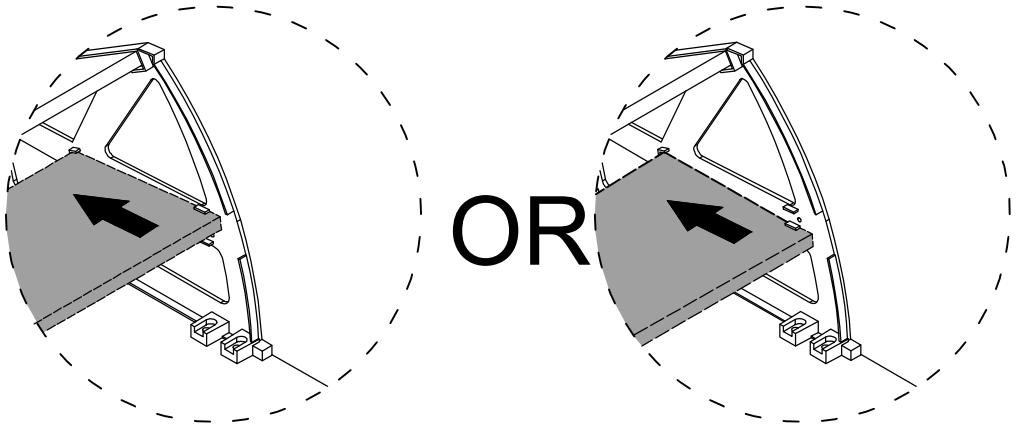


Adjustments can be made according to your own needs.

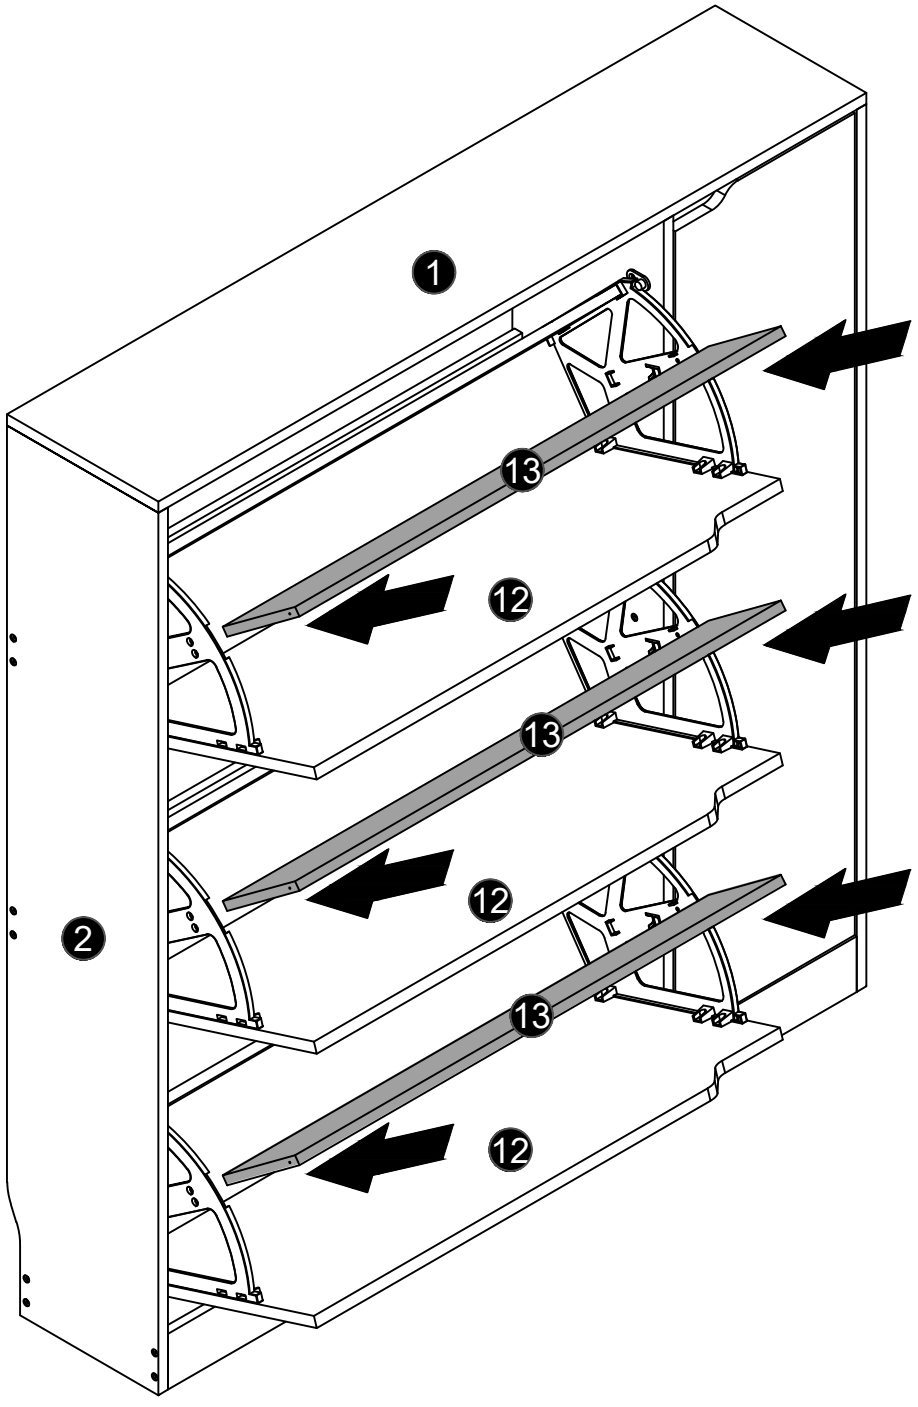


E x6

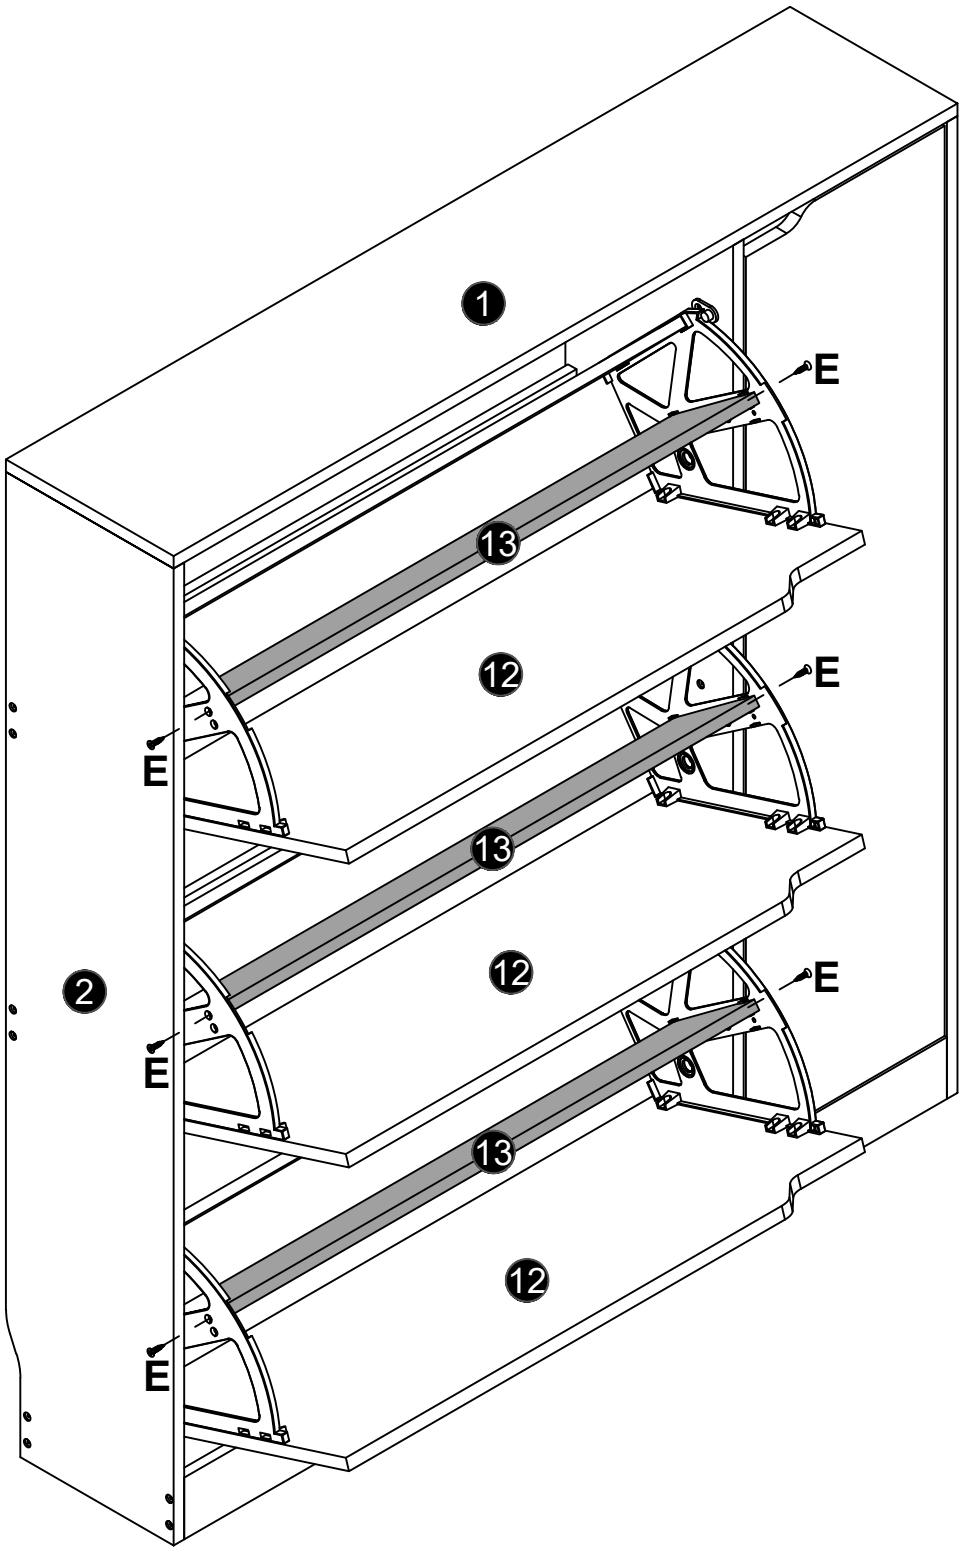

N x6



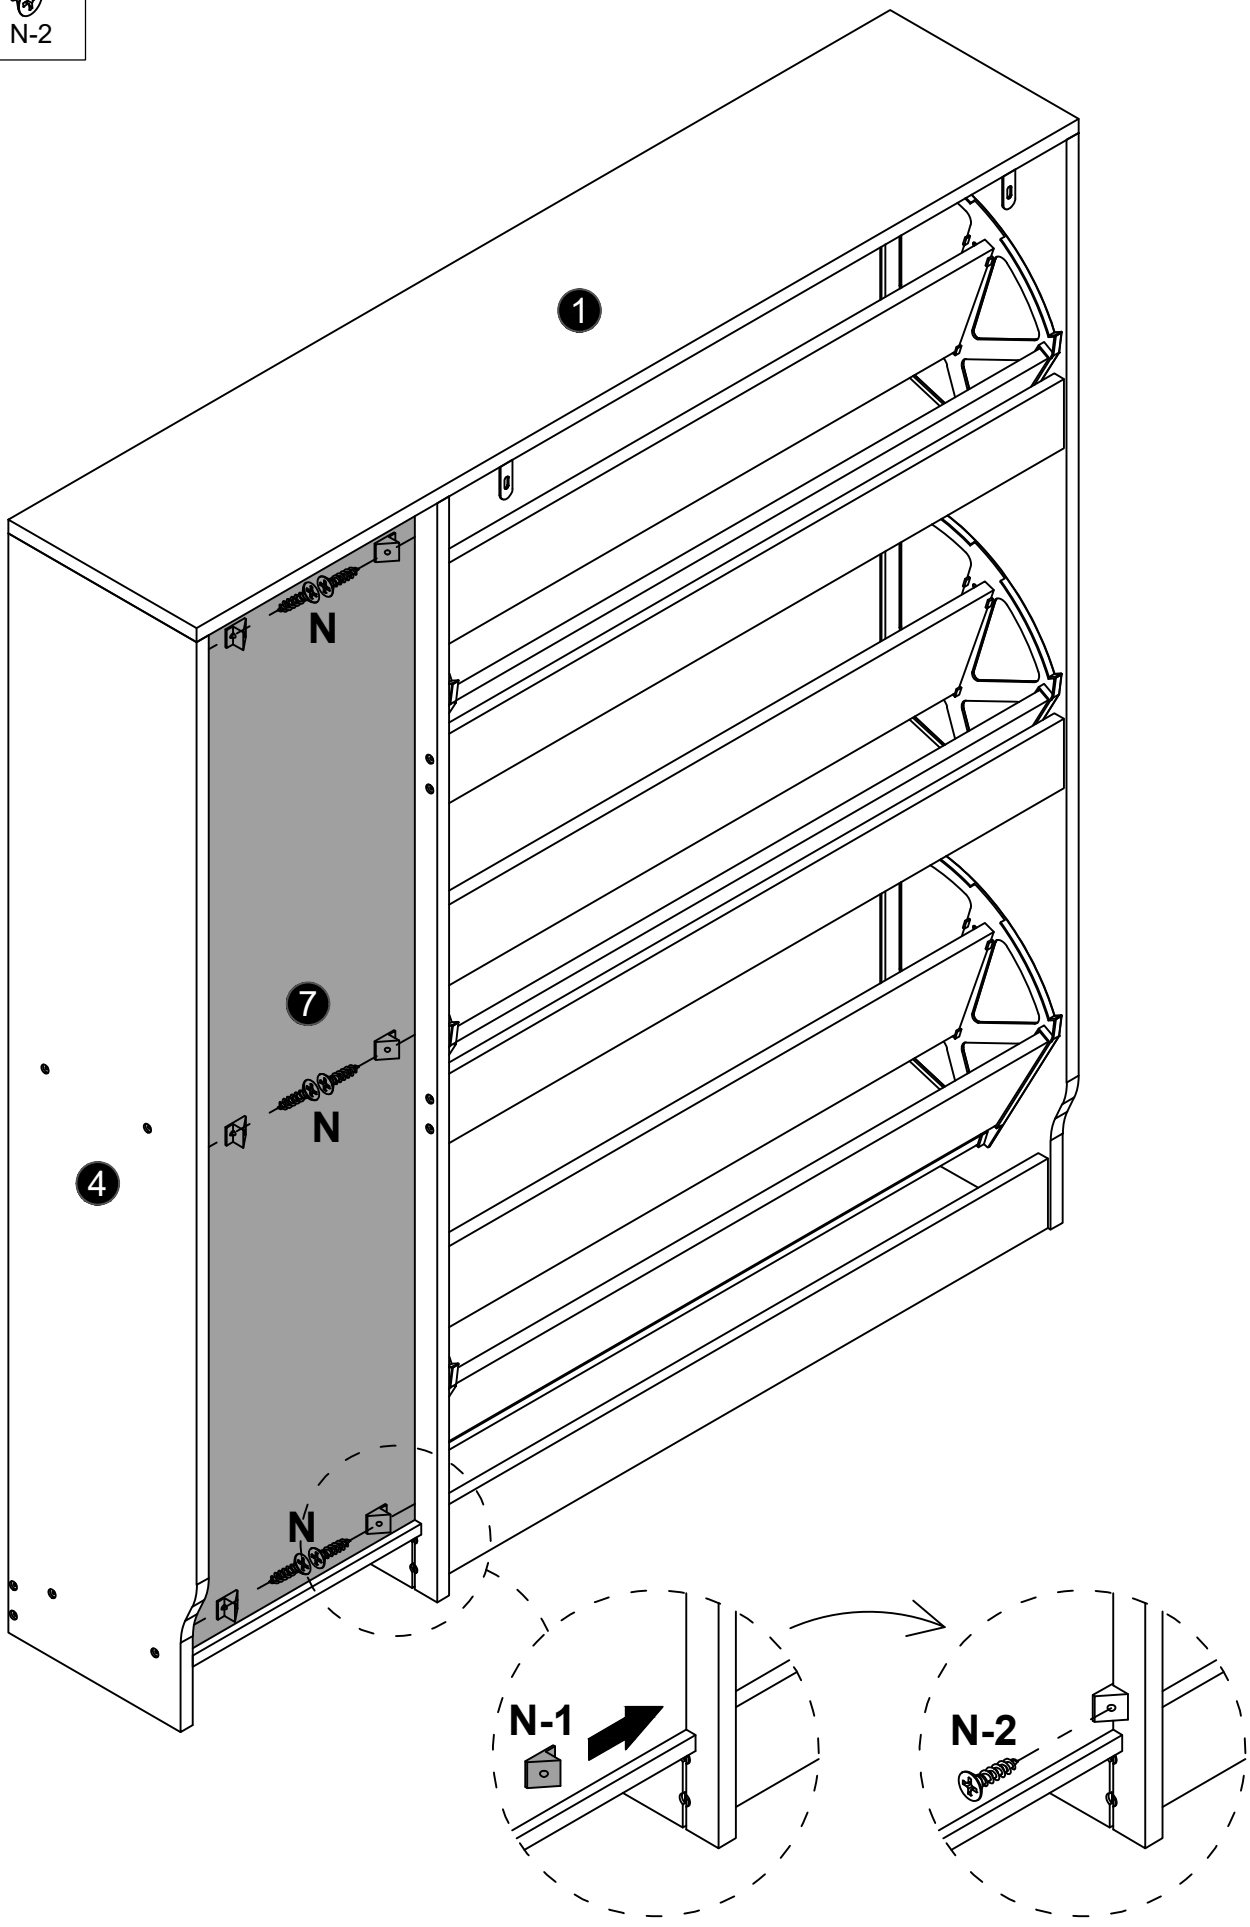

M x14



Done

