

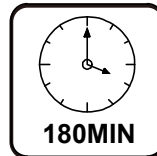
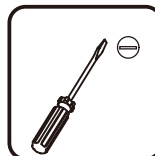


 **Please note: Items cannot be returned once assembled.**


## Installation & Assembly

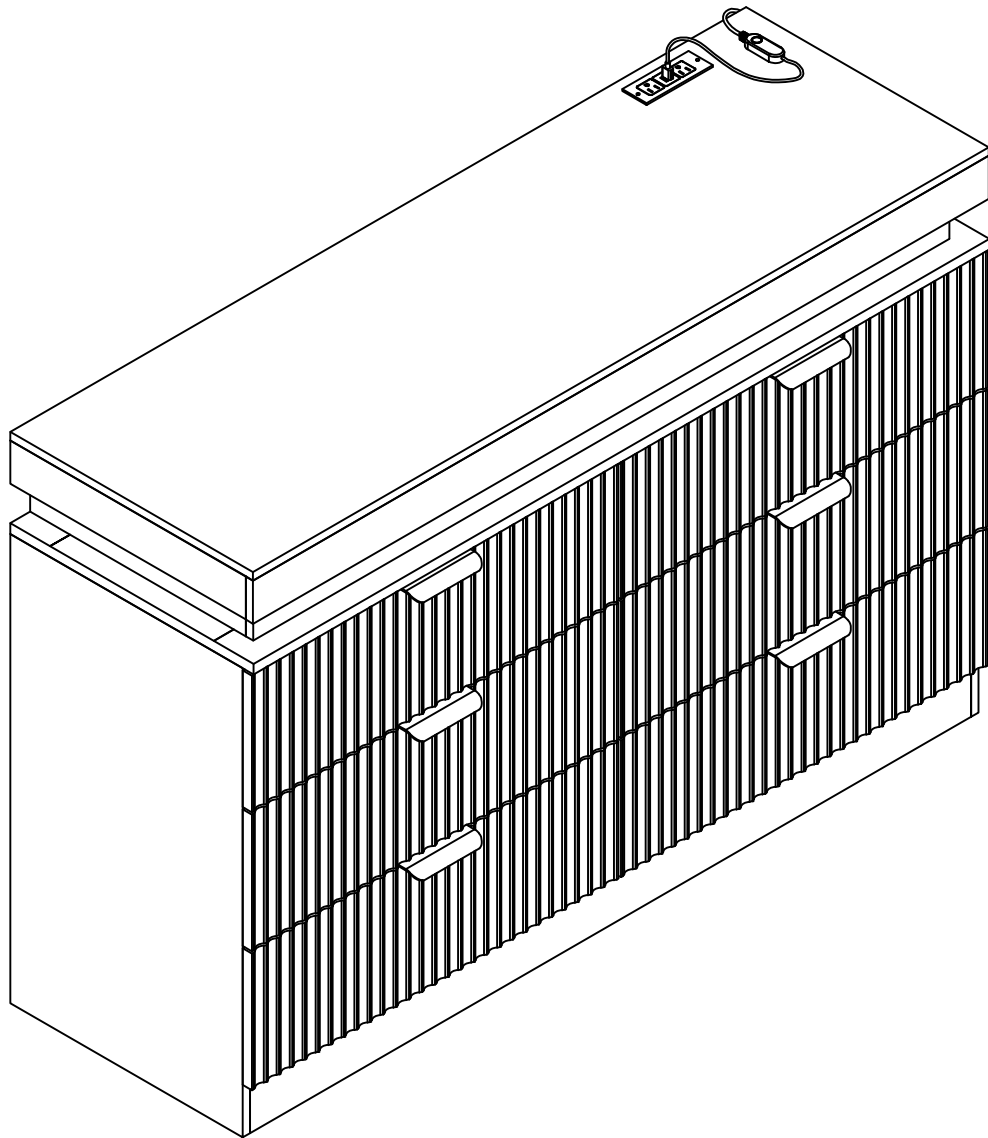


**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

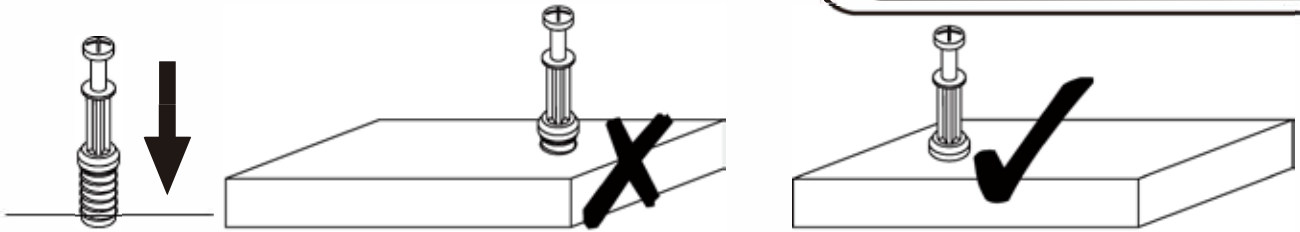


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

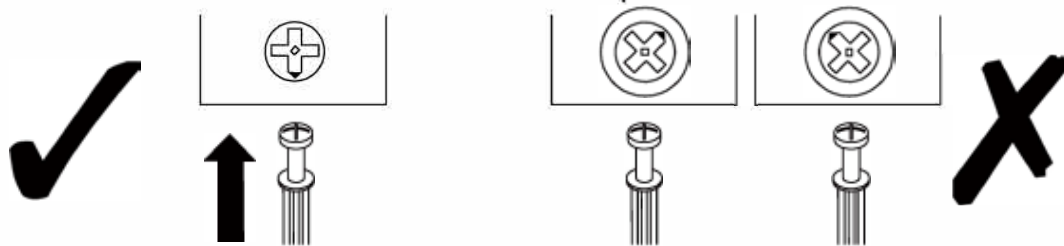











**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










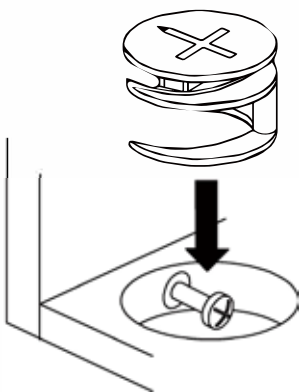






**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.



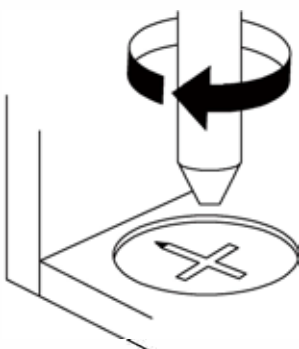


**EN\_Turn** cam lock clockwise to tighten.

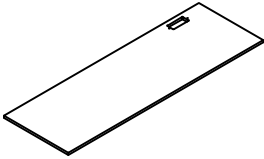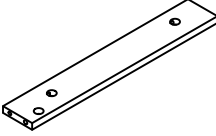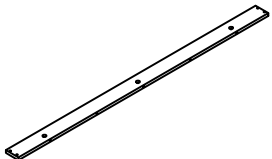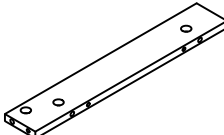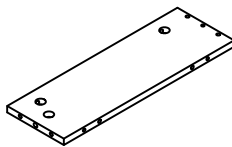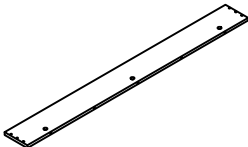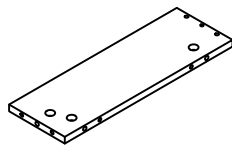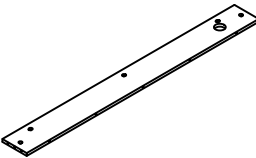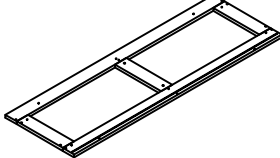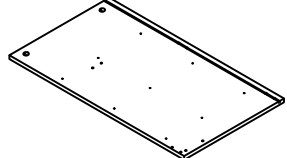
| NO. | PARTS                                                                               | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------|-----|-------|
| ①   |    | x1  |       |
| ②   |    | x1  |       |
| ③   |    | x1  |       |
| ④   |    | x1  |       |
| ⑤   |  | x1  |       |
| ⑥   |  | x1  |       |
| ⑦   |  | x1  |       |
| ⑧   |  | x1  |       |
| ⑨   |  | x1  |       |
| ⑩   |  | x1  |       |
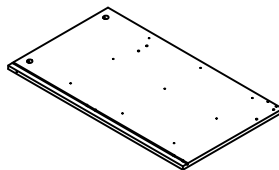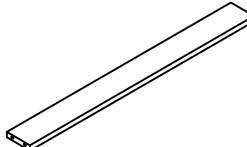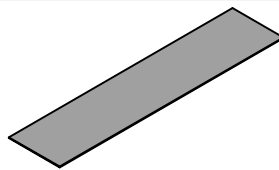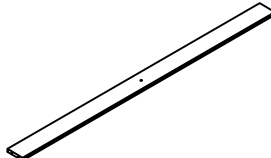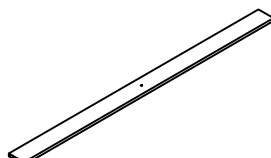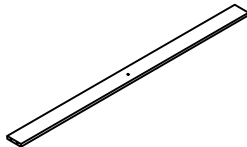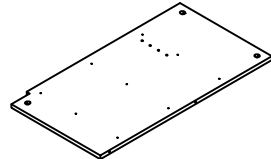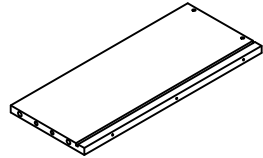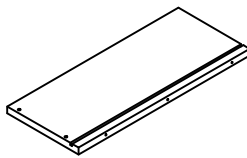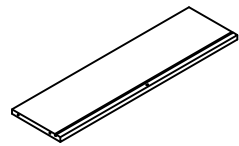
| NO. |                                                                                      | QTY | SPARE |
|-----|--------------------------------------------------------------------------------------|-----|-------|
| ⑪   |    | x1  |       |
| ⑫   |    | x2  |       |
| ⑬   |    | x2  |       |
| ⑭   |    | x1  |       |
| ⑮   |   | x1  |       |
| ⑯   |  | x1  |       |
| ⑰   |  | x1  |       |
| ⑱   |  | x6  |       |
| ⑲   |  | x6  |       |
| ⑳   |  | x6  |       |

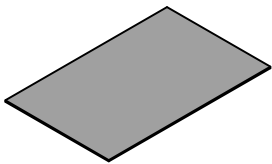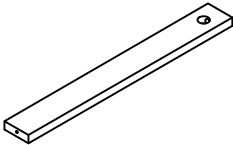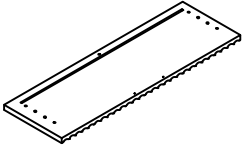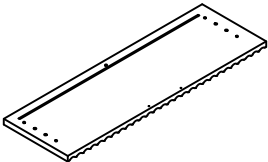
| NO. | PARTS                                                                                               | QTY | SPARE |
|-----|-----------------------------------------------------------------------------------------------------|-----|-------|
| ②1  |                    | x6  |       |
| ②2  |                    | x6  |       |
| ②3  |                    | x3  |       |
| ②4  |                    | x3  |       |
|     | <br>Hardware Kit |     |       |

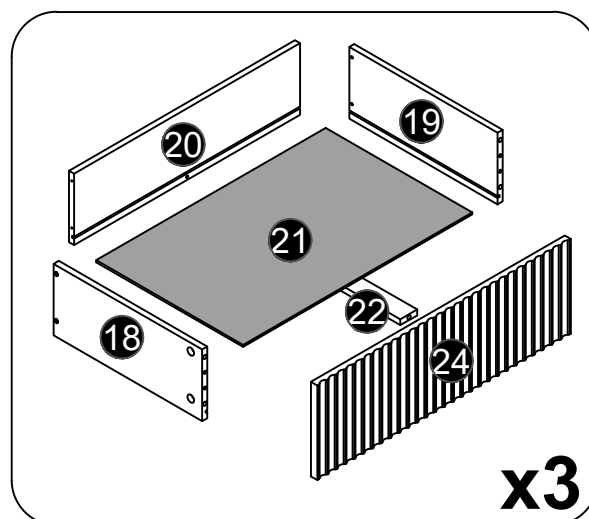
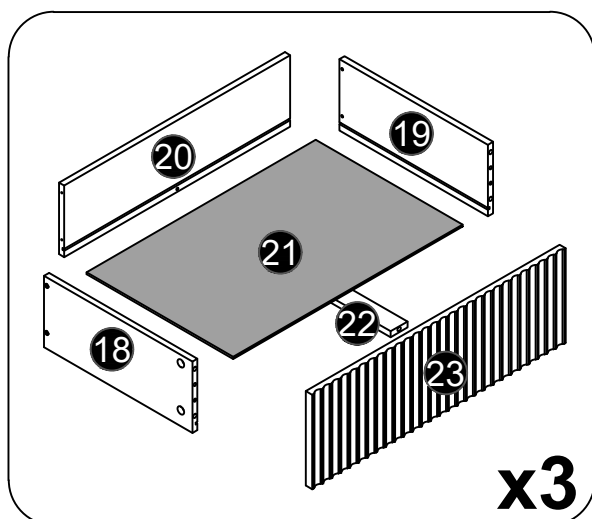
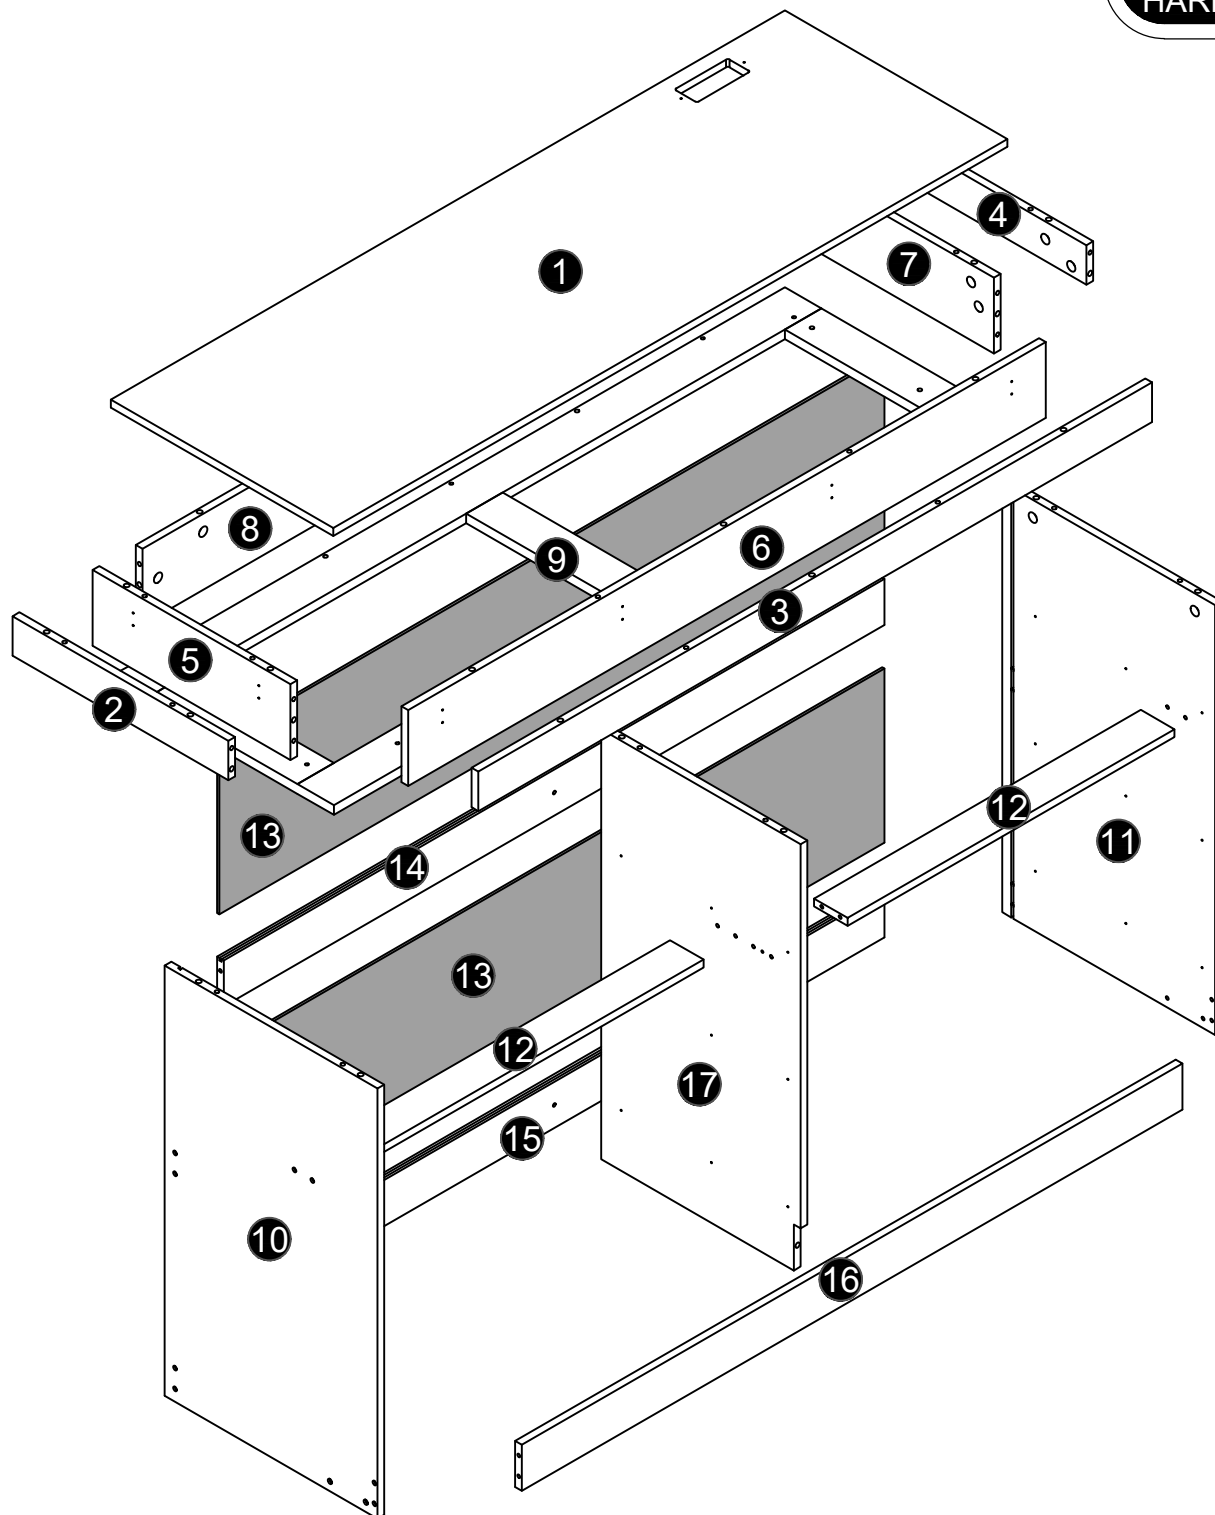


|                                      |                                                    |                                      |                                      |                                        |                           |
|--------------------------------------|----------------------------------------------------|--------------------------------------|--------------------------------------|----------------------------------------|---------------------------|
| <b>A</b> x60<br>Ø6x35mm<br>+3(spare) | <b>B</b> x60<br>Ø15x10mm<br>+3(spare)              | <b>C</b> x62<br>Ø6x30mm<br>+3(spare) | <b>D</b> x32<br>Ø4x35mm<br>+3(spare) | <b>E</b> x84<br>Ø3.5x12mm<br>+3(spare) | <b>F</b> x6               |
| <b>G</b> x32<br>+3(spare)            | <b>H</b> x2<br>H-1<br>H-2                          | <b>I</b> x2                          | <b>J</b> x1                          | <b>K</b> x7<br>+1(spare)<br>K-1<br>K-2 | <b>L</b> x1<br>L-1<br>L-2 |
| <b>M</b> x20<br>+2(spare)            | <b>N</b> x12<br>Ø3x16mm<br>+2(spare)<br>N-1<br>N-2 | <b>O</b> x1                          | <b>P</b> x2                          | <b>Q</b> x4                            | <b>R</b> x4<br>R-1<br>R-2 |
| <b>S</b> x2                          |                                                    |                                      |                                      |                                        |                           |
| <b>CL</b> x6<br>L330mm               | <b>CR</b> x6<br>L330mm                             | <b>DL</b> x6<br>L330mm               | <b>DR</b> x6<br>L330mm               |                                        |                           |






**D** x30

01

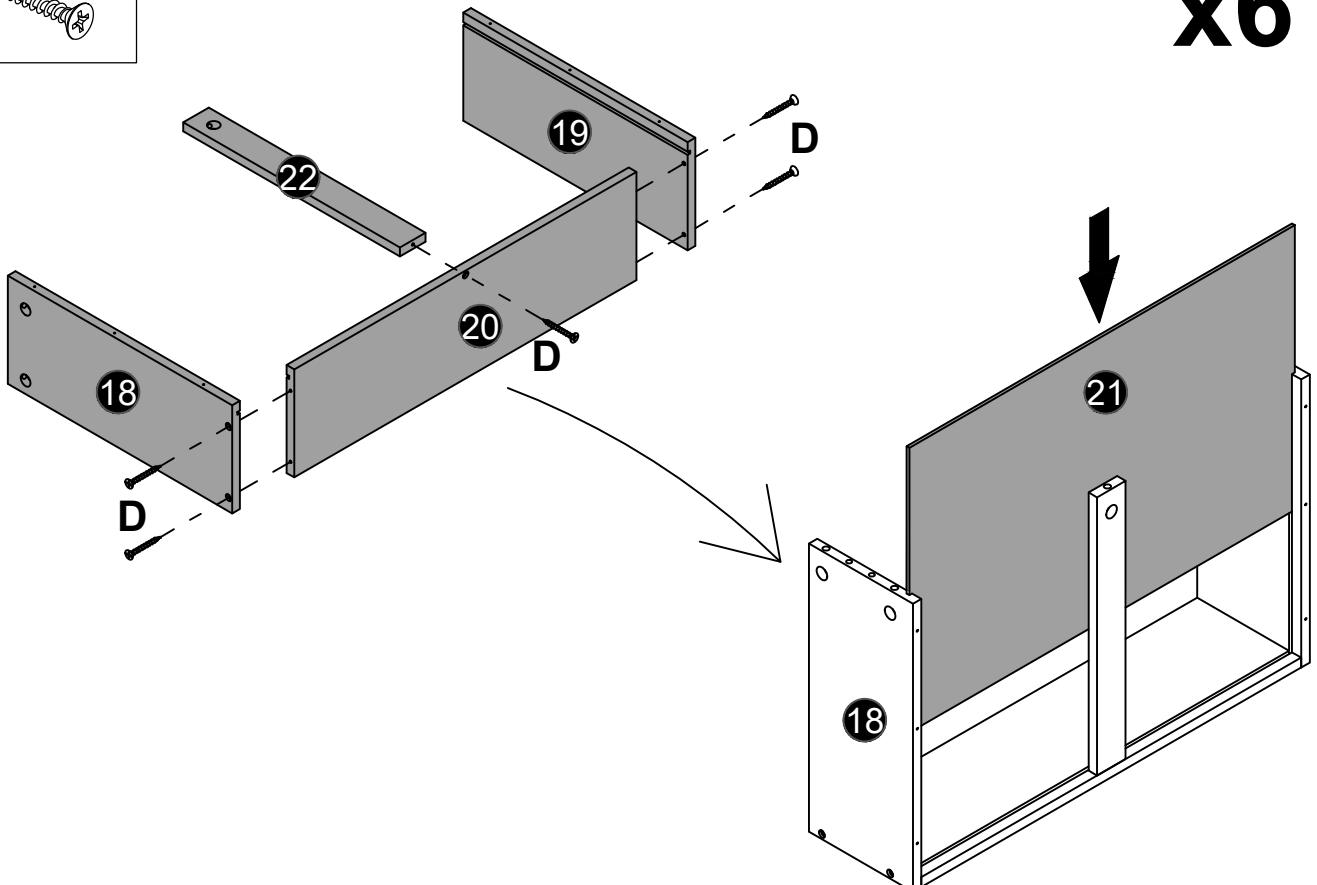**x6**


|                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <b>A</b> x30                                                                      | <b>B</b> x30                                                                      | <b>C</b> x24                                                                      | <b>E</b> x48                                                                      | <b>F</b> x6                                                                        |
|  |  |  |  |  |
| <b>DL</b> x6                                                                      | <b>DR</b> x6                                                                      |                                                                                   |                                                                                   |                                                                                    |
|   |  |                                                                                   |                                                                                   |                                                                                    |

**02**  
**x3**

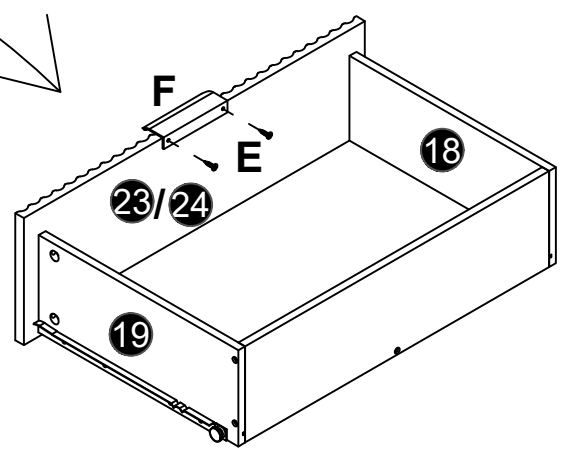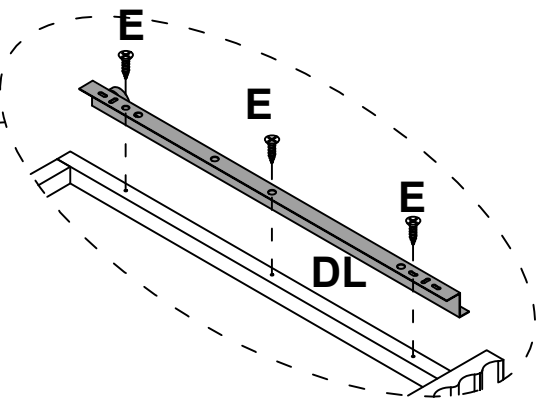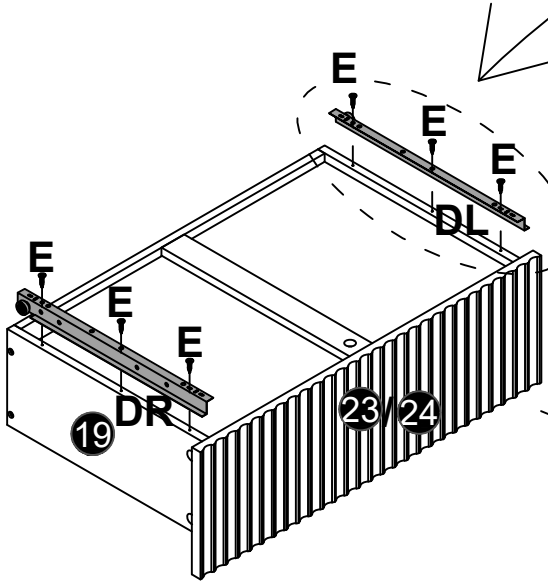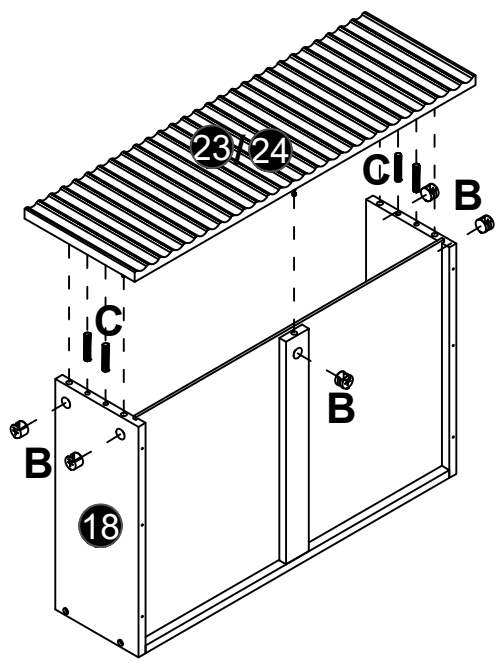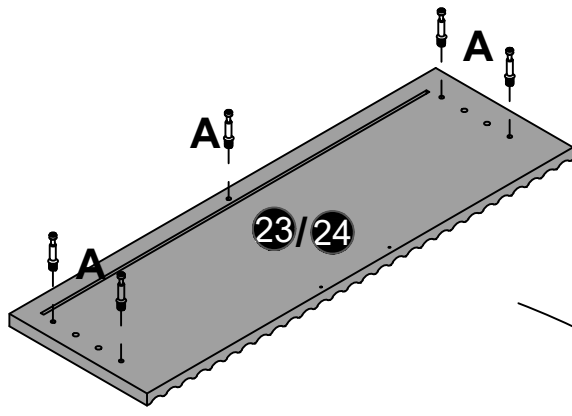


E x9

CL x3

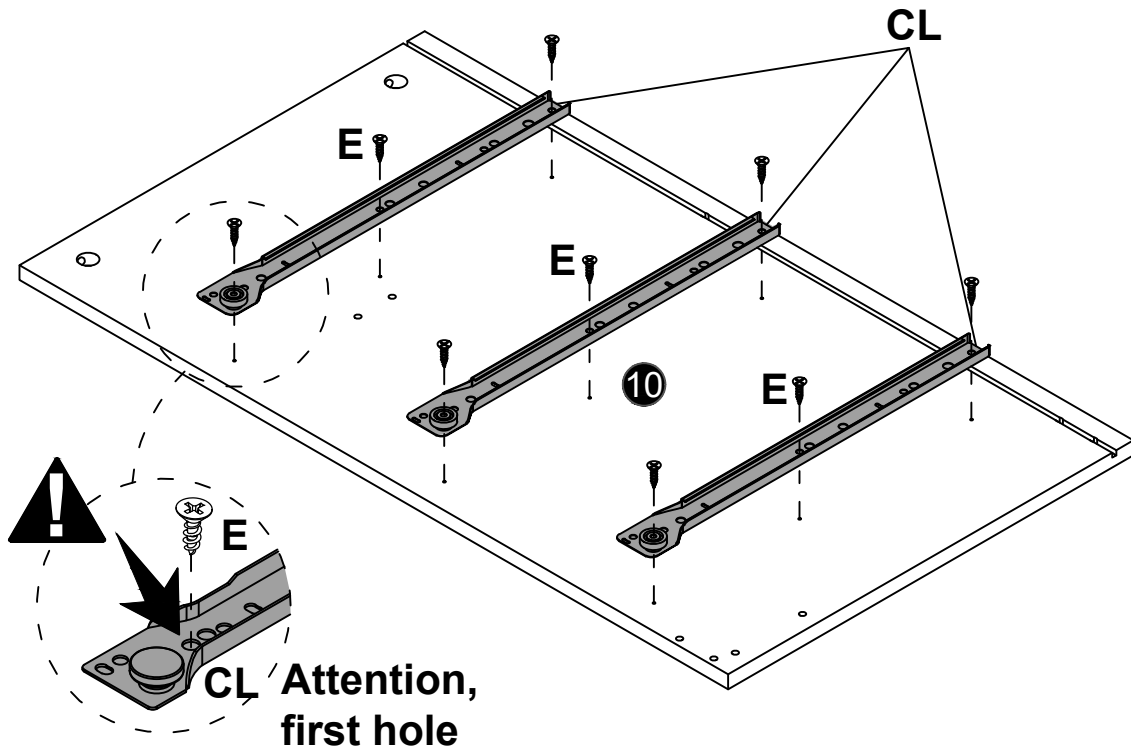

E x9

CR x3

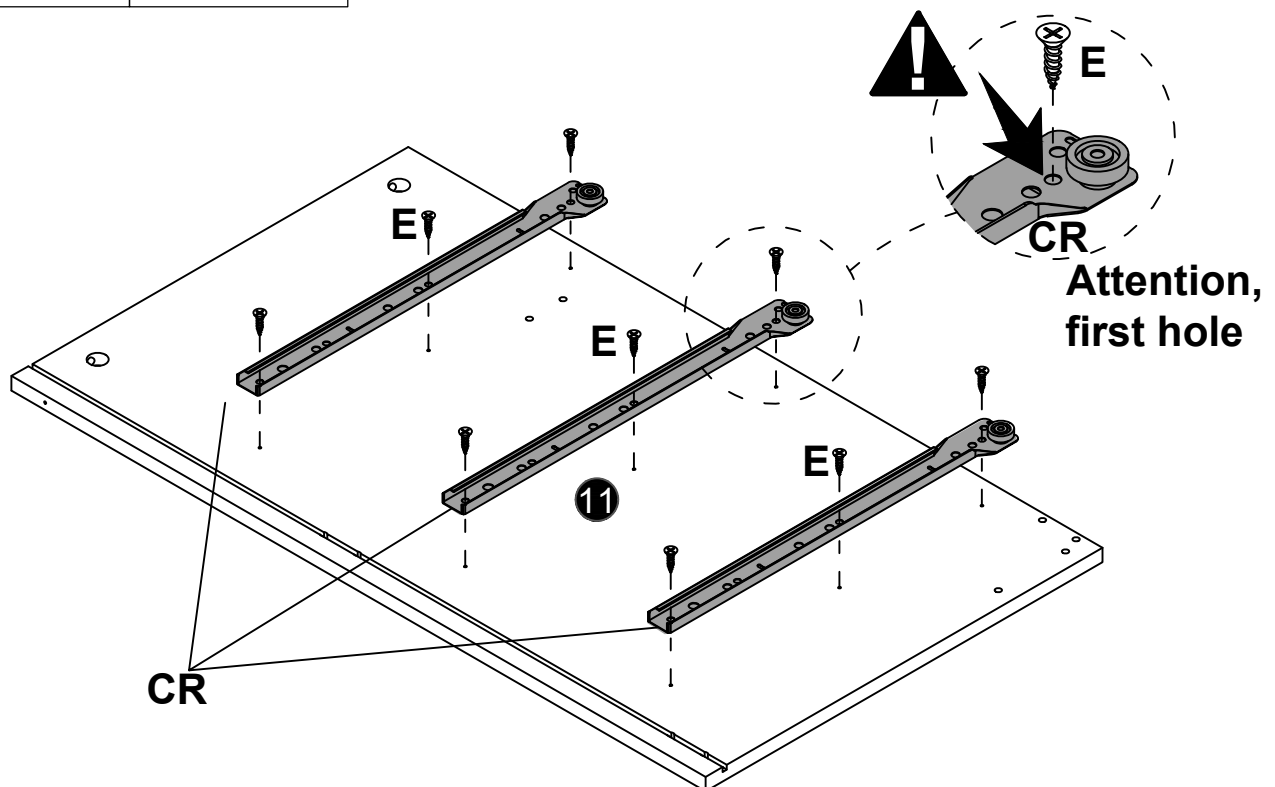

E x18



CL x3

CR x3



05



Notice

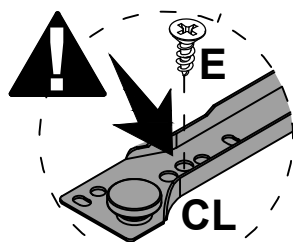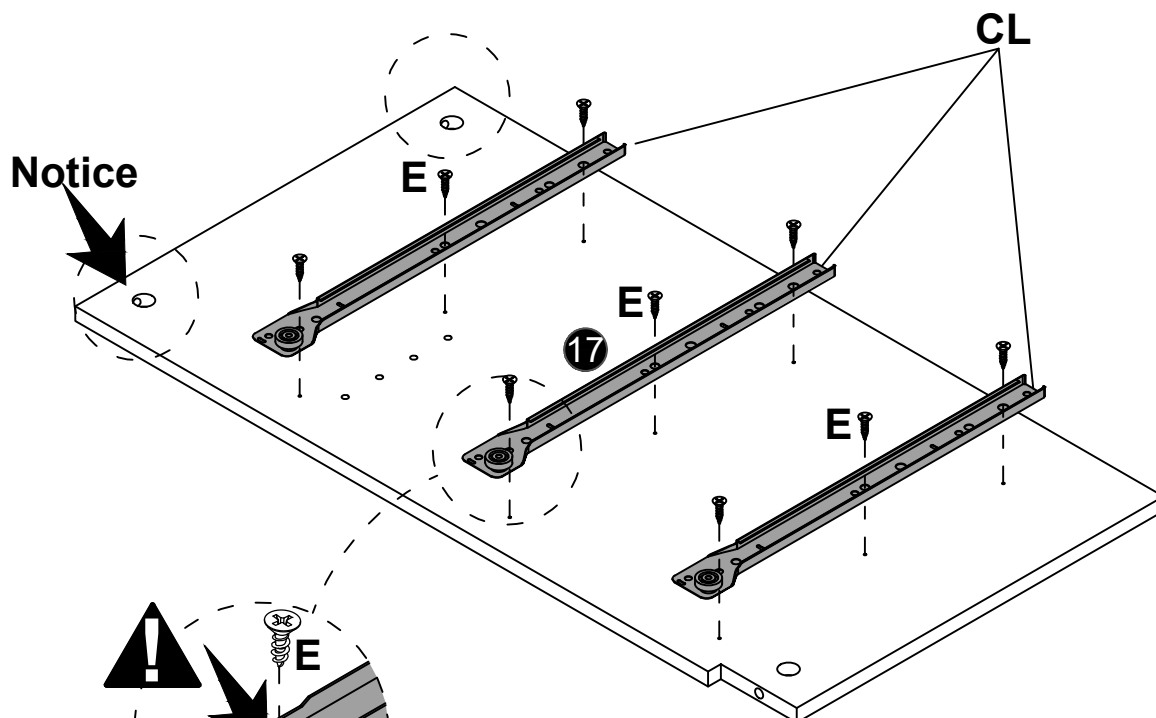


Attention,  
second hole

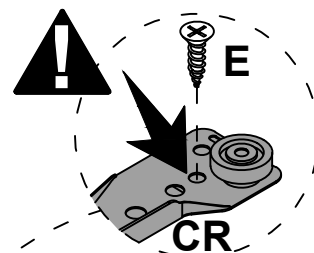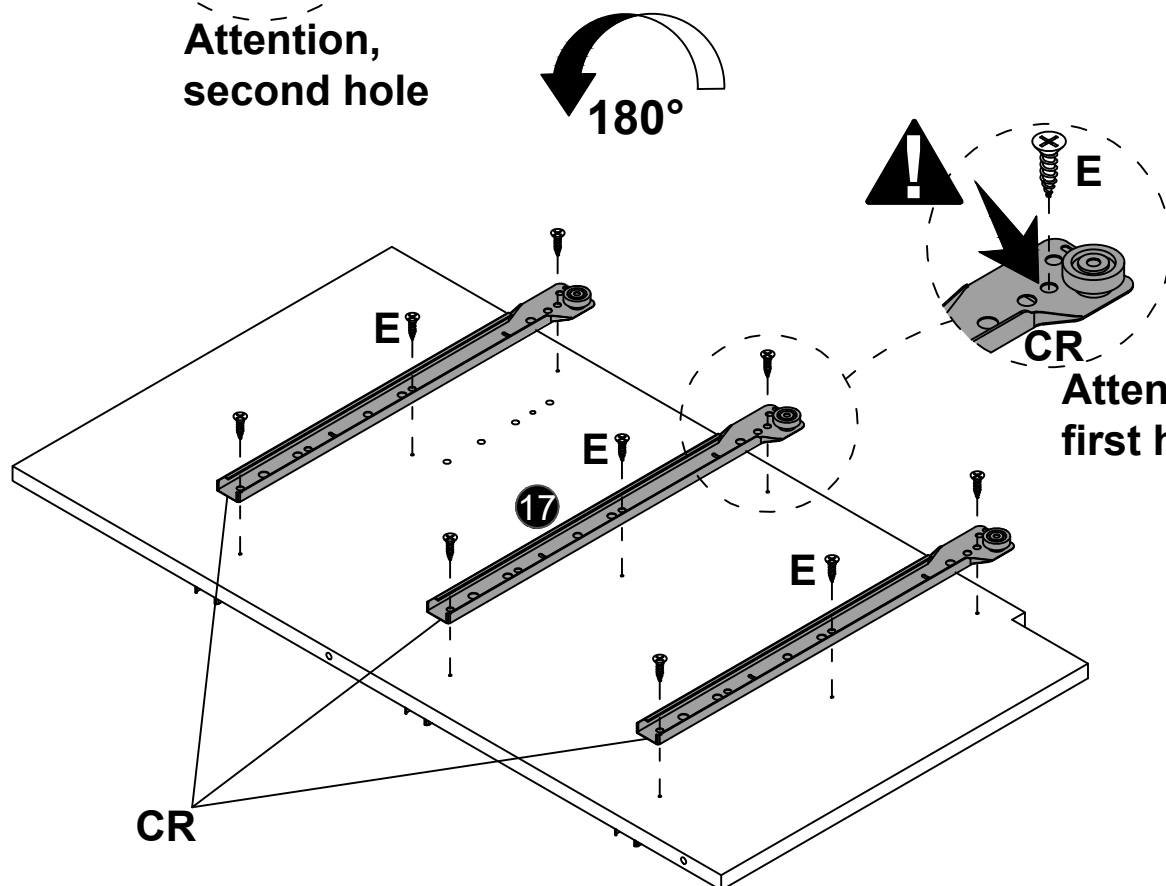


Attention,  
first hole

A x1




06

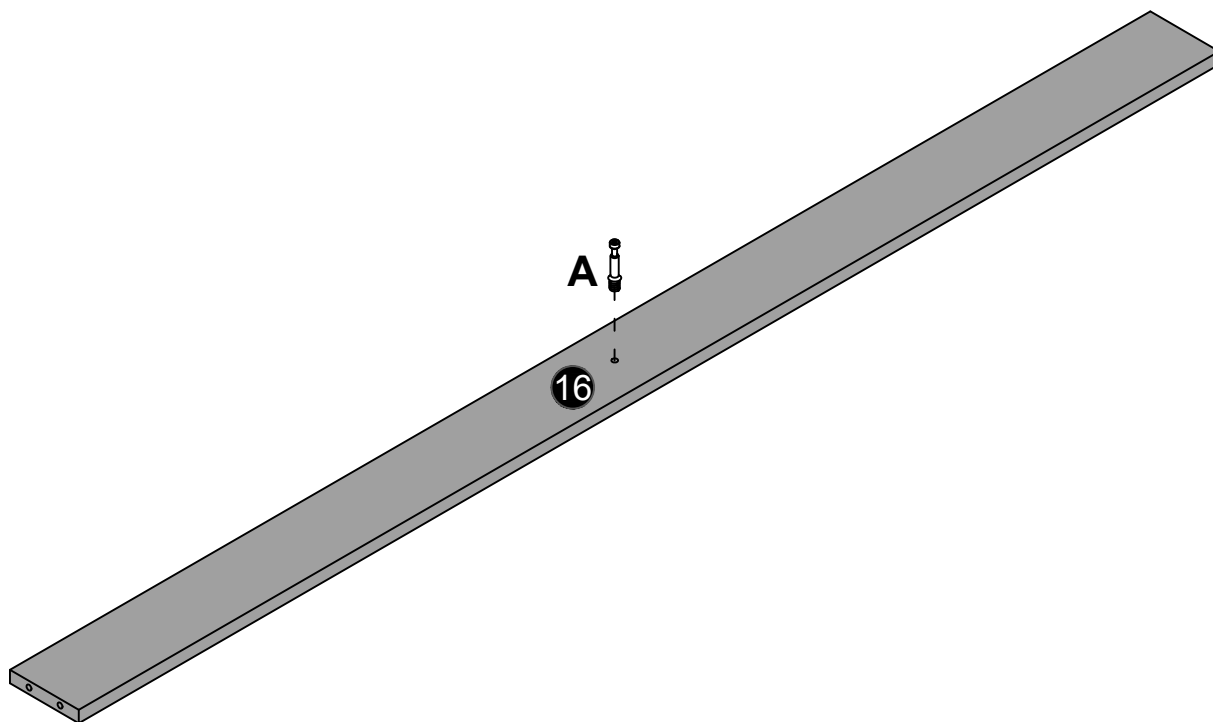

B x1



07

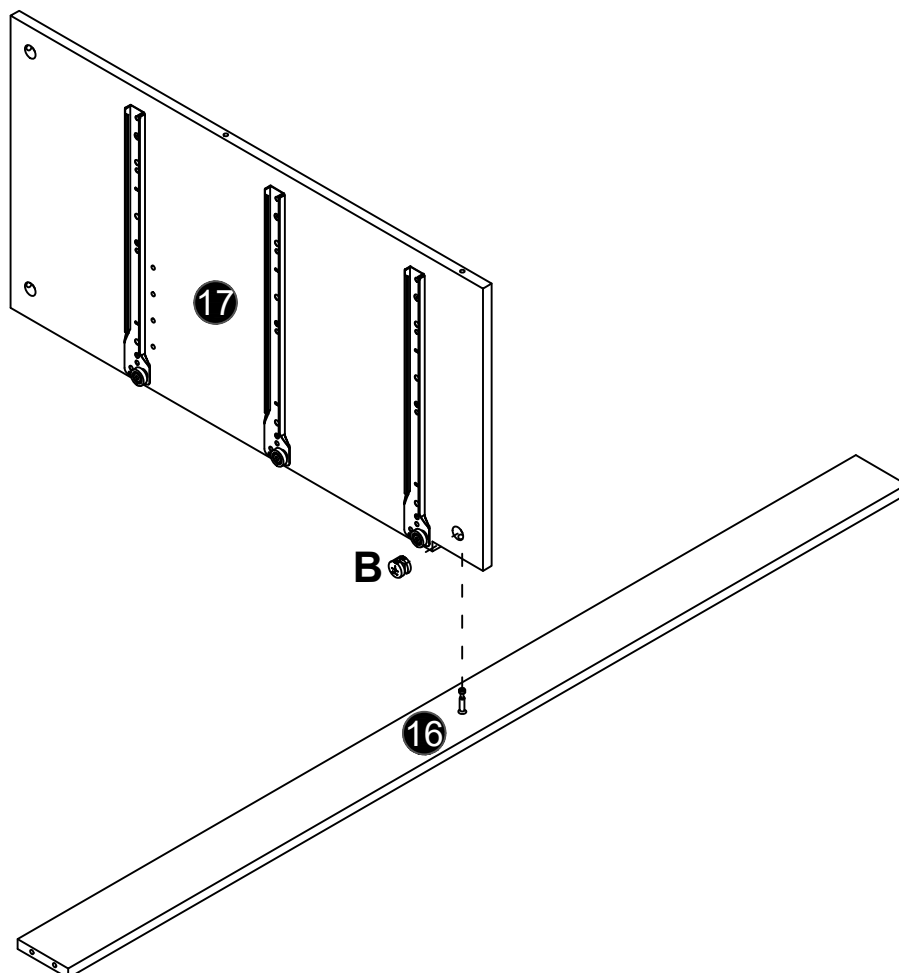



G x2




08




**Attention:** Use screw "G" to pass through the third and fourth holes of plate 17 connected to board 12.

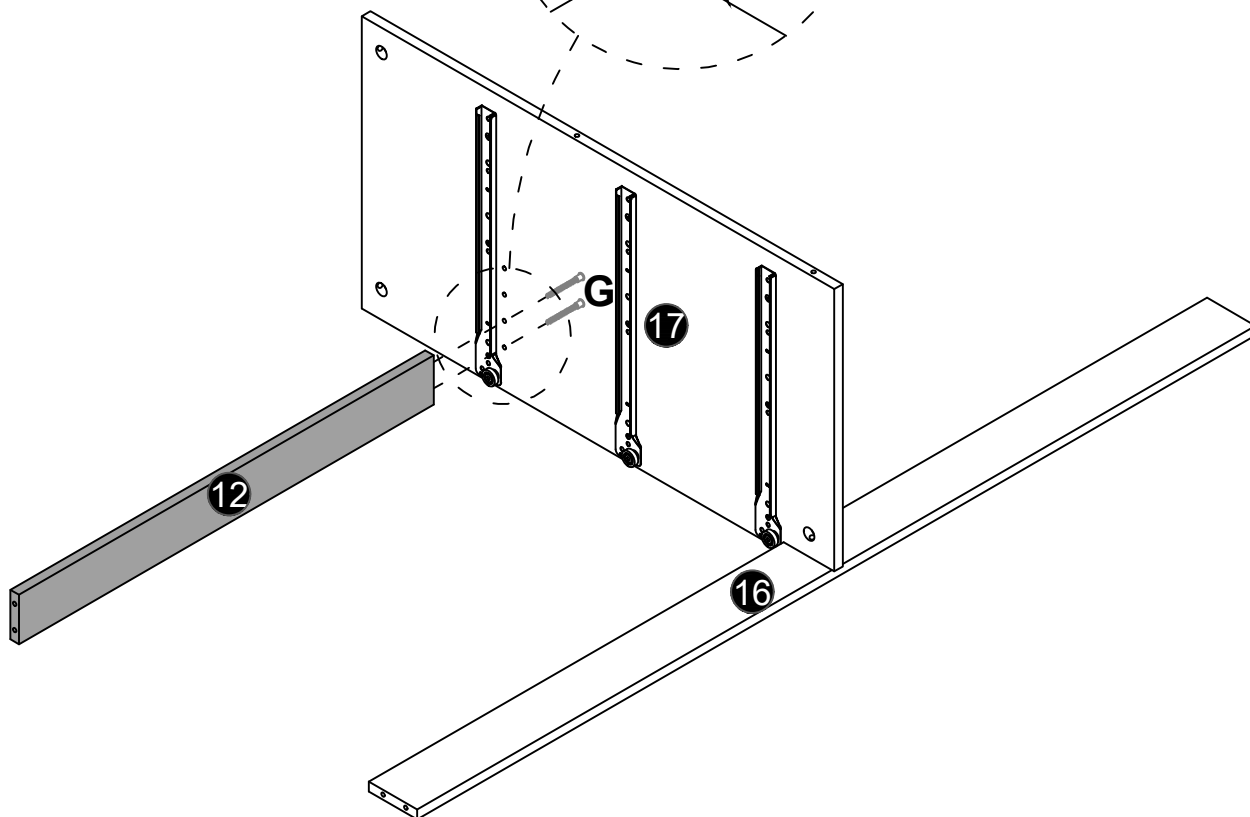
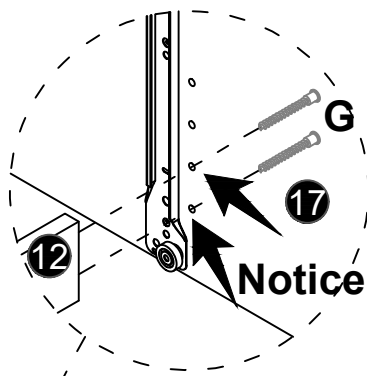



G x4





09

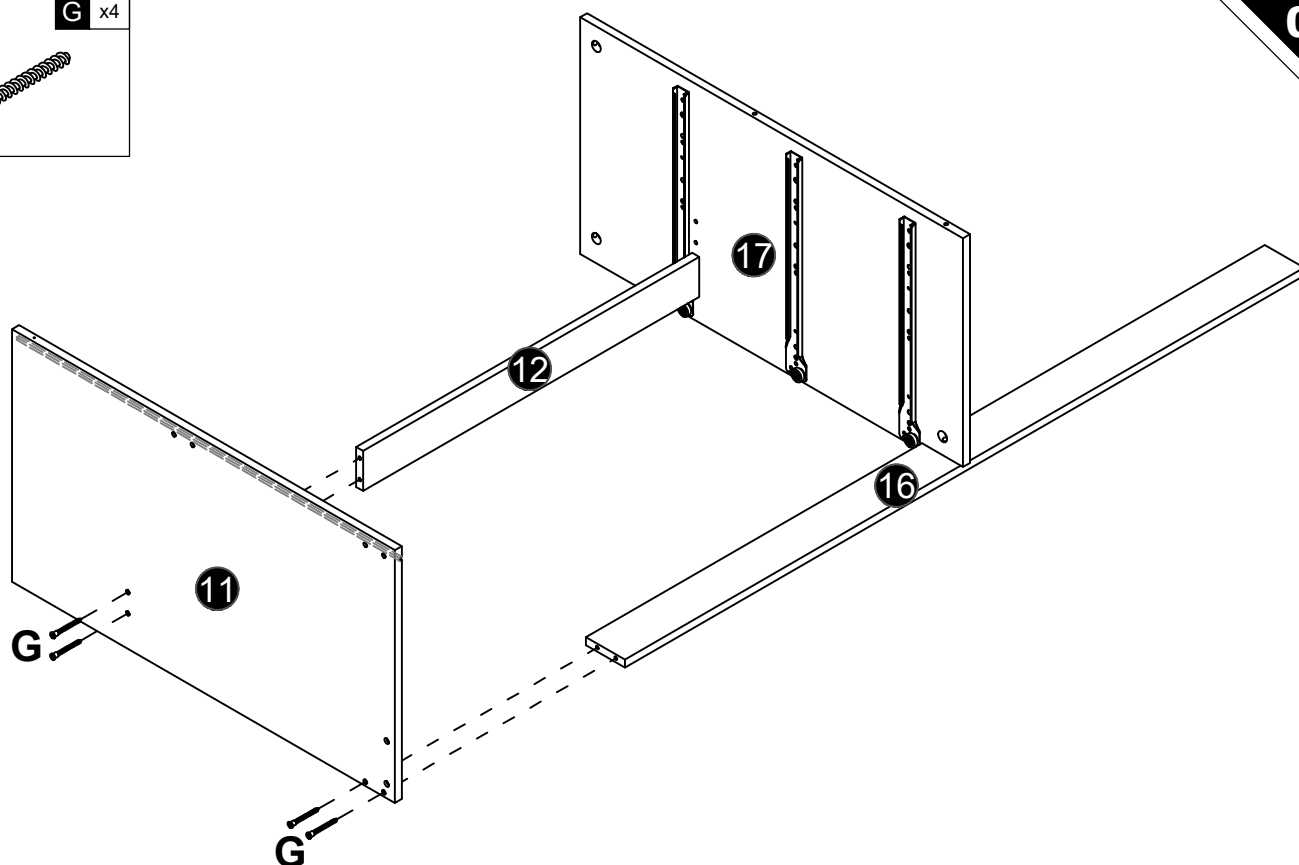


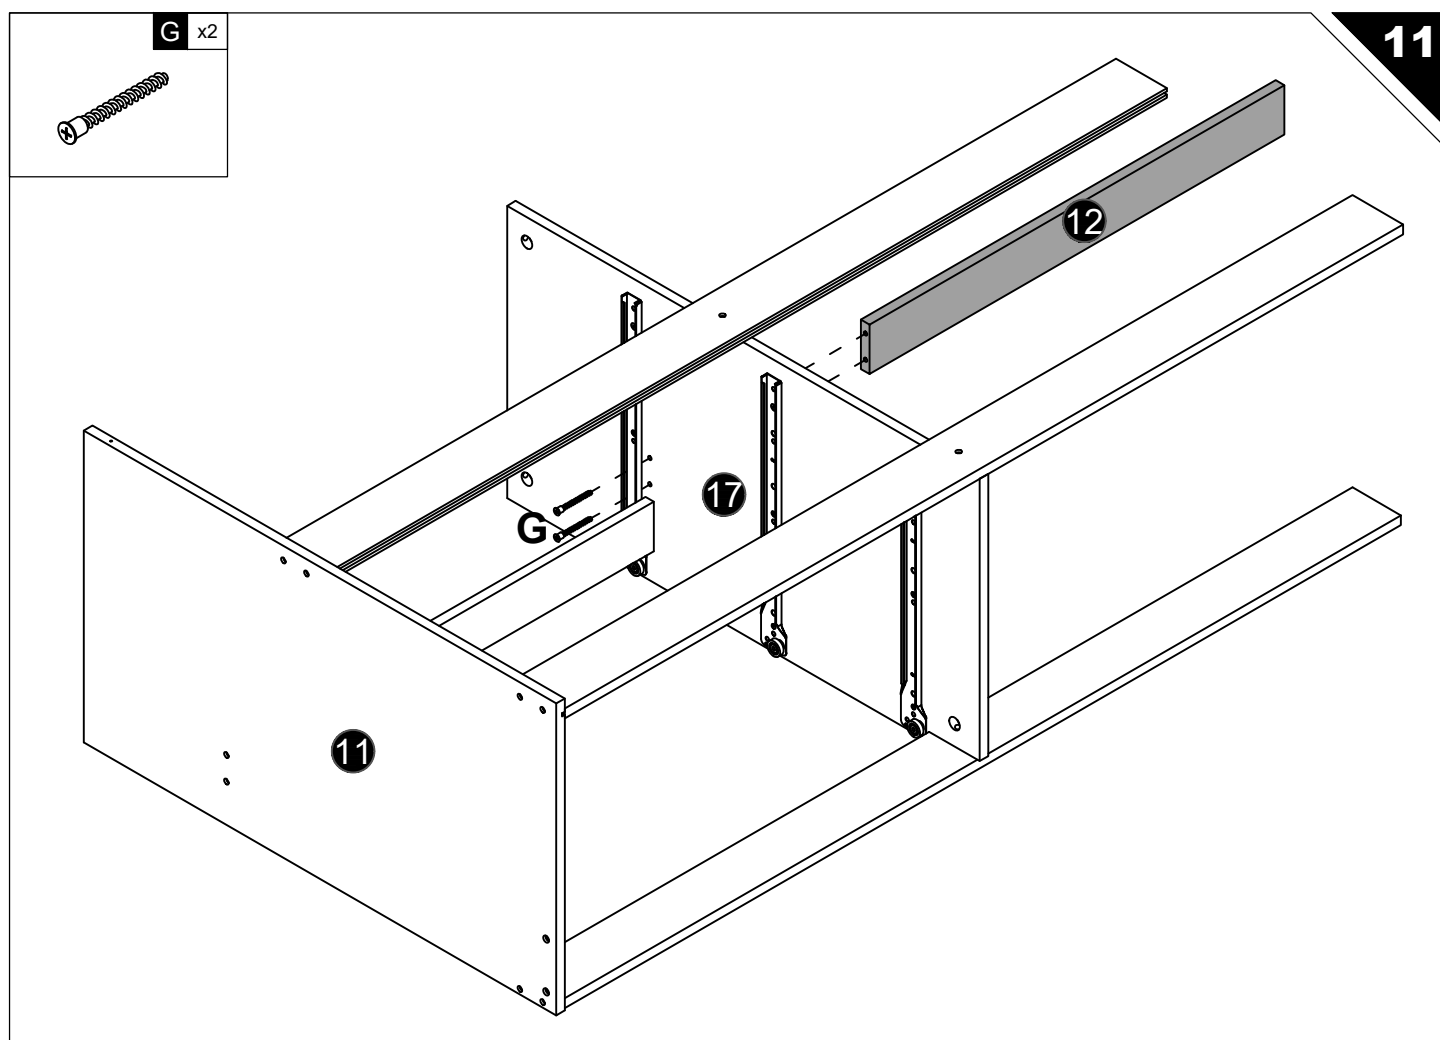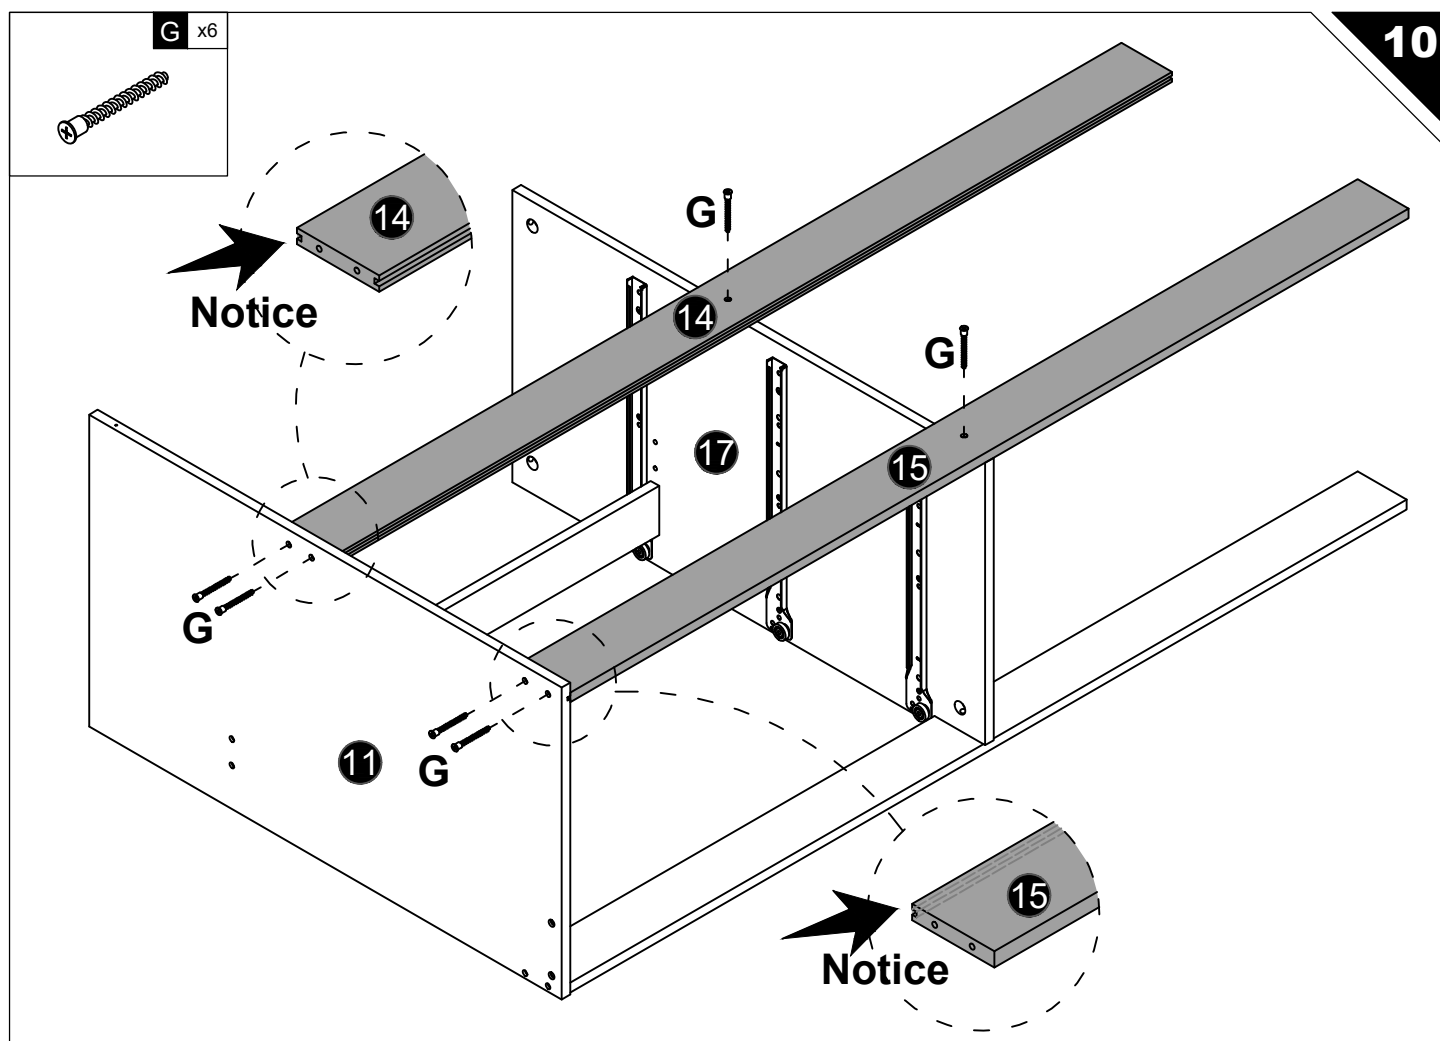

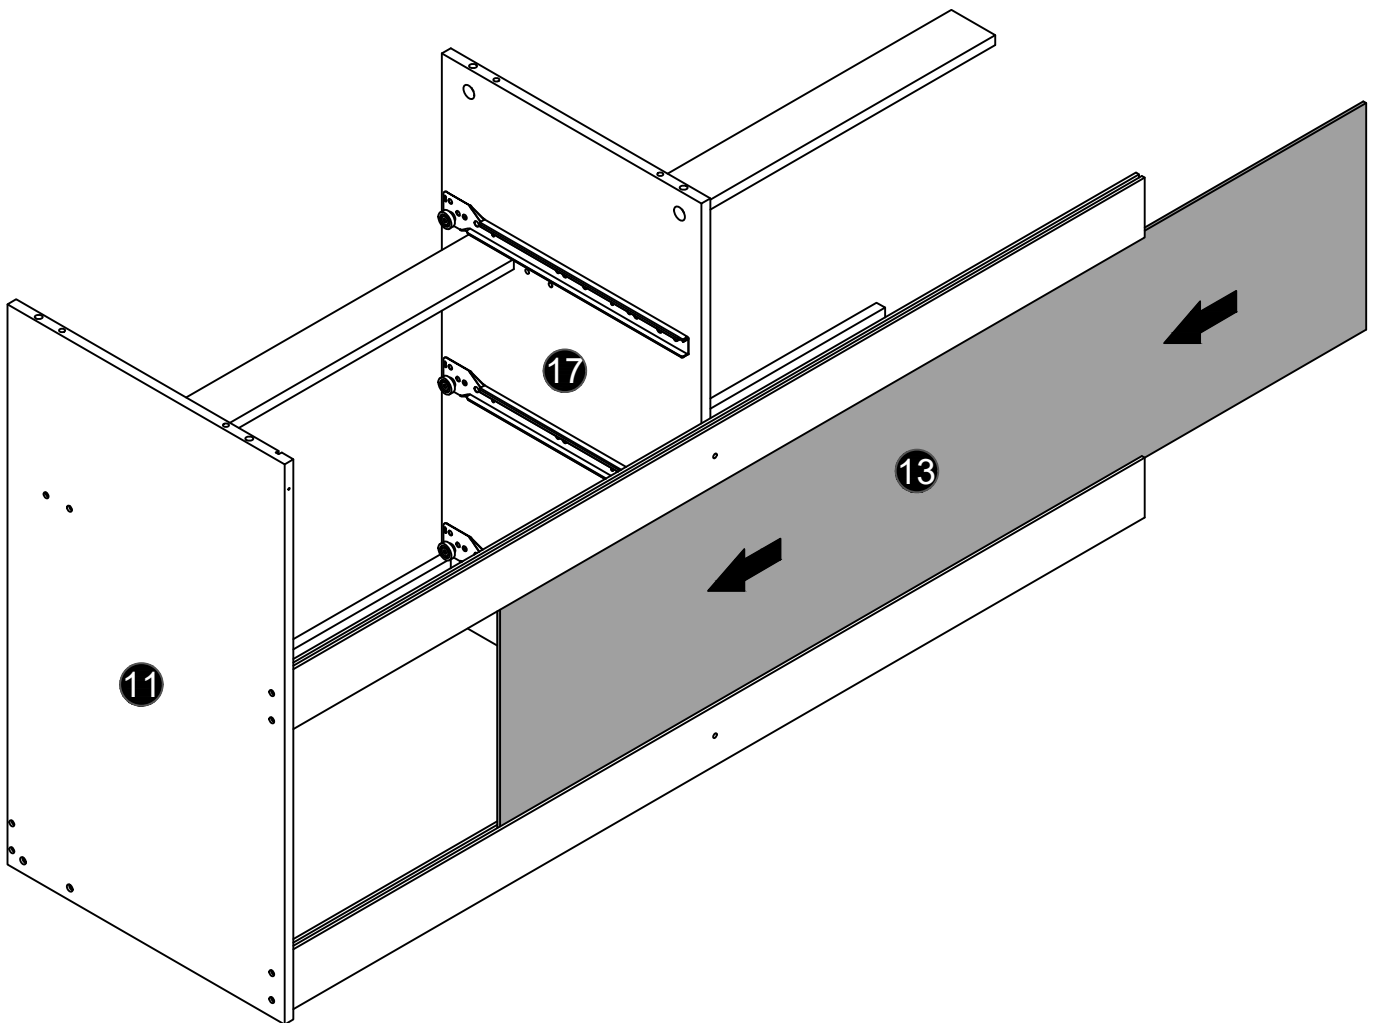


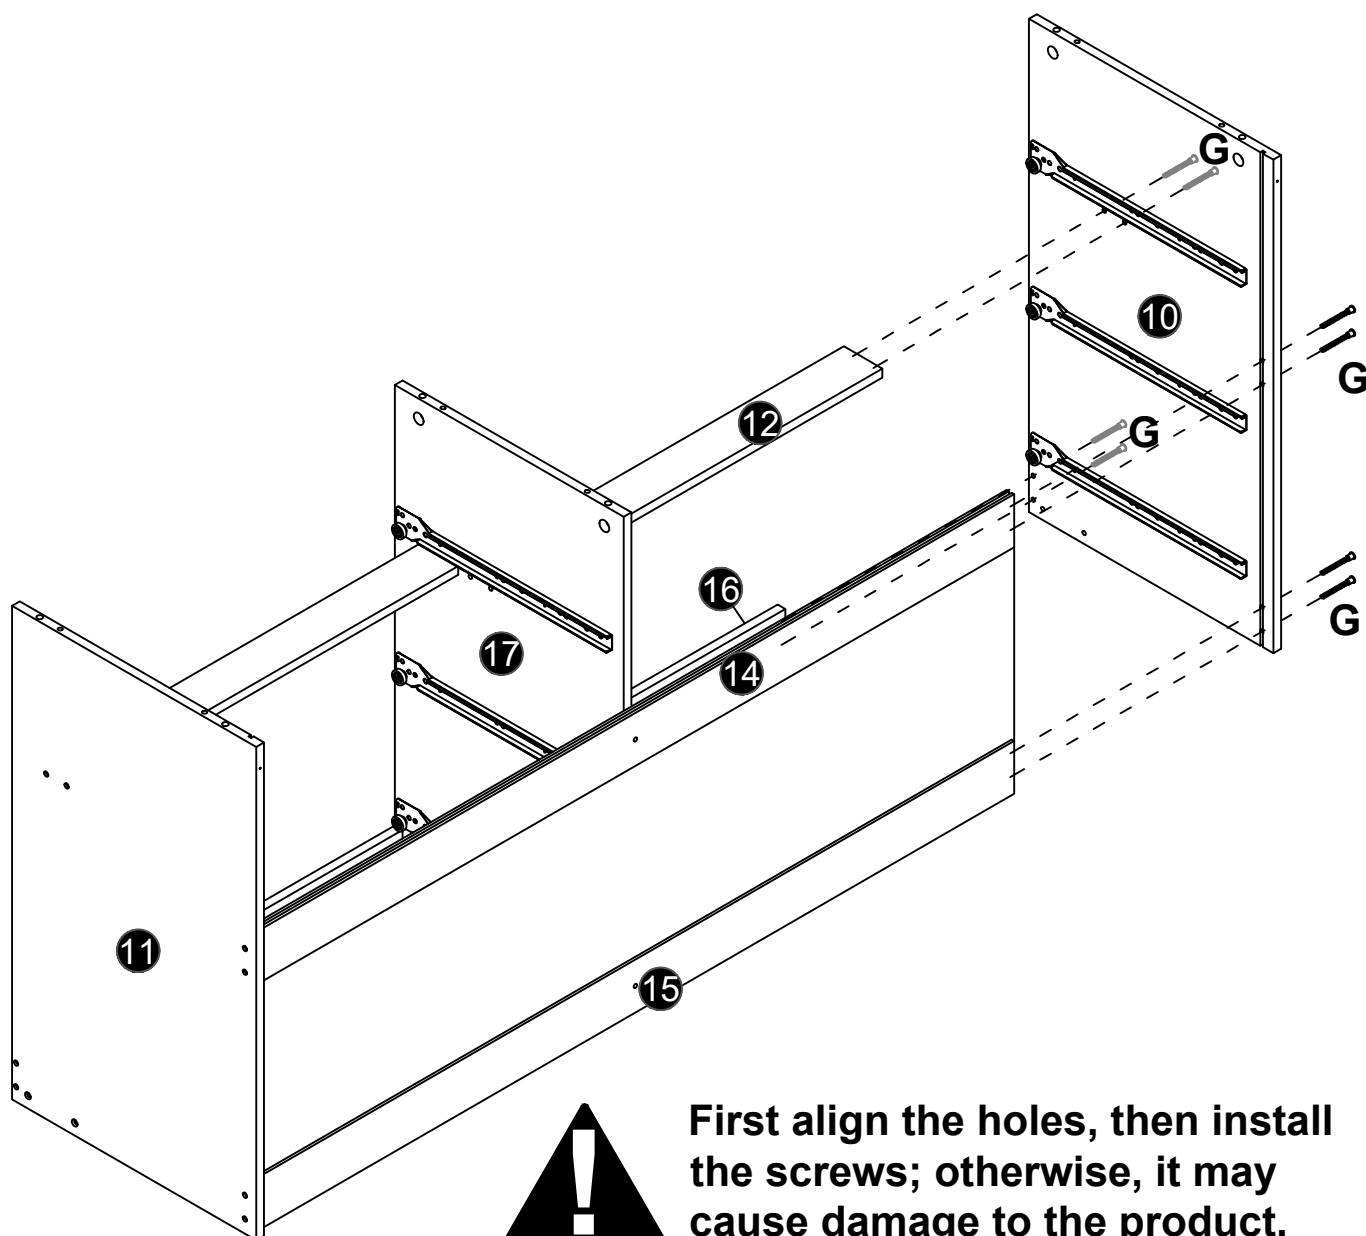


**First align the holes, then install the screws; otherwise, it may cause damage to the product.**

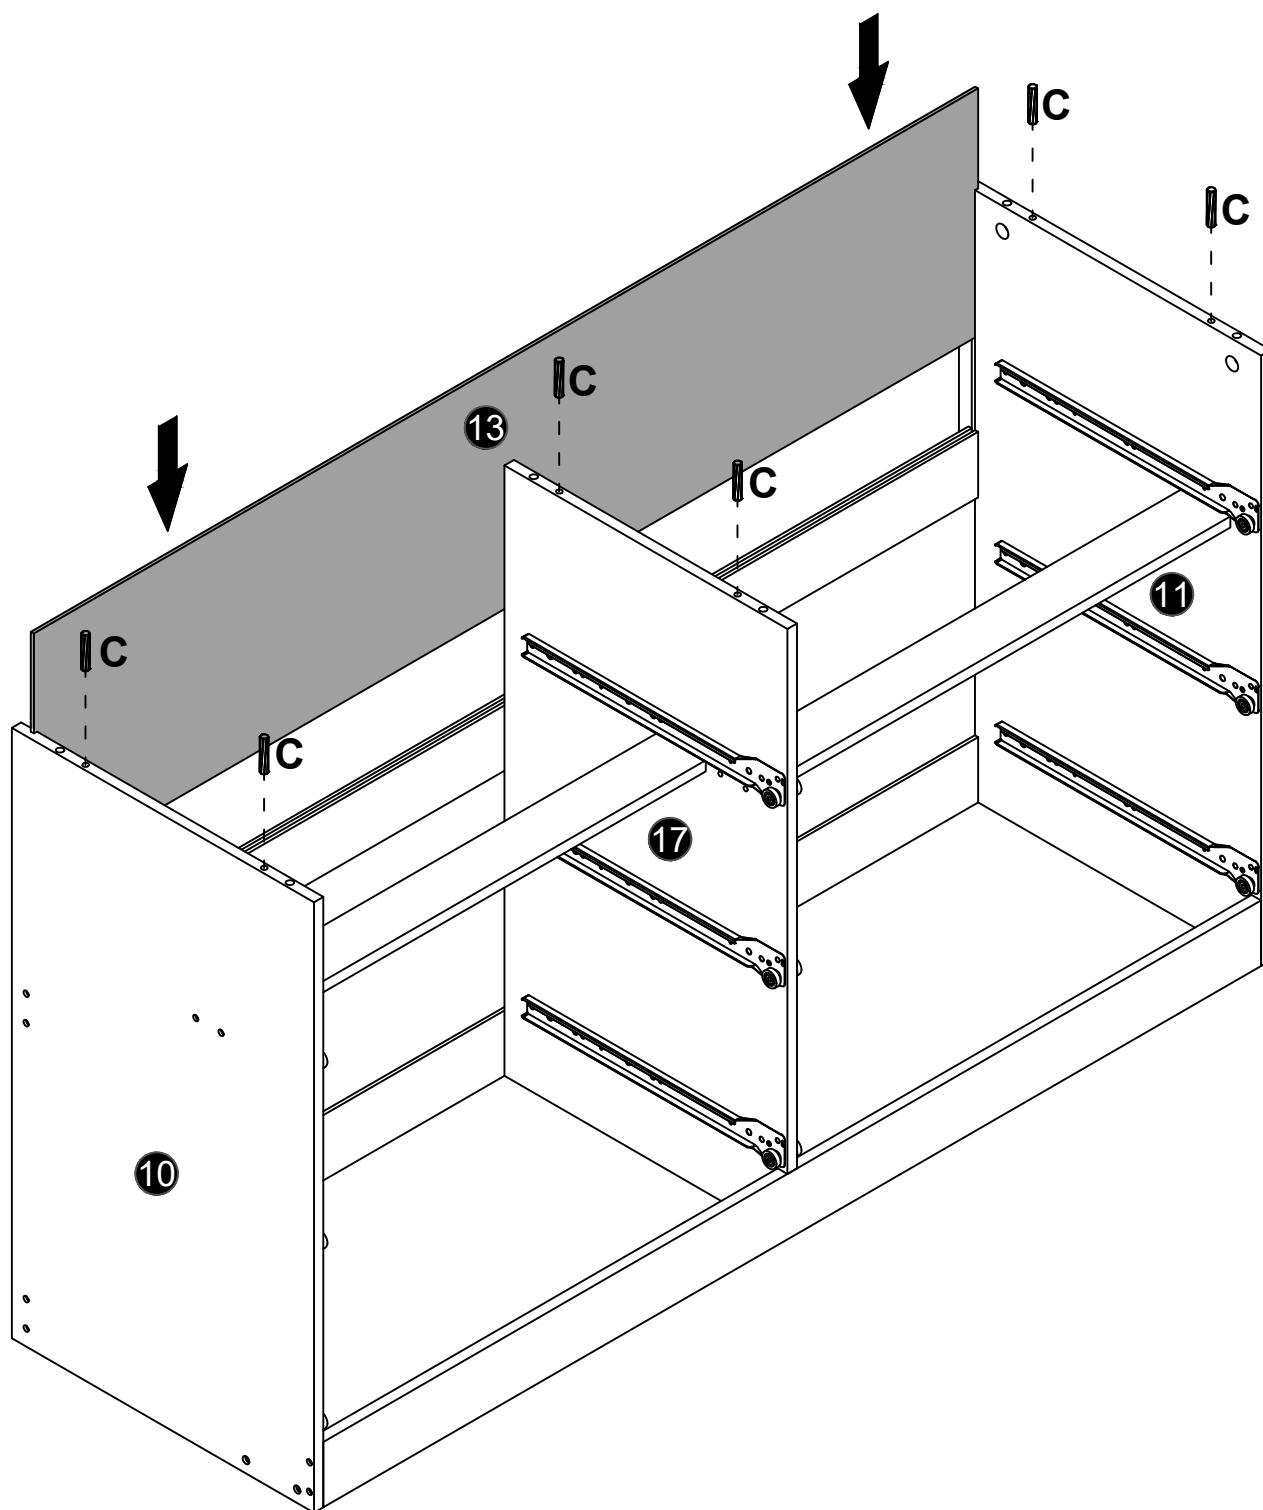


A x7




15

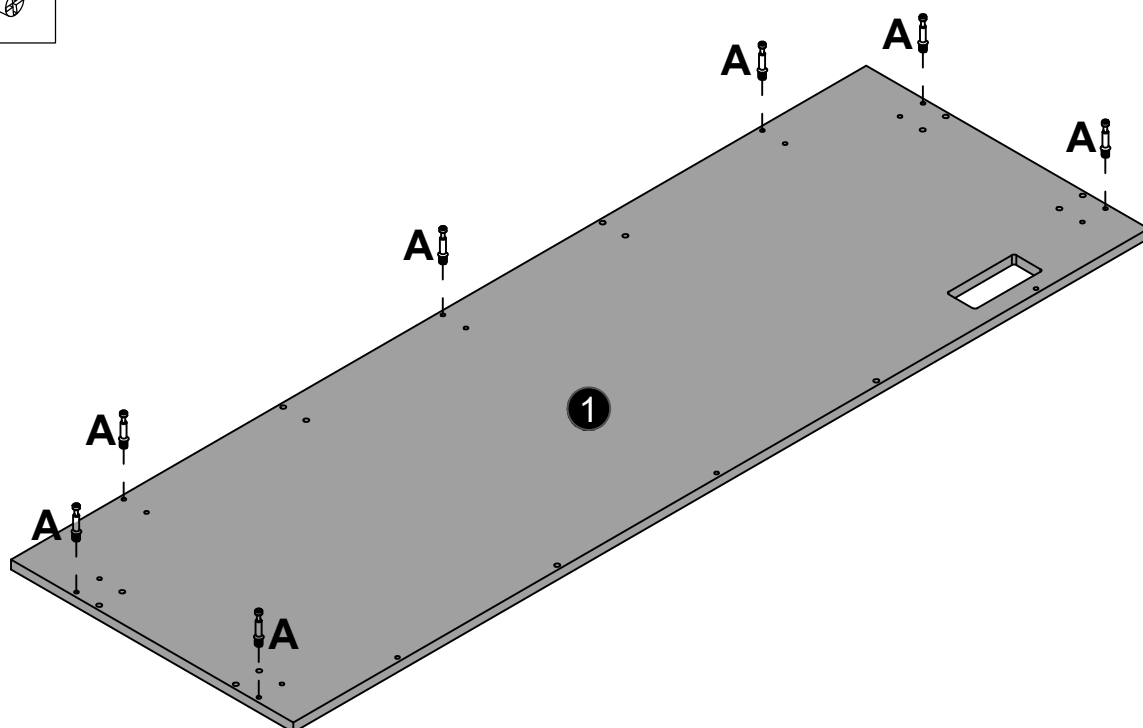

A x2




16

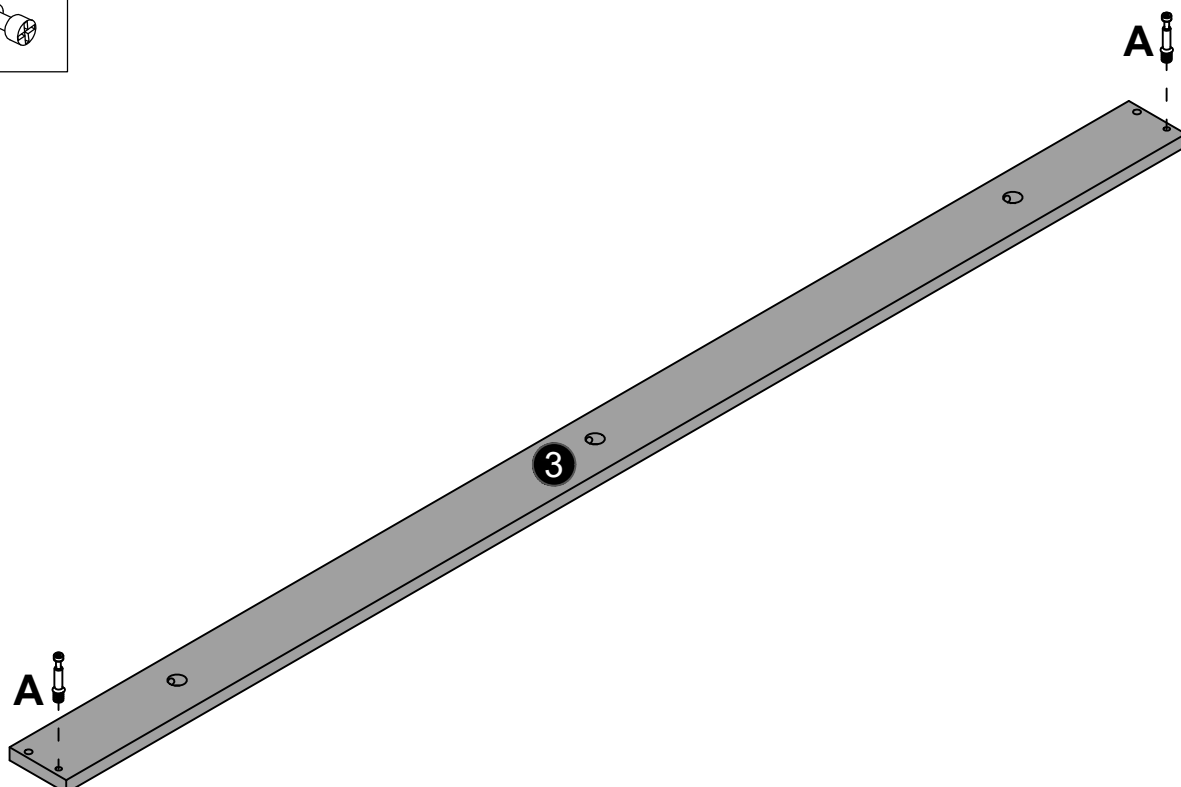

B x2




C x2

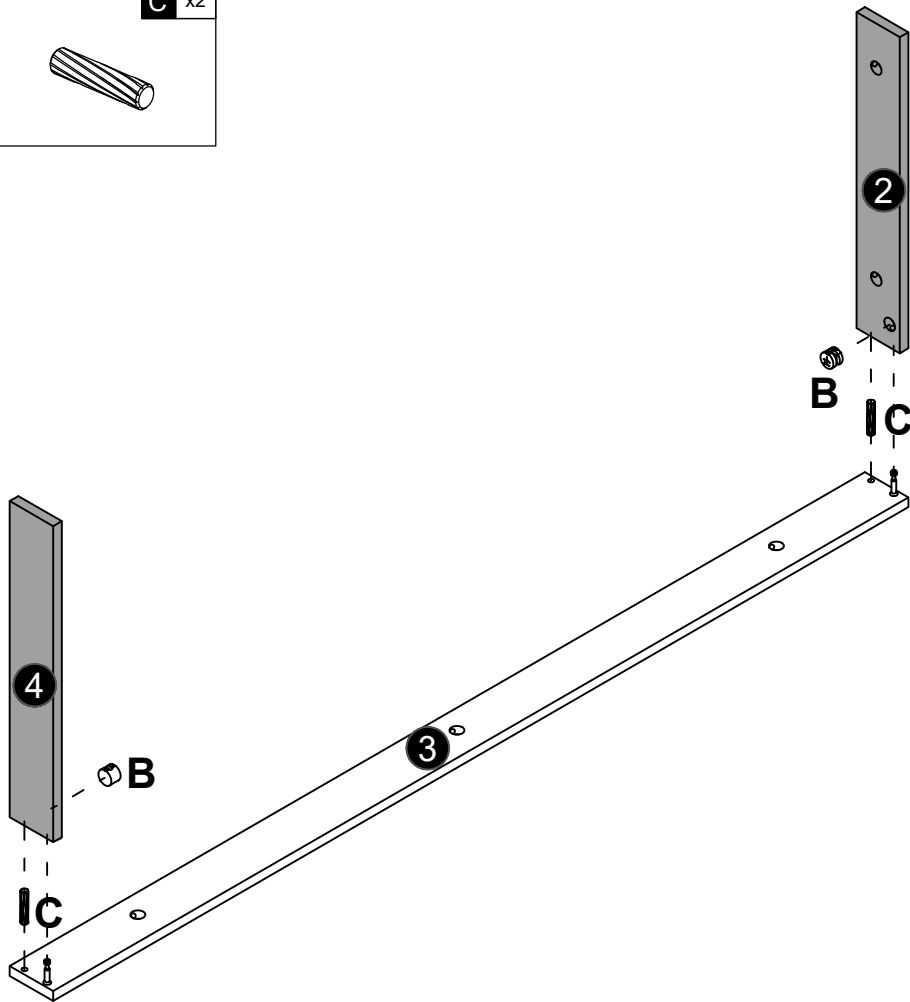

B x7





C x6

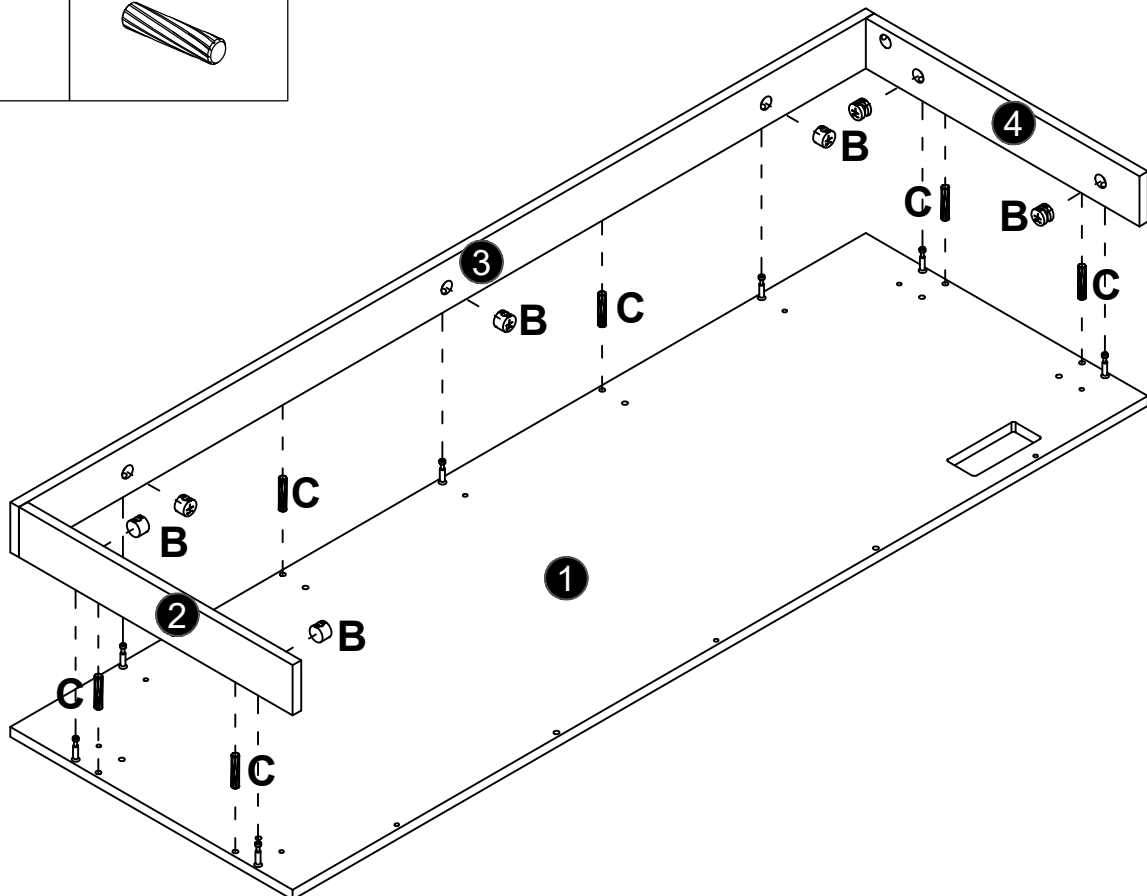



A x10

19

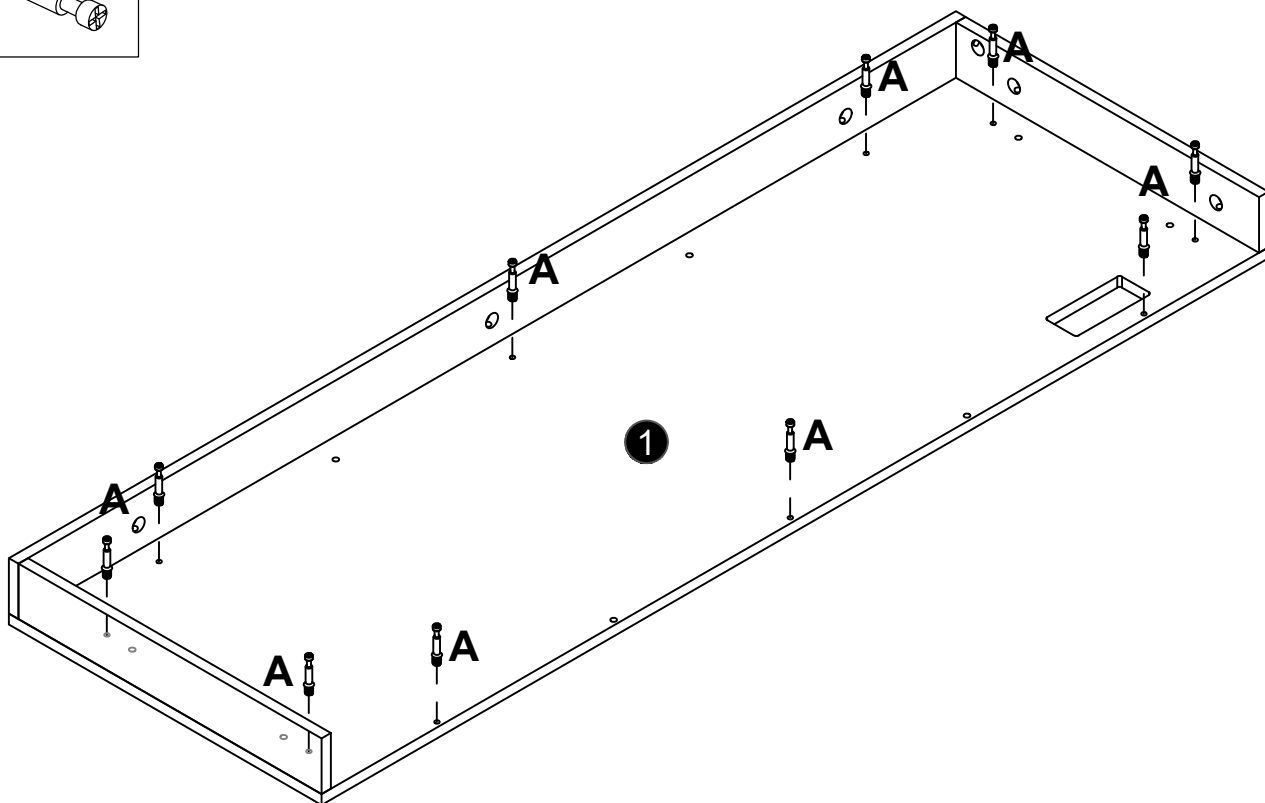


A x4

20

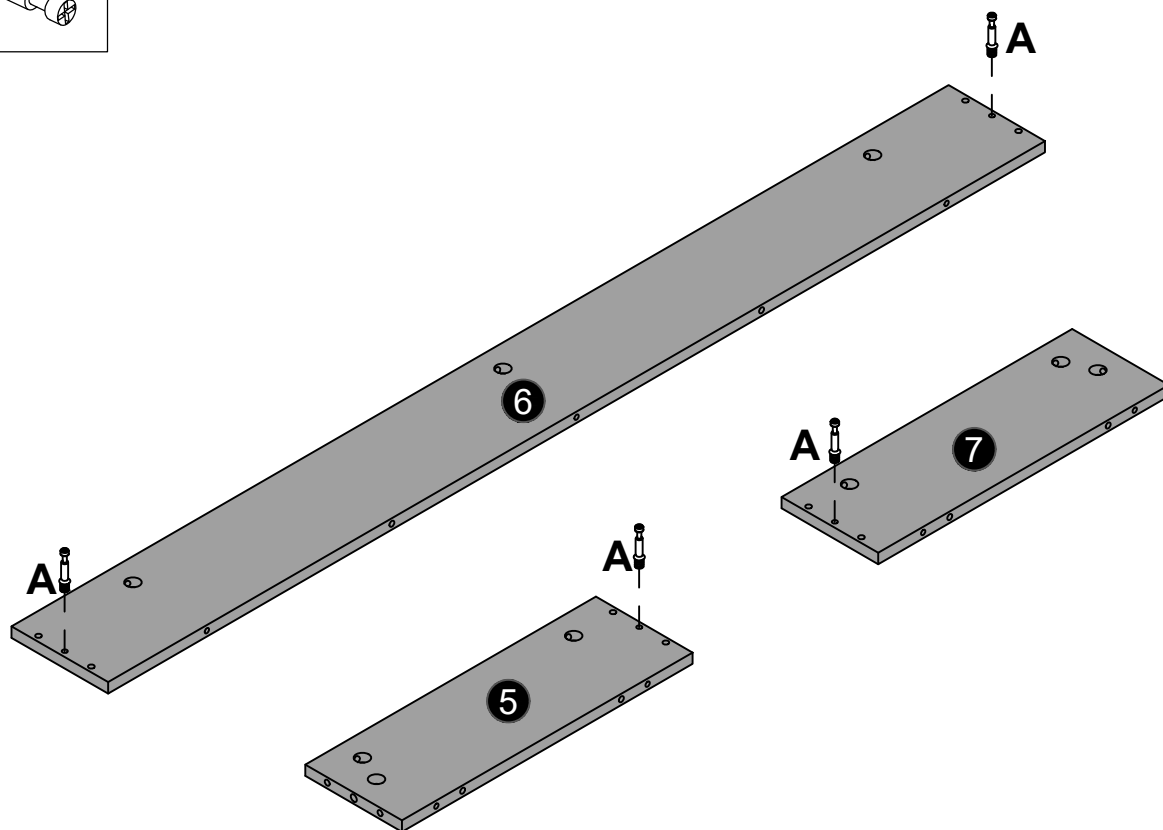


B x2

C x4

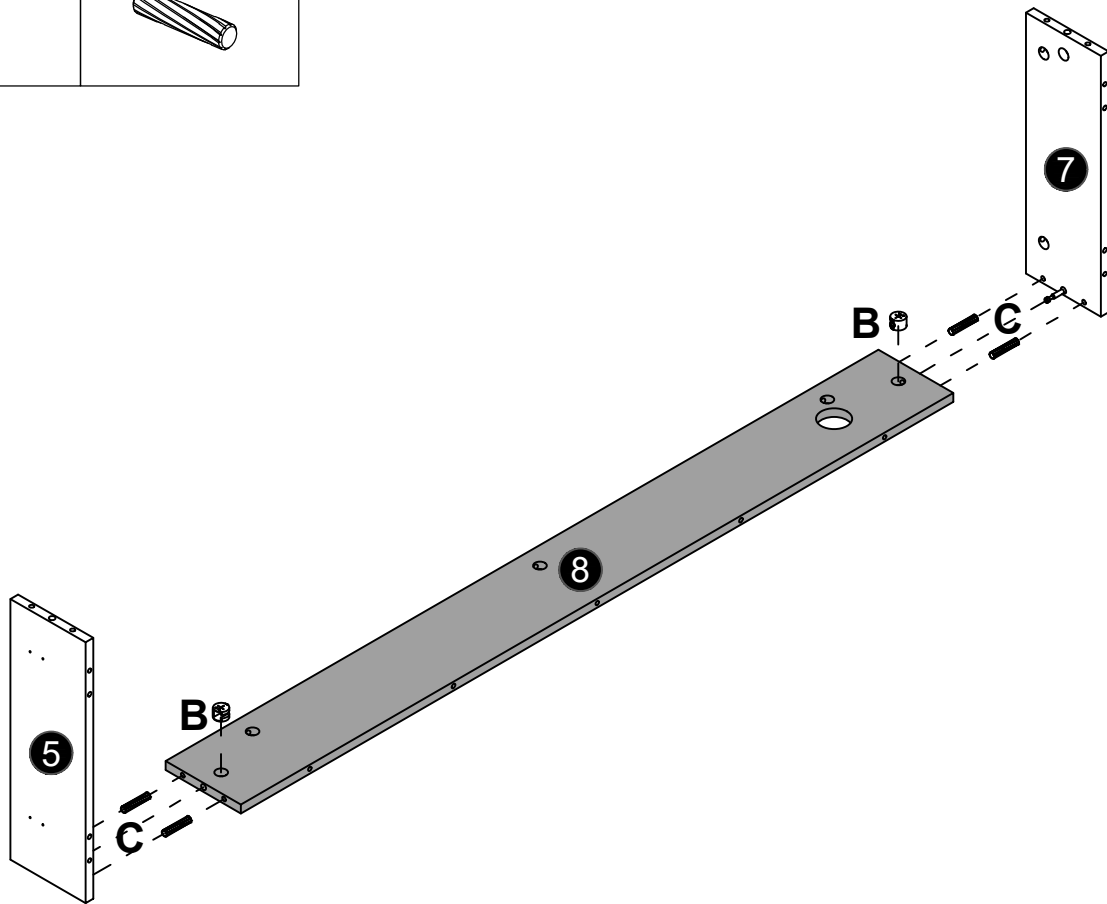


B x2





C x4

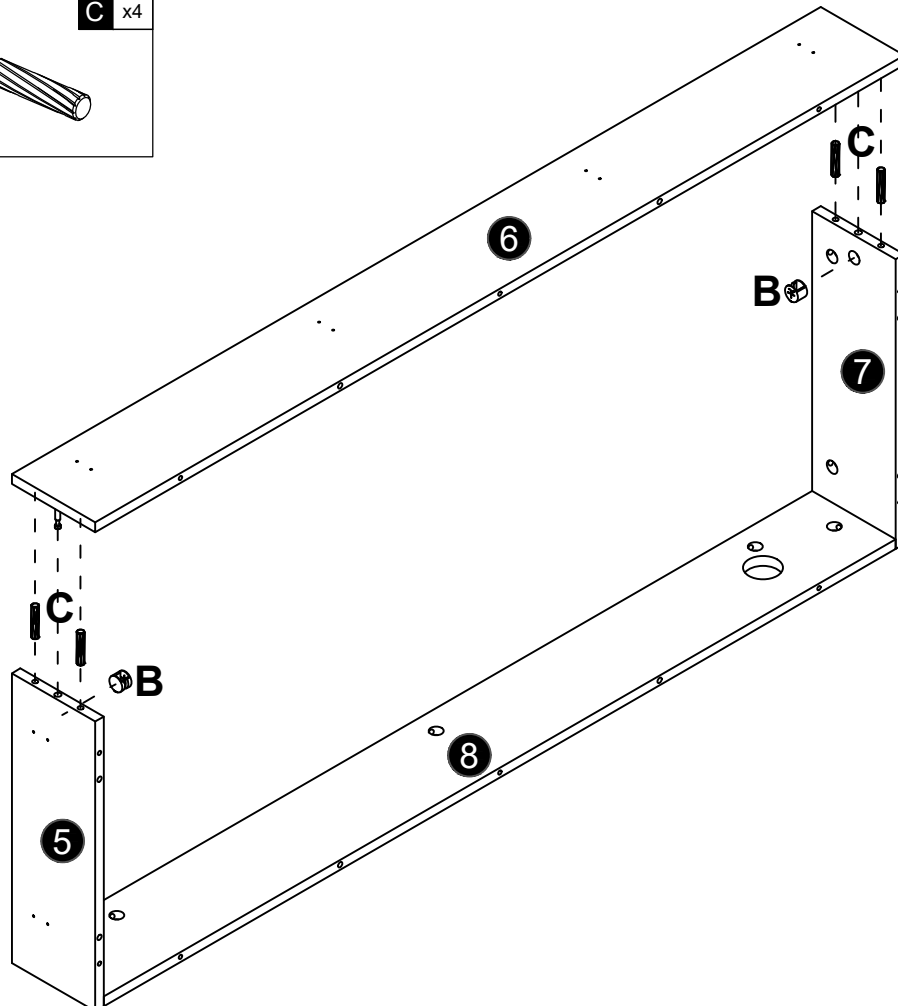

J x1

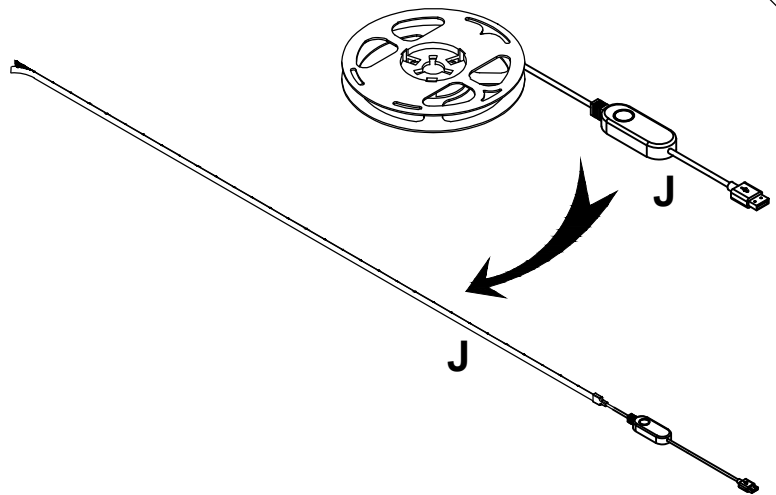

Before installing the light strip, use K to compare the installation path to avoid deviation.

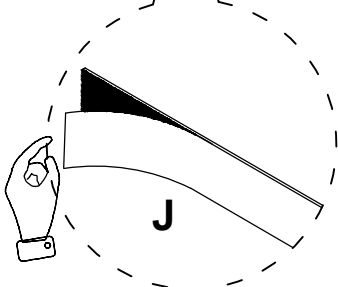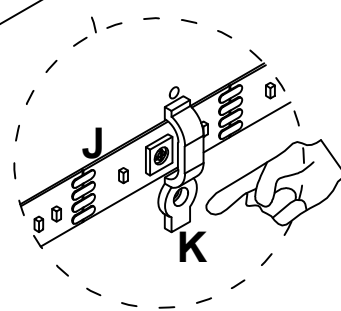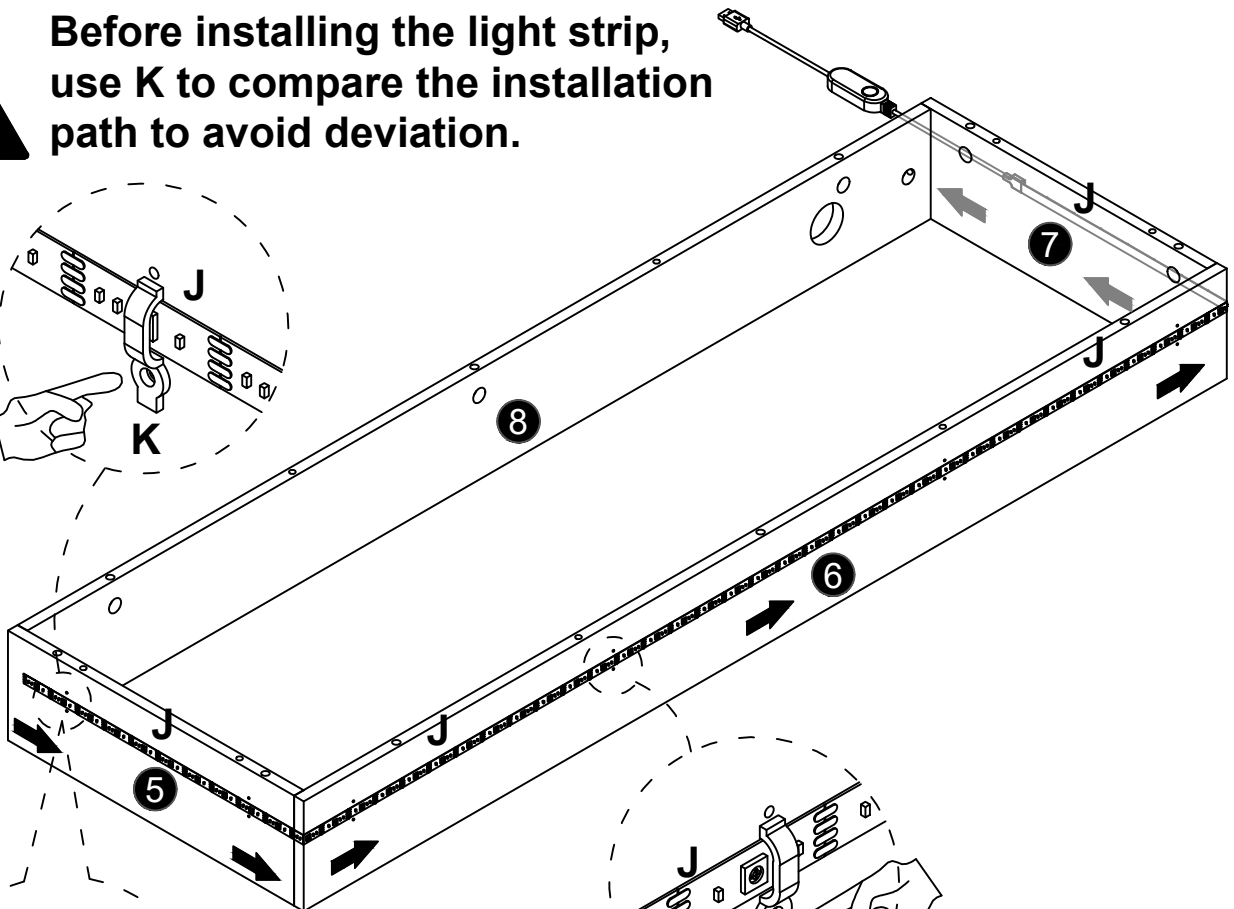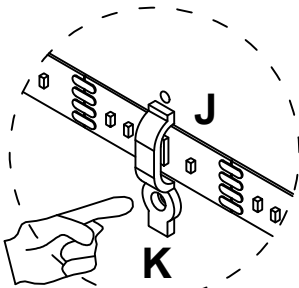

After comparing the installation path, peel off the backing paper slowly. It is recommended to peel along the path while installing the light strip, rather than removing it all at once, to prevent dust from sticking to the light strip, which may cause the adhesive to fail.

K x7

L x1



K-1




K-2



L-1




L-2

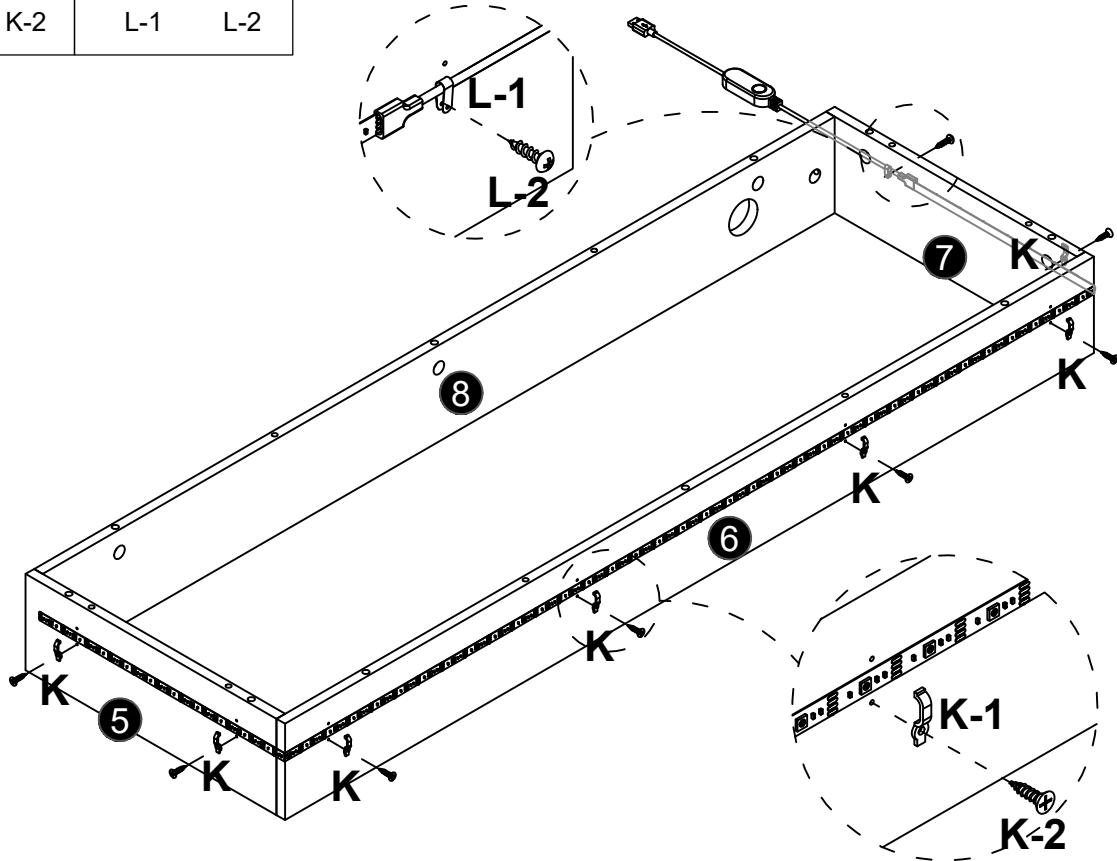




B x10

C x8


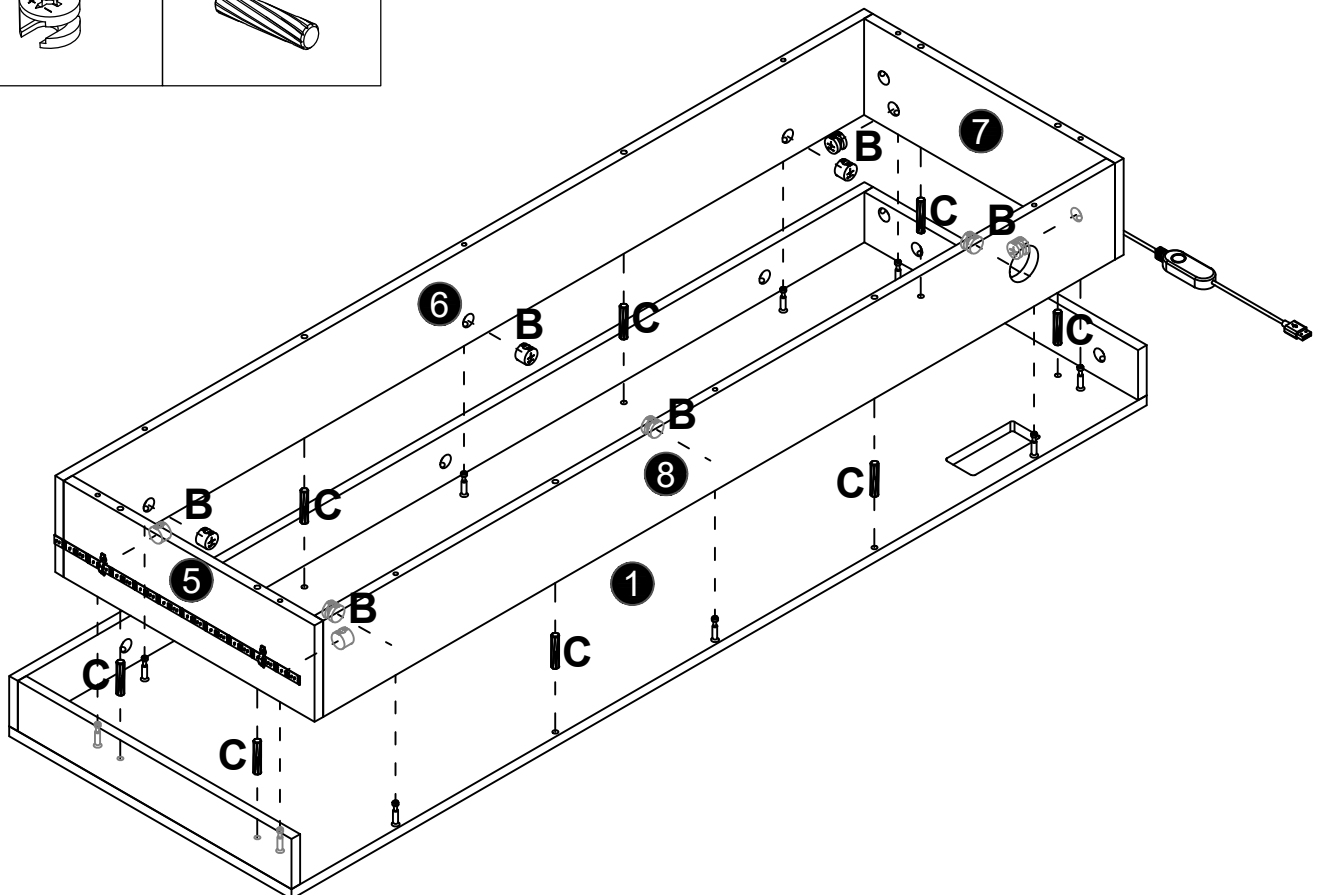




C x8




G x10

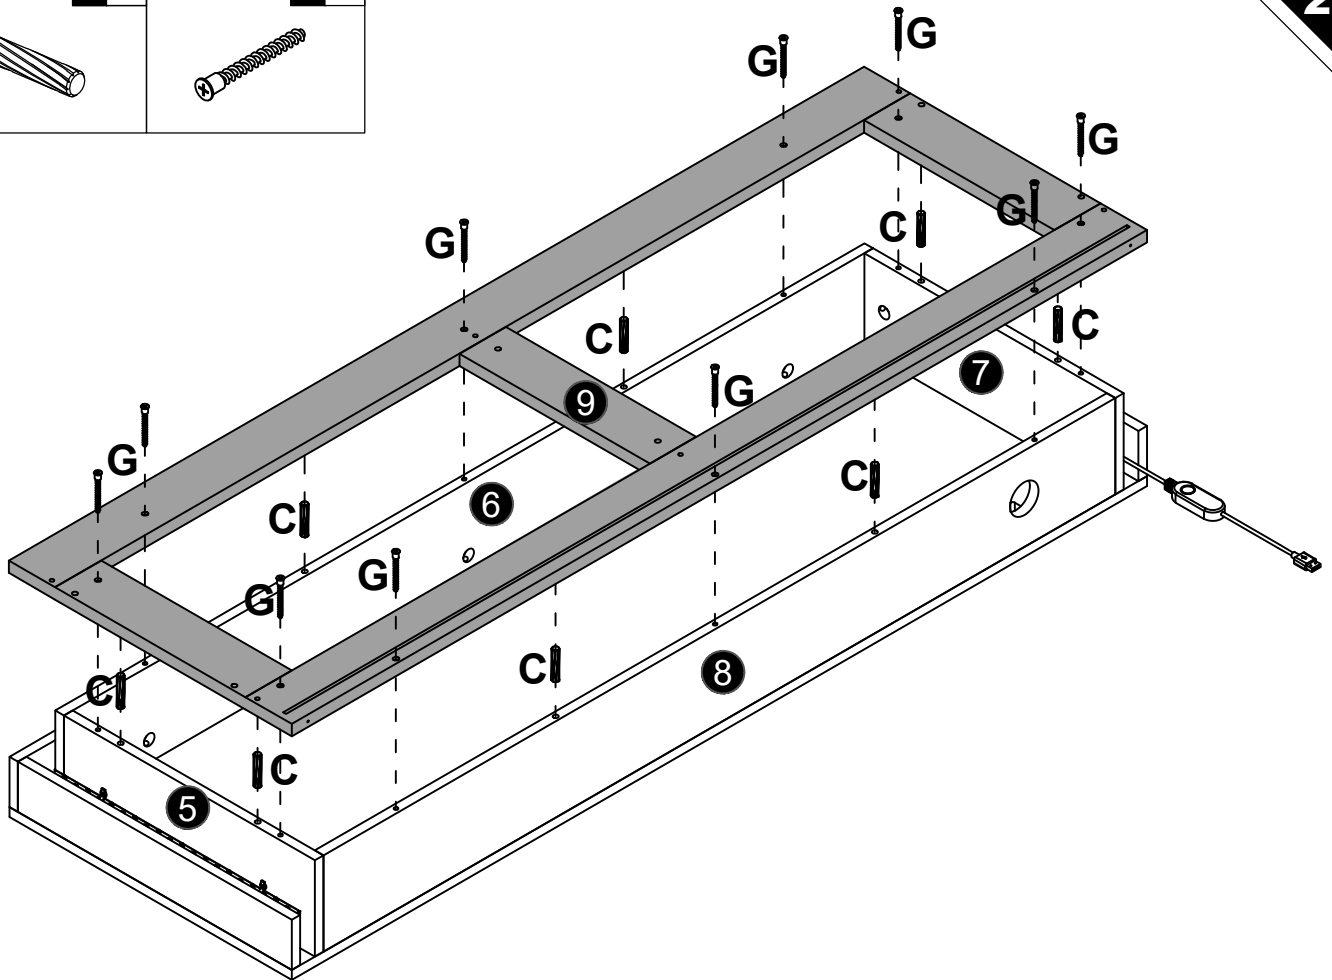


A x6

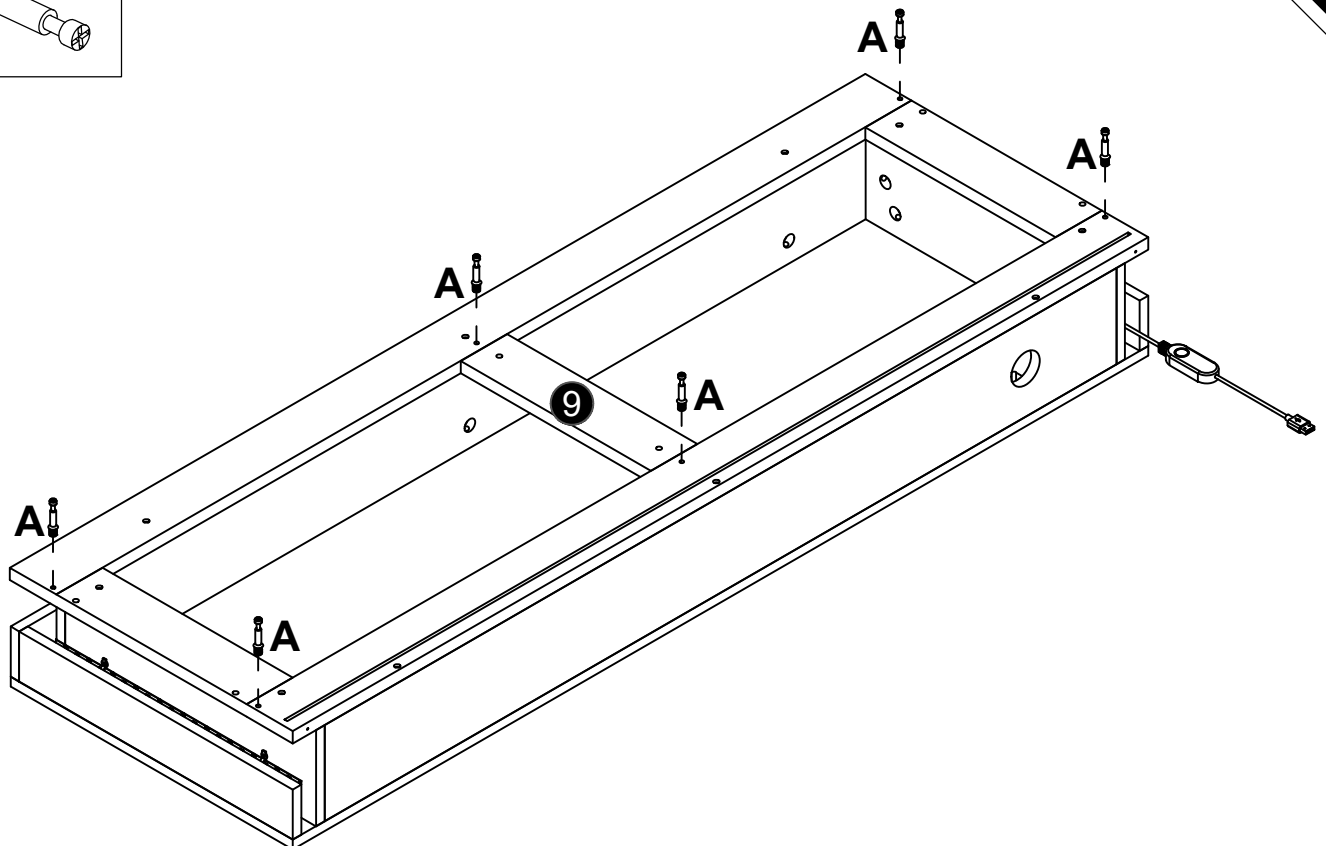

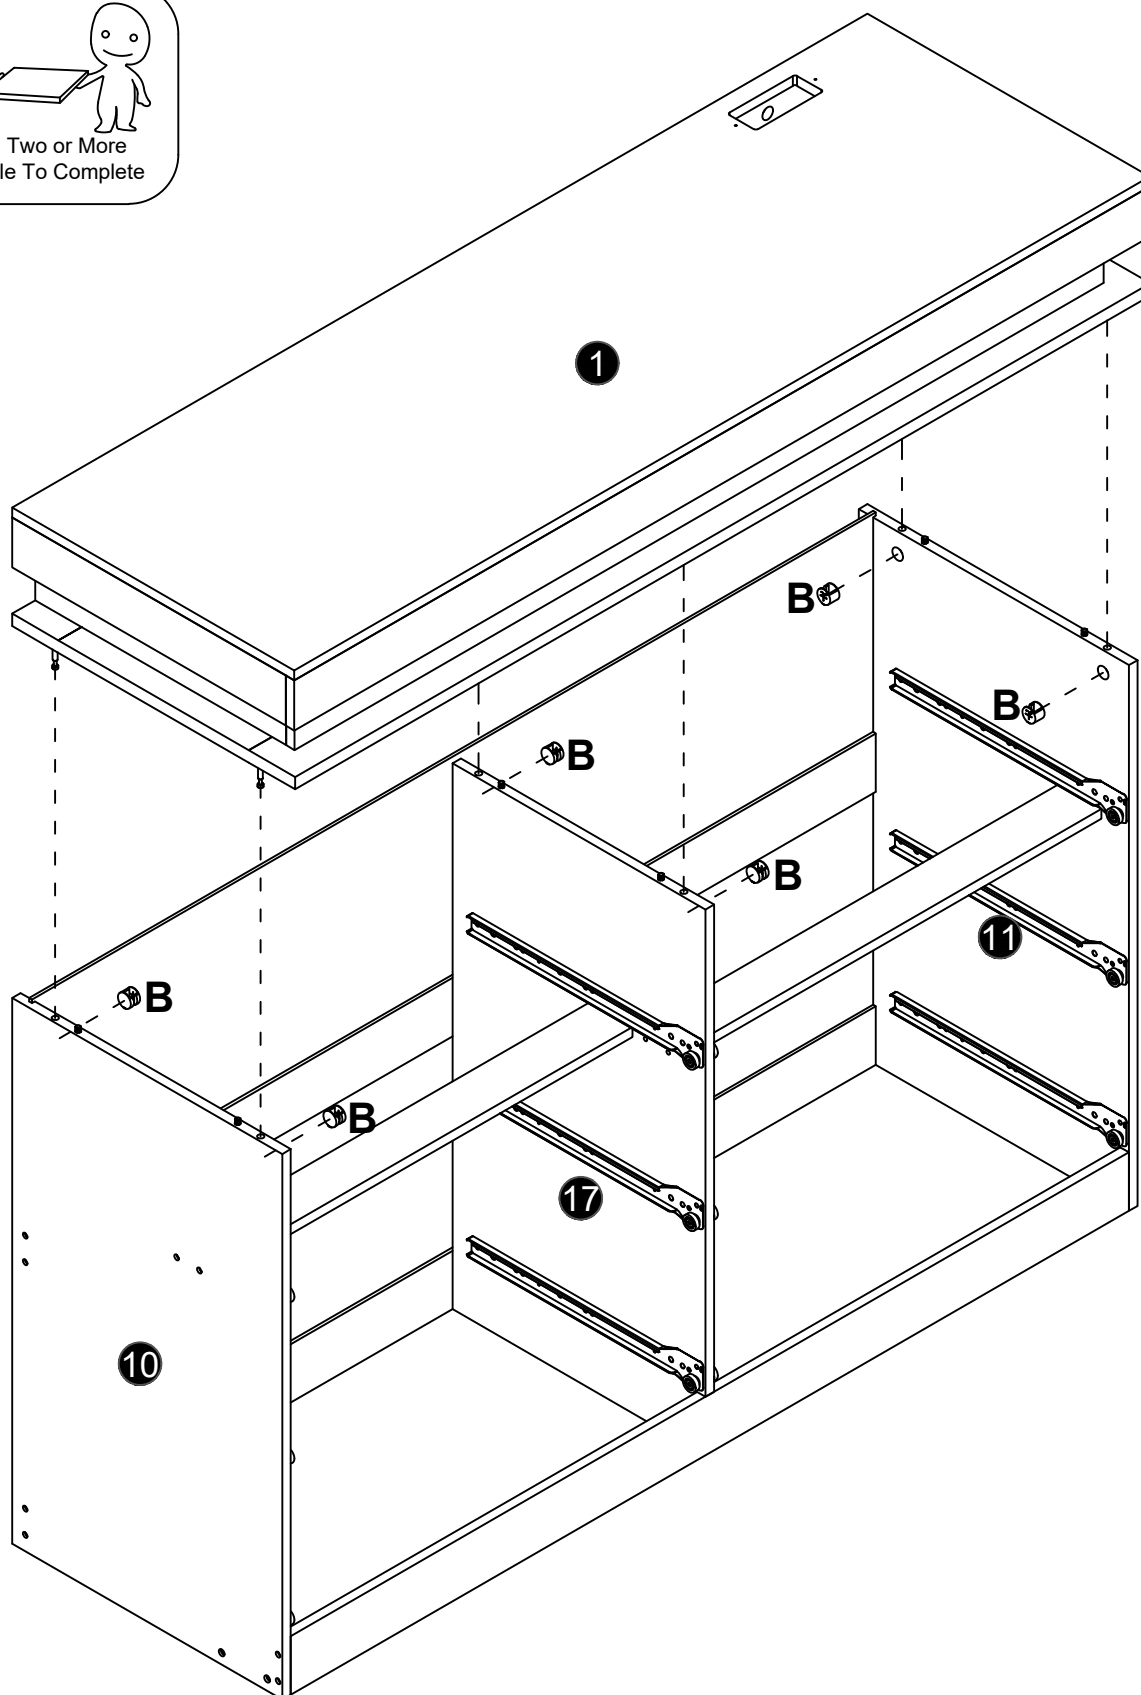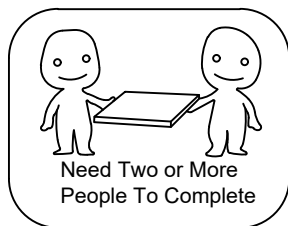


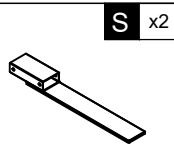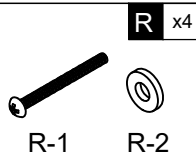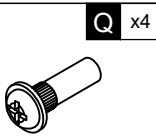



(1)

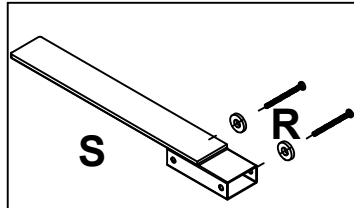

(2)

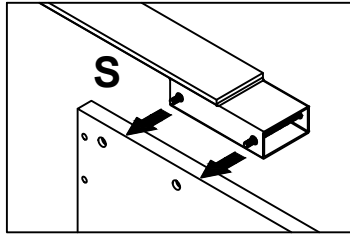


(3)

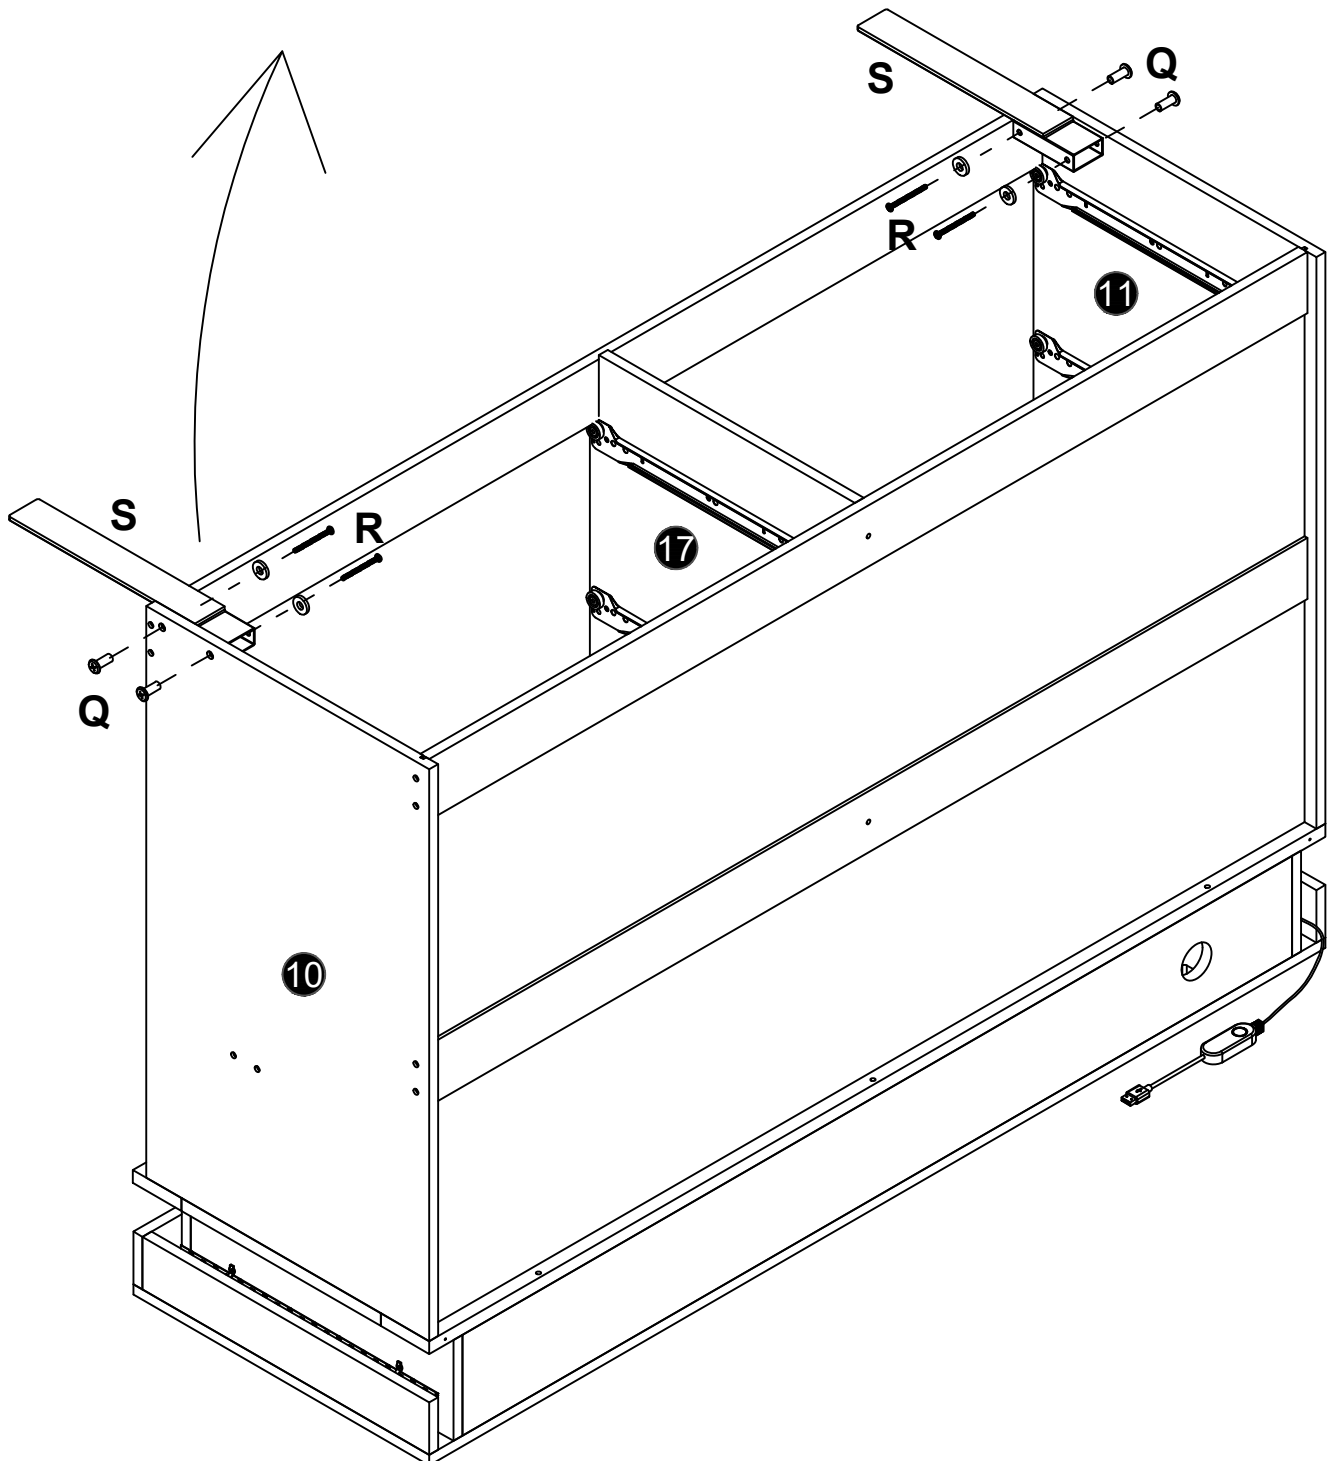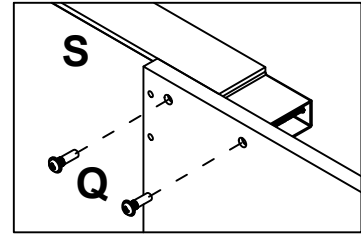

O x1



P x2

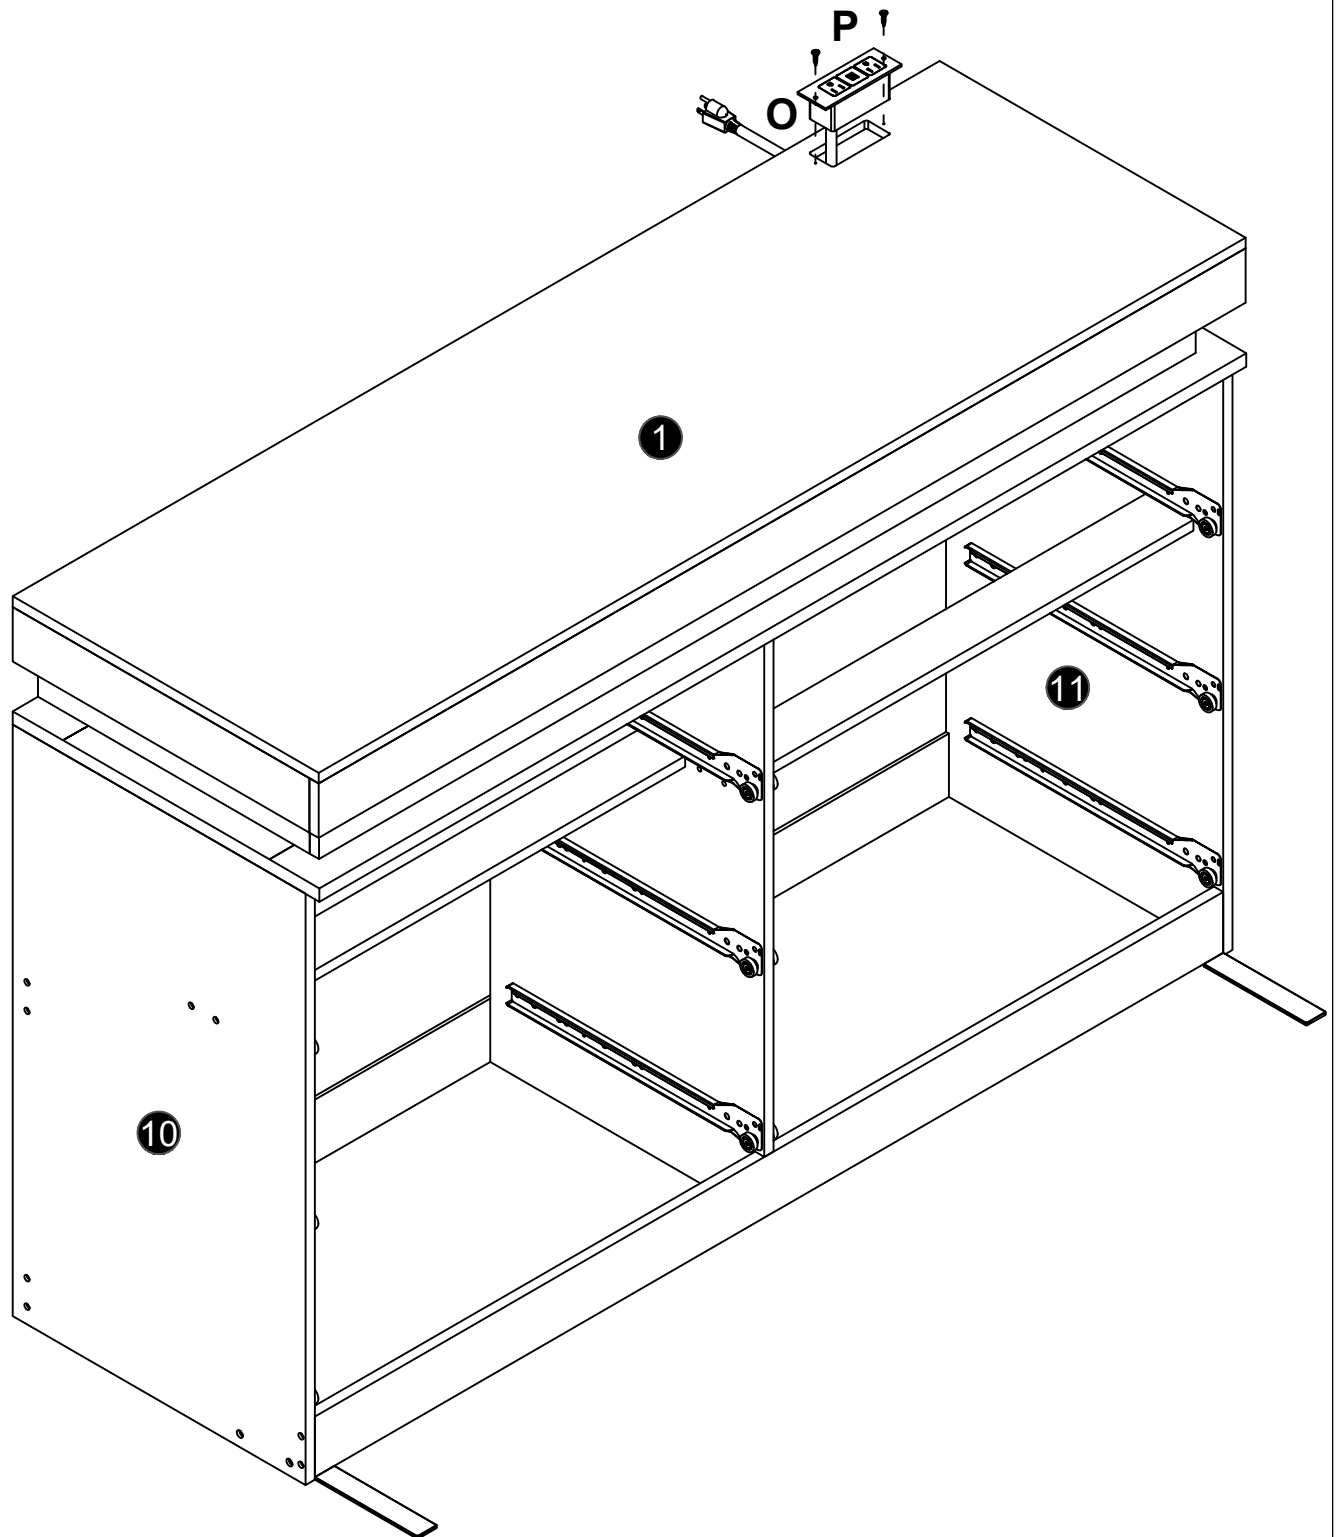

M x20




N x12





N-1




N-2

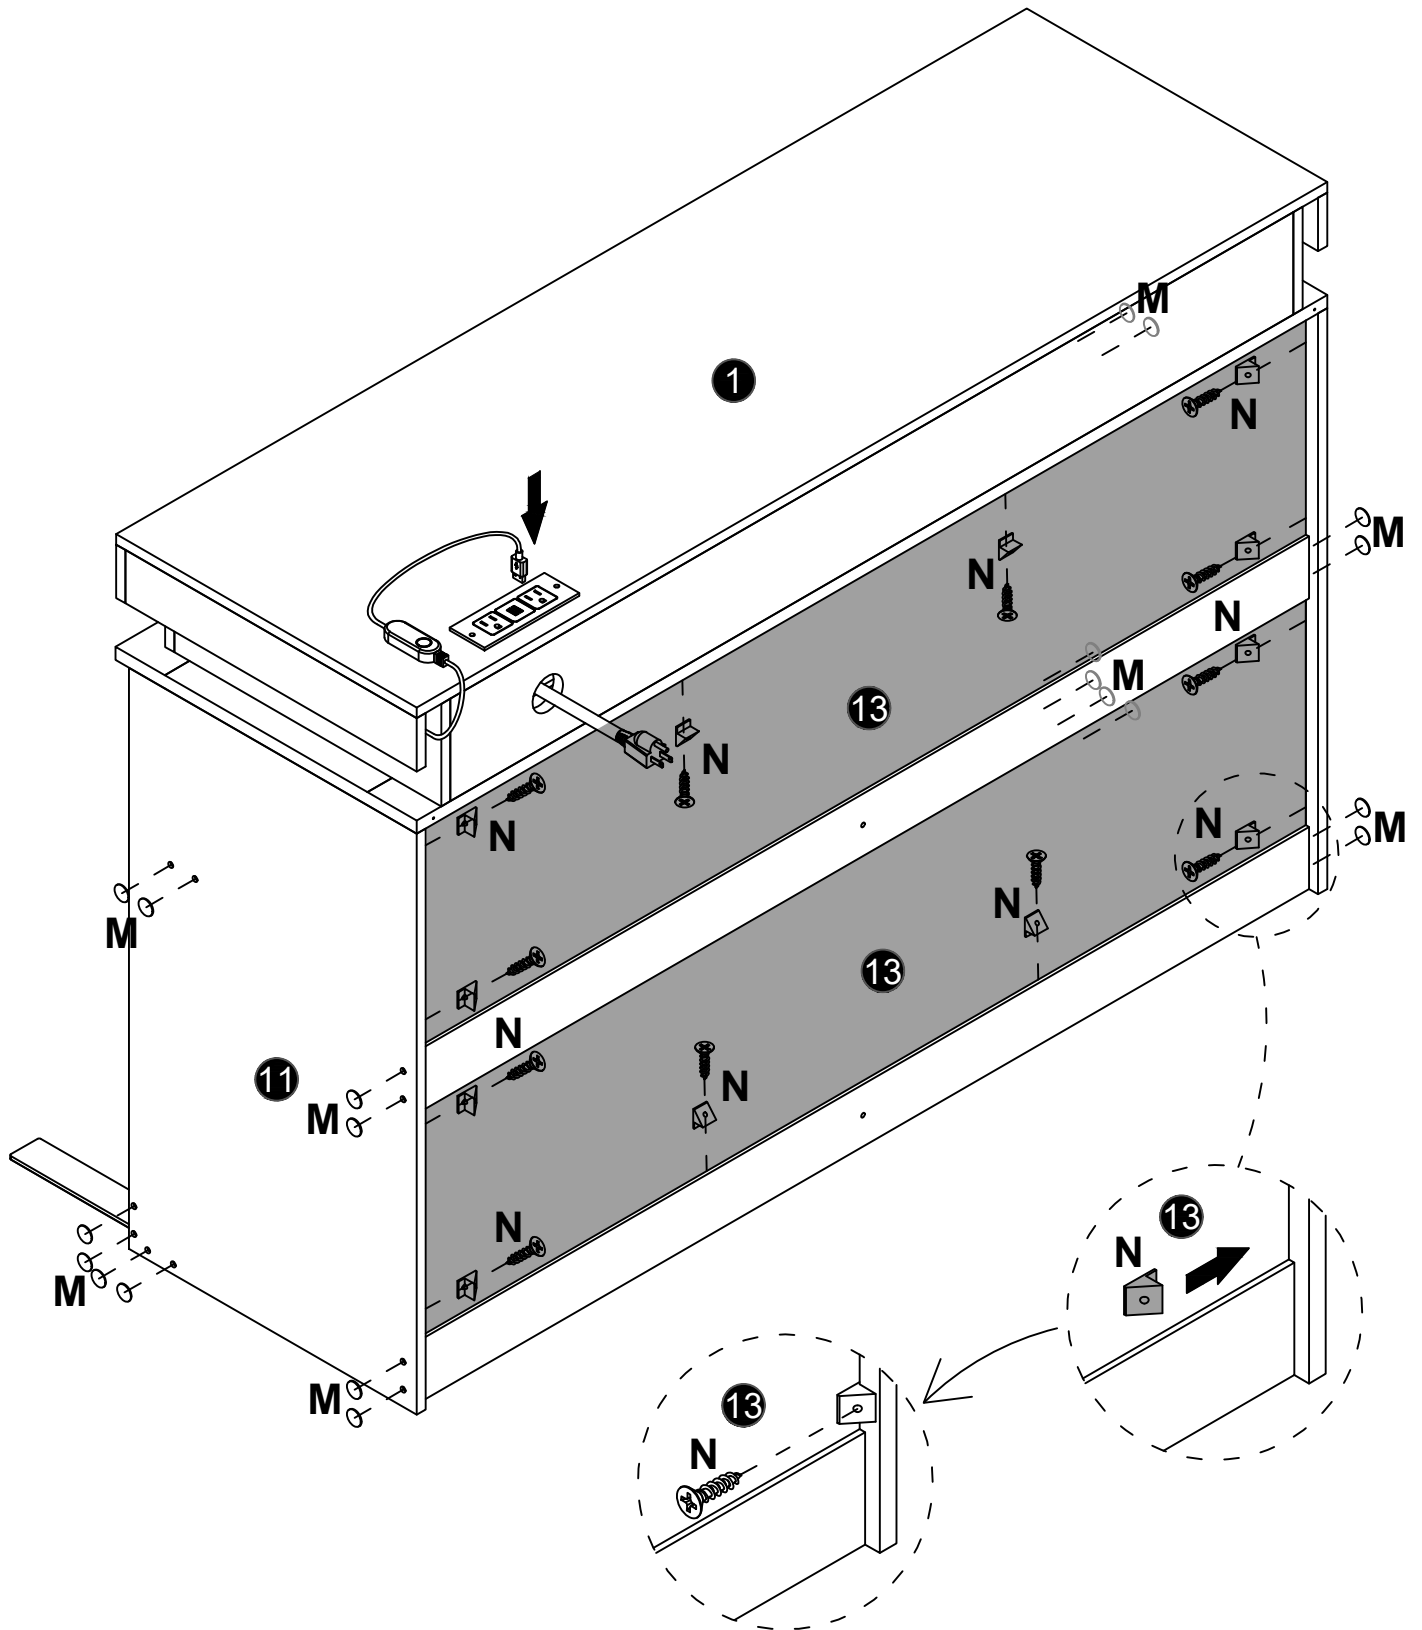


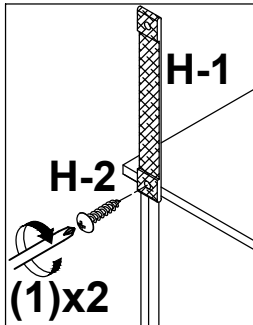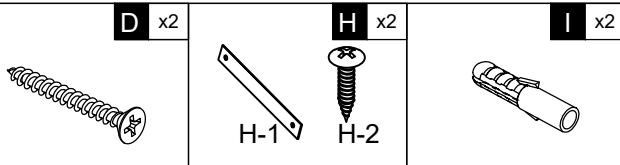


First fix the anti-rewind screw in the reserved hole of the product.

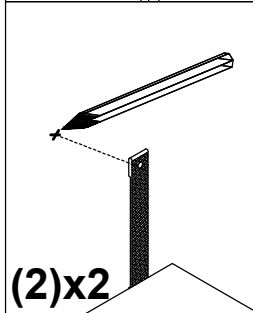


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

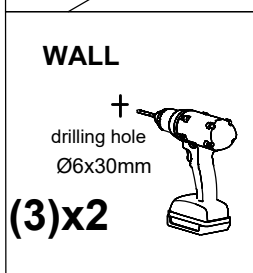

Then use a tape drill to make holes in the wall that are suitable for the product screws.

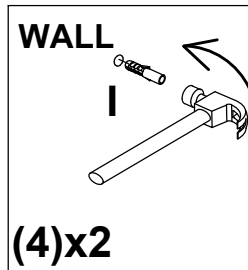


Then, put the expansion bolt into the hole

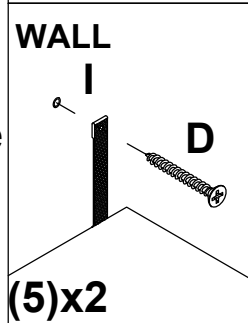




Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.



When moving the product in the future, pull out the drawer first to prevent it from falling and causing injury. Pulling out the drawer also makes moving easier.

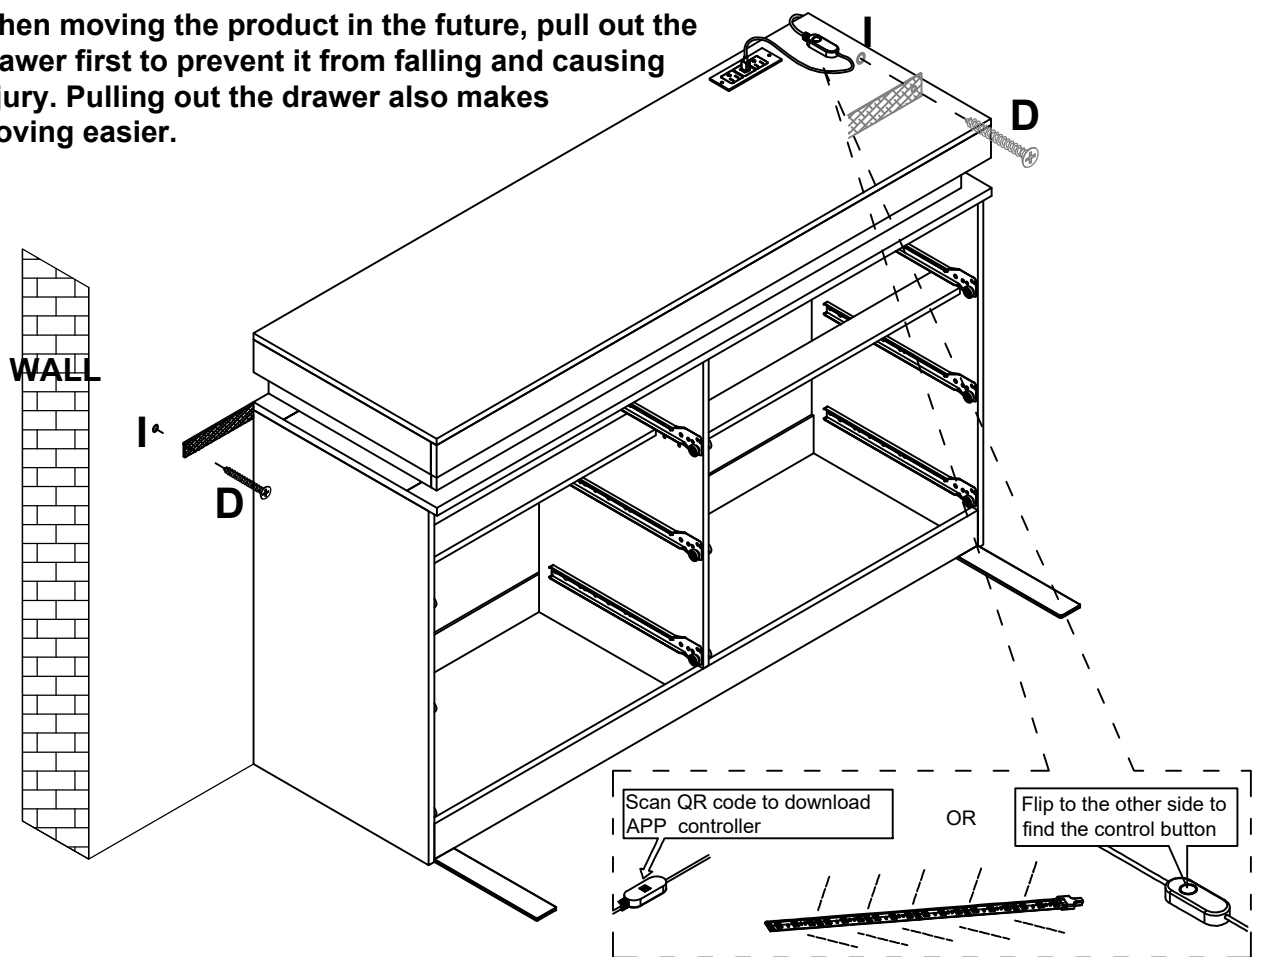

**Attention:** The drawers are divided into left drawer, middle drawer, and right drawer.  
**!** The picture shows the left drawer installed in the cabinet.

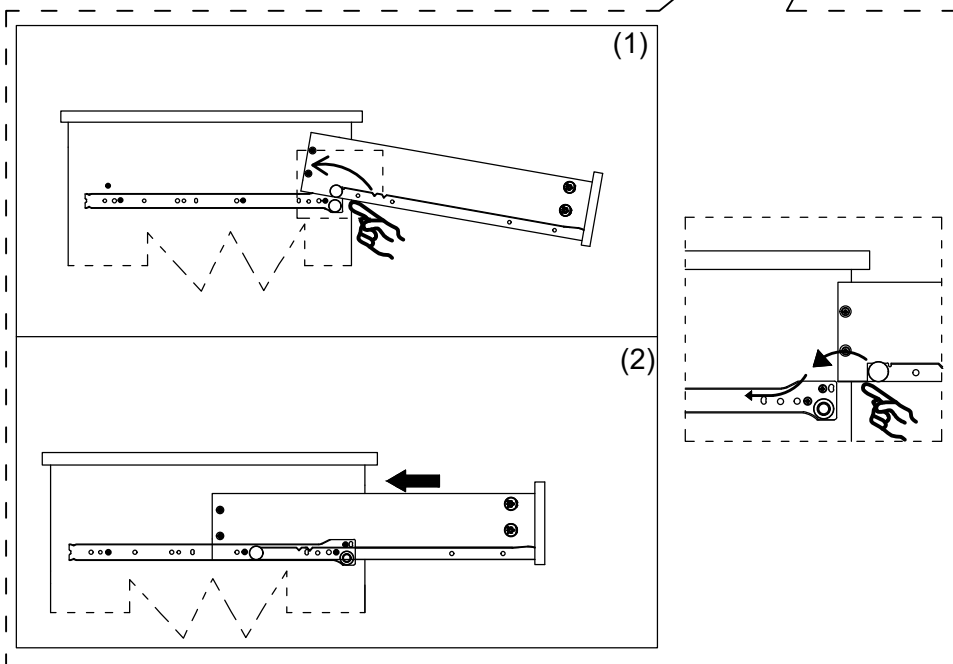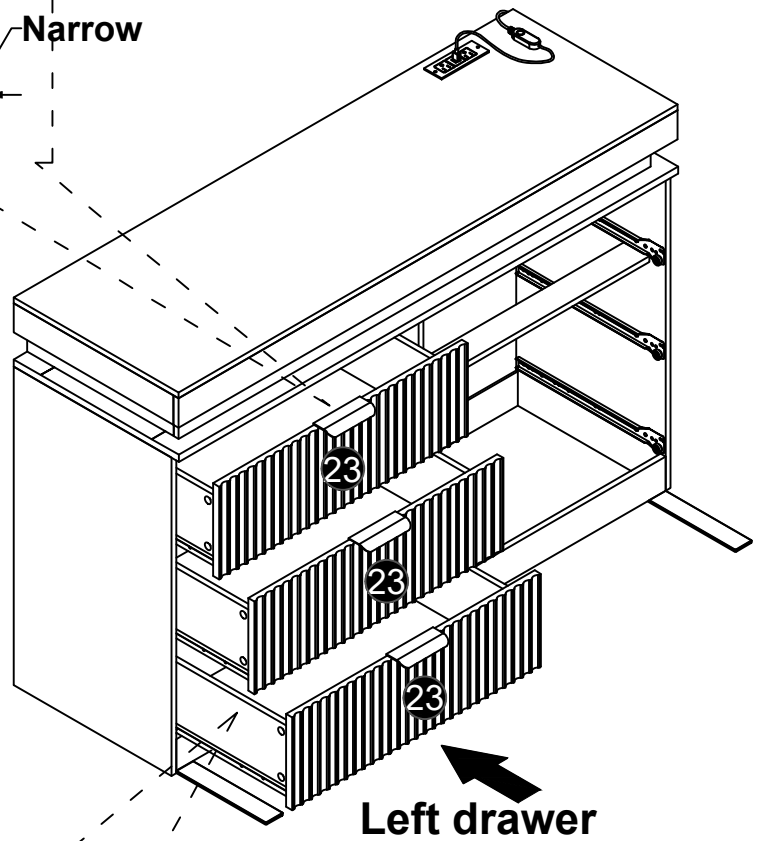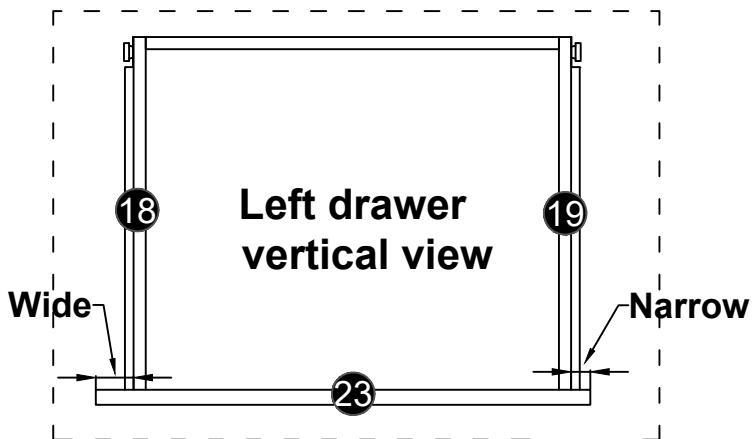

**Attention:** The drawers are divided into left drawer, middle drawer, and right drawer.  
**The picture shows the right drawer installed in the cabinet.**

