


WINE BAR CABINET
USER'S MANUAL

SKU:KD005101

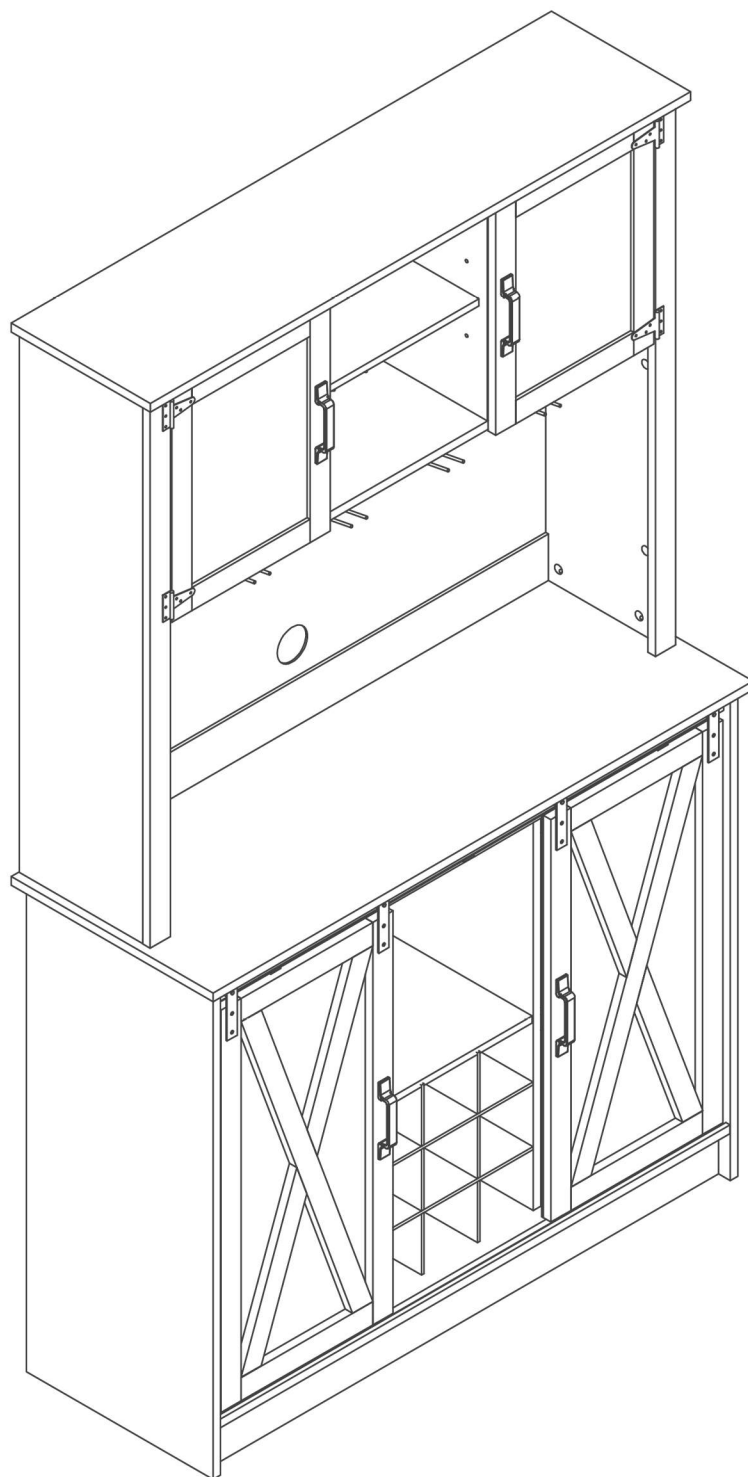


ASSEMBLY INSTRUCTION

ADULT ASSEMBLY REQUIRED

**THE PRODUCT MAY RECOMMENDED
ASSEMBLING BY MORE THAN ONE
PERSON.**

**PLEASE ASK FOR ASSISTANCE AT YOUR
CONVENIENCE BEFORE ASSEMBLING.**

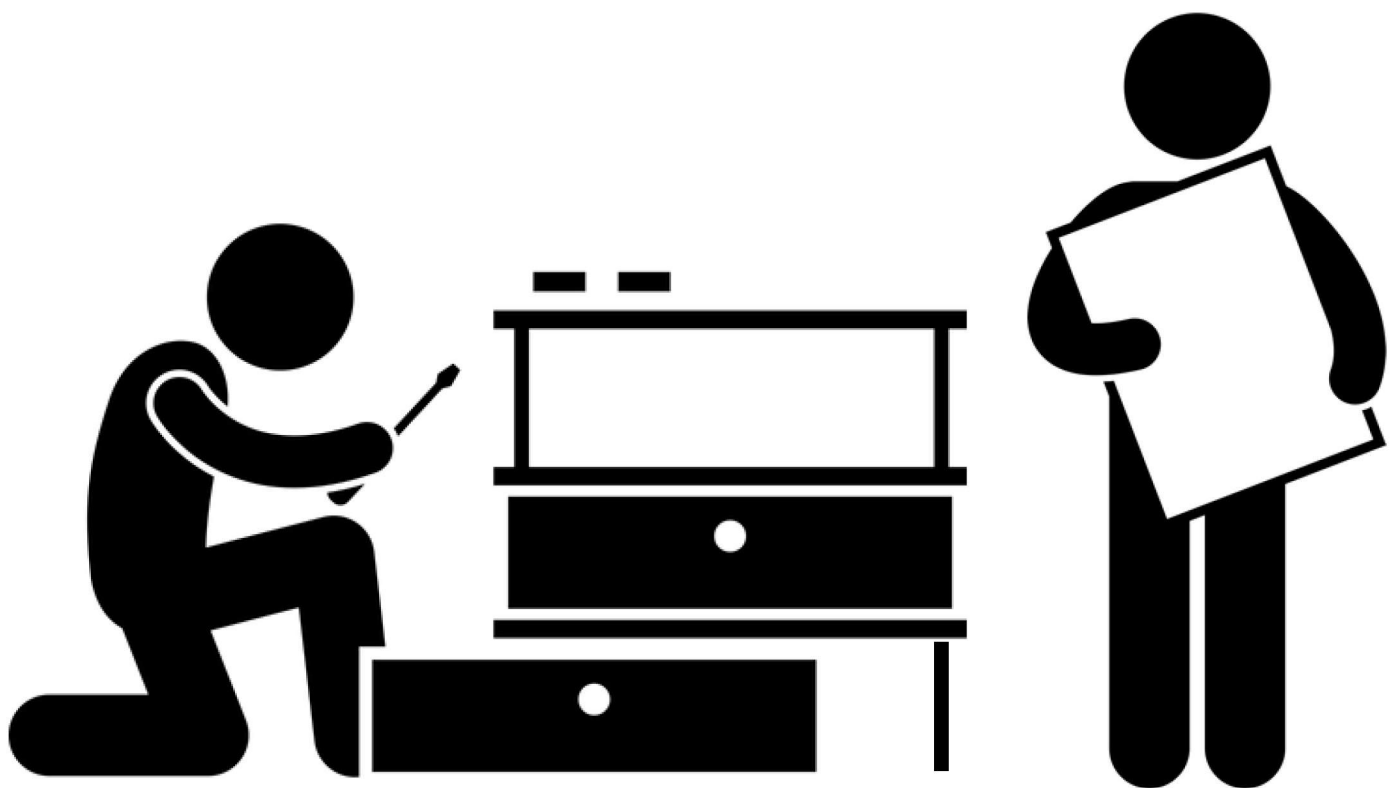


Before You Start


1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Cam Lock Fastening System





















This Cam Lock Fastening System will be used throughout the assembly process.

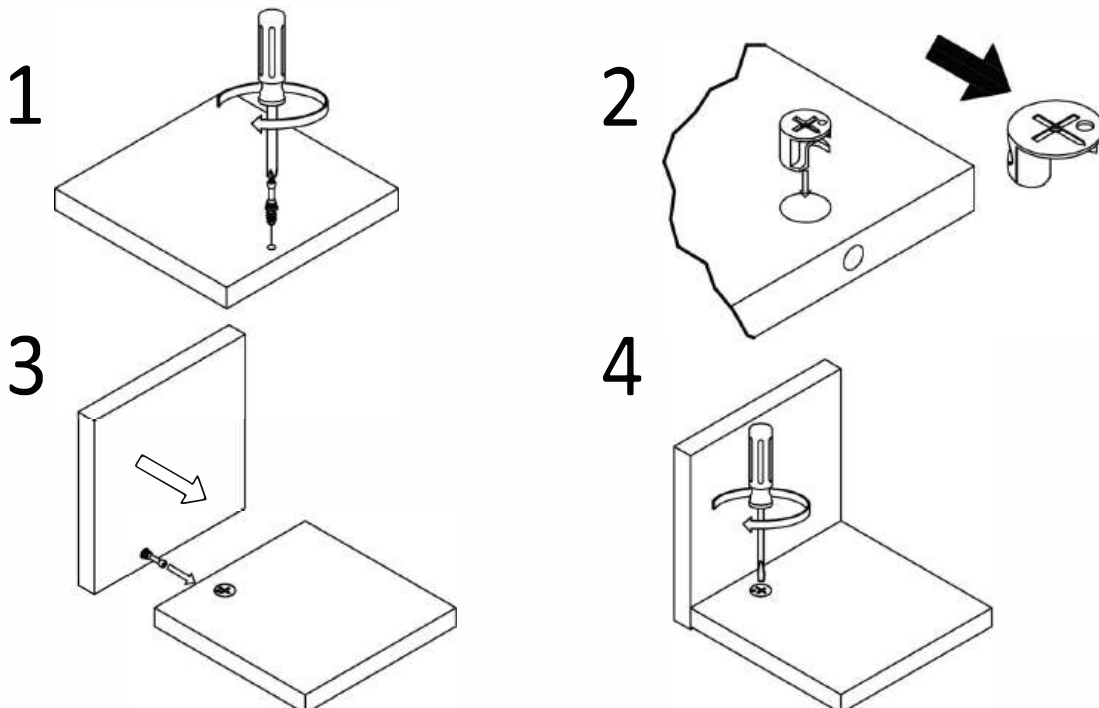










Parts Identification

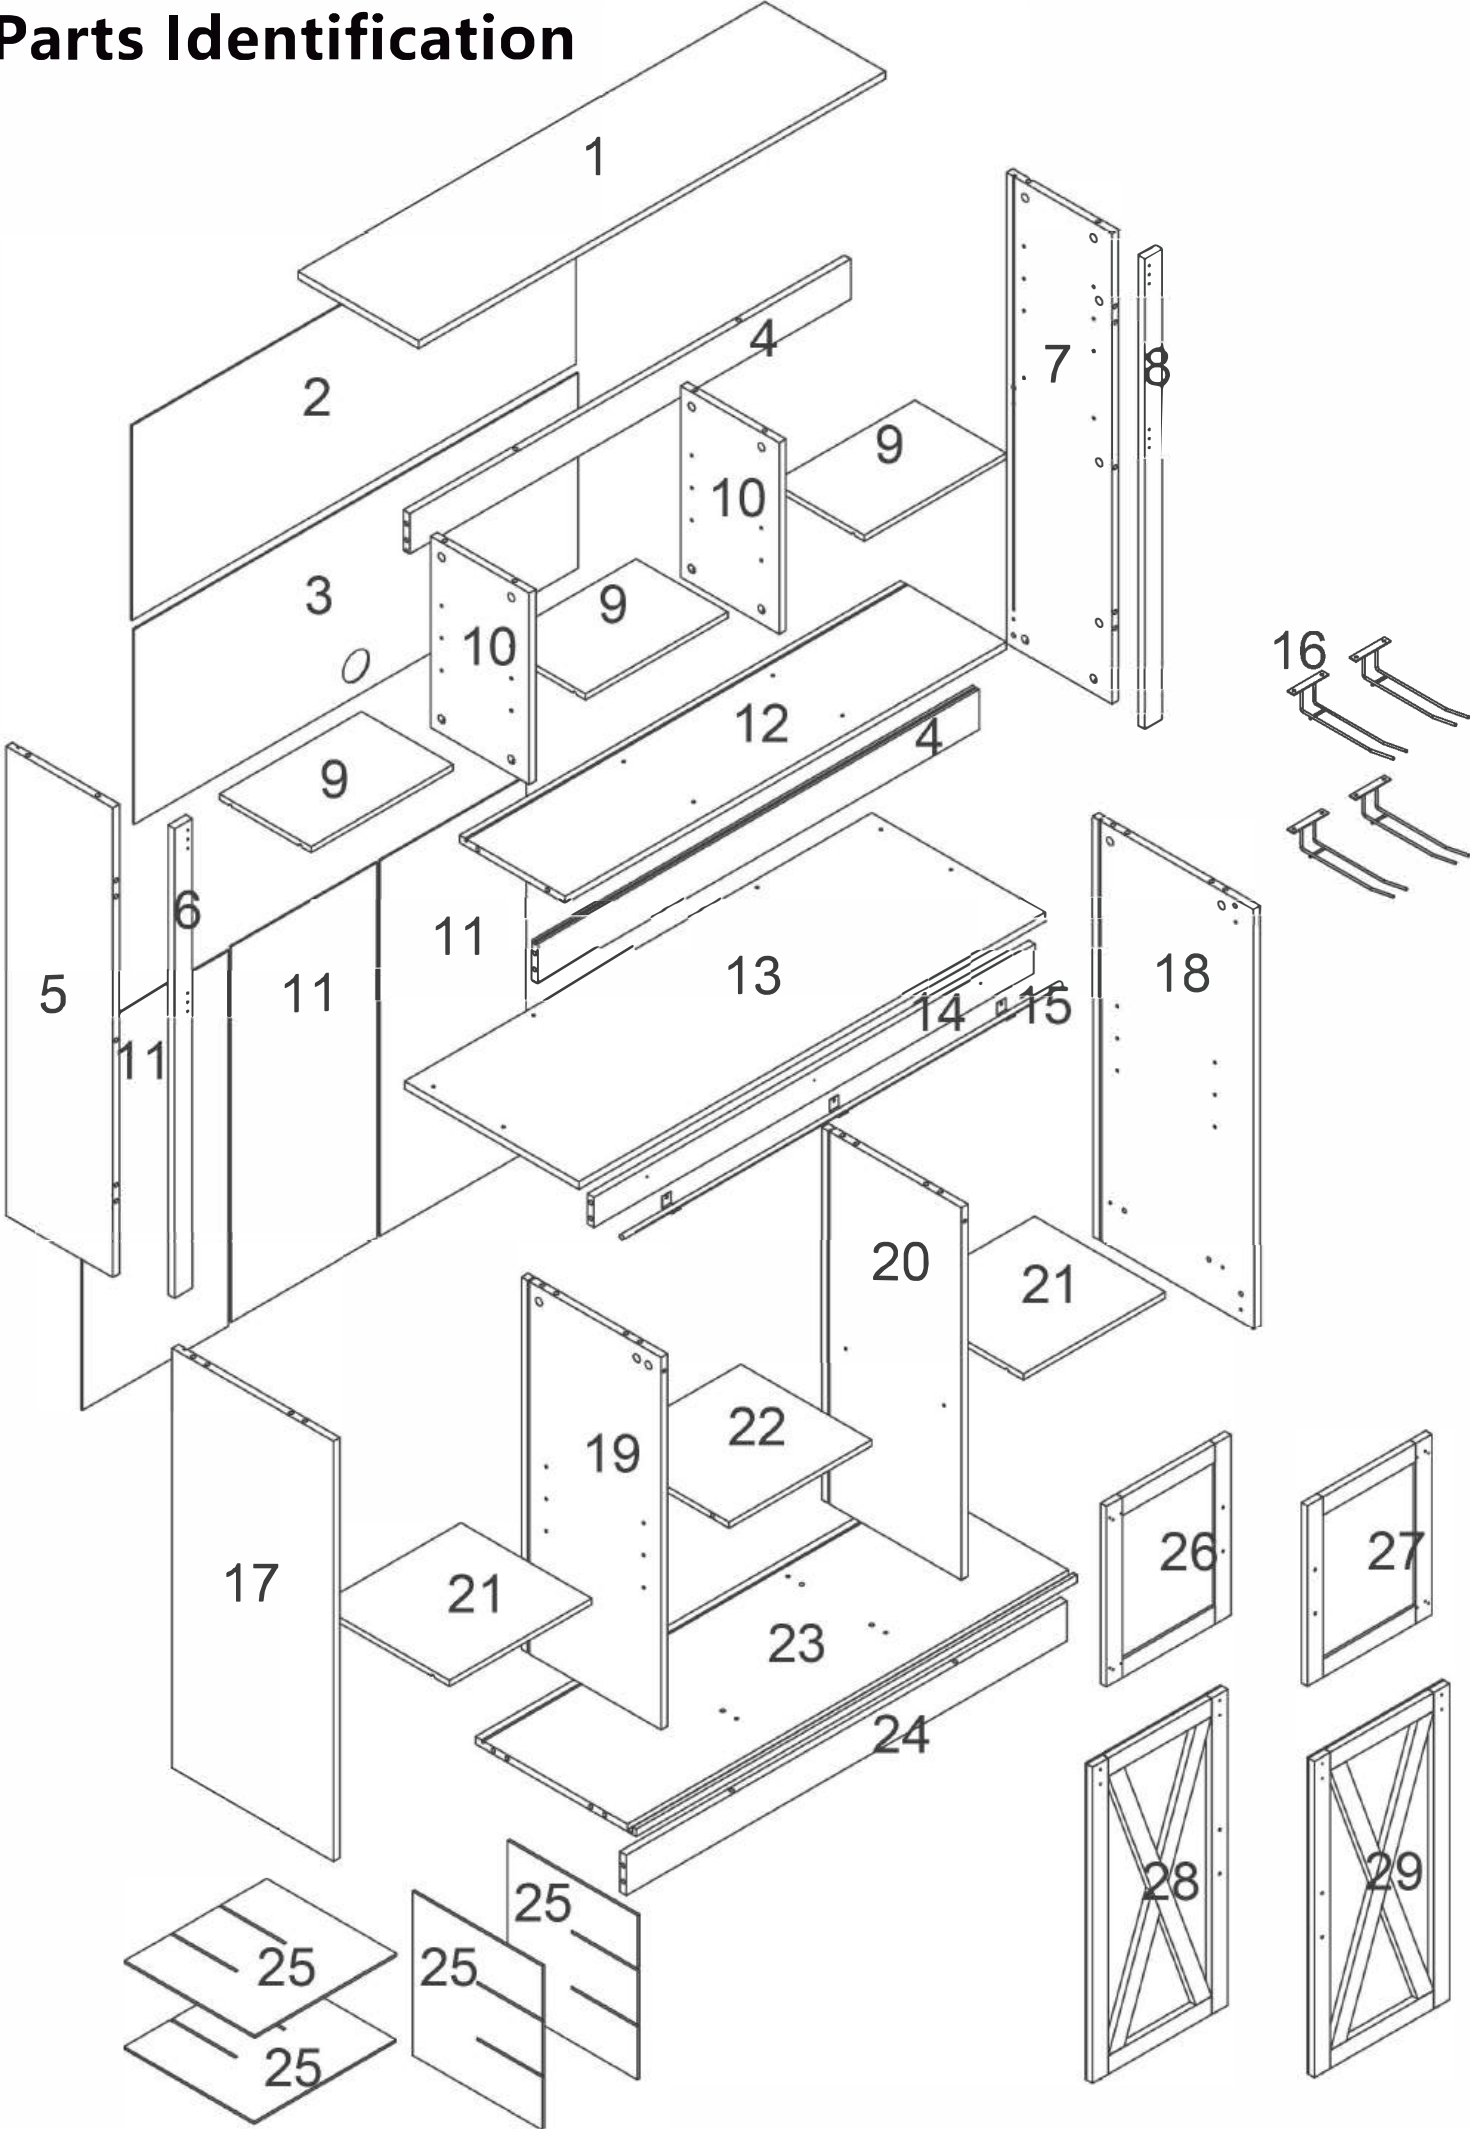

Parts List

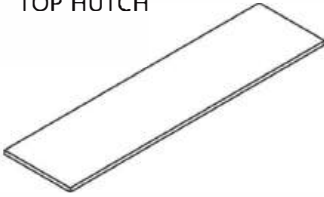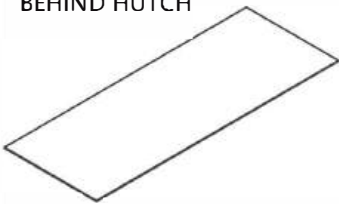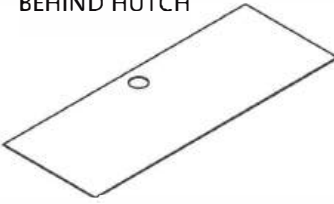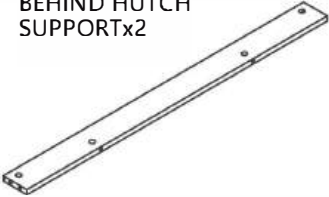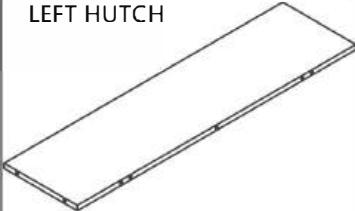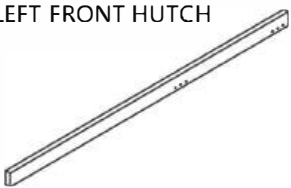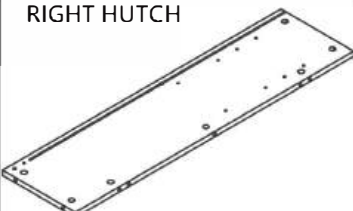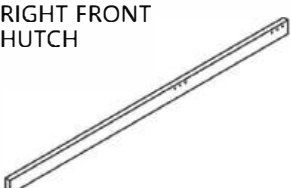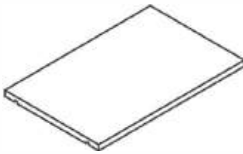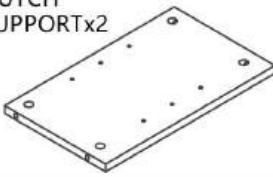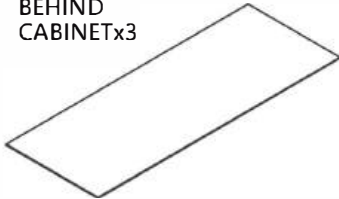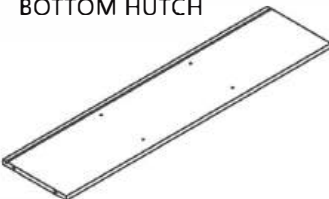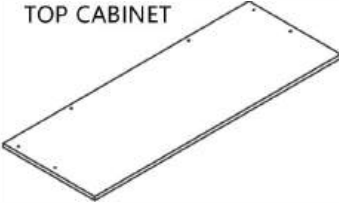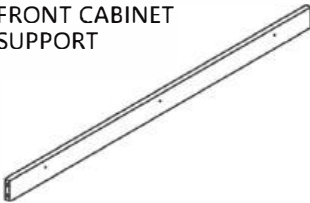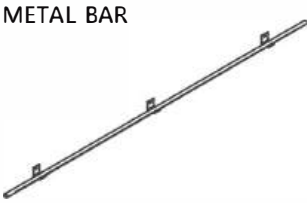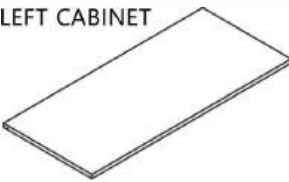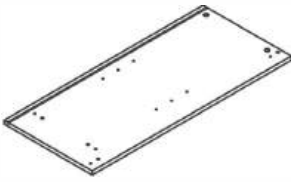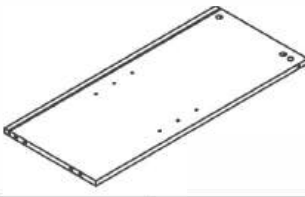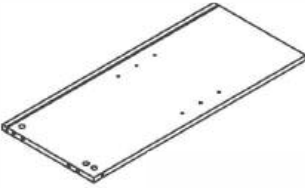TOP HUTCH 	BEHIND HUTCH 	BEHIND HUTCH 	BEHIND HUTCH SUPPORTx2 
11PC	21PC	31PC	42PC
LEFT HUTCH 	LEFT FRONT HUTCH 	RIGHT HUTCH 	RIGHT FRONT HUTCH 
51PC	61PC	71PC	81PC
SHELF HUTCHx3 	HUTCH SUPPORTx2 	BEHIND CABINETx3 	BOTTOM HUTCH 
93PC	102PC	113PC	121PC
TOP CABINET 	FRONT CABINET SUPPORT 	METAL BAR 	WINE RACKx4 
131PC	141PC	151PC	164PC
LEFT CABINET 	RIGHT CABINET 	LEFT CABINET SHELF 	RIGHT CABINET SHELF 
171PC	181PC	191PC	201PC

Parts List

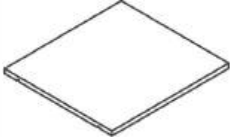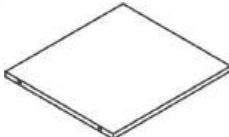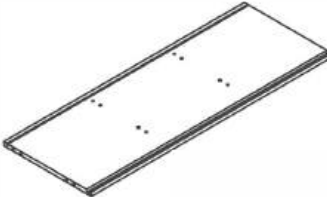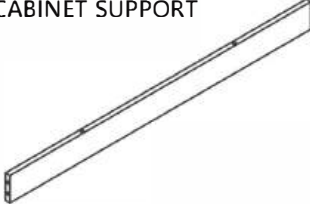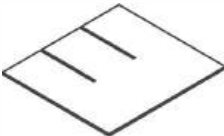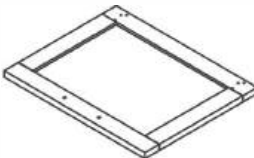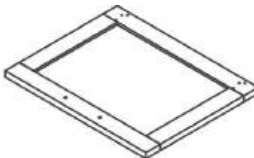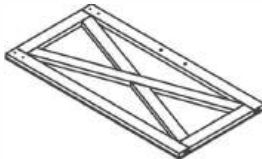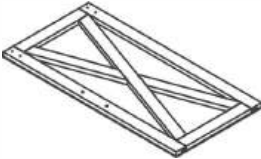CABINET SHELFx2  212PC	CABINET SHELF  221PC	BOTTOM CABINET  231PC	FRONT BOTTOM CABINET SUPPORT  241PC
DIVIDER SHELFx4  254PC	LEFT DOOR HUTCH  261PC	RIGHT DOOR HUTCH  271PC	LEFT DOOR CABINET  281PC
RIGHT DOOR CABINET  291PC			

Hardware List

CAM BOLTx58



A

58PC

CAM LOCKx54



Ø15

B

54PC

WOOD DAWELx28



Ø8*30mm

C

28PC

SCREWx4



Ø4*40mm

D

4PC

HANDLEx4



E

4PC

BOLTx4



M4*22mm

F

4PC

BOLTx4




M4*18mm

G

4PC

Door FIXINGSx4



H

4PC

SCREWx24



Ø3*14mm

I

24PC

HANGING WHEELx4



J

4PC

SCREWx19



Ø4*14mm

K

19PC

DOOR CATCHx2



L

2PC

SCREWx8



Ø3*12mm

M

8PC

CAM LOCKx4



Ø12

N

4PC

DOOL SUPPORT PINx4



O

4PC

SHELF SUPPORT PINx20



P

20PC



TIPPING RESTRAINT
HARDWAREx1





Q

1PC



STEP 1

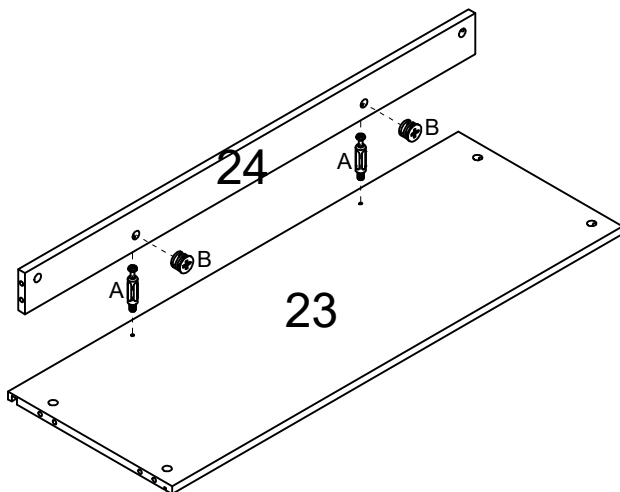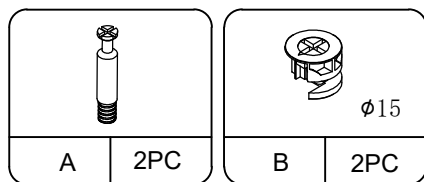



STEP 2

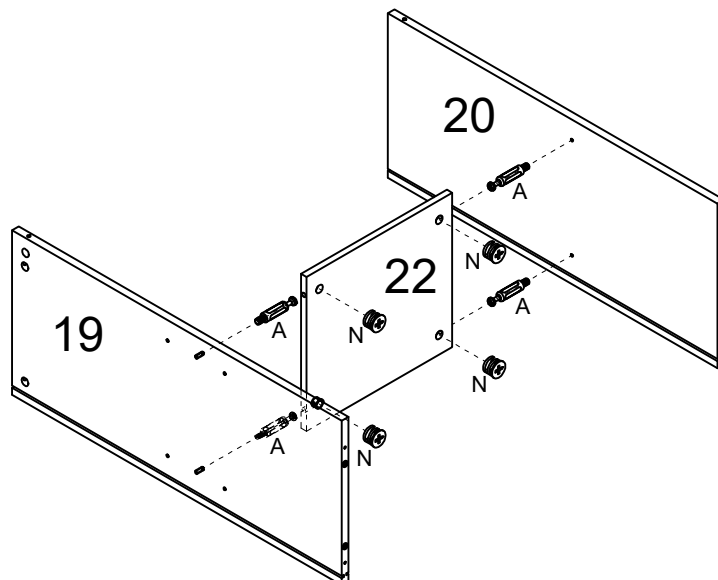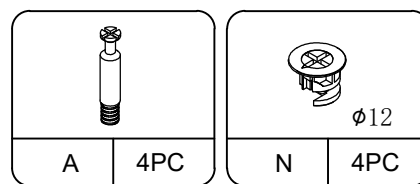

STEP 3

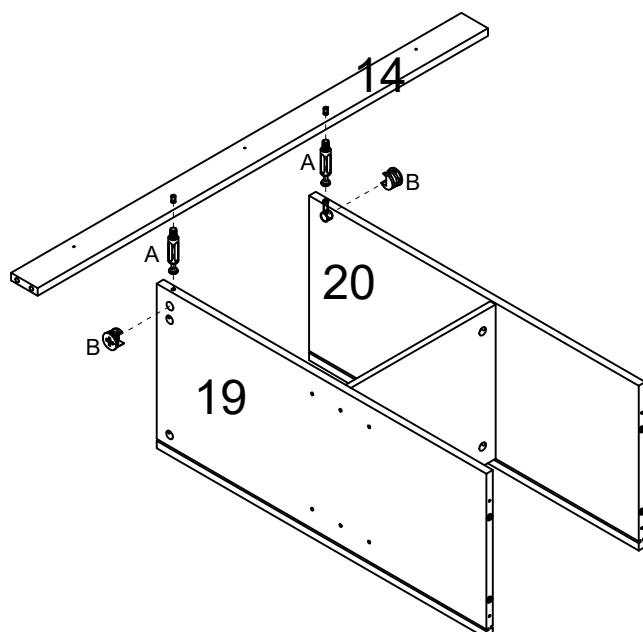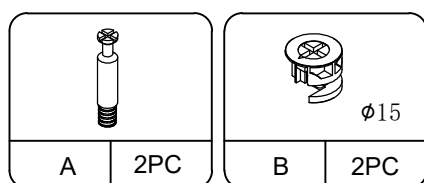


STEP 4

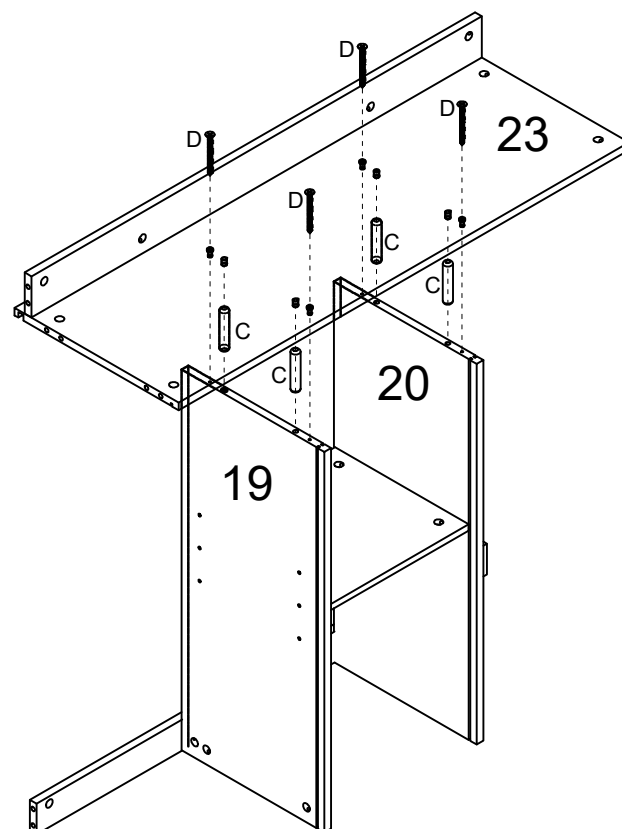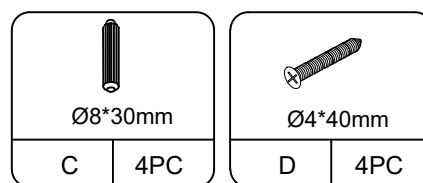


STEP 5






		
A	B	C
8PC	8PC	8PC

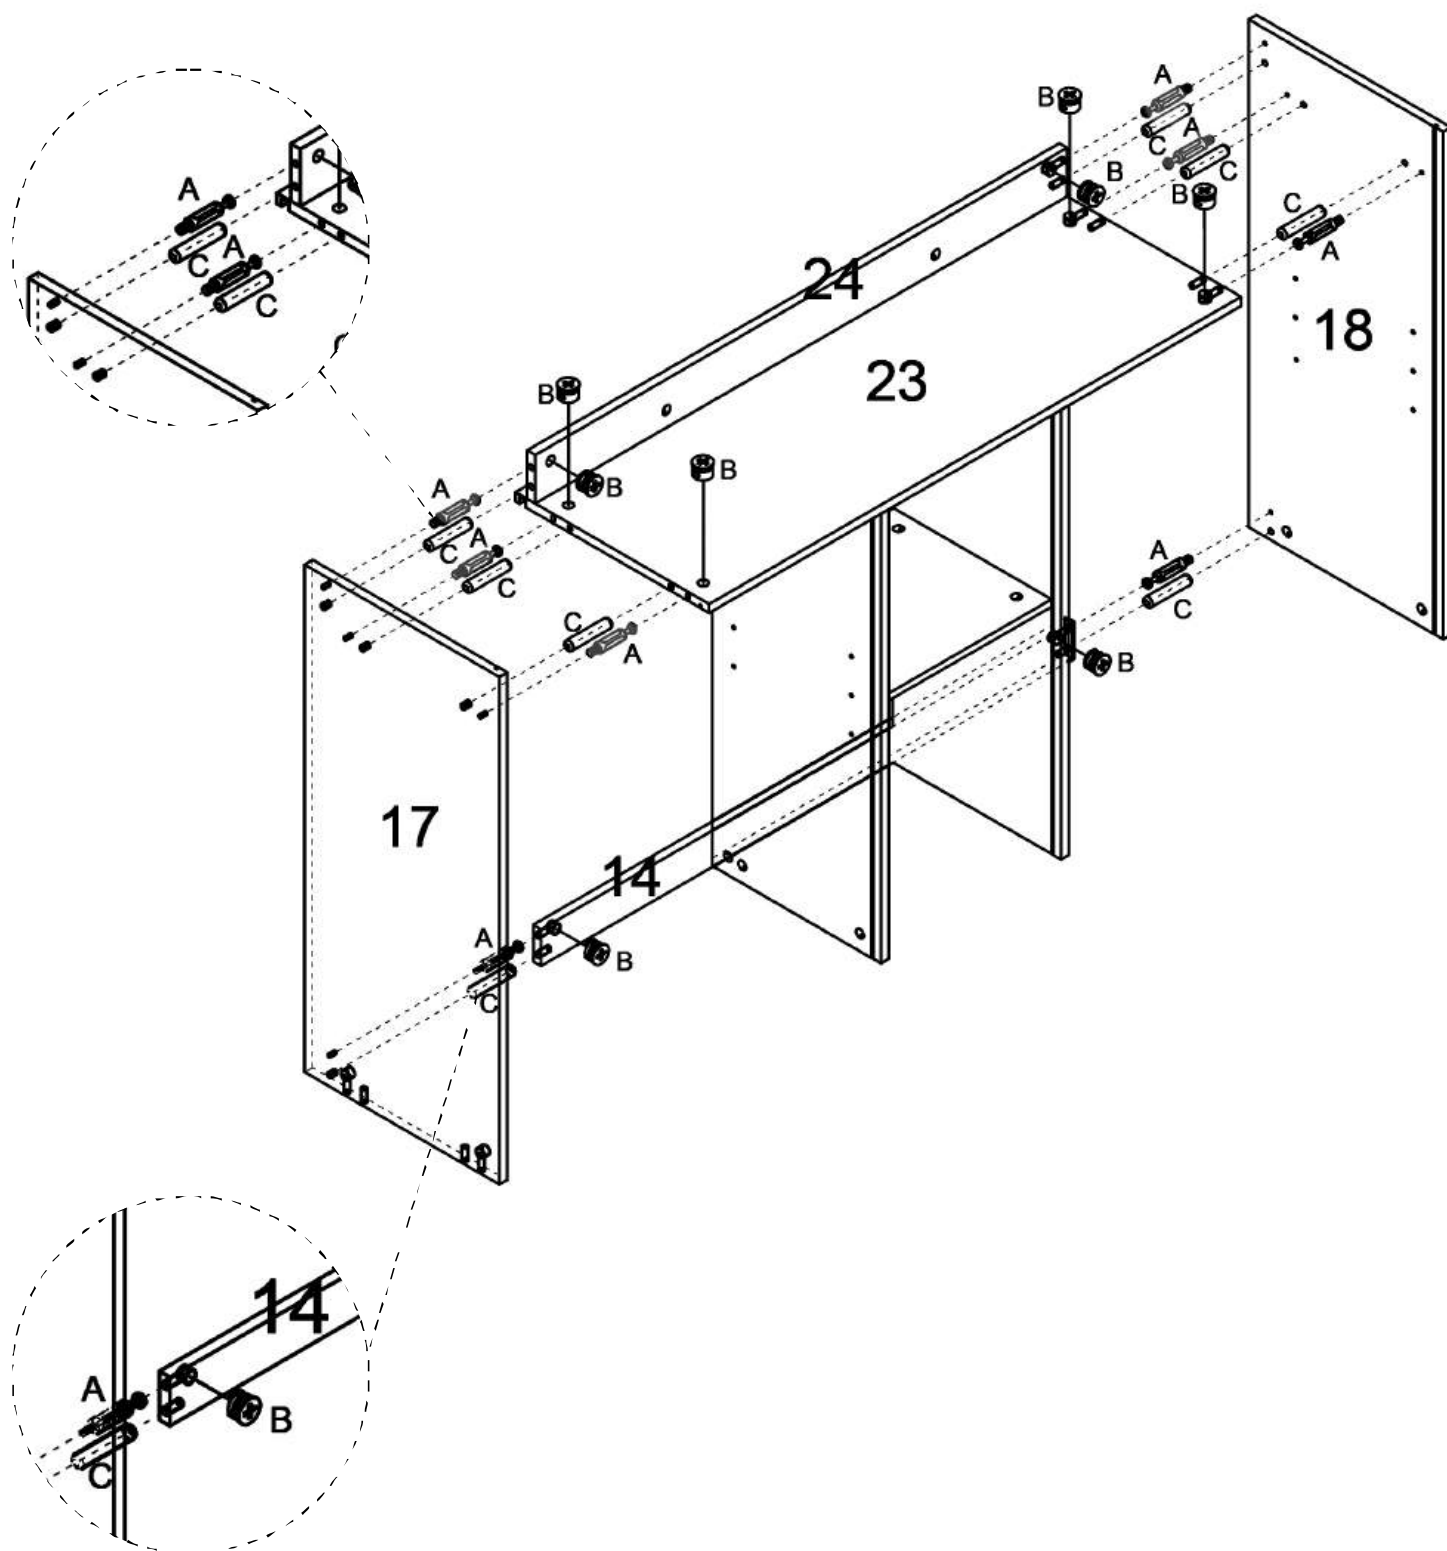




STEP 6

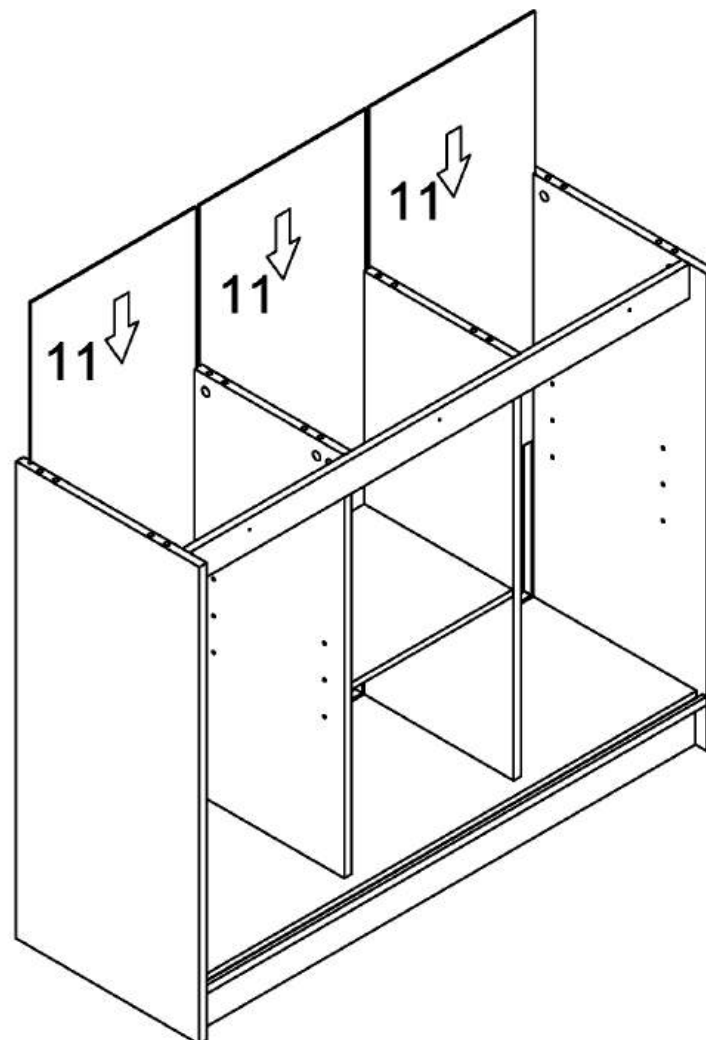




STEP 7

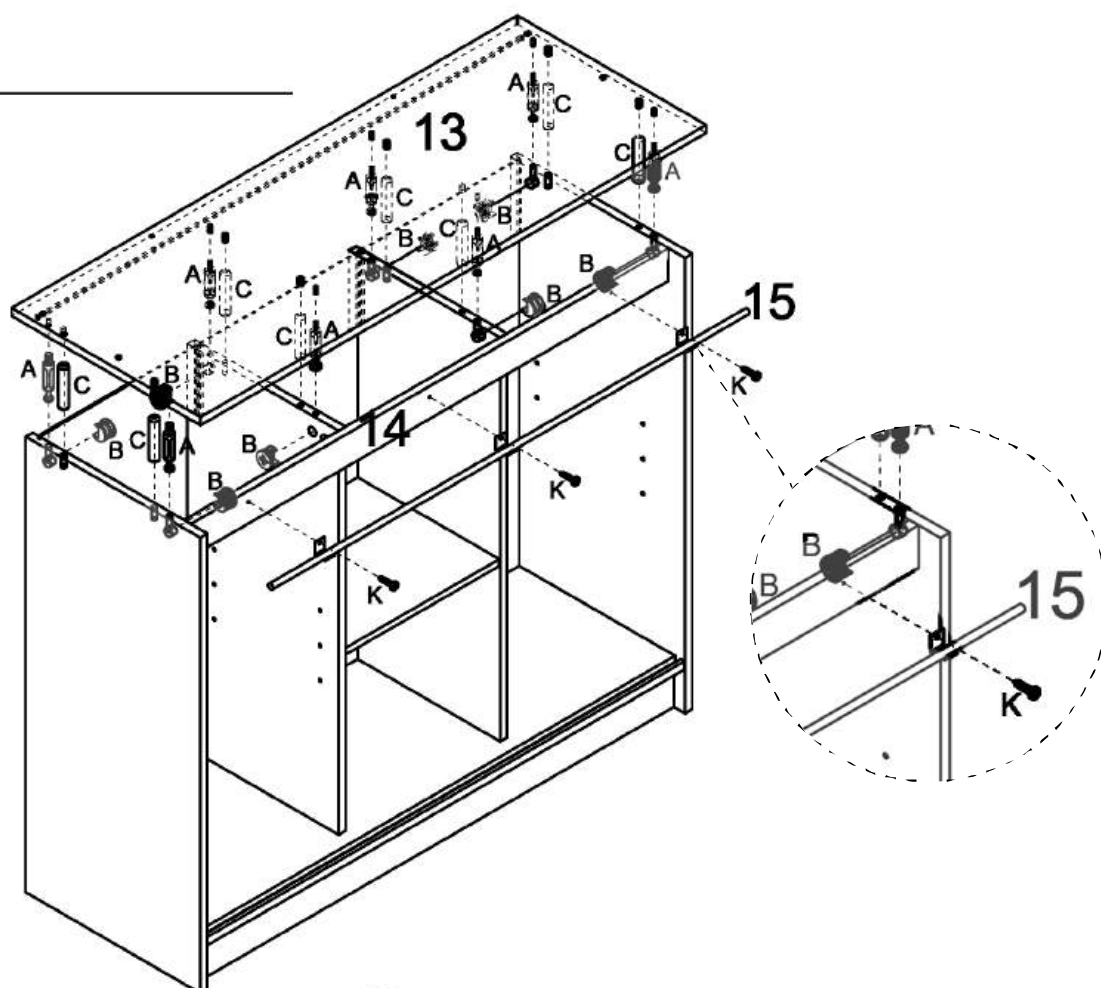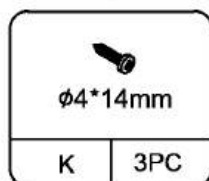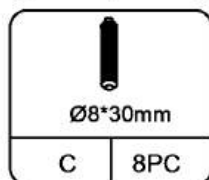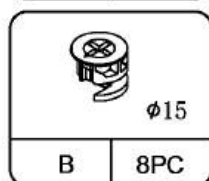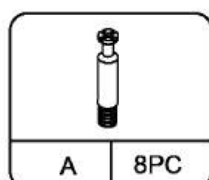



STEP 8

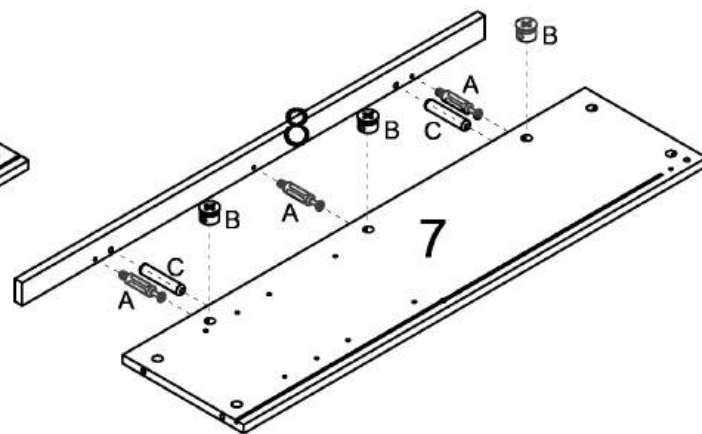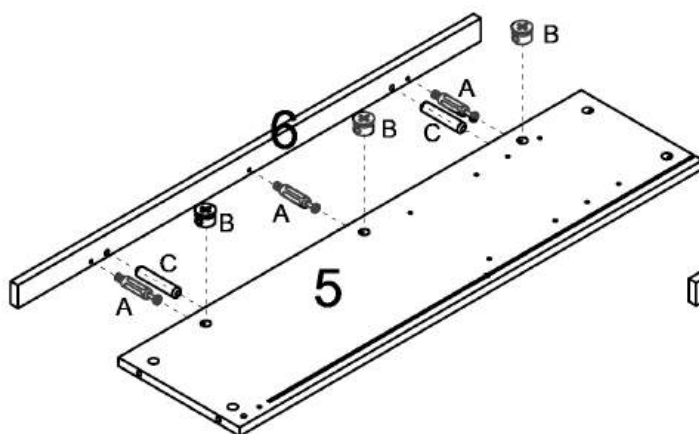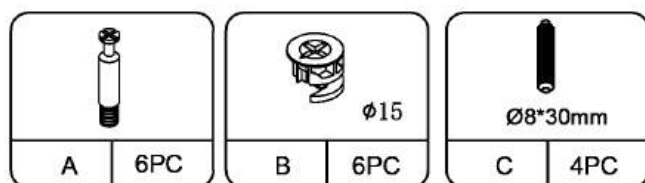






STEP 9

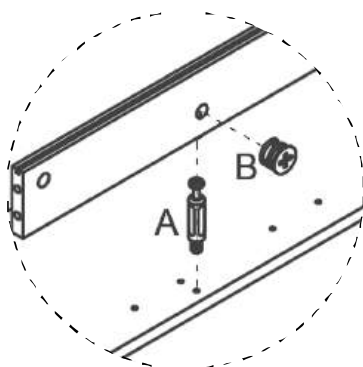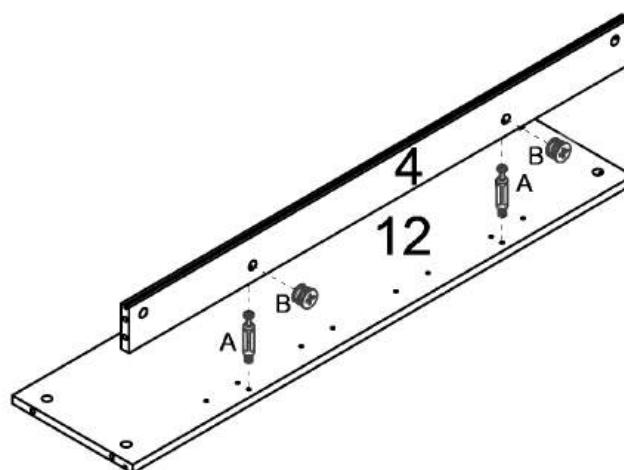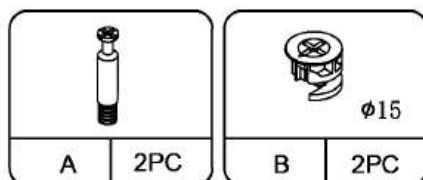


STEP 10

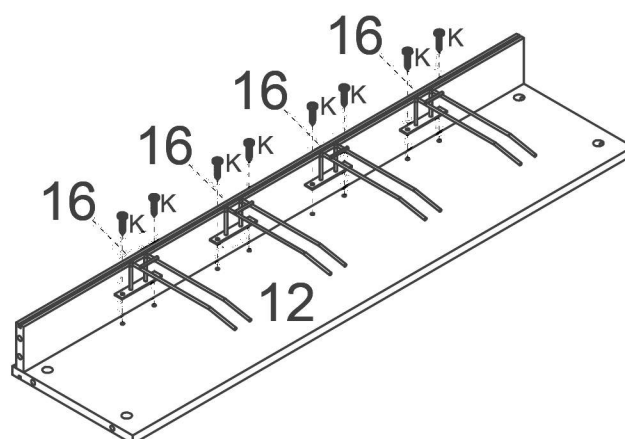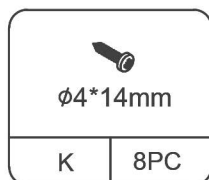

STEP 11

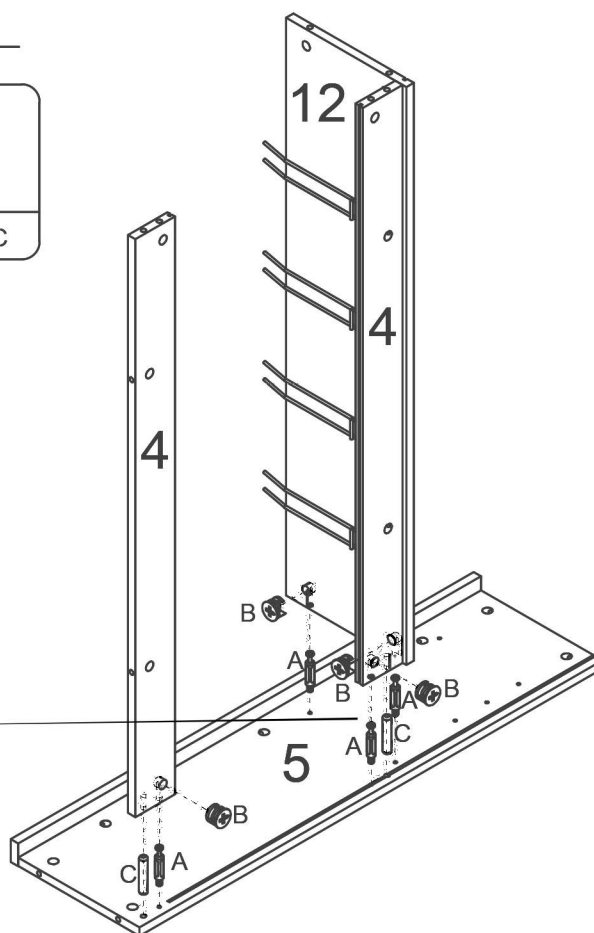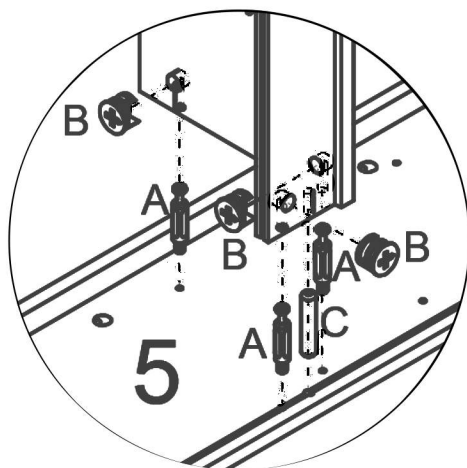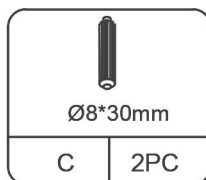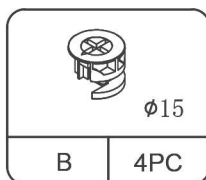
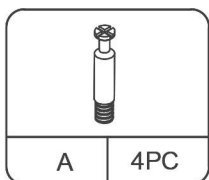


STEP 12



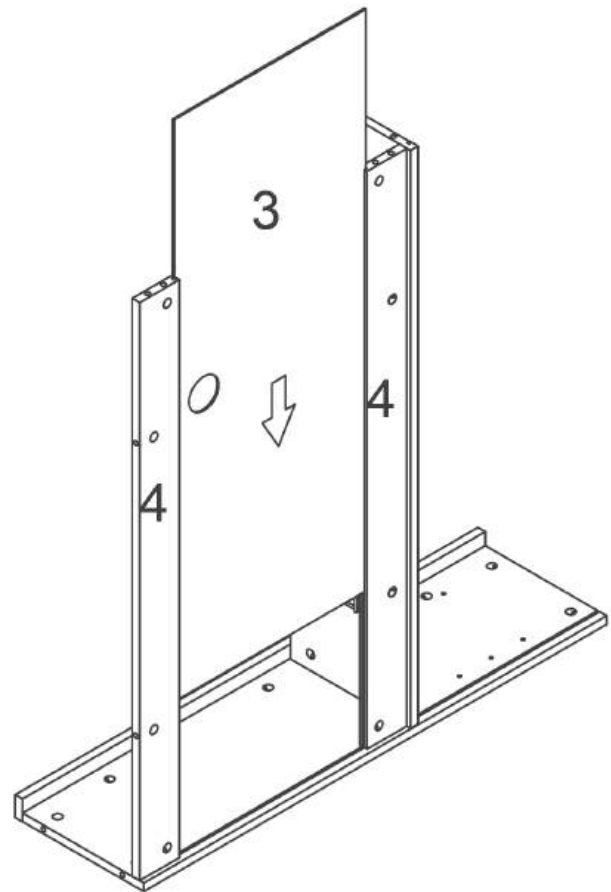


STEP 13


					
A	4PC	B	4PC	C	2PC

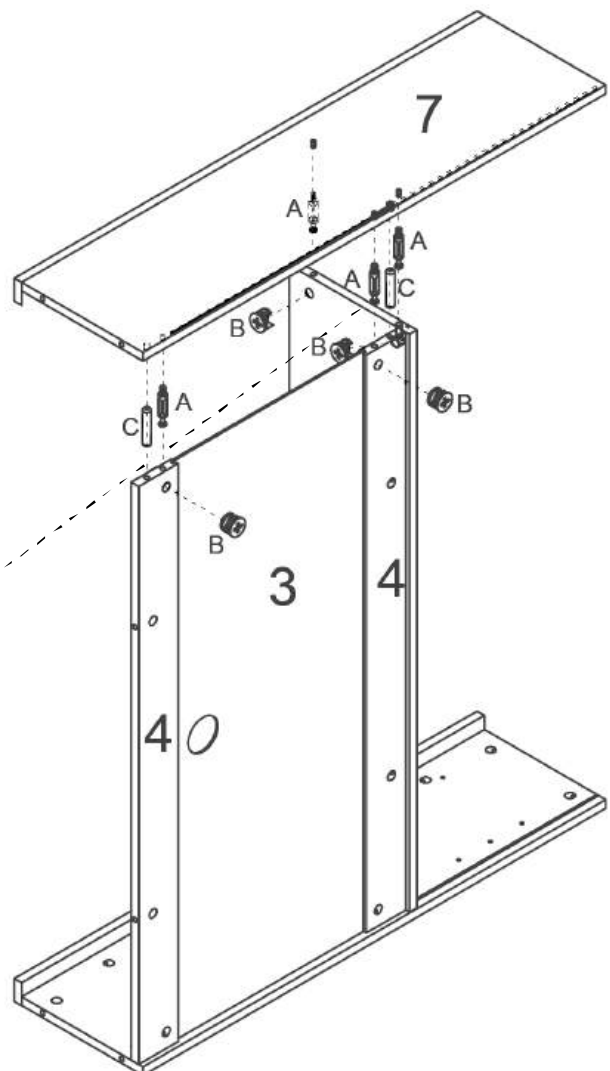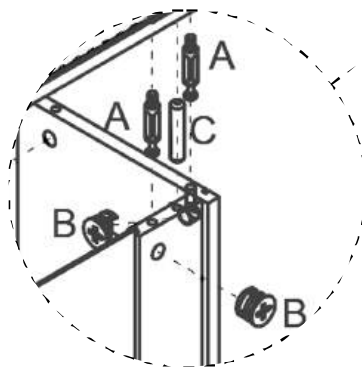




STEP 14

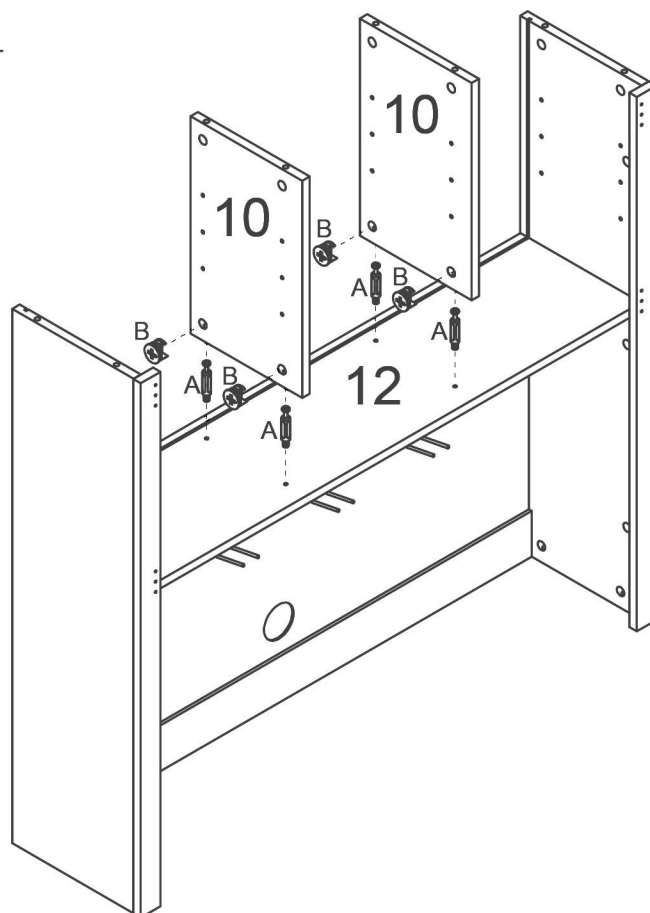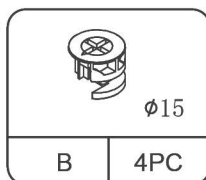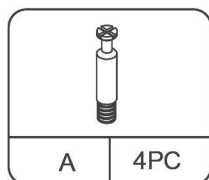




STEP 15

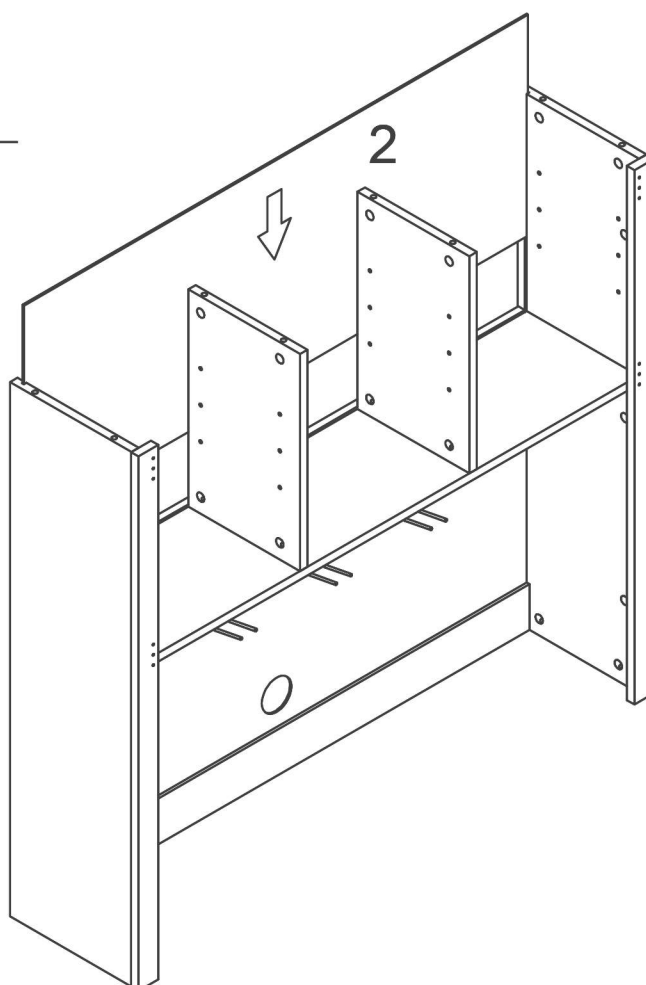

STEP 16

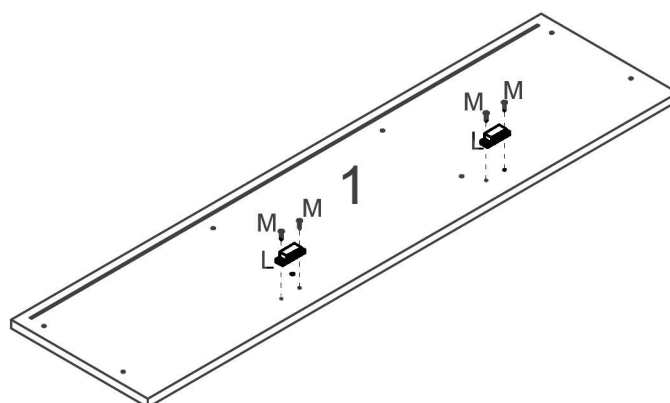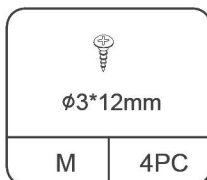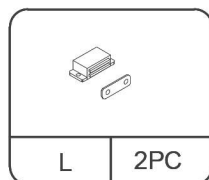


STEP 17

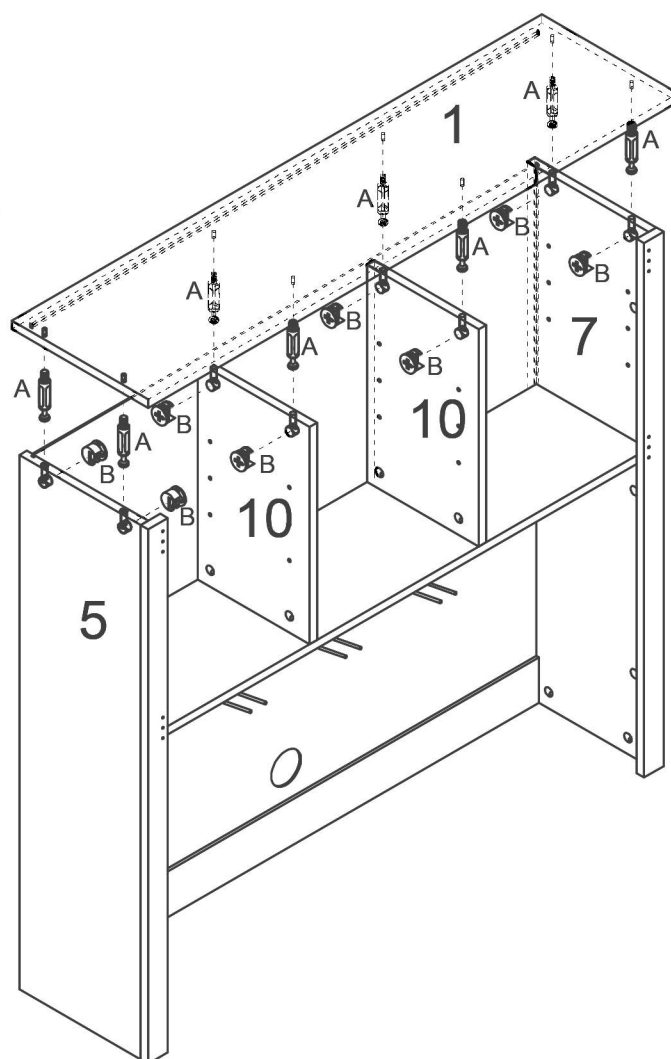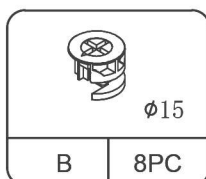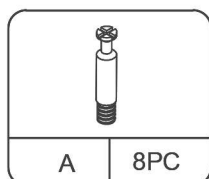


STEP 18

		
A	B	P
6PC	6PC	20PC

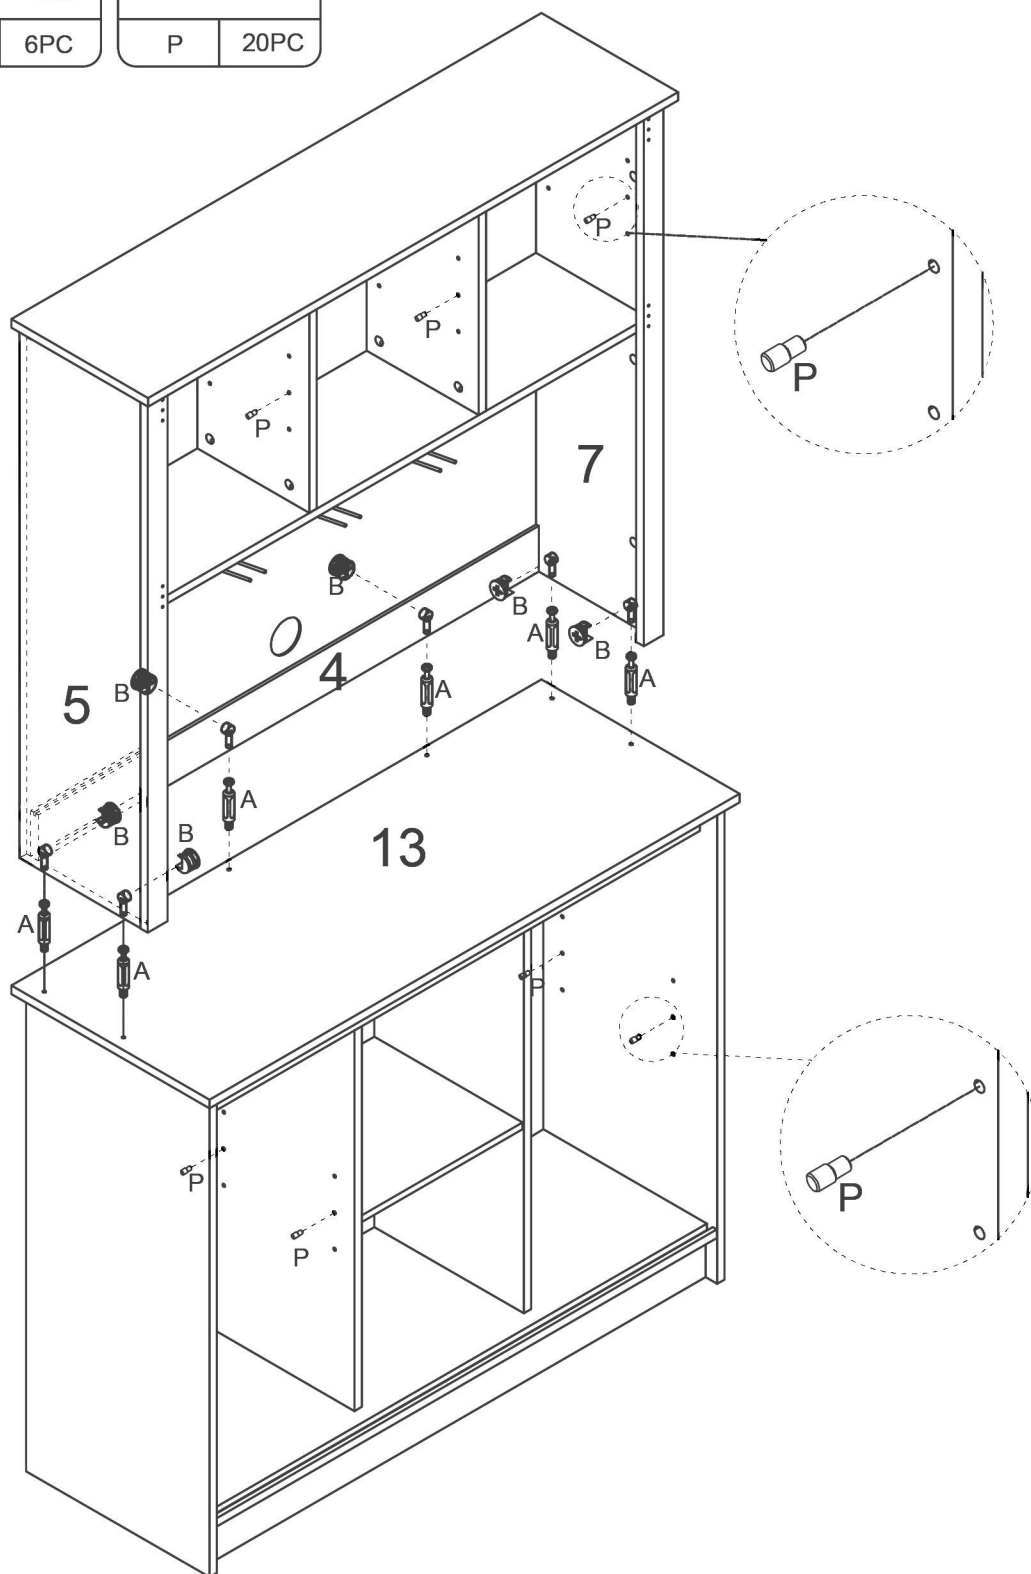





STEP 19

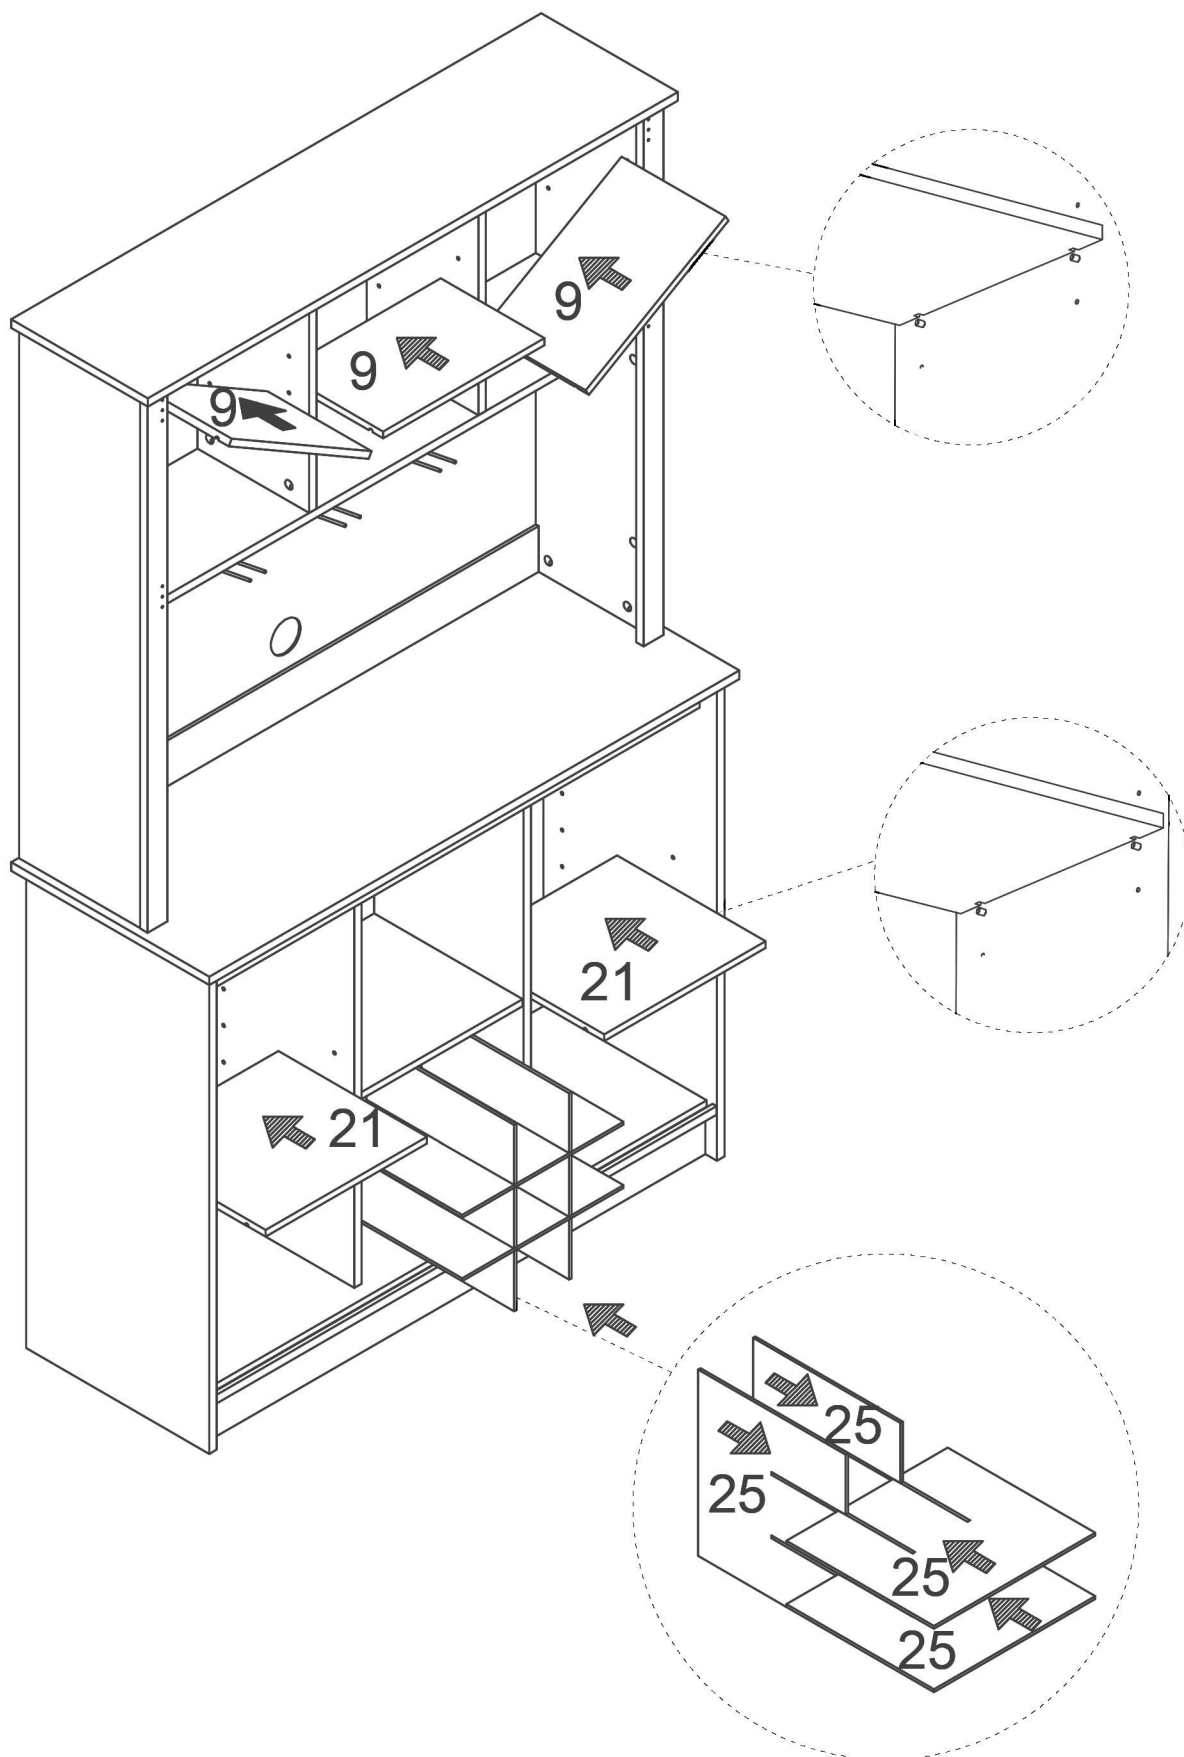




STEP 20

				
E	M4*22mm	M4*18mm	H	φ3*14mm
4PC	4PC	4PC	4PC	12PC


				
J	φ4*14mm	L	φ3*12mm	O
4PC	8PC	2PC	4PC	4PC

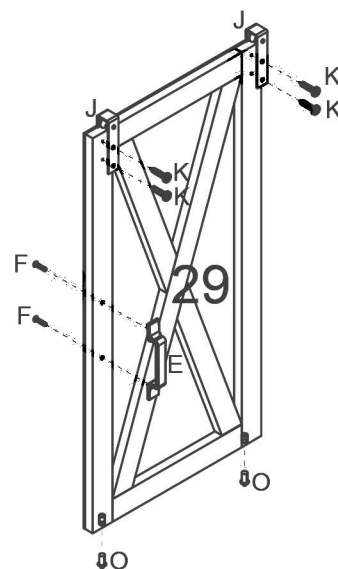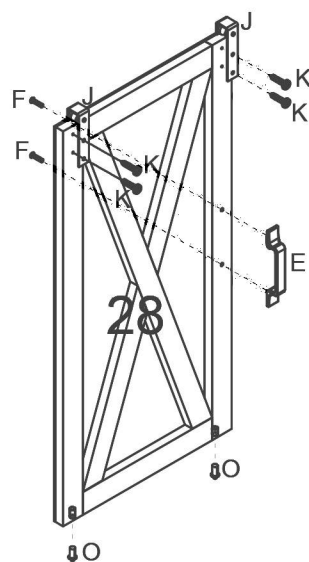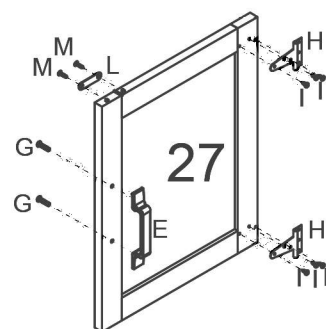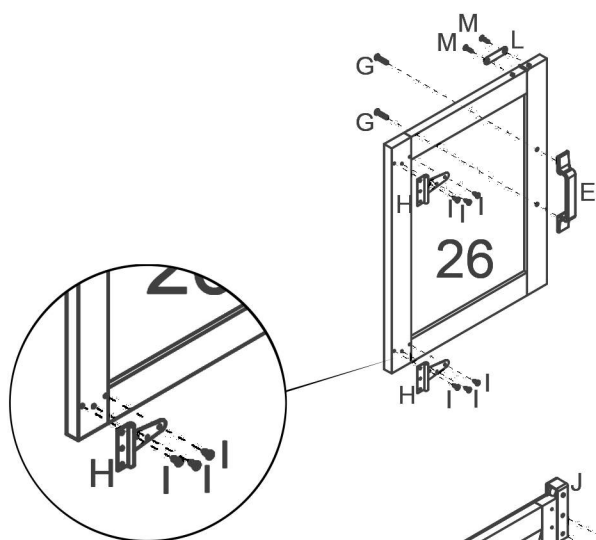


STEP 21

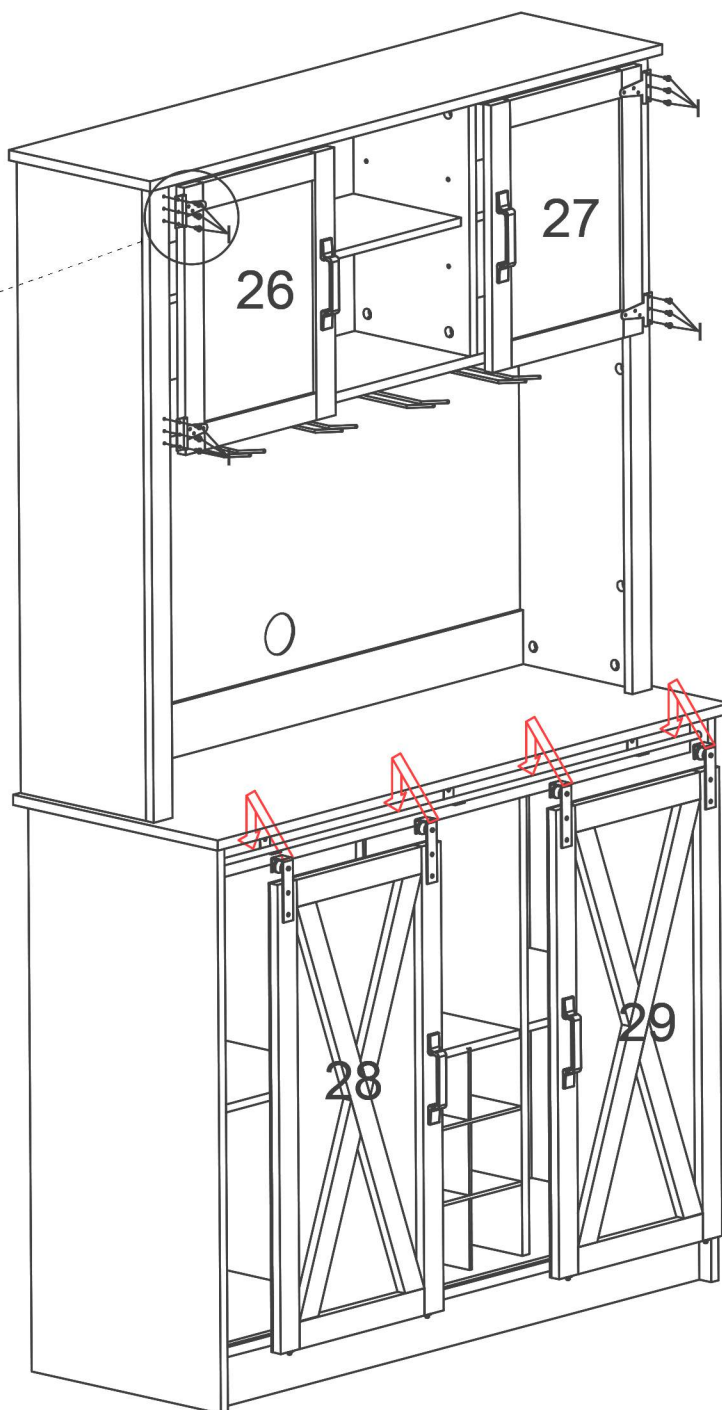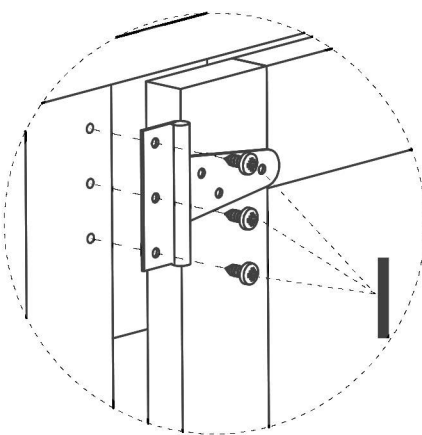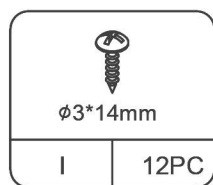

STEP 22

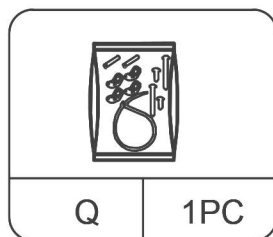

PART LIST	FIGURE	QUANTITY	DESCRIPTION
1		2PC	LONG SCREW (Dia.4mmX38mmL)
2		2PC	SHORT SCREW (Dia.4mmX19mmL)
3		4PC	METAL "L" BRACKET
4		2PC	PLASTIC ANCHOR
5		2PC	CABLE

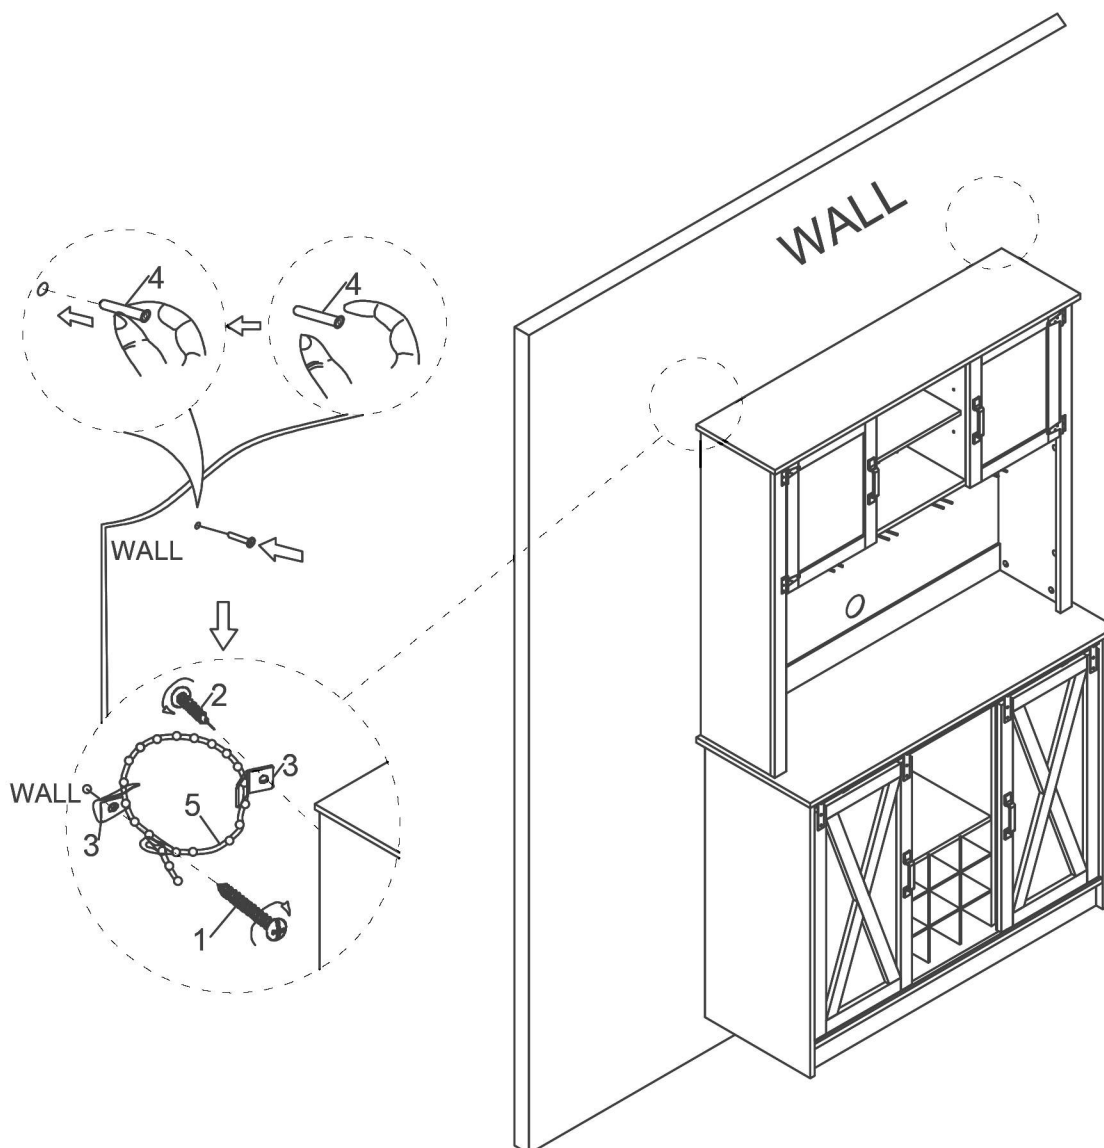

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required.

Please contact your local hardware store for assistance.