



203835

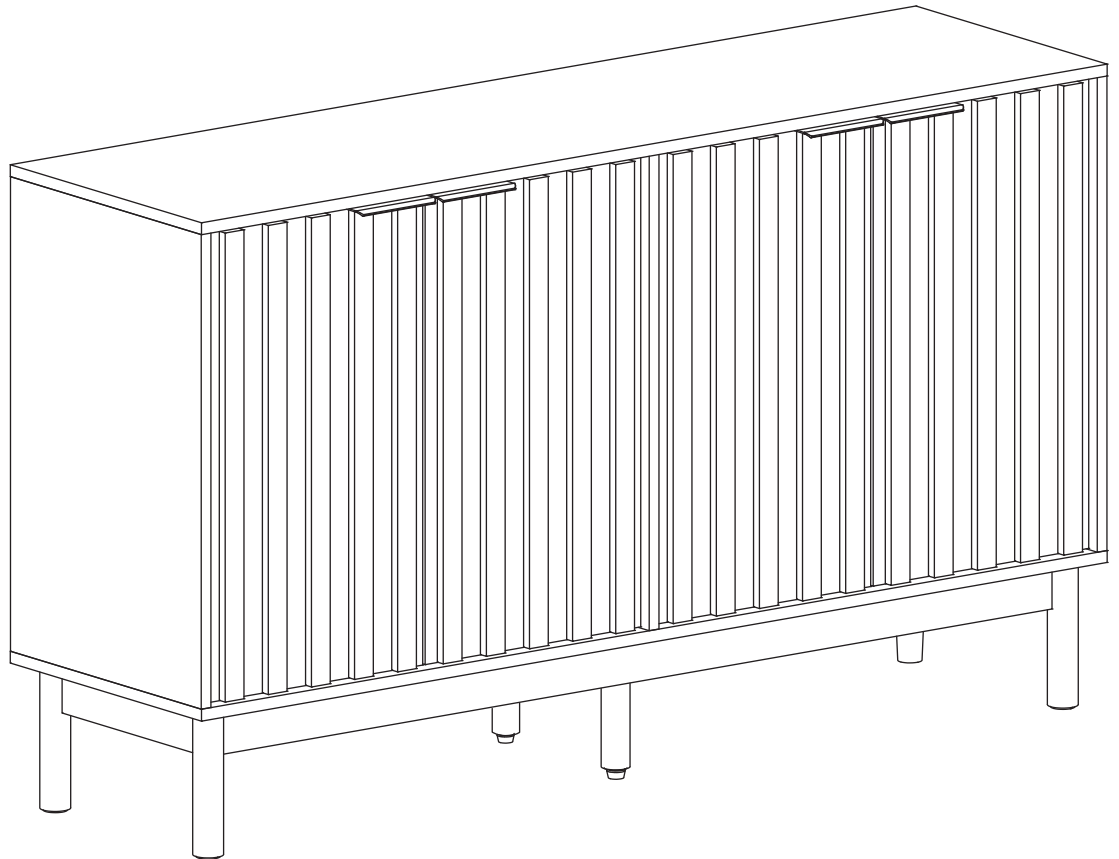


Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give enjoyment.


Assembly Checklist

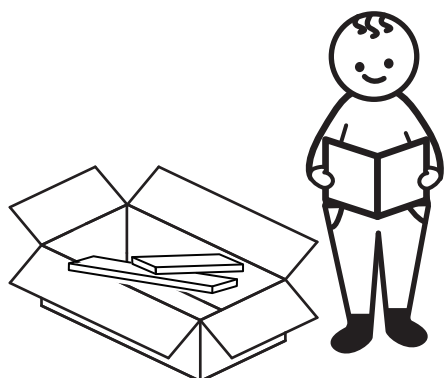


Read through the instructions carefully before you begin.

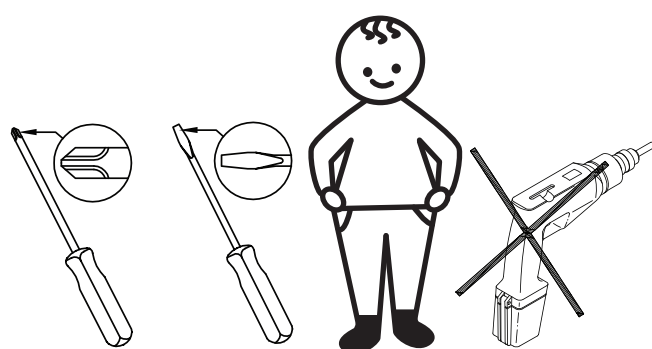

Make sure you have all the required tools. Never use power tools unless instructed.

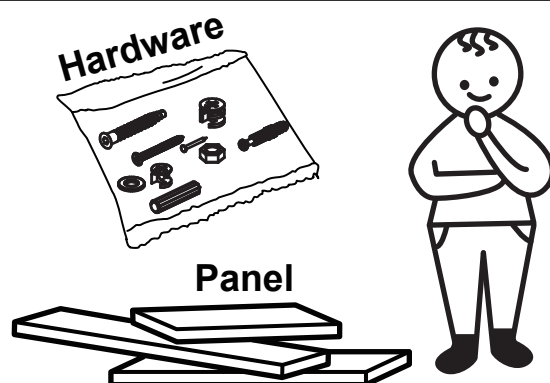

Identify and lay out all of the components before you begin assembly.

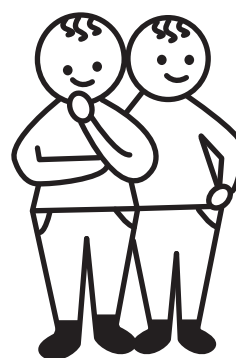


Two people are required to assemble.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please email us.
- ! Please see page 2 for any safety requirements or weight restrictions.

QUICKFIT

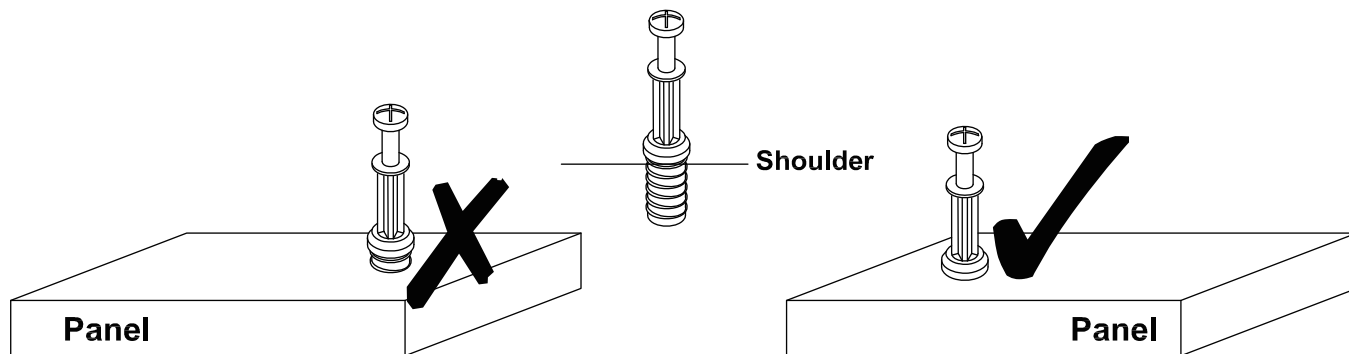


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

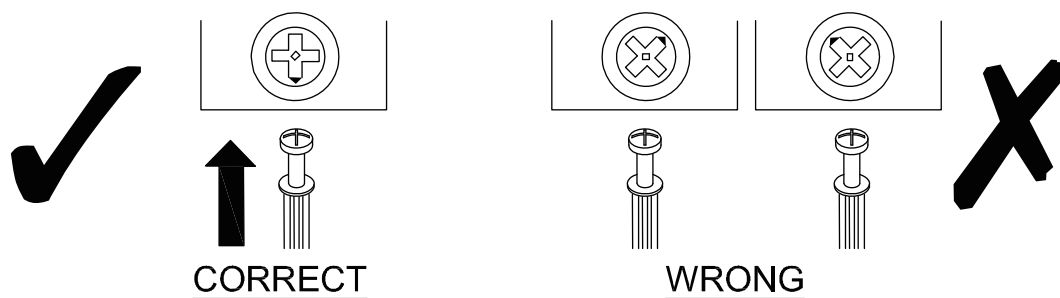









When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

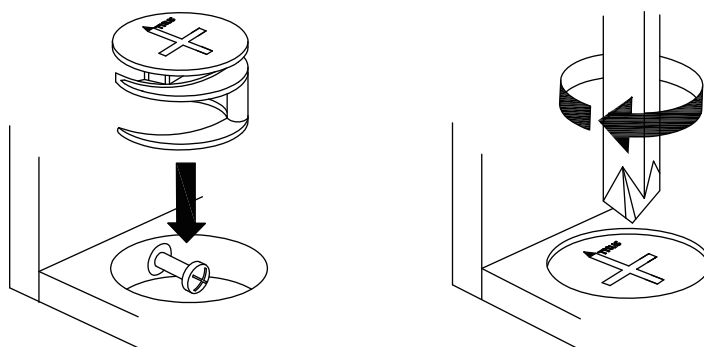


Turn cam lock clockwise to tighten.

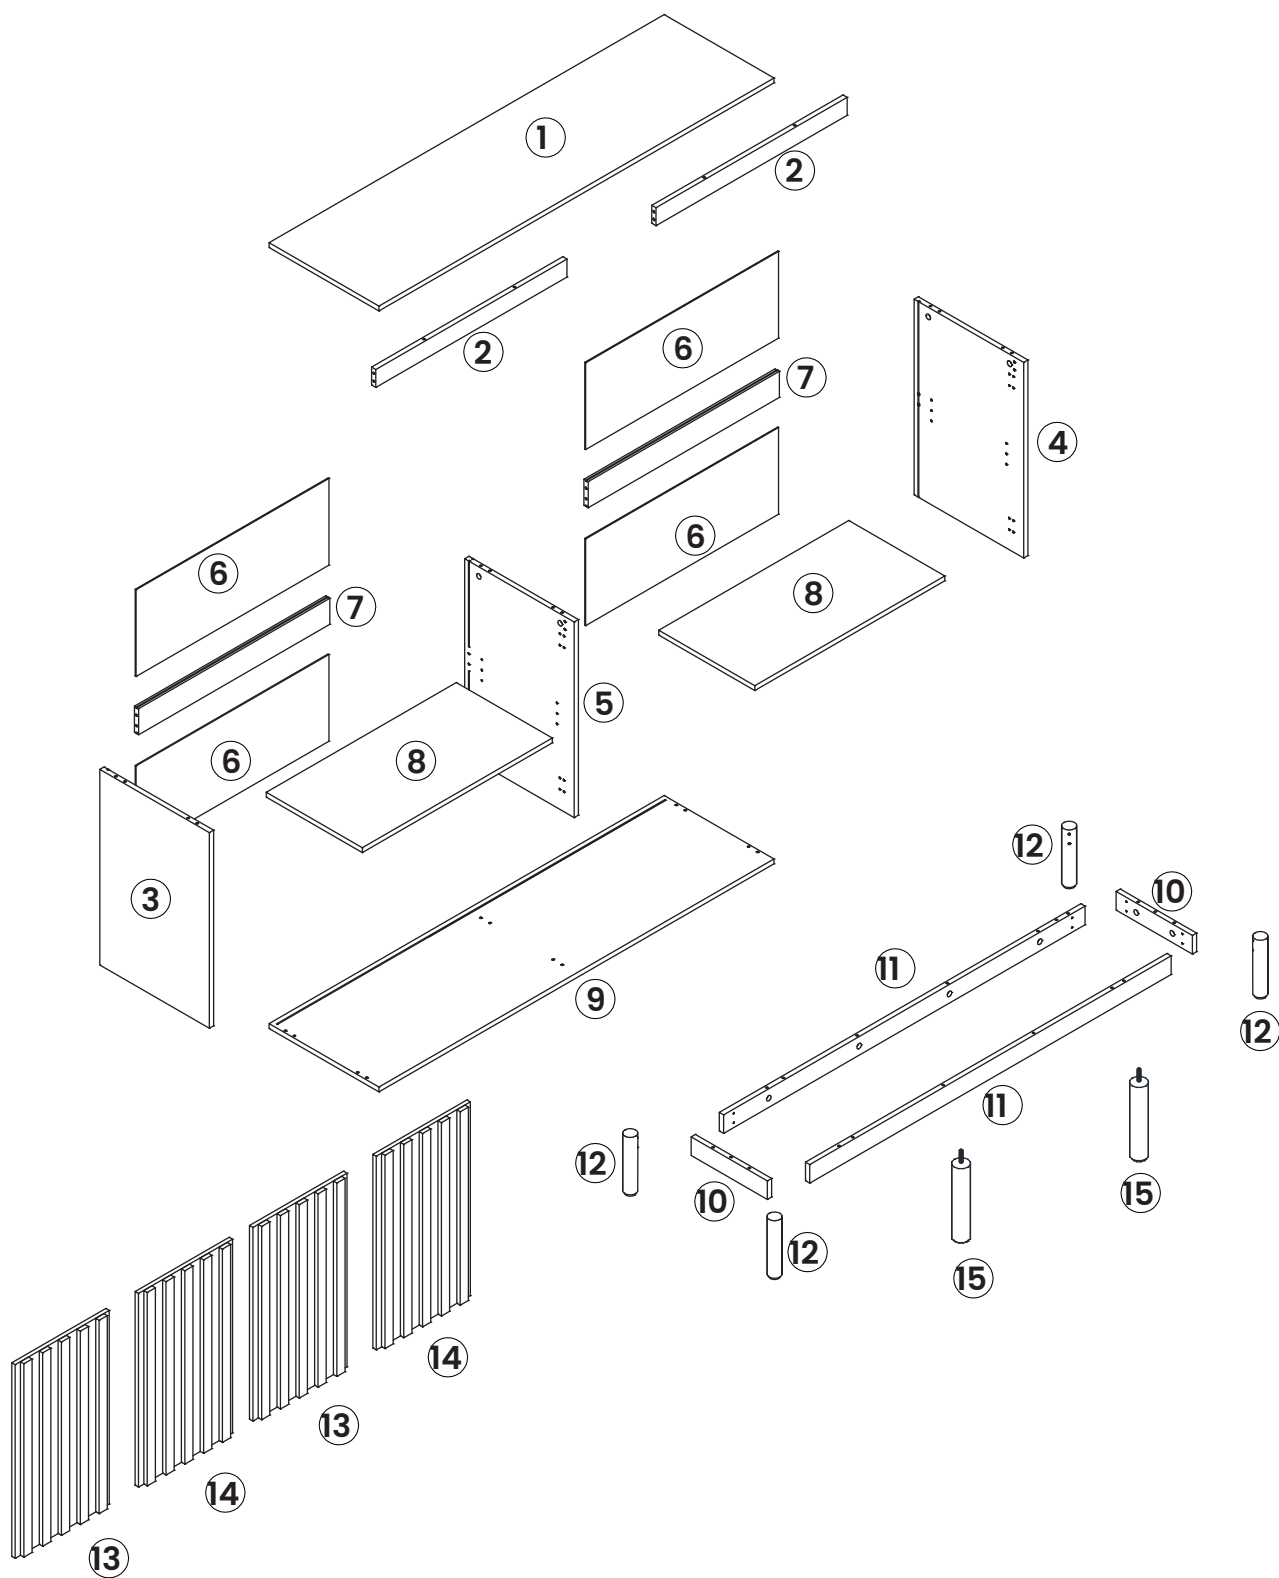

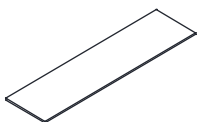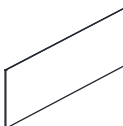 ① x1	 ② x2	 ③ x1	 ④ x1	 ⑤ x1	 ⑥ x4
 ⑦ x2	 ⑧ x2	 ⑨ x1	 ⑩ x2	 ⑪ x2	 ⑫ x4
 ⑬ x2	 ⑭ x2	 ⑮ x2			
 Ax34	 Bx34	 Cx20	 Dx6	 Ex56	 Fx8
 Gx1	 Hx4	 Ix24	 Jx8	 Kx1	 Lx4
 Mx2	 Nx2	 Ox16	 Px16	 Qx6	 Rx2
 Sx2	 Tx8	 Ux4	 Vx4		


Step 1

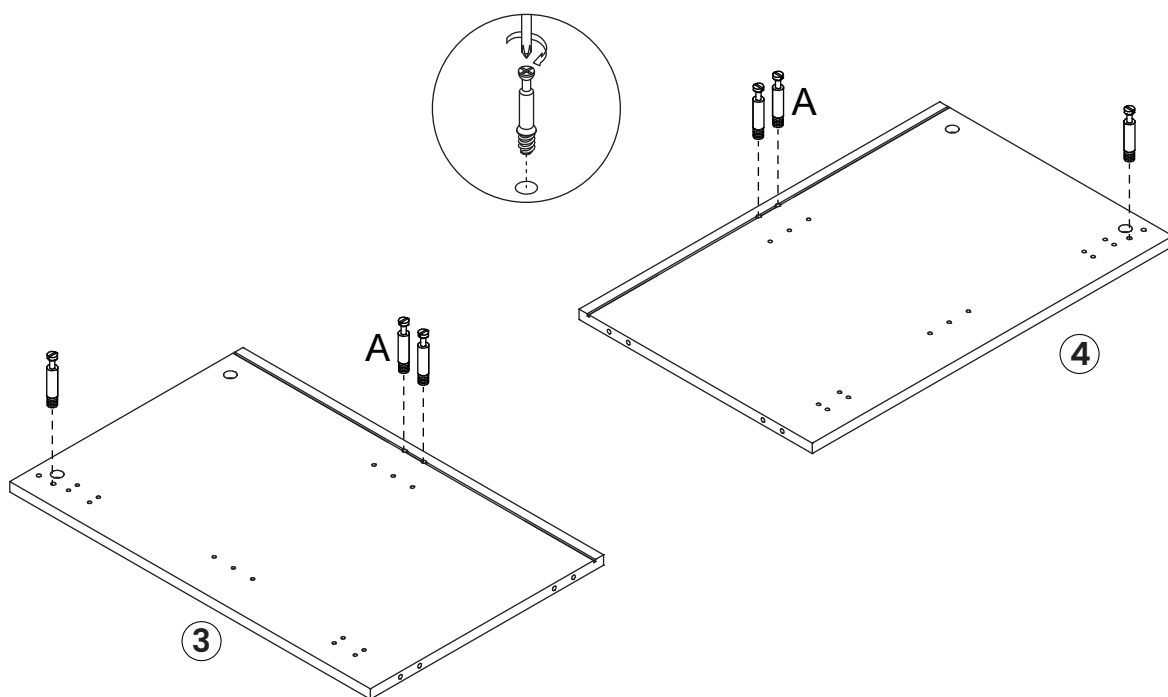

6xA




Step 2

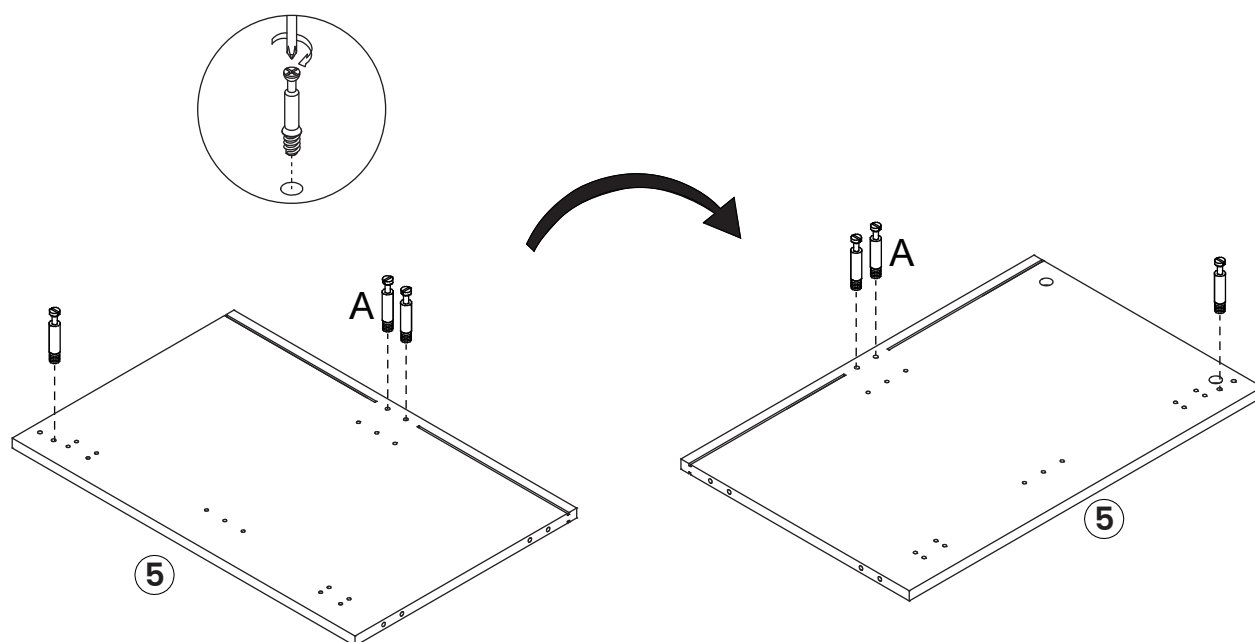


6xA




Step 3

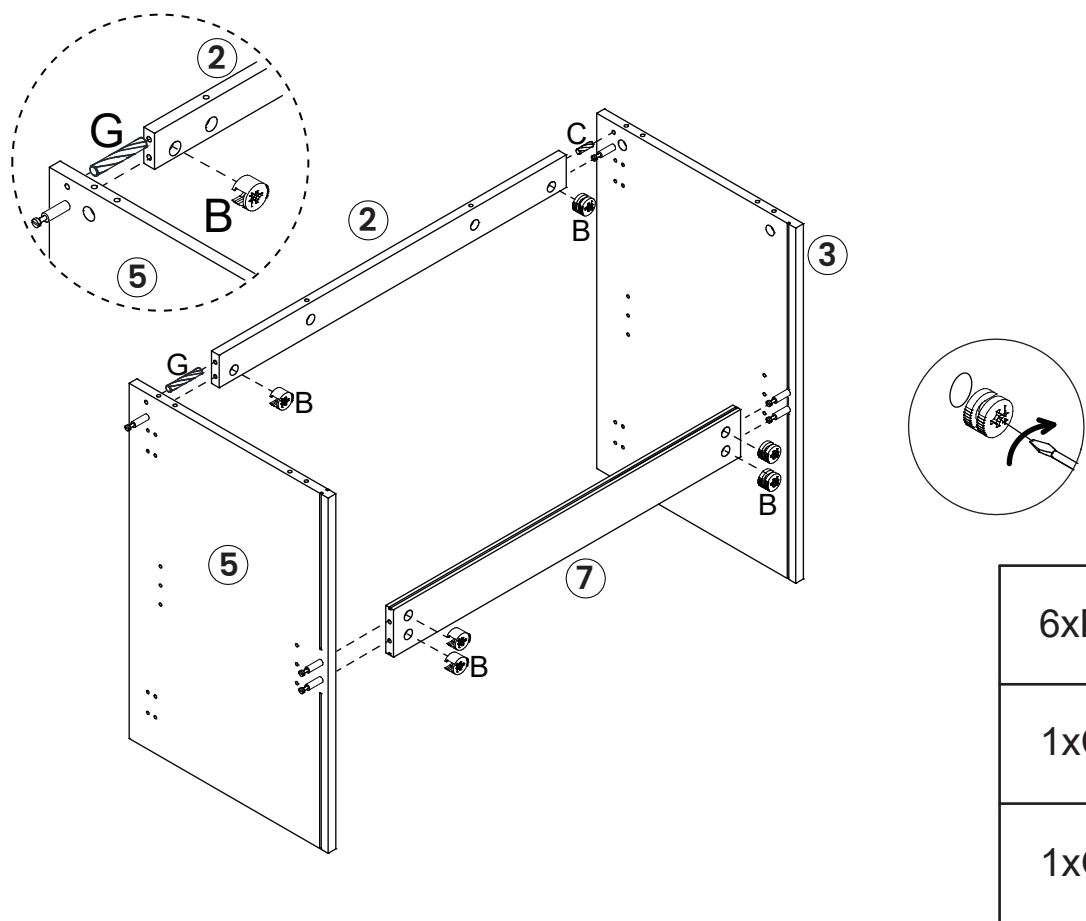

Step 4

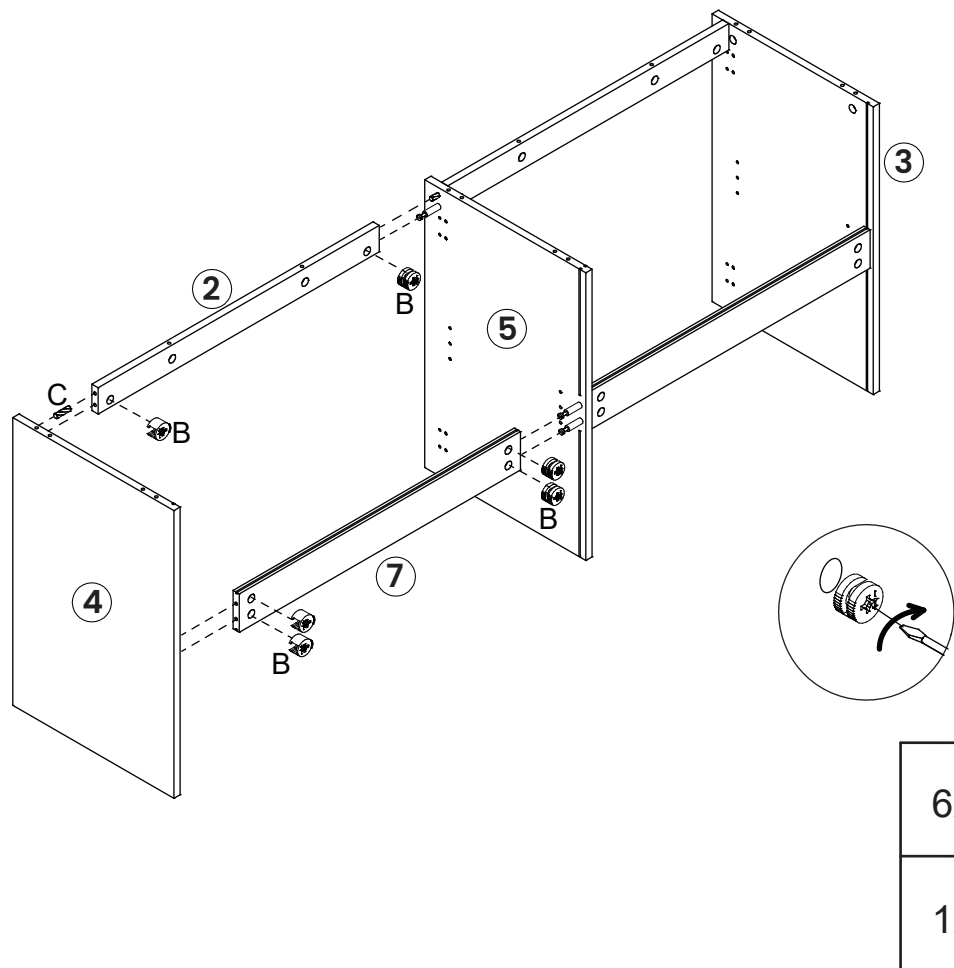


Step 5

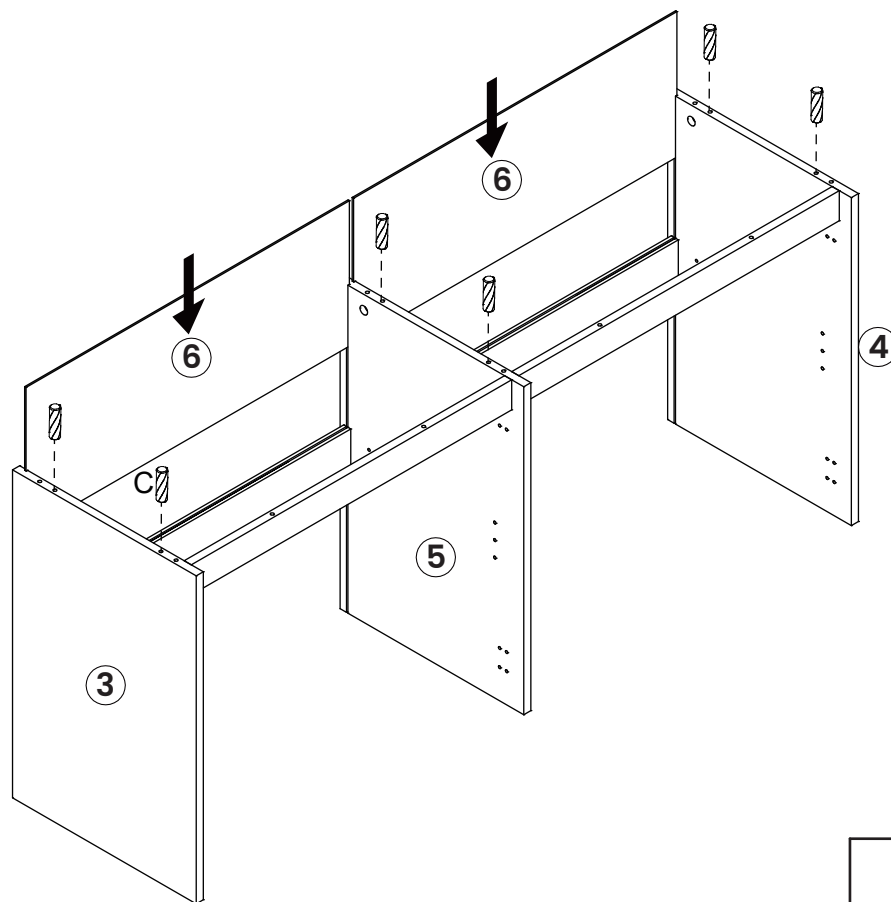

6xC




Step 6

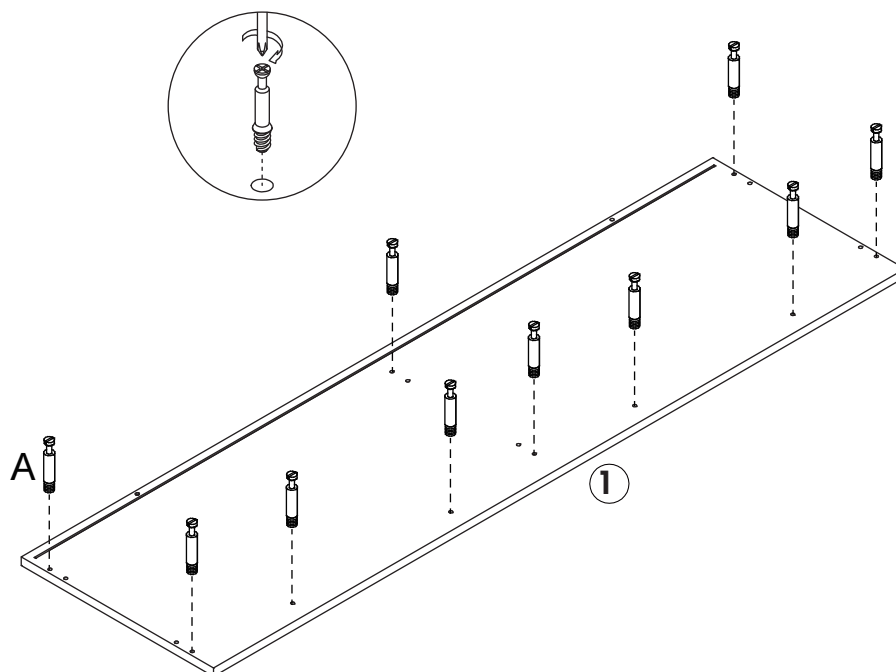

10xA




Step 7

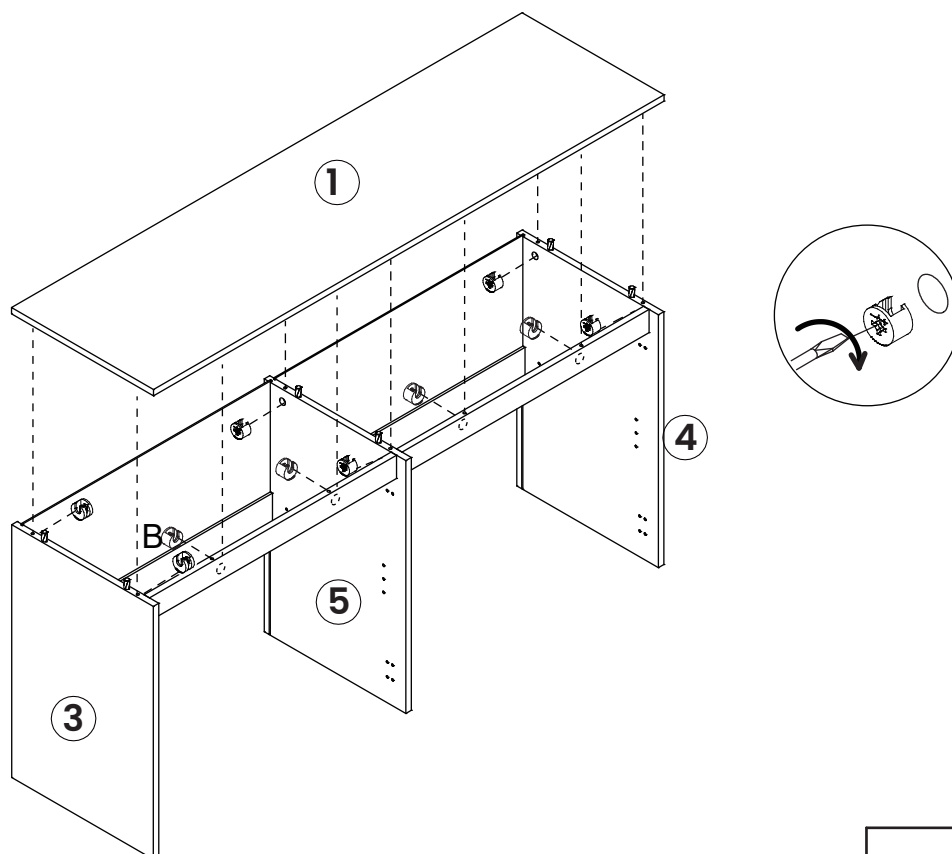

10xB




Step 8

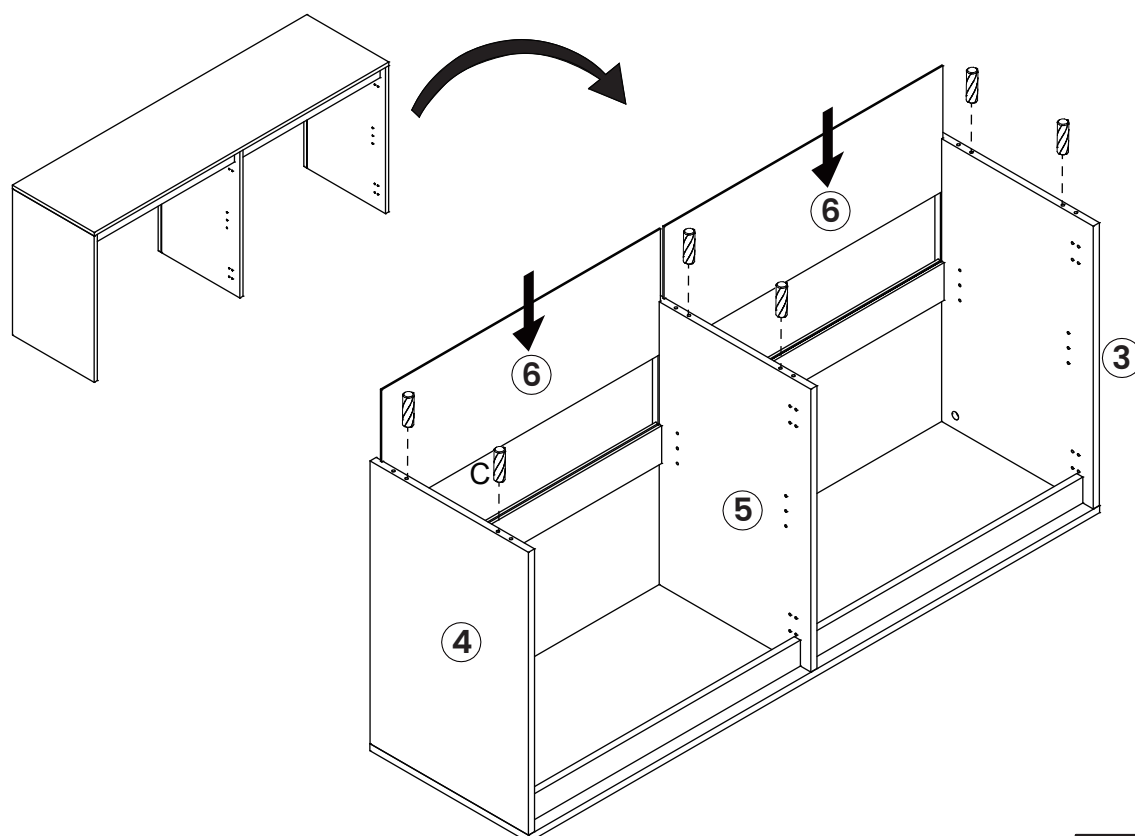


6xC




Step 9

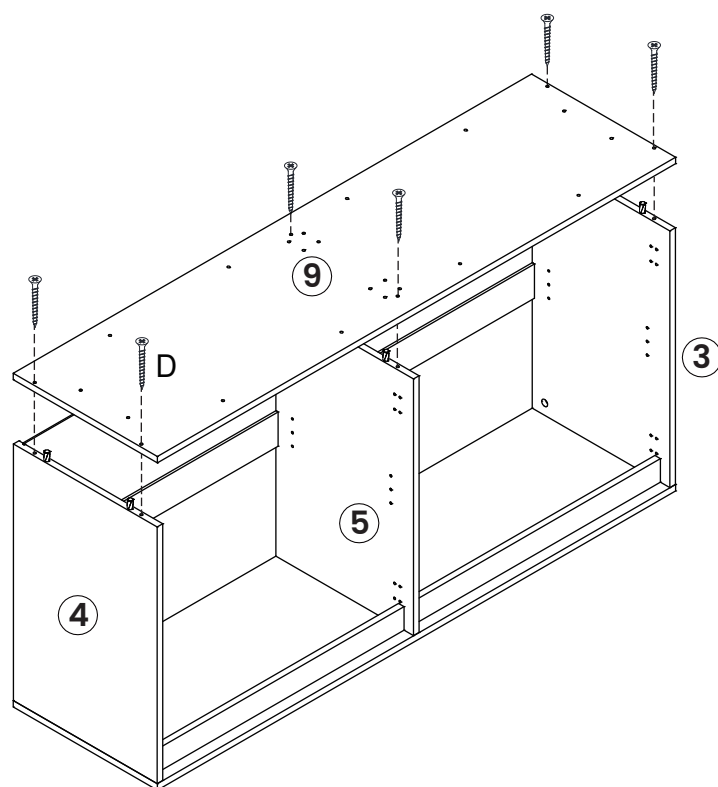

6xD




Step 10

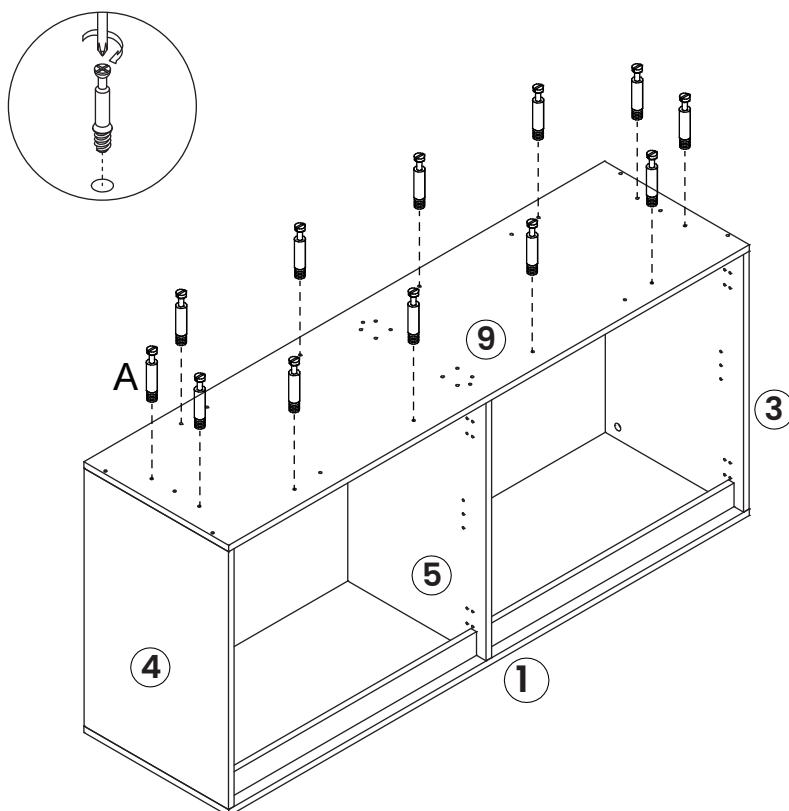

12xA




Step 11

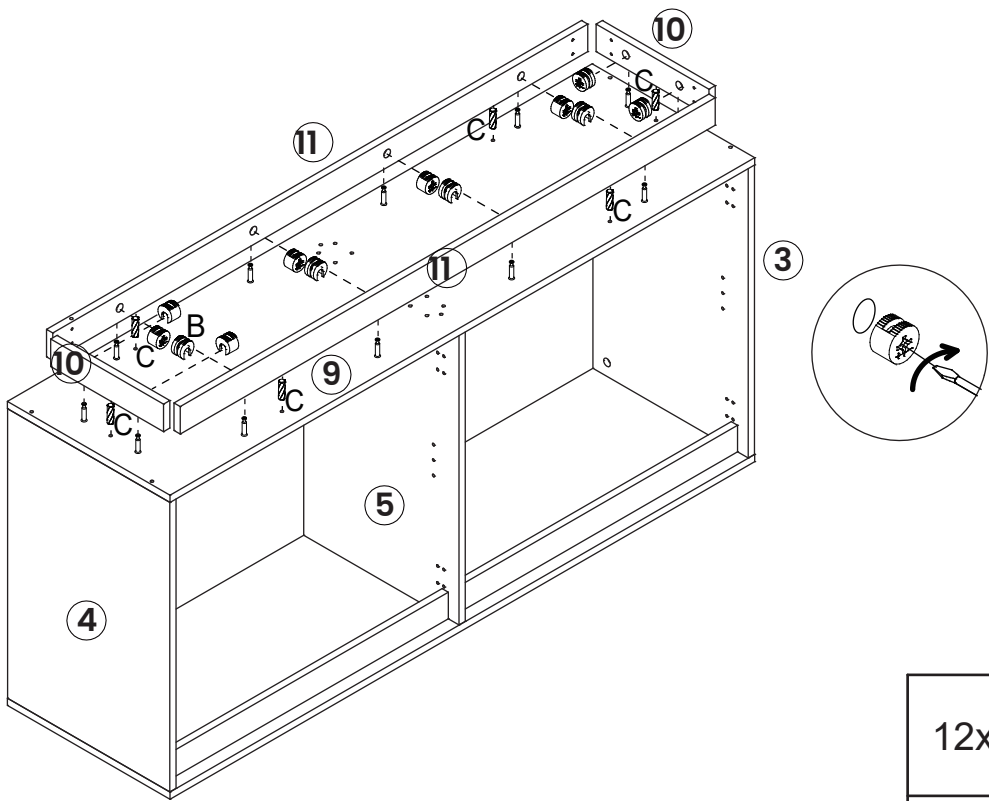


12xB	
6xC	

Step 12

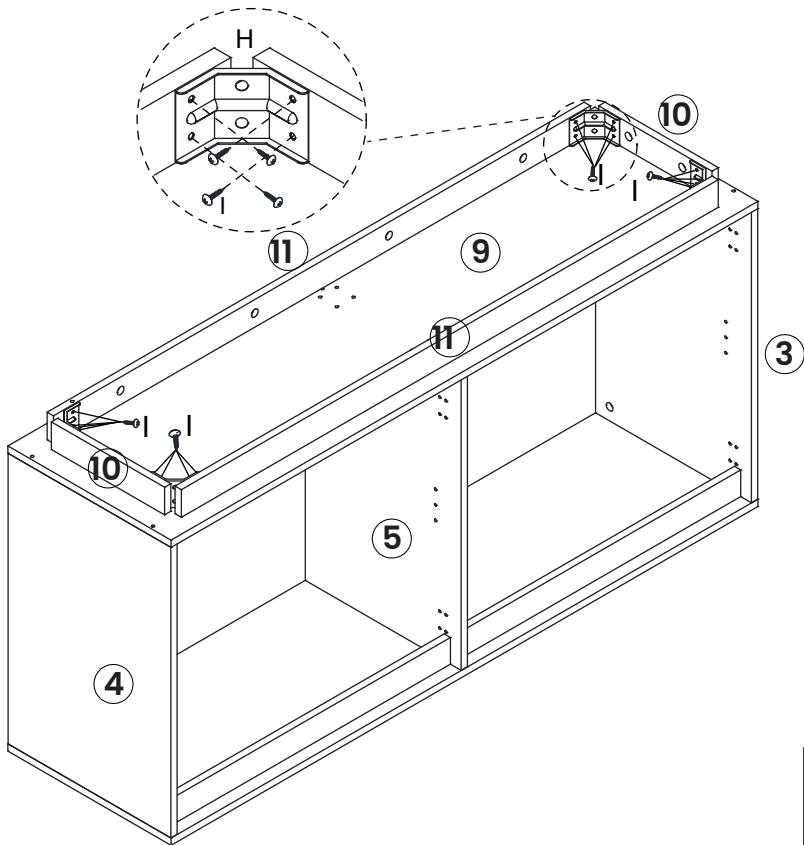


4xH	
16xI	


Step 13

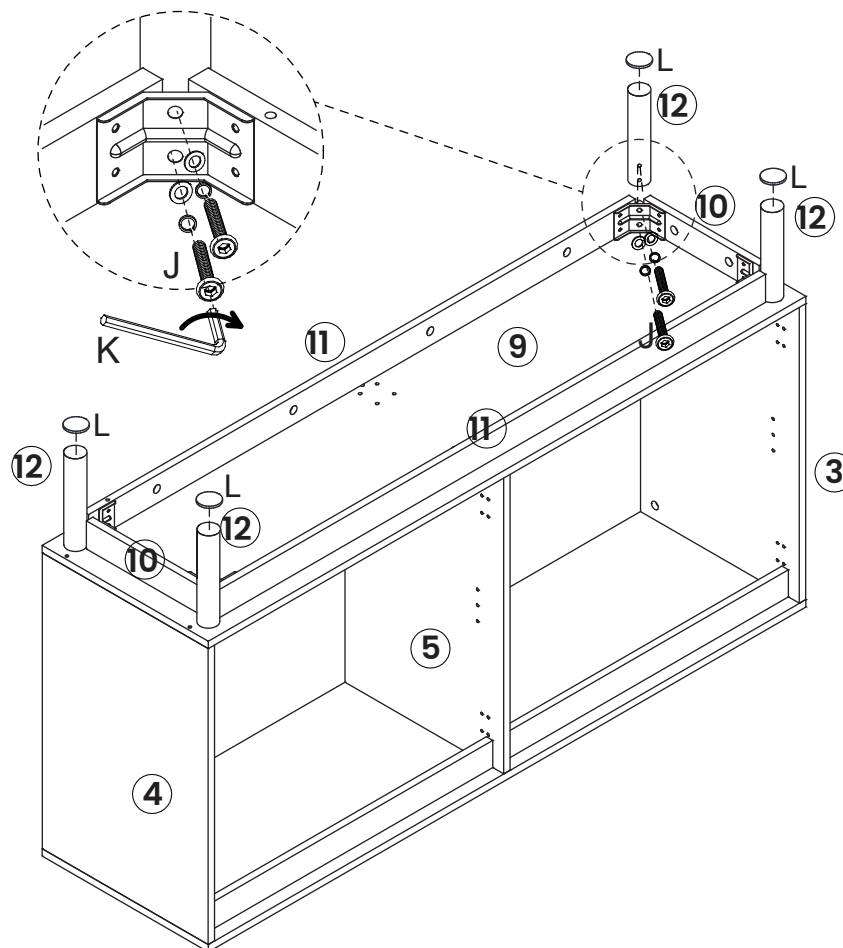


8xJ	
4xL	

Step 14

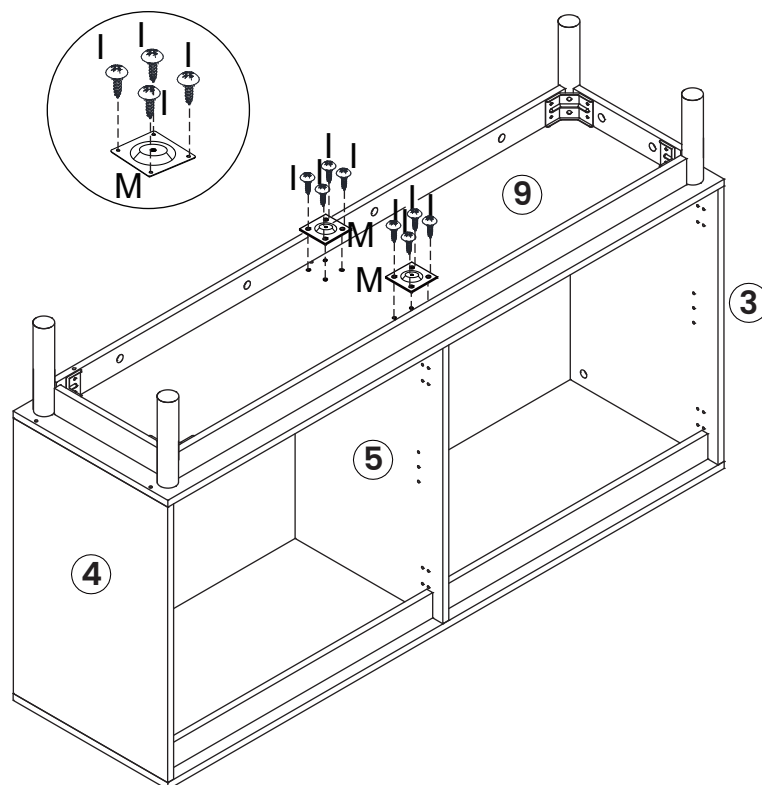

8xI	
2xM	


Step 15

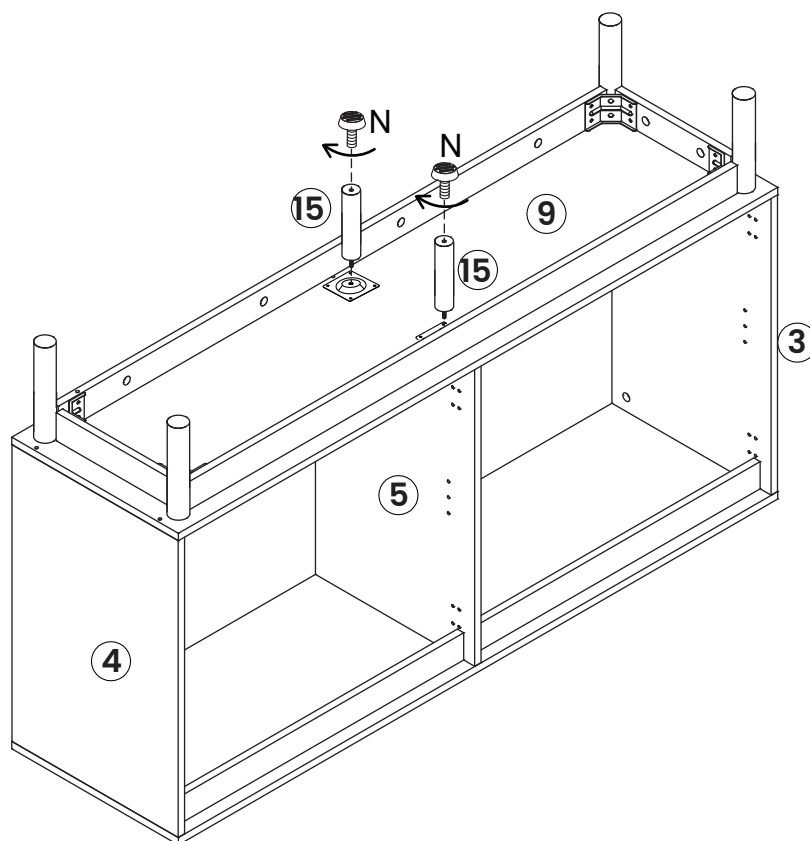

2xN




Step 16

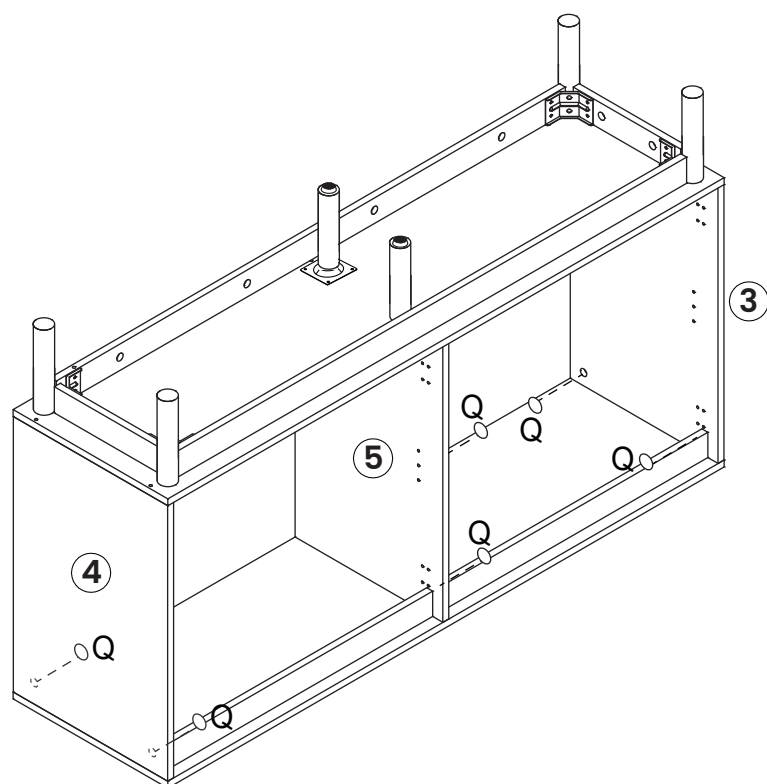

6xQ




Step 17

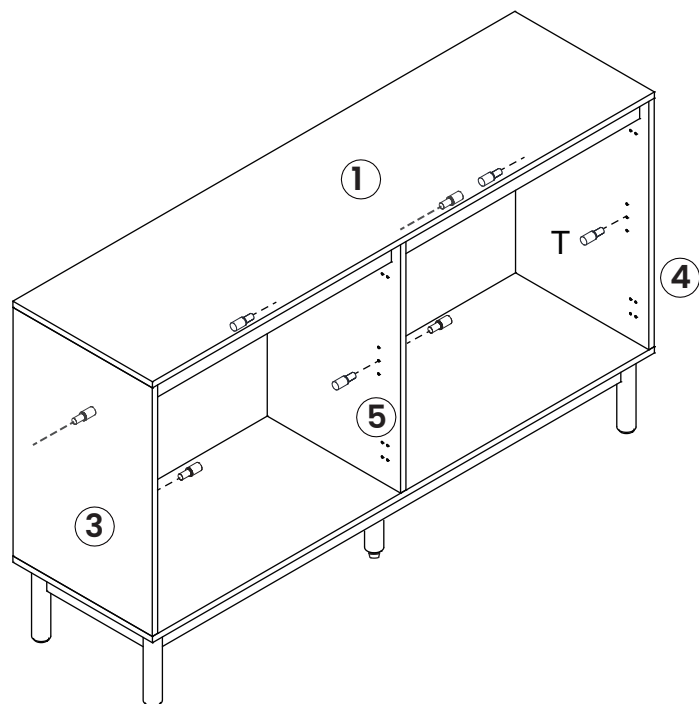


8xT




Step 18

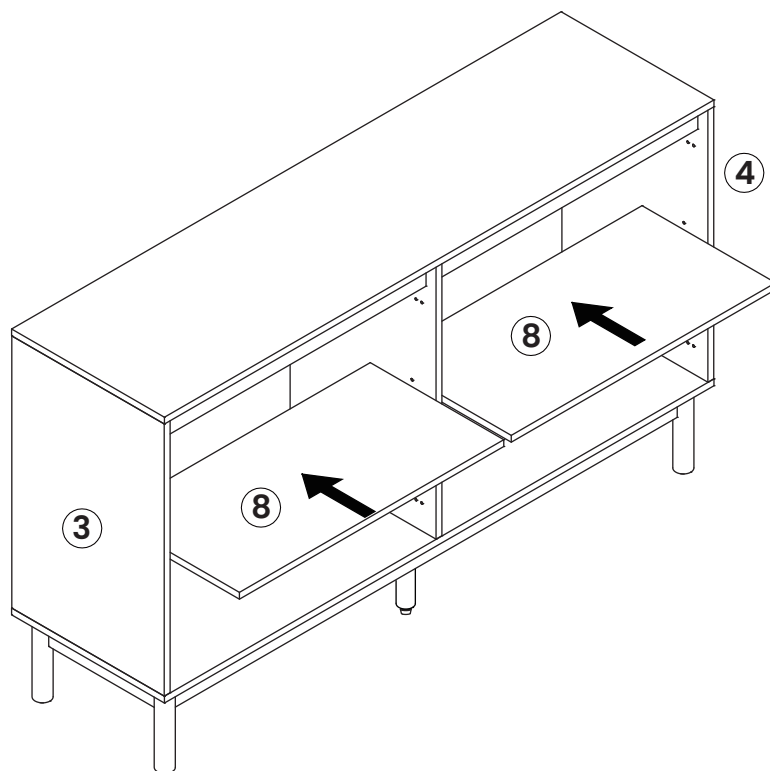


Step 19

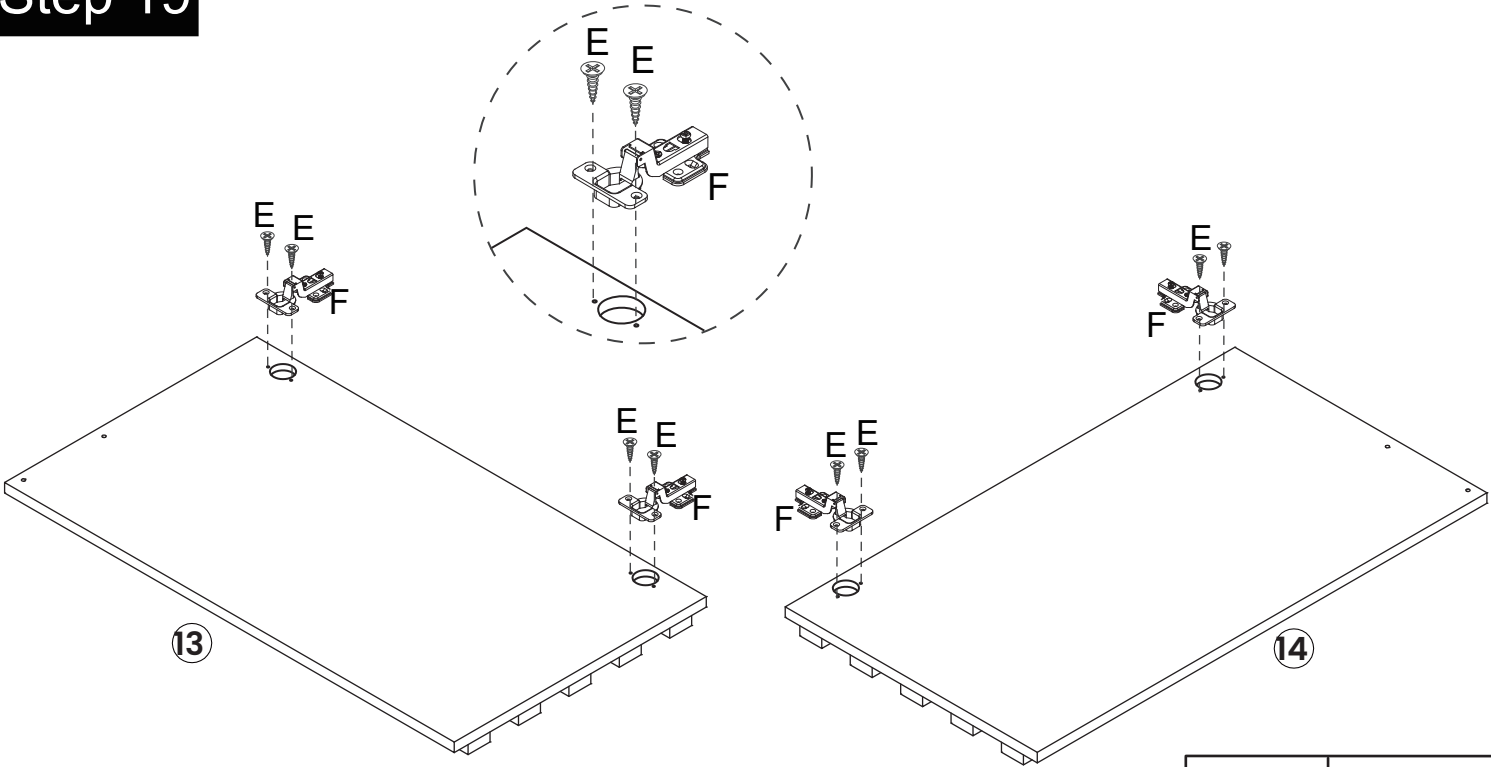

x 2

16xE	
8xF	




Step 20

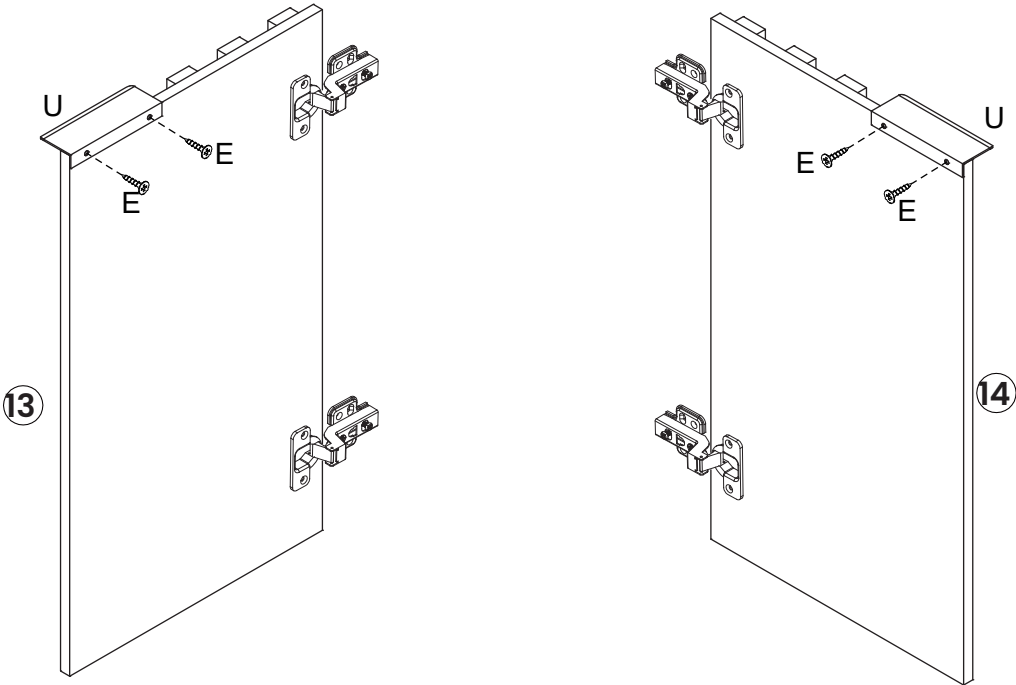

x 2




8xE	
4xU	

Step 21

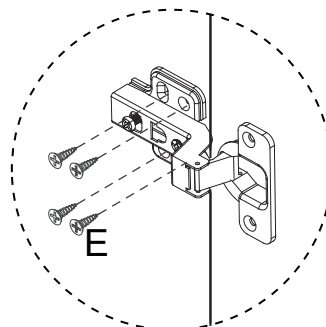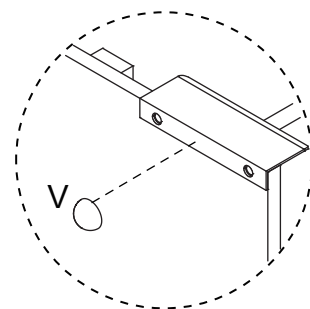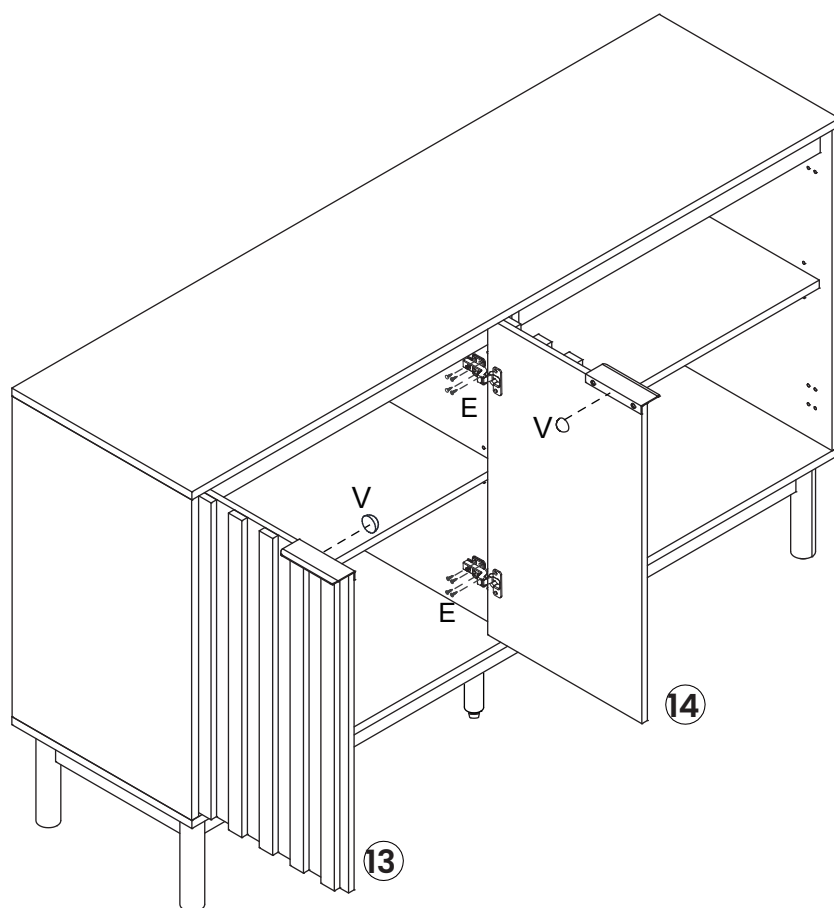


16xE	
Vx2	


Step 22

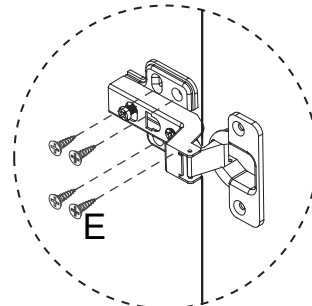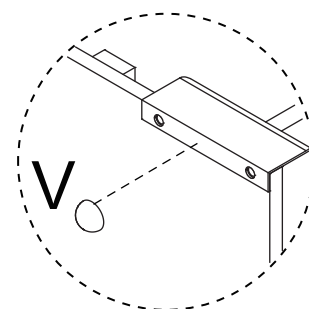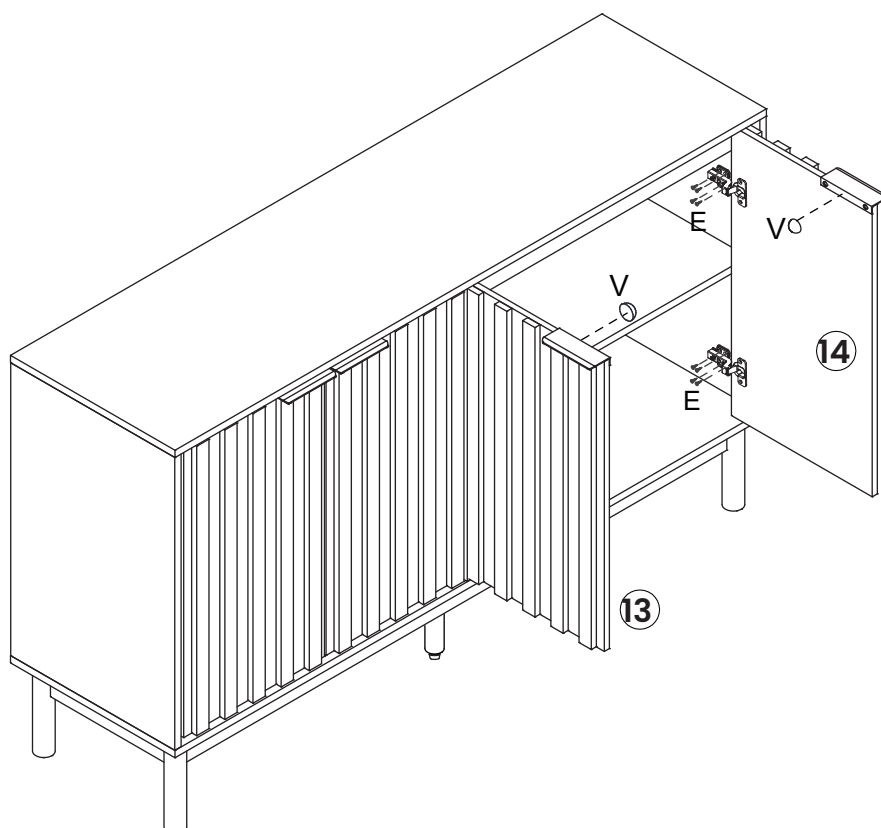


16xE	
Vx2	

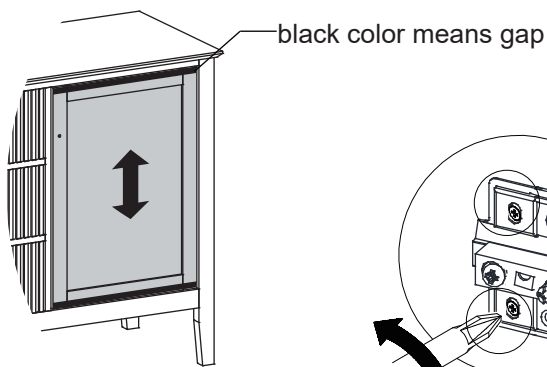


This adjustment is used if your doors have a big gap at the top or the bottom, or if one door sits straight but is lower than the other door.

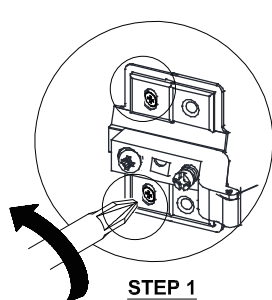

STEP 1
Please loosen the screw to adjust the door.

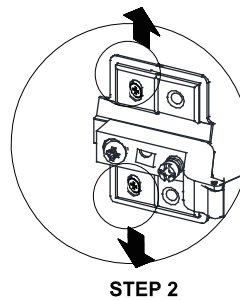


STEP 2
Adjust the door.

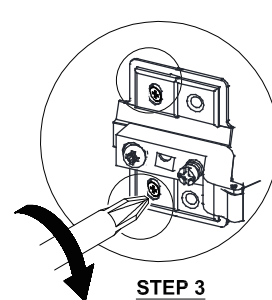


STEP 3
After adjust, tighten the screw.


Open the door and hold it. Loosen the screw as shown in STEP1. Gently adjust the height of the door by hand as shown in STEP2. Tighten the screws as shown in STEP3, until the heights of the two doors are the same.

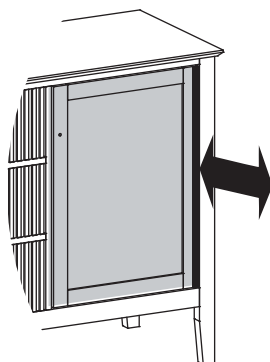


This adjustment is used if your doors are TOO CLOSE to the main cavity. You can loosen the screw and then move the door hinge closer or further out depending on the outcome you want to achieve

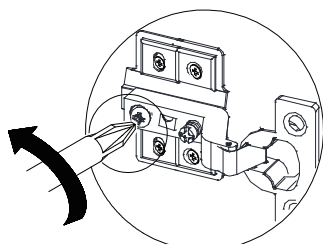

STEP 1
Please loosen the screw to adjust the door.

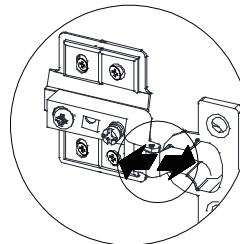


STEP 2
Adjust the door.

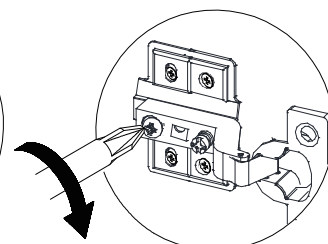


STEP 3
After adjust, tighten the screw.

Open the door and hold it. Loosen the screw as shown in STEP1. Gently adjust the gap between the door and body by hand as shown in STEP2. Tighten the screws as shown in STEP3, until the distances on both sides are equal,

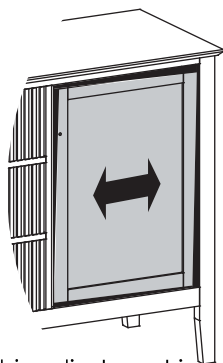





This adjustment is used if your doors are overlapping in the middle OR there is a larger gap through the middle or on the sides

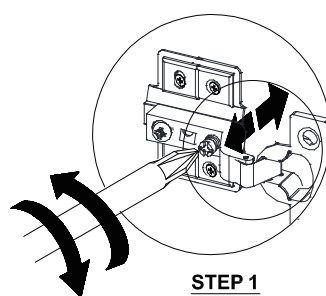

STEP 1
Adjust the door.




If the gap between the door and body is uneven, can solve the problem as shown in STEP1, by rotating the screw to adjust the door. Anti-Clockwise the screw can move the door to left, clockwise rotate can move the door to right. Gradually adjust the door according to the actual situation, until the gap between the door and body is even. Note that the gap of all doors on the same level should be consistent.

Step 23

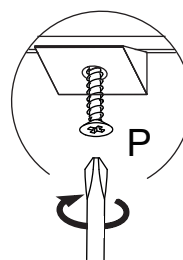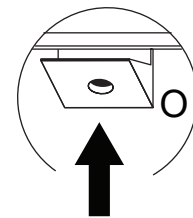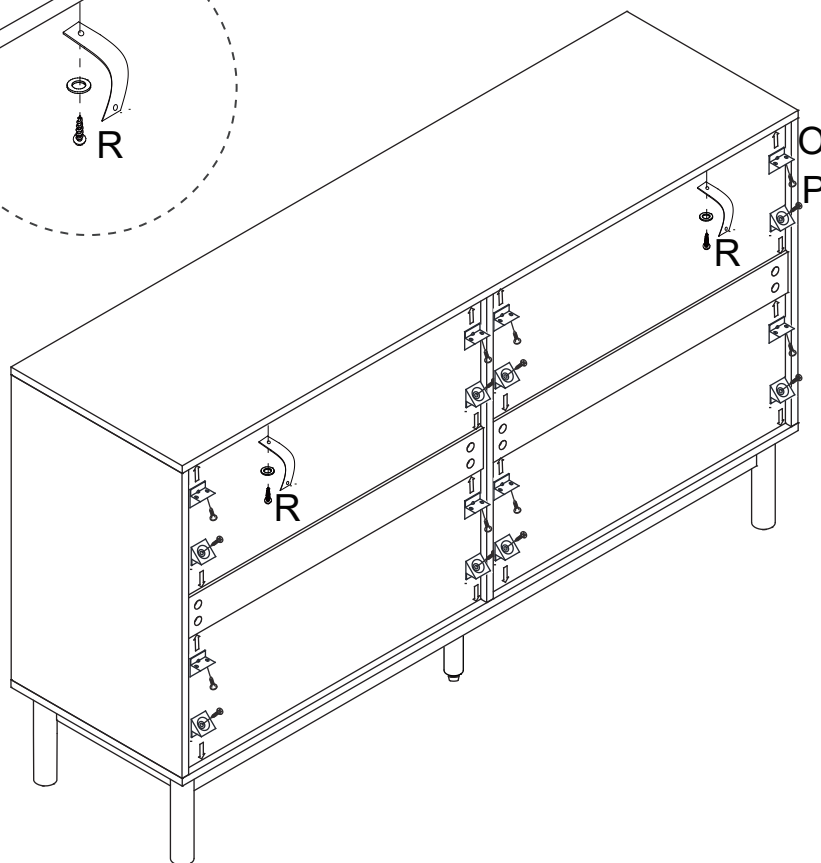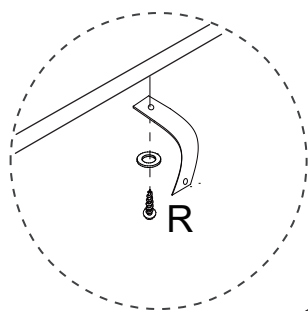

16xO	
16xP	
2xR	

Step 24

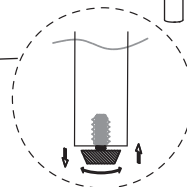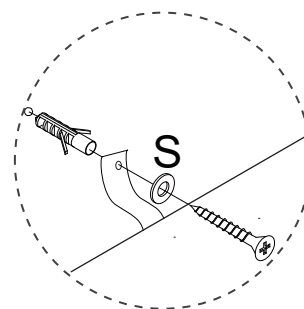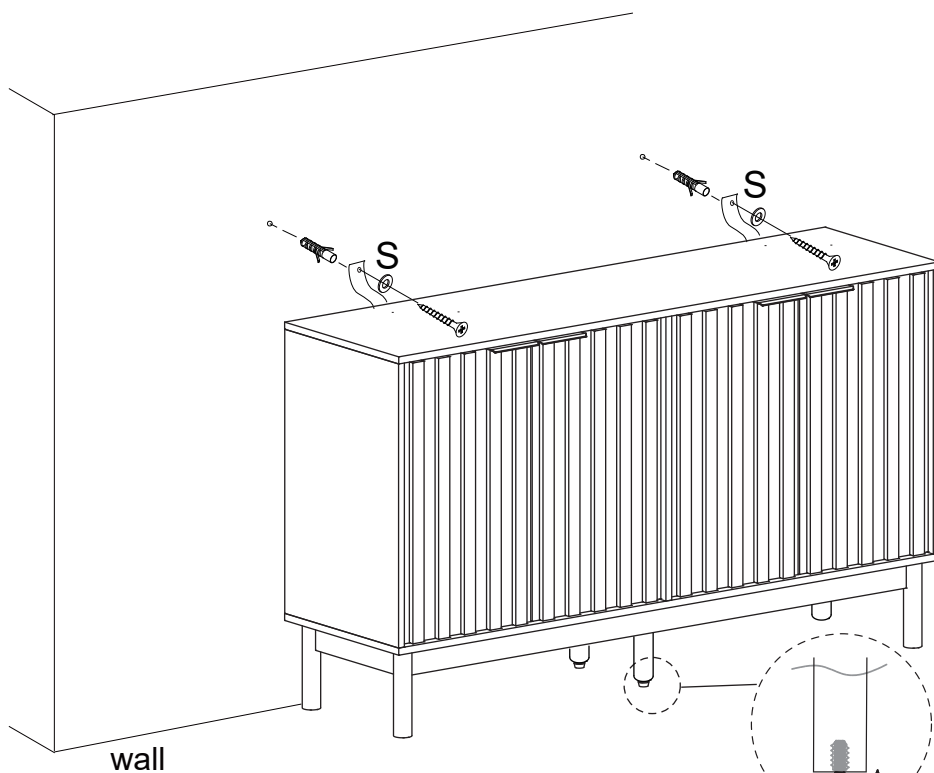

2xS	
-----	--