







STEP 36




| | |
|---|---|
|  |  |
| M6-15 | M6 |
| 4 pcs | 4 pcs |

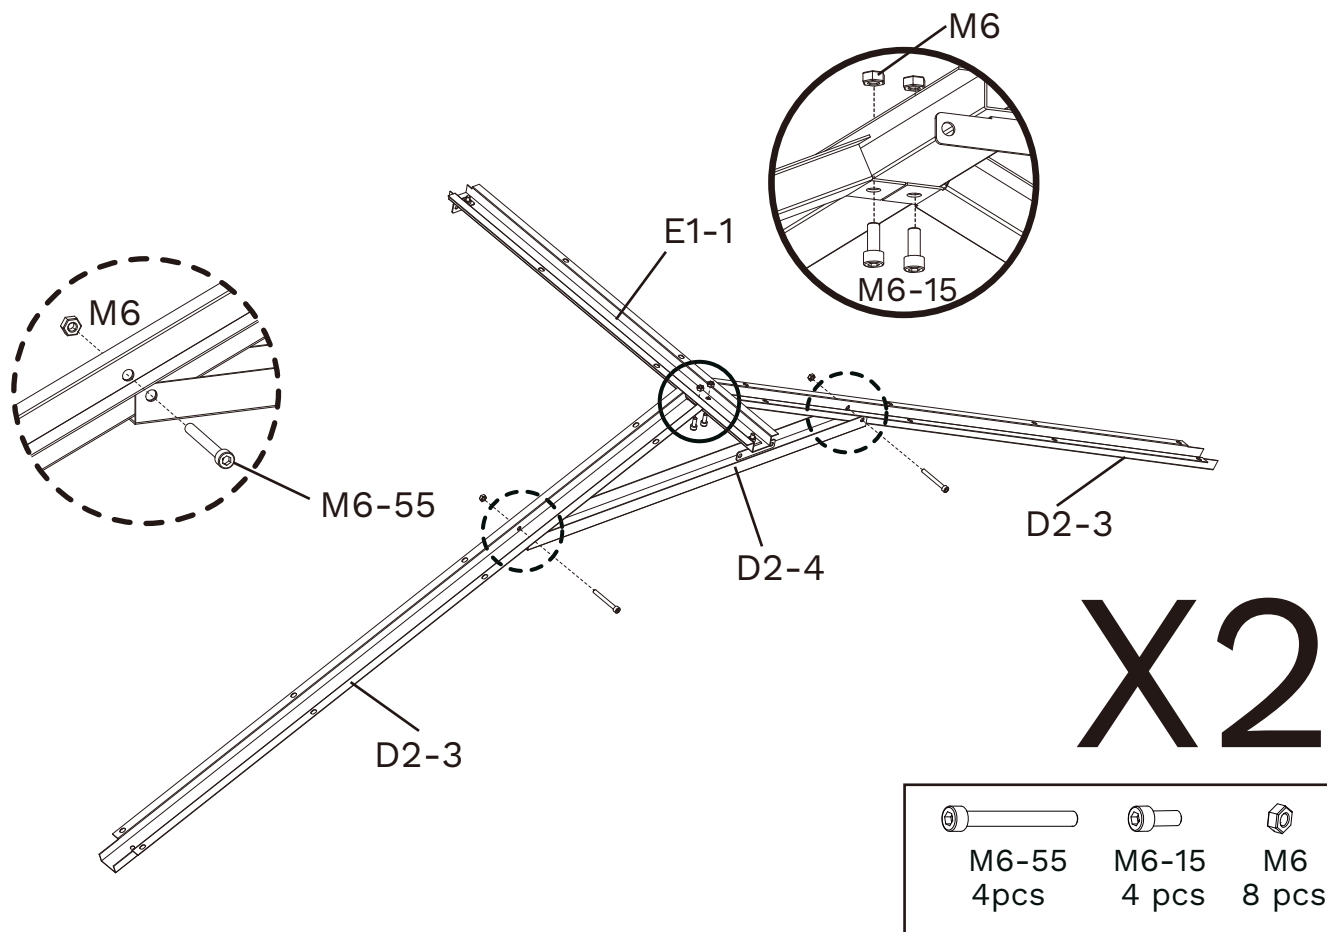STEP 37




| | | |
|---|---|---|
|  |  |  |
| M6-55 | M6-15 | M6 |
| 4 pcs | 4 pcs | 8 pcs |


STEP 38

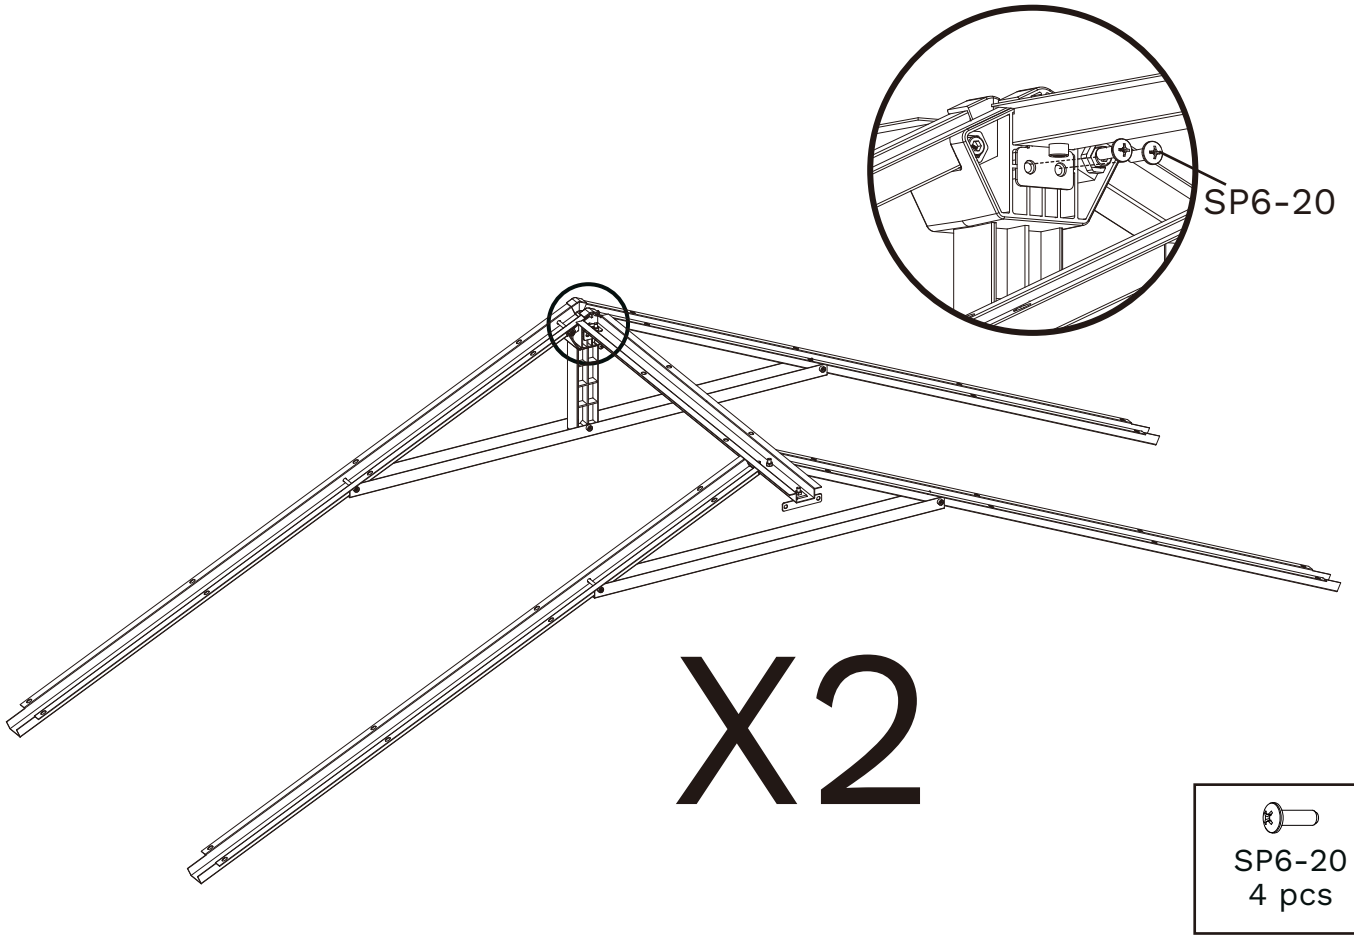


STEP 39


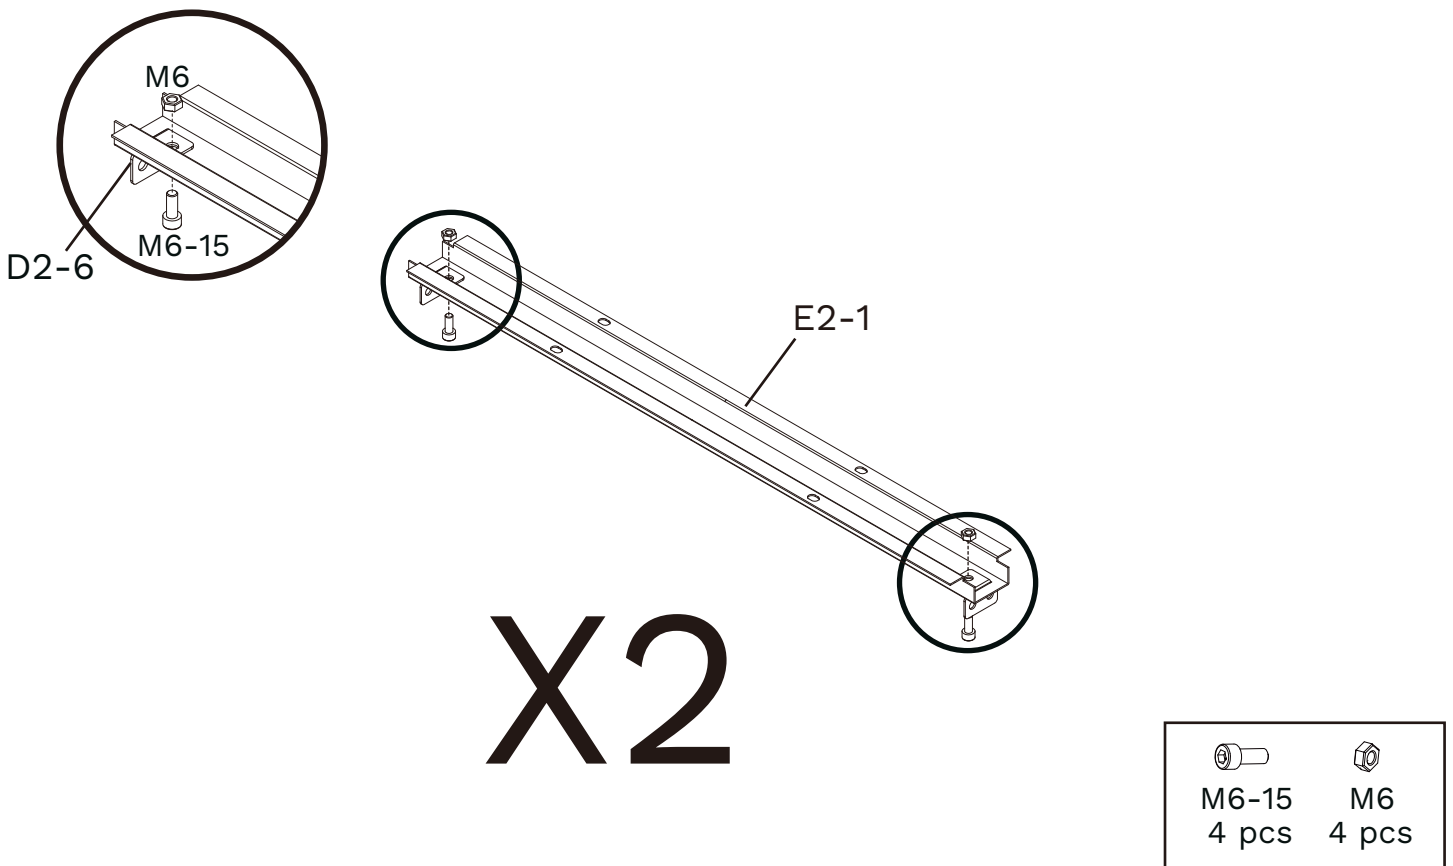



STEP 40

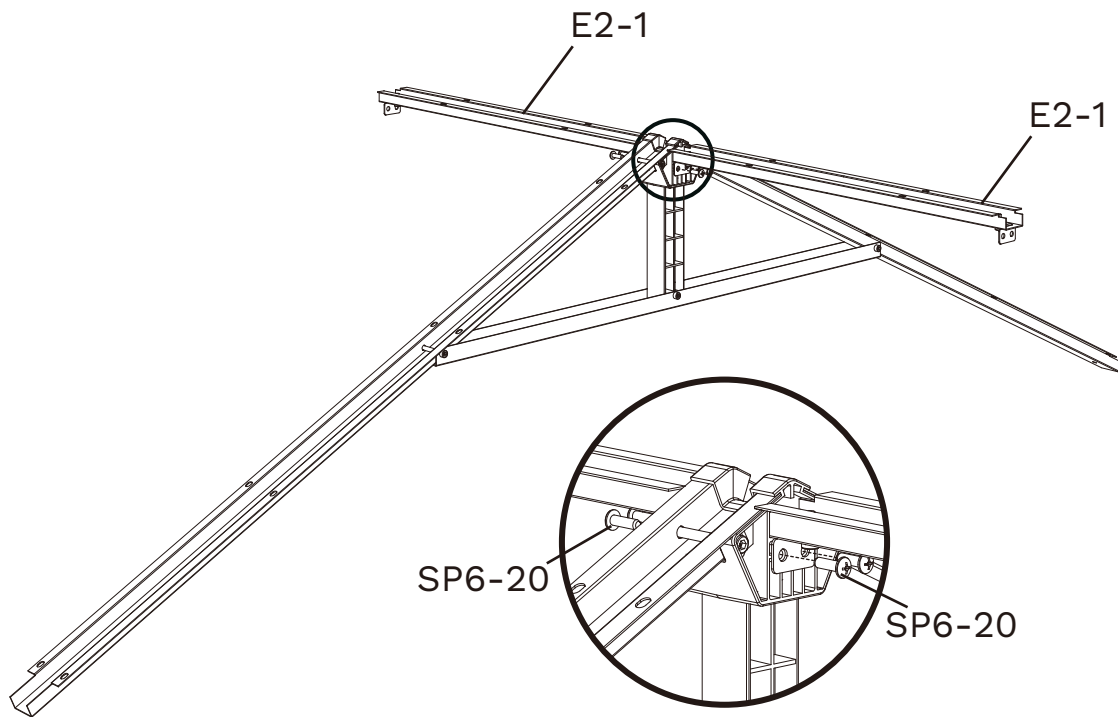




SP6-20
4 pcs

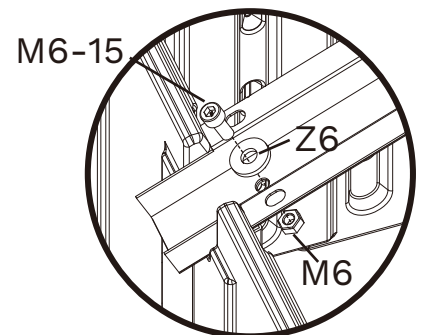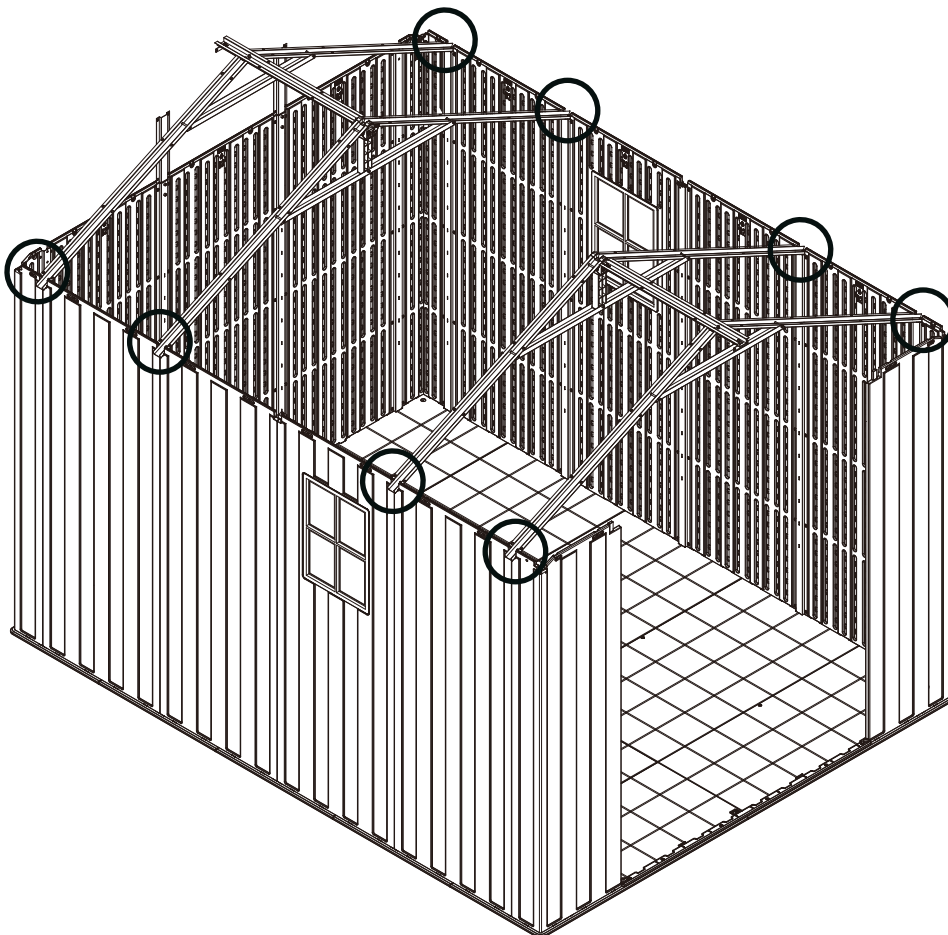STEP 41











M6-15
8 pcs


M6
8 pcs





Z6
8 pcs

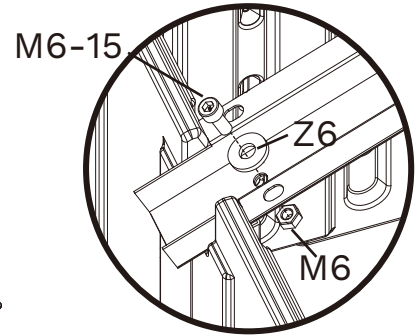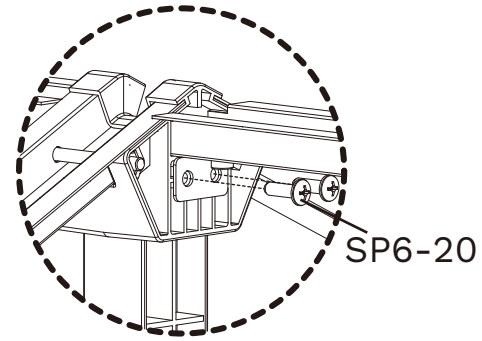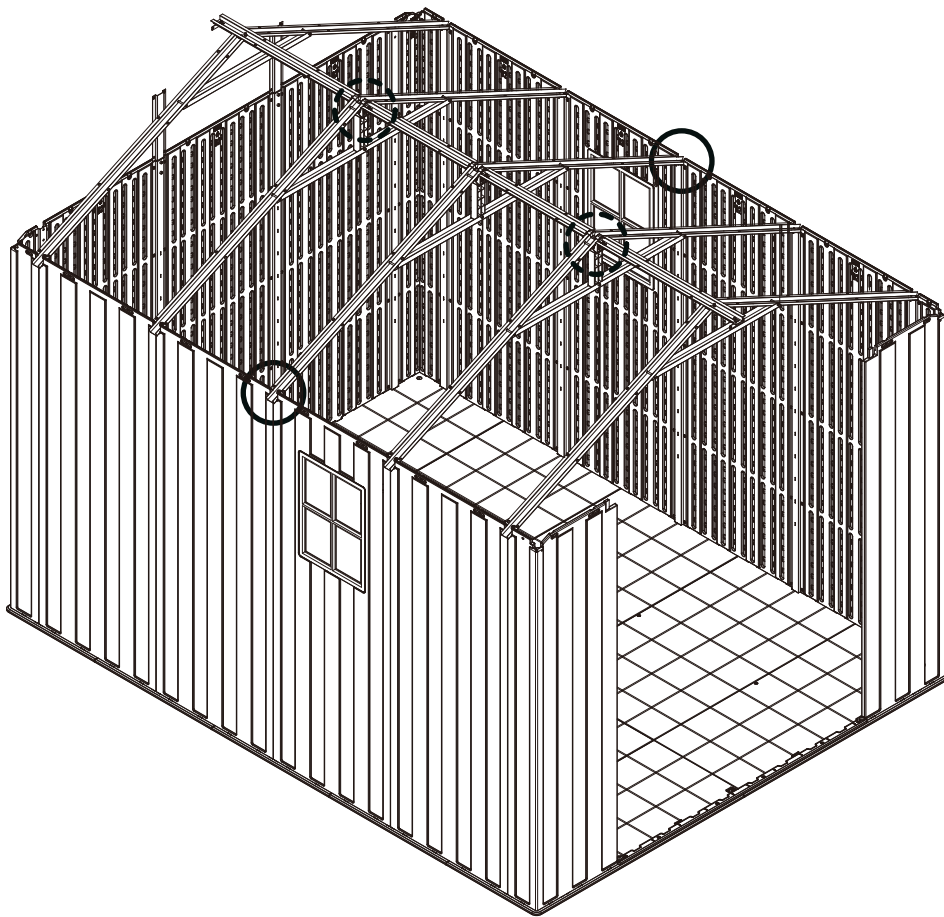
STEP 42





| | | | |
|---|---|---|---|
|  |  |  |  |
| M6-15 | M6 | Z6 | SP6-20 |
| 2 pcs | 2 pcs | 2 pcs | 4 pcs |

STEP 43

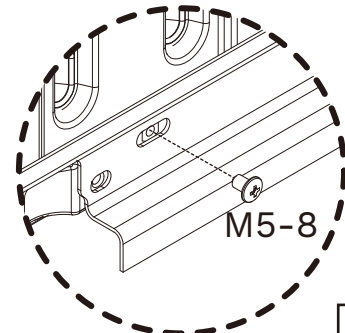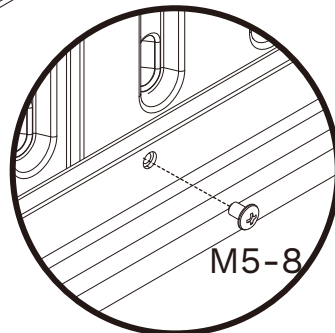
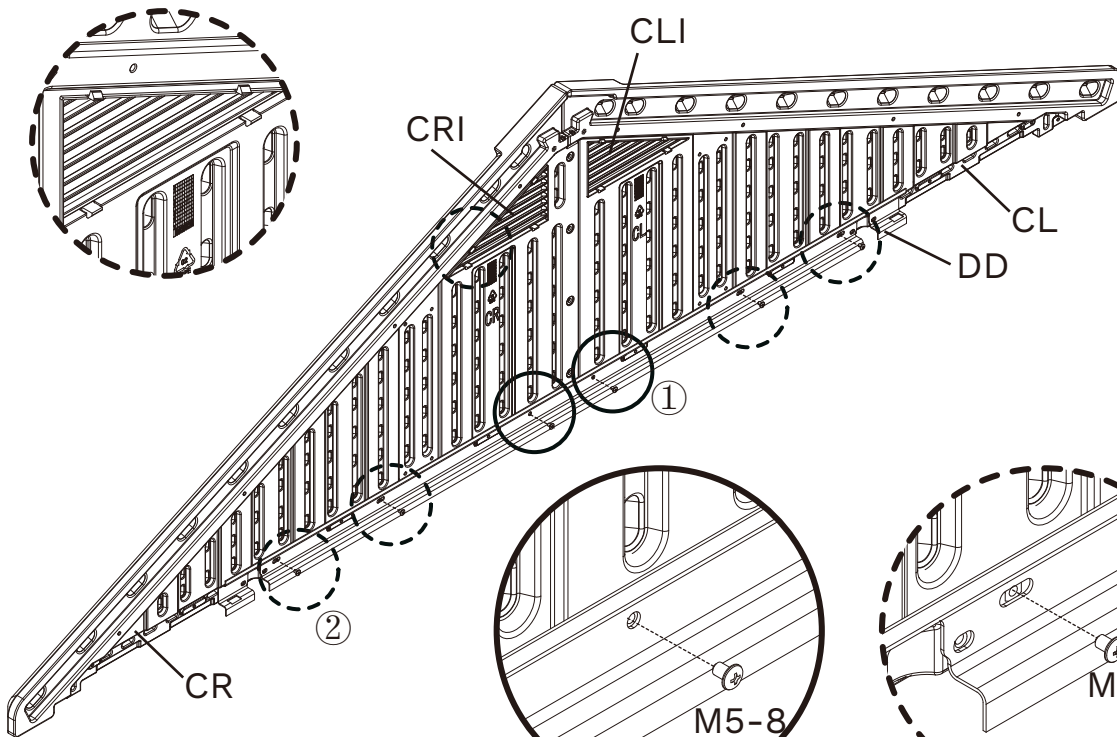


| |
|---|
|  |
| M5-8 |
| 6 pcs |




STEP 44

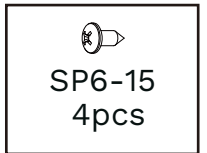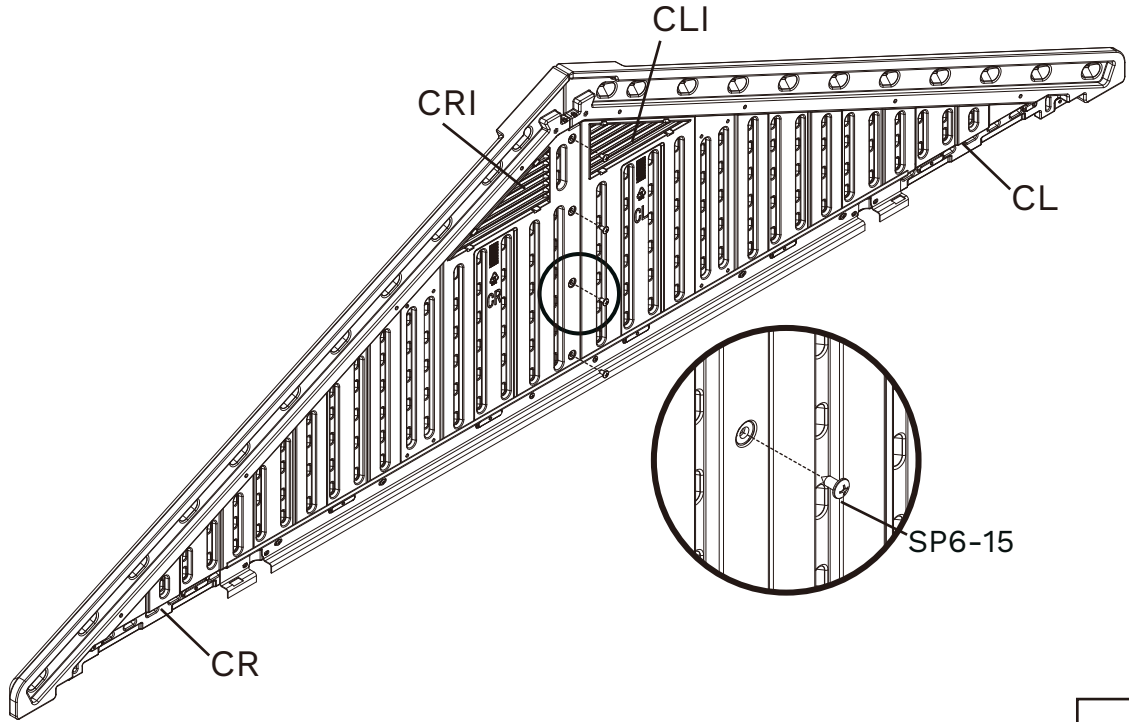



STEP 45

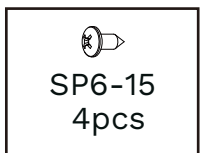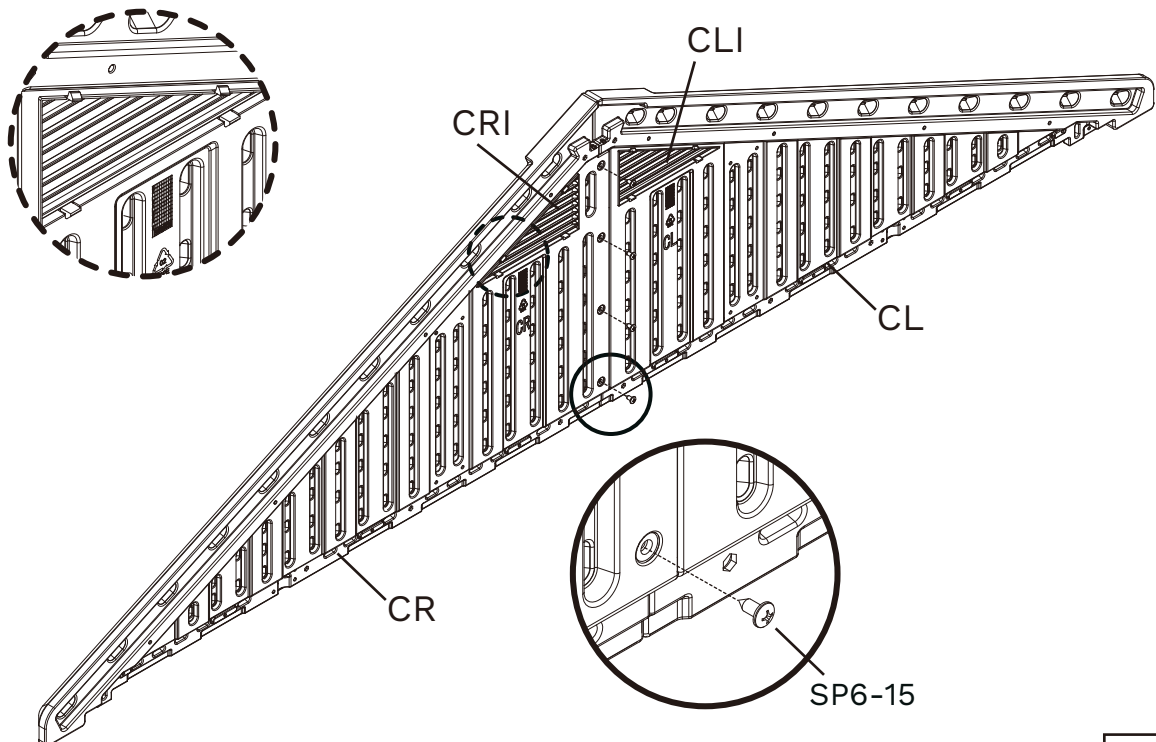


STEP 46

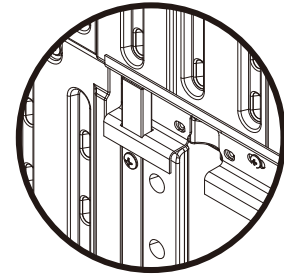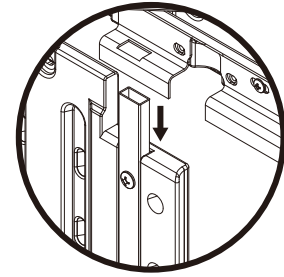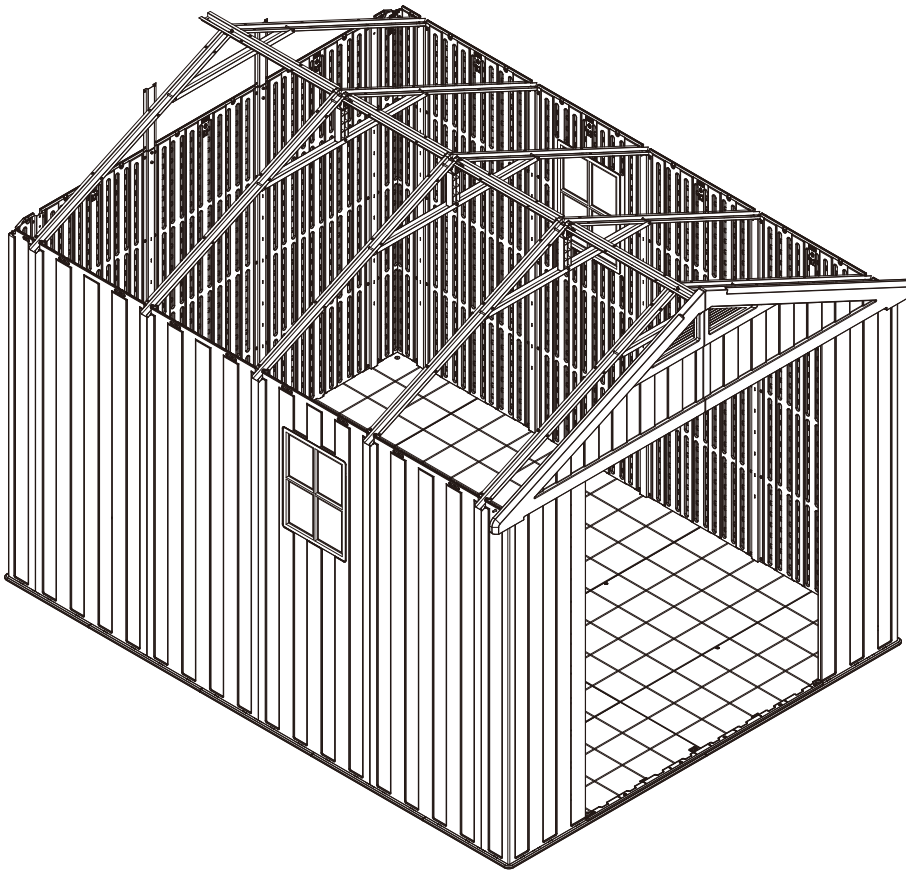

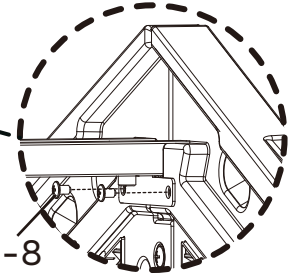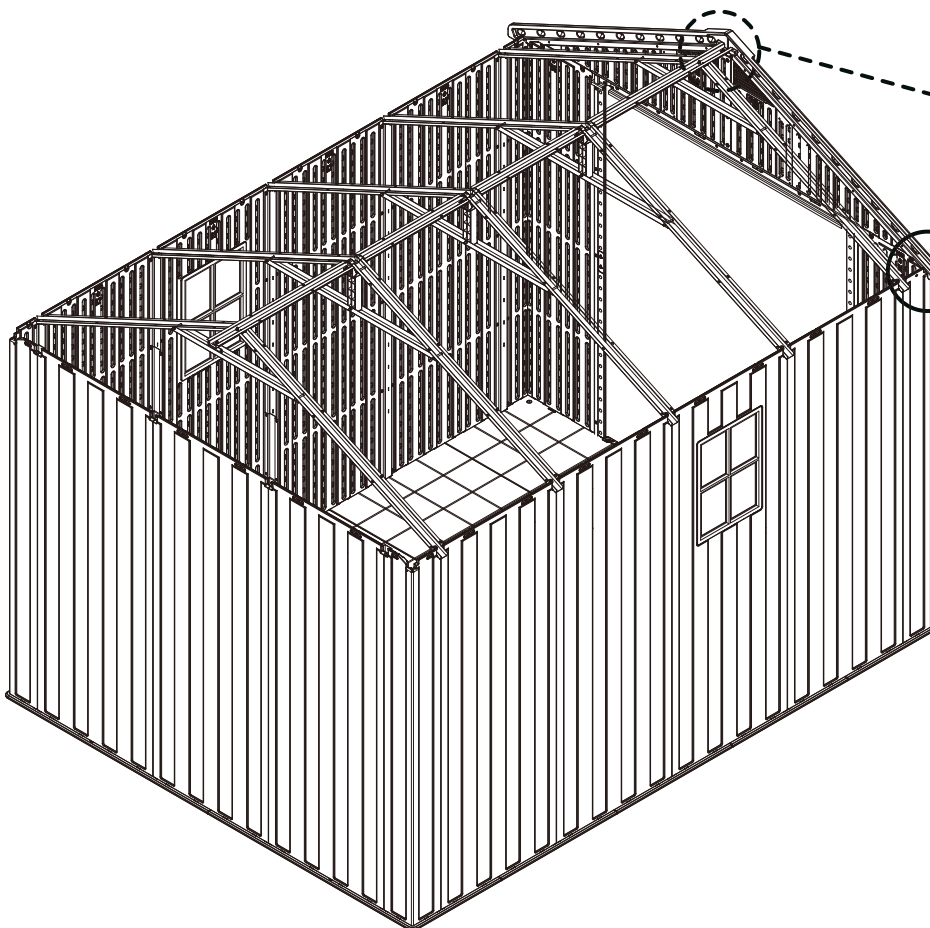

STEP 47

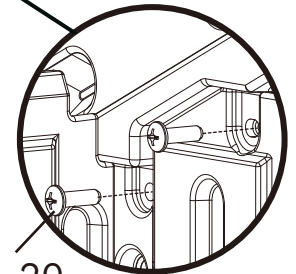


M5-8




SP6-20

| | |
|---|---|
|  |  |
| SP6-20 | M5-8 |
| 6 pcs | 2 pcs |




STEP 48

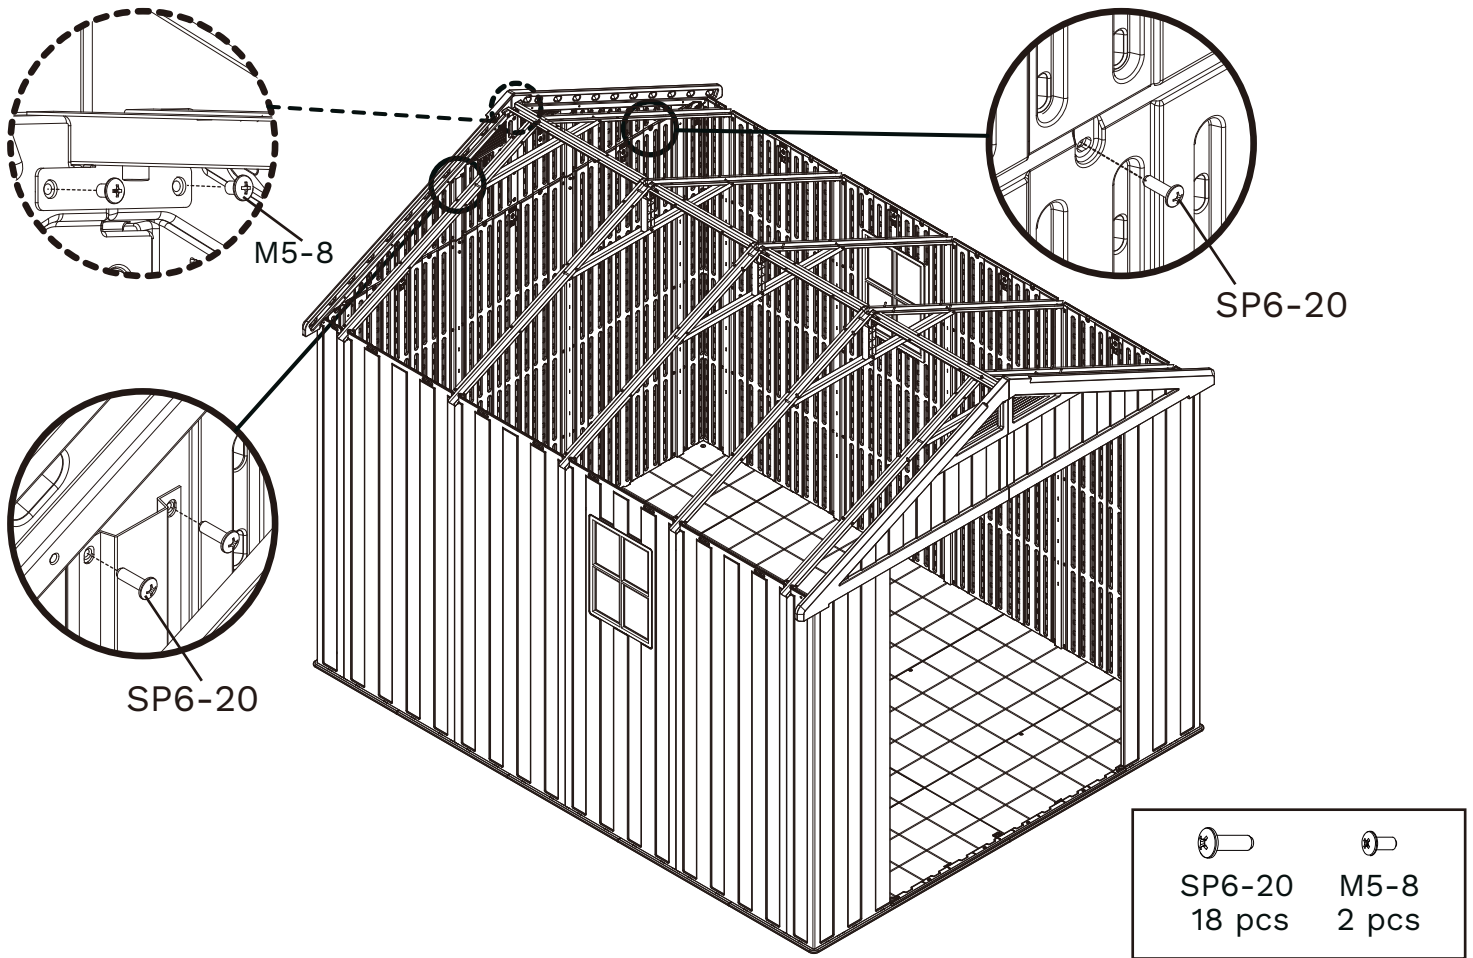


STEP 49

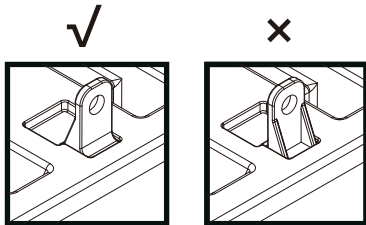



Note the mounting direction of D4.

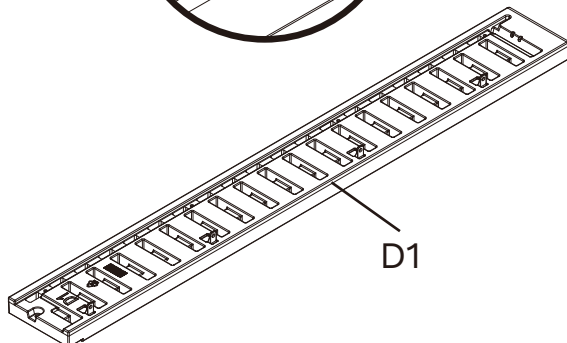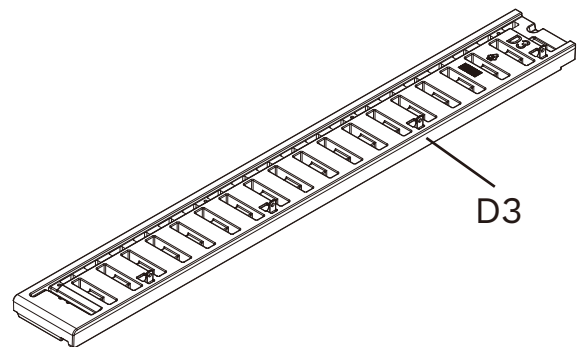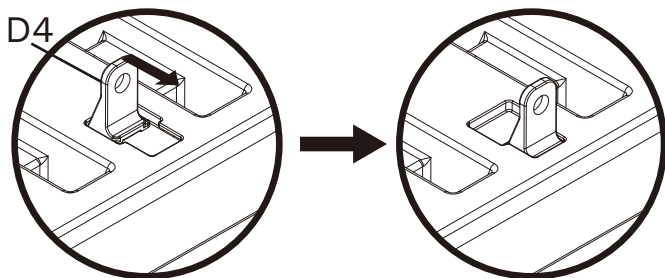




X2

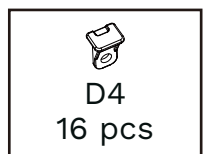



STEP 50

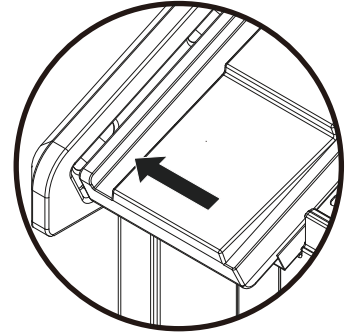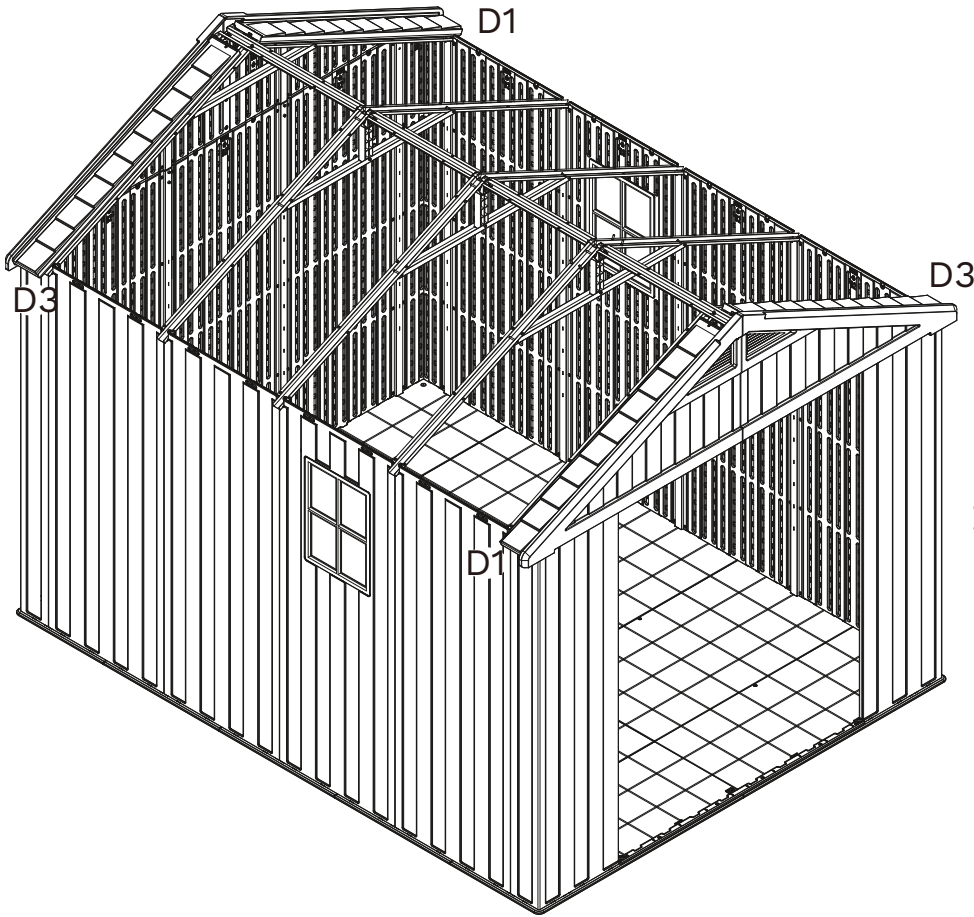






D1 and D3 are placed in the grooves of the iron frame, aligned with the grooves of the CL CR respectively and pushed forward.

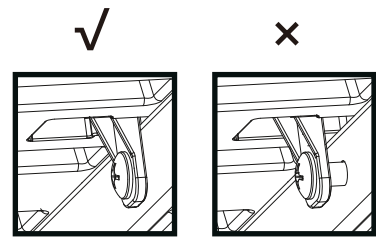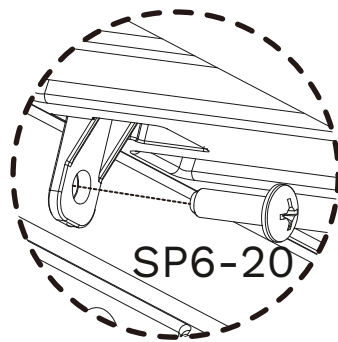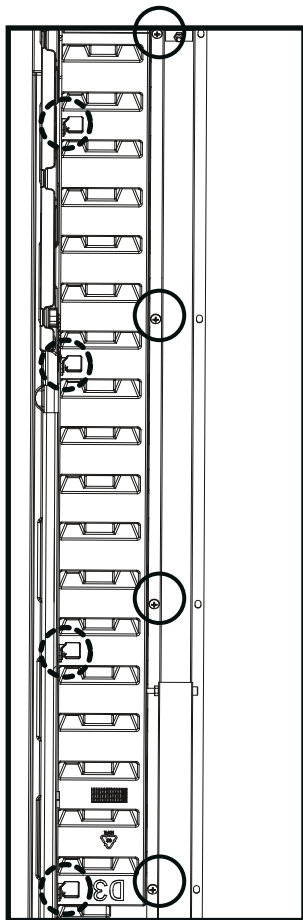



D4 should fit perfectly on the tripod.

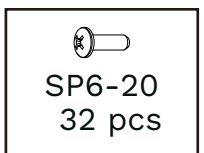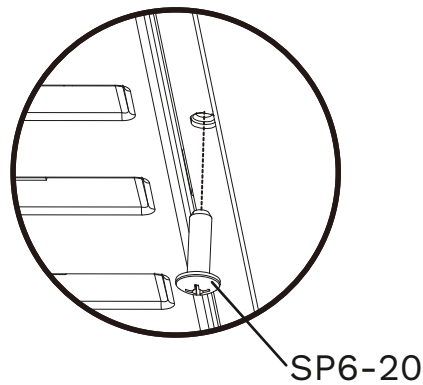



STEP 51

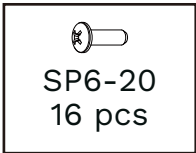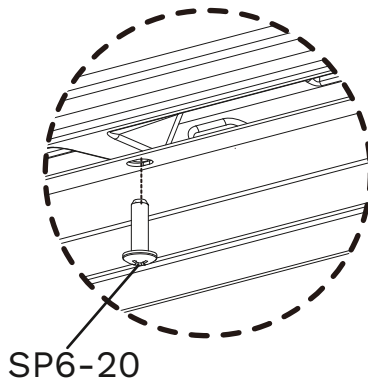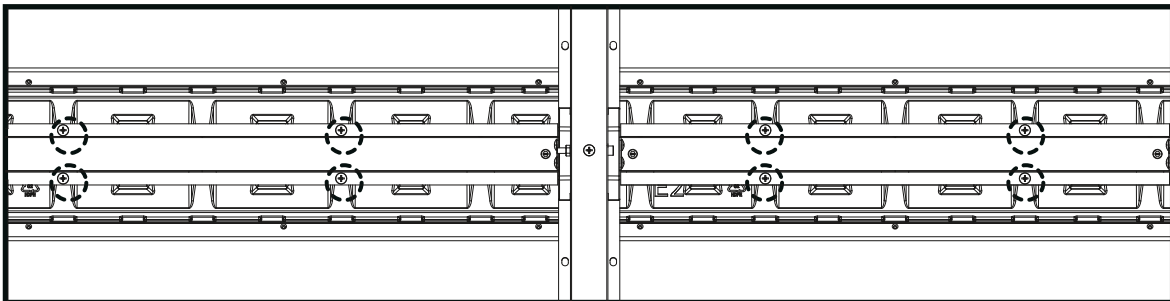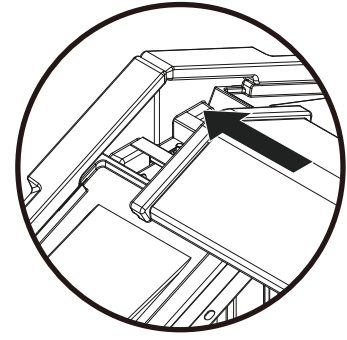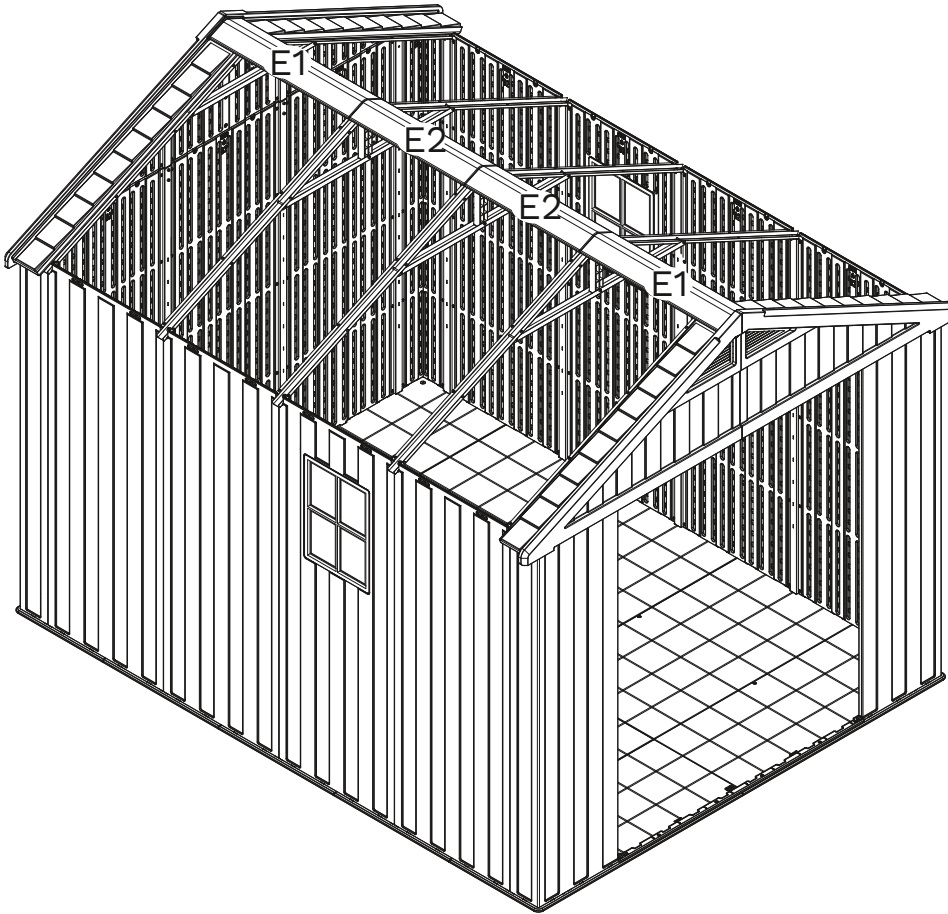


STEP 52

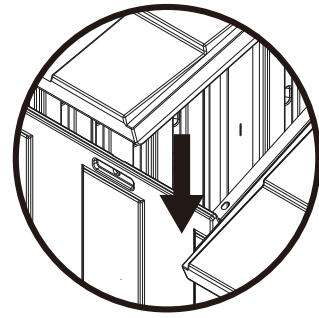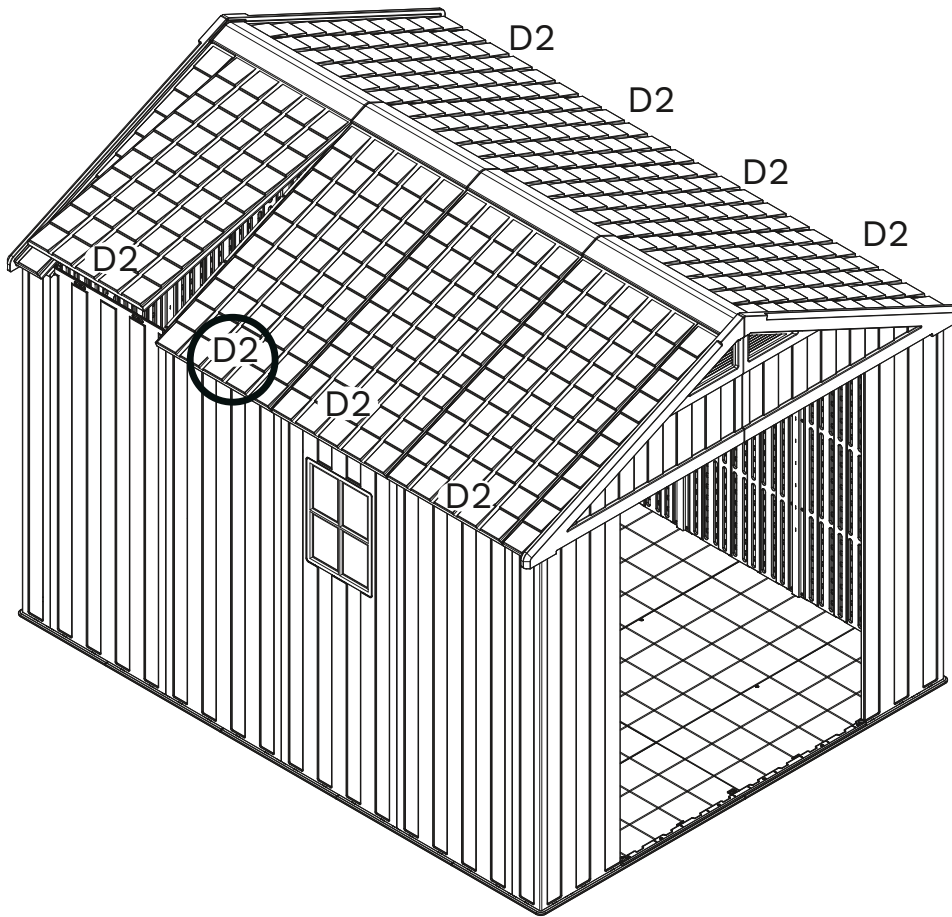


Tilt D2 into place, find the corresponding position and put it down.

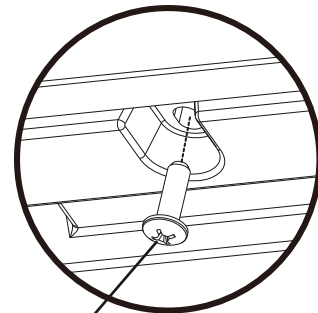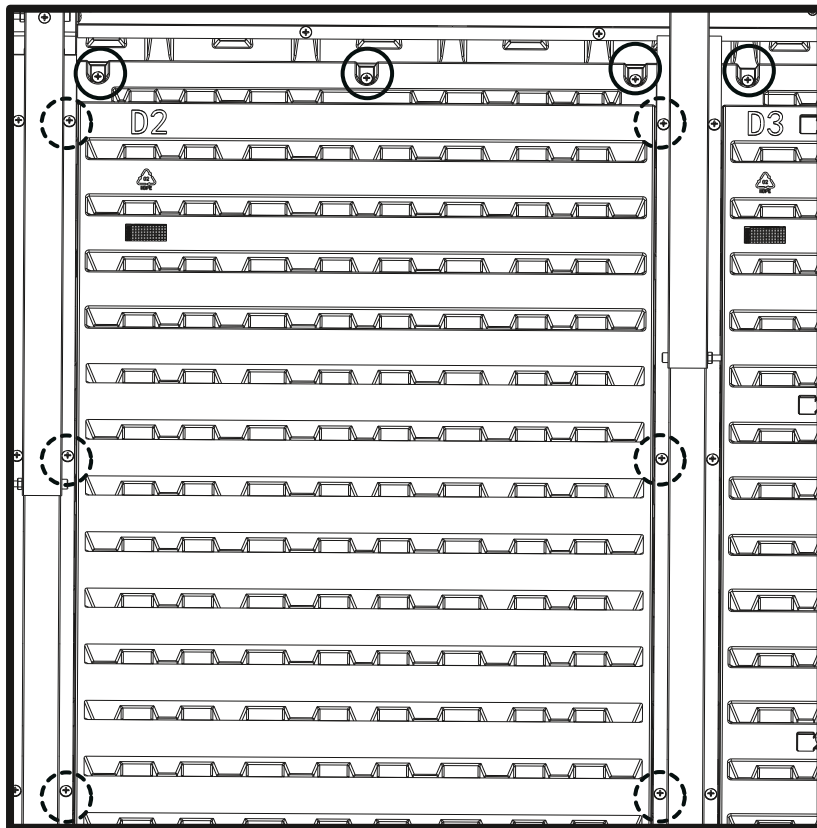

SP6-20

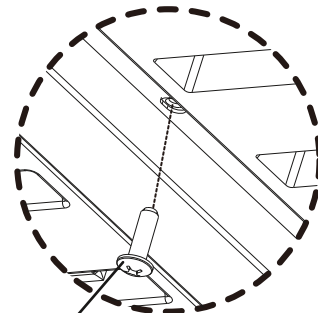

SP6-20


SP6-20
92 pcs